

## Smart 16 Shelf

## **User Manual**

4202023L1 Smart 16, 2nd, AC Version

4202023L2 Smart 16, 2nd, Dual AC Version

4202023L3 Smart 16, 2nd, DC Version 4202023L4 Smart 16, 2nd, Dual DC Version

64202023L1-1A February 2002

# <u>ADIRAN</u>

901 Explorer Boulevard P.O. Box 140000 Huntsville, AL 35814-4000 (256) 963-8000

© 2002 ADTRAN, Inc. All Rights Reserved. Printed in U.S.A.

### The following conventions are used in this manual.



Cautions signify information that could prevent service interruption.

WARNING Warnings provide information that could prevent damage to the equipment or endangerment to human life.

#### IMPORTANT SAFFTY INFORMATION

When using your telephone equipment, please follow these basic safety precautions to reduce the risk of fire, electrical shock, or personal injury:

- Do not use this product near water, such as near a bath tub, wash bowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
- Avoid using a telephone (other than a cordless-type) during an electrical storm. There is a remote risk of shock from lightning.
- 3. Do not use the telephone to report a gas leak in the vicinity of the leak.
- Use only the power cord, power supply, and/or batteries indicated in the manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for special disposal instructions.

SAVE THESE INSTRUCTIONS

### Affidavit Requirements for Connection to Digital Services

- An affidavit is required to be given to the telephone company whenever digital terminal
  equipment without encoded analog content and billing protection is used to transmit digital signals containing encoded analog content which are intended for eventual conversion
  into voice band analog signal and transmitted on the network.
- The affidavit shall affirm that either no encoded analog content or billing information is being transmitted or that the output of the device meets Part 68 encoded analog content or billing protection specification.
- End use/customer will be responsible to file an affidavit with the local exchange carrier when connecting unprotected CPE to a 1.544 Mbps or subrate digital service.
- Until such time as subrate digital terminal equipment is registered for voice applications, the affidavit requirements for subrate services are waived.

### Affidavit for Connection of Customer Premises Equipment to 1.544 MBPS and/or Subrate Digital Services

For the work to be performed in the certified territory of		y of (telco name)
State of		
County of		
I,	(name),	(business address),
	(telephone number) being	duly sworn, state:

I have the responsibility for the operation and maintenance of the terminal equipment to be connected to 1.544 Mbps and or subrate digital services. The terminal equipment to be connected complies with Part 68 of the FCC rules except for the encoded analog content and billing protection specification. With respect to encoded analog content and billing protection.

- () I attest that all operations associated with the establishment, maintenance and adjustment of the digital CPE with respect to encoded analog content and billing protection information continuously complies with Part 68 of the FCC rules and Regulations.
- () The digital CPE does not transmit digital signals containing encoded analog content or billing information which is intended to be decoded within the telecommunications network.
- ( ) The encoded analog content and billing protection is factory set and is not under the control of the customer.

I attest that the operator(s) maintainer(s) of the digital CPE responsible for the establishment, maintenance and adjustment of the encoded analog content and billing information has (have) been trained to perform these functions by successfully having completed one of the following (check appropriate blocks):

- ( ) A. A training course provided by the manufacturer/grantee of the equipment used to encode analog signals; or
- () B. A training course provided by the customer or authorized representative, using training materials and instructions provided by the manufacturer/grantee of the equipment used to encode analog signals; or

		course (e.g., trade school or technica e equipment used to encode analog si	
		training requirements, the operator(s or trained in accordance with	
I agree to onstrate co	provide_ ompliance with the i	(telco's name) with pro information in the preceding paragrap	per documentation to dem- h, if so requested.
	Sig	nature	
	Titl	e	
	Dat	e	
Subscribe	d and sworn to befor	e me	
This	day of	, 20	
Notary Pu	blic		
My comm	ission expires:		
My comm	павтоп саритея:		

#### FCC regulations require that the following information be provided in this manual:

- This equipment complies with Part 68 of the FCC rules. There is a label on the equipment
  that shows the FCC registration number and Ringer Equivalence Number (REN) for this
  equipment, if applicable. If required, this information must be given to the telephone company.
- The following information may be required when applying to the local telephone company for leased line facilities.

Service Type	Digital Facility Interface Code	Service Order Code	Network Jacks
2.4 kbps Digital Interface	04DU5-24	6.0F	RJ-48S
4.8 kbps Digital Interface	04DU5-48	6,0F	RJ-48S
9.6 kbps Digital Interface	04DU5-96	6.0F	RJ-48S
19.2 kbps Digital Interface	04DU5-19	6.0F	RJ-48S
38,4 kbps Digital Interface	04DU5-38	6,0F	RJ-48S
56 kbps Digital Interface	04DU5-56	6.0F	RJ-48S
64 kops Digital Interface	04DU5-64	6.0F	RJ-48S
Basic Rate ISDN	02IS5	6.0N	RJ-49C
1.544 Mbps-SF	04DU9-BN	6.0F	RJ-48C
1.544 Mbps-SF and B8ZS	04DU9-DN	6.0F	RJ-48C
1.544 Mbps-ESF	04DU9-1KN	6.0F	RJ-48C
1.544 Mbps-ESF and B8ZS	04DU9-1SN	6.0F	R.J-48C

- An FCC compliant telephone cord with a modular plug may be provided with this equipment. This equipment is designed to be connected to the telephone network or premises wiring using a compatible modular jack, which is FCC Part 68 compliant. See installation instructions for details.
- 4. If this equipment causes harm to the telephone network, the telephone company may temporarily discontinue service. If possible, advance notification is given, otherwise, notification is given as soon as possible. The telephone company will advise the customer of the right to file a complaint with the FCC.
- 5. The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper operation of this equipment. If this happens, the telephone company will provide advance notification and the opportunity to make the necessary modifications to maintain uninterrupted service.

- 6. If experiencing difficulty with this equipment, please contact ADTRAN for repair and warranty information. If the equipment is causing harm to the network, the telephone company may request this equipment to be disconnected from the network until the problem is resolved or it is certain that the equipment is not malfunctioning.
  - 7. This unit contains no user serviceable parts.
  - The FCC recommends that the AC outlet to which equipment requiring AC power is to be installed is provided with an AC surge arrester.

ix

#### Federal Communications Commission Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio frequencies. Operation of this equipment in resolicatival area is likely to causes harmful interference in which case the user will be required to correct the interference at his own expense.

Shielded cables must be used with this unit to ensure compliance with Class A FCC limits.



Change or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

#### Industry Canada Compliance Information

Notice: The Industry Canada label applied to the product (identified by the Industry Canada logo or the "IC." in front of the certification/registration number) signifies that the Industry Canada technical specifications were met.

Notice: The Ringer Equivalence Number (REIN) for this terminal equipment is supplied in the documentation or on the product labeling/markings. The REIN assigned to each terminal device indicates the maximum number of terminals that can be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the REINs of all the devices should not exceed five (5).

#### Canadian Emissions Requirements

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of the Department of Communications.

Cet appareil nuerique respecte les limites de bruits radioelectriques applicables aux appareils numeriques de Class A preserites dans la norme sur le materiel brouilleur: "Appareils Numeriques," NMB-003 edictee par le ministre des Communications.

#### LIMITED PRODUCT WARRANTY

ADTRAN warrants that for five (5) years from the date of shipment to Customer, all products munification by ADTRAN will be fee from deflects in materials and workmaship, ADT-RAN also warrants that products will conform to the applicable specifications and drawings for each products, a contained in the Product Manual or in ADTRAN's internal specifications and drawings for such products (which may or may not be reflected in the Product Manual). This warranty end (Juno such notice, ADTRAN will, at it is option, either repair or replace the defective tiem. If ADTRAN's is unable, in a reasonable time, to repair or replace any equipment to a condition as warranted, Customer is entitled to a flit refund of the purchase price upon return of the equipment to ADTRAN. This warranty applies only to the original purchaser and is not transferable without ADTRAN's express written permission. This warranty becomes null and void if Customer modifies or alters the equipment in any way, other than as specifically authorized by ADTRAN.

EXCEPT FOR THE LIMITED WARRANTY DESCRIBED ABOVE, THE FOREGOING CONSTITUTES HE SOLE AND EXCLUSIVE REARDY OF THE CUSTOMER AND THE EXCLUSIVE LIABILITY OF ADTRAN AND IS IN LIEU OF ANY AND ALL OTHER WARRANTIES (EXPRESSED OR IMPLIED). ADTRAN SPECIFICALLY DISCLAIMS ALL OTHER WARRANTIES, INCLUDING (WITHOUT LIMITATION), ALL WARRANTIES OF MERCHATMABILITY AND PITNESS FOR A PARTICULAR PURPOSE. SOME STATES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. THE SECULISION AND ADDRESSED AND STATES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES.

In no event will ADTRAN or its suppliers be liable to Customer for any incidental, special, punitive, exemplay or consequential damages experienced by either Customer or a third party (including, but not limited to, loss of data or information, loss of profits, or loss of use). ADT-RAN is not liable for damages for any cause whatoover (whether based in contract, tort, or otherwise) in excess of the amount pad for the tem. Some state do not allow the limitation or exclusion of liability for incidental or consequential damages, so the above limitation or exclusion may not apply to Customer.

#### Customer Service, Product Support Information, and Training

ADTRAN will repair and return this product if within five years from the date of shipment the product does not meet its published specification or the product fails while in service.

A return material authorization (RMA) is required prior to returning equipment to ADTRAN. For service, RMA requests, training, or more information, use the contact information given helow.

### Repair and Return

If you determine that a repair is needed, please contact our Customer and Product Service (CAPS) department to have an RMA number issued. CAPS should also be contacted to obtain information regarding equipment currently in house or possible fees associated with repair.

CAPS Department (256) 963-8722

Identify the RMA number clearly on the package (below address), and return to the following address:

ADTRAN Customer and Product Service 901 Explorer Blvd. (East Tower) Huntsville. Alabama 35806

RMA#

### Pre-Sales Inquiries and Applications Support

Your reseller should serve as the first point of contact for support. If additional pre-sales support is needed, the ADTRAN Support who site provides a variety of support services such as a scarchable knowledge base, latest product documentation, application briefs, case studies, and a link to submit a ouestion to an Applications Engineer. All of this, and more, is available at:

http://support.adtran.com

When needed, further pre-sales assistance is available by calling our Applications Engineering Department.

Applications Engineering (800) 615-1176

#### Post-Sale Support

Your reseller should serve as the first point of contact for support. If additional support is needed, the ADTRAN Support web site provides a variety of support services such as a searchable knowledge base, updated firmware releases, latest product documentation, service request ticket generation and trouble-shooting tools. All of this, and more, is available at:

http://support.adtran.com

When needed, further pre-sales assistance is available by calling our Technical Support Center. Please have your unit serial number available when you call.

Technical Support (888) 4ADTRAN

#### Installation and Maintenance Support

The ADTRAN Custom Extended Services (ACES) program offers multiple types and levels of installation and maintenance services which allow you to choose the kind of assistance you need. This support is available at:

http://www.adtran.com/aces

For questions, call the ACES Help Desk.

ACES Help Desk (888) 874-ACES (2237)

## Training

The Enterprise Network (EN) Technical Trianing Department offers training on our most popular products. These contens include overviews on product fatters and functions while covering applications of ADTRAN's product lines. ADTRAN provides a variety of training options, including customized training and courses taught at our facilities or at your site. For more information about training, please contact your Territory Manager or the Enterprise Training, Confundator:

 Training Phone
 (800) 615-1176, ext. 7500

 Training Fax
 (256) 963-6700

 Training Email
 training@adtran.com

xiv

## **Table of Contents**

List of Figures	xvi
List of Tables	xix
Chapter 1. Introduction	
About This Manual	
Product Overview	21
Chapter 2. Installation	23
Jnpack, Inspect, Power Up	23
Receiving Inspection.	
ADTRAN Shipments Include	23
Customer Provides	24
Power Up	24
nstallation into Cabinet or Rack	24
nstallation of Power Supplies	25
nstallation of Controller Card	
Connecting Input Devices to the Controller Card	26
VT 100 Connection	27
Modem Connection	27
DATAMATE Connection	27
Multi-Shelf Connection (Daisy Chaining)	27
Alarm Connections	27
Fuses	29
AC/DC Power	
Chapter 3. Operation	
ocal Operation	35
VT 100 Terminal	35
Operation	35

Connection
Jumper and Switch Settings36
Main Menu
Select Unit Menu 39
Alarm View Menu40
Utilities Menu 41
Factory Reset Menu43
DATAMATE43
Manual Operation and Button Functions
LCD Window
Enter
Numeric Keypad45
Shift
Ouick
Cancel
Up and Down Arrows45
Remote Operation
Multi-Shelf Operation (Daisy Chaining)
Interpreting Alarms and Error Messages
Clearing DBU Alarms
DATAMATE Procedure54
VT 100 Procedure 54
Appendix A. Pinouts
Appendix B. Specifications
Index 67

## List of Figures

Figure 1-1.	Smart 16 Shelf	2
Figure 2-1.	Alarm Connection	28
Figure 2-2.	Single AC Version Rear Power Interface Card (4202023L1 Shelf)	30
Figure 2-3.	Dual AC Version (4202023L2 Shelf)	31
Figure 2-4.	Single DC Version (4202023L3 Shelf)	32
Figure 2-5.	Dual DC Version (4202023L4 Shelf)	33
	Jumper and Switch Locations	
Figure 3-2.	Main Menu	3
Figure 3-3.	Local Configuration	38
Figure 3-4.	Select Unit Menu with Enhanced Select Disabled	39
Figure 3-5.	Select Unit Menu with Enhanced Select Enabled	40
Figure 3-6.	Alarm 1 Menu	40
Figure 3-7.	Utilities Menu	4
Figure 3-8.	Factory Reset Menu	43
Figure 3-9.	DATAMATE	4
Figure 3-10.	DATAMATE Utility Menu	40
Figure 3-11.	Remote Configuration	48
Figure 3-12	Controller Configuration Switch Positions	49
Figure 3-13.	Multi-Shelf Application	50
Figure 3-14.	Controller Card Front Panel	53

List of Figures

## List of Tables

Table 3-1.	Switch 1 Shelf Numbering Settings	51
Table 3-2.	Controller Card Error Messages	52
Table 3-3.	LED Alarm Messages	54
Table A-1.	EIA-232 Connector Pinout	55
Table A-2.	CTRL In and CTRL Out Connector Pinouts	56
Table A-3.	Alarm Connection PInout	52
Table A-4.	DC Power Supply Pinout	52
Table A-5.	V.35 Pinout	58
Table A-6.	Auxiliary 232/366 Port Pinout	59
	Network Pinout	
Table A-8.	RS-530A Interface Pinout	6
Table A-9.	RJ-45 Line 1 Pinout	62
Table A-10	). RJ-45 Line 2 Pinout	62

List of Tables

## Chapter 1 Introduction

### ABOUT THIS MANUAL

This manual provides the information needed for the installation and operation of the Smart 16 Shelf (see Figure 1-1 on page 22). Operation instructions for the data communication devices used with the shelf are provided in the manuals furnished with those products.

## PRODUCT OVERVIEW

The ADTRAN Smart 16 Shelf provides convenient mounting for up to 16 data communications devices for large host-type applications. The shelf can be mounted in either 19" or 23" racks and cabinets by using a set of brackets mounted alongside the shelf.

The Smart 16 Shelf has an intelligent controller card designed to configure and control all devices in the local shelf. For larger applications, the controller can access up to 15 additional shelves by daisy-chaining the control ports. For SNMP applications, the Smart 16e with embedded SNMP is available in single and dual input power options (part numbers 420202315-18).

There are two choices of input devices for the controller card:

 A VT 100 compatible terminal which can be connected to the EIA-232 interface, located at the rear of the rack. For remote applications, a modem can be used.  The optional DATAMATE, a hand-held keypad with a 2 x 16 LCD display. This unit plugs into the RJ-11 jack on the front of the controller card.

The shelf and all installed units are internally powered by an AC or DC supply. An optional second power supply can be used for backup protection.

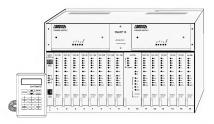


Figure 1-1. Smart 16 Shelf

## Chapter 2 Installation

## UNPACK, INSPECT, POWER UP

## Receiving Inspection

Carefully inspect the Smart 16 Shelf for any shipping damages. If damage is suspected, file a claim immediately with the carrier and contact ADTRAN Customer Service. If possible, keep the original shipping container for use in shipping the Smart 16 Shelf for repair or for verification of damage during shipment.

## **ADTRAN Shipments Include**

The following items are included in ADTRAN shipments of the Smart 16 Shelf:

- Smart 16 chassis
- Controller card
- Power supply (AC or DC) (two included in 4202023L2 and L4)
- Blank power faceplate (only in 4202023L1 and L3)
- Rear panel segment for power input and controller operation
   Mounting brackets for shelf
- · Smart 16 Shelf User Manual (provided on CD)

## **Customer Provides**

The customer must supply a PC capable of emulating VT 100 or a DATAMATE (part number 1200045L1) for configuring devices installed in the Smart 16 Shelf.

## Power Up

The shelf and installed units are internally powered by an AC or DC supply. An optional second power supply can be used for redundant protection.

The dual input power shelves 42020231.2 (AC) and 42020231.4 (DC) provide the user greater redundancy by allowing the shelf to be powered by two separate AC (or DC) circuits so that service will not be interrupted upon a single circuit breaker fault. Shelf power inputs can be both AC or both DC, but they can not be mixed.

## INSTALLATION INTO CABINET OR RACK

The set of brackets supplied with the Smart 16 Shelf can be used for either 19" or 23" applications. For 19" applications, the longer side of the bracket should be flush with the side of the chassis. For 23" applications, the short side of the bracket should be flush with the side of the chassis.

There are two sets of mounting holes for the brackets on the left and right sides of the Smart 16 Shelf. One set positions the front of the Smart 16 Shelf in line with the front of the rack. The other set extends the front of the Smart 16 Shelf beyond the front of the rack.

### INSTALLATION OF POWER SUPPLIES



2nd generation dual power interface cards shipped with this shelf are ONLY for use in 2nd generation Smart 16/16e shelves. Shock hazard may result from accidentally plugging a 2nd generation dual power interface card into a 1st generation Smart 16/16e shelf (P/N 42000231.3 through 42000231.6).

Affected Power Interface Cards: Smart 16 Dual Input AC 1202035L2 Smart 16 Dual Input DC 1202044L2 Smart 16e Dual Input AC 1202163L2 Smart 16e Dual Input DC 1202164L2

The 2nd generation dual power interface cards are, however, completely safe when properly installed in a 2nd generation Smart 16/16e shelf (P/N 4202023L1 through 4202023L8).

The power supply can be installed in either of the two slots at the top of the Smart 16 Shelf. If only one power supply is used, the blank power supply faceplate furnished with the rack should be installed over the unused slot.



Only people familiar with installation and maintenance of the Smart 16 Shelf should install or replace the power supplies. A shock hazard could be present if an empty power supply slot is left uncovered.

The Smart 16 Shelf is fully operational with one power supply; however, a second supply can be added to provide backup for the power supply subsystem. With the two-supply configuration, one of the supplies will operate in a hot-standby mode (the corresponding output on the standby supply will automatically provide the power required if any of the four outputs from a supply falls or begins to operate out of specifications).



The power supplies can be "hot swapped."

Slide the power supply along the card guides of one of the top slots until it is fully seated in the connector and the faceplate is flush with the chassis. Tighten the screws on the front of the power supply panel.

Each power supply has a green indicator that illuminates when the power supply output voltages (5Y, 5W, 12V, and 12V) are within compliance; the power supply LED illuminates red to indicate that a voltage is out of tolerance. Illumination of a green LED indicates that the corresponding voltages are operating properly. When operation of any of the four voltages drops out of specification, the green LED will go out and the red LED will come on. An SNMP trap will be sent from the controller supply detects a voltage failure condition. Failing power supplies are not user servicable and require replacement.

## INSTALLATION OF CONTROLLER CARD

The Smart 16 Shelf has 17 vertical slots in the front and rear of the chassis. The left-most front position is reserved for the Smart 16 Shelf controller card. All other front slots can be used in any order for rackmount cards. The PWR/CTRL power interface card occupies the slot behind the Smart 16 Shelf controller card. All other rards slots are for DTE/TNetwork Interface card.

The controller card slides into the corresponding front slot until contact is made with both the backplane connector and the rear power interface connector and the panel is flush with the front of the chassis. The controller card may be inserted and removed while the Smart 16 Shelf is receiving power without affecting the data services on the other cards.



The controller card can appear to be operational (i.e., receiving power) and yet not be completely connected. The power interface card must be fully seated and the screws must be tight for proper operation.

## Connecting Input Devices to the Controller Card

There are two choices of input devices for the Smart 16 controller card: a VT 100 terminal or the optional DATAMATE (part number 1200045L1).

#### VT 100 Connection

The 25-pin EIA-232 connector (abelled DTE/DCE EIA 232) on the rear power interface of the controller card provides an interface for an asynchronous ASCII VT 100 terminal, used for both local and remote configuration. The terminal must be set to line wrap off, flow control off, and VT 100 mode. The controller card settings are as follows: autobauds from 2400 to 19.2 kbps baud rate, 8-bit character size, no parity, and one stop bit. For remote configuration, see the section Modem Connection. The pin assignments for the EIA-232 connector are listed in Appendix A, Phinusts on page 55.

#### Modem Connection

The Smart 16 Shelf and any rackmount units in the shelf can be configured remotely using a modem. See Chapter 3, *Operation* on page 35 for more detailed information on remote operation.

#### DATAMATE Connection

The optional DATAMATE is a hand-held device that plugs into the RJ-11 jack on the front of the controller card, or the RJ-11 jack at the top of the rear PWR/CTRL segment.

## Multi-Shelf Connection (Daisy Chaining)

For multi-shelf applications, the control port is daisy-chained through the two six-pin modular jacks labelled CTRL LINK. Cabling of a multi-shelf system is detailed in Chapter 3, Operation on page 33. This application requires a straight-through cable. If problems arise with the operation of one of the shelves in the chain, the malfunctioning shelf will be typassed so that the chain will not be broken. See Appendix A, Pinouts on page 55 for the pin assignments for the CTRL LN and CTRL OUT connectors.

#### Alarm Connections

The terminal strips located on the back of the Smart 16 Shelf controller card are labeled ALARM. They are used for audio or visual alarm indicators provided by the user. The top two terminals are a set and be bottom two are a set. The terminals are activated together when the cards inserted in the designated slots encounter an alarm condition such as primary link failur.

To verify operation of the terminal strip, measure the impedance across each set. The impedance should be pen when the shelf is not in alarm and shorted (approximately 0.6 ohm) when in alarm. The two alarm sets operate identically and should have the same impedance. The power specifications for any alarms used are NEC Class 2 and 48 VDC @ 500 mA maximum. Figure 2-1 shows the alarm connection

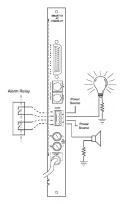


Figure 2-1. Alarm Connection

#### Fuses

There are two fuses located on the rear panel. Fuse one (F1) corresponds to power supply 1 (left slot), and fuse two (F2) corresponds to power supply 2 (right slot). See Specifications and Features on page 63 for fuse ratings.

#### AC/DC Power

The single and dual AC versions. Illustrated in Figure 2.2 on page 30, and in Figure 2.2 on page 31, each have captive 8-foot power cords. The power cords are terminated by a three-prong plug which connects to a grounded power receptacle. The grounded power receptacle should be installed near the shelf and be easily accessible. The power receptacle should also have suitable disconnect devices that are provided as part of the building wiring. The power receptacle should she have formed the should be properly grounded. The protection of the telecommunications network relies on the protective grounding of the Smart 16. Shelf

The single DC version, illustrated in Figure 2-4 on page 32, provides a 3-position screw terminal block for connection to a -48V source. The dual DC version, illustrated in Figure 2-5 on page 33, provides a 5-position screw terminal block for connection to both -48V sources. Pin 1 of the terminal block is frame ground.

The 2nd generation dual input power interface cards are not compatible with the 1st generation Smart 16/16e shelves (4200023L3-L6). These dual power cards are 2nd generation only and are listed below:

- Smart 16 Dual Input AC 1202035L2
- Smart 16 Dual Input DC 1202044L2
- Smart 16e Dual Input AC 1202163L2
- Smart 16e Dual Input DC 1202164L2

The 2nd generation single input power interface cards are fully compatible with the earlier 1st generation Smart 16/16e shelves. The single input power cards are listed below:

20

- Smart 16 AC 1202035L1 Smart 16 DC 1202044L1
- Smart 16 DC 1202044L1
   Smart 16e AC 1202163L1
- Smart 16e AC 1202163L1
   Smart 16e DC 1202164L1


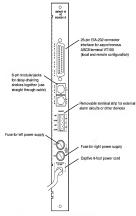


Figure 2-2. Single AC Version Rear Power Interface Card (4202023L1 Shelf)



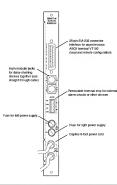

2nd generation dual power interface cards shipped with this shelf are ONLY for use in 2nd generation Smart 16/16 shelves. Shock hazard may result from accidentally plugging a 2nd generation dual power interface card into a 1st generation Smart 16/16 shelf (P/N 42000231.3 through 42000231.6).

Affected Power Interface Cards: Smart 16 Dual Input AC 1202035L2 Smart 16 Dual Input DC 1202044L2 Smart 16e Dual Input AC1202163L2

The 2nd generation dual power interface cards are, however, completely safe when properly installed in a 2nd generation Smart 16/16e shelf (P/N 4202023L1 through 4202023L8).

Figure 2-3. Dual AC Version (4202023L2 Shelf)

Smart 16e Dual Input DC 1202164L2


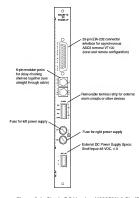


Figure 2-4. Single DC Version (4202023L3 Shelf)



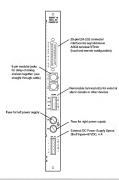

2nd generation dual power interface cards shipped with this shelf are ONLY for use in 2nd generation Smart 16/16e shelves. Shock hazard may result from accidentally plugging a 2nd generation dual power interface card into a 1st generation Smart 16/16e shelf (P/N 42000231.3 through 42000231.6).

Affected Power Interface Cards: Smart 16 Dual Input AC 1202035L2 Smart 16 Dual Input DC 1202044L2 Smart 16e Dual Input AC 1202163L2 Smart 16e Dual Input DC 1202164L2

The 2nd generation dual power interface cards are, however, completely safe when properly installed in a 2nd generation Smart 16/16e shelf (P/N 4202023L1 through 4202023L8).

Figure 2-5. Dual DC Version (4202023L4 Shelf)

## Chapter 3 Operation

## LOCAL OPERATION

There are two methods of local configuration for the Smart 16 Shelf: a VT 100 terminal or a DATAMATE (part number 1200045L1).

Password parameters are set through the terminal or the DATAMATE

### VT 100 Terminal

## Operation

The Smart 16 Shelf may be configured by attaching the VT 100 compatible terminal or equivalent to the control port on the rear of the Smart 16 Shelf controller card. The terminal must be set to line wrap off, flow control off, and VT 100 mode. The controller card settings are as follows: autobauds from 2400 to 19.2 kbps baud rate, 8-bit character size, no parity, and one stop bit is

#### Connection

The connection to a terminal is made through the EIA-232 25-pin connector on the rear PWR/CTRL segment (see Figure 3-3 on page 38). This connection is used for both local and remote configuration.

### Jumper and Switch Settings

For local configuration (Direct Mode), place the jumper on the header of JPI abled OPE. If rolly one shelf is being used, the shelf must be configured as the master (SW1-8 on). See Figure 3-1 for jumper and switch locations. See Multi-Shelf Operation (Daisy Chairing) on page 49 for information on switch settings in a multiple shelf configuration.



If only one shelf if being used, the shelf must be configured as the master (SWI-8 on).

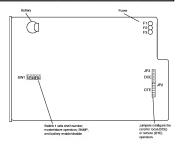


Figure 3-1. Jumper and Switch Locations

#### Main Monu

After initiating terminal mode by pressing the carriage return key until the Main menu appears, the display will divide into three sections (see Figure 3-2 on page 37).

- The main window which displays all options of a menu level. 2. The information window which lists all possible choices for a
- selected option 3. The command line which displays the current setting for the selected option. The setting can be updated by entering the number corresponding to the desired selection, followed by a

carriage return. The new setting will be updated in the main From the Main menu, select a unit, view alarms of individual units. access a utility menu, or reset the shelf.

window.



Figure 3-2. Main Menu

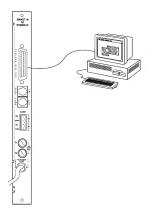


Figure 3-3. Local Configuration

#### Select Unit Menu

The SELECT UNIT menu, illustrated in Figure 3-4, appears after selecting 1 SELECT UNIT from the Main menu with ENHANCED SELECT in the Utilities disabled.

- Press 1 to select the shelf number (displayed on the front of the shelf controller card).
- · Press 2 to select the slot number.
- Press 3 to execute the choices and begin configuring the rackmount unit.



Figure 3-4. Select Unit Menu with Enhanced Select Disabled

If ENHANCED SELECT is enabled, the menu in Figure 3-5 will appear.



Figure 3-5. Select Unit Menu with Enhanced Select Enabled

#### Alarm View Menu

The ALARM menu (Figure 3-6) appears after selecting 2 ALARM VIEW from the Main menu. This menu displays the current system status. Select any active shelf and slot number to view its status.



Figure 3-6. Alarm 1 Menu

#### Utilities Menu

The UTILITIES menu (Figure 3-7) appears after selecting 3 UTILITIES from the Main menu.



Figure 3-7. Utilities Menu

From the UTILITIES menu, perform the following functions:

### TERMINAL TIMEOUT (MIN) = NN

Set how many minutes of keyboard inactivity can take place before the screen goes blank.

#### CHANGE PASSWORD

Set private password which will prevent unauthorized users from configuring or testing individual DSU cards. The default password for the controller card is PASSWORD.

# PASSWORD = DIS/EN

Enable or disable password function.

### SET TIME

Set time of day.

# SET DATE

Set the date.

#### EDIT SHELF/SLOT DESCRIPTIONS

Assign names to the shelves and slots.

#### LATCHED (AUDIBLE) ALARM = DIS/EN

Enable or disable terminal alarm function.

#### ENHANCED SELECT

If enabled, the Select Unit menu shown in Figure 3-4 will be replaced by the menu in Figure 3-5.

### SET SNMP ADDRESS

The controller supports SNMP Management of installed cards via the ADTRAN Advisor software. If this feature is enabled, an SNMP address must be selected.

#### CONNECTION TYPE

For SNMP applications, the controller must know whether a dial up or direct connection is being used.

#### EDIT SNMP PHONE NUMBER

For SNMP dial up operation, this is the phone number that the controller will call to send an SNMP trap.

#### Factory Reset Menu

The FACTORY RESET menu (Figure 3-8) appears after selecting 4 FACTORY RESET from the Main menu.



Figure 3-8. Factory Reset Menu

## DATAMATE

The DATAMATE, illustrated in Figure 3-9 on page 44, is a handheld keypad with a 2x16 LCD display. The DATAMATE connects to the 6-pin modular jack on the front of the controller card. See Figure 3-14 on page 53 for jack locations.



While both controller input devices (DATAMATE and VT 100 terminal) can be installed at the same time, both devices cannot be active at the same time.

With both devices installed, the DATAMATE is active until the terminal mode is selected. To enter terminal mode while the DATAMATE is installed, the DATAMATE must be in the top level of its menu tree (press Cancel until the menu level is reached). The terminal mode cannot be activated while communication between the DATAMATE and the data communication product is in progress. The terminal mode is initiated by pressing the carriage return key until the Main menu is displayed. While in the terminal mode, the DATAMATE goes into standby mode and displays the following message:

### HOLD CANCEL KEY FOR SERVICE

Control can be returned to the DATAMATE by pressing Escape until the terminal mode is exited or by holding the DATAMATE's Cancel key down. Once communication with an individual Rackmount unit has been established, menus identical to those of the standalone version of the product are displayed on the DATAMATE

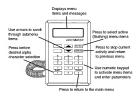


Figure 3-9. DATAMATE

#### Manual Operation and Button Functions

The following function descriptions apply to the DATAMATE. The DATAMATE's UTILITY menu is provided in Figure 3-10 on page 46.

# LCD Window Displays menu items and messages in 2 lines by 16 characters. Smart 16 Shalf Hear Manual

#### Enter

Selects active menu items. To activate a menu item, press the number of the item. When the menu item is flashing, press Enter to select it. This action displays a submenu item (if there is one) or sets the configuration parameter. The display of COMMAND ACCEPTED indicates a valid operation.

#### Numeric Keypad

The numeric keypad contains the numbers 0 through 9 and alpha characters A through F, which are used to activate menu items. Numbers 0 through 9 are also used to enter parameters.

#### Shift

Alpha characters are entered by pressing and releasing Shift before each desired character. To activate a menu item designated by an alpha character rather than a number, display the menu item using the up and down arrows, press Shift and then the letter. Press Enter to select the item.

If a key is pressed without using Shift, the numbered item becomes active instead of the alpha item. If this happens, repeat the correct procedure.

Quick
During most operations, the Quick key returns the display to the
Main menu. During a test, this key returns to the top of the TEST
menu.

# Cancel

The Cancel key stops the current activity and returns to the previous menu. Press Cancel until the desired menu level is reached.

# Up and Down Arrows

These arrows scroll through the submenu items available in the current menu. Submenu items appear two at a time. When scrolled, they continuously appear from beginning to end in a forward (down arrow) or reverse (up arrow) pattern.

1=SELECT UNIT		SLOT=x	Yields individual unit's menu	
2=UTILITIES	1=SET TIME			TIME 04:23:44 xxxxxxxx
	2=SET DATE			DATE 08-15-95 xx-xx-xx
	3=PORT CONFIG		1=PORT TYPE	1=DIAL 2=DIRECT
			2=BAUD RATE	1=2400 2=4800
				3=9600 4=19.2K
			3=DATA BITS	1=7 BITS 2=8 BITS
			4=STOP BITS	1=1 2=2
			5=PARITY	1=NONE 2=EVEN 3=ODD
			6=XON/XOFF	1=ON 2=OFF
	4=TIMEOUT LIMIT		TIME OUT TIMER TIMER=0 MIN	
	5=SOFTWARE REV			SOFTWARE REV=x CHECKSUM=xxxx
	6=SET SNMP ADDR			ENTER SHELF ADR
	7=PHONE NUMBER	>>>>>>>	_	SHELF=x (1-16)
	8=SET PASSWORD	xxxxxxxx	_	
3=FACTORY RESE	т			

U-1710 TOTAL TALGET

4=ALARM CLEAR

Figure 3-10. DATAMATE Utility Menu

### REMOTE OPERATION

The Smart 16 Shelf and any rackmount units in the shelf can be configured remotely using a modem. See Figure 3-11 on page 48. Follow these steps to set up this application.

- At the remote site, pull the controller card out of the shelf and locate the Jumper JP2 labeled DTE. Place the 16-pin jumper on the header.
- Locate the EIA-232 interface on the back panel of the controller card. Connect the modem to this interface.
   Make sure the shelf baud rate is not configured above 19.2
- kbps.
  4. Set the data format as follows: word length = 8 bits, parity =
- Set the data format as follows: word length = 8 bits, parity in none, stop bit = 1.
- When the call has been made and the local modem has connected to the remote unit, press the Enter key on the PC several times to bring the screen up.
- 6. Begin configuring the shelf from the local PC.

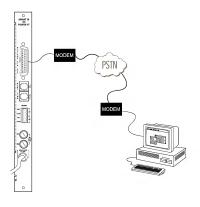


Figure 3-11. Remote Configuration

# MULTI-SHELF OPERATION (DAISY CHAINING)

For larger applications, the controller allows access to 15 additional Smart 16 Selves; in these larger applications, one shelf controllers is configured as the master and all other shelf controllers are configured as abusontrollers (see Figure 3-12 and Figure 3-13). This parameter is set through Switch 1 (SW1), the 8-position rocker switch on the controller card, as illustrated in Figure 3-12. Select either master (SW1-8 on) or subcontroller (SW1-8 off) by moving the switch to the coloried position.

Using SW1-1 through SW1-4, set the shelf number from 1 to 16. Switch settings are detailed in Table 3-1 on page 51. The indicator display on the front of the controller card shows the current shelf number.



Figure 3-12. Controller Configuration Switch Positions

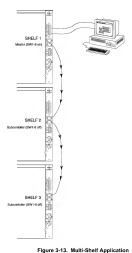


Table 3-1. Switch 1 Shelf Numbering Settings

Shelf Number	SW1-1	SW1-2	SW1-3	SW1-4
1	On	On	On	On
2	Off	On	On	On
3	On	Off	On	On
4	Off	Off	On	On
5	On	On	Off	On
6	Off	On	Off	On
7	On	Off	Off	On
8	Off	Off	Off	On
9	On	On	On	Off
10	Off	On	On	Off
11	On	Off	On	Off
12	Off	Off	On	Off
13	On	On	Off	Off
14	Off	On	Off	Off
15	On	Off	Off	Off
16	Off	Off	Off	Off

### INTERPRETING ALARMS AND ERROR MESSAGES

The ALARM menu, illustrated in Figure 3-6, provides the status information of 16 individual units.

Four indicators on the front panel of the controller card show alarm conditions in the rack, as detailed in Figure 3-14.

Additional error messages are displayed in the numerical display of the controller card. The conditions, along with the numbers that represent them, are listed in Table 3-2.

These alarms, with the exception of the E2 alarm, cannot be resolved in the field and will require the unit to be returned to ADTRAN for service (see the front pages of this manual for repair and return information).

The E2 alarm can sometimes be caused by a blown fuse in one of the shelf cards. To determine if a fuse is the cause, begin taking one card out of the shelf until the E2 message clears. Replacing the problem card's fuse should solve the problem. If the problem continues, contact your ADTRAN customer service representative (see the front pages of this manual).

Table 3-2. Controller Card Error Messages

Error Number	Condition
E0	ROM error in the controller
E1	RAM error in the controller
E2	UART A1 failed in the controller
E3	UART B1 failed in the controller
E4	UART A2 failed in the controller
E5	UART B2 failed in the controller
E6	RTC error

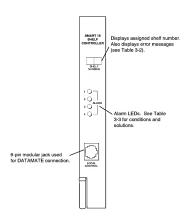


Figure 3-14. Controller Card Front Panel

Table 3-3. LED Alarm Messages

Alarm Number	Condition	Solution
1	Failure in left power supply.	Replace power supply.
2	Failure in right power supply.	Replace power supply.
3	Latched alarm (DBU has been activated).	Clear alarm by following the steps in the section Clearing DBU Alarms.
4	No activity in last 6500 ms (illu- minates on subcontroller shelf only). The subcontroller shelf did not get a response from the master shelf.	Check for the following condi- tions:  1. Bad cable.  2. Backplane not seated cor- rectly.  3. Chain in/Chain out scheme incorrect (see Figure 3-13).

# Clearing DBU Alarms

To clear DBU alarms from the controller card's front panel (indicated by ALARM LED 3), proceed with the steps listed below.

### **DATAMATE Procedure**

- 1. Clear the DBU alarm associated with the DSU card.
- 2. Press 4=ALARM CLEAR from the Main menu.

## VT 100 Procedure

- 1. Clear the DBU alarm associated with the DSU card
- 2. Select 2=ALARM VIEW from the Main menu.
- 3. Select the shelf number.
- 4. View latched alarms.
- Select the slot number.
   Clear latched alarms.
- .. -----

# Appendix A Pinouts

### **EIA-232 Connector Pinout**

The pinout for the EIA-232 connector is found below.

Table A-1. EIA-232 Connector Pinout

Pin	EIA	Description
1	AA	Protective Ground (PG)
2	BA	Transmit Data (TD)
3	BB	Receive Data (RD)
4	CA	Request to Send (RS)
5	CB	Clear to Send (CS)
6	CC	Data Set Ready (SR)
7	AB	Signal Ground (SG)
8	CF	Received Line Signal Detector (CD)
9	-	+12 Test Point
10	-	-12 Test Point
15	DB	Transmit Clock (TC)
17	DD	Receive Clock (RC)
18	-	Local Loopback (LL)
20	CD	Data Terminal Ready (TR)
21	-	Remote Loopback (RL)
22	CE	Ring Indicator (RI)
24	DA	External TX Clock (ETC)
25		Test Indicator (TI)

# CTRL IN and CTRL OUT Connector Pinouts

Use the CTRL IN connector as an RS-232 port for connection to a computer or modem (chain-in) or another TSU product (chain-out). Use the CTRL OUT connector to connect to another Smart 16 chain-in connector. The pinouts are found below.

Connector Type RJ-48
Product Number AMP# 555164-2

Table A-2. CTRL In and CTRL Out Connector Pinouts

СТ	RL IN	CTR	L OUT
1	GND	1	GND
2	RX CTL IN -	2	TX CTL OUT -
3	RX CTL IN +	3	TX CTL OUT +
4	TX CTL IN -	4	RX CTL OUT -
5	TX CTL IN +	5	RX CTL OUT +
6	GND	6	GND



DTR, RI, and CD are used when the chain-in port is functioning as a DTE (connected to a modem). RTS and CTS are used when the chain-in port is functioning as a DCE (connected to a PC or a terminal).

Smart 16 Shelf User Manual

56

# Alarm Connection Pinout

The pinout for the alarm connection is found below.

Table A-3. Alarm Connection Plnout

Pin	Description
1	COM #2
2	NO #2
3	COM #1
4	NO #1

# DC Power Supply

The pinout for the DC power supply connection is found below.

Table A-4. DC Power Supply Pinout

Single DC Input	Dual DC Input
Frame Gnd	Frame Gnd
-48V Return	-48V Return #2
-48V	-48V #2
N/A	-48V Return #1
N/A	-48V #1
	Frame Gnd -48V Return -48V N/A

# V.35 Pinout

The pinout for this connector is shown below.

Connector Type V.35

Product Number AMP# 92-4883-3-1

Table A-5. V.35 Pinout

Pin	CCITT	Description	
Α	101	Protective ground (PG)	
В	102	Signal ground (SG)	
С	105	Request to send (RTS) from DTE	
D	106	Clear to send (CTS) to DTE	
E	107	Data set ready (DSR) to DTE	
F	109	Received line signal detector (DCD) to DTE	
Н	-	Data terminal ready (DTR) from DTE	
J	-	Ring indicator (RI)	
L	-	Local loopback (LL)	
N	-	Remote loopback (RL)	
R	104	Received data (RD-A) to DTE	
T	104	Received data (RD-B) to DTE	
٧	115	RX clock (RC-A) to DTE	
Х	115	RX clock (RC-B) to DTE	
Р	103	Transmitted data (TD-A) from DTE	
S	103	Transmitted data (TD-B) from DTE	
Υ	114	TX clock (TC-A)	
AA	114	TX clock (TC-B)	
U	113	External TX clock (ETC-A) from DTE	
W	113	External TX clock (ETC-B) from DTE	
NN&K	-	Test mode (TM) to DTE	

# Auxiliary 232/366 Port Pinout

The pinout for the Auxiliary 232/366 Port is shown below.

Table A-6. Auxiliary 232/366 Port Pinout

Pin	Name	1/0	Description
1	Shield	I/O	Shield for cable
2	DPR		Digit Present
3	ACR	0	Abandon Call and Retry
4	CRQ	1	Call Request
5	PND	0	Present Next Digit
6	PWI	0	Power Indication
7	SG	1/0	Signal Ground
13	DSC	0	Distant Station Connect
14	NB1		Digit LSB
15	NB2		Digit bit 2
16	NB4	T.	Digit bit 3
17	NB8	I	Digit bit MSB
22	DLO	0	Data Line Occupied
8-12	NC	N/A	No Connection
18-21	NC	N/A	No Connection
23-25	NC	N/A	No Connection

# **Network Pinout**

On the rear panel, the Smart 16 has an eight-position modular jack labeled NETWORK. This connector is used for connecting to the network. The pinout is found below.

Connector Type (USOC) RJ-48C Product Number AMP# 555164-2

Table A-7. Network Pinout

Pin	Name	Description
1	R1 RXDATA-RING	Receive data from network-RNG
2	T1 RXDATA-TIP	Receive data from network-TIP
3	-	Not Used
4	R TXDATA-RING	Transmit data to network-RNG
5	T TDXDATA-TIP	Transmit data to network-TIP
6,7,8	-	Not Used

## **RS-530A Interface Pinout**

The pinout for the RS-530A interface is found below.

Table A-8. RS-530A Interface Pinout

Pin	Name	1/0	Description
1	Shield	1/0	Shield for cable
2	TD-A	1	Transmitted data
3	RD-A	0	Received data
4	RTS-A	- 1	Ready to send
5	CTS-A	0	Clear to send
6	DSR-A	0	Data set ready
7	SG	1/0	Signal ground
8	CD-A	0	Carrier detect
9	RC-B	0	Receive clock (return)
10	CD-B	0	Carrier detect (return)
11	ETC-B	- 1	External transmit clock (return)
12	TC-B	0	Transmit clock (return)
13	CTS-B	0	Clear to send (return)
14	TD-B	- 1	Transmit data (return)
15	TC-A	0	Transmit clock
16	RD-B	0	Receive data (return)
17	RC-A	0	Receive clock
18	NC	N/A	No connection
19	RTS-B	- 1	Ready to send (return)
20	DTR-A	- 1	Data terminal ready
21	NC	N/A	No Connection
22	DSR-B	0	Data set ready (return)
23	DTR-B	- 1	Data terminal ready (return)
24	ETC-A	- 1	External transmit clock
25	NC	N/A	No connection

# **RJ-45 Line 1 Pinout**

The pinout for the RJ-45 Line 1 is shown below.

Table A-9. RJ-45 Line 1 Pinout

Pin	Name	Description
1	R1	Transmit Data from DSU to Network-Ring 1
2	T1	Transmit Data from DSU to Network-Tip 1
3-6	-	Not Used
7	Т	Receive Data from Network to DSU-Tip
8	R	Receive Data from Network to DSU-Ring

# RJ-45 Line 2 Pinout

The pinout for the RJ-45 Line 2 is shown below.

Table A-10. RJ-45 Line 2 Pinout

Pin	Name	Description
1-3	-	Not Used
4	Т	Network-Tip
5	R	Network-Ring
6-8	-	Not Used

# Appendix B Specifications

### SPECIFICATIONS AND FEATURES

This section describes the standard specifications and features incorporated in the Smart 16 Shelf.

#### Network Compatibility

DDS, 4-wire Switched 56, T1, FT1, ISDN

# Indicators and Controls

- 4 LED alarm indicators
  - Numerical display (Shelf Address)

#### Rackmount Units

- · LED indicators (defined in each unit's user manual)
- Test push-buttons

# Power Supplies

 AC and DC: LED indicators for +5V, -5V, +12V, -12V voltages ok (green) and voltages fail (red)

### Rear Panel Connections

Control Port

DB-25 (EIA-232)

RI-45 6-pin

# DATAMATE

• RJ-11

#### Rackmount Units

- Up to 16 V.35 and EIA-232 DTE connectors
- Up to 32 RJ-45 network jacks for network connections

#### Captive Power Cord

· AC versions with single or dual inputs

#### Screw Terminals

· DC versions with single or dual inputs

# Alarm

4-screw terminals

### Physical

# Size

17.25" wide, 10.5" high, 14.875" deep

## Weight

- · 20 pounds (empty)
- 45 pounds (full)

### Mounting

- 19" rack or cabinet
- 23" rack or cabinet

#### Power

#### Inputs

- AC voltage: 120 VAC ±20%
- Frequency: 47 63 Hz
- DC voltage: 30 72 VDC

#### Fuse Ratings

- AC version: 3A, 3AG
  - DC version: 5A, 3AG

# Relay Contact Ratings

- · Noninductive load
- · Maximum switched power: 60W or 125 VA
- · Maximum switched current: 2 amps
- Maximum switched voltage: 150 VDC or 300 VAC
   U.L. Rating: 2 A @ 30 VDC; 1A @ 120 VAC

64 Smart 16 Shelf User Manual

### Power Supply Outputs to Shelf

- +5 VDC @ 14 amps
  - -5 VDC @ 1.5 amps
  - +12 VDC @ 2 amps
- -12 VDC @ 2 amps

# Environmental

#### Temperature

- Operating: 0°C to 50°C (32°F to 122°F)
  - Storage: -20°C to 70°C (-4° F to 158° F)

### Relative Humidity

Up to 95% non-condensing

# Agency Approvals

- UL and CUL
- FCC Part 15
   FCC Part 68

# Index

A	E
AC version 29	edit shelf/slot descriptions 42
affidavit v. vi	Edit SNMP phone number 42
alarm connections 27	enhanced select 40, 42
alarm mera; 40	environmental
alarm messages 52, 54	specifications, 65
alarms 52	equipment included 23
clearing DBU alarms 54	equipment needed 24
	error messages 52
C	controller card 52
change password 41	
connection 35	F
connection type 42	factory reset menu 43
contents of shipment 23	FCC information x
controller card	FCC regulations viii
connecting input devices 26	fuse ratings 64
error messages 52	fuses 29
front panel 53	
installation 26	1
CTRL OUT	indicators 63
pin assignments 56	input devices 21
_	installation 23
D	cabinet/rack 24
daisy chaining 27, 49	controller card 26
DATAMATE 22, 43, 44	power supply 25
arrow keys 45	J
cancel 45	
connection to controller card 27	jumper locations 36
enter 45	jumper settings 36
LCD window 44	1
numeric keypad 45	-
quick 45	latched (audible) alarm 42
shift 45	LED alarm messages 54
DBU alarms	LEDs 54
clearing 54	local configuration 35, 38
DC version 29	local operation 35

main menu 35, 37 safety instructions iv modem 47 select unit mera 39 modem connection 27 service type information viii mounting 21 set date 42 set SNMP address 42 multi-shelf connection 27 multi-shelf operation 49 set time 41 shipment contents 23 Smart 16 Shelf network compatibility 63 features 63 specifications 63 0 switch I shelf numbering 51 operation 35 switch locations 36 overview 21 switch positions 49 switch settings 36, 49 password 41 power 29, 64 terminal timeout 41 power supplies 63 power supply 22 installation 25 utilities menu 41 power up 23, 24 VT 100 21, 35 rear panel connections 63 connection to controller card 27 receipt inspection 23 relay contact ratings 64

warranty xii

remote configuration 48

remote operation 47