



GETTING STARTED

Two configuration methods are available for your NetVanta router:

- Web-based GUI
- AOS Command Line Interface (CLI)

The GUI lets you configure the main unit settings and provides online guidance and explanations for each setting. However, using the AOS CLI may be necessary for more advanced configurations.

ACCESS THE GUI

You may access the web-based GUI from any web browser on your network by following these steps:

1. Connect the router to your PC using the **ETH0/1** port on the back of the unit.
2. Set your PC to a fixed IP address of 10.10.10.2. If you cannot change the PC's IP address, you will need to change the unit's IP address using the CLI. (Refer to the next two sections for instructions.)
3. Enter the unit's IP address in your browser address line. The default IP address is 10.10.10.1.
4. You will then be prompted for the username and password (the default settings are **admin** and **password**).
5. The initial GUI screen appears.

ACCESS THE CLI

Access the AOS CLI via the **CONSOLE** port or a Telnet session. To establish a connection to the NetVanta router **CONSOLE** port, you need the following items:

- VT100 terminal or PC (with VT100 terminal emulation software)
 - Straight-through serial cable with a DB-9 (male) connector on one end and the appropriate interface for your terminal or PC communication port on the other end.
1. Connect the DB-9 (male) connector of your serial cable to the **CONSOLE** port on the rear panel of the unit.
 2. Connect the other end of the serial cable to the terminal or PC.
 3. Provide power to the unit as appropriate. See the NetVanta 2000 Series Hardware/Installation Guide (provided on the ADTRAN OS System Documentation CD) for more details.

4. Once the unit is powered up, open a VT100 terminal session using the following settings: 9600 baud, 8 data bits, no parity bits, and 1 stop bit. Press **Enter** to activate the AOS CLI.
5. Enter **enable** at the **>** prompt.
6. Enter the enable password when prompted. The default password is **password**.



The configuration parameters used in the examples outlined in this document are for instructional purposes only. Please replace all underlined entries (example) with your specific parameters to configure your application.

CONFIGURE THE UNIT'S IP ADDRESS

The following steps create an IP address and subnet mask for **ETH0/1**. If you are not sure what IP address to assign, please contact your network administrator.

1. At the **#** prompt, enter **config terminal**.
2. At the **(config)#** prompt, enter **interface eth 0/1** to access the configuration parameters for the Ethernet port located on the rear of the unit.
3. Enter **ip address 10.26.12.12 255.255.255.0** to assign an IP address to the Ethernet port using a 24-bit subnet mask.
4. Enter **ip route 0.0.0.0 0.0.0.0 192.22.72.2** to add a default route to the route table. If necessary, contact your network administrator to obtain the IP address (and subnet mask) for your particular configuration.
5. Enter **no shutdown** to activate the interface to pass data.
6. Enter **exit** to exit the Ethernet interface commands and return to the Global Configuration mode.



Depending on your configuration, you may need to set a default gateway or use the **(config)# ip default gateway** command. If IP routing is enabled on the unit, do NOT set a default gateway.



NETVANTA 3448 REAR PANEL LAYOUT

ENABLE TELNET ACCESS

The following steps enable a password of **adtran** for Telnet access. By default, Telnet access is enabled with a password of **password**.

1. Verify that the prompt of your unit displays **[config]#**.
2. Enter the **telnet 0.0.0.0** to change the configuration parameters for the Telnet sessions.
3. Enter **login** to initiate Telnet access.
4. Enter **password adtran** to change the login password for the Telnet sessions.
5. Enter **exit** to return to the Global Configuration mode.
6. Verify that the prompt of your unit displays **[config]#**.
7. Enter **do write memory** to save the current configuration.

CONFIGURE YOUR APPLICATION

More detailed documentation for configuring your ADTRAN unit is provided on the ADTRAN OS System Documentation CD included in your shipment. For more detail on hardware setup, refer to the appropriate NIM Quick Start Guides and the Hardware Installation Guide. For more detail on configuring your system, refer to the ADTRAN Operating System (AOS) Command Reference Guide, configuration guides, and technical support notes.



Important: For additional details on product features, specifications, installation, and setup, refer to the appropriate Hardware Installation Guide on the ADTRAN OS System Documentation CD shipped with the base unit and available online at www.adtran.com.

CONSOLE PINOUTS

Pin	Name	Description
1	DCD	Data Carrier Detect (output)
2	RD	Receive Data (output)
3	TD	Transmit Data (input)
4	DTRE	Data Terminal Ready (input)
5	SG	Signal Ground
6	—	Tied to Pin 1 (output)
7	—	Unused
8	—	Tied to Pin 1 (output)
9	—	Unused

ETHERNET PINOUTS (ETH G1, ETH G2, ETHERNET SWITCH PORTS 1 TO 8)

Pin	Name	Description	With PoE Upgrade (Switch Ports 1 to 8 only)
1	TX1	Transmit Positive	PoE Negative Rail
2	TX2	Transmit Negative	PoE Negative Rail
3	RX1	Receive Positive	PoE Positive Rail
4, 5	—	Unused	Unused
6	RX2	Receive Negative	PoE Positive Rail
7, 8	—	Unused	Unused