



Enterprise Edge M7208 User Card

Your Enterprise Edge M7208 telephone

Display

shows the time, date, call information, and guides you.

Indicators

appear beside lines and features.

Feature button

starts or ends a feature.

Release button

cancels active calls.

 
Hold button

Dial pad

Volume control

Memory and line buttons

are buttons with indicators for one touch dialing, feature operation or line access.

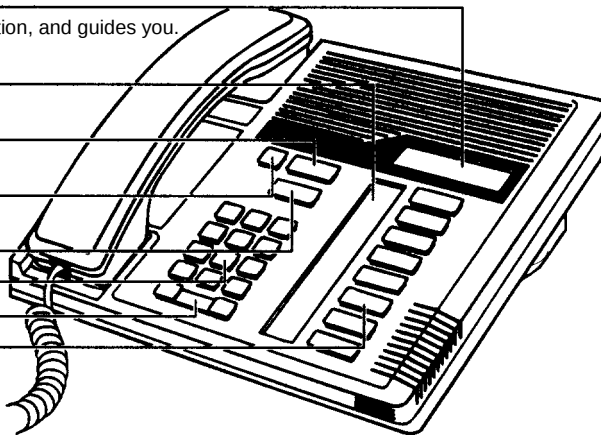

Using Key Inquiry

Check what is programmed on your memory keys.

1. Release all calls or lines with dial tone.
2. Press **Feature** * 0 .
3. Press the key(s) that you want to check.
4. Read the display.
5. Press **Feature** when finished.

Adjusting display contrast

1. Press **Feature** * 7 .
2. Press 1 to 9 on the key pad for the contrast level you want; the higher the number the higher the contrast level.

Selecting a ring type and volume level

1. Press **Feature** * 6 .
2. Press 1, 2, 3 or 4 to hear the different ring types.
3. While the telephone is ringing, press **Volume** to adjust the volume level.
4. Press **Feature** to store the ring.

Adjusting the handset or telephone speaker volume

1. Press **Volume** when using the handset or the speaker.

Making and answering calls

Answering calls

Answering calls using the handset

When your telephone rings, or ► flashes beside an Intercom or line key:

1. Lift the handset.

OR

Press the key beside the flashing ► before lifting the handset.

Answering calls using Handsfree

When your telephone rings, or ► flashes beside an Intercom or line key:

1. Press .

Making calls

Depending upon the dialling mode programmed on your telephone, you may have to lift the handset before making a call.

External calls using numbered line keys

1. If you do not have an external Prime line, press a line key.
2. Dial your call.

External calls using Intercom keys

1. Lift the handset.
2. If ► appears beside an Intercom key, enter a line pool access code.
OR
Press an Intercom key without ►, then enter a line pool access code.
3. When you hear external dial tone, dial your call.

Internal calls using Intercom keys

1. If you do not have an internal Prime line, press .
2. Dial your call.

Note: Line pool access codes and extension numbers are supplied by your System Administrator.

Making calls using Handsfree

1. Press instead of lifting the handset.

Holding Calls

1. Press . The ► flashes beside the line on hold.
2. Press the line key with the flashing ► to return to the call.

Automatic hold

Calls are put on hold automatically when you switch from one line to another.

Exclusive hold

Use Exclusive Hold () to keep a call on hold so that it can be retrieved only at your telephone.

System Administrator can program Handsfree for your telephone.

Switching between Handsfree and handset

 
1. Press and replace the handset to switch to Handsfree.
2. Pick up the handset to switch back.

Using Mute

1. Press to turn the microphone OFF.
2. Press again to turn the microphone ON.

Programming memory keys

About memory keys

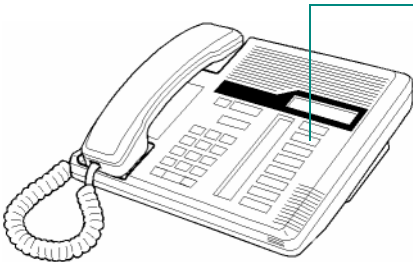

Memory keys are the keys with indicators other than line or Handsfree keys. Memory keys store telephone numbers or feature codes to give you one-touch dialling or feature activation. You can change what a memory key does by just programming it with a new number or feature. You cannot program a line or Handsfree key.

Remember: Press * to check a memory or line key.

Programming memory keys

External Autodial

1. If you are on a call or a line with dial tone, press or .
2. Press * .
3. Press a memory key.
4. Dial the external number.
5. Press to store the number.
6. Label your new key.

Internal Autodial

1. If you are on a call or a line with dial tone, press or .
2. Press * .
3. Press a memory key.
4. Dial the extension number.
5. Label your new key.

Features

 
1. If you are on a call or a line with dial tone, press or .
2. Press * .
3. Press a memory key.
4. Press and the feature code.
5. Label your new key.

Erasing memory keys

1. If you are on a call or a line with dial tone, press or .
2. Press * .
3. Press the memory key you want to erase.
4. Press to erase the key.

Setting up the telephone

Connecting the cords

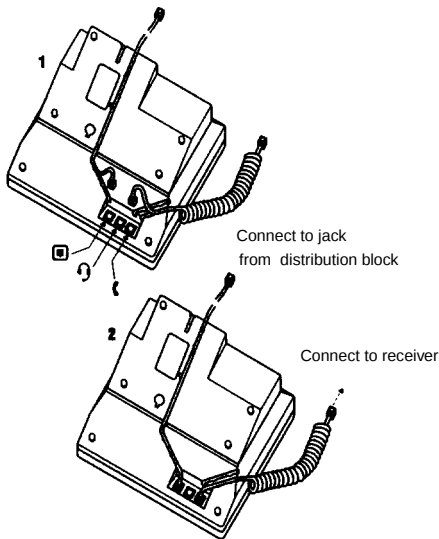

ATTENTION Before attempting to carry out any work on the telephone, ensure that the line cord is unplugged from the wall socket.

To remove any of the cords, squeeze the release latch on the plug and gently pull the plug from the socket.

Connect the handset cord to the jack labelled with the telephone icon and route the cord as shown.

If you are using a headset, route the cord along the channel in the base and connect the cord to the telephone jack that is marked with the headset icon.

Route the line cord through the stand and connect the cord to the telephone jack that is marked with the jack icon.

Attach the stand using either pair of slots; to raise the back of the telephone to its highest position, use these slots.

Once the above work is complete, plug the line cord back into its wall socket.

 
Notice

These telephones now conform to the latest standards in relation to the positioning of Q and Z on the number keys. The Q appears on key number 7 and the Z appears on key number 9.


Setting up the telephone

Mounting the
telephone on
the wall


1

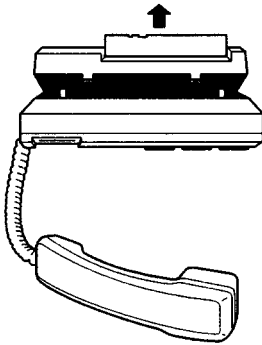


2

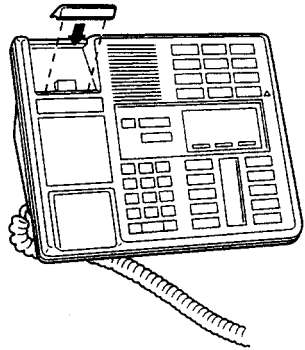 


3

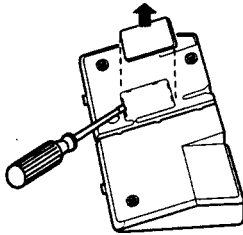 

4

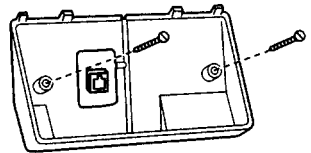 

5

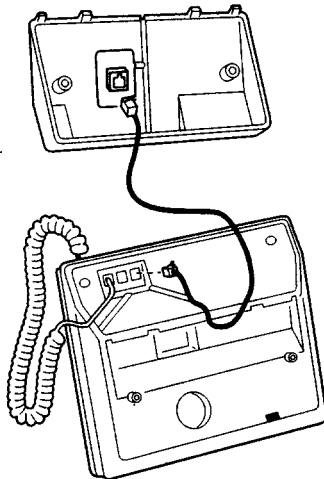 

6

