

Cisco NCS5700

IOS-XR7 Release 7.9.2

IOS-XR7 System Upgrade Procedure

Table of Contents

1 Introduction	3
1.1 Purpose, Scope and Audience	3
1.2 Upgrade/downgrade Matrix	3
1.3 Summary of Upgrade Steps	3
1.4 Bridge SMUs	3
1.5 Packages for Upgrade	3
1.6 Required Package files	4
2 Pre-Upgrade Task	5
2.1 Configuration Backup	5
2.2 System Stability check	5
2.3 Cost out IGP:	6
2.4 Enable auto-fpd upgrade:	6
2.5 Disk Cleanup:	6
2.6 Managing External server/repo reachability:	6
3 Software Upgrade	8
3.1 Single-Command Upgrade using install replace:	8
3.2 Multi-Step Upgrade (install package replace & install apply):	9
3.3 Optional packages installation procedure	10
4 Post Upgrade Tasks	12
5 Other Boot Options (GISO/IPXE/USB)	13
6 Downgrade from 7.9.2 IOS XR Release	14
6.1 Post Downgrade Tasks	14
7 FPD	15
8 Caveats	16

1 Introduction

1.1 Purpose, Scope and Audience

The purpose of this document is to describe the upgrade and downgrade procedure for the Cisco NCS 5700 Series Network Convergence System Router, Release IOS-XR 7.9.2

Audience: This guide is for Cisco Systems Field Engineers and Network Operators. It is split into four sections.

1.2 Upgrade/downgrade Matrix

Single Step Upgrade/Downgrade is supported for following releases:

Platform	Supported From	To
NCS5700L	IOS-XR 7.3.2/7.4.x/7.5.x/7.6.x/7.7.x/7.8.x	IOS-XR 7.9.2

Supported variants under NCS5700L:

- NCS-57B1-6D24-SYS/NCS-57B1-5DSE-SYS
- NCS-57C1-48Q6-SYS
- NCS-57D2-18DD-SYS

1.3 Summary of Upgrade Steps

1. Perform install replace to do single-command upgrade.
(or)
Perform install package replace, install package add <optional rpm> and install apply reload.
2. Perform install commit to save the upgrade.

1.4 Bridge SMUs

No Bridge SMU's are required for the system upgrade from release 7.3.2/7.4.x/7.5.x/7.6.x/7.7.x/7.8.x to 7.9.2 release

1.5 Packages for Upgrade

Following files are available to download for various boot options:

Table 1: IOS-XR Software files available for download

#	File	Contents	Comment
1	ncs5700-x64-7.9.2.iso	NCS 5700 IOS XR Software	Contains Boot image
2	ncs5700-k9sec-rpms.7.9.2.tar	NCS 5700 IOS XR Software 3DES	Contains k9sec rpm
3	ncs5700-usb_boot-7.9.2.zip	NCS 5700 IOS XR Software	Contains USB Boot Package
4	ncs5700-optional-rpms.7.9.2.tar	NCS 5700 IOS XR Software	Optional Packages

1.6 Required Package files

Mini ISO Package is mandatory to perform the System Upgrade and upgrade needs to be done from XR VM.

Description	Package Name
Boot Image	ncs5700-x64-7.9.2.iso

2 Pre-Upgrade Task

Note: Config backup, precheck, Image download, tar file copy to router and install add are hitless operation and can be done outside of MW.

2.1 Configuration Backup

- Copy the running-configuration to a harddisk: on the router.

```
RP/0/RP0/CPU0:57XX# copy running-config harddisk:/running_config
```

- Copy the running-configuration to a remote scp server

```
RP/0/RP0/CPU0:57XX#scp harddisk:/<file name> <user_name>@<server ip>:/<path>
```

2.2 System Stability check

- The following commands should be executed to verify basic system stability before the upgrade. At the XR prompt:

show platform	Verify that all nodes are in "IOS XR RUN/OPERATIONAL" state
show ipv4 interface brief <or> show ipv6 interface brief <or> show interface summary	Verify that all necessary interfaces are "UP"
show install active	Verify that the proper set of packages are active
show install committed	Verify that the proper set of committed packages are same as active. If not, execute 'install commit'
cfs check clear configuration inconsistency	Verify configuration file system To fix configuration file system
show hw-module fpd	Ensure all the FPD versions status are CURRENT Please refer to "Field Programmable Versions Document" for FPD version information.
show alarms	Shows any outstanding alarms in system
show media	Shows the disk usage
show inventory	Shows chassis inventory information
show logging	Capture show logging to check for any errors

2.3 Cost out IGP:

Cost-out IGP: To minimize traffic loss during the upgrade please follow below steps:

For OSPF use “max-metric” command.

```
RP/0/RP0/CPU0:57XX(config-ospf)# max-metric router-lsa
```

For ISIS use “set-overload-bit” command.

```
RP/0/RP0/CPU0:57XX(config-isis)# set-overload-bit
```

2.4 Enable auto-fpd upgrade:

Enable auto FPD auto upgrade from XR if it is not already enabled on the router.

```
RP/0/RP0/CPU0:57XX(config)#fpd auto-upgrade enable
RP/0/RP0/CPU0:57XX(config)#commit
```

Note: From 781, it will be enabled by default without any explicit configuration from user.

2.5 Disk Cleanup:

Check available space in install repository. At least 2G of free space is required to perform System upgrade. If user is going to copy the packages and SMU's to the harddisk, please ensure enough free space is available on the harddisk.

```
RP/0/RP0/CPU0:57XX# show media location 0/RP0/CPU0
```

2.6 Managing External server/repo reachability:

Install replace using external server (http/ftp) or installing rpm/smu via external/remote repo requires connectivity from router Linux NW stack to external server, since the install infra uses 'curl' Linux utility to access it.

1. If the connectivity to external server is via an In-band data port ethernet interface:
 - a. Please verify that external server is able to reach the router's lowest-numbered loopback interface (Ex:Loopback0), since the Linux networking uses loopback as source interface. Ping should work from external server to router's lowest-numbered loopback interface IP address.

Alternatively, from router bash prompt, please verify the ping to external server is working.

```
RP/0/RP0/CPU0:Router#bash
[Router:~]$ping <server-ip>
```

Ping should be working to external server from router's bash prompt.

<or>

- b. If connectivity is instead needed to an external server that cannot route to the lowest-numbered loopback interface of router, then user must manually add a new route to Linux with source ip which will help in connectivity.

Example:

```
RP/0/RP0/CPU0:Router#bash
[Router:~]$ ip route add <server-ip/mask> dev to_xr scope link
src <source-ip>

[Router:~]$ping <server-ip>
```

Ping should be working to external server from router's bash prompt.

2. If the connectivity to external server is via the Management interface:

User should add a static route on bash routing table to reach external server via Mgmt. interface, since by default Linux networking will be using router's lowest-numbered loopback interface as source and static route from XR will not be imported into bash.

CLI to add static route:

```
RP/0/RP0/CPU0:Router#bash
[Router:~]$ ip route add <server-ip/mask> via <Mgmt. gateway IP>
dev Mg0_RP0_CPU0_0
```

Verify ping after adding static route:

```
RP/0/RP0/CPU0:Router#bash
[Router:~]$ping <server-ip>
```

Ping should be working to external server from router's bash prompt.

3 Software Upgrade

3.1 Single-Command Upgrade using install replace:



Note

Cisco recommends using this single cli – ‘install replace’ method to perform system upgrade.

Step 1. Download the image from CCO and Copy the ISO (or GISO) image to the remote server location.

Verify that the md5 checksum on remote server matches with CCO

Upgrade the system to replace the current software with the .iso image and activate it using http/ftp option

Example for http:

```
Router#install replace http://10.1.1.1/<PATH OF IMAGE>/ncs5700-x64-7.9.2.iso noprompt
```

Example for ftp:

```
Router#install replace ftp://10.1.1.1/<PATH OF IMAGE>/ncs5700-x64-7.9.2.iso noprompt
```

<or>

Download the image from CCO and Copy the ISO (or GISO) image to the `harddisk:` location on the router

Verify that the md5 checksum on router `harddisk:` matches with CCO

Upgrade the system to replace the current software with the .iso image and activate it.

Example:

```
Router#install replace /harddisk:/ncs5700-x64-7.9.2.iso noprompt
```

Step 2. Verify that the image is activated successfully.

Example:

```
Router#show install request
Router#show install active summary
```

Step 3. Commit the transaction and execute show version to check the details.

Example:

```
Router#install commit
```

Example:

```
RP/0/RP0/CPU0:NCS57XX#show version
Cisco IOS XR Software, Version 7.9.2 LNT
Copyright (c) 2013-2023 by Cisco Systems, Inc.
```

```
Build Information:
  Built By       : ingunawa
```



```
Built On      : Thu Jun 29 11:14:16 UTC 2023
Build Host    : iox-ucs-076
Workspace     : /auto/srcarchive14/prod/7.9.2/ncs5700/ws
Version       : 7.9.2
Label         : 7.9.2
```

```
cisco NCS5700 (D-1563N @ 2.00GHz)
cisco NCS-57B1-5DSE-SYS (D-1563N @ 2.00GHz) processor with 32GB of
memory
ST-SE uptime is 1 day, 17 minutes
NCS55B1 Fixed Scale HW Flexible Consumption Need Smart Lic
```

3.2 Multi-Step Upgrade (install package replace & install apply):

This method is used to install iso along with optional rpms. This will require user to perform 'install package replace' to upgrade iso followed by 'install package add'

Step 1. Download the image from CCO and Copy the ISO (or GISO) image to the remote server location.

Verify that the md5 checksum on remote server matches with CCO

Upgrade the system to replace the current software with the .iso image using http/ftp option

Example for http:

```
Router#install package replace http://10.1.1.1/<PATH OF IMAGE>/ncs5700-
x64-7.9.2.iso
```

Example for ftp:

```
Router#install package replace ftp://10.1.1.1/<PATH OF IMAGE>/ncs5700-
x64-7.9.2.iso
```

<or>

Download the image from CCO and Copy the ISO (or GISO) image to the `harddisk:` location on the router

Verify that the md5 checksum on router `harddisk:` matches with CCO

Upgrade the system to replace the current software with the .iso image

Example:

```
Router#install package replace /harddisk:/ncs5700-x64-7.9.2.iso
```

Step 2. (Optional step) Install optional rpm or smu rpm using method described in section 3.3

Step 3. Activate the new .iso image and rpm added on the router by applying the changes.

Example:

```
Router#install apply reload noprompt
```

Include the keyword `noprompt` in the command to enable the system to bypass your permission to reload the router.

Step 4. Verify that the image is activated successfully.

Example:

```
Router#show install request
Router#show install active summary
```

Step 5. Commit the transaction and execute show version to check the details.

Example:

```
Router#install commit
```

Example:

```
RP/0/RP0/CPU0:NCS57XX#show version
Cisco IOS XR Software, Version 7.9.2 LNT
Copyright (c) 2013-2023 by Cisco Systems, Inc.

Build Information:
  Built By      : ingunawa
  Built On     : Thu Jun 29 11:14:16 UTC 2023
  Build Host   : iox-ucs-076
  Workspace    : /auto/srcarchive14/prod/7.9.2/ncs5700/ws
  Version      : 7.9.2
  Label        : 7.9.2

cisco NCS5700 (D-1563N @ 2.00GHz)
cisco NCS-57B1-5DSE-SYS (D-1563N @ 2.00GHz) processor with 32GB of
memory
ST-SE uptime is 1 day, 17 minutes
NCS55B1 Fixed Scale HW Flexible Consumption Need Smart Lic
```

3.3 Optional packages installation procedure

- Copy the required RPMs in a repository and make sure the repository and server is reachable from the router.
- Repository can be hosted locally on the router or on a remote server which is reachable over http/https/ftp
- Creating a local repository:
 1. Create a directory under the /harddisk:/, say "new_repo"
 2. Copy the rpm .tgz/.tar file on the router under this "new_repo" directory
 3. Unzip and untar all the .tgz/.tar file: "tar -xzvf <rpm tar ball>"
 4. Convert the dir into repository by running 'createrepo_c </repo-dir-path/>' on router linux prompt
 5. Configure the local repository on XR, as per below example

Sample config of local repository:

```
RP/0/RP0/CPU0:iso#show run install
install
 repository new-repo
  url file:///misc/disk1/new_repo
!
```

- Creating a remote repository:
 1. Identify a remote linux machine which is reachable over http/https/ftp from router
 2. Create a directory, say 'repo' under the http root dir(ideally '/var/www/html/') on the remote server
 3. Copy the rpm .tgz/.tar file to the remote server inside the 'repo' directory
 4. Unzip and untar all the .tgz/.tar file: "tar -xzvf <rpm tar ball>"
 5. Convert the dir into repository by running 'createrepo --database </repo-dir-path/>' on remote server
 6. Configure the remote repository on XR, as per below example.

Sample config of remote repository:

```
RP/0/RP0/CPU0:ios#show run install
install
 repository repo
  url http://192.168.1.20/repo
!
```

- Check 'show install available' to make sure the RPMs are available to install.

Sample output:

```
RP/0/RP0/CPU0:ios#show install available
Trying to access repositories...
```

Package Repository	Architecture	Version
-----	-----	-----
xr-cdp local-repo	x86_64	7.9.2v1.0.0-1
xr-eigrp local-repo	x86_64	7.9.2v1.0.0-1
xr-telnet local-repo	x86_64	7.9.2v1.0.0-1
xr-syslog local-repo	x86_64	7.9.2v1.0.1-1

- Install optional rpm packages as shown below:

```
RP/0/RP0/CPU0:ios#install package add xr-cdp xr-telnet
```

NOTE: Do not use 'install package upgrade', it is used when installing packages of different versions/smu fixes.

- Install smu rpm packages as shown below:

```
RP/0/RP0/CPU0:ios#install package upgrade xr-syslog
```

- Once this operation is completed, execute the below command:

```
RP/0/RP0/CPU0:ios#install apply reload
```

- After reload, once the device is up with latest image, perform the install commit:

```
RP/0/RP0/CPU0:ios#install commit.
```

4 Post Upgrade Tasks

- Verify/fix configuration file system (mandatory):

```
RP/0/RP0/CPU0:57XX#cfs check
```

- Verify fpd versions running are current:

```
RP/0/RP0/CPU0:57XX#show hw-module fpd
```

- Restore IGP metric if changed before the upgrade (this is done from xr vm)

OSPF

```
RP/0/RP0/CPU0:57XX# (config-ospf)# no max-metric router-lsa
```

ISIS

```
RP/0/RP0/CPU0:57XX# (config-isis)# no set-overload-bit
```

- Check to see if there were any failed startup configurations.

```
RP/0/RP0/CPU0:57XX#show configuration failed startup
```

- Execute 'install commit' to commit the newly active software (install commit is required after any install activate operation else after router reload, nodes will go back to previously committed software)

```
RP/0/RP0/CPU0:57XX#install commit
```

5 Other Boot Options (GISO/IPXE/USB)

Please refer below for various boot options:

Router Bring up:

<https://www.cisco.com/c/en/us/td/docs/iosxr/ncs5500/system-setup/77x/b-system-setup-cg-ncs5500-77x/m-ncs5700-system-setup.html>

GISO/IPXE and USB Boot option:

<https://www.cisco.com/c/en/us/td/docs/iosxr/ncs5500/system-setup/77x/b-system-setup-cg-ncs5500-77x/m-additional-install-operations.html>

Please find below the link for more information about installation of optional rpms.

<https://www.cisco.com/c/en/us/td/docs/iosxr/ncs5500/system-setup/77x/b-system-setup-cg-ncs5500-77x/m-install-ios-xr-software.html>

6 Downgrade from 7.9.2 IOS XR Release

Downgrade can be performed by following options.

Option 1: If install commit was not done post upgrade, router reload will bring it back to previous install committed image.

Option 2: Using install replace method as described in section 3.1 with downgrade version iso file.

Example:

```
Router#install replace /harddisk:/<downgrade iso> noprompt
```

6.1 Post Downgrade Tasks

- Verify/fix configuration file system (mandatory):

```
RP/0/RP0/CPU0:57XX#cfs check
```

- Verify fpd versions running are current:

```
RP/0/RP0/CPU0:57XX#show hw-module fpd
```



Note

If FPD upgrade was done as part of IOS-XR 7.9.2 installation, FPDs do not need to be updated again once the downgrade version is activated.

- Restore IGP metric if changed before the upgrade (this is done from xr vm)

OSPF

```
RP/0/RP0/CPU0:57XX(config-ospf)# no max-metric router-lsa
```

ISIS

```
RP/0/RP0/CPU0:57XX(config-isis)# no set-overload-bit
```

7 FPD

From release 781 onwards, fpd auto upgrade is enabled by default (without any configuration applied by user) for NCS5700 based XR7 platforms.

However, the configuration support (fpd auto-upgrade enable/disable) will still be in place and honored by XR incase if the user wants to enable/disable it.

8 Caveats

NA