



Global Call API for Windows Operating Systems

Programming Guide

November 2002



INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH INTEL® PRODUCTS. NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT. EXCEPT AS PROVIDED IN INTEL'S TERMS AND CONDITIONS OF SALE FOR SUCH PRODUCTS, INTEL ASSUMES NO LIABILITY WHATSOEVER, AND INTEL DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, RELATING TO SALE AND/OR USE OF INTEL PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT. Intel products are not intended for use in medical, life saving, or life sustaining applications.

Intel may make changes to specifications and product descriptions at any time, without notice.

This Global Call API for Windows Operating Systems Programming Guide as well as the software described in it is furnished under license and may only be used or copied in accordance with the terms of the license. The information in this manual is furnished for informational use only, is subject to change without notice, and should not be construed as a commitment by Intel Corporation. Intel Corporation assumes no responsibility or liability for any errors or inaccuracies that may appear in this document or any software that may be provided in association with this document.

Except as permitted by such license, no part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means without express written consent of Intel Corporation.

Copyright © 1996-2002, Intel Corporation

AlertVIEW, AnyPoint, AppChoice, BoardWatch, BunnyPeople, CablePort, Celeron, Chips, CT Media, Dialogic, DM3, EtherExpress, ETOX, FlashFile, i386, i486, i960, iCOMP, InstantIP, Intel, Intel logo, Intel386, Intel486, Intel740, IntelDX2, IntelDX4, IntelSX2, Intel Create&Share, Intel GigaBlade, Intel InBusiness, Intel Inside, Intel Inside logo, Intel NetBurst, Intel NetMerge, Intel NetStructure, Intel Play, Intel Play logo, Intel SingleDriver, Intel SpeedStep, Intel StrataFlash, Intel TeamStation, Intel Xeon, Intel XScale, IPLink, Itanium, LANDesk, LanRover, MCS, MMX, MMX logo, Optimizer logo, OverDrive, Paragon, PC Dads, PC Parents, PDCharm, Pentium, Pentium II Xeon, Pentium III Xeon, Performance at Your Command, RemoteExpress, Shiva, SmartDie, Solutions960, Sound Mark, StorageExpress, The Computer Inside., The Journey Inside, TokenExpress, Trillium, VoiceBrick, Vtune, and Xircom are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries.

* Other names and brands may be claimed as the property of others.

Publication Date: November 2002

Document Number: 05-1867-001

Intel Converged Communications, Inc.
1515 Route 10
Parsippany, NJ 07054

For **Technical Support**, visit the Intel Telecom Support Resources website at:

<http://developer.intel.com/design/telecom/support/>

For **Products and Services Information**, visit the Intel Communications Systems Products website at:

<http://www.intel.com/network/csp/>

For **Sales Offices** and other contact information, visit the Intel Telecom Building Blocks Sales Offices page at:

<http://www.intel.com/network/csp/sales/>

Contents

	About This Publication	11
1	Product Description	13
1.1	Global Call Software Overview	13
1.2	Global Call Feature Categories	14
1.2.1	Call Control Features	14
1.2.2	Operation, Administration and Maintenance Features	14
1.3	Global Call Architecture	15
1.3.1	Global Call Architecture Overview	15
1.3.2	Global Call API	16
1.4	Call Control Libraries	17
1.4.1	Starting Call Control Libraries	17
1.4.2	Call Control Library States	18
1.5	Global Call Object Identifiers	19
1.5.1	Line Device Identifier	19
1.5.2	Call Reference Number	19
1.5.3	Object Identifiers and Resource Sharing Across Processes	20
1.5.4	Target Objects	20
1.6	Global Call API versus DTI API	23
1.7	Global Call API versus ISDN API	24
2	Programming Models	27
2.1	Programming Modes and Models	27
2.2	Programming Modes	27
2.2.1	Synchronous Mode Programming	27
2.2.2	Asynchronous Mode Programming	28
3	Call State Models	33
3.1	Call State Model Overview	33
3.2	Basic Call Model	33
3.2.1	Basic Call States at the Inbound Interface	34
3.2.2	Basic Call States at the Outbound Interface	35
3.2.3	Basic Call States for Call Termination	35
3.3	Basic Call Model Configuration Options	36
3.3.1	Call State Configuration	36
3.3.2	Call State Event Configuration	37
3.3.3	Call Acknowledgement Configuration	38
3.3.4	Call Proceeding Configuration	38
3.3.5	Minimum Destination Information Configuration	38
3.3.6	Maximum Destination Information Configuration	39
3.4	Basic Call Control in Asynchronous Mode	39
3.4.1	Inbound Calls in Asynchronous Mode	40
3.4.2	Outbound Calls in Asynchronous Mode	55
3.4.3	Call Termination in Asynchronous Mode	62
3.5	Basic Call Control in Synchronous Mode	66

3.5.1	Inbound Calls in Synchronous Mode	66
3.5.2	Outbound Calls in Synchronous Mode	76
3.5.3	Call Termination in Synchronous Mode	80
3.5.4	Handling Unsolicited Events	84
3.6	Advanced Call Control with Call Hold and Transfer	84
3.6.1	Advanced Call State Model Overview	84
3.6.2	Advanced Call States for Hold and Transfer	85
3.6.3	Call Hold	85
3.6.4	Call Transfer	86
4	Event Handling	91
4.1	Overview of Event Handling	91
4.2	Event Categories	91
4.3	Blocked and Unblocked Event Handling.	92
4.4	Event Retrieval	93
4.5	Events Indicating Errors	94
4.6	Masking Events	94
4.7	Event Handlers	94
5	Error Handling	97
5.1	Error Handling Overview.	97
5.2	Fatal Error Recovery.	98
6	Application Development Guidelines	101
6.1	General Programming Tips.	101
6.2	Tips for Programming Drop and Insert Applications.	102
6.3	Using Global Call with DM3 Boards	103
6.3.1	Routing Configurations Overview	103
6.3.2	Working with Flexible Routing Configurations.	105
6.3.3	Working with Fixed Routing Configurations.	110
6.3.4	Handling Multiple Call Objects Per Channel in a Glare Condition.	115
6.4	Programming Tip When Using a DI/0408-LS-A Board.	115
7	Call Control	117
7.1	Call Analysis	117
7.2	Resource Routing.	118
7.3	Feature Transparency and Extension.	118
7.3.1	Feature Transparency and Extension Overview	118
7.3.2	Technology-Specific Feature Access	119
7.3.3	Technology-Specific User Information.	120
8	Alarm Handling	121
8.1	Alarm Handling Overview	121
8.1.1	Alarm Management System Components.	122
8.2	Operation and Configuration of GCAMS	123
8.2.1	Generation of Events for Blocking Alarms.	123
8.2.2	Generation of Alarm Events.	124
8.2.3	Configuration of Alarm Properties and Characteristics	125
8.2.4	Starting and Stopping Alarm Transmission	128
8.2.5	Retrieving Alarm Data	128
8.3	Sample Alarm Scenarios	130

8.3.1	Scenario 1: Application Notified of First and Last Blocking Alarm	130
8.3.2	Scenario 2: Default Behavior for Alarm Notification	132
8.3.3	Scenario 3: Alarm Transmission	133
9	Real Time Configuration Management	135
9.1	Real Time Configuration Manager Overview	135
9.2	RTCM Components	136
9.2.1	Customer Application Using Global Call RTCM	137
9.2.2	Global Call RTCM	137
9.2.3	RTCM Parameters	138
9.3	Using RTCM Parameters	138
9.3.1	Parameter Dependencies	139
9.3.2	Parameter Definitions	139
9.4	Getting and Setting Parameter Information	140
9.4.1	GC_PARM_BLK Data Structure	140
9.4.2	Control Parameters	141
9.5	Querying Configuration Data	143
9.6	Handling RTCM Errors	144
9.7	Configuration Procedure	144
9.8	Sample Scenarios Using the RTCM API Functions	145
9.8.1	Getting or Setting GCLib Configuration in Synchronous Mode	146
9.8.2	Getting or Setting CCLib Configuration in Synchronous Mode	147
9.8.3	Getting or Setting Protocol Configuration in Synchronous Mode	148
9.8.4	Getting or Setting Line Device Configuration in Synchronous Mode	150
9.8.5	Setting Line Device Configuration in Asynchronous Mode	151
10	Handling Service Requests	153
10.1	Service Request Overview	153
10.2	Service Request Components	154
10.3	Service Request Data	155
10.4	General Service Request Scenario	155
10.5	ISDN BRI-Specific Service Request Scenario	156
11	Building Applications	159
11.1	Compiling and Linking	159
11.1.1	Include Files	159
11.1.2	Required Libraries	159
11.1.3	Variables for Compiling and Linking Commands	160
11.1.4	Dynamically Loaded Libraries	160
11.1.5	Dynamically Loaded Protocol Modules	161
11.1.6	Compiling Libraries for Cross-Compatibility	161
12	Debugging	163
	Glossary	165
	Index	173

Figures

1	Global Call Architecture	16
2	Call Control Library States	18
3	Basic Asynchronous Inbound Call State Diagram	41
4	Basic Asynchronous Inbound Call Scenario	49
5	Incoming Call Scenario with Call Proceeding	50
6	Call Acknowledgement and Call Proceeding Done at the Application Layer	51
7	Call Proceeding Done by the Application Layer with Minimum Information Configured	52
8	Call Acknowledgement and Call Proceeding Done at Technology Call Control Layer	53
9	Call Acknowledgement Done by the Technology Call Control Layer and Call Proceeding Done by the Application	54
10	Basic Asynchronous Outbound Call State Diagram	56
11	Asynchronous Outbound Call Scenario	61
12	Asynchronous Outbound Call Scenario With Call Acknowledgement	61
13	Asynchronous Outbound Call Scenario With Overlap Sending	62
14	Asynchronous Call Tear-Down State Diagram	63
15	User Initiated Asynchronous Call Termination Scenario	65
16	Network Initiated Asynchronous Call Termination Scenario	65
17	Basic Synchronous Inbound Call State Diagram	67
18	Synchronous Inbound Call Scenario	74
19	Synchronous Inbound Call Scenario With Call Acknowledgement	75
20	Synchronous Inbound Call Scenario With Overlap Receiving	76
21	Outbound Synchronous Call Process	77
22	Outbound Call Scenario in Synchronous Mode	79
23	Synchronous Call Tear-Down State Diagram	81
24	User Initiated Call Termination Scenario in Synchronous Mode	83
25	Network Initiated Synchronous Call Termination Scenario	83
26	Call State Transitions for Hold and Retrieve	86
27	Supervised Transfer Call State Model	88
28	Unsupervised Transfer Call State Model	89
29	Cluster Configurations for Fixed and Flexible Routing	104
30	Architectural Diagram of Alarm Management Components	122
31	Notification of First and Last Blocking Alarm	131
32	Default Behavior for Alarm Notification	132
33	Alarm Transmission	133
34	Relationship of Customer Application, Global Call RTCM, and RTCM Parameters	136
35	Run Time Configuration Procedure	145
36	Getting or Setting GCLib Configuration in Synchronous Mode	146
37	Getting or Setting CCLib Configuration in Synchronous Mode	147
38	Getting or Setting Protocol Configuration in Synchronous Mode	148
39	Getting or Setting Line Device Configuration in Synchronous Mode	150
40	Setting Line Device Configuration in Asynchronous Mode	152
41	Service Request Architecture	154

42	Generic Service Request Operation	156
43	ISDN BRI Service Request Operation	157

Tables

1	Call Control Library States	18
2	Supported Target Types	21
3	Target Types and Target IDs	22
4	Target Object Availability	22
5	Obtaining Target IDs	23
6	Asynchronous Inbound Call State Transitions	42
7	Asynchronous Outbound Call State Transitions	57
8	Asynchronous Call Termination Call State Transitions	64
9	Synchronous Inbound Call State Transitions	68
10	Synchronous Outbound Call State Transitions	78
11	Synchronous Call Termination Call State Transitions	82
12	Unsolicited Events Requiring Signal Handlers	84
13	Global Call API Function Restrictions in a Fixed Routing Configuration	111
14	Handling Glare when Using DM3 Boards	115
15	Update Condition Flag and Global Call Process	143



About This Publication

The following topics provide information about this publication:

- [Purpose](#)
- [Intended Audience](#)
- [How to Use This Publication](#)
- [Related Information](#)

Purpose

This publication provides guidelines for building computer telephony applications that require call control functionality. Such applications include, but are not limited to, Call Routing, Enhanced Services, Unified Messaging, Voice Messaging, LAN Telephony Services, Computer Telephony Services, Switching, PBX, Interactive Voice Response, Help Desk and Work Flow applications.

This publication is a companion guide to the *Global Call API Library Reference* that provides details on the functions and parameters in the Global Call library.

Intended Audience

This publication is written for the following audience:

- Distributors
- System Integrators
- Toolkit Developers
- Independent Software Vendors (ISVs)
- Value Added Resellers (VARs)
- Original Equipment Manufacturers (OEMs)

How to Use This Publication

Refer to this publication after you have installed the hardware and the system software that includes the Global Call software.

This publication assumes that you are familiar with the Windows operating system and the C programming language.

The information in this guide is organized as follows:

- [Chapter 1, “Product Description”](#) provides an overview of the Global Call development software.
- [Chapter 2, “Programming Models”](#) describes the supported programming models in the Windows environment.
- [Chapter 3, “Call State Models”](#) describes the call state models used by Global Call.
- [Chapter 4, “Event Handling”](#) describes how to handle Global Call events.
- [Chapter 5, “Error Handling”](#) describes the error handling facilities provided by Global Call.
- [Chapter 6, “Application Development Guidelines”](#) provides guidelines when developing applications that use Global Call.
- [Chapter 7, “Call Control”](#) describes specific call control capabilities provided by Global Call.
- [Chapter 8, “Alarm Handling”](#) describes how Global Call can be used to handle alarms.
- [Chapter 9, “Real Time Configuration Management”](#) describes how Global Call can be used for real time configuration of parameters associated with the interface.
- [Chapter 10, “Handling Service Requests”](#) describes the generic service request facility provided by Global Call.
- [Chapter 11, “Building Applications”](#) provides guidelines for building applications that use the Global Call software.
- [Chapter 12, “Debugging”](#) describes how to debug applications that use the Global Call software.
- The [Glossary](#) provides a definition of terms used in this guide.

Related Information

This publication is part of a series of documents describing the Global Call software. The other documents include:

- *Global Call API Library Reference*
- *Global Call Analog Technology User's Guide*
- *Global Call E-1/T-1 CAS/R2 Technology User's Guide*
- *Global Call ISDN Technology User's Guide*
- *Global Call IP Technology User's Guide*
- *Global Call SS7 Technology User's Guide*
- <http://developer.intel.com/design/telecom/support/> (for technical support)
- <http://www.intel.com/network/csp/> (for product information)

This chapter describes the Global Call software. Topics include the following:

- Global Call Software Overview 13
- Global Call Feature Categories 14
- Global Call Architecture 15
- Call Control Libraries 17
- Global Call Object Identifiers 19

1.1 Global Call Software Overview

Global Call development software provides a common signaling interface for network-enabled applications, regardless of the signaling protocol needed to connect to the local telephone network. The signaling interface provided by Global Call software facilitates the exchange of call control messages between the telephone network and virtually any network-enabled application. Global Call software enables developers to create applications that can work with signaling systems worldwide, regardless of the network to which the applications are connected. Global Call software is ideal for high-density, network-enabled solutions, such as voice, data, and video applications, where the supported hardware and signaling technology can vary widely from country to country.

As an example, the signal acknowledgement or information flow required to establish a call may vary from country to country. Rather than requiring the application to handle low-level details, Global Call software offers a consistent, high-level interface to the user and handles each country's unique protocol requirements transparently to the application.

The Global Call software comprises three major components:

Global Call Application Programming Interface (API)

A common, extensible API providing network interfaces to higher levels of software.

Application developers use API function calls in their computer telephony applications. Intel® Dialogic® recommends the Global Call API as the preferred call control interface.

Call Control Libraries

A set of libraries that provide the interface between the Global Call API and the various network signaling protocols.

Global Call Protocols

Network signaling protocols, such as T-1 Robbed Bit, E-1 CAS, ISDN, Analog, QSIG, SS7, and IP H.323 and SIP can be invoked by the Global Call API to facilitate call control.

1.2 Global Call Feature Categories

The Global Call development software provides many features allowing for the development of flexible and robust applications. The features fall into one of two categories:

- [Call Control Features](#)
- [Operation, Administration and Maintenance Features](#)

1.2.1 Call Control Features

The Global Call development software provides the following call control features:

Basic Call Control

Includes basic call control features such as the ability to make a call, detect a call, answer a call, release a call, etc. The implementation of these capabilities is based on the basic call state model, which is a common model for all network technologies. The procedures for establishing and terminating calls differ for the asynchronous and synchronous call models, and are therefore discussed in separate sections of this document. See [Section 3.4, “Basic Call Control in Asynchronous Mode”](#), on page 39 and [Section 3.5, “Basic Call Control in Synchronous Mode”](#), on page 66 for more information on the basic call model.

Advanced Call Model

Defines the behavior for advanced features, such as hold and transfer. These capabilities are provided to support technologies and protocols that support such features, for example, Supervised Transfer. The implementation of these capabilities is based on a more advanced call state model. See [Section 3.6, “Advanced Call Control with Call Hold and Transfer”](#), on page 84 for more information.

Call Progress and Call Analysis

Provides the capabilities for handling pre-connect (Call Progress) information that reports the status of the call connection, such as, busy, no dial tone or no ringback, and post connect (Call Analysis) information that reports the destination party’s media type, for example, voice, answering machine, or fax modem. This information is determined by the detection of tones defined specifically for this purpose. See [Section 7.1, “Call Analysis”](#), on page 117 for more information.

Feature Transparency and Extension (FTE)

Provides the ability to extend the capabilities of Global Call to handle features that are specific to a particular technology so that those features are accessible via the Global Call interface. For example, for ISDN applications, Global Call supports supplementary services such as Overlap Send, Overlap Receive, Any Message, Any IE, and User-to-User messaging. See [Section 7.3, “Feature Transparency and Extension”](#), on page 118 for more information.

1.2.2 Operation, Administration and Maintenance Features

The Global Call development software provides the following features that facilitate the operation, administration and maintenance of Global Call applications:

Error Handling Functionality

When an error occurs, Global Call provides functions that enable an application to retrieve more information about the error. See [Chapter 5, “Error Handling”](#) for more information.

Event Handling Functionality

Provides the ability to handle and process events, including the ability to disable and enable events and to retrieve event information. See [Chapter 4, “Event Handling”](#) for more information.

Global Call Alarm Management System (GCAMS)

Provides the ability to manage alarms. GCAMS provides Global Call applications with the ability to receive extensive alarm information that can be used in conjunction with information from the Central Office (CO) to troubleshoot line problems. See [Chapter 8, “Alarm Handling”](#) for more information.

Real Time Configuration Management (RTCM)

Allows the modification of call control and protocol elements in real time, providing a single common user interface for configuration management. See [Chapter 9, “Real Time Configuration Management”](#) for more information.

Global Call Service Request (GCSR)

Enables an application to send a request for a service to a remote device. Examples of the types of services that this feature supports are device registration, channel setup, call setup, information requests, or other kinds of requests that need to be made between two devices across the network. See [Chapter 10, “Handling Service Requests”](#) for more information.

Library Information Functions

Enables an application to get information about the call control libraries being used. See the *Global Call API Library Reference* manual for more information about these functions.

Debugging Facilities

Global Call provides powerful debugging capabilities for troubleshooting protocol-related problems, including the ability to generate a detailed log file. See [Chapter 12, “Debugging”](#) for general debugging information and the appropriate *Global Call Technology User’s Guide* for information on the debugging facilities available when using Global Call with each technology.

1.3 Global Call Architecture


The Global Call development software architecture is based on the Intel® Dialogic architecture supporting both Springware and DM3 boards. The architecture is described in the following topics:

- [Global Call Architecture Overview](#)
- [Global Call API](#)

1.3.1 Global Call Architecture Overview

Figure 1 shows a system-level view of the Global Call architecture.

Figure 1. Global Call Architecture

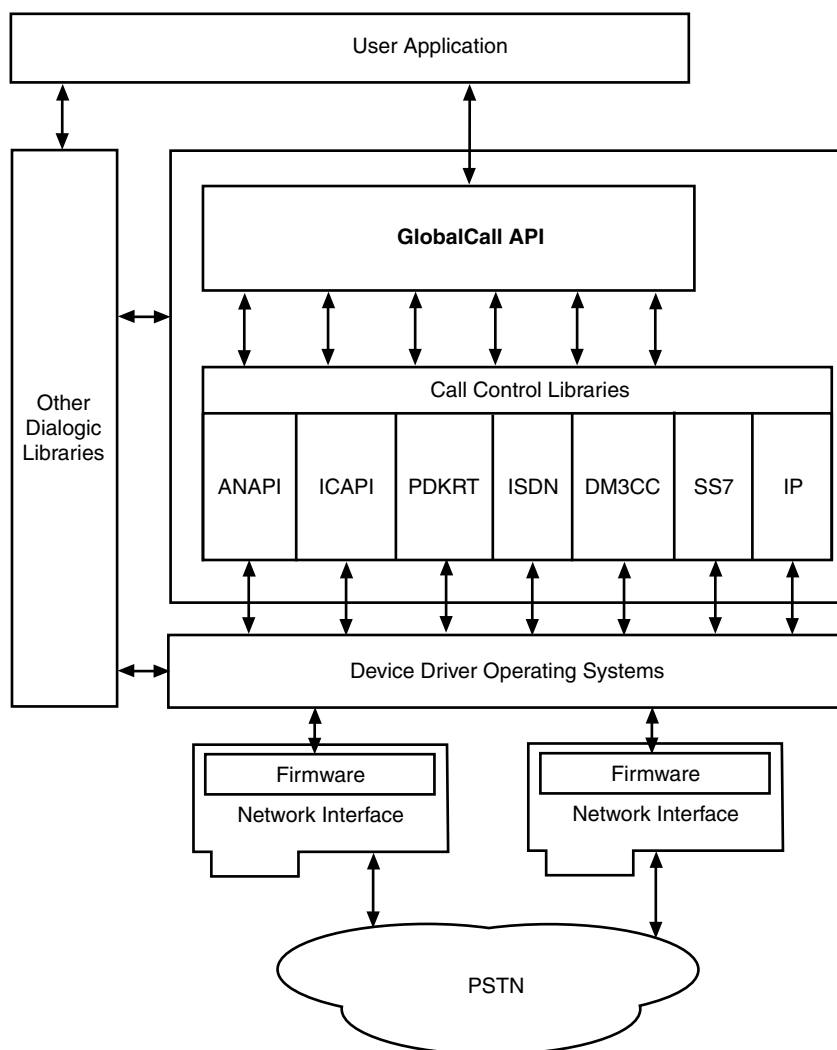

1.3.2 Global Call API

The Global Call API is a call control API. Similar to other Intel® Dialogic APIs (such as the Voice API), the Global Call API uses the Standard Runtime Library (SRL) API to deliver response events to its API commands. The Global Call API and other Intel® Dialogic APIs form a family of APIs that use the underlying services provided by the SRL API.

The Global Call API provides a collection of functions supporting call control operations as well as functions to support operation, administration and maintenance tasks. See the *Global Call API Library Reference* for detailed information about each function.

1.4 Call Control Libraries

Each supported network technology requires a call control library to provide the interface between the network and the Global Call library. The call control libraries currently supported by the Global Call API are as follows:

GC_CUSTOM1_LIB

The first of two call control library place holders for custom call control libraries. Any third-party Global Call compatible call control library can be used as a custom library. The Global Call library supports up to two custom libraries.

GC_CUSTOM2_LIB

The second of two call control library place holders for custom call control libraries. Any third-party Global Call compatible call control library can be used as a custom library. The Global Call library supports up to two custom libraries.

GC_DM3CC_LIB

The call control library that controls access to network interfaces on DM3 boards. This call control library supports Analog, E-1, T-1, ISDN and H.323 protocols.

GC_H3R_LIB

The call control library that controls access to IP network interfaces.

GC_ICAPI_LIB

The Interface Control Application Programming Interface (ICAPI) call control library that controls access to network interfaces that use T-1 robbed bit signaling or E-1 CAS and ICAPI protocols.

GC_IPM_LIB

The call control library that provides access to IP media resources.

GC_ISDN_LIB

The Integrated Services Digital Network (ISDN) call control library that controls network interfaces connected to an ISDN network.

GC_PDKRT_LIB

The Protocol Development Kit Run Time (PDKRT) call control library that controls access to network interfaces that use T-1 robbed bit signaling or E-1 CAS and PDK protocols. The PDKRT is a flexible engine and can be used to add features to protocols.

GC_SS7_LIB

The call control library that controls SS7 network interfaces on DataKinetics boards.

1.4.1 Starting Call Control Libraries

Call control libraries must be started before they can be used by the Global Call functions. The call control libraries are started when a **gc_Start()** function is issued. The **gc_Start()** function allows the selective starting of call control libraries where the application can specify if all the call control libraries are to be started or only specified libraries are to be started. The application can also start a custom call control library that is not supported by Global Call. See the *Global Call API Library Reference* for more information about the **gc_Start()** function.

1.4.2 Call Control Library States

The initial state of all the call control libraries is the Configured state. When a call control library is successfully started, the library will be in the Available state. If the call control library fails to start, the library will be in the Failed state as shown in the diagram below. If the call control library is not started, it will remain in the Configured state.

Figure 2. Call Control Library States

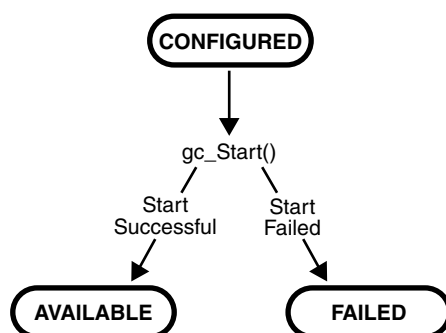


Table 1 describes the different states of a call control library.

Table 1. Call Control Library States

State	Description
Configured	A library that is supported by Global Call is considered a configured library.
Available	A library that has been successfully started is considered to be available for use by a Global Call application.
Failed	A library that has failed to start is considered to be unavailable for use by a Global Call application.

Each configured call control library is assigned an ID number by Global Call. Each library also has a name in an ASCII string format. Library functions perform tasks such as converting a call control library ID to an ASCII name and vice-versa, determining the configured libraries, determining the available libraries, determining the libraries started and the libraries that failed to start, and other library functions.

The following functions are the call control library information functions. All the library functions are synchronous, thus they return without a termination event.

- `gc_CCLibIDToName()`
- `gc_CCLibNameToID()`
- `gc_CCLibStatusEx()`
- `gc_GetVer()`

See the *Global Call API Library Reference* for detailed information about these functions.

1.5 Global Call Object Identifiers

The Global Call API is call-oriented, that is, each call initiated by the application or network is assigned a Call Reference Number (CRN) for call control and tracking purposes. Call handling is independent of the line device over which the call is routed. Each line device or device group is assigned a Line Device Identifier (LDID) that enables the application to address any resource or group of resources using a single device identifier. Certain features, such as Feature Transparency and Extension (FTE), Real Time Configuration Management (RTCM), and Global Call Service Request (GCSR), operate on a basic entity called a Global Call target object. Target objects are identified by a target type and a target ID.

The following topics provide more detailed information:

- [Line Device Identifier](#)
- [Call Reference Number](#)
- [Object Identifiers and Resource Sharing Across Processes](#)
- [Target Objects](#)

1.5.1 Line Device Identifier

A Line Device Identifier (LDID) is a unique logical number assigned to a specific resource (for example, a time slot) or a group of resources within a process by the Global Call library. Minimally, the LDID number will represent a network resource. For example, both a network resource and a voice resource are needed to process an R2 MFC dialing function. Using Global Call, a single LDID number is used by the application (or thread) to represent this combination of resources for call control.

An LDID number is assigned to represent a physical device(s) or logical device(s) that will handle a call, such as a network interface resource, when the **gc_OpenEx()** function is called. This identification number assignment remains valid until the **gc_Close()** function is called to close the line device.

When an event arrives, the application (or thread) can retrieve the LDID number associated with the event by using the linedev field of the METAEVENT structure. The LDID is retrieved using the **gc_GetMetaEvent()** function. The LDID is retrieved using the **gc_GetMetaEvent()** or the **gc_GetMetaEventEx()** function.

1.5.2 Call Reference Number

A Call Reference Number (CRN) is a means of identifying a call on a specific line device. A CRN is created by the Global Call library when a call is requested by the application, thread or network.

With the CRN approach, the application (or thread) can access and control the call without any reference to a specific physical port or line device. CRNs are assigned to both inbound and outbound calls:

Inbound calls

The CRN is assigned via the **gc_WaitCall()** function. For more information on **gc_WaitCall()**, see the *Global Call API Library Reference*.

Outbound calls

The CRN is assigned via either the **gc_MakeCall()** or **gc_SetUpTransfer()** function. For more information on these functions, see the *Global Call API Library Reference*.

This CRN has a single LDID associated with it, for example, the line device on which the call was made. However, a single line device may have multiple CRNs associated with it (that is, more than one call may exist on a given line). A line device can have a maximum of 20 CRNs associated with it. At any given instant, each CRN is a unique number within a process. After a call is terminated and the **gc_ReleaseCallEx()** function is called to release the resources used for the call, the CRN is no longer valid.

1.5.3 Object Identifiers and Resource Sharing Across Processes

The CRNs and LDIDs assigned by the Global Call API library can **not** be shared among multiple processes. These assigned CRNs and LDIDs remain valid only within the process invoked. That is, for call control purposes, you should not open the same physical device from more than one process, nor from multiple threads in a Windows environment. If either of these conditions exist, unpredictable results may occur.

1.5.4 Target Objects

A target object provides a way of identifying a particular entity that is maintained by a specific software module. In API function calls, the target object is specified by a pair of parameters, the **target_type** and **target_ID**:

target_type

Identifies the kind of software module and the entity that it maintains. For example, the target type **GCTGT_GCLIB_CHAN** represents the Global Call Library and a channel entity that it maintains.

target_ID

Identifies the specific target object, such as a line device ID (LDID), which is generated by Global Call at runtime.

Table 2 shows the combinations of physical or logical entities and software module entities that can make up a target type (**target_type**).

Table 2. Supported Target Types

Software Module	Entity			
	System	Network Interface	Channel	CRN
GCLib	S	S	S	S
CCLib	S	S	S	S
Protocol	SV	SV	SV	
Firmware		SV	SV	
S = Supported SV = Supported with Variances, see the appropriate <i>Global Call Technology User's Guide</i> for more information.				

The possible software modules include:

- GCLib
- CCLib
- Protocol
- Firmware

The possible entities include:

System

all physical boards

Network Interface

logical board or virtual board

Channel

time slot

CRN

call reference number

A target type (**target_type**) name is composed of the prefix, GCTGT, which stands for Global Call Target, a software module name, such as GCLIB, and an entity name, such as NETIF. For example, the target type GCTGT_GCLIB_NETIF, indicates that the desired target type is a network interface maintained by the Global Call library.

A target ID (**target_ID**) identifies the specific object that is located within the category defined by the target type (**target_type**). A target ID can be any of the following:

- line device ID (LDID)
- call reference number (CRN)
- Global Call library ID (GCGV_LIB)
- call control library ID (CCLib ID)
- protocol ID

The types and IDs for target objects are defined at the Global Call level. Table 3 shows the target types, as described in Table 2, with various target IDs to represent valid target objects.

Table 3. Target Types and Target IDs

Target Type	Target ID	Description
GCTGT_GCLIB_SYSTEM †	GCGV_LIB	Global Call library module target object.
GCTGT_CCLIB_SYSTEM †	CCLib ID	Call control library module target object.
GCTGT_PROTOCOL_SYSTEM †	Protocol ID	Protocol module target object.
GCTGT_GCLIB_NETIF	Global Call Line device ID	Network interface target object in Global Call Library module.
GCTGT_CCLIB_NETIF	Global Call Line device ID	Network interface target object in call control library module.
GCTGT_PROTOCOL_NETIF †	Global Call Line device ID	Network interface target object in protocol module.
GCTGT_FIRMWARE_NETIF	Global Call Line device ID	Network interface target object in firmware module.
GCTGT_GCLIB_CHAN	Global Call Line device ID	Channel target object in Global Call library module.
GCTGT_CCLIB_CHAN	Global Call Line device ID	Channel target object in call control library module.
GCTGT_PROTOCOL_CHAN	Global Call Line device ID	Channel of protocol module target object.
GCTGT_FIRMWARE_CHAN	Global Call Line device ID	Channel target object in firmware module.
GCTGT_GCLIB_CRN	Global Call CRN	CRN target object in Global Call library module.
GCTGT_CCLIB_CRN	Global Call CRN	CRN target object in call control library module.
† Target types that can only be used by functions issued in synchronous mode. If a function uses one of these target types in asynchronous mode, an error will be generated. The functions that can use these target types are gc_GetConfigData() , gc_QueryConfigData() , gc_SetConfigData() , gc_ReqService() , and gc_RespService() .		

Target Object Availability

Except for the GCTGT_GCLIB_SYSTEM target object, all target IDs are generated or assigned by the Global Call API when the target object is created (for physical targets) or loaded (for software targets). Table 4 shows when a target object becomes available and when it becomes unavailable, depending on the target type.

Table 4. Target Object Availability

Target Type	Target Object Available	Target Object Unavailable
GCTGT_GCLIB_SYSTEM GCTGT_CCLIB_SYSTEM	After gc_Start()	After gc_Stop()
GCTGT_PROTOCOL_SYSTEM	After first successful call to gc_OpenEx()	After call to gc_Close() using the protocol specified in target_type

Table 4. Target Object Availability

Target Type	Target Object Available	Target Object Unavailable
GCTGT_GCLIB_CRN GCTGT_CCLIB_CRN	After a call is created (gc_MakeCall() returns or GCEV_OFFERED is received)	After gc_ReleaseCallEx()
GCTGT_GCLIB_NETIF GCTGT_CCLIB_NETIF GCTGT_PROTOCOL_NETIF GCTGT_FIRMWARE_NETIF GCTGT_GCLIB_CHAN GCTGT_CCLIB_CHAN GCTGT_PROTOCOL_CHAN GCTGT_FIRMWARE_CHAN	After gc_OpenEx()	After gc_Close()

Retrieving Target IDs

Before the Global Call application can retrieve, update, or query the configuration data of a target object, it should obtain the target ID as shown in Table 5.

Table 5. Obtaining Target IDs

Target ID	Procedure for Obtaining Target ID
GCGV_LIB	After the call control library has been successfully started (that is, after the gc_Start() function is called), the target object's CCLib ID can be obtained by calling the gc_CCLibNameToID() function.
Protocol ID	After the first successful call to gc_OpenEx() , the protocol ID can be obtained by calling gc_QueryConfigData() in which: <ul style="list-style-type: none"> Query ID is GCQUERY_PROTOCOL_NAME_TO_ID source data is the protocol name destination data is the protocol ID
Global Call Line Device ID	After a line device is opened, the CCLib ID and protocol ID (if applicable) associated with this line device can be obtained by the gc_GetConfigData() function with the set ID and parameter ID as (GCSET_CCLIB_INFO, GCPARM_CCLIB_ID) and (GCSET_PROTOCOL, GCPARM_PROTOCOL_ID).
Global Call CRN	After a call target object is created, its target object ID (that is, the Global Call CRN) will be an output of the gc_MakeCall() function or provided by the metaevent associated with the GCEV_OFFERED event.

1.6 Global Call API versus DTI API

The standard R4 Digital Network Interface (DTI) API presents several functions, for example, time-division multiplexing (TDM) bus routing, network interface alarms, and time slot signaling control. The standard Global Call API presents a higher level of call control abstraction than the DTI API.

There are numerous digital interface telephony protocols in use worldwide. To name some, there are robbed-bit T-1, CAS E-1, ISDN, SS7, IP, and ATM. They all have one thing in common: they all try to solve the problem of connecting two or more people or machines anywhere in the world in direct conversation. Once the connection has been established, various data and voice streaming mechanisms can be used, such as digitized human voice, IP packets, or any other digital data.

Those protocols mentioned above all use a similar high level *layer 3* protocol. The end result is that one end can initiate a call (make call), be informed of an incoming call, or drop the call. The Global Call API presents the developer with a similar level of abstraction at the API level, hiding the internals of the specific protocol. That is, in order to make a call under a T-1 robbed-bit trunk, the protocol indicates that one must flip the A & B signaling bits, while to do the same under an ISDN PRI protocol, one must send a specific HDLC packet over the ISDN data channel. All of these complicated operations are hidden from the Global Call developer.

It is technically possible to design a Global Call application in such a way that the same application can run with an E-1 CAS trunk or an E-1 ISDN trunk without requiring changes.

Global Call is the API of choice for a number of reasons. The following are some of the most obvious:

- Global Call presents the right level of abstraction for rapid digital interface telephony application deployment.
- The existing DM3 architecture with the TSC resource does not provide access to low-level channel associated signaling (CAS, robbed-bit), hence most of the DTI API cannot be provided.
- Global Call also enables easier digital network interface to analog network interface portability, where analog network interface is supported.

One of the challenges of migrating an application that used Springware boards and the DTI API is the lack of support for much of the DTI API functionality when using DM3 boards. However, Global Call more than makes up for this shortcoming and simplifies the life of the CTI application developer by providing a level of abstraction that allows seamless support for any telephony interface, including T-1, E-1, ISDN or even analog. Once an application has been designed to use Global Call, minimum changes (if any) are required for the same application to run on various Intel® Dialogic hardware, including Springware and DM3 boards.

It is a good architectural decision to use Global Call because of the greater flexibility and portability provided by Global Call. This is true, not just for applications that use DM3 boards, but for any CTI application that uses Intel® Dialogic hardware.

1.7 Global Call API versus ISDN API

Many existing R4 applications today make use of the rich Dialogic ISDN API. This API has been evolving over time, and provides access to two levels of abstraction, known as *layer 3* and *layer 2*. When using DM3 boards, the ISDN API is not supported; however, much of its *layer 3* functionality can be accomplished today directly and at a similar level of abstraction using Global Call.

If you want to port an existing ISDN application that uses Springware boards to an ISDN application that uses DM3 boards, you must replace the ISDN functions with equivalent Global Call functions. Most of the ISDN API functions have the `cc_` function name prefix.

This chapter describes the programming models supported by Global Call. Topics include:

- [Programming Modes and Models](#) 27
- [Programming Modes](#) 27

2.1 Programming Modes and Models

The Global Call development software supports application development using both synchronous and asynchronous programming models. By usage, the asynchronous and synchronous models are often referred to as the asynchronous and synchronous **modes**.

See the *Standard Runtime Library API Programming Guide* for your operating system for detailed information about each programming model.

2.2 Programming Modes

The Global Call development software supports the following programming models for application development:

- [Synchronous Mode Programming](#)
- [Asynchronous Mode Programming](#)

2.2.1 Synchronous Mode Programming

Synchronous mode programming is characterized by functions that block thread execution until the function completes or a failed or error message is returned. The operating system can put individual device threads to sleep while allowing other device threads to continue their actions unabated. Thus, a synchronous function waits for a completion indication from the firmware or driver before returning control to the thread. Since further execution is blocked by a synchronous function, a separate thread is needed for each channel or task. When an Intel® Dialogic® function completes, the operating system wakes up the function's thread so that processing continues. A termination event is not generated for a synchronous function.

The Windows synchronous programming model is recommended for less complex applications where only a limited number of channels and calls will be handled and processor loading remains light. The synchronous model should be used only for simple and straight flow control applications with only one action per device occurring at any time.

A synchronous model application can handle multiple channels by structuring the application as a single-channel application and then creating a separate synchronous thread for each channel. For example, for a 60 channel application, the application creates 60 synchronous threads, one thread

to handle each of the 60 channels. The application would not need event-driven state machine processing because each Intel® Dialogic function runs uninterrupted to completion. Since this model calls functions synchronously, it is less complex than a corresponding asynchronous model application. However, since synchronous applications imply the creation of a thread or a process for each channel used, these applications tend to slow down the response of the system and to require a high level of system resources (that is, they increase processor loading) to handle each channel. This can limit maximum device density, providing limited scalability for growing systems.

When using the synchronous model, unsolicited events are not processed until the thread calls an Intel® Dialogic function such as **gc_GetMetaEvent()**, **dx_getevt()** or **dt_getevt()**. Unsolicited events can be handled as follows:

- By creating a separate asynchronous thread with event handlers, see [Section 2.2.2.2, “Asynchronous Model with Event Handlers”](#), on page 30. For example, the synchronous application would first create an asynchronous thread to handle all unsolicited events and then the application could create synchronous threads, one for each channel, to process the calls on each channel. The asynchronous thread uses the **sr_waitevt()** function to do a blocking call. When an unsolicited event occurs, the asynchronous unsolicited event-processing thread identifies the event to a device, services the event and notifies the synchronous thread controlling the device of the action taken. When the application runs an unsolicited events asynchronous thread, the event processing thread internal to the SRL should be disabled by setting the SR_MODELTYPE value of the **sr_setparm()** function’s **parmno** parameter to SR_STASync.
- By enabling event handler(s) within the application before creating the synchronous threads that handle each channel. For example, the synchronous application would first enable the unsolicited event handler(s) for the device(s) and event(s) and/or for any device, any event. Then the application would create synchronous threads, one for each channel, to process the calls on each channel. When an unsolicited event specified by an enabled event handler occurs, the SRL passes the unsolicited event information to the application. When the application uses the unsolicited event handler(s) approach, the event processing thread internal to the SRL must be enabled (default). The SRL event processing thread can also be enabled by setting the SR_MODELTYPE value of the **sr_setparm()** function’s **parmno** parameter to SR_MTASync.

2.2.2 Asynchronous Mode Programming

Programming in asynchronous mode in Windows is described in the following topics:

- [Asynchronous Model Overview](#)
- [Asynchronous Model with Event Handlers](#)
- [Asynchronous with Windows Callback Model](#)
- [Asynchronous with Win32 Synchronization Model](#)
- [Extended Asynchronous Programming Model](#)

2.2.2.1 Asynchronous Model Overview

Asynchronous mode programming is characterized by the calling thread performing other processing while a function executes. At completion, the application receives event notification from the SRL and then the thread continues processing the call on a particular channel.

A function called in the asynchronous mode returns control immediately after the request is passed to the device driver and allows thread processing to continue. A termination event is returned when the requested operation completes, thus allowing the Intel® Dialogic operation (state machine processing) to continue.

Caution: In general, when a function is called in asynchronous mode, and an associated termination event exists, the **gc_Close()** function should not be called until the termination event has been received. In order to disable **gc_WaitCall()**, **gc_ResetLineDev()** should be called. If this is not done, there are potential race conditions under which the application may crash with a segmentation fault.

Functions may be initiated asynchronously from a single thread and/or the completion (termination) event can be picked up by the same or a different thread that calls the **sr_waitevt()** and **gc_GetMetaEvent()** functions. When these functions return with an event, the event information is stored in the METAEVENT data structure. The event information retrieved determines the exact event that occurred and is valid until the **sr_waitevt()** and **gc_GetMetaEvent()** functions are called again.

For Windows environments, the asynchronous models provided for application development also include:

- combined synchronous and asynchronous programming; see [Section 2.2.1, “Synchronous Mode Programming”](#), on page 27
- asynchronous model with event handlers
- asynchronous with Windows callback
- asynchronous with Win32 synchronization
- extended asynchronous programming

The asynchronous programming models are recommended for more complex applications that require coordinating multiple tasks. Asynchronous model applications typically run faster than synchronous models and require lower levels of system resources. Asynchronous models reduce processor loading because of the reduced number of threads inherent in asynchronous models and the elimination of scheduling overhead. Asynchronous models use processor resources more efficiently because multiple channels are handled in a single thread or in a few threads. See [Section 6.1, “General Programming Tips”](#), on page 101 for details. Of the asynchronous models, the asynchronous with SRL callback model and the asynchronous with Windows callback model provide the tightest integration with the Windows message/event mechanism. Asynchronous model applications are typically more complex than corresponding synchronous model applications due to a higher level of resource management (that is, the number of channels managed by a thread and the tracking of completion events) and the development of a state machine.

After the application issues an asynchronous function, the application uses the **sr_waitevt()** function to wait for events on Intel® Dialogic devices. All event coding can be accomplished using switch statements in the main thread. When an event is available, event information may be

retrieved using the **gc_GetMetaEvent()** function. Retrieved event information is valid until the **sr_waitevt()** function is called again. The asynchronous model does not use event handlers to process events.

In this model, the SRL handler thread must be initiated by the application by setting the **SR_MODELTYPE** value to **SR_STASYNC**.

2.2.2.2 Asynchronous Model with Event Handlers

The asynchronous with event handlers model uses the **sr_enbhdlr()** function to automatically create the SRL handler thread. The application does not need to call the **sr_waitevt()** function since the thread created by the **sr_enbhdlr()** already calls the **sr_waitevt()** function to get events. Each call to the **sr_enbhdlr()** function allows the Intel® Dialogic events to be serviced when the operating system schedules the SRL handler thread for execution.

Note: The **SR_MODELTYPE** value must **not** be set to **SR_STASYNC** because the SRL handler thread must be created by the **sr_enbhdlr()** call. The event handler must **not** call the **sr_waitevt()** function or any synchronous Intel® Dialogic function.

Individual handlers can be written to handle events for each channel. The SRL handler thread can be used when porting applications developed for other operating systems.

2.2.2.3 Asynchronous with Windows Callback Model

The asynchronous with Windows callback model allows an asynchronous application to receive SRL event notification through the standard Windows message handling scheme. This model is used to achieve the tightest possible integration with the Windows messaging scheme. Using this model, the entire Intel® Dialogic portion of the application could be run on a single thread. This model calls the **sr_NotifyEvt()** function once to define a user-specified application window handle and a user-specified message type. When an event is detected, a message is sent to the application window. The application responds by calling the **sr_waitevt()** function with a 0 **timeout** value. For Global Call events and optionally for non-Global Call events, the application **must** then call the **gc_GetMetaEvent()** function before servicing the event.

In this model, the SRL event handler thread must be initiated by the application by setting the **SR_MODELTYPE** value to **SR_STASYNC**. For detailed information on this programming model, see the *Standard Runtime Library (SRL) Programming Guide* for your operating system.

2.2.2.4 Asynchronous with Win32 Synchronization Model

The asynchronous with Win32 synchronization model allows an asynchronous application to receive SRL event notification through standard Windows synchronization mechanisms. This model uses one thread to run all Intel® Dialogic devices and thus requires a lower level of system resources than the synchronous model. This model allows for greater scalability in growing systems. For detailed information on this programming model, see the *Standard Runtime Library (SRL) Programming Guide* for your operating system.

2.2.2.5 Extended Asynchronous Programming Model

The extended asynchronous programming model is basically the same as the asynchronous model except that the application uses multiple asynchronous threads, each of which controls multiple devices. In this model, each thread has its own specific state machine for the devices that it controls. Thus, a single thread can look for separate events for more than one group of channels. This model may be useful, for example, when you have one group of devices that provides fax services and another group that provides interactive voice response (IVR) services, while both groups share the same process space and database resources. The extended asynchronous model can be used when an application needs to wait for events from more than one group of devices and requires a state machine.

Because the extended asynchronous model uses only a few threads for all Intel® Dialogic devices, it requires a lower level of system resources than the synchronous model. This model also enables using only a few threads to run the entire Intel® Dialogic portion of the application.

Whereas default asynchronous programming uses the **sr_waitevt()** function to wait for events specific to one device, extended asynchronous programming uses the **sr_waitevtEx()** function to wait for events specific to a number of devices (channels).

Note: Do not use the **sr_waitevtEx()** function in combination with either the **sr_waitevt()** function or event handlers.

This model can run an entire application using only a few threads. When an event is available, the **gc_GetMetaEventEx()** function must be used to retrieve event-specific information. The values returned are valid until the **sr_waitevtEx()** function is called again. Event commands can be executed from the main thread through switch statements; the events are processed immediately.

The extended asynchronous model calls the **sr_waitevtEx()** function for a group of devices (channels) and polls for (waits for) events specific to that group of devices. In this model, the SRL event handler thread is **not** created (the **SR_MODELTYPE** value is set to **SR_STASYNC**) and the **sr_enbhdr()** function in **not** used.

In the extended asynchronous model, functions are initiated asynchronously from different threads. A thread waits for events using the **sr_waitevtEx()** function. The event information can be retrieved using the **gc_GetMetaEventEx()** function. When this function returns, the event information is stored in the **METAEVENT** data structure.

Caution: When calling the **gc_GetMetaEventEx()** function from multiple threads, ensure that your application uses unique thread-related **METAEVENT** data structures (thread local variables or local variables), or ensure that the **METAEVENT** data structure is not overwritten until all processing of the current event has completed.

The event information retrieved determines the exact event that occurred and is valid until the **sr_waitevtEx()** function returns with another event.

This chapter describes the call state models provided by Global Call. Topics include the following:

- [Call State Model Overview](#) 33
- [Basic Call Model](#) 33
- [Basic Call Model Configuration Options](#) 36
- [Basic Call Control in Asynchronous Mode](#) 39
- [Basic Call Control in Synchronous Mode](#) 66
- [Advanced Call Control with Call Hold and Transfer](#) 84

3.1 Call State Model Overview

Global Call maintains a generic call model from which technology-specific call models can be derived. Some technologies support only a subset of the complete call model. The call establishment and termination procedures are based on this call model. The following sections describe the call states associated with the basic call model and configuration options.

3.2 Basic Call Model

Each call received or generated by Global Call is processed through a series of states, where each state represents the completion of certain tasks or the current status of the call. Some states in the basic call model are optional and can be enabled or disabled selectively. Only the optional states can be enabled or disabled. Every technology or call control library has a default call state model consisting of all the states it can possibly support from the basic call model. If a state is disabled, all corresponding events are disabled. If a state is enabled, all corresponding events are enabled.

The call states change in accordance with the sequence of functions called by the application and the events that originate in the network and system hardware. The current state of a call can be changed by:

- Function call returns
- Termination events (indications of function completion)
- Unsolicited events

The states of the basic call model are described in the following sections:

- [Basic Call States at the Inbound Interface](#)
- [Basic Call States at the Outbound Interface](#)
- [Basic Call States for Call Termination](#)

3.2.1 Basic Call States at the Inbound Interface

The basic inbound call states are as follows:

Null state (GCST_NULL)

This state indicates that no call is assigned to the channel (time slot or line). This is the initial state of a channel when it is first opened. This state is also reached when a call is released or after the channel is reset. A channel in this state is available for inbound calls after being initialized to receive incoming calls.

Call Detected (GCST_DETECTED)

An incoming call has been received but not yet offered to the application. In this state, the call is being processed, which typically involves waiting for more information or allocating a resource. Although the call is not yet offered to the application, this state is for informational purposes to reduce glare conditions since the application is aware of the presence of a call on the channel.

Call Offered (GCST_OFFERED)

This state exists for an incoming call when the user application has received a call establishment request but has not yet responded. The newly arrived inbound call is offered to the user application to be accepted, answered, rejected, etc. Call information is typically available at this time to be examined so that the application can determine the appropriate action to take with regards to the call.

Get More Information (GCST_GETMOREINFO)

This state exists for an incoming call when the network has received an acknowledgement of the call establishment request, which permits the network to send additional call information (if any) in the overlap mode. The application is waiting for more information, typically called party number digits. (This state is optional and may not be supported in all technologies. See the appropriate *Global Call Technology User's Guide* for information.)

Call Routing (GCST_CALLROUTING)

This state exists for an incoming call when the user has sent an acknowledgement that all call information necessary to effect call establishment has been received. The acknowledgement can be sent from the Offered or the GetMoreInfo state if all the information has been received. This transition typically involves the sending of Call Routing tones or technology specific messages; for example, in the case of ISDN, a CALL_PROCEEDING message is sent. The application can now accept or answer the call. (This state is optional and may not be supported in all technologies. See the appropriate *Global Call Technology User's Guide* for information.)

Call Accept (GCST_ACCEPT)

This state indicates that the incoming call was offered and accepted by the application. The user on the inbound side has indicated to the calling party that the destination user is alerting or ringing but has not yet answered.

Call Connected (GCST_CONNECTED)

This is a common state that exists for an incoming call when the user has answered the call.

3.2.2 Basic Call States at the Outbound Interface

The basic outbound call states are as follows:

Null state (GCST_NULL)

This state indicates that no call is assigned to the channel (time slot or line). This is the initial state of a channel when it is first opened. This state is also reached when a call is released or after the channel is reset. The channel in this state is available for making outbound calls.

Call Dialing (GCST_DIALING)

This state exists for an outgoing call when an outbound call request is made. The call signaling or message is in the process of being prepared for transfer or being transferred across the telephony network (overlap sending or partial dialing). In response, the remote side may request more information, acknowledge the call, accept the call or answer the call.

Send More Information (GCST_SENDMOREINFO)

This state exists for an outgoing call when the user has received an acknowledgement of the call establishment request that permits or requests the user to send additional call information to the network in overlap mode. The information, typically digits, is in the process of being prepared for transfer or being transferred across the telephony network (overlap sending or partial dialing). (This state is optional and may not be supported in all technologies. See the appropriate *Global Call Technology User's Guide* for information.)

Call Proceeding (GCST_PROCEEDING)

This state exists for an outgoing call when the user has received an acknowledgement that all call information necessary to effect call establishment has been received and the call is proceeding. The remote side can now accept or answer the call. (This state is optional and may not be supported in all technologies. See the appropriate *Global Call Technology User's Guide* for information.)

Call Alerting (GCST_ALERTING)

This state exists for an outgoing call when the calling user has received an indication that remote user alerting has been initiated, typically ringing. The outbound call has been delivered to the remote party, which has not yet answered the call.

Call Connected (GCST_CONNECTED)

This is a common state that exists for an outgoing call when the user has received an indication that the remote user has answered the call. The calling and called parties are connected and the call is therefore active on the related call channel.

3.2.3 Basic Call States for Call Termination

The basic call termination states are as follows:

Call Disconnected (GCST_DISCONNECTED)

This state indicates that the remote party has disconnected the call. The remote party can disconnect the call prior to establishing a connection, that is, while the call setup is in progress. Thus, the call does not have to be in the connected state before it can be disconnected. The user must respond by dropping the call and releasing the internal resources allocated for the call.

Call Idle (GCST_IDLE)

This state indicates that the local user has dropped the call. This may be a termination initiated by the local user or a response to the remote side disconnecting the call. While the call no

longer exists, internal system resources committed to servicing the call are still present. The user must release these resources, as they are no longer required.

3.3 Basic Call Model Configuration Options

Depending on the specific technology, the following options are available for configuring the technology call control layer or the application:

Call State

If a state is disabled, the corresponding call state event is also disabled.

Call State Event

Call state transition events are masked so that the events are not generated.

Call Acknowledgement

An acknowledgement is sent to indicate to the remote side that the call has been received but more information is required to proceed with the call.

Call Proceeding

Call proceeding information is sent to the remote side when an incoming call is received and all the information required to proceed with the call is available.

Minimum Information

A minimum amount of destination address information, such as DNIS, is collected before the call is offered to the application.

3.3.1 Call State Configuration

Some states in the basic call model are optional and can be enabled or disabled selectively. Every technology or call control library has a default call state model consisting of all the states it can possibly support from the basic call model. If a state is disabled, the corresponding call state event will also be disabled. If a state is enabled, the event mask setting still determines which call state events are sent to the application.

This configuration can be done by issuing the **gc_SetConfigData()** function with a **target_type** of GCTGT_GCLIB_CHAN and a **target_ID** of a line device, and passing the appropriate set ID and parm IDs. The set ID used in this context is GCSET_CALLSTATE_MSK and the relevant parm IDs are:

GCACT_ADDMSK

Enable the call states specified in the value in addition to other states already enabled.

GCACT_SUBMSK

Disable all the call states specified in the value.

GCACT_SETMSK

Enable the call states specified in the value and disable other optional states that are already enabled.

The GCACT_ADDMSK, GCACT_SUBMSK and GCACT_SETMSK parm IDs can be assigned one of the following values (of type GC_VALUE_LONG), or an ORed combination of the values:

- GCMSK_ALERTING_STATE
- GCMSK_CALLROUTING_STATE
- GCMSK_DETECTED_STATE
- GCMSK_GETMOREINFO_STATE
- GCMSK_PROCEEDING_STATE
- GCMSK_SENDMOREINFO_STATE

See the *Global Call API Library Reference* for more information on the **gc_SetConfigData()** function.

3.3.2 Call State Event Configuration

Some call state transition events can be masked so that the events are not generated. Although an event may be masked, the corresponding call state transition can still take place. This configuration can be done by issuing the **gc_SetConfigData()** function with a **target_type** of GCTGT_GCLIB_CHAN and a **target_ID** of a line device, and passing the appropriate set ID and parm IDs. The set ID used in this context is GCSET_CALLEVENT_MSK and the relevant parm IDs are:

GCACT_ADDMSK

Enable the notification of events specified in the value in addition to previously enabled events.

GCACT_SUBMSK

Disable notification of the events specified in the value.

GCACT_SETMSK

Enable the notification of events specified in the value and disables notification of any event not specified.

The GCACT_ADDMSK, GCACT_SUBMSK and GCACT_SETMSK parm IDs can be assigned one of the following values (of type GC_VALUE_LONG), or an ORed combination of the values:

- GCMSK_ALERTING
- GCMSK_DETECTED
- GCMSK_DIALING
- GCMSK_PROCEEDING
- GCMSK_REQMOREINFO

Note: Using the **gc_SetConfigData()** function with a **target_ID** of a board device to mask events for all devices associated with a board is **not** supported. Call state events can be masked on a per line device basis only.

See the *Global Call API Library Reference* for more information on the **gc_SetConfigData()** function.

3.3.3 Call Acknowledgement Configuration

When an incoming call is received, an acknowledgement is typically sent to the remote side to indicate that the call was received. In some technologies, if the incoming call does not have sufficient information, this acknowledgement also indicates to the remote side that more information is required to proceed with the call (see [Section 3.4.1.8, “Overlap Receiving”](#), on page 46 for more information). Either the technology call control layer or the application can be configured to send the acknowledgement. This configuration can be set by the application issuing the **gc_SetConfigData()** function. The set ID used in this context is GCSET_CALL_CONFIG and the relevant parm ID is:

GCPARM_CALLACK

Specify whether call acknowledgement is provided by the application or the technology call control layer.

The GCPARM_CALLACK parm ID can be assigned one of the following values (of type GC_VALUE_INT):

- GCCONTROL_APP (application controlled)
- GCCONTROL_TCCL (technology call control layer controlled)

See the *Global Call API Library Reference* for more information on the **gc_SetConfigData()** function.

3.3.4 Call Proceeding Configuration

When an incoming call is received and all the information required to proceed with the call is available, an indication that the call is proceeding is usually sent to the remote side for informational purposes. Either the technology call control layer or the application can be configured to send a call proceeding indication to the remote side. This can be done by issuing the **gc_SetConfigData()** function. The set ID used in this context is GCSET_CALL_CONFIG and the relevant parm ID is:

GCPARM_CALLPROC

Specify whether call proceeding indication is provided by the application or the technology call control layer.

The GCPARM_CALLPROC parm ID can be assigned one of the following values (of type GC_VALUE_INT):

- GCCONTROL_APP (application controlled)
- GCCONTROL_TCCL (technology call control layer controlled)

See the *Global Call API Library Reference* for more information on the **gc_SetConfigData()** function.

3.3.5 Minimum Destination Information Configuration

In some technologies, the technology call control layer can be configured to collect a minimum amount of destination information before the call is offered to the application. This configuration is

set by issuing the `gc_SetConfigData()` function to pass the `GCPARM_MIN_INFO` parameter, which is set to the minimum amount of information required. After the minimum amount of information is received, an acknowledgement is sent to the remote side to indicate that the call was received but more information is required to proceed with the call. Either the technology call control layer or the application can send this acknowledgement. See [Section 3.3.3, “Call Acknowledgement Configuration”](#), on page 38 for more details.

The set ID used in this context is `GCSET_CALL_CONFIG` and the relevant parm ID is:

`GCPARM_MIN_INFO`

Send an acknowledgement to the remote side when the minimum amount of information has been received. The value of this parameter is of type `GC_VALUE_INT` (integer).

See the *Global Call API Library Reference* for more information on the `gc_SetConfigData()` function.

3.3.6 Maximum Destination Information Configuration

In some technologies, the technology call control layer can be configured to collect a maximum amount of destination information after which no more information is accepted or stored. Any additional incoming information will be ignored. This configuration is set by issuing the `gc_SetConfigData()` function to pass the `GCPARM_MAX_INFO` parameter, which is set to the maximum amount of information required. After the maximum amount of information is received, a call proceeding indication is sent to the remote side to indicate that the call was received and all address information required has been received. Either the technology call control layer or the application can send this indication. See [Section 3.3.4, “Call Proceeding Configuration”](#), on page 38 for more details.

The set ID used in this context is `GCSET_CALL_CONFIG` and the relevant parm ID is:

`GCPARM_MAX_INFO`

Set a maximum amount of information after which no more information is accepted or stored. The value of this parameter is of type `GC_VALUE_INT` (integer).

See the *Global Call API Library Reference* for more information on the `gc_SetConfigData()` function.

3.4 Basic Call Control in Asynchronous Mode

This section describes and illustrates the basic call model and state transitions for call control in asynchronous mode. This section also describes the process for call establishment for both inbound and outbound calls and call termination in the asynchronous mode.

The procedures for establishing and terminating calls in the asynchronous mode are described in the following sections:

- [Inbound Calls in Asynchronous Mode](#)
- [Outbound Calls in Asynchronous Mode](#)

- [Call Termination in Asynchronous Mode](#)

Note: The Advanced Call Model includes call states associated with holding, retrieving and transferring calls. See [Section 3.6, “Advanced Call Control with Call Hold and Transfer”](#), on page 84 for more information.

Caution: In general, when a function is called in asynchronous mode, and an associated termination event exists, the `gc_Close()` function should not be called until the termination event has been received. Otherwise, the behavior is undefined.

3.4.1 Inbound Calls in Asynchronous Mode

This section describes how calls are established and shows call scenarios for asynchronous inbound calls. The following topics describe the processing of inbound calls in asynchronous mode:

- [Inbound Calls in Asynchronous Mode Overview](#)
- [Channel Initialization](#)
- [Call Detection](#)
- [Call Offered](#)
- [Call Routing](#)
- [Call Acceptance](#)
- [Call Establishment](#)
- [Overlap Receiving](#)
- [Call Failure](#)
- [Abandoned Calls](#)
- [Inbound Call Scenarios in Asynchronous Mode](#)

3.4.1.1 Inbound Calls in Asynchronous Mode Overview

Figure 3 illustrates a Basic Inbound Call Model, which shows the call states associated with establishing a call in asynchronous mode. All calls start from a Null state. The call establishment process for inbound calls is shown in Figure 3.

See [Table 6, “Asynchronous Inbound Call State Transitions”](#), on page 42 for a summary of the call state transitions.

Figure 3. Basic Asynchronous Inbound Call State Diagram

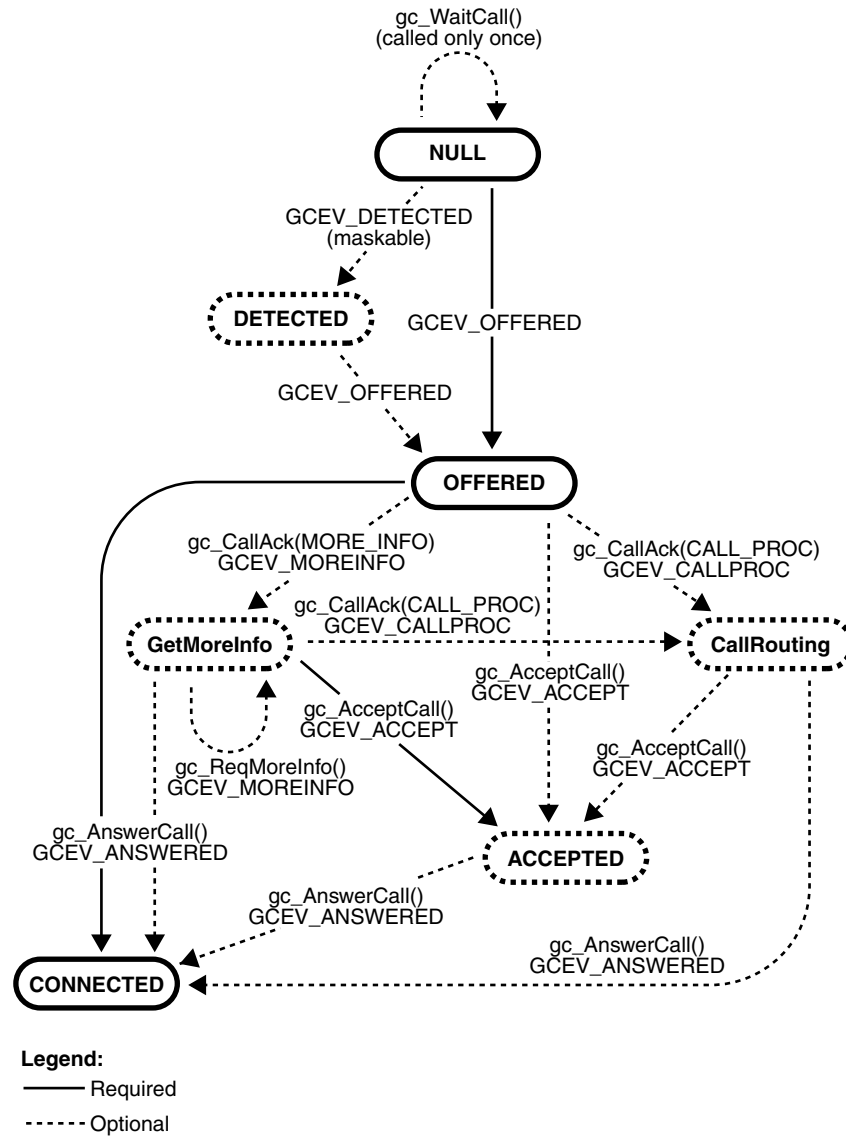


Table 6. Asynchronous Inbound Call State Transitions

State Description	Previous/Next State	Valid Call State Transition Functions	Call Transition Events
Accepted (GCST_ACCEPTED) Maskable	Previous: Offered, GetMoreInfo, CallRouting Next: GCEV_ANSWERED -> Connected state GCEV_DISCONNECTED -> Disconnected state GCEV_DROP CALL -> Idle state	gc_AnswerCall(), gc_DropCall()	GCEV_DISCONNECTED, GCEV_DROPCALL or GCEV_ANSWERED
Call Routing (GCST_CALLROUTING) Maskable	Previous: Offered, GetMoreInfo Next: GCEV_ANSWERED -> Connected state GCEV_ACCEPT -> Accepted state GCEV_DISCONNECTED -> Disconnected state GCEV_DROPCALL -> Idle state	gc_AnswerCall(), gc_AcceptCall(), gc_DropCall()	GCEV_DISCONNECTED, GCEV_DROPCALL, GCEV_ACCEPT or GCEV_ANSWERED
Connected (GCST_CONNECTED) Not Maskable	Previous: Accept, Offered, GetMoreInfo, CallRouting, Dialing, SendMoreInfo, Proceeding, Alerting Next: GCEV_DISCONNECTED -> Disconnected state GCEV_DROPCALL -> Idle state	gc_DropCall()	GCEV_DISCONNECTED GCEV_DROPCALL
Detected (GCST_DETECTED) Maskable	Previous: Null Next: GCEV_OFFERED -> Offered state GCEV_DISCONNECTED -> Disconnected state GCEV_DROPCALL -> Idle state	gc_DropCall()	GCEV_DISCONNECTED, GCEV_DROPCALL, GCEV_OFFERED,

Table 6. Asynchronous Inbound Call State Transitions

State Description	Previous/Next State	Valid Call State Transition Functions	Call Transition Events
GetMoreInfo (GCST_GETMOREINFO) Maskable	Previous: Offered Next: GCEV_ANSWERED -> Connected state GCEV_MOREINFO -> GetMoreInfo state GCEV_ACCEPT -> Accepted state GCEV_CALLPROC -> CallRouting state GCEV_DISCONNECTED -> Disconnected state GCEV_DROPCALL -> Idle state	gc_ReqMoreInfo() , gc_CallAck() , gc_AnswerCall() , gc_AcceptCall() , gc_DropCall()	GCEV_DISCONNECTED, GCEV_DROPCALL, GCEV_ACCEPT, GCEV_ANSWERED, GCEV_MOREINFO or GCEV_CALLPROC
Null (GCST_NULL) Not Maskable	Previous: Idle Next: gc_WaitCall() -> Null state gc_ResetLineDev() -> Null state GCEV_OFFERED -> Offered state GCEV_DETECTED -> Detected state	gc_WaitCall()	GCEV_DETECTED, GCEV_OFFERED
Offered (GCST_OFFERED) Not Maskable	Previous: Null, Detected Next: GCEV_ANSWERED -> Connected state GCEV_ACCEPT -> Accepted state GCEV_CALLPROC -> CallRouting state GCEV_MOREINFO -> GetMoreInfo state GCEV_DISCONNECTED -> Disconnected state GCEV_DROPCALL -> Idle state	gc_CallAck() , gc_AnswerCall() , gc_AcceptCall() , gc_DropCall()	GCEV_DISCONNECTED, GCEV_DROPCALL, GCEV_ACCEPT, GCEV_ANSWERED, GCEV_MOREINFO or GCEV_CALLPROC

The following sections describe the asynchronous inbound call processes.

3.4.1.2 Channel Initialization

To establish calls, the following conditions must be met:

- The condition of the line device must be unblocked. When a channel is initially opened, the initial condition of a line device is blocked. A “blocking” condition on a line device is indicated by the reception of a GCEV_BLOCKED event and an “unblocking” condition on a

line device is indicated by the reception of a GCEV_UNBLOCKED event. The GCEV_BLOCKED and GCEV_UNBLOCKED events are sent as unsolicited events to the application in response to blocking alarms. GCEV_BLOCKED and GCEV_UNBLOCKED events are related to layer 1 alarms, as well as to channel states (service status in T-1 ISDN, bit states in CAS). GCEV_BLOCKED and GCEV_UNBLOCKED are used as what might be termed *flow-control events* within the application. For more information on blocking alarms and the GCEV_BLOCKED and GCEV_UNBLOCKED events, see [Section 4.3, “Blocked and Unblocked Event Handling”](#), on page 92. When the condition of the line device is unblocked, the line device is ready for establishing calls.

- The call state of the channel must be in the Null state. This is the initial call state of a line device when it is first opened. This state is also reached when a call is released or after the channel is reset.

If the above conditions are met, the application or thread must issue a **gc_WaitCall()** function in the Null state to indicate readiness to accept an inbound call request on the specified line device. In the asynchronous mode, the **gc_WaitCall()** function must be called only once after the line device is opened using the **gc_OpenEx()** function. However, if the **gc_ResetLineDev()** function was issued, **gc_WaitCall()** must be reissued. In asynchronous mode, it is not necessary to issue **gc_WaitCall()** again after a call is released.

Note: After **gc_WaitCall()** is issued to wait for incoming calls on a line device, it is possible to use **gc_makeCall()** to make an outbound calls on that line device.

3.4.1.3 Call Detection

The inbound call from the network is received on the line device specified in the **gc_WaitCall()** function, but the call has not been offered to the application. The technology call control layer typically sends an acknowledgement to the remote side. In some configurations, this acknowledgement can also be sent by the application when the call is offered. At this stage, the call is being processed, which typically involves allocating resources or waiting for more information. The GCEV_DETECTED event is generated, if enabled. If the GCEV_DETECTED event is generated, a new CRN is assigned to the incoming call. This event is for informational purposes to reduce glare conditions as the application is now aware of the presence of a call on the channel.

- Notes:**
1. For applications that use PDK protocols, if the application enables the generation of the GCEV_DETECTED event and a call disconnects while in the Detected state, a GCEV_DISCONNECTED event is received. If the application did *not* enable the generation of the GCEV_DETECTED event and a call disconnects while it is in the Detected state (that is, before the call enters the Offered state), the application receives a GCEV_OFFERED event with a result value of GCRV_CALLABANDONED, then a GCEV_DISCONNECTED event.
 2. When developing applications that use DM3 boards, the GCEV_DETECTED event is not supported. A GCEV_DISCONNECTED event is only received if the host application already received the GCEV_OFFERED event before the remote side disconnects.

3.4.1.4 Call Offered

When an incoming call is received in en-bloc mode, where all the information required is available, the call is offered to the application by generating an unsolicited GCEV_OFFERED event (equivalent to a “ring detected” notification). This GCEV_OFFERED event causes the call to change to the Offered state. In the Offered state, a CRN is assigned as a means of identifying the

call on a specific line device. If a GCEV_DETECTED event was generated before the GCEV_OFFERED event, the same CRN is assigned as the one assigned when the GCEV_DETECTED event was generated.

If the incoming call does not have sufficient information, the call is offered to the application when all the required information is received. If the technology is configured to accept minimum information, the call is offered to the application when the specified minimum amount of information is received. In this case, the application must request additional information if required. See [Section 3.4.1.8, “Overlap Receiving”](#), on page 46 for more information.

A call proceeding indication can be sent by the technology call control layer, or by the application by issuing the **gc_CallAck(GCACK_SERVICE_PROC)** function. Otherwise the application can accept or answer the call by issuing the **gc_AcceptCall()** or **gc_AnswerCall()** functions, respectively.

- Notes:**
1. For applications that use PDK protocols, if the application enables the generation of the GCEV_DETECTED event and a call disconnects while in the Detected state, a GCEV_DISCONNECTED event is received. If the application did *not* enable the generation of the GCEV_DETECTED event and a call disconnects while it is in the Detected state (that is, before the call enters the Offered state), the application receives a GCEV_OFFERED event with a result value of GCRV_CALLABANDONED, then a GCEV_DISCONNECTED event.
 2. When developing applications that use DM3 boards, the GCEV_DETECTED event is not supported. A GCEV_DISCONNECTED event is only received if the host application already received the GCEV_OFFERED event before the remote side disconnects.

3.4.1.5 Call Routing

After the call has been offered, a call proceeding indication can be sent to the remote party to indicate that all the information has been received and the call is now proceeding. This indication can be sent by the technology call control layer or by the application by issuing the **gc_CallAck(GCACK_SERVICE_PROC)** function. This stage typically involves routing the call to the destination exchange or party. An information call routing tone can be played at this point to inform the remote party that the call is routing.

3.4.1.6 Call Acceptance

If the application or thread is not ready to answer the call, a **gc_AcceptCall()** function is issued to indicate to the remote end that the call was received but not yet answered. This provides an interval during which the system can verify parameters, determine routing, and perform other tasks before connecting the call. A GCEV_ACCEPT event is generated when the **gc_AcceptCall()** function is successfully completed and the call changes to the Accepted state. The application can then answer the call by issuing the **gc_AnswerCall()** function.

3.4.1.7 Call Establishment

When the call is to be directly connected, such as to a voice messaging system, or if the application or thread is ready to answer the call, a **gc_AnswerCall()** function is issued to make the final connection. Upon answering the call, a GCEV_ANSWERED event is generated and the call

changes to the Connected state. At this point, the call is connected to the called party and call charges begin.

3.4.1.8 Overlap Receiving

After an incoming call has been received, the call is offered to the application based on the call acknowledgement configuration and the availability of information required for proceeding with the call. If the incoming call is in en-bloc mode where all the information required for processing the call is present, the call is offered to the application. Otherwise, the call is offered to the application based on the following configurations:

Call Acknowledgement

If the application is configured to send the call acknowledgement, the call is immediately offered to the application regardless of the amount of information available. The application can then request and collect more information as required. If the technology call control layer is configured to send the call acknowledgement, then the call is offered to the application based on the minimum amount of information specified.

Minimum Information Specified

If the incoming call does not have sufficient information, the call is offered to the application based on the amount of information required. If the technology is configured to accept minimum information, the call is offered to the application only after the specified minimum amount of information is received. Thereafter, the application can request and collect more information as required. If the technology is not configured to accept minimum information, then the call is offered to the application regardless of the amount of information available. The application can then request and collect more information as required.

The following sections describe various configurations operating in overlap receiving mode.

Scenario 1

In this scenario, the application is configured to acknowledge the incoming call and send a call proceeding indication after sufficient information has been received. When an incoming call is detected, the call is immediately offered to the application regardless of the amount of information available to proceed with the call.

When the call is in the Offered state (after the generation of the unsolicited GCEV_OFFERED event), the application sends an acknowledgement for the incoming call by issuing a **gc_CallAck(GCACK_SERVICE_INFO)** function. The application may selectively retrieve call information, such as Destination address and Origination address (caller ID) by issuing the **gc_GetCallInfo()** function. If more information is still required, the **gc_ReqMoreInfo()** function is issued to request more information. When the information is received, the GCEV_MOREINFO event is generated again. When all the required information is received, the application may send a call proceeding indication to the remote side by issuing the **gc_CallAck()** function. Otherwise, the application can choose to accept or answer the call.

Scenario 2

In this scenario, the technology call control layer is configured to acknowledge the incoming call and send a call proceeding indication after sufficient information has been received. When an

incoming call is detected, the technology call control layer immediately sends an acknowledgement. If the minimum amount of information required is specified, then the call is offered to the application only after the minimum amount of information required is received. After the call is offered to the application, the address information can be retrieved to determine if more information is required. If more information is required, a **gc_CallAck(GCACK_SERVICE_INFO)** function must be issued. Since an acknowledgement was already sent out, nothing is sent to the remote side at this time. However, if the minimum amount of information is not specified, then the technology control layer requests and collects more information. After all the maximum amount of information expected is received, the technology control layer sends a call proceeding indication to the remote side. The call is then offered to the application, which can then accept or answer the call.

Scenario 3

In this scenario, the technology call control layer is configured to acknowledge the incoming call and the application is configured to send a call proceeding indication after sufficient information has been received. When an incoming call is detected, the technology call control layer immediately sends an acknowledgement. If the minimum amount of information required is specified, then the call is offered to the application only after the minimum amount of information required is received. Otherwise the call is immediately offered to the application.

When the call is in the Offered state (after generation of the unsolicited GCEV_OFFERED event), the application may selectively retrieve call information, such as the Destination and Origination address (caller ID) by issuing the **gc_GetCallInfo()** function. If more information is required, the application may also request more address information using the **gc_CallAck(GCACK_SERVICE_INFO)** function. Since an acknowledgement was already sent out, no acknowledgement is sent to the remote side at this time. When the additional information is received, the GCEV_MOREINFO event is generated. If more information is still required, the **gc_ReqMoreInfo()** function is issued to request more information. When the additional information is received, the GCEV_MOREINFO event is generated again. When all the required information is received, the application may send a call proceeding indication to the remote side by issuing the **gc_CallAck(GCACK_SERVICE_PROC)** function. Otherwise, the application can choose to accept or answer the call.

Scenario 4

In this scenario, the application is configured to acknowledge the incoming call and the technology call control layer is configured to send a call proceeding indication after sufficient information has been received. When an incoming call is detected, the call is offered to the application regardless of the amount of information available.

When the call is in the Offered state (after generation of the unsolicited GCEV_OFFERED event), the application sends an acknowledgement for the incoming call by issuing a **gc_CallAck(GCACK_SERVICE_INFO)**. The application may selectively retrieve call information, such as Destination address and Origination address (caller ID) by issuing the **gc_GetCallInfo()** function. If more information is still required, the **gc_ReqMoreInfo()** function is issued to request more information. When the information is received, the GCEV_MOREINFO event is generated again. When all the required information is received, the technology call control layer sends a call proceeding indication to the remote side. The application may also attempt to

send a call proceeding indication to the remote side in case the technology call control layer hasn't done so. The application can then choose to accept or answer the call.

3.4.1.9 Call Failure

The following are various causes of call failures:

Call Rejection

From the Offered state, the application or thread may reject the call by issuing the **gc_DropCall()** function followed by a **gc_ReleaseCallEx()** function (see the *Global Call API Library Reference*).

Forced Release

From the Accepted state, not all protocols support a forced release of the line, that is, issuing a **gc_DropCall()** function after a **gc_AcceptCall()** function. If a forced release is not supported and is attempted, the function will fail and an error will be returned. To recover, the application should issue the **gc_AnswerCall()** function followed by **gc_DropCall()** and **gc_ReleaseCallEx()** functions. However, any time a GCEV_DISCONNECTED event is received in the Accepted state, the **gc_DropCall()** function can be issued.

Task Failure

If a call fails at any point in the call establishment process, that is, if a GCEV_TASKFAIL event is received by the application, the call stays in its current state. In most cases, the application needs to drop and release the call to return the line device to the Null state. However, in some cases, such as call failure due to a trunk error, the application needs to use the **gc_ResetLineDev()** function to reset the line device to the Null state. For more information, see the **gc_DropCall()**, **gc_ReleaseCallEx()** and **gc_ResetLineDev()** function descriptions in the *Global Call API Library Reference*.

3.4.1.10 Abandoned Calls

During call establishment, the remote side may choose to hang up before call setup has been completed. The application must be capable of handling error conditions and the lack of complete information when requesting call information.

One such scenario, when using PDK protocols, is the case where the remote side chooses to disconnect a call while it is between the Detected and Offered states. The resulting behavior when the call disconnects depends on whether the application has enabled the generation of the GCEV_DETECTED event:

- If GCEV_DETECTED event generation is enabled, the application will receive a GCEV_DISCONNECTED event.
- If GCEV_DETECTED event generation is *not* enabled, the application will receive a GCEV_OFFERED event with a result value of GCRV_CALLABANDONED, then a GCEV_DISCONNECTED event.

Global Call uses this mechanism to can keep the application informed of the incoming, but abandoned, call.

Note: When developing applications that use DM3 boards, the GCEV_DETECTED event is not supported. If the host application has not received a GCEV_OFFERED event when the call is disconnected by the remote side, the host application will not receive any event. If the host application has already received a GCEV_OFFERED event, it receives a GCEV_DISCONNECTED event when the call is disconnected.

3.4.1.11 Inbound Call Scenarios in Asynchronous Mode

This section shows various asynchronous inbound call scenarios. For call scenarios used for a specific signaling protocol, check the *Global Call Technology User's Guide* for that technology.

Figure 4 shows a basic asynchronous call scenario for an incoming call.

Figure 4. Basic Asynchronous Inbound Call Scenario

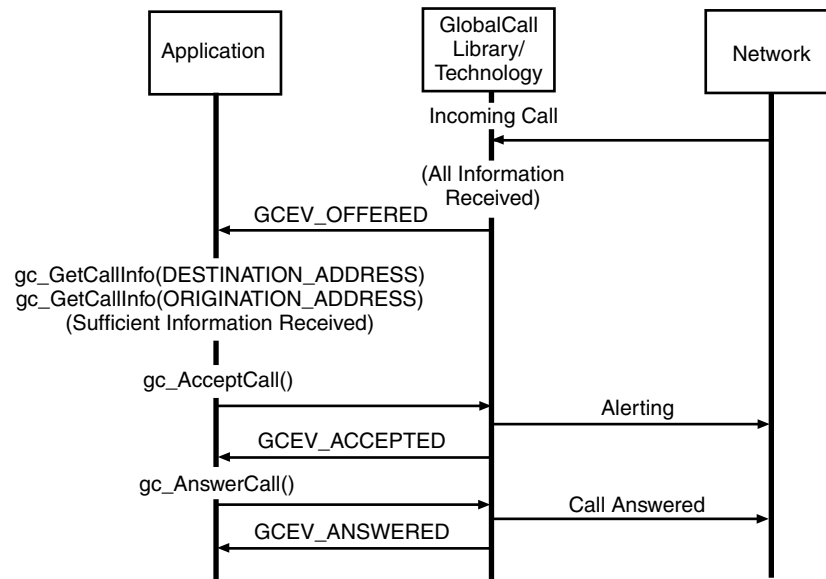


Figure 5 shows an asynchronous call scenario for an incoming call with call proceeding.

Figure 5. Incoming Call Scenario with Call Proceeding

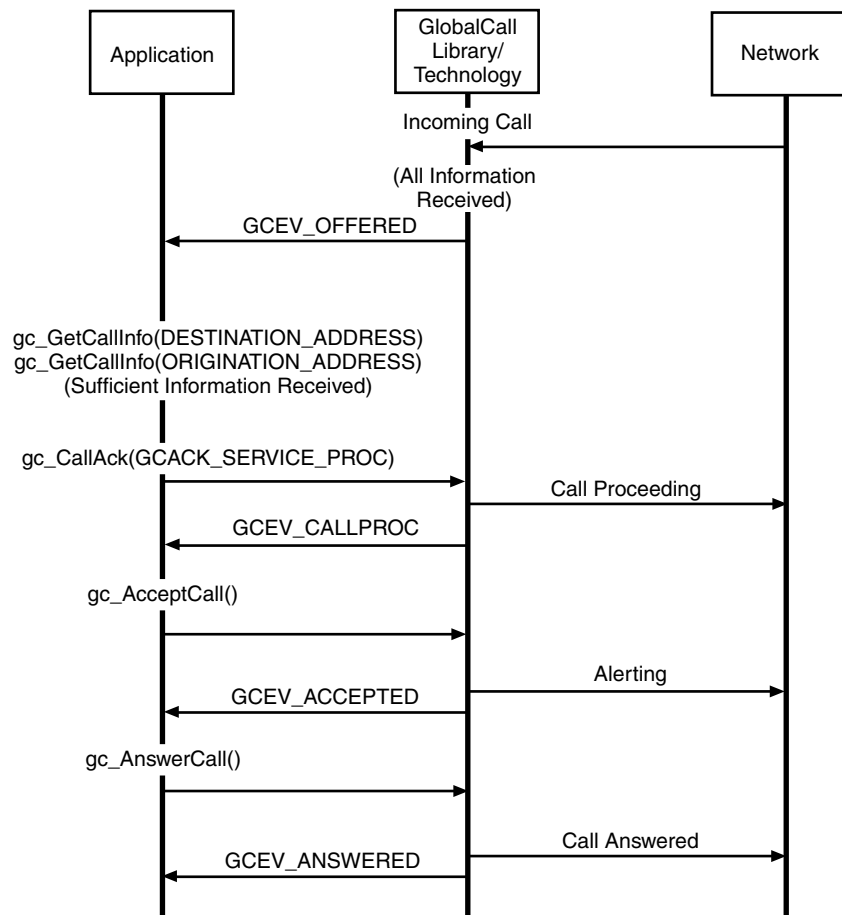


Figure 6 shows an asynchronous call scenario for an incoming call with call acknowledgement and call proceeding controlled by the application.

Figure 6. Call Acknowledgement and Call Proceeding Done at the Application Layer

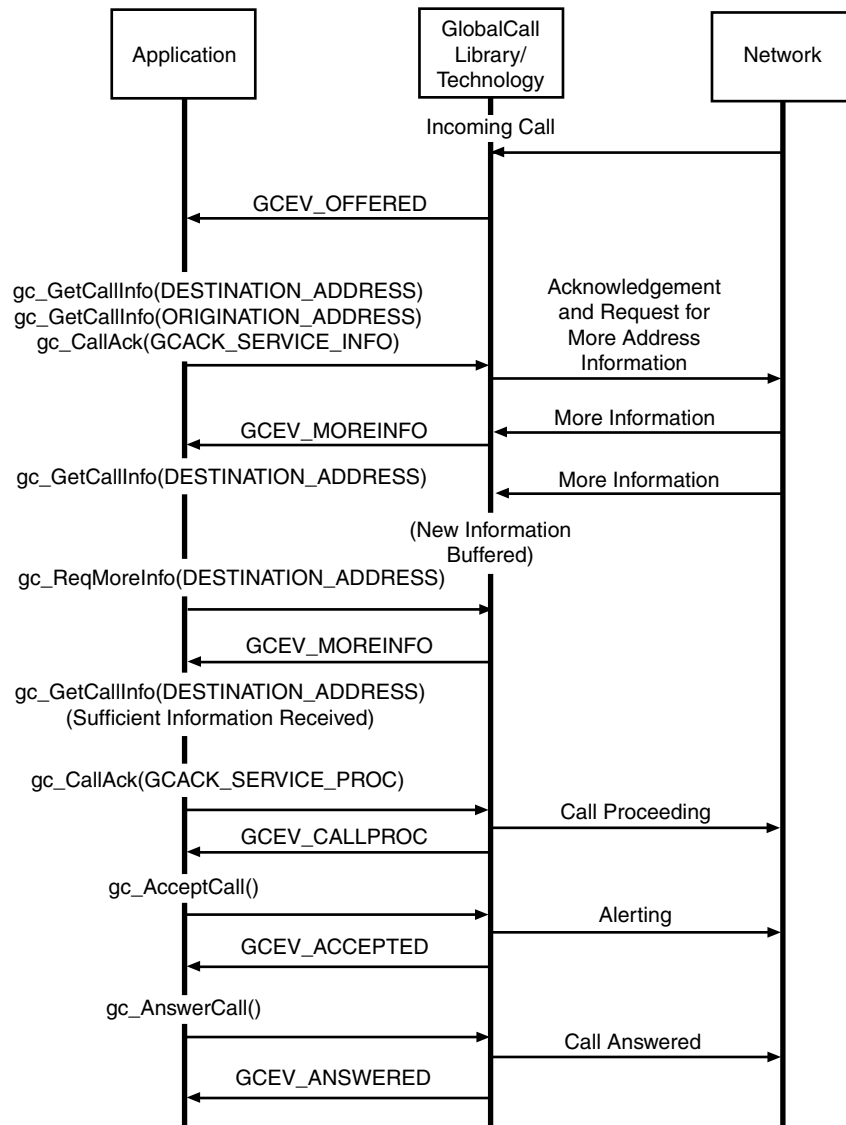


Figure 7 shows an asynchronous call scenario for an incoming call with call proceeding controlled by the application with the minimum information configuration.

Figure 7. Call Proceeding Done by the Application Layer with Minimum Information Configured

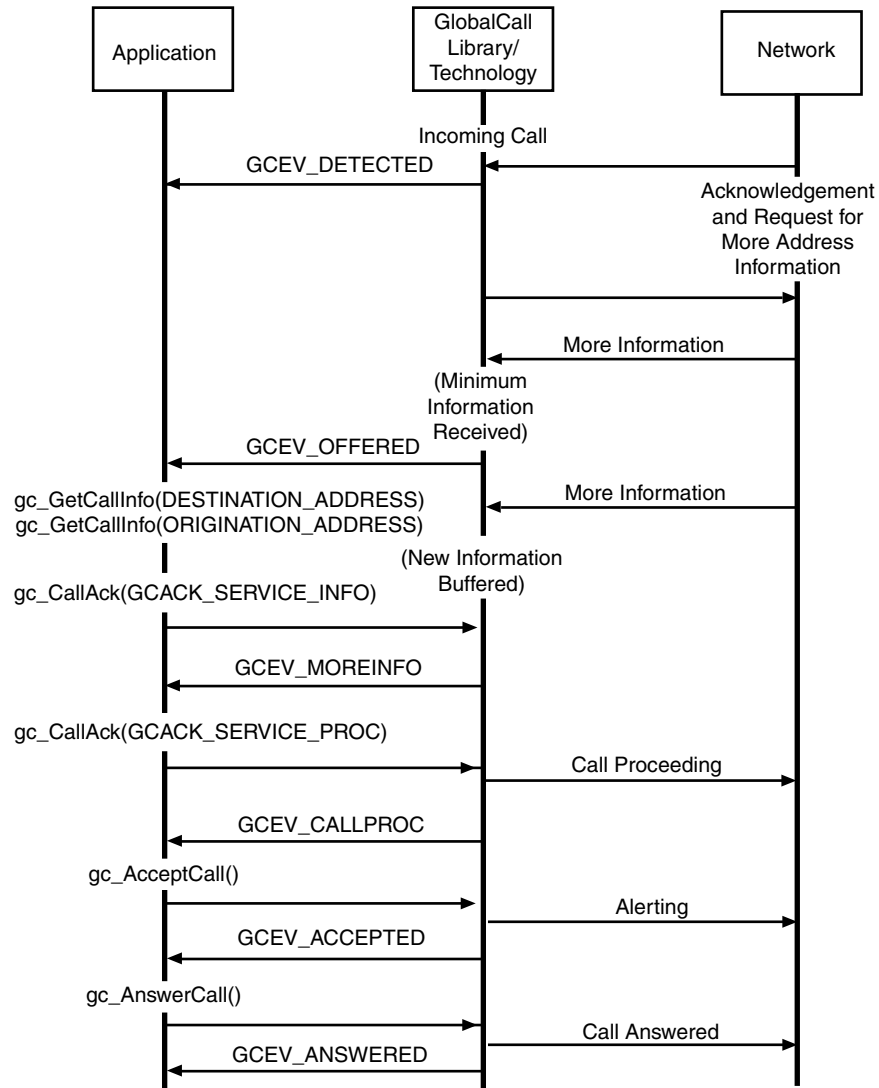


Figure 8 shows an asynchronous call scenario for an incoming call with call acknowledgement and call proceeding controlled by the call control layer.

Figure 8. Call Acknowledgement and Call Proceeding Done at Technology Call Control Layer


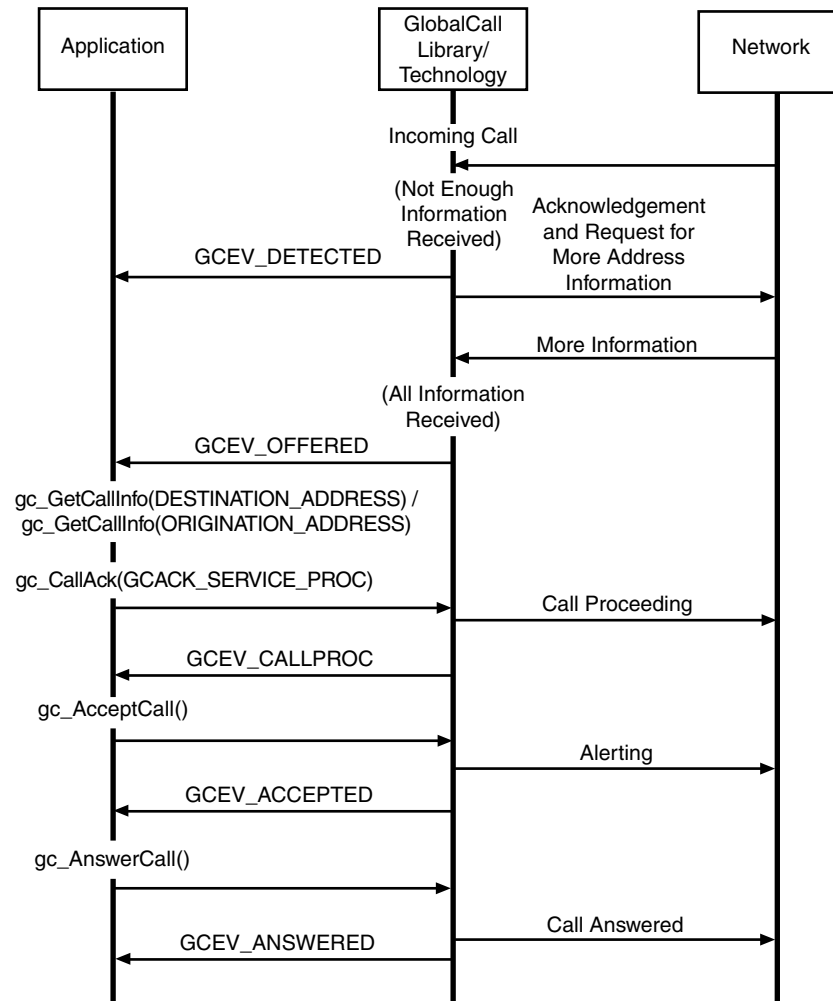


Figure 9 shows an asynchronous call scenario for an incoming call with call acknowledgement controlled by the call control layer and call proceeding controlled by the application.

Figure 9. Call Acknowledgement Done by the Technology Call Control Layer and Call Proceeding Done by the Application

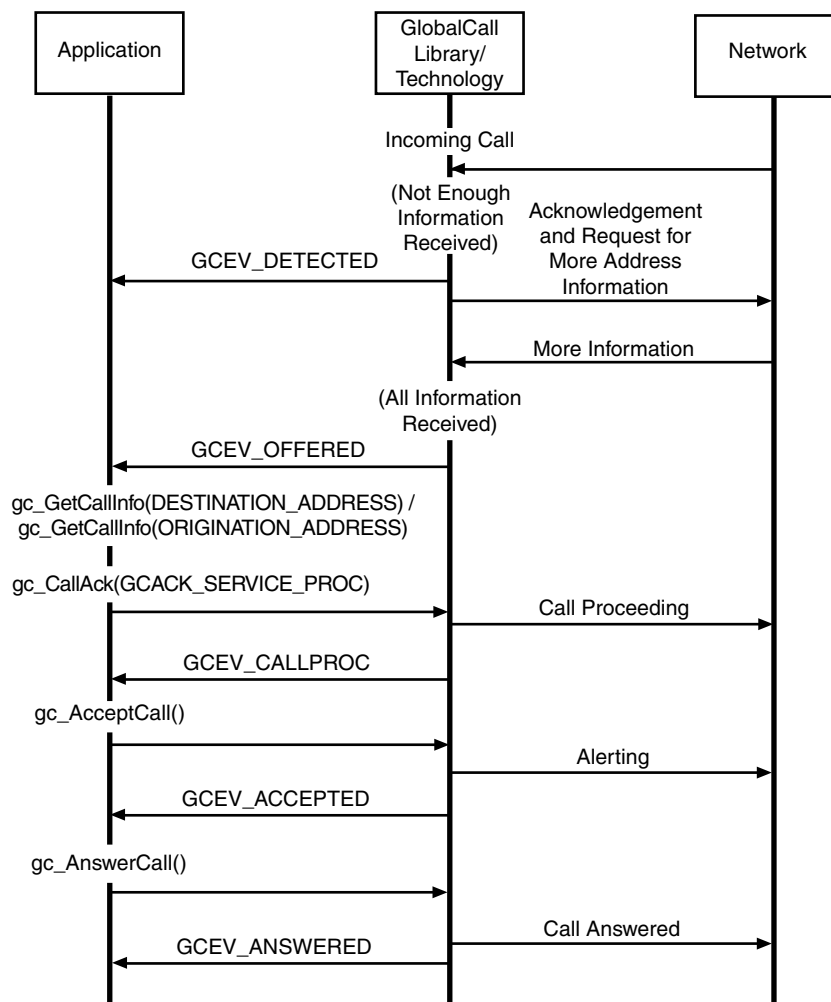

3.4.2 Outbound Calls in Asynchronous Mode

This section describes how calls are established and shows call scenarios for asynchronous outbound calls. The following topics describe the processing of outbound calls in asynchronous mode:

- [Outbound Calls in Asynchronous Mode Overview](#)
- [Channel Initialization](#)
- [Call Dialing](#)
- [Call Proceeding](#)
- [Call Alerting](#)
- [Call Connected](#)
- [Overlap Sending](#)
- [Call Failure](#)
- [Outbound Call Scenarios in Asynchronous Mode](#)

3.4.2.1 Outbound Calls in Asynchronous Mode Overview

Figure 10 illustrates a basic Outbound Call Model, which shows the call states associated with establishing a call in the asynchronous mode. All calls start from a Null state. The call establishment process for outbound calls is shown. Table 7 presents a summary of the outbound call state transitions.

Figure 10. Basic Asynchronous Outbound Call State Diagram

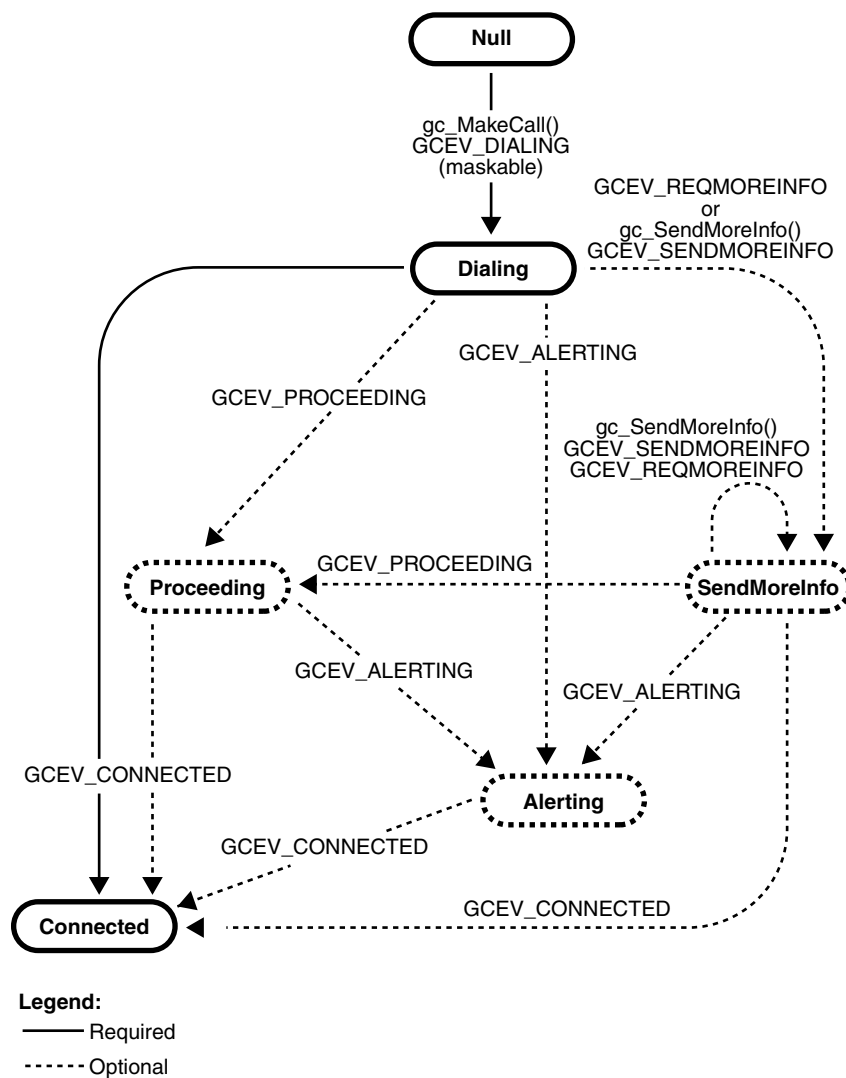


Table 7. Asynchronous Outbound Call State Transitions

State	Previous/Next State	Valid Call State Transition Functions	Call Transition Events
Alerting (GCST_ALERTING) Maskable	Previous: Proceeding, Dialing, SendMoreInfo Next: GCEV_CONNECTED -> Connected state GCEV_DISCONNECTED -> Disconnected state GCEV_DROPCALL -> Idle state	gc_DropCall()	GCEV_DISCONNECTED, GCEV_DROPCALL GCEV_CONNECTED
Dialing (GCST_DIALING) Not Maskable	Previous: Null Next: GCEV_CONNECTED -> Connected state GCEV_ALERTING -> Alerting (Delivered) state GCEV_PROCEEDING -> Proceeding state GCEV_REQMOREINFO -> SendMoreInfo state GCEV_SENDMOREINFO -> SendMoreInfo state GCEV_DISCONNECTED -> Disconnected state GCEV_DROPCALL -> Idle state	gc_SendMoreInfo() gc_DropCall()	GCEV_CONNECTED, GCEV_ALERTING, GCEV_REQMOREINFO, GCEV_PROCEEDING, GCEV_DISCONNECTED, GCEV_DROPCALL
Null (GCST_NULL) Not Maskable	Previous: Idle Next: gc_ResetLineDev() -> Null GCEV_DIALING -> Dialing state GCEV_DETECTED -> Detected state	gc_MakeCall()	GCEV_DIALING

Table 7. Asynchronous Outbound Call State Transitions

State	Previous/Next State	Valid Call State Transition Functions	Call Transition Events
Proceeding (GCST_PROCEEDING) Maskable	Previous: Dialing, SendMoreInfo Next: GCEV_ALERTING -> Alerting (Delivered) state GCEV_CONNECTED -> Connected state GCEV_DISCONNECTED -> Disconnected state GCEV_DROPCALL -> Idle state	gc_DropCall()	GCEV_DISCONNECTED, GCEV_DROPCALL, GCEV_CONNECTED, GCEV_ALERTING
SendMoreInfo (GCST_SENDMOREINFO) Maskable	Previous: Dialing Next: GCEV_CONNECTED -> Connected state GCEV_PROCEEDING -> Proceeding state. GCEV_DISCONNECTED -> Disconnected state GCEV_DROPCALL -> Idle state	gc_SendMoreInfo() gc_DropCall()	GCEV_DISCONNECTED, GCEV_DROPCALL, GCEV_PROCEEDING GCEV_CONNECTED

The following sections describe the asynchronous outbound call processes, as shown in [Figure 10, “Basic Asynchronous Outbound Call State Diagram”](#), on page 56.

3.4.2.2 Channel Initialization

To establish calls, the following conditions must be met:

- The condition of the line device must be unblocked. When a channel is initially opened, the initial condition of a line device is blocked. A “blocking” condition on a line device is indicated by the reception of a GCEV_BLOCKED event and an “unblocking” condition on a line device is indicated by the reception of a GCEV_UNBLOCKED event. The GCEV_BLOCKED and GCEV_UNBLOCKED events are sent as unsolicited events to the application in response to blocking alarms. (For more information on blocking alarms and the GCEV_BLOCKED and GCEV_UNBLOCKED events, see [Section 4.3, “Blocked and Unblocked Event Handling”](#), on page 92). When the condition of the line device is unblocked, the line device is ready for establishing calls.
- The call state of the channel must be in the Null state. This is the initial call state of a line device when it is first opened. This state is also reached when a call is released or after the channel is reset by issuing the **gc_ResetLineDev()** function.

If the above conditions are met, the application is ready to make outbound calls.

3.4.2.3 Call Dialing

To initiate an outbound call using the asynchronous mode, the application issues a **gc_MakeCall()** function that requests an outgoing call to be made on a specific line device. The **gc_MakeCall()** function returns immediately, and the call state transitions to the Dialing state. The GCEV_DIALING event is generated (if enabled) to indicate that the call has transitioned to the Dialing state. A CRN is assigned to the call being established on that line device. If the **gc_MakeCall()** function fails, the line device remains in the Null state. In this state, dialing information is sent to the remote side.

3.4.2.4 Call Proceeding

In the Dialing state, the remote side may indicate that all the information was received and the call is proceeding. In this case, the GCEV_PROCEEDING event is generated and the call transitions to the Proceeding state. The remote side may either accept or answer the call.

3.4.2.5 Call Alerting

If the remote end is not ready to answer the call, a GCEV_ALERTING event is generated. This event indicates that the called party has accepted but not answered the call and that the network is waiting for the called party to complete the connection. At this stage, the remote side is typically ringing. This GCEV_ALERTING event changes the call state to the Alerting state.

3.4.2.6 Call Connected

When the called party immediately accepts the call, such as a call directed to a FAX or voice messaging system, a GCEV_CONNECTED event is generated to indicate that the connection was established. This event changes the call to the Connected state. In the Connected state, the call is connected to the called party and call charges begin.

When the call is answered (the remote end makes the connection), a GCEV_CONNECTED event changes the call to the Connected state. In the Connected state, the call is connected to the called party and call charges begin. The GCEV_CONNECTED event indicates successful completion of the **gc_MakeCall()** function.

3.4.2.7 Overlap Sending

In the Dialing state, if the remote side requests more information such as the destination address, the GCEV_REQMOREINFO event is generated and the call transitions to the SendMoreInfo state. The **gc_SendMoreInfo()** function is issued to send more information. If the remote side still requests more information, the GCEV_REQMOREINFO event is generated again. Once the remote side has received sufficient information, it indicates that the call is proceeding, and accepts or answers the call. Some technologies, such as SS7, do not have any messages or signals to request more information. For such protocols, the application never gets the unsolicited GCEV_REQMOREINFO event. In this case, the application may call the **gc_SendMoreInfo()** function to send more information as it becomes available.

3.4.2.8 Call Failure

The following are two causes of call failures:

Call Rejection

When the remote end does not answer the call, a `GCEV_DISCONNECTED` event is generated. This event is also generated when an inbound call arrives while the application is setting up an outbound call, causing a “glare” condition. Unless the protocol specifies otherwise, the incoming call takes precedence over the outbound call. When an asynchronous `gc_MakeCall()` function conflicts with the arrival of an inbound call, all the resources need to be released for the outbound call. Subsequently, the `GCEV_DISCONNECTED` event is generated with a result value indicating that an inbound call took precedence. The `gc_DropCall()` function must be issued after the `GCEV_DISCONNECTED` event is received.

If a `gc_MakeCall()` function is issued while the inbound call is being set up, the `gc_MakeCall()` function fails. The inbound call event is held in the driver until the CRN of the outbound call is released using the `gc_ReleaseCallEx()` function. After release of the outbound CRN, the pending inbound call event is sent to the application. This behavior may be modified by the individual protocol specification.

Task Failure

If the `gc_MakeCall()` cannot be completed successfully, a `GCEV_TASKFAIL` event or a `GCEV_DISCONNECTED` event is sent to the application. The result value associated with the event indicates the reason for the event. If the `GCEV_TASKFAIL` event is sent, then a problem occurred when placing the call from the local end.

3.4.2.9 Outbound Call Scenarios in Asynchronous Mode

This section shows various asynchronous outbound call scenarios. For call scenarios used for a specific signaling protocol, check the *Global Call Technology User's Guide* for that technology.

Figure 11 shows a basic asynchronous call scenario for outgoing calls.

Figure 11. Asynchronous Outbound Call Scenario

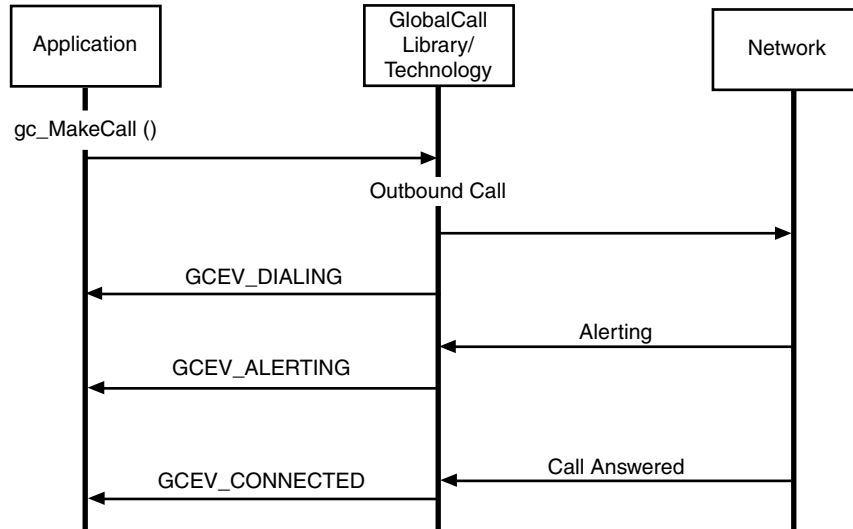


Figure 12 shows an asynchronous call scenario for outgoing calls with call acknowledgement.

Figure 12. Asynchronous Outbound Call Scenario With Call Acknowledgement


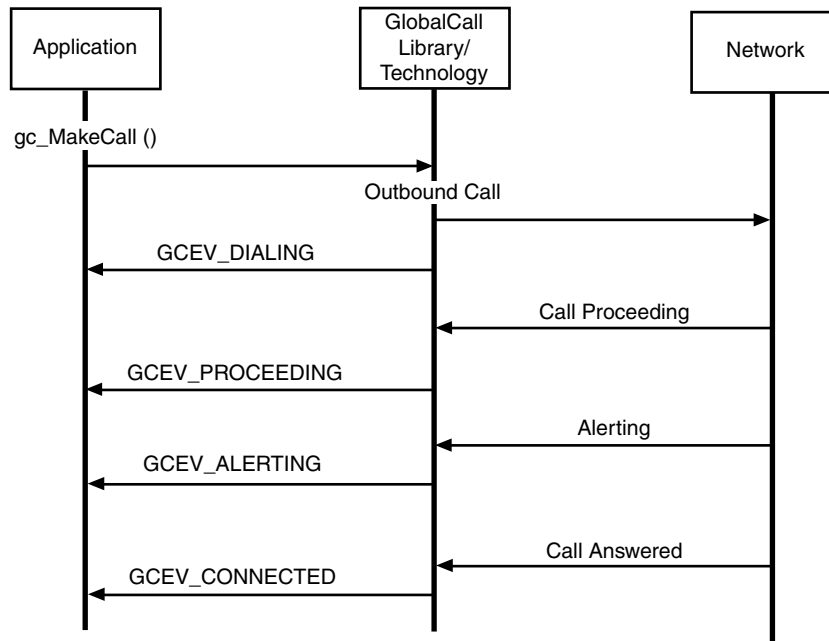


Figure 13 shows an asynchronous call scenario for outgoing calls with overlap sending.

Figure 13. Asynchronous Outbound Call Scenario With Overlap Sending

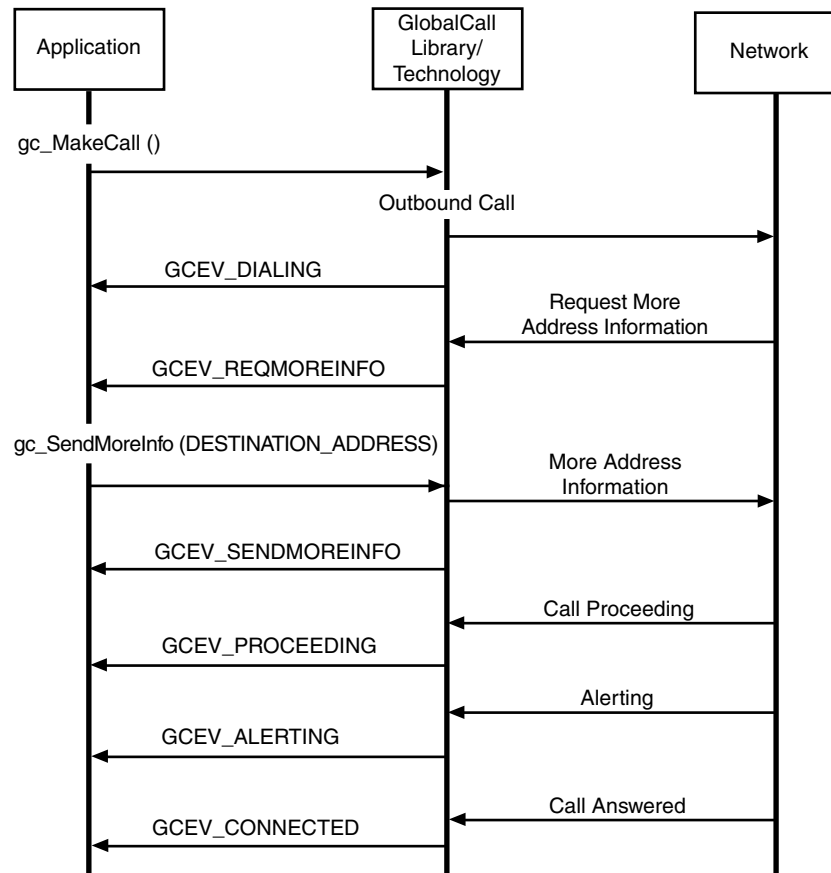

3.4.3 Call Termination in Asynchronous Mode

This section describes how calls are terminated and shows call scenarios for asynchronous call termination. The following topics describe call termination in asynchronous mode:


- [Call Termination in Asynchronous Mode Overview](#)
- [User Initiated Termination](#)
- [Network Initiated Termination](#)
- [Call Release](#)
- [Call Termination Call Control Scenarios in Asynchronous Mode](#)

3.4.3.1 Call Termination in Asynchronous Mode Overview

Figure 14 illustrates the call states associated with call termination or call teardown in the asynchronous mode initiated by either a call disconnection or failure. See Table 8 for a summary of

the call state transitions. A call can be terminated by the application or by the detection of a call disconnect from the network. Either of these terminations can occur at any point in the process of setting up a call and during any call state.

Figure 14. Asynchronous Call Tear-Down State Diagram

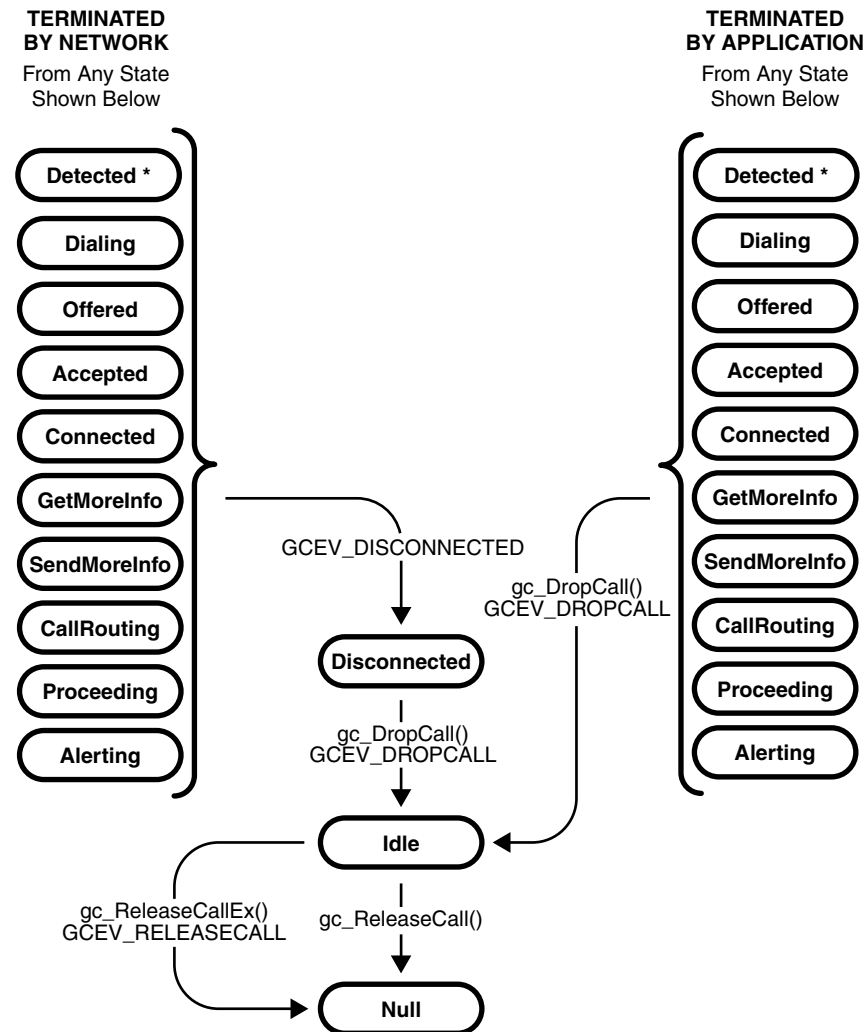

Note: * applies if the application requested to be notified of GCEV_DETECTED events.

Table 8. Asynchronous Call Termination Call State Transitions

State	Previous/Next State	Valid Call State Transition Functions	Call Transition Events
Disconnected (GCEV_DISCONNECTED) Not maskable	Previous: Offered, Accepted, Connected, Dialing, SendMoreInfo, Proceeding, Alerting, GetMoreInfo, CallRouting Next: GCEV_DROP_CALL -> Idle state	gc_DropCall()	GCEV_DROP_CALL
Idle (GCST_IDLE) Not Maskable	Previous: Offered, Accepted, Connected, Dialing, SendMoreInfo, Proceeding, Alerting, GetMoreInfo, CallRouting, Disconnected Next: GCEV_RELEASE_CALL -> Null	gc_ReleaseCallEx()	GCEV_RELEASE_CALL

3.4.3.2 User Initiated Termination

The application terminates a call by issuing a **gc_DropCall()** function that initiates disconnection of the call specified by the CRN. When the remote side responds by disconnecting the call, a GCEV_DROP_CALL event is generated and causes a transition from the current call state to the Idle state. The user must then issue the **gc_ReleaseCallEx()** function to release all internal resources allocated for the call.

3.4.3.3 Network Initiated Termination

When a network call termination is initiated, an unsolicited GCEV_DISCONNECTED event is generated. This event indicates the call was disconnected at the remote end or an error was detected, which prevented further call processing. The GCEV_DISCONNECTED event causes the call state to change from the current call state to the Disconnected state. This event may be received during call setup or after a connection is requested. In the Disconnected state, the user issues the **gc_DropCall()** function to disconnect the call. The **gc_DropCall()** function is equivalent to *set hook ON*. After the remote side is notified about the call being dropped, a GCEV_DROP_CALL event is generated causing the call state to change to the Idle state. In the Idle state, the **gc_ReleaseCallEx()** function must be issued to release all internal resources committed to servicing the call.

3.4.3.4 Call Release

Once in the Idle state, the call has been disconnected and the application must issue a **gc_ReleaseCallEx()** function to free the line device for another call. The **gc_ReleaseCallEx()** function releases all internal system resources committed to servicing the call. A GCEV_RELEASE_CALL event is generated and the call state transitions to the Null state.

3.4.3.5 Call Termination Call Control Scenarios in Asynchronous Mode

This section shows various asynchronous call termination call scenarios. For call scenarios used for a specific signaling protocol, check the *Global Call Technology User's Guide* for that technology.

Figure 15 shows an asynchronous user initiated call termination scenario.

Figure 15. User Initiated Asynchronous Call Termination Scenario


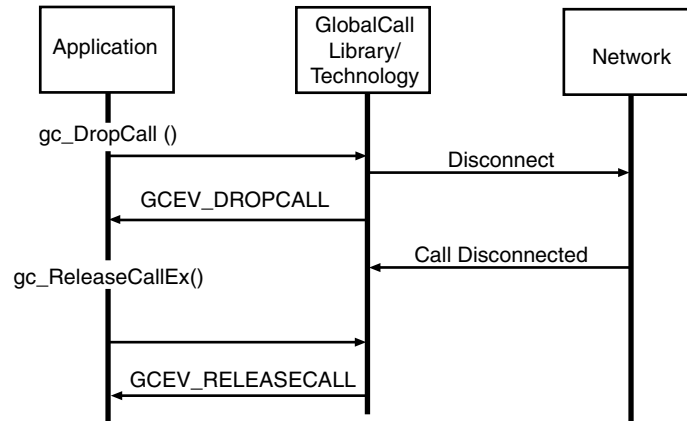


Figure 16 shows an asynchronous network initiated call termination scenario.

Figure 16. Network Initiated Asynchronous Call Termination Scenario

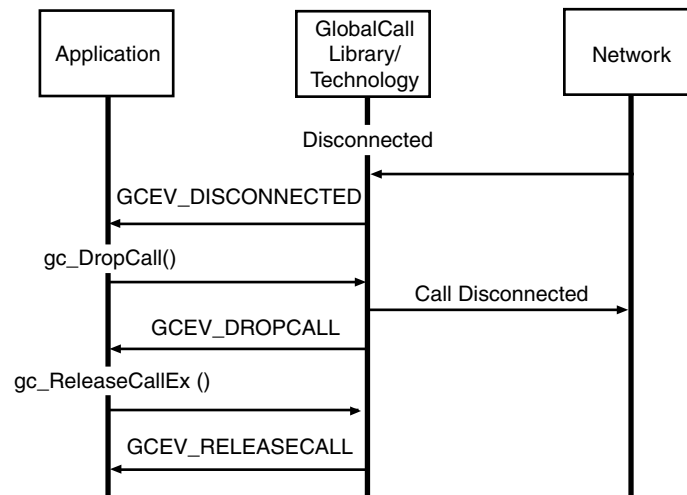

3.5 Basic Call Control in Synchronous Mode

This section describes and illustrates the basic call model and state transitions for call control in the synchronous mode. This section also describes the process for call establishment for both inbound and outbound calls and call termination in the asynchronous mode.

The procedures for establishing and terminating calls in the synchronous mode are described in the following sections:

- [Inbound Calls in Synchronous Mode](#)
- [Outbound Calls in Synchronous Mode](#)
- [Call Termination in Synchronous Mode](#)

The application must handle unsolicited events in the synchronous mode, unless these events are masked or disabled. Procedures for handling unsolicited events are described in [Section 3.5.4, “Handling Unsolicited Events”](#), on page 84.

3.5.1 Inbound Calls in Synchronous Mode

This section describes how calls are established and shows call scenarios for synchronous inbound calls. The following topics describe the processing of inbound calls in synchronous mode:

- [Inbound Calls in Synchronous Mode Overview](#)
- [Channel Initialization](#)
- [Call Offered](#)
- [Call Routing](#)
- [Call Acceptance](#)
- [Call Establishment](#)
- [Overlap Receiving](#)
- [Call Failure](#)
- [Inbound Call Scenarios in Synchronous Mode](#)

3.5.1.1 Inbound Calls in Synchronous Mode Overview

Figure 17 illustrates a Basic Call Model, and indicates the call states associated with establishing or setting up a call in the synchronous mode. The call establishment process for inbound calls is shown. All calls start from a Null state. See Table 9 for a summary of the call state transitions.

Some features, such as overlap sending/receiving, are not supported in the synchronous mode. Typically, synchronous calls are made when the application does not care about the intermediate function calls or events required for establishing a call. However, the overlap feature requires intermediate state transitions where additional function calls need to be made. Previously, functions

returned upon successful completion, but in the overlap mode they may return before successful completion, possibly due to an intermediate request for more information.

Note: The Advanced Call Model includes call states associated with holding, retrieving and transferring calls. See [Section 3.6, “Advanced Call Control with Call Hold and Transfer”](#), on page 84 for more information.

Figure 17. Basic Synchronous Inbound Call State Diagram

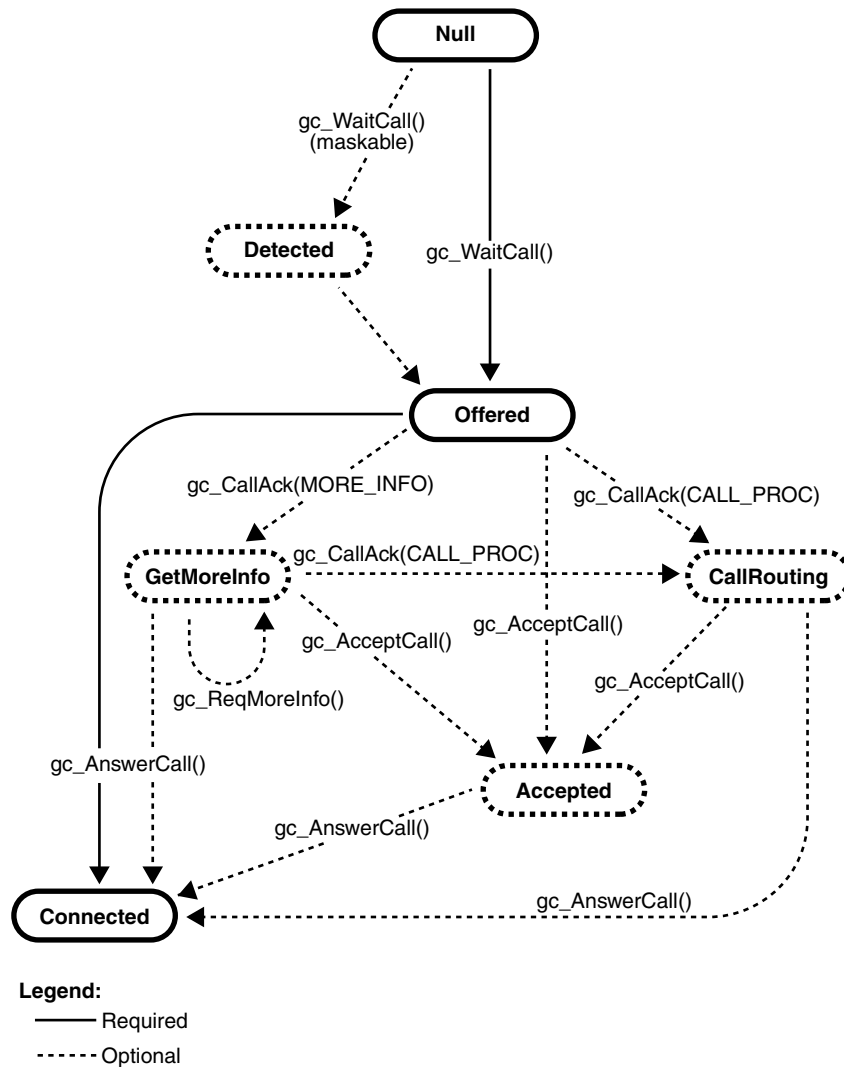


Table 9. Synchronous Inbound Call State Transitions

State Description	Previous/Next State	Valid Call State Transition Functions	Call Transition Events
Accepted (GCST_ACCEPTED) Maskable	Previous: Offered, GetMoreInfo, CallRouting Next: gc_AnswerCall() -> Connected state. GCEV_DISCONNECTED -> Disconnected state gc_DropCall() -> Idle state	gc_AnswerCall() , gc_DropCall()	GCEV_DISCONNECTED
Call Routing (GCST_CALLROUTING) Maskable	Previous: Offered, GetMoreInfo Next: gc_AnswerCall() -> Connected state gc_AcceptCall() -> Accepted state GCEV_DISCONNECTED -> Disconnected state gc_DropCall() -> Idle state	gc_AnswerCall() , gc_AcceptCall() , gc_DropCall()	GCEV_DISCONNECTED
Connected (GCST_CONNECTED) Not Maskable	Previous: Accept, Offered, GetMoreInfo, CallRouting, Dialing, SendMoreInfo, Proceeding, Alerting Next: GCEV_DISCONNECTED -> Disconnected state gc_DropCall() -> Idle state	gc_DropCall()	GCEV_DISCONNECTED
GetMoreInfo (GCST_GETMOREINFO) Maskable	Previous: Offered Next: gc_AnswerCall() -> Connected state gc_AcceptCall() -> Accepted state gc_CallAck() sends CallProceeding -> CallRouting state gc_ReqMoreInfo() -> GetMoreInfo state GCEV_DISCONNECTED -> Disconnected state gc_DropCall() -> Idle state	gc_ReqMoreInfo() , gc_CallAck() , gc_AnswerCall() , gc_AcceptCall() , gc_DropCall()	GCEV_DISCONNECTED

Table 9. Synchronous Inbound Call State Transitions

State Description	Previous/Next State	Valid Call State Transition Functions	Call Transition Events
Null (GCST_NULL) Not Maskable	Previous: Idle Next: gc_WaitCall() -> Offered state	gc_WaitCall()	GCEV_DETECTED
Offered (GCST_OFFERED) Not Maskable	Previous: Null, Detected Next: gc_AnswerCall() -> Connected state gc_AcceptCall() -> Accepted state gc_CallAck() sends CallProceeding -> CallRouting state gc_CallAck() requests more info -> GetMoreInfo state GCEV_DISCONNECTED -> Disconnected state gc_DropCall() -> Idle state	gc_CallAck() , gc_AnswerCall() , gc_AcceptCall() , gc_DropCall()	GCEV_DISCONNECTED

3.5.1.2 Channel Initialization

To establish calls, the following conditions must be met:

- The condition of the line device must be unblocked. When a channel is initially opened, the initial condition of a line device is blocked. A “blocking” condition on a line device is indicated by the reception of a GCEV_BLOCKED event and an “unblocking” condition on a line device is indicated by the reception of a GCEV_UNBLOCKED event. The GCEV_BLOCKED and GCEV_UNBLOCKED events are sent as unsolicited events to the application in response to blocking alarms. For more information on blocking alarms and the GCEV_BLOCKED and GCEV_UNBLOCKED events, see [Section 4.3, “Blocked and Unblocked Event Handling”](#), on page 92. When the condition of the line device is unblocked, the line device is ready for establishing calls.
- The call state of the channel must be in the Null state. This is the initial call state of a line device when it is first opened. This state is also reached when a call is released or after the channel is reset.

If the above conditions are met, the application must issue a **gc_WaitCall()** function in the Null state to indicate readiness to accept an inbound call request on the specified line device. In the synchronous mode, the **gc_WaitCall()** function waits for an inbound call for the length of time specified by the **timeout** parameter. When the timeout expires, the function fails with an error code, EGC_TIMEOUT, and must be reissued. If the time specified is 0, the function fails unless a call is already pending on the specified line device.

A **gc_WaitCall()** function waiting for a call to arrive can be stopped (terminated) by issuing the **gc_ResetLineDev()** function. When the **gc_WaitCall()** function fails or is stopped, all system resources including the CRN assigned to the call are released. To accept inbound calls, another **gc_WaitCall()** function must be issued each time the application wishes to receive an inbound call. The application blocks to wait for an incoming call by issuing the **gc_WaitCall()** function. The application must repeat the poll for incoming calls by issuing the **gc_WaitCall()** function each time it polls for a call.

3.5.1.3 Call Offered

The inbound call from the network is received on the specified line device but is not yet offered to the application, which causes the call state to change to the Detected state, if supported. At this stage, the call is being processed, which typically involves allocating resources or waiting for more information. If the call does change to the Detected state, no GCEV_DETECTED event is generated and the **gc_WaitCall()** function does not return until the call is offered to the application. After all the required processing is done, the call is offered to the application and the call state changes to the Offered state. The application may selectively retrieve call information, such as Destination address and Origination address (caller ID). If more information is required (overlap receiving) or the call needs to be acknowledged, the **gc_CallAck()** function must be issued. (See [Section 3.5.1.7, “Overlap Receiving”](#), on page 71.) Otherwise the user can accept or answer the call by issuing the **gc_AcceptCall()** or **gc_AnswerCall()** respectively.

3.5.1.4 Call Routing

After the call has been offered, the **gc_CallAck(GCACK_SERVICE_PROC)** function can be issued to indicate to the other side that all the information has been received and the call is now proceeding. This stage typically involves routing the call to the destination exchange or party. An information call routing tone can be played at this point to inform the remote party that the call is routing.

3.5.1.5 Call Acceptance

If the application is not ready to answer the call, a **gc_AcceptCall()** function is issued to indicate to the remote end that the call was received but not yet answered. This provides an interval during which the system can verify parameters, determine routing, and perform other tasks before connecting the call. When the **gc_AcceptCall()** function is successfully completed, the call changes to the Accepted state. The application may selectively retrieve call information, such as the Destination address and Origination address (caller ID). The application can then answer the call by issuing the **gc_AnswerCall()** function.

3.5.1.6 Call Establishment

When the call is to be directly connected, such as to a voice messaging system, the **gc_AnswerCall()** function is issued to make the final connection. When the **gc_AnswerCall()** function is successfully completed, the call changes to the Connected state. At this time, the call is connected to the called party and call charges begin.

3.5.1.7 Overlap Receiving

After an incoming call has been received, the call is offered to the application based on the call acknowledgement configuration and the availability of information required for proceeding with the call. If the incoming call is in en-bloc mode where all the information required for processing the call is present, the call is offered to the application. Otherwise, the call is offered to the application based on the following:

Call Acknowledgement

If the application is configured to send the call acknowledgement, the call is immediately offered to the application regardless of the amount of information available. The application can then request and collect more information as required. If the technology call control layer is configured to send the call acknowledgement, then the call is offered to the application based on the minimum amount of information specified.

Minimum Information Specified

If the incoming call does not have sufficient information, the call is offered to the application based on the amount of information required. If the technology is configured to accept minimum information, the call is offered to the application only after the specified minimum amount of information is received. Thereafter, the application can request and collect more information as required. If the technology is not configured to accept minimum information, then the call is offered to the application regardless of the amount of information available. The application can then request and collect more information as required.

The following sections describe various configurations operating in overlap receiving mode.

Scenario 1

In this scenario, the application is configured to acknowledge the incoming call and send a call proceeding indication after sufficient information has been received. When an incoming call is detected, the call is immediately offered to the application regardless of the amount of information available to proceed with the call.

When the call is in the Offered state, the application sends an acknowledgement for the incoming call by issuing a **gc_CallAck(GCACK_SERVICE_INFO)**. The application may selectively retrieve call information, such as Destination address and Origination address (caller ID) by issuing **gc_GetCallInfo()**. If more information is still required, the **gc_ReqMoreInfo()** function is issued to request more information. The function returns when the requested information is received. The application may then send a call proceeding indication to the remote side by issuing the **gc_CallAck(GCACK_SERVICE_PROC)** function. Otherwise, the application can choose to accept or answer the call.

Scenario 2

In this scenario, the technology call control layer is configured to acknowledge the incoming call and send a call proceeding indication after sufficient information has been received. When an incoming call is detected, the technology call control layer immediately sends an acknowledgement.

If the minimum amount of information required is specified, then the call is offered to the application only after the minimum amount of information required is received. When the call is offered to the application and more information is required, the **gc_CallAck(GCACK_SERVICE_INFO)** must be issued. Since an acknowledgement was already sent out, no acknowledgement is sent to the remote side at this time. However, if the minimum amount of information is not specified, then the technology control layer requests and collects more information. After all the information is received, the technology control layer sends a call proceeding indication to the remote side. The call is then offered to the application, which can then accept or answer the call.

Scenario 3

In this scenario, the technology call control layer is configured to acknowledge the incoming call and the application is configured to send a call proceeding indication after sufficient information has been received. When an incoming call is detected, the technology call control layer immediately sends an acknowledgement.

If the minimum amount of information required is specified, then the call is offered to the application only after the minimum amount of information required is received. Otherwise the call is immediately offered to the application.

When the call is in the Offered state, the application may selectively retrieve call information, such as Destination address and Origination address (caller ID) by issuing the **gc_GetCallInfo()** function. If more information is required, the application may also request more address information using the **gc_CallAck(GCACK_SERVICE_INFO)** function. This function returns when the requested information is received. If more information is still required, the **gc_ReqMoreInfo()** function is issued to request more information. When all the required information is received, the application may send a call proceeding indication to the remote side by issuing the **gc_CallAck(GCACK_SERVICE_PROC)** function. Otherwise, the application can choose to accept or answer the call.

Scenario 4

In this scenario, the application is configured to acknowledge the incoming call and the technology call control layer is configured to send a call proceeding indication after sufficient information has been received. When an incoming call is detected, the call is offered to the application regardless of the amount of information available.

When the call is in the Offered state (after generation of the unsolicited GCEV_OFFERED event), the application sends an acknowledgement for the incoming call by issuing a **gc_CallAck(GCACK_SERVICE_INFO)**. The application may selectively retrieve call information, such as the Destination address and Origination address (caller ID), by issuing the **gc_GetCallInfo()** function. If more information is still required, the **gc_ReqMoreInfo()** function is issued to request more information. This function returns when the requested information is received. When all the required information is received, the technology call control layer sends a call proceeding indication to the remote side. The application may also attempt to send a call proceeding indication to the remote side in case the technology call control layer hasn't done so. The application can then choose to accept or answer the call.

3.5.1.8 Call Failure

The following are various causes of call failures:

Call Rejection

From the Offered state, the application may reject the call by issuing the **gc_DropCall()** function followed by the **gc_ReleaseCallEx()** function. See Figure 17.

Forced Release

From the Accepted state, not all E-1 CAS protocols support a forced release of the line; that is, issuing the **gc_DropCall()** function after the **gc_AcceptCall()** function. If a forced release is attempted, the function fails, and an error is returned. To recover, the application should issue the **gc_AnswerCall()** function followed by the **gc_DropCall()** and **gc_ReleaseCallEx()** functions. However, anytime a GCEV_DISCONNECTED event is received in the Accepted state, the **gc_DropCall()** function can be issued.

Task Failure

If a call fails at any point in the call establishment process, the call stays in its current state. In most cases, the application needs to drop and release the call to return the line device to the Null state. However, in some cases, such as call failure due to a trunk error, the application needs to use the **gc_ResetLineDev()** function to reset the line device to the Null state. For more information, see the **gc_DropCall()**, **gc_ReleaseCallEx()**, and **gc_ResetLineDev()** function descriptions in the *Global Call API Library Reference*.

3.5.1.9 Inbound Call Scenarios in Synchronous Mode

The following shows the various synchronous inbound call scenarios. For call scenarios used for a specific signaling protocol, check the *Global Call Technology User's Guide* for that technology.

Figure 18 shows a basic synchronous call scenario for an incoming call.

Figure 18. Synchronous Inbound Call Scenario

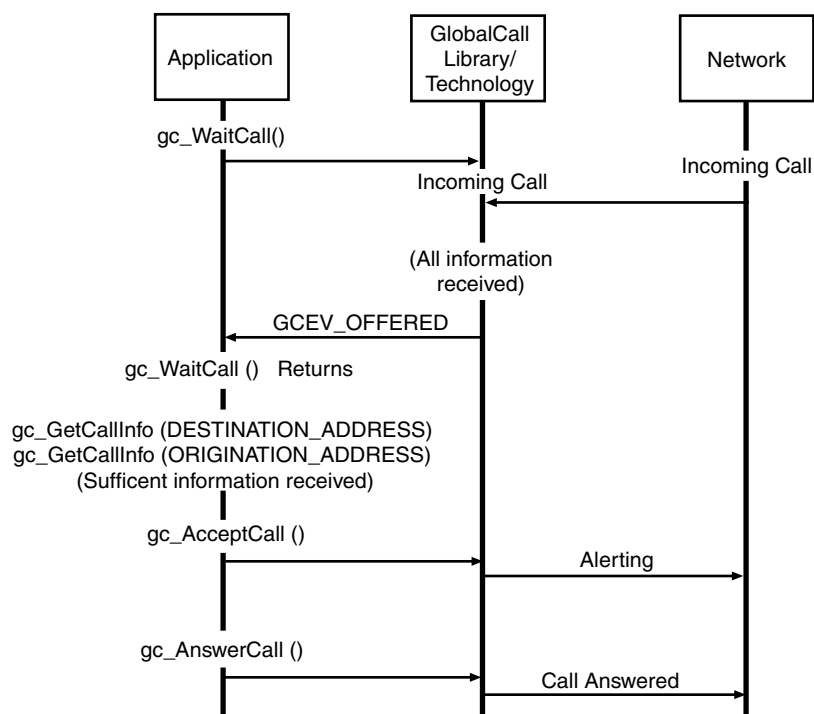


Figure 19 shows a basic synchronous call scenario for an incoming call with call acknowledgement.

Figure 19. Synchronous Inbound Call Scenario With Call Acknowledgement


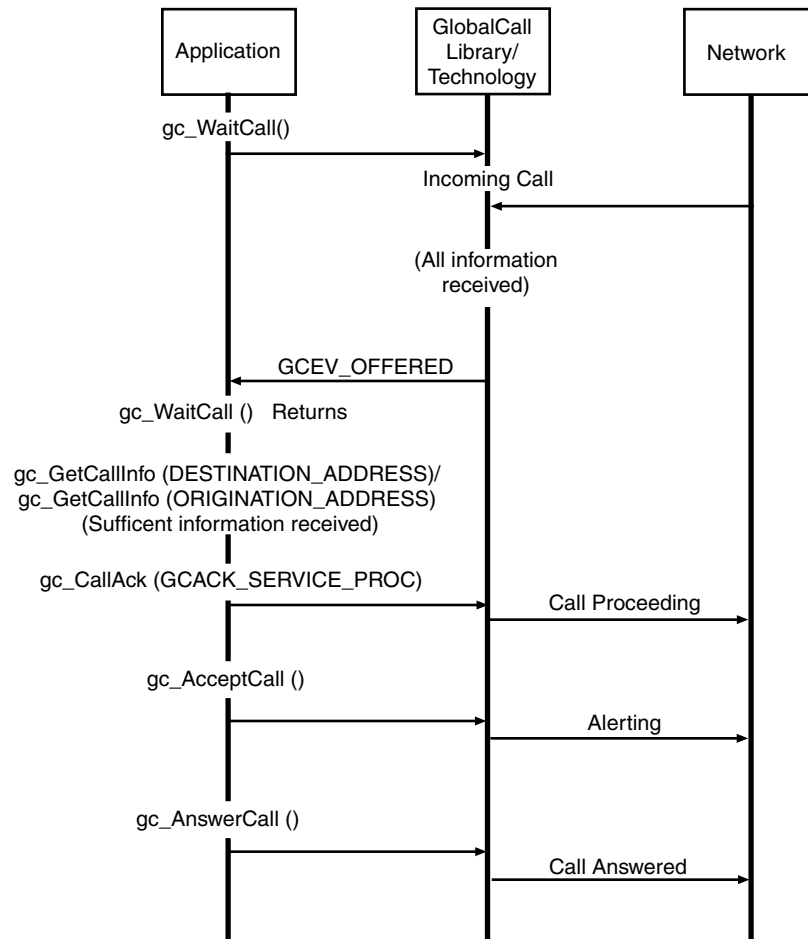


Figure 20 shows a basic synchronous call scenario for an incoming call with overlap receiving.

Figure 20. Synchronous Inbound Call Scenario With Overlap Receiving

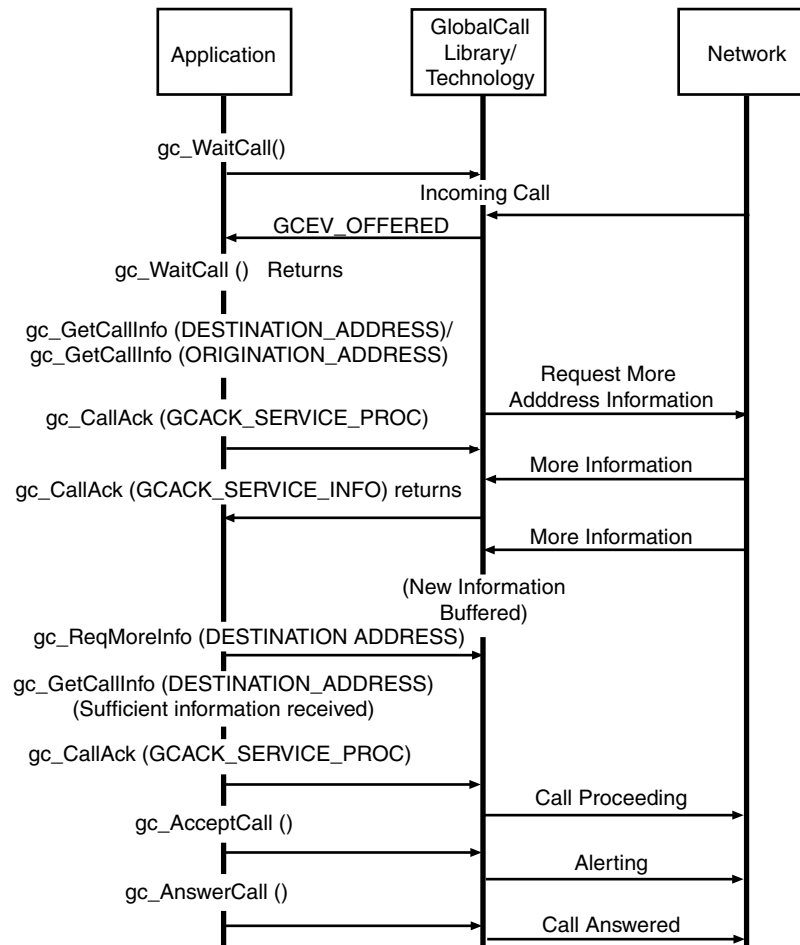

3.5.2 Outbound Calls in Synchronous Mode

This section describes how calls are established and shows a call scenario for synchronous outbound calls. The following topics describe the processing of outbound calls in synchronous mode:

- [Outbound Calls in Synchronous Mode Overview](#)
- [Channel Initialization](#)
- [Call Dialing](#)
- [Call Proceeding](#)
- [Call Alerting](#)
- [Call Connected](#)
- [Outbound Call Scenario in Synchronous Mode](#)

3.5.2.1 Outbound Calls in Synchronous Mode Overview

Figure 21 shows the outbound synchronous call model states. Table 10 shows a summary of call state transitions.

The overlap sending/receiving feature is **not** supported in the **outbound** synchronous call model. Typically, synchronous calls are made when the application does not need the intermediate function calls or events for establishing a call. However, the overlap feature **requires** intermediate state transitions where additional function calls need to be made. In addition, synchronous functions always return upon successful completion. But in the overlap mode, functions must return **before** successful completion due to an intermediate request for more information. Handling all the possible cases complicates the synchronous model.

Figure 21. Outbound Synchronous Call Process

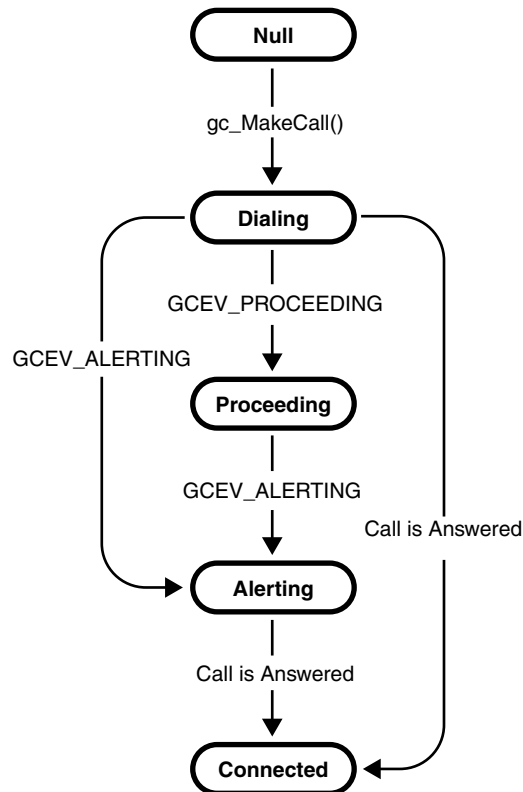


Table 10. Synchronous Outbound Call State Transitions

State	Previous/Next State	Valid Call State Transition Functions	Call Transition Events
Alerting (GCST_ALERTING) Maskable	Previous: Proceeding, Dialing, SendMoreInfo Next: gc_DropCall() -> Idle state	gc_DropCall()	GCEV_DISCONNECTED
Dialing (GCST_DIALING) Maskable	Previous: Null Next: gc_DropCall() -> Idle state	gc_DropCall()	GCEV_ALERTING, GCEV_DISCONNECTED
Null (GCST_NULL) Not Maskable	Previous: Idle Next: gc_MakeCall() -> Dialing state gcDropCall() -> Idle state	gc_MakeCall()	
Proceeding (GCST_PROCEEDING) Not Maskable	Previous: Dialing, SendMoreInfo Next: gc_DropCall() -> Idle state	gc_DropCall()	GCEV_DISCONNECTED, GCEV_ALERTING

3.5.2.2 Channel Initialization

In order to establish calls, the following conditions must be met:

- The condition of the line device must be unblocked. When a channel is initially opened, the initial condition of a line device is blocked. A “blocking” condition on a line device is indicated by the reception of a GCEV_BLOCKED event and an “unblocking” condition on a line device is indicated by the reception of a GCEV_UNBLOCKED event. The GCEV_BLOCKED and GCEV_UNBLOCKED events are sent as unsolicited events to the application in response to blocking alarms. For more information on blocking alarms and the GCEV_BLOCKED and GCEV_UNBLOCKED events, see [Section 4.3, “Blocked and Unblocked Event Handling”](#), on page 92. When the condition of the line device is unblocked, the line device is ready for establishing calls.
- The call state of the channel must be in the Null state. This is the initial call state of a line device when it is first opened. This state is also reached when a call is released or after the channel is reset by issuing **gc_ResetLineDev()**.

If the above conditions are met, the application is ready to receive inbound calls.

3.5.2.3 Call Dialing

To initiate an outbound call (see Figure 21 and Table 10) using the synchronous mode, the application issues the **gc_MakeCall()** function, which requests an outgoing call to be made on a specific line device. A CRN is assigned to the call being made on the specific line device. Dialing information is then sent to and acknowledged by the network. When the **gc_MakeCall()** function is issued in the synchronous mode, the function returns successfully when the call reaches the

Connected state. See the *Global Call Technology User's Guide* for your technology for valid completion points for the **gc_MakeCall()** function.

Some call related events indicating the status of the call may be generated, if enabled, while the **gc_MakeCall()** function is in progress.

3.5.2.4 Call Proceeding

The remote side may indicate that all the information was received and that the call is proceeding. In this case, the GCEV_PROCEEDING event is generated, if enabled, and the call transitions to the Proceeding state. The remote side may either accept or answer the call.

3.5.2.5 Call Alerting

If the remote end is not ready to answer the call, the GCEV_ALERTING event is generated, if enabled. This event indicates that the called party has accepted but not answered the call and that the network is waiting for the called party to complete the connection. At this stage the remote side is typically ringing. This GCEV_ALERTING event changes the call state to the Alerting state.


3.5.2.6 Call Connected

When the call is answered (the remote end makes the connection), the **gc_MakeCall()** function completes successfully and the call changes to the Connected state.

3.5.2.7 Outbound Call Scenario in Synchronous Mode

Figure 22 shows a synchronous outbound call scenario. For call scenarios used for a specific signaling protocol, check the *Global Call Technology User's Guide* for that technology.

Figure 22. Outbound Call Scenario in Synchronous Mode

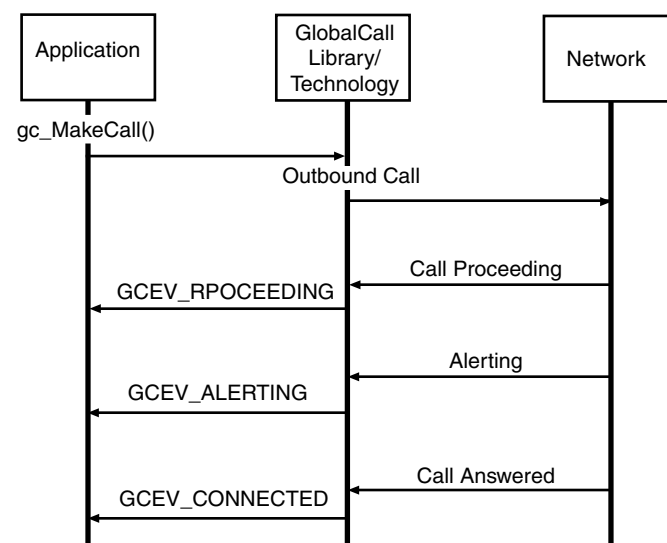

3.5.3 Call Termination in Synchronous Mode

This section describes how calls are terminated and shows call scenarios for synchronous call terminations. The following topics describe the processing of outbound calls in synchronous mode:

- [Call Termination in Synchronous Mode Overview](#)
- [User Initiated Termination](#)
- [Network Initiated Termination](#)
- [Call Release](#)
- [Call Termination Call Control Scenarios in Synchronous Mode](#)

3.5.3.1 Call Termination in Synchronous Mode Overview

Figure 23 illustrates the call states associated with call termination or call tear-down in the synchronous mode initialized by either call disconnection or failure. Table 11 summarizes the call state transitions. A call can be terminated by the application or detection of a call disconnect from the network. Either of these terminations can occur at any point in the process of setting up a call and during any call state.

Figure 23. Synchronous Call Tear-Down State Diagram

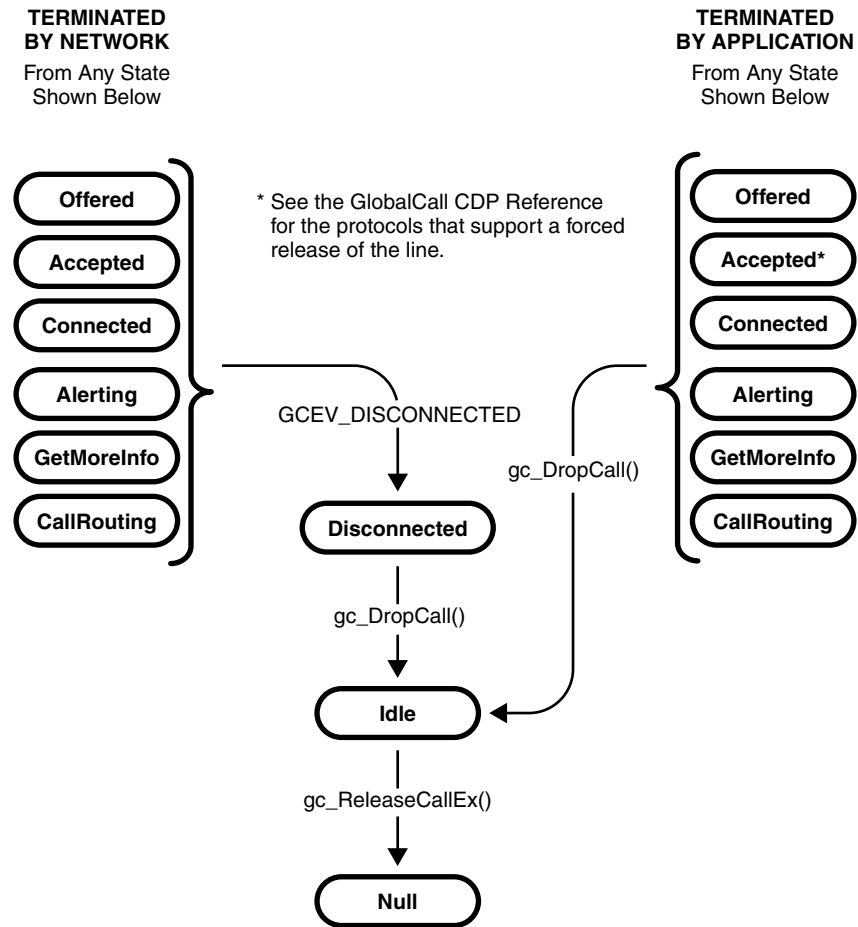


Table 11. Synchronous Call Termination Call State Transitions

State	Previous/Next State	Valid Call State Transition Functions	Call Transition Events
Disconnected (GCEV_DISCONNECTED) Not maskable	Previous: Offered, Accepted, Connected, Alerting, GetMoreInfo, CallRouting, Next: gc_DropCall() -> Idle state.	gc_DropCall()	
Idle (GCST_IDLE) Not Maskable	Previous: Offered, Accepted, Connected, Alerting, GetMoreInfo, CallRouting, Disconnected Next: gc_ReleaseCallEx() -> Null	gc_ReleaseCallEx()	

3.5.3.2 User Initiated Termination

The application terminates a call by issuing a **gc_DropCall()** function that initiates disconnection of the call specified by the CRN. This **gc_DropCall()** function causes the call to change from the current call state to the Idle state. In the Idle state, the call has been disconnected and the application must issue a **gc_ReleaseCallEx()** function to free the line device for another call. This **gc_ReleaseCallEx()** function instructs the driver and firmware to release all system resources committed to servicing the call and causes the call state to change to the Null state.

3.5.3.3 Network Initiated Termination

When a network call termination is initiated, an unsolicited GCEV_DISCONNECTED event is generated. This event indicates the call was disconnected at the remote end or an error was detected, which prevented further call processing. The GCEV_DISCONNECTED event causes the call state to change from the current call state to the Disconnected state. In the Disconnected state, the user issues the **gc_DropCall()** function to disconnect the call. The **gc_DropCall()** function is equivalent to *set hook ON*. This **gc_DropCall()** function causes the call state to change to the Idle state. In the Idle state, the **gc_ReleaseCallEx()** function must be issued to release all internal resources allocated for the call.

3.5.3.4 Call Release

Once in the Idle state, the call has been disconnected and the application must issue a **gc_ReleaseCallEx()** function to free the line device for another call. The **gc_ReleaseCallEx()** function releases all internal system resources committed to servicing the call and the call state transitions to the Null state.

3.5.3.5 Call Termination Call Control Scenarios in Synchronous Mode

This section shows synchronous call termination scenarios. For call scenarios used for a specific signaling protocol, check the *Global Call Technology User's Guide* for that technology.

Figure 24 shows a synchronous user-initiated call termination scenario.

Figure 24. User Initiated Call Termination Scenario in Synchronous Mode


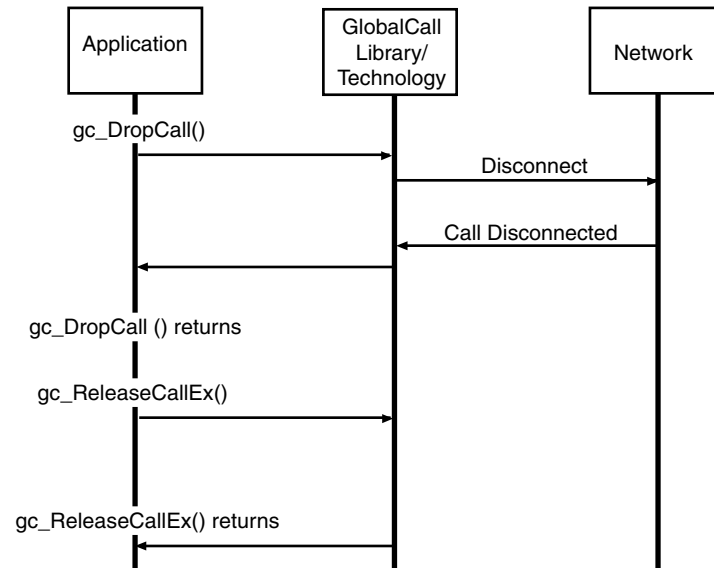


Figure 25 shows a synchronous network-initiated call termination scenario.

Figure 25. Network Initiated Synchronous Call Termination Scenario

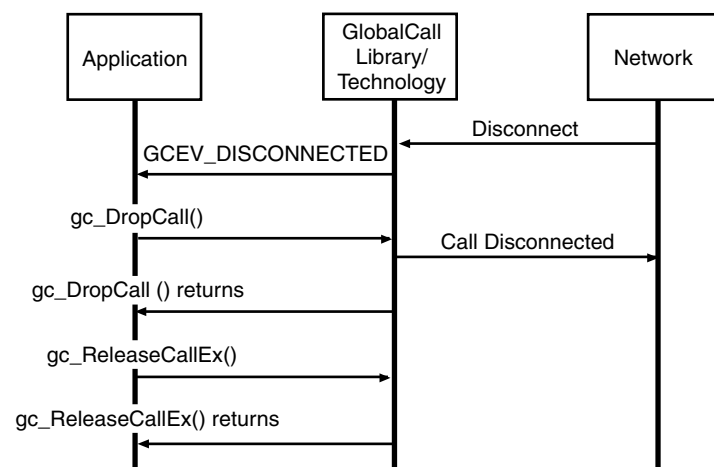

3.5.4 Handling Unsolicited Events

The application must handle unsolicited events in the synchronous mode, unless these events are masked or disabled. The `gc_SetConfigData()` function specifies the events that are enabled or disabled for a specified line device. This function sets the event mask associated with the specified line device. If an event bit in the mask is cleared, the event is disabled and not sent to the application.

The unsolicited events listed in Table 12 require a signal handler if they are enabled. Unsolicited events that cannot be masked must use a signal handler. All technology-specific unsolicited events also require a signal handler (see the appropriate *Global Call Technology User's Guide* for details). If any of these unsolicited events are not masked by the application and signal handlers are not defined, they are queued without being retrievable and memory problems are likely to occur.

Table 12. Unsolicited Events Requiring Signal Handlers

Event	Default Setting	Maskable
GCEV_ALERTING	enabled	yes
GCEV_PROCEEDING	disabled	yes
GCEV_DETECTED	disabled	yes
GCEV_BLOCKED	enabled	yes
GCEV_UNBLOCKED	enabled	yes
GCEV_DISCONNECTED	enabled	no
GCEV_TASKFAIL	enabled	no

3.6 Advanced Call Control with Call Hold and Transfer

This section describes the advanced call stat model. Topics include:

- [Advanced Call State Model Overview](#)
- [Advanced Call States for Hold and Transfer](#)
- [Call Hold](#)
- [Call Transfer](#)

3.6.1 Advanced Call State Model Overview

The advanced call model provides additional call control functionality over the basic call model, adding the ability to transfer calls, place calls on hold and retrieve calls on hold. This section provides brief descriptions of the API functions used to hold, retrieve, and transfer calls and

describes the call state transitions that occur when the functions are used. This section also provides figures that illustrate the call state transitions for advanced call model functions.

Note: The hold, retrieve, and transfer functions are supported by particular protocols for the ISDN, E-1 (PDKRT only) and T-1 (PDKRT only) technologies. For more information, see the function descriptions in the *Global Call API Library Reference* and the appropriate *Global Call Technology User's Guide*.

3.6.2 Advanced Call States for Hold and Transfer

Two advanced call states are appended to the basic call model to support call hold and transfer. These advanced call states are as follows:

On-Hold State (GCST_ONHOLD)

A call must be in the Connected call state to be put on hold. When a call is put on hold, the remote party is often routed via the local switch or network to receive background music while temporarily suspended from conversing with the local party. The call remains on hold until the application retrieves the call, effectively re-transitioning it into the Connected, “conversational” state. The application may not issue a **gc_MakeCall()** or receive another call while a call is in the On-hold state.

There is no limit to the number of times a call may be placed in and retrieved from the On-hold state. In addition, either the called party or the calling party can put the call in the On-hold state.

The On-hold call state applies only to call scenarios where a single call is present on the specified channel. The On-hold call state does not apply to call transfer scenarios that use the On-Hold Pending Transfer call state instead.

On-Hold Pending Transfer State (GCST_ONHOLDPENDINGTRANSFER)

During a supervised call transfer, two calls are made accessible to the local channel. Both calls must be in the Connected call state. The call that is temporarily suspended from conversing is considered to be in the On-hold Pending Transfer call state. This call is often routed via the local switch or network to receive background music while awaiting completion of the call transfer.

Both the suspended call and the currently active call may be swapped at any time so that the call that was in the On-hold Pending Transfer state is now actively connected, while the former active call is placed in the On-hold Pending Transfer state. There is no limit to the number of times two calls may be swapped between the On-hold Pending Transfer and “Connected” states. The completion of the call transfer is independent of which call is active or on hold.

3.6.3 Call Hold

The advanced call model allows the application to place a call on hold. The Global Call API provides the following functions to place a call on hold and, subsequently, to retrieve the call on hold:

gc_HoldCall()

place a call on hold


gc_RetrieveCall()

retrieve a call from hold

The **gc_HoldCall()** function places an active call in the On-hold (GCST_ONHOLD) state. The **gc_RetrieveCall()** function retrieves the call from the GCST_ONHOLD state and returns it to the Connected (GCST_CONNECTED) state.

Figure 26 illustrates the transition between call states when a call is put on hold and then retrieved.

Figure 26. Call State Transitions for Hold and Retrieve

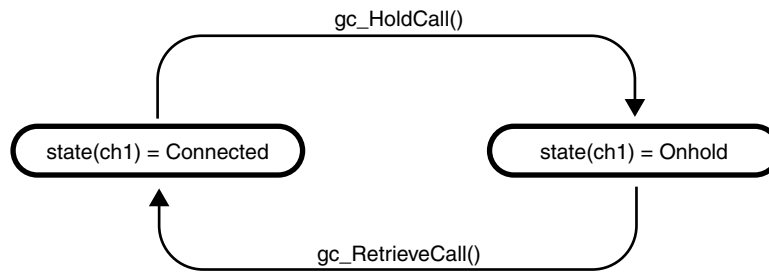

Calls in the On-hold state must be returned to the Connected state before they can be dropped. Calls are dropped following the Basic Call scenario. See [Section 3.4, “Basic Call Control in Asynchronous Mode”](#), on page 39 and [Section 3.5, “Basic Call Control in Synchronous Mode”](#), on page 66 for more information.

3.6.4 Call Transfer

This section describes the different types of call transfer. Topics include:

- [Call Transfer Overview](#)
- [Supervised Transfers](#)
- [Unsupervised Transfers](#)

3.6.4.1 Call Transfer Overview

There are two types of call transfers:

Supervised transfers

the person transferring the call stays on the line, announces the call, and consults with the party to whom the call is being transferred before the transfer is completed

Unsupervised transfers

the call is sent without any consultation or announcement by the person transferring the call. Unsupervised transfers are also known as one-step transfers or blind transfers

Supervised transfers use the following Global Call API functions:

gc_SetUpTransfer()

initiates a supervised transfer

gc_CompleteTransfer()

completes a supervised transfer

gc_SwapHold()

switches between the consultation call and the call pending transfer

Unsupervised transfers use the following Global Call API function:

gc_BlindTransfer()

initiates and completes an unsupervised (one-step) transfer

3.6.4.2 Supervised Transfers


A supervised transfer begins with a successful call to the **gc_SetUpTransfer()** function. The following steps describe how the transfer is completed:

1. Successful call to the **gc_SetUpTransfer()** function changes the state of the original call to the GCST_ONHOLDPENDINGTRANSFER state.
2. A consultation CRN is allocated with the initial state of GCST_DIALTONE and is returned by the **gc_SetUpTransfer()** function.
3. The **gc_MakeCall()** function is called to establish a connection on the consultation call. The CRN returned by **gc_MakeCall()** is the same CRN as was returned by **gc_SetUpTransfer()**.
4. The consultation call proceeds similarly to a singular outbound call proceeding through the GCST_DIALING and GCST_ALERTING (if enabled) call states. (See [Section 3.4, “Basic Call Control in Asynchronous Mode”](#), on page 39 and [Section 3.5, “Basic Call Control in Synchronous Mode”](#), on page 66 for more information.)
5. If the consultation call is successfully established, the state of the consultation call changes to the GCST_CONNECTED state, and the state of the original call remains unchanged.
6. While the consultation call is in the GCST_CONNECTED state, the **gc_SwapHold()** function may be used to switch between the call pending transfer and the consultation call.
7. A call to the **gc_CompleteTransfer()** function transfers the original call to the consultation call and internally drops both channels.
8. The states of the original and the consultation call both change to the GCST_IDLE state upon receipt of the GCEV_COMPLETETRANSFER event.
9. The application must call **gc_ReleaseCallEx()** for both of the calls to release the resources allocated for both channels.

Note: The consultation call may be terminated at any point in the process by the application or by the detection of a call disconnect from the network.

The following diagram illustrates the call state transitions that occur in a supervised transfer.

Figure 27. Supervised Transfer Call State Model

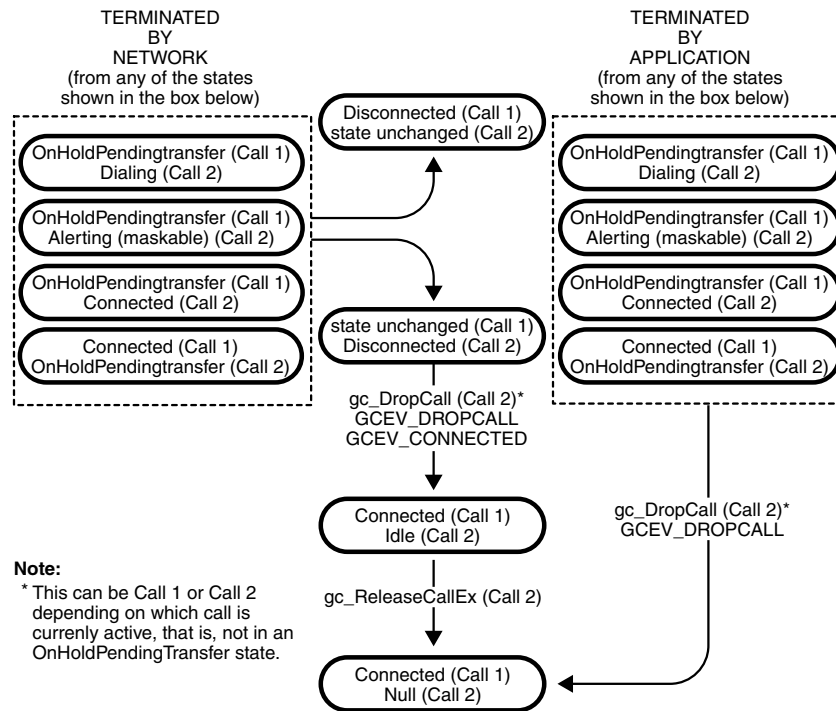

3.6.4.3 Unsupervised Transfers


In an unsupervised transfer, a successful call to the **gc_BlindTransfer()** function transfers the call in a single step, without any consultation or announcement by the person transferring the call. Internally, the currently connected call is placed on hold, the new party is dialed, and, finally, the connection to both parties is relinquished. When the application receives the **GCEV_BLINDTRANSFER** event, the original call enters the **GCST_IDLE** state. At this point the application must call **gc_ReleaseCallEx()** for the call to release the allocated resources.

Once the new party is dialed, the control and responsibility for the results of the transfer, whether successfully connected or not, lie totally with the remote party once the transfer is relinquished. Only one call is controlled by the application as the transfer is initiated internally via the protocol.

Unsupervised transfers do not provide call progress results for the transfer nor do they support terminating the transfer at any point via the **gc_DropCall()** function.

The following diagram illustrates the call state transitions that occur in an unsupervised transfer.

Figure 28. Unsupervised Transfer Call State Model

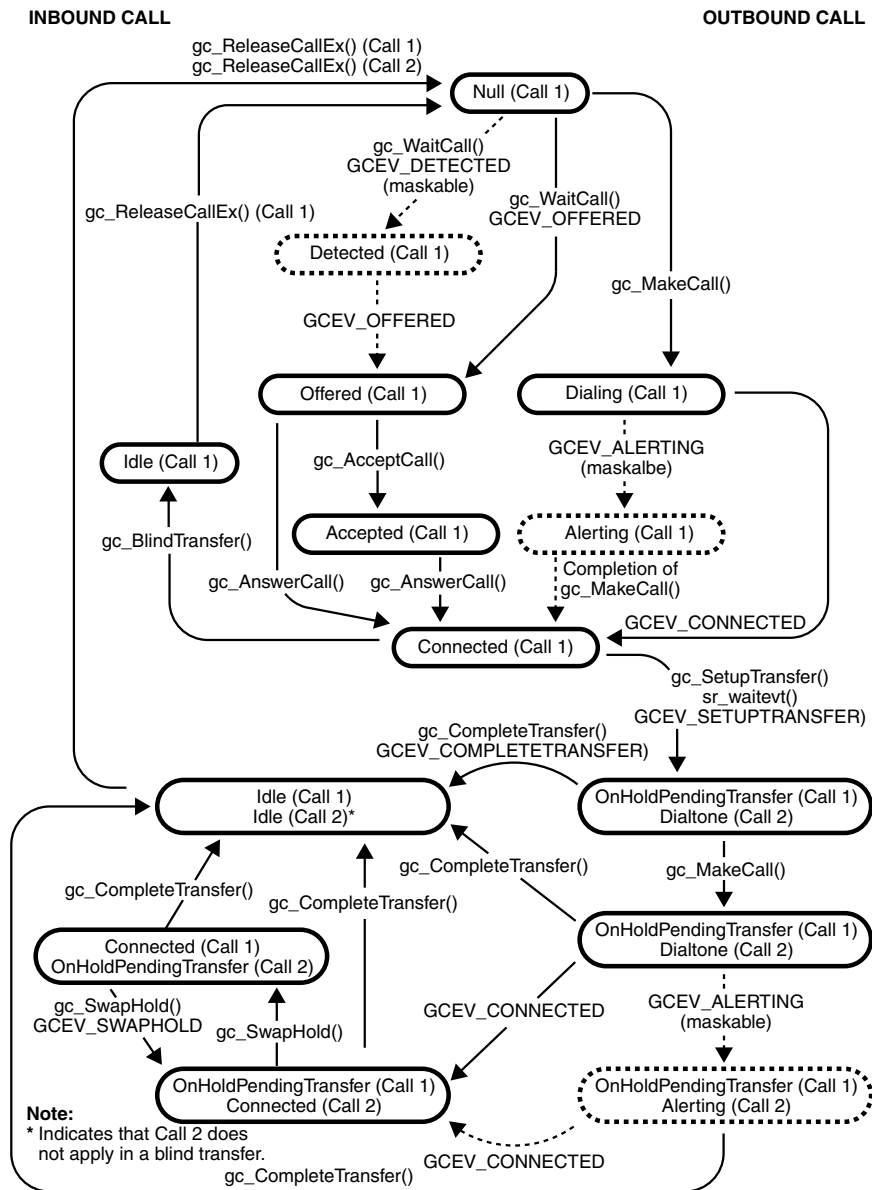

This chapter describes how Global Call handles events generated in the call state model. Topics include:

- Overview of Event Handling 91
- Event Categories 91
- Blocked and Unblocked Event Handling. 92
- Event Retrieval. 93
- Events Indicating Errors 94
- Masking Events 94
- Event Handlers. 94

4.1 Overview of Event Handling

The Global Call protocol handler continuously monitors the line device for events from the network. As each call is processed through its various states, corresponding events are generated and passed to the application. An overview of Global Call event categories is provided in this chapter. Specific event definitions are described in the *Global Call API Library Reference*. See the appropriate *Global Call Technology User's Guide* for technology-specific event information.

4.2 Event Categories

The events that can occur when using the Global Call API are divided into the following categories:

Termination

Events returned after the termination of a function. Termination events apply to asynchronous programming only.

Notification

Events that are requested by the application and provide information about a function call. Notification events apply to synchronous and asynchronous programming.

Unsolicited

Events triggered by, and providing more information about, external events. Unsolicited events apply to synchronous and asynchronous programming.

See the *Global Call API Library Reference* for detailed information about each event and the appropriate *Global Call Technology User's Guide* for any technology-specific event information.

4.3 Blocked and Unblocked Event Handling

Global Call uses the concept of *blocked* and *unblocked* conditions for line devices. By default, when the **gc_OpenEx()** function is used to open a line device, the line device is in a blocked condition meaning that the application can not perform call related functions on the line device, such as waiting for a call or making a call. The application must wait for the GCEV_UNBLOCKED event before waiting for a call or making a call.

Note: Since, by default, the line device is initially in the blocked condition, the application does **not** receive an initial GCEV_BLOCKED event.

Circumstances can occur, such as a blocking layer 1 (physical) alarm or the remote side going out of service, that cause a line device to move to a blocked condition. When this happens, the application receives a GCEV_BLOCKED event. When the line device is in the blocked condition, the application can only perform a small subset of the valid functions for line devices. The functions common to all interface technologies and that can be used while a line device is in the blocked condition are:

- **gc_DropCall()**
- **gc_ReleaseCall()**
- **gc_ReleaseCallEx()**
- **gc_Close()**
- Functions related to alarm processing and retrieving alarm information, for example, **gc_AlarmName()**.
- Functions related to error processing, for example, **gc_ErrorInfo()**.
- Functions related to event processing, for example, **gc_ResultInfo()**, **gc_GetMetaevent()** and **gc_GetMetaeventEx()**.
- Functions related to retrieving information about the call control libraries, for example, **gc_CCLibIDToName()**.
- **gc_AttachResource()** and **gc_Detach()**

As indicated in the list above, the application may drop and release calls while a line device is in the blocked condition, but it should **not** do so in response to the GCEV_BLOCKED event. If a call is active, typically a GCEV_DISCONNECTED event arrives either just before or just after the GCEV_BLOCKED event, at which point the application should drop and release the call indicated by the GCEV_DISCONNECTED event.

Note: The Global Call term *blocked* does not refer to the signaling bits indicating a blocked condition as defined in some network interface technologies, although the line device may move to a blocked condition as a consequence of the signaling bits indicating a blocked condition.

At some point, the application may receive a GCEV_UNBLOCKED event, indicating that the conditions blocking a line device have been removed and the line device has now returned to the unblocked condition. The application can once again use the any valid function on the line device.

The reception of the GCEV_BLOCKED and GCEV_UNBLOCKED events may be disabled using the **gc_SetConfigData()** function. The default is that these events are enabled. However, disabling the reception of these events is **not** recommended since the application will not be notified of these

critical events. In addition, if the GCEV_BLOCKED event is disabled, some functions will fail with a reason of EGC_INVALIDSTATE, which may cause confusion. For more information on blocking alarms and the GCEV_BLOCKED and GCEV_UNBLOCKED events, see [Section 8.2.1, “Generation of Events for Blocking Alarms”](#), on page 123.

Note: A GCEV_UNBLOCKED event will be generated when opening a board device. A GCEV_BLOCKED event will also be generated if there are blocking alarms on the board and the corresponding GCEV_UNBLOCKED event will be generated when the blocking alarms clear. The application must be prepared to handle these events.

4.4 Event Retrieval

All events are retrieved using the current Standard Runtime Library (SRL) event retrieval mechanisms (see the *Standard Runtime Library API Programming Guide* for details), including event handlers. The **gc_GetMetaEvent()** function or, for Windows extended asynchronous models, the **gc_GetMetaEventEx()** function, maps the current SRL event into a metaevent. A metaevent is a data structure that explicitly contains the information describing the event. This data structure provides uniform information retrieval among all call control libraries.

For Global Call events, the structure contains Global Call related information (CRN and line device) used by the application. For events that are not Global Call events, the Intel® Dialogic® device descriptor, the event type, the event data pointer to the variable length data and the length of the variable data are available through the METAEVENT structure. Since event data is present in the metaevent and thus will be stored in the METAEVENT structure, corresponding SRL calls to obtain event information need not be made.

The LDID associated with an event is available from the linedev field of the metaevent. The CRN associated with each event is available from the crn field of the metaevent (only if the event is related to the CRN). If the CRN is 0, then the event is not a call-related event.

Late events are events that arrive for a released CRN. Late events can occur if the **gc_ReleaseCallEx()** function is issued before the application has retrieved all of the termination events. To avoid late events, the application should issue a **gc_DropCall()** function before issuing the **gc_ReleaseCallEx()** function. Failure to issue this function could result in one or more of the following problems:

- memory problems due to memory being allocated and not being released
- blocking condition
- events sent to the previous user of a CRN could be processed by a later user of the CRN with unexpected results

The reason for an event is retrieved using the **gc_ResultInfo()** function. The information returned uniquely identifies the cause of the event.

4.5 Events Indicating Errors

Two events that explicitly provide error indications are as follows:

GCEV_TASKFAIL

Received when an API function call fails

GCEV_ERROR

Received in an unsolicited manner when an internal component fails

When either of these events is received, the application should call **gc_ResultInfo()** immediately after the event arrives to determine the reason for the event. The data structure associated with **gc_ResultInfo()** can contain reason information provided by Global Call and additional reason information provided by the underlying call control library. See the *Global Call API Library Reference* for more information.

4.6 Masking Events

Some events are maskable. See the **gc_SetConfigData()** function description in the *Global Call API Library Reference* for specific information regarding enabling and disabling events.

4.7 Event Handlers

An event handler is a user-defined function called by the SRL to handle a specific event that occurs on a specified device.

This subsection was not listed in the mapping spreadsheet, so it is unclear whether it should really map to this location rather than the Event Handling module. Typically, in a Windows environment, processing events within a thread or using a separate thread to process events tends to be more efficient than using event handlers. However, if event handlers are used, such as when an application is being ported from Linux, then you must use the asynchronous with SRL callback model.

The following guidelines apply to using event handlers:

- more than one handler can be enabled for an event. The SRL calls **all** specified handlers when the event is detected
- handlers can be enabled or disabled from any thread
- general handlers can be enabled to handle **all** events on a specific device
- a handler can be enabled to handle **any** event on **any** device
- synchronous functions cannot be called from a handler

By default, when the **sr_enbhdr()** function is first called, a thread internal to the SRL is created to service the application-enabled event handlers. This SRL handler thread exists as long as one handler is still enabled. The creation of this internal SRL event handler thread is controlled by the **SR_MODELTYPE** value of the SRL **sr_setparm()** function. The SRL handler thread should be:

- enabled when using the asynchronous with SRL callback model. Enable the SRL event handler thread by **not** specifying the **SR_MODELTYPE** value (default is to enable) or by setting this value to **SR_MTASYNC** (do **not** specify **SR_STASYNC**).
- disabled when using an application-handler thread wherein a separate event handler thread is created within the application that calls the **sr_waitvt()** and **gc_GetMetaEvent()** functions. For an application-handler model, use the asynchronous with SRL callback model **but** set the **SR_MODELTYPE** value to **SR_STASYNC** to disable the creation of the internal SRL event handler thread.

Note: An application-handler thread must **not** call any synchronous functions.

See the *Standard Runtime Library (SRL) Programming Guide* for your operating system for the hierarchy (priority) order in which event handlers are called.

The chapter describes the error handling capabilities provided by Global Call. Topics include the following:

- [Error Handling Overview](#) 97
- [Fatal Error Recovery](#) 98

5.1 Error Handling Overview

When an error occurs during execution of a function, one of the following occurs:

- The function returns with a value < 0
- The unsolicited error event, `GCEV_TASKFAIL`, is sent to the application

Call control libraries supported by the Global Call API may have a larger set of error codes than those defined in the *gcerr.h* header file. The call control library error values are available using the **gc_ErrorInfo()** function, which retrieves Global Call and call control library information. To retrieve the information, this function must be called immediately after the Global Call function failed. This function returns a result value associated directly with the Global Call and call control library.

The **gc_ResultInfo()** function retrieves information about solicited and unsolicited events when a Global Call application gets an expected or unexpected event. To retrieve the information, the **gc_ResultInfo()** function must be called immediately after a Global Call event arrives and before the next event returns Global Call and call control library information related to the last Global Call function call. To process an error, this function must be called immediately after an event is returned to the application. For example, if an alarm occurs while making an outbound call, a `GCEV_DISCONNECTED` event is sent to the application with a result value indicating an alarm on the line. The `GCEV_BLOCKED` event is also generated with a result value that also indicates an alarm on the line. See the appropriate *Global Call Technology User's Guide* for information on specific protocol errors.

If an error occurs during execution of an asynchronous function, a termination event, such as the `GCEV_GETCONFIGDATA_FAIL`, or `GCEV_SETCONFIGDATA_FAIL` event is sent to the application. No change of state is triggered by this event. If events on the line require a state change, this state change occurs as described in [Section 3.4.3, “Call Termination in Asynchronous Mode”](#), on page 62. When an error occurs during a protocol operation, the error event is placed in the event queue with the error value that identifies the error. Upon receiving a `GCEV_TASKFAIL` event, the application can retrieve the reason for the failure using the **gc_ResultInfo()** function.

An unsolicited `GCEV_ERROR` event can be received if an internal component fails. The **gc_ResultInfo()** function can be used to determine the reason for the event. Valid reasons are any of the Global Call reasons (error code or result values) or a call control library-specific reason (see the appropriate *Global Call Technology User's Guide*).

5.2 Fatal Error Recovery

A fatal error can be defined as any error that will cause a channel to hang. There are several types of fatal errors:

- Fatal errors where a recovery attempt is possible via sending the protocol a protocol reset command.
- Fatal errors where no recovery attempt is possible except by closing the channel and re-opening it.
- Fatal errors where no recovery attempt is possible; the application must be shut down and restarted. An example of this is an internal error in a call control library. Normally, this should not occur.

The following fatal error recovery scenario is only possible when using PDKRT protocols.

When a fatal error where an internal recovery attempt is possible is caught, the application is notified by the `GCEV_FATALERROR` event, with a result value of `GCRV_RESETTABLE_FATALERROR`, that a recovery from a fatal error is in progress. The application then assumes a `gc_ResetLineDev()` has been done and waits for the `gc_ResetLineDev()` completion event (`GCEV_RESETLINEDDEV`). The application does not need to drop any active calls; dropping of calls occurs automatically.

When a fatal error where an internal recovery attempt is not possible, but an error that is non-fatal is caught, the application is notified by the `GCEV_FATALERROR` event, with a result value of `GCRV_RECOVERABLE_FATALERROR`, indicating that the application needs to issue a `gc_Close()` followed by a `gc_OpenEx()`.

When a fatal, non-recoverable error is caught, the application is notified by the `GCEV_FATALERROR` event with a result value of `GCRV_NONRECOVERABLE_FATALERROR`. The application must then shut down. The firmware should then be reloaded, and the application restarted.

If the application makes any requests while the recovery process is in progress, the request will fail. In asynchronous mode, the application is notified by a `GCEV_TASKFAIL` event with a reason of `GCRV_FATALERROR_OCCURRED`. In synchronous mode, the application receives a -1 indicating that an error has occurred. The error value for the failure is `EGC_FATALERROR_OCCURRED`. Similarly, if any requests are in the queue, a check is performed to see if fatal error recovery is in progress. If it is in progress, then the request will fail with a reason of `GCRV_FATALERROR_OCCURRED`.

The following errors are not handled automatically:

- errors during open
- errors during close
- errors during start
- errors during stop
- lack of dynamic memory
- recursive errors (errors that occurred while recovering)

For a listing of the error codes and result values used in fatal error recovery, see the *Global Call API Library Reference*.

This chapter provides some tips when developing programs using Global Call. Topics include:

- General Programming Tips 101
- Tips for Programming Drop and Insert Applications 102
- Using Global Call with DM3 Boards 103
- Programming Tip When Using a DI/0408-LS-A Board 115

6.1 General Programming Tips

The following tips apply when programming with Global Call:

- When using Global Call functions, the application must use the Global Call handles (that is, the line device ID and CRN) to access Global Call functions. Do not substitute a network, voice or media device handle for the Global Call line device ID or CRN. If the application needs to use a network, voice or media device handle for a specific network or voice library call, for example, **nr_scroute()** or **dx_play()**, you must use the **gc_GetResourceH()** to retrieve the network, voice or media device handle, associated with the specified Global Call line device. The **gc_GetResourceH()** function is only needed if the voice or media resource is associated with a Global Call line device. If a voice resource is not part of the Global Call line device, the device handle returned from the **dx_open()** call should be used.
- Do not access the underlying call control libraries directly. All access **must** be done using the Global Call library, that is, using Global Call (**gc_**) functions.
- Do not call any network library (**dt_**) function directly from your application that may affect the state of the line or the reporting of events, for example, **dt_settssig()**, **dt_setevtmask()**, or others.
- The GCEV_BLOCKED and the GCEV_UNBLOCKED events are line related events, not call related events. These events do not cause the state of a call to change.
- Before exiting an application:
 - Drop and release **all** active calls, using the **gc_DropCall()** and **gc_ReleaseCallEx()** functions.
 - Close **all** open line devices, using the **gc_Close()** function.
 - Stop the application, using the **gc_Stop()** function
- Before issuing **gc_DropCall()**, you must use the **dx_stopch()** function to terminate any application-initiated voice functions, such as **dx_play()** or **dx_record()**.
- In Windows environments, although asynchronous models are more complex than the synchronous model, asynchronous programming is recommended for more complex applications that require coordinating multiple tasks. Asynchronous programming can handle multiple channels in a single thread. In contrast, synchronous programming requires separate

threads. Asynchronous programming uses system resources more efficiently because it handles multiple channels in a single thread. Asynchronous models let you program complex applications easily, and achieve a high level of resource management in your application by combining multiple voice channels in a single thread. This streamlined code reduces the system overhead required for inter process communication and simplifies the coordination of events from many devices.

- In Windows environments, when calling the **gc_GetMetaEventEx()** function from multiple threads, ensure that your application uses unique thread-related METAEVENT data structures or ensure that the METAEVENT data structure is not written to simultaneously.

6.2 Tips for Programming Drop and Insert Applications

To the Global Call application, signaling is made available to the application as follows:

- Signaling information is passed to the Global Call application in the form of call control events; for example, line answer is passed as a GCEV_ANSWERED event.
- Signaling, such as line busy, is available to the application as an EGC_BUSY error code or a GCRV_BUSY result value; line no answer is available as an EGC_NOANSWER error code or GCRV_NOANSWER result value.
- Signaling such as a protocol error, an alerting event, a fast busy, an undefined telephone number, or network congestion are all returned to the application as an EGC_BUSY error code or a GCRV_BUSY result value.
- Protocols without acknowledgement, for example, non-backward CAS signaling protocols, generate a GCEV_DISCONNECTED event with an EGC_BUSY error code or a GCRV_BUSY result value when timeout or protocol errors occur during dialing.

For a drop and insert application in which the calling party needs to be notified of the exact status of the called party's line, the following approach may be used:

- Upon receipt of an incoming call from a calling party, issue a **gc_MakeCall()** function on the outbound line to the called party.
- After dialing completes on the outbound line, the application should drop the dialing resource, turn off call progress, and connect the inbound line to the outbound line so that the calling party can hear the tones returned on the outbound line. These tones provide positive feedback to the calling party as to the status of the called party's line.
- If the status of the called party's line is such that the call cannot be completed, the calling party hangs up and the application can then drop the call and release the resources used. Otherwise, when the call is answered, a GCEV_CONNECTED event will be received.

When call progress is being used, after dialing completes, the call progress software looks for ringback or voice on the outbound line. When ringback is detected, a GCEV_ALERTING event is generated. When voice is detected, a GCEV_ANSWERED event is generated. An unacceptable amount of time may lapse before either of these events is generated while the calling party is waiting for a response that indicates the status of the call. Thus, for drop and insert applications, call progress should be disabled as soon as dialing completes and the inbound and outbound lines connected so as to provide the calling party with immediate outbound line status and voice cut-through.

For a drop and insert application in which a call cannot be completed, the application can simulate and return a busy tone or a fast busy (redial) tone to the calling party. Typically, this condition occurs when a GCEV_DISCONNECTED event is generated due to a timeout or a protocol error during dialing or due to R2 backward signaling indicating a busy called party's line, equipment failure, network congestion or an invalid telephone number.

When a call cannot be completed because the called party's line is busy:

1. Use a tone or voice resource to generate a busy tone [60 ipm (impulses per minute)] or to record a busy tone.
2. Connect the busy tone to the calling party's line or play back the recorded busy tone file.
3. Drop and release the calling party's line when a GCEV_DISCONNECTED event is received.

When a call cannot be completed because of equipment failure, network congestion or an invalid telephone number:

1. Use a tone or voice resource to generate a fast busy tone (120 ipm) or to record a fast busy tone.
2. Connect the fast busy tone to the calling party's line or play back the recorded fast busy tone file.
3. Drop and release the calling party's line when a GCEV_DISCONNECTED event is received.

For voice function information, see the *Voice API Library Reference* for your operating system.

6.3 Using Global Call with DM3 Boards

The DM3 architecture is a powerful DSP architecture that provides you with greater channel density and performance for building CTI solutions on PCI and CompactPCI bus architectures. Global Call supports the development of applications that use DM3 boards. The following topics provide guidelines for using Global Call with DM3 boards:

- [Routing Configurations Overview](#)
- [Working with Flexible Routing Configurations](#)
- [Working with Fixed Routing Configurations](#)
- [Handling Multiple Call Objects Per Channel in a Glare Condition](#)

6.3.1 Routing Configurations Overview

When using DM3 boards, two types of routing configuration are supported:

flexible routing configuration

This configuration is compatible with R4 API routing on Springware boards; that is, Springware boards use flexible routing. Flexible routing is available for DM3 boards because available in Intel® Dialogic System Release 5.01. With flexible routing, the resource devices (voice/fax) and network interface devices are independent, which allows exporting and sharing of the resources. All resources have access to the TDM bus. For example, on a


DM/V960A-4T1 board, each voice resource channel device and each network interface time slot device can be independently routed on the TDM bus.

fixed routing configuration

This configuration is primarily for backward compatibility with R4 on DM3 in DNA 3.3 and Intel® Dialogic System Release 5.0. The fixed routing configuration applies only to DM3 boards. With fixed routing, the resource devices (voice/fax) and network interface devices are permanently coupled together in a fixed configuration. Only the network interface time slot device has access to the TDM bus. For example, on a DM/V960A-4T1 board, each voice resource channel device is permanently routed to a corresponding network interface time slot device on the same physical board. The routing of these resource and network interface devices is predefined and static. The resource device also does not have access to the TDM bus and so cannot be routed independently on the TDM bus. No off-board sharing or exporting of voice/fax resources is allowed.

The fixed routing configuration is one that uses permanently **coupled resources**, while the flexible routing configuration uses **independent resources**. From a DM3 perspective, the **fixed routing cluster** is restricted by its coupled resources and the **flexible routing cluster** allows more freedom by nature of its independent resources, as shown in Figure 29.

Figure 29. Cluster Configurations for Fixed and Flexible Routing

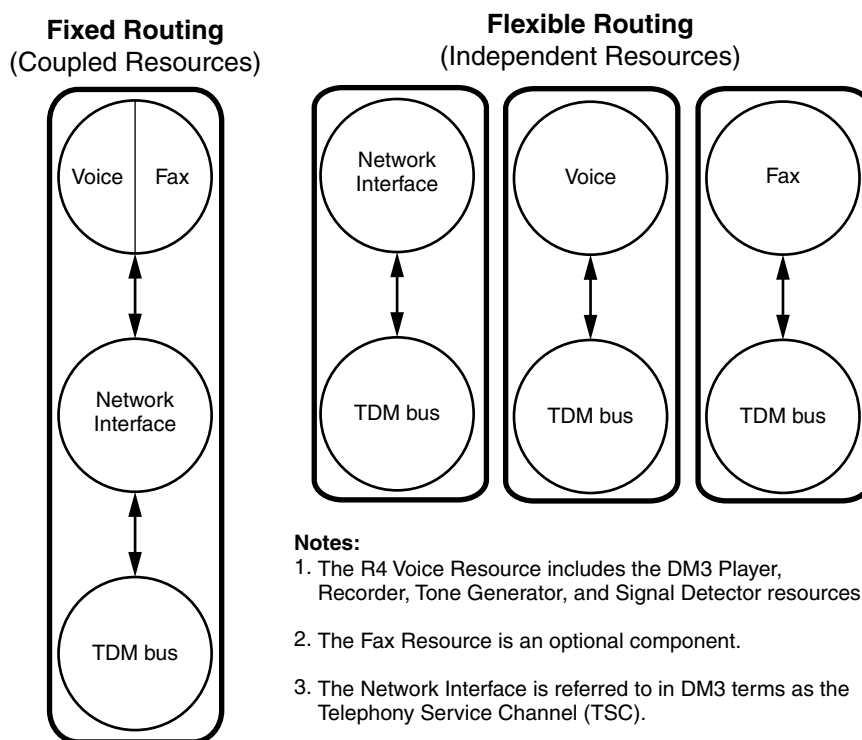

You select the routing configuration (fixed or flexible) when you assign a firmware file (PCD file) to each DM3 board. The routing configuration takes effect at board initialization.

The availability of flexible routing for a specific Intel® Dialogic product depends upon the software release in which the product is supported. Some products support fixed routing only while others support flexible routing only. In other cases, a choice of fixed or flexible routing is available.

You can only select the routing configuration at the product level. You cannot select the routing configuration at a resource level or configure a board to use fixed routing for some of its resources and flexible routing for other resources.

6.3.2 Working with Flexible Routing Configurations

The following topics provide more information about using Global Call with DM3 boards that use the flexible routing configuration:

- [Determining Channel Capabilities \(Flexible Routing\)](#)
- [Using Device Handles \(Flexible Routing\)](#)
- [Multi-Threading and Multi-Processing \(Flexible Routing\)](#)
- [Initializing an Application that Uses DM3 Boards \(Flexible Routing\)](#)
- [Initializing Global Call When Using DM3 Boards \(Flexible Routing\)](#)
- [Device Discovery for DM3 Boards and Springware Boards \(Flexible Routing\)](#)
- [Device Initialization Hint \(Flexible Routing\)](#)
- [Using Protocols with DM3 Boards \(Flexible Routing\)](#)
-

6.3.2.1 Determining Channel Capabilities (Flexible Routing)

DM3 boards support three different types of voice devices:

- E1 CAS compatible
- T1 CAS compatible
- ISDN compatible

The E1 CAS compatible is a superset of T1 CAS compatible, and the T1 CAS compatible is a superset of ISDN compatible.

When using Global Call, only certain DM3 network interface devices can be associated with certain other DM3 voice devices using **gc_OpenEx()** or **gc_AttachResource()**. Attaching DM3 devices together depends on the network protocol used and voice device capabilities. Specifically:

- A DM3 ISDN network device can be attached to any DM3 voice device.
- A DM3 T1 CAS network device must be attached to a T1 CAS compatible DM3 voice device.
- A DM3 E1 CAS network device must be attached to an E1 CAS compatible DM3 voice device.

Caution: When using **gc_OpenEx()** to open devices, or **gc_AttachResource()** to associate a network device with a resource device, you cannot mix DM3 and Springware devices. For example, you cannot attach a DM3 network interface device with a Springware voice device.

An application can query the capabilities of a device using the **dx_getfeaturelist()** function which includes information about the front end supported, meaning ISDN, TI CAS, or R2/MF. See the Voice API Library Reference for more information about the **dx_getfeaturelist()** function.

When using Global Call, if a voice device is not CAS or R2/MF capable, it cannot be attached (either in the **gc_OpenEx()** function or when using the **gc_AttachResource()** function) to a network interface device that has CAS or R2/MF loaded. Likewise, if a voice device is not routable, it cannot be used in a **gc_AttachResource()** call.

While a network interface protocol cannot be determined programmatically, the **dx_getfeaturelist()** function provides a programmatic way of determining voice capability so that the application can make decisions.

6.3.2.2 Using Device Handles (Flexible Routing)

For DM3 boards using a flexible routing configuration, you can use the same Global Call device initialization, handling, and routing procedures for DM3 devices as you use for Springware devices.

In general, when using DM3 or Springware boards, an application must use a device discovery procedure to become *hardware-aware*. To perform device discovery and identify whether a logical device belongs to a Springware board or a DM3 board, use the **gc_GetCTInfo()** function and check the `ct_devfamily` field in the `CT_DEVINFO` structure for a value of `CT_DFDM3`. See the Voice API Library Reference for more information on the `CT_DEVINFO` structure.

When using DM3 boards, application performance may be a consideration when opening and closing devices using Global Call. If an application must use Global Call to dynamically open and close devices as needed, it can impact the application's performance. One way to avoid this is to open all DM3 devices during application initialization and keep them open for the duration of the application, closing them only at the end.

6.3.2.3 Multi-Threading and Multi-Processing (Flexible Routing)

When using DM3 boards, the R4 APIs support multi-threading and multi-processing with some restrictions on multi-processing as follows:

- One specific channel can only be opened in one process at a time. There can, however, be multiple processes accessing different sets of channels. In other words, ensure that each process is provided with a unique set of devices to manipulate.
- If a channel was opened in process A and then closed, process B is then allowed to open the same channel. However, since closing a channel is an asynchronous operation when using R4 with DM3 boards, there is a small gap between the time when the `xx_close()` function returns in process A and the time when process B is allowed to open the same channel. If process B opens the channel too early, things could go wrong. For this reason, this type of sequence should be avoided.

6.3.2.4 Initializing an Application that Uses DM3 Boards (Flexible Routing)

DM3 devices have similar characteristics to Springware devices. The device must first be opened in order to obtain its handle, which can then be used to access the device functionality. Since applications use Global Call for call control (that is, for call setup and tear-down), all Intel® Dialogic network interface devices must be opened using the **gc_OpenEx()** function.

Note: When call control is not required, such as with ISDN NFAS, **dt_open()** can be used to open DM3 network interface devices.

Once the call has been established, voice and or data streaming should be done using the Intel® Dialogic Voice API. Functions such as **dx_playiottdata()**, **dx_reciottdata()**, and **dx_dial()** can be used. Of course, in order to do so, the voice device handle must be obtained.

Application initialization differs depending on the types of hardware and the APIs used. The simplest hardware and API scenario is that where the system contains only one type of board, so that the application uses either Springware boards or DM3 boards but not both. In these cases, the initialization routine is the simplest in that it does not need to discover the board family type. See [Section 6.3.2.5, “Initializing Global Call When Using DM3 Boards \(Flexible Routing\)”](#), on page 107 for more information.

Applications that want to make use of both Springware and DM3 devices must have a way of differentiating what type of device is to be opened. The Global Call routing function **gc_GetCTInfo()** provides a programming solution to this problem. DM3 hardware is identified by the CT_DFDM3 value in the ct_devfamily field of the CT_DEVINFO structure. Only DM3 devices will have this field set to CT_DFDM3. See [Section 6.3.2.6, “Device Discovery for DM3 Boards and Springware Boards \(Flexible Routing\)”](#), on page 109 for more information.

6.3.2.5 Initializing Global Call When Using DM3 Boards (Flexible Routing)

This scenario is one where an application uses only DM3 boards in a flexible routing configuration. When initializing an application to use boards based on the DM3 architecture, you must use Global Call to handle the call control. Initializing Global Call in a system with only DM3 boards is no different than initializing Global Call in a system with only Springware boards. This is because R4 is flexible enough to support the different methods of Global Call initialization for both ISDN and CAS protocols.

Take note of the following flexibility that exists for the **gc_OpenEx()** function when opening a Global Call line device on DM3 boards:

- Due to the nature of the DM3 architecture, the protocol name is irrelevant at the time of opening the Global Call line device; that is, the protocol name is ignored. Although it is not necessary to specify a protocol name, you can retain a protocol name in this field to support Springware boards and so as to retain compatibility with code for Springware boards. Also, when using R4 with boards based on the DM3 architecture, all protocols are bi-directional. You do not need to dynamically open and close devices to change the direction of the protocol.
- It is not necessary to specify a voice device name when opening a Global Call line device. If you specify the voice device name, the network interface device is automatically associated with the voice device (they are attached and routed on the TDM bus). If you do not specify the voice device name when you open the Global Call line device, you can separately open a voice

device, and then attach and route it to the network interface device. This flexibility allows you to port a Global Call application that uses Springware boards to an application that uses boards based on the DM3 architecture with little change and regardless of whether the application uses an ISDN or CAS protocol.

Note that when opening a Global Call line device for CAS protocols on Springware boards, the voice device name, network interface device name, and protocol name are required; otherwise the function fails. For ISDN protocols on Springware boards, it is invalid to specify a voice device name; otherwise the function fails. For boards that use the DM3 architecture in a flexible routing configuration, only the network device name is required.

The following procedure shows how to initialize Global Call when using DM3 boards. For some steps, two alternatives are described, depending upon whether you want your application to retain the greatest degree of compatibility with Global Call using an ISDN protocol or a CAS protocol on Springware boards. Since this procedure is oriented toward retaining compatibility with two common ways of initializing Global Call on Springware boards, it is not intended as a recommendation of a preferred way to initialize Global Call on DM3 boards. The Global Call API allows design flexibility. The procedure for Global Call initialization for a given application would depend on things such as whether Springware boards and DM3 boards are used in the same system, what protocol is used, the purpose of the application program, and its design.

Note: In Windows, use the **sr_getboardcnt()** function with the class name set to **DEV_CLASS_DTI** and **DEV_CLASS_VOICE** to determine the number of network and voice boards in the system, respectively.

1. Start/Initialize Global Call using **gc_Start()**.
2. Use **gc_OpenEx()** to open a Global Call line device.
 - Specify the network interface device name and the protocol name in the **devicename** parameter, as in the following example:
`" :N_dtiB1T1:P_ISDN"`
 - Alternatively, specify the network interface device name, the voice device name, and the protocol name in the **devicename** parameter, as in the following example:
`" :N_dtiB1T1:V_dxxxB1C1:P_ar_r2_io"`
3. Obtain the voice channel device handle.
 - Open a voice channel device (for example, **dxxxB1C1**) with **dx_open()** to get its handle.
 - Alternatively, if you specified the voice device name in the **devicename** parameter in step 2, use **gc_GetResourceH()**, with a **resourcetype** of **GC_VOICEDevice**, to get the handle.
4. Attach the voice and network interface devices.
 - Use **gc_AttachResource()** to attach the voice resource and the network interface line device.
 - Alternatively, if you specified the voice device name in the **devicename** parameter in step 2, the voice and network interface devices are attached by nature of the **gc_OpenEx()**, so no action is necessary for this step.
5. Use **gc_GetResourceH()**, with a **resourcetype** of **GC_NETWORKDevice**, to obtain the network interface time slot device handle that is associated with the line device.
6. Set up TDM bus full duplex routing between the network interface device and voice device.
 - Use **nr_scroute(FULL DUPLEX)**.

- Alternatively, if you specified the voice device name in the devicename parameter in step 2, the network interface device and voice device are automatically routed on the TDM bus by nature of the **gc_OpenEx()**.

Repeat steps 2 to 6 for all Global Call device line devices.

6.3.2.6 Device Discovery for DM3 Boards and Springware Boards (Flexible Routing)

The following procedure shows how to initialize an application and perform device discovery when the application supports DM3 and Springware boards.

Note: In Windows, use the **sr_getboardcnt()** function with the class name set to DEV_CLASS_DTI and DEV_CLASS_VOICE to determine the number of network and voice boards in the system, respectively.

1. Open the first network interface time slot device (for example, dtiB1T1) on the first trunk with **dt_open()**.
2. Call **dt_getctinfo()** and check the CT_DEVINFO.ct_devfamily value.
3. If ct_devfamily is CT_DFDM3, then flag all the network interface time slot devices associated with the trunk as DM3 type.
4. Close the DTI device with **dt_close()**.
5. Repeat steps 1 to 4 for each trunk.
6. Open the first voice channel device on the first voice board in the system with **dx_open()**.
7. Call **dx_getctinfo()** and check the CT_DEVINFO.ct_devfamily value.
8. If ct_devfamily is CT_DFDM3, then flag all the voice channel devices associated with the board as DM3 type.
9. Close the voice channel with **dx_close()**.
10. Repeat steps 6 to 9 for each voice board.
11. For those voice and network interface devices that are not DM3 devices, proceed with the standard initialization process for Springware boards as performed in the original application.
12. For those voice and network interface devices that are DM3 devices, proceed with the initialization as described in [Section 6.3.2.5, “Initializing Global Call When Using DM3 Boards \(Flexible Routing\)”](#), on page 107.

6.3.2.7 Device Initialization Hint (Flexible Routing)

In some applications, when **xx_open()** functions (Global Call, Voice, Fax) are issued asynchronously, it may cause slow device-initialization performance. Fortunately, you can avoid this particular problem quite simply by reorganizing the way the application opens and then configures devices. The recommendation is to do all **xx_open()** functions for all channels before proceeding with the next function. For example, you would have one loop through the system devices to do all the **xx_open()** functions first, and then start a second loop through the devices to configure them, instead of doing one single loop where a **xx_open()** is immediately followed by other API functions on the same device. With this method, by the time all **xx_open()** commands are completed, the first channel will be initialized, so you won't experience problems.

This change is not necessary for all applications, but if you experience poor initialization performance, you can gain back speed by using this hint.

6.3.2.8 Using Protocols with DM3 Boards (Flexible Routing)

For T-1 and ISDN protocols, the protocol to use is determined at board initialization time and not when opening a Global Call device. Protocol parameters are configured in the CONFIG file, which is then converted to an FCD file using the FCDGEN utility. The FCD file is then downloaded to the board. If a protocol is specified in the **devicename** parameter of the **gc_OpenEx()** command when opening a device, it is ignored.

For E-1 R2MF protocols, you can use the **DM3 PDK Manager** utility to select E-1 CAS R2MF protocols to use. The DM3 PDK Manager does not integrate Country Dependent Parameter (CDP) file information into the FCD file. Instead, it *hotloads* protocol information separately to the board after the FCD file is downloaded and the board is initialized. See the Intel® NetStructure™ on DM3 Architecture for cPCI Configuration Guide for information on the DM3 PDK Manager. The Global Call protocols suitable for use with DM3 boards are available on a separate Global Call Protocols Package CD. Contact Technical Support for more information. Once the protocols have been hotloaded to the board, the protocol to use can be specified in the **devicename** parameter of the **gc_OpenEx()** command.

6.3.2.9 Country Dependent Parameter (CDP) Files

For T-1 and ISDN protocols, Country Dependent Parameter (CDP) files are not used. Country dependent parameters are specified in the [CHP] section of the CONFIG file. The purpose of the CONFIG file is to define the parameter settings necessary to configure a DM3 hardware/firmware product for a particular feature set. The FCDGEN utility is then used to convert the CONFIG file to a Feature Configuration Description (FCD) file. The FCD file configures the DM3 board (including protocol country dependent parameters) as part of the firmware download process.

E-1 CAS R2MF protocols are available on a separate Global Call Protocols Package CD. When the protocols are installed, the Country Dependent Parameter (CDP) files are installed in the `\data` directory under the Dialogic home directory.

Caution: For configurations that use both DM3 and Springware boards, CDP files for protocols used with DM3 boards have the same names as CDP files for protocols used with Springware boards. The DM3 CDP files are located in the `\data` directory; while the Springware CDP files are located in the `\cfg` directory. When editing a CDP file, be careful that you are editing the correct CDP file.

6.3.3 Working with Fixed Routing Configurations

The following topics provide more information about using Global Call with DM3 boards that use the fixed routing configuration:

- [Fixed Routing Configuration Restrictions](#)
- [gc_OpenEx\(\) Restrictions \(Fixed Routing\)](#)
- [Associating Network and Voice Devices \(Fixed Routing\)](#)
- [ISDN Direct Layer 2 Access \(Fixed Routing\)](#)

- [Using Device Handles \(Fixed Routing\)](#)
- [Device Handling Guidelines for the Global Call API \(Fixed Routing\)](#)
- [Initializing Applications with DM3 Boards Only \(Fixed Routing\)](#)
- [Initializing Applications with DM3 and Springware Boards \(Fixed Routing\)](#)

6.3.3.1 Fixed Routing Configuration Restrictions

The following restrictions apply to DM3 fixed routing configurations only.

Note: Except where explicitly stated, these restrictions are **in addition** to those described for the DM3 flexible routing configuration. See [Section 6.3.2, “Working with Flexible Routing Configurations”](#), on page 105 for more information.

Table 13 shows the Global Call API Restrictions when using a DM3 boards with a Fixed Routing Configuration.

Table 13. Global Call API Function Restrictions in a Fixed Routing Configuration

Function Name	Notes
<code>gc_AttachResource()</code>	Not supported. See Section 6.3.3.3, “Associating Network and Voice Devices (Fixed Routing)” , on page 112 for more information.
<code>gc_Detach()</code>	Not supported. See Section 6.3.3.3, “Associating Network and Voice Devices (Fixed Routing)” , on page 112 for more information.
<code>gc_OpenEx()</code>	Limitations: See Section 6.3.3.2, “gc_OpenEx() Restrictions (Fixed Routing)” , on page 111, Section 6.3.3.3, “Associating Network and Voice Devices (Fixed Routing)” , on page 112, and Section 6.3.3.5, “Using Device Handles (Fixed Routing)” , on page 112 for more information.

6.3.3.2 gc_OpenEx() Restrictions (Fixed Routing)

The Global Call API provides a common signaling interface for network-enabled applications, regardless of the signaling protocol needed to connect to the local telephone network. For details on the Global Call functions discussed in this chapter, see the *Global Call API Library Reference*.

In R4 applications that use a DM3 boards with a fixed routing configuration, it is not possible to specify the protocol and voice device in the **devicename** parameter in **gc_OpenEx()** commands.

The **devicename** can be as simple as:

```
:N_dtiB1T1
```

where N_ denotes a network time slot device, in this example, dtiB1T1.

The following restrictions apply:

- The network time slot device field (N_) is required.
- The protocol identifier field (P_), if specified, is ignored. The protocol name is unnecessary here because it is selected when using Intel® Dialogic Configuration Manager for PCD/FCD file selection. Also, for R4 on DM3 products, all protocols are bi-directional. You do not need

to dynamically open and close devices to change the direction of the protocol. For R4 on earlier-generation devices, most protocols are unidirectional.

- The voice channel device field (V_), if set to a value other than the voice device automatically assigned during download, causes the **gc_Open()** command to fail. Voice devices are automatically associated with network devices as part of the cluster configuration during firmware download.

6.3.3.3 Associating Network and Voice Devices (Fixed Routing)

For applications that use Springware boards, it is possible to open a line device using the **gc_OpenEx()** function, open a voice device using the **dx_open()** function, then use the **gc_AttachResource()** function to associate the voice device with the line device, using the line device ID and the voice device handle.

For R4 applications that use DM3 boards and a fixed routing configuration, this is neither necessary nor possible. A voice device is automatically associated with a line device as part of a DM3 cluster configuration during DM3 initialization. Therefore, the **gc_AttachResource()** and **gc_Detach()** functions are not supported.

Note: Including a voice device name that is different than the voice device automatically associated with the line device, in the **devicename** parameter of the **gc_Open()** function returns an error.

6.3.3.4 ISDN Direct Layer 2 Access (Fixed Routing)

For applications that use a DM3 board and a fixed routing configuration, the **gc_GetFrame()** and **gc_SndFrame()** functions are supported. The DM3 firmware supports direct layer 2 access in DM3 fixed routing configurations.

6.3.3.5 Using Device Handles (Fixed Routing)

Since an R4 for DM3 application must use Global Call for call control on DM3 boards, the DM3 network interface devices must be opened with the **gc_OpenEx()** function.

Note: Where call control is not required, such as with ISDN NFAS, **dt_open()** may be used to open DM3 network interface devices.

Also, since the voice device and network interface time slot in a DM3 fixed routing configuration are permanently routed and attached to each other, TDM bus routing and attaching of the devices is unnecessary with DM3 boards. The same is true of a fax device and its network interface time slot in the DM3 fixed routing configuration. The resource device (voice/fax) and its associated DTI network interface time slot on the same physical port are tied together in a DM3 cluster. The resource channel is explicitly tied to the network interface time slot; and the voice resource cannot be shared or separately routed to another network interface device. Thus, the resource device and associated network interface device are bound together in a static link, and there is no support for routing the resource independently to the TDM bus. However, the DTI network interface can be routed to the TDM bus, allowing access to other TDM bus resources.

With the DM3 fixed routing configuration, the voice or fax resource device has no direct access to the TDM bus time slots and it is neither necessary nor possible to attach the resource and network interface devices together from the host. Therefore, in most cases, an application does not need to

open the voice channel device and/or the network interface time slot device directly using the **dx_open()** and **dt_open()** functions, respectively. However, the fax device must explicitly be opened using **fx_open()**. Although the fax device also has no direct access to the TDM bus time slots and therefore cannot be routed over the TDM bus, it is necessary to retrieve the fax device handle to do fax operations.

6.3.3.6 Device Handling Guidelines for the Global Call API (Fixed Routing)

The following summary applies only to a DM3 fixed routing configuration and presents some guidelines for DM3 device-handling using the Global Call API.

- Use **gc_Start()** to initialize Global Call prior to using any devices.
- Use **gc_OpenEx()** to open the voice resource and network interface devices; then use **gc_GetResourceH()**, with a **resourcetype** of GC_VOICEDevice, to retrieve the voice device handle and **gc_GetNetworkH()**, with a **resourcetype** of GC_NETWORKDevice to retrieve the network interface device handle.

The **gc_OpenEx()** function internally opens the associated voice channel on DM3 boards. Do **not** specify the name of the voice device channel in the **gc_OpenEx()** device string. The **devicename** string for the **gc_OpenEx()** function should look similar to the following:

```
" :N_dt iB1T1 :P_ISDN"
```

See [Section 6.3.3.2, “gc_OpenEx\(\) Restrictions \(Fixed Routing\)”](#), on page 111 for more information.

- Since the fax library does not support the use of a voice handle for fax commands, you cannot use the device handle from **dx_open()** to call fax API functions. You must use **fx_open()** to open a channel device for fax processing and use that fax device handle. Therefore, it is recommended that you do the following to retrieve and use the fax device handle:
 - Use **ATDV_NAMEP()** to retrieve the voice device name for the voice device handle returned by **gc_GetResourceH()** with a **resourcetype** of GC_VOICEDevice.
 - Use **fx_open()** on this voice device name to open the associated fax device and retrieve the fax device handle.
- The voice device is automatically and permanently associated with and connected to the network interface line device, so the **gc_AttachResource()** and **gc_Detach()** functions cannot be used and are not supported for DM3 boards.
- In general, when using DM3 **and** Springware boards, the application must use a **device-discovery** procedure to become *hardware-aware*. To perform device discovery and identify whether a logical device belongs to a DM3 board, use the **gc_GetCTInfo()** function and in the CT_DEVINFO structure check the ct_devfamily field for a value of CT_DFDM3. For details, see the CT_DEVINFO data structure description in the *Voice API Programming Guide*.
- Application performance may be a consideration when opening and closing devices with Global Call. If the application uses Global Call to dynamically open and close devices as needed, it can impact the application’s performance. One way to avoid this is to open all DM3 devices during application initialization and keep them open for the duration of the application, closing them only at the end.

6.3.3.7 Initializing Applications with DM3 Boards Only (Fixed Routing)

This scenario is one where the application uses only DM3 boards.

SCbus routing and attaching of the devices is not necessary with DM3 hardware and the DM3 clustering scheme. The voice device and network interface time slot that share the same DM3 cluster are permanently routed and attached to each other, and the voice device has no direct access to the CT Bus time slots.

In most cases, applications do not need to open the voice channel device and/or the network interface time slot device directly using the voice and DTI APIs respectively, since it is neither necessary nor possible to attach both devices together from the host.

Furthermore, for the same reasons mentioned above, the **gc_OpenEx()** device string should not indicate the name of the voice device channel. For example, the device name string for the **gc_OpenEx()** function should look similar to the following:

```
" :N_dtiB1T1:P_ISDN"
```

Although it is not necessary to specify the ISDN protocol for R4 on DM3 boards, it is specified in this example to retain compatibility with R4 on Springware boards. The **gc_OpenEx()** function will internally open the associated voice channel.

An R4 for DM3 digital interface application would typically perform the following initialization routine:

Note: Use the **sr_getboardcnt()** function with the class name set to DEV_CLASS_DTI and DEV_CLASS_VOICE to determine the number of network and voice boards in the system, respectively.

1. Start/Initialize GlobalCall with **gc_Start()**.
2. Open a Global Call time slot device using **gc_OpenEx()**.
3. Obtain an associated DTI time slot device handle using **gc_GetResourceH()** with a **resourcetype** of GC_NETWORKDEVICE.
4. Obtain an associated voice channel device handle using **gc_GetResourceH()** with a **resourcetype** of GC_VOICEDevice.
5. Repeat steps 2 to 4 for each Global Call time slot device.

6.3.3.8 Initializing Applications with DM3 and Springware Boards (Fixed Routing)

The following procedure shows how to use Global Call to initialize an application and perform **device discovery** when the application supports both DM3 and Springware boards:

Note: Use the **sr_getboardcnt()** function with the class name set to DEV_CLASS_DTI and DEV_CLASS_VOICE to determine the number of network and voice boards in the system, respectively.

1. Start/Initialize Global Call using **gc_Start()**.
2. Open a Global Call time slot device using **gc_OpenEx()**.

3. Obtain an associated DTI time slot device handle using **gc_GetResourceH()** with a **resourcetype** of GC_NETWORKDEVICE.
4. Call **gc_GetCTInfo()** and check CT_DEVINFO.ct_devfamily value:
 - If ct_devfamily value is CT_DFDM3, then obtain associated voice channel device handle using **gc_GetResourceH()** with a **resourcetype** of GC_VOICEDevice, and flag all the Global Call time slot devices associated with the trunk as DM3 type.
 - Otherwise, open the standard R4 voice device and obtain a device handle. Attach the standard R4 voice channel device to the Global Call time slot device using **gc_AttachResource()**.
5. Repeat steps 2 to 4 for all Global Call time slot devices.

6.3.4 Handling Multiple Call Objects Per Channel in a Glare Condition

When using DM3 boards, Global Call supports the handling of multiple call objects per channel in a glare condition. An application running on bi-directional circuits is capable of handling two CRNs on a single line device, where one call can be in an Idle state, while the other call is in Active state. For example, a glare condition occurs when a call has been dropped but not released and an inbound call is detected as indicated in Table 14. In order to avoid a long delay in processing the inbound call, the Global Call library does not wait for the outbound call to be released before notifying the application of the inbound call.

Table 14. Handling Glare when Using DM3 Boards

Application	Global Call Library
gc_MakeCall(CRN1) -->	
	<-- GCEV_DISCONNECTED(CRN1)
gc_DropCall(CRN1) -->	
	<-- GCEV_OFFERED(CRN2)
gc_AcceptCall(CRN2) -->	
	<-- GCEV_DROPCALL(CRN1)
gc_ReleaseCall(CRN1) -->	

Alternatively, the application can just respond to events using their associated CRN, simply performing a **gc_ReleaseCall()** upon reception of any GCEV_DROPCALL event whether the CRN is the active one or not. Using this procedure, the application only needs to store one CRN per line device.

6.4 Programming Tip When Using a DI/0408-LS-A Board

The **gc_MakeCall()** function serves a useful purpose when used with the DI/0408-LS-A board by allowing an application to take an analog loop start interface offhook. To do this, issue **gc_makeCall()** with only a comma character as the dial string. This takes the loop start interface offhook and generates a GCEV_CONNECTED event.

This chapter describes Global Call capabilities relating to call control. Topics include:

- [Call Analysis](#) 117
- [Resource Routing](#) 118
- [Feature Transparency and Extension](#)..... 118

7.1 Call Analysis

E-1, T-1 and Analog telephony protocols may transmit in-channel call analysis information through the network via tones. Other protocols such as IP, ISDN, and SS7 utilize packetized messages to convey call analysis information, and others use CAS line signaling. For the purposes of this discussion call analysis refers to the detection and notification of these tones.

Call analysis consists of both pre-connect and post-connect information about the status of the call:

- Pre-connect information (call progress) determines the status of the call connection, that is, busy, no dial tone, no ring back, etc.
- Post-connect information (media type detection) determines the destination party's media type, for example, voice, answering machine or fax modem. The **gc_GetCallInfo()** function is used immediately following the receipt of a GCEV_CONNECTED event to retrieve this post-connect information notifying of the media type of the answering party. See the *Global Call API Library Reference* for more information.

Call analysis tones such as dial tone, ringback, busy and fax are defined either in the firmware, (Global Tone Detection and Global Tone Generation), or in the *.cdp* file (for E-1/T-1 and Analog technologies), or a combination of both. Tones defined in the firmware can be enabled or disabled by configuring parameters in the DX_CAP (call analysis parameter) data structure. Similarly, the DX_CAP data structure can be used to configure the voice detection algorithm which distinguishes answering machine or human speech. The default parameter values defined in the DX_CAP data structure can be changed by the **gc_LoadDxParm()** function to fit the needs of your application. For a detailed description of enhanced call analysis (PerfectCall) and how to use call analysis, see the Call Analysis topic in the *Voice API Programming Guide*. For a detailed description of the **gc_LoadDxParm()** function, see the *Global Call API Library Reference* for more information.

Some example uses of call progress tones are as follows:

- By detecting the ringback tone, the Global Call API can count the rings and report a GCEV_DISCONNECTED event when the call is not answered within the specified number of rings.
- For telephone circuits that include analog links, the local line may not have access to all of the digital signaling information. If so, the user must modify the country dependent protocol (*.cdp*) file accordingly to detect or generate the busy, ringback or dial tone of the native country.

Call analysis configuration and behavior is unique to each technology and protocol type. See the following for more information:

- For Analog PDK protocols, see the *Global Call Analog Technology User's Guide*.
- For ICAPI and E-1/T-1 PDK protocols, see the *Global Call E-1/T-1 CAS/R2 Technology User's Guide*.

7.2 Resource Routing

When using Global Call, the standard Intel® Dialogic® routing functions for routing voice, fax, and other non-network interface resources are used. The Global Call functions **gc_GetNetworkH()** and **gc_GetVoiceH()** extract the network and voice device handles, respectively.

In Windows environments, the **gc_GetNetworkH()** function returns the network device handle for a specified line device which is then used by the routing functions to route the device. The **gc_GetVoiceH()** function extracts the voice device handle associated with a specified line device. The **gc_GetVoiceH()** function returns the voice device handle only if the specified line device has a voice or tone resource associated with it, for example, if a voice channel was specified in **gc_OpenEx()** function device name argument and if this channel has remained attached to that line device.

Refer to the appropriate *Global Call Technology User's Guide* for technology specific information on routing resources when using the **gc_OpenEx()** function to specify a voice or tone resource, or when using the **gc_AttachResource()** function to associate a voice or media resource with a Global Call line device.

7.3 Feature Transparency and Extension

Global Call Feature Transparency and Extension (FTE) provides a common interface to multiple network interface specific libraries for features that are abstracted across multiple call control libraries (see [Figure 1, “Global Call Architecture”](#), on page 16). FTE is described in the following topics:

- [Feature Transparency and Extension Overview](#)
- [Technology-Specific Feature Access](#)
- [Technology-Specific User Information](#)

7.3.1 Feature Transparency and Extension Overview

FTE consists of three Global Call functions. These functions provide the flexibility to extend the generic Global Call API to access all technology or protocol-specific features unique to any given network interfaces that were formerly only accessible via their native technology call control libraries. Thus, all technology-specific features may be accessible from the application solely via the singular Global Call library interface, thereby alleviating the need to access these call control libraries directly via additional APIs. Figure X shows the architecture of the FTE feature.

The Global Call API functions provided for FTE are:

gc_Extension()

provides a generic interface extensible for technology-specific features

gc_GetUserInfo()

retrieves technology-specific user information for the specified line device

gc_SetUserInfo()

permits technology-specific user information to be defined for the specified line device or call

7.3.2 Technology-Specific Feature Access

The **gc_Extension()** function provides a single common interface to access various technology-specific features supported by underlying call control libraries.

This Global Call function utilizes an extension function identifier (**ext_id**) to specify the feature. The associated technology's *Global Call Technology User's Guide* for each call control library lists all its supported extension function identifiers (**ext_id** values) and the associated features that are accessible via the **gc_Extension()** function (if any).

By specifying the associated parameter identifiers (also described in the associated *Global Call Technology User's Guide*), and either the target line device or a specific call, those features unique to the subject technology may be utilized entirely using the Global Call API. Without FTE support, a Global Call application requiring this feature support would also have to be written to the specific call control API in addition to the Global Call API.

For example, in an ISDN platform the application may use the **gc_Extension()** function to set D or B channel states. As the concept of B and D channels is ISDN specific and inherently foreign to other protocols, without FTE support, the application would have to link directly with the ISDN call control library then call the required ISDN library functions **cc_SetBChanState()** or **cc_SetDChanState()**.

The **gc_Extension()** function may be supported in either asynchronous mode, synchronous mode or both depending on the call control library.

If the **gc_Extension()** function is supported and called in synchronous mode, the relevant information parameters returned in the GC_PARM_BLK buffer must be processed or copied prior to the next Global Call function call. The reason for this is that the GC_PARM_BLK buffer will be deallocated within Global Call in a subsequent function call.

If the **gc_Extension()** function is supported and called in asynchronous mode, relevant information may be returned via the call control library via GCEV_EXTENSIONCMPLT termination event and its referenced extension block structure, EXTENSIONEVTBLK. The EXTENSIONEVTBLK structure contains technology-specific information and is referenced via the extevtdatap pointer in the METAEVENT structure associated with the GCEV_EXTENSIONCMPLT event. See the *Global Call API Library Reference* for more information about these structures.

The **gc_Extension()** function can also be used to transmit information to the remote endpoint. In this case, while the application at the local end point receives a GCEV_EXTENSIONCMPLT, the

application at the remote end point will receive an unsolicited GCEV_EXTENSION notification event from the network with the transmitted information. The EXTENSIONEVTBLK structure contains the transmitted information and is referenced via the extevtdatap pointer in the METAEVENT structure associated with the GCEV_EXTENSION event.

The application at the local end point may also receive an unsolicited GCEV_EXTENSION event with information from the network.

It is important to note that the EXTENSIONEVTBLK structure referenced in the GCEV_EXTENSION event has a persistence only until the next call of **gc_GetMetaEvent()**. In other words, any information contained or referenced in the associated EXTENSIONEVTBLK structure must be either processed or copied in the application, or risk having the memory space containing the actual information being lost on the next **gc_GetMetaEvent()** call.

7.3.3 Technology-Specific User Information

The **gc_GetUserInfo()** and **gc_SetUserInfo()** functions permit the application to retrieve and configure user information for the specified line device that is transmitted to or received from the remote side. The actual content and format of the user information is technology- or protocol-specific, or both. Refer to the associated technology's *Global Call Technology User's Guide* for details on the format of the user information supported and the proper usage of the **gc_GetUserInfo()** and **gc_SetUserInfo()** functions.

One typical application of the **gc_SetUserInfo()** and **gc_GetUserInfo()** is on an ISDN platform where it is desired to transmit and receive user-to-user information elements in each incoming and outgoing message.

In the case of **gc_SetUserInfo()**, user information is transmitted to the remote side embedded in a protocol-specific message. The **duration** flag is used to specify the persistence of the information. Using the **duration** flag, the user information may be specified to persist as long as the current or next call, or for all calls (including the current call). When the duration is specified to be all calls on the specified line device, the user information is valid and utilized for all calls until the device is eventually closed via **gc_Close()**.

In the case of **gc_GetUserInfo()**, the user information is retrieved from an already received protocol-specific message that has been received from the remote side. Note that the user information parameters returned from the call control library in the GC_PARM_BLK buffer must be processed or copied prior to the next Global Call function call. The reason for this is that the GC_PARM_BLK buffer will be deallocated within Global Call in a subsequent function call.

This chapter describes the Global Call Alarm Management System (GCAMS). Topics include the following:

- Alarm Handling Overview. 121
- Operation and Configuration of GCAMS 123
- Sample Alarm Scenarios 130

8.1 Alarm Handling Overview

Global Call alarms originate from alarm source objects (ASO). An alarm source object can be a network library, such as the Springware DTI network library, or a call control library, or it can reside within a call control library. Some alarm source objects are for internal Global Call use only and are not available to the application.

There are basically two sources of Global Call alarms:

- Layer 1 alarms (physical alarms)
- “Logical” alarms, such as remote side out of service, or layer 2 or layer 3 out of service

Note: Not all technologies support physical alarms. Refer to the appropriate *Global Call Technology User's Guide* to determine if a particular technology supports physical alarms.

The portion of the Global Call call control library that manages alarms is called the Global Call Alarm Management System (GCAMS). GCAMS is initialized automatically when Global Call is started.

GCAMS provides Global Call applications with the ability to receive extensive alarm information. Some of the ways this information can be used include:


- Managing the network
- Troubleshooting hardware
- Monitoring line quality
- Working with the central office to solve line problems
- Generating status reports
- Modifying alarm source object properties and characteristics based on alarm history
- Manual handling of alarms for drop and insert applications.

The following sections describe the components and operation of GCAMS.

8.1.1 Alarm Management System Components

The alarm management system is made up of several components, including GCAMS. The other components are the customer application's alarm management system (AMS), and the alarm source objects (ASOs). ASOs can either reside within a call control library (cclib) or separate from a call control library. Figure 30 illustrates the relationship between the alarm management system components.

Figure 30. Architectural Diagram of Alarm Management Components

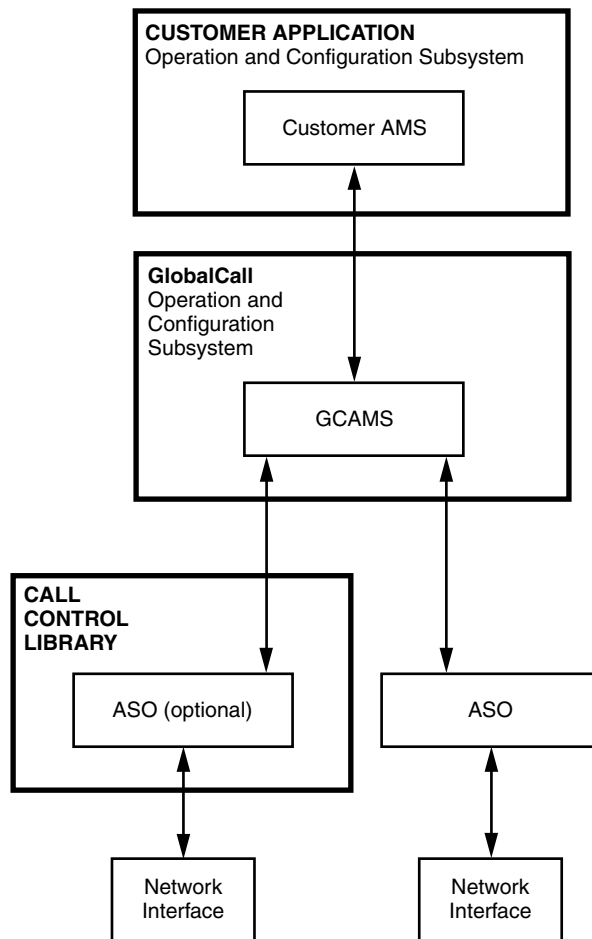

The customer application is responsible for configuring the behavior of GCAMS, including designating which alarms are blocking, which alarms the application wants to be notified of, and controlling the flow of alarms to the application. For more information, see [Section 8.2.3, “Configuration of Alarm Properties and Characteristics”](#), on page 125.

GCAMS acts as an interface between the customer application and the alarm source objects. GCAMS passes requests from the application to the ASOs, processes application configuration requests, and processes ASO alarm events. GCAMS also maintains a database of the current configuration attributes by alarm source object and line device. In addition, GCAMS implements

the ASOs that are common across multiple technologies. For more on the operation and configuration of GCAMS, see [Section 8.2, “Operation and Configuration of GCAMS”](#), on page 123.

The final components of the alarm management system are the ASOs. ASOs are responsible for generating alarm events when alarms occur and then clear. If configured to do so, ASOs are also responsible for starting and stopping the transmission of alarms and setting and getting alarm parameters, such as timing parameters.

8.2 Operation and Configuration of GCAMS

The primary functions of GCAMS are as follows:

- [Generation of Events for Blocking Alarms](#)
- [Generation of Alarm Events](#)
- [Configuration of Alarm Properties and Characteristics](#)
- [Starting and Stopping Alarm Transmission](#)
- [Retrieving Alarm Data](#)

8.2.1 Generation of Events for Blocking Alarms

Global Call alarms are classified as either blocking or non-blocking. Blocking alarms are alarms that cause the application to become blocked and potentially generate a GCEV_BLOCKED event when the alarm is set (the “alarm on” condition is detected). Subsequently, all blocking alarms generate a GCEV_UNBLOCKED event when the alarm clears (the “alarm off” condition is detected). Non-blocking alarms are alarms that do not cause the application to become blocked and do not generate a GCEV_BLOCKED or GCEV_UNBLOCKED event when the alarm is set or clears.

Note: The `gc_SetAlarmConfiguration()` function can be used to change which alarms are blocking and which alarms are not blocking for a given alarm source object. To retrieve the status of the current alarm configuration, use `gc_GetAlarmConfiguration()`. For more on changing the configuration of alarm source objects, see [Section 8.2.3, “Configuration of Alarm Properties and Characteristics”](#), on page 125.

The GCEV_BLOCKED and GCEV_UNBLOCKED events are unsolicited events that are sent in addition to other Global Call events. The blocked and unblocked events do not require any application-initiated action. The blocked event is generated only for the first blocking condition detected. Subsequent blocking conditions on the same line device will not generate additional blocked events. Until all blocking conditions are cleared, the line device affected by the blocking condition (that is, the line device that received the GCEV_BLOCKED event) cannot generate or accept calls. When the line device has completely recovered from the blocking condition a GCEV_UNBLOCKED event is sent.

When a blocking condition occurs while a call is in progress or connected, any calls on the line device that is in the blocked condition are treated in the same manner as if a remote disconnection occurred: an unsolicited GCEV_DISCONNECTED event is sent to the application and the call

changes to the Disconnected state. The result value retrieved for the event will indicate the reason for the disconnection, for example, an alarm condition occurred. Result values are retrieved by calling the `gc_ResultValue()` function, see [Section 4.4, “Event Retrieval”](#), on page 93. The GCEV_BLOCKED event is also sent to the application to indicate that a blocking condition occurred; the `gc_ResultValue()` function can be called to retrieve the reason for the GCEV_BLOCKED event, as well.

The GCEV_BLOCKED and GCEV_DISCONNECTED events may arrive in any order. When the blocking condition(s) clears, an unsolicited GCEV_UNBLOCKED event is sent to the application indicating complete recovery from the blocking condition.

When a blocking condition occurs while a line device is in the Null, Disconnected, or Idle state, only the GCEV_BLOCKED event is sent since there is no call to disconnect. The call state does not change when a GCEV_BLOCKED or GCEV_UNBLOCKED event is sent to the application.

Note: In the asynchronous mode, if a `gc_WaitCall()` function is pending when a GCEV_UNBLOCKED event is generated, the `gc_WaitCall()` function does not need to be reissued.

The GCEV_BLOCKED and GCEV_UNBLOCKED events are generated for blocking alarms at the trunk level and the channel level:

Trunk Level

When the Global Call API recognizes a blocking *alarm on* condition at the trunk level, a GCEV_BLOCKED event is generated for the trunk device, assuming that the trunk is open. A GCEV_BLOCKED event is also generated for all time slots currently open on the trunk device, assuming that the application is currently *unblocked*. The application will receive a GCEV_BLOCKED event only for the first *alarm on* condition for a particular line device.

When the Global Call API recognizes a blocking *alarm off* condition at the trunk level, a GCEV_UNBLOCKED event is generated for the trunk device, assuming that the trunk is open. A GCEV_UNBLOCKED event is also generated for all time slots currently open on the trunk device, assuming there are no other blocking conditions on the line device. The application will receive a GCEV_UNBLOCKED event only for the last “alarm off” condition for a particular line device.

Channel Level

When the Global Call API recognizes a blocking *alarm on* condition at the channel level, a GCEV_BLOCKED event is generated for the channel, assuming that the application is currently *unblocked*. The application will receive a GCEV_BLOCKED event only for the first *alarm on* condition for the line device.

When the Global Call API recognizes a blocking *alarm off* condition at the channel level, a GCEV_UNBLOCKED event is generated for the time slot, assuming there are no other blocking conditions on the line device. The application will receive a GCEV_UNBLOCKED event only for the last *alarm off* condition for the line device.

Note: When using Global Call with DM3 boards, alarms apply only at the trunk level. An alarm that occurs on a trunk applies to all channels on that trunk.

8.2.2 Generation of Alarm Events

The GCEV_ALARM event can be generated by both blocking and non-blocking alarms. Blocking alarms are alarms that generate GCEV_BLOCKED and GCEV_UNBLOCKED events when the

alarms set and clear. GCEV_ALARM events are for information purposes only and do not cause any channel state or call state changes.

Note: The previous method of retrieving alarm information was via the use of the **dt_open()** function. Using the GCEV_ALARM event is the preferred method for retrieving alarm information.

In order for the GCEV_ALARM event to be returned by the application, the notify attribute for the specified alarm source object must be set to “on” via the **gc_SetAlarmConfiguration()** function. In addition, the alarm source object must meet the alarm flow configuration requirements, which are set using the **gc_SetAlarmFlow()** function or the **gc_NotifyAll()** function. (See [Section 8.2.3, “Configuration of Alarm Properties and Characteristics”](#), on page 125 for more information.)

When the application returns a GCEV_ALARM event, indicating that an alarm has been received, information about the alarm can be retrieved using the **gc_AlarmName()** function. The **gc_AlarmName()** function converts the alarm to its English name to allow for interpretation of the reason for the alarm. For more information on retrieving alarm data for a given ALARM_EVENT, see [Section 8.2.5, “Retrieving Alarm Data”](#), on page 128.

Some of the ways the information provided by the GCEV_ALARM events can be used are:

- Administration of alarms (using alarm information to determine the appropriate configuration of GCAMS)
- Detection and transmission of alarm conditions between networks (drop and insert applications)
- Manual handling of alarms for drop and insert applications
- Generating reports
- Troubleshooting connections and protocols

8.2.3 Configuration of Alarm Properties and Characteristics

GCAMS provides the ability to set the alarm configuration for line devices and alarm source objects. The initialization of ASO configuration values is done at build time.

The Global Call API provides several functions that are used to configure how, when and which alarms are sent to the application, and to define the characteristics of the alarms. These functions are:

- **gc_SetAlarmConfiguration()**
- **gc_SetAlarmFlow()**
- **gc_SetAlarmNotifyAll()**
- **gc_SetAlarmParm()**

Corresponding functions allow for the retrieval of the current status of the configurations. These functions are:

- **gc_GetAlarmConfiguration()**
- **gc_GetAlarmFlow()**
- **gc_GetAlarmParm()**

The use of these functions is described in the following sections. Alarm configuration tips are also provided. For more information about the alarm configuration functions, see the *Global Call API Library Reference*.

For line devices opened by technologies that use GCAMS, there is an entity called the *network ASO ID* that is the alarm source object associated with the network. For example, in Springware it is the DTI alarms. As a programming convenience, Global Call defines `ALARM_SOURCE_ID_NETWORK_ID` that corresponds to the network ASO ID. This define is useful in many contexts. For example, notification of all alarms on a line device can be configured using the call:

```
gc_SetAlarmNotifyAll(..., ALARM_SOURCE_ID_NETWORK_ID, ...)
```

The `ALARM_SOURCE_ID_NETWORK_ID` is a value that can be used to represent, for a given line device, whatever the network ASO ID happens to be.

If two different line devices use different network ASO IDs, for example, the network ASO ID of the first line device is `ALARM_SOURCE_ID_SPRINGWARE_E1` and the network ASO ID of the second line device is `ALARM_SOURCE_ID_DM3_T1`, then:

- `gc_SetAlarmNotifyAll(linedevice1, ALARM_SOURCE_ID_NETWORK_ID, ...)` means use `ALARM_SOURCE_ID_SPRINGWARE_E1`.
- `gc_SetAlarmNotifyAll(linedevice2, ALARM_SOURCE_ID_NETWORK_ID, ...)` means use `ALARM_SOURCE_ID_DM3_T1`.

The `ALARM_SOURCE_ID_NETWORK_ID` define is a convenience to the developer. An alternative implementation to the example shown above might be (error handling not shown):

```
unsigned long    aso_id;

gc_GetAlarmSourceObjectNetworkID(linedevice1, &aso_id)
gc_SetAlarmNotifyAll(linedevice1, aso_id)

gc_GetAlarmSourceObjectNetworkID(linedevice2, &aso_id)
gc_SetAlarmNotifyAll(linedevice2, aso_id)
```

8.2.3.1 Configuring Alarm Notification

In order for an alarm to be sent to the application, the “notify” attribute of the alarm must be set to “yes”. Initially, the notify attribute of all alarms is set to “no”. The `gc_SetAlarmConfiguration()` function is used to set and change the notify attribute for a specified alarm source object on a given line device. To retrieve the status of the alarm configuration parameters, use the `gc_GetAlarmConfiguration()` function.

Alternatively, the `gc_SetAlarmNotifyAll()` function can be used as a shortcut when the application wants to change the notification status, that is, when the application wants to change from “notify” to “no notify”, for all line devices that have the specified alarm source object.

8.2.3.2 Configuring Alarm Flow

The **gc_SetAlarmFlow()** function is used to further refine which of the alarms are sent (that is, allowed to “flow”) to the application. Alarm flow configuration is controlled on a line device basis. The alarm flow can be configured in any of the following ways:

- All alarms are sent to the application
- All, and only, blocking alarms are sent to the application
- Only the first alarm on and the last alarm off are sent to the application
- Only the first blocking alarm on and the last blocking alarm off are sent to the application

Note: To configure the alarm flow so that no alarms are sent to the application, use the **gc_SetAlarmConfiguration()** function and set the notify attribute of all alarms to “no”.

To determine the current alarm flow options, use the **gc_GetAlarmFlow()** function.

8.2.3.3 Configuring Blocking and Non-Blocking Alarm Classification

For any given alarm source object, the **gc_SetAlarmConfiguration()** function can be used to set and change which alarms are blocking or non-blocking. This information is stored in the ALARM_LIST data structure.

To retrieve the status of the current alarm configuration, use the **gc_GetAlarmConfiguration()** function.

8.2.3.4 Configuring Alarm Parameters

The **gc_SetAlarmParm()** function is used to set alarm parameters that control ASO parameters such as timing. An example of a timing parameter would be setting how long a loss of synchronization must be present before the ASO declares a loss of sync alarm or alarm handling mode.

Use of the **gc_SetAlarmParm()** function, as well as the **gc_GetAlarmParm()** function, is highly alarm source object dependent and requires detailed knowledge of the underlying ASO technology by the application writer. For a description of ASOs that are common across multiple technologies, see the *Global Call API Library Reference*.

8.2.3.5 Alarm Configuration Tips

The procedures for configuring alarms depends on whether the application writer is configuring the behavior of alarm source objects or specific line devices associated with a given alarm source object. (When a line device is opened, it takes the blocking and notify attributes of the network ASO, if any, associated with the given line device.)

The default configuration (that is, the flow, blocking and notify attributes) of an alarm source object can be changed by using the **gc_SetAlarmFlow()** and **gc_SetAlarmConfiguration()** functions. Typically, the default configuration should be changed immediately after calling **gc_Start()** and prior to calling **gc_OpenEx()**.

To change the default configuration for all known ASOs, perform the following steps:

- convert the ASO name to the ASO ID using the **gc_AlarmSourceObjectNameToID()** function
- change the attributes of the specified ASO name using the **gc_SetAlarmConfiguration()** function

Note: Changing the attributes of an ASO requires detailed knowledge of the given ASO.

The procedures for changing the configuration of line devices depends on whether all the line devices associated with the same ASO are to have the same attributes, or if the application requires different behaviors for line devices associated with the same ASO. For those applications that require all line devices to have the same attributes, use the procedures for changing the default configuration for ASOs as described above. For applications that are intended to be cross-technology and/or more robust, the following steps should be performed to change the attributes:

1. Call **gc_OpenEx()**.
2. Retrieve the network ASO ID associated with the line device using the **gc_GetAlarmSourceObjectIDToName()**.
3. Convert the network ASO ID to a name using the **gc_AlarmSourceObjectIDToName()**. This is a necessary step as not all ASOs will have a fixed ID.
4. Using the ASO name, change the attributes of the line device using the **gc_SetAlarmConfiguration()** function.

Note: Changing the attributes of an ASO for a specified line device requires detailed knowledge of the given ASO.

For applications that are using only one “known” technology, the application can use either **gc_GetAlarmSourceObjectNetworkID()** to retrieve the network ASO ID associated with the line device or **gc_AlarmSourceObjectNameToID()** to retrieve the ID for the “known” ASO.

8.2.4 Starting and Stopping Alarm Transmission

GCAMS is automatically started when Global Call is started. However, to begin the transmission of alarms to the remote side, the **gc_TransmitAlarms()** function must be called. The **gc_TransmitAlarms()** function sends all alarms as specified in the **ALARM_LIST** data structure for a given alarm source object.

To stop the transmission of alarms to the remote side, use the **gc_StopTransmitAlarms()** function.

8.2.5 Retrieving Alarm Data

The GCAMS database contains the following information:

- A list, by call control library, of all the boards that are currently open
- Information about each opened board, including the board name, the call control library ID, all open time slots on the board, alarm source objects associated with the device, and the alarm callback procedure

- A list of registered alarm source objects and their attributes. (Alarm source objects are registered automatically when the **gc_Start()** function is called.)
- Default alarm source object data (provided by GCAMS)

8.2.5.1 Alarm Numbers and Names

Alarm events are identified in the database by name and number. The following functions are used to retrieve the names, numbers and IDs and to convert them from one to the other:

gc_AlarmName()

converts the alarm name to English, for a given event. Alarm names are assigned by the developer for use in report generation.

gc_AlarmNumber()

retrieves the alarm number, for a given event. Alarm numbers (values) are predefined for a given ASO. See the *Global Call API Library Reference* for ASOs that are common to multiple call control libraries.

gc_AlarmNumberToName()

converts the alarm number to the English name

8.2.5.2 Alarm Source Object IDs and Names

Alarm source objects (ASOs) are identified in the GCAMS database by the ASO ID and by the ASO name. ASOs that are not part of a call control library have predefined names, as provided in the *Global Call API Library Reference*. The names of ASOs that are part of a call control library are provided in the appropriate *Global Call Technology User's Guide*.

The following functions are used to retrieve ASO names and IDs and to convert them from one to the other:

gc_AlarmSourceObjectID()

retrieves the alarm source object ID, for a given event

gc_AlarmSourceObjectIDToName()

converts an alarm source object ID

gc_AlarmSourceObjectName()

retrieves the alarm source object name, for a given event

gc_AlarmSourceObjectNameToID()

converts the alarm source object name to the alarm source object ID

Note: GCAMS uses predefined IDs for the ASOs it has implemented, however it is recommended that applications use the **gc_AlarmSourceObjectNameToID()** function to associate the ASO name with an ID rather than using the ID directly. This allows for more flexible applications if ASOs that reside in call control libraries and have dynamically assigned IDs are added to the application.

In addition, the following functions are used to obtain additional information about the ASOs:

gc_GetAlarmSourceObjectList()

gets all ASOs associated with a line device

gc_GetAlarmSourceObjectNetworkID()

gets the network ID associated with a line device.

For more information on these functions, see the individual function descriptions in the *Global Call API Library Reference*.

8.3 Sample Alarm Scenarios

The following scenarios illustrate the relationship between the application, GCAMS, and the AOS and provide examples of alarm system configurations, and the sequence for transmission of alarms. The scenarios include:

- [Scenario 1: Application Notified of First and Last Blocking Alarm](#)
- [Scenario 2: Default Behavior for Alarm Notification](#)
- [Scenario 3: Alarm Transmission](#)

8.3.1 Scenario 1: Application Notified of First and Last Blocking Alarm


In this scenario the application wants to be notified of only the first and last blocking alarm events. The default blocking configuration is acceptable. See Figure 31.

Note: If both a GCEV_ALARM and a GCEV_BLOCKED (or GCEV_UNBLOCKED) event are generated for an alarm, the order in which these events are sent to the application is not guaranteed.

The steps are:

1. Configure all known call control libraries – set all alarms to notify and set flow control to first and last blocking.
2. Open a line device. The line device's configuration will be “inherited” from its network ASO, which has already been initialized.

Figure 31. Notification of First and Last Blocking Alarm

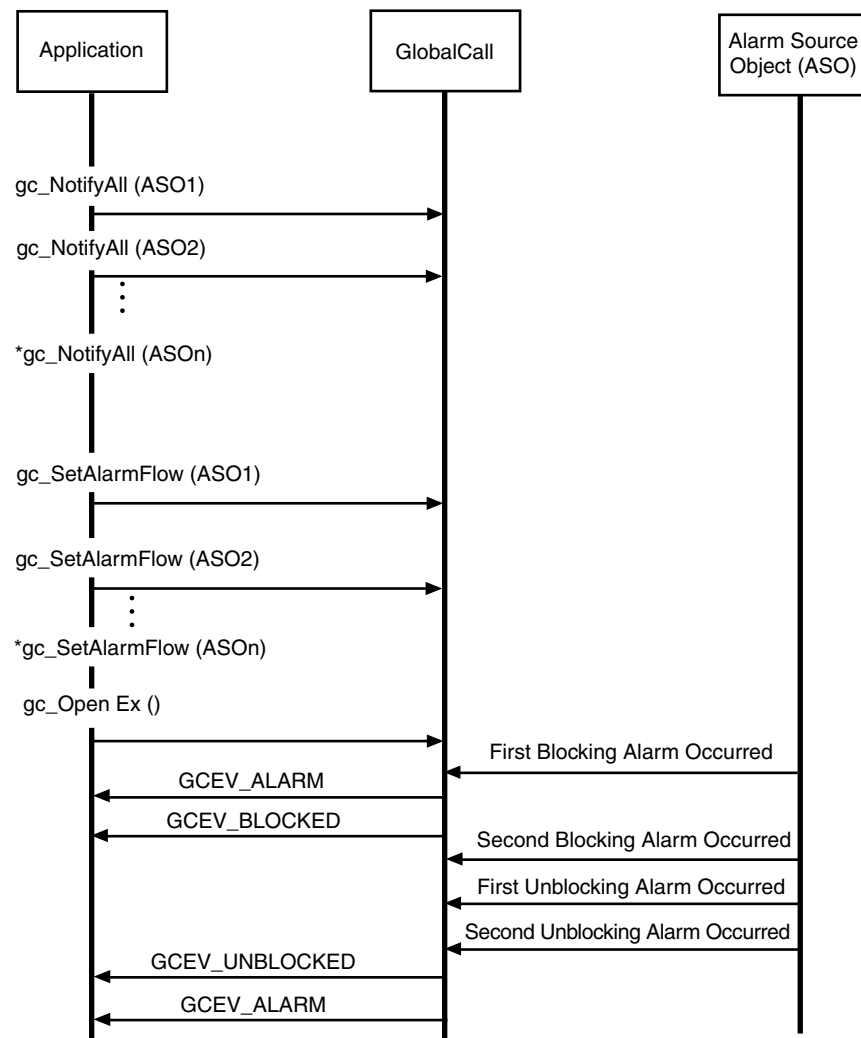


Note: * indicates that the function should be repeated for all ASO's

Note: The function calls for alarm processing are not shown.

8.3.2 Scenario 2: Default Behavior for Alarm Notification

The default behavior is that the application is not notified of alarm events. See Figure 32.


Figure 32. Default Behavior for Alarm Notification

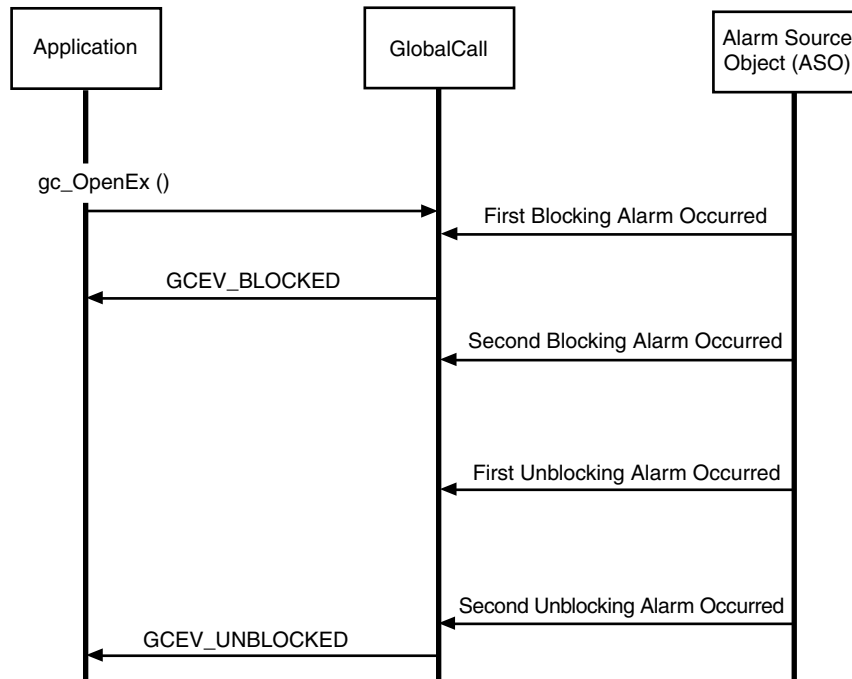

8.3.3 Scenario 3: Alarm Transmission

Figure 33 shows a scenario that demonstrates the sequence of function calls and the actions that they cause in the transmission of alarms.

Figure 33. Alarm Transmission

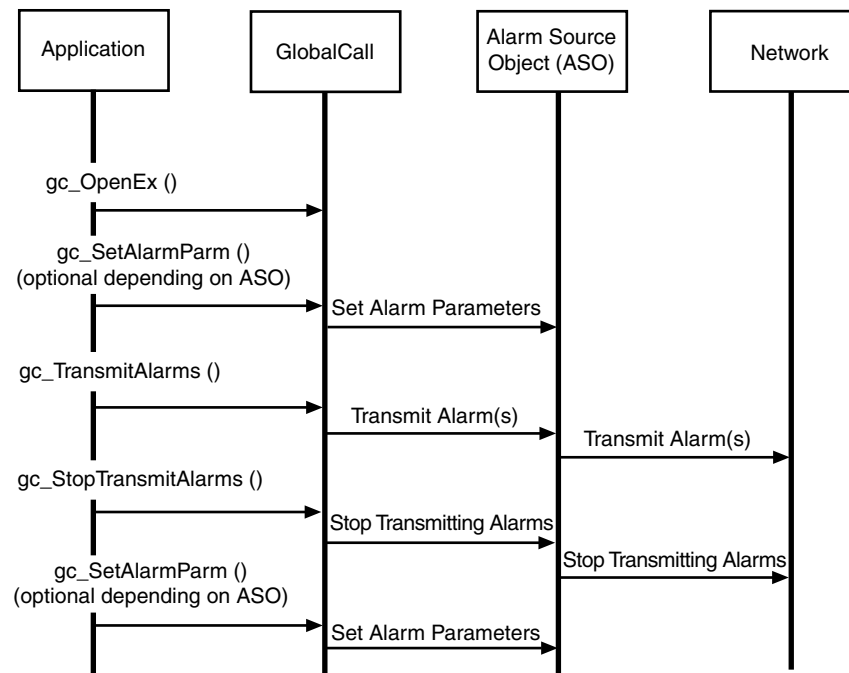

Real Time Configuration Management

9

This chapter describes the Global Call Real Time Configuration Manager (RTCM). Topics include the following:

- Real Time Configuration Manager Overview 135
- RTCM Components 136
- Using RTCM Parameters 138
- Getting and Setting Parameter Information 140
- Querying Configuration Data 143
- Handling RTCM Errors 144
- Configuration Procedure 144
- Sample Scenarios Using the RTCM API Functions 145

9.1 Real Time Configuration Manager Overview

The Global Call Real Time Configuration Management (RTCM) system manages run time configuration for Global Call components. The RTCM feature is used when the application needs to retrieve or modify configuration data. If the configuration data is not modified, the application uses the initial values for the configuration.

Note: Not all technologies support the RTCM feature. Refer to the appropriate *Global Call Technology User's Guide* to determine if RTCM is supported.

The Global Call RTCM system allows applications to:

- Get or set the configuration of a protocol dynamically. For example, the default values of CDP parameters can be retrieved or updated with new values.
- Get or set the configuration of a physical or logical entity dynamically. The entity can be a system (that is, all boards), board, network interface, channel, or call.
- Get or set the configuration of a call control library dynamically. For example, the default call state mask value of a channel can be retrieved or updated with a new value.
- Query the protocol ID from the given protocol name or CDP parameter ID from the given CDP parameter name.

In addition, the RTCM feature provides Global Call applications with the ability to retrieve configuration parameter information. Some of the ways this information can be used include:


- Efficient network management
- Troubleshooting software and hardware

- Performance tuning
- Dynamic alteration of a target object's behavior based upon past behavior
- Generation of status reports
- Dynamic configuration of Global Call call modules or call events

9.2 RTCM Components

The RTCM comprises three major components: the customer application using RTCM, the Global Call RTCM, which consists of the Global Call RTCM APIs and the Global Call RTCM Manager, and the RTCM parameters. Figure 34 shows the relationship between these components.

Figure 34. Relationship of Customer Application, Global Call RTCM, and RTCM Parameters

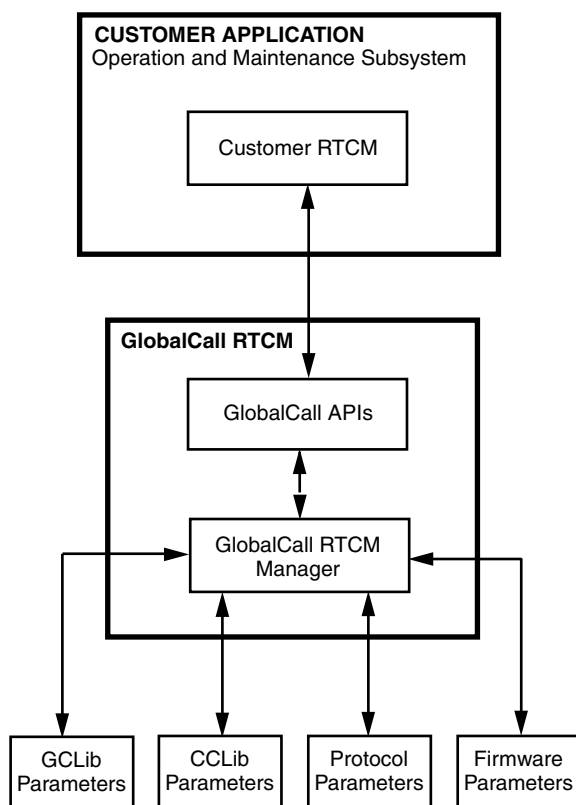

Each of the components of the RTCM is described in the following sections.

9.2.1 Customer Application Using Global Call RTCM

The customer application interfaces with the Global Call RTCM Manager via Global Call RTCM API functions. The primary function of an application with regards to RTCM is the maintenance of parameter data. It is the application developer's responsibility to understand the impact on system operation before changing a parameter value. Specifically, the application developer is responsible for the following:

- Obtaining the information about run-time configuration support from the appropriate *Global Call Technology User's Guide*.
- Ensuring that the configurable parameters match the target entity and inserting parameter data in the proper data format.
- Choosing the proper Global Call RTCM API's control parameters (programming mode, update condition, and timeout) to ensure the efficiency of the retrieve or update configuration process and that the application program is not blocked.
- Obtaining the configuration data from Global Call RTCM retrieval events.
- Correcting errors in input configurable parameter data based on the Global Call error messages.

9.2.2 Global Call RTCM

The Global Call RTCM acts as an interface between the customer application and the configurations of the target objects. A target object is a configurable basic entity and is represented by its target type and target ID (for more information, see [Section 1.5.4, "Target Objects"](#), on page 20).

As mentioned before, the Global Call RTCM comprises the RTCM Manager and the RTCM API functions.

The RTCM Manager is responsible for configuring components, including the Global Call Library (GCLib), Call Control Library (CCLib), protocol, and firmware parameters (see [Section 9.3, "Using RTCM Parameters"](#), on page 138).

The RTCM API functions are used to get, set, or query configuration parameters (consisting of a specified target object and the configuration data) from the customer application to the software module where the target object is located. The Global Call RTCM maintains the information about a target object with its associated software module so that the Global Call RTCM can call the appropriate software module to execute the configuration request. The Global Call RTCM also assigns a unique ID for each request and outputs it to the application. The ID is used by the application for tracking function calls.

In addition, the Global Call RTCM returns an error value when the function returns in synchronous mode or generates a Global Call event related to the Global Call RTCM in asynchronous mode.

Since the Global Call RTCM may not have any knowledge about configurable parameters defined or used in individual modules, it passes the configuration request to the software module in which the target object is located. The customer application must ensure that the target object and requested parameters match.

9.2.3 RTCM Parameters

The third component of the RTCM feature are the RTCM Parameters. The parameters are defined and maintained in four categories of software modules: Global Call Library (GCLib), Call Control Library (CCLib), Protocol and Firmware. Each software module supports different target objects as well as the target objects' parameters.

9.3 Using RTCM Parameters

The Global Call RTCM provides a generic way of getting and setting the configuration information for a target object. The target objects and their parameters are defined and maintained in the following categories of software modules:

Parameters in GCLib Module

parameters that are defined in GCLib. These parameters are common across multiple technologies, such as protocol name and ID, call event mask, and the call state mask of a line device. Although the GCLib module maintains many of the GCLib-defined parameters, some parameters, such as **calling number** and **call info**, are maintained in other modules (such as CCLib).

Parameters in CCLib Module

parameters that are defined and maintained in the CCLib module. The CCLib may maintain some GCLib-defined parameters, such as **calling number** and **call info**. See the appropriate *Global Call Technology User's Guide* about configurable parameters.

Parameters in Protocol Module

parameters that are defined and maintained in a protocol module. One example of protocol parameters are country dependent parameters (CDP). See the appropriate *Global Call Technology User's Guide* about configurable parameters.

Parameters in Firmware Module

parameters that are defined and maintained in a firmware module. See the appropriate *Global Call Technology User's Guide* about configurable parameters.

To access the value of a parameter, the application must specify a four-part name consisting of two pairs: (target object type, target object ID) and (set ID, parameter ID).

Target object type and target object ID

This pair represents the target object. See [Section 1.5.4, "Target Objects"](#), on page 20 for more information. Both the target object type and target object ID are specified as the first two arguments to the Global Call RTCM API function. Examples of target objects are (GCTGT_CCLIB_SYSTEM, CCLIB ID) and (GCTGT_CCLIB_CHAN, Global Call line device ID).

Set ID and parameter ID

This uniquely represents a parameter within a specified target object. See [Section 9.4, "Getting and Setting Parameter Information"](#), on page 140 for more information. A set ID typically represents a group of parameters that are closely related and are maintained in the same software module. The parm ID represents a parameter within a given set ID. In general, parm IDs are only guaranteed to be unique within a given set ID. Note that some configurable parameters are defined only for a specific software module while others may be used across

different software modules. Typically, a software module that supports RTCM contains multiple parameter sets as well as target objects.

Note: The set ID and parm ID pairs are used by other Global Call features in addition to RTCM.

9.3.1 Parameter Dependencies

A high level target object, such as a system entity, can contain a lower level target object, such as a channel entity. When a target object is created, its configuration is initialized as the default or current value, depending on its implementation. If a parameter is defined and used for both the high level and the lower level target object, updating the parameter of the high level target object may also cause the same parameter of the newly-created lower level target object to be updated. Consult the appropriate *Global Call Technology User's Guide* for information about parameter usage.

9.3.2 Parameter Definitions

GCLib or CCLib parameter descriptions can be found in the *Global Call API Library Reference*. Other target objects and their associated set IDs and parameters are described in the appropriate *Global Call Technology User's Guide*. The *Global Call Technology User's Guides* also include which header files are required.

There are two kinds of parameters:

Static

parameters that are predefined in header files with a fixed set ID and parameter ID

Dynamic

parameters where the set ID and parameter ID are generated by Global Call at runtime

Dynamic parameters can only be obtained by calling the **gc_QueryConfigData()** function. For example, to obtain the set ID and parameter ID of a dynamic parameter by name, such as a CDP parameter, call the **gc_QueryConfigData()** function where:

- the source data is the parameter name
- the query ID is GCQUERY_PARM_NAME_TO_ID
- the destination data is stored in a GC_PARM_ID data structure

For more on the **gc_QueryConfigData()** function, see [Section 9.5, “Querying Configuration Data”](#), on page 143 and the *Global Call API Library Reference*.

Every parameter is further defined by the software module as one of the following update conditions:

read-only

parameter is not allowed to be changed by the application

update immediately

parameter is updated immediately upon a set request

update-at-null call state

parameter is only allowed to be updated at the Null call state (that is, there are no active calls). This parameter is updated after a set request is made and when the call state is Null.

See [Section 9.4, “Getting and Setting Parameter Information”](#), on page 140 and the appropriate *Global Call Technology User’s Guide* for detailed information.

9.4 Getting and Setting Parameter Information

The Global Call RTCM feature supports the retrieval or updating of multiple parameters of the same target object in a single Global Call API function call. The functions used to get and set configuration data are as follows:

gc_GetConfigData()

retrieves the configuration data from a given target object

gc_SetConfigData()

updates the configuration data of a given target object

The function call must include a valid target object that is consistent with the target ID. In addition, the following conditions must exist:

- Valid parameters (set ID and parm ID) supported by this target object
- Correct parameter data type and data value
- Appropriate control parameters (programming mode, timeout, update condition) have been set.

The set ID and parm ID as well as the data type and data value are specified in the function call using the GC_PARM_BLK data structure.

9.4.1 GC_PARM_BLK Data Structure

As an argument of the **gc_SetConfigData()** and **gc_GetConfigData()** functions, the configuration data is required to be a generic GC_PARM_BLK data structure. The Global Call application must input parameter information, such as the set ID, parm ID, and value, strictly following entry specifications. In addition to inputting a valid set ID and parameter ID, the parameter value size must match the parameter data type. For example, a long data type has four bytes. A character string value is terminated by a NULL (\0). The Global Call utility functions must be used to allocate or deallocate the GC_PARM_BLK memory, insert a parameter, or retrieve a parameter. See the *Global Call API Library Reference* for more information on the utility functions (gc_util_XXX functions).

The customer application should not configure the same parameter more than once in one single function call; otherwise, the results will be undetermined. Also, the customer application must only configure one target object in one function call. Otherwise, the mixture of parameters of different target objects in the GC_PARM_BLK will be rejected by Global Call RTCM API functions.

9.4.2 Control Parameters

The Global Call RTCM API functions control parameters ensure the efficiency of the retrieve or update configuration process and that the application program is not blocked. The application can specify:

- the programming mode
- the timeout interval for completing the retrieval or update
- the update condition; that is, whether the update should occur either at the Null call state or immediately when updating the parameters of a target object with an active call. (This parameter does not apply to the **gc_GetConfigData()** function.)

9.4.2.1 Programming Mode

The customer application can specify whether to access configurations in the asynchronous mode or synchronous mode. The following describe how the **gc_GetConfigData()** and **gc_SetConfigData()** functions operate in the asynchronous and synchronous programming modes:

gc_GetConfigData()

Synchronous Mode: Upon completion of the function call, the retrieved parameter data is still in the original GC_PARM_BLK data block after the **gc_GetConfigData()** function returns. The function's return value, GC_SUCCESS, indicates that all requested parameters in a given target object have been successfully retrieved. Other return values indicate that at least one requested parameter in the target object failed to be retrieved due to an error. The **gc_ErrorInfo()** function is called immediately to obtain the last error and the additional message, which describes the parameter and the error (pointer to the additional message field). During the **gc_GetConfigData()** function call, once an error occurs, Global Call stops retrieving the remaining parameters and returns an error value to the application. If this function call is retrieving multiple parameters, the parameters before the error may have been retrieved while other parameters will not have had a chance to be retrieved.

gc_GetConfigData()

Asynchronous Mode: Upon completion of the function call, the Global Call application receives the GCEV_GETCONFIGDATA event if all requested parameters have been successfully retrieved. Otherwise, the Global Call application receives the GCEV_GETCONFIGDATA_FAIL event, which means at least one requested parameter of this request failed to retrieve due to an error. The METAEVENT data structure associated with both events has a field evtdatap that points to a GC_RTCM_EVTDATA data structure. In the GC_RTCM_EVTDATA event, the retrieved _parmbldp field points to the retrieved parameter data. The error value and additional message describing the parameter and the error are also provided in GC_RTCM_EVTDATA data structure.

Note: The **gc_GetConfigData()** function cannot be called in asynchronous mode for the following target types: GCTGT_GCLIB_SYSTEM, GCTGT_CCLIB_SYSTEM, GCTGT_PROTOCOL_SYSTEM, and GCTGT_FIRMWARE_SYSTEM. The function returns invalid target type. The **gc_GetConfigData()** function must be called in synchronous mode for these target types.

gc_SetConfigData()

Synchronous Mode: Upon completion of the function call, the **gc_SetConfigData()** function returns a value of GC_SUCCESS to indicate that all requested parameters in a given target object have been successfully updated. Any other return value indicates that at least one requested parameter in a target object failed to be updated due to an error. The

gc_ErrorInfo() function is called immediately to obtain the last error and additional message describing the parameter and the error (pointer to the additional message field). During the **gc_SetConfigData()** function call, once an error occurs, Global Call stops updating the remaining parameters and returns an error value to the application. If this function call requires updating multiple parameters in a target object, the parameters before the error may have been updated while other parameters will not have a chance to be updated.

gc_SetConfigData()

Asynchronous Mode: The Global Call application receives the GCEV_SETCONFIGDATA event if all the requested parameters in a given target object are successfully updated. Otherwise, the Global Call application receives the GCEV_SETCONFIGDATA_FAIL event, which indicates that at least one requested parameter in the target object failed to update due to an error. The METAEVENT data structure, which is associated with both events, has a field, evtdata, that points to a GC_RTCM_EVTDATA data structure. The GC_RTCM_EVTDATA data structure provides the error value and additional message describing the parameter and the error.

Note: The **gc_SetConfigData()** function cannot be called in asynchronous mode for the following target types: GCTGT_GCLIB_SYSTEM, GCTGT_CCLIB_SYSTEM, GCTGT_PROTOCOL_SYSTEM, and GCTGT_FIRMWARE_SYSTEM. The function returns invalid target type. The **gc_SetConfigData()** function must be called in synchronous mode for these target types.

The original GC_PARM_BLK data block is not changed after the **gc_SetConfigData()** function returns.

9.4.2.2 Timeout Option

The customer application can specify the timeout for completing the parameter retrieval or update. The **gc_GetConfigData()** and **gc_SetConfigData()** functions support the timeout option only in synchronous mode. When a timeout occurs in the synchronous mode, the function returns an EGC_TIMEOUT error to the application. The timeout option is ignored if the function is executed in asynchronous mode.

The function call is stopped immediately when a timeout occurs. When accessing multiple parameters in a single function call, some, but not all, parameters may have been retrieved or updated before the timeout.

A timeout value selected to be less than or equal to zero indicates an infinite timeout. When the **gc_SetConfigData()** function has an infinite timeout set and is updated at the Null call state, this thread is blocked if the target object still has any active call. The customer application can avoid this situation by using the asynchronous mode or multi-threading technology.

9.4.2.3 Update Condition

When using the **gc_SetConfigData()** to update the parameters of a target object with an active call, the application can specify whether the update should occur either at the Null call state or immediately. If parameters are to be updated at the Null state, but the function requests to immediately update them while the target object has any active call, the function returns an error to the application. If parameters are to be updated immediately, the function can update them immediately or at the Null state.

Table 15 describes the possible settings and resulting actions for the update condition as used by the **gc_SetConfigData()** function.

Table 15. Update Condition Flag and Global Call Process

Update condition flag (Global Call APP)	Parameter Update Allowed in Target Object	Target Object Status	Global Call Action
GCUPDATE_IMMEDIATE	Update immediately	Active or no active call	Update parameter
	Update at Null state	No active call	Update parameter
		Active call	Return error
GCUPDATE_ATNULL	Update immediately	No active call	Update parameter
		Active call	Postpone until no active call
	Update at Null state	No active call	Update parameter
		Active call	Postpone until no active call

The **gc_ResetLineDev()** function is used to speed the update of the parameters that are waiting for the arrival of the Null state. For example, the customer application can call the **gc_SetConfigData()** function multiple times to request the parameters to be updated at the Null state. Instead of waiting for the Null state, the customer application can call the **gc_ResetLineDev()** function to reset the channel to the Null state and update all the parameters.

9.5 Querying Configuration Data

The **gc_QueryConfigData()** function provides limited query capability to obtain other configuration data based on known information. The search is limited to the given target object.

The main purpose of this function is helping the application find the protocol ID by name and the dynamic parameter ID by name. The source data and destination data point to a GC_PARM data structure.

The query ID also defines the data type of the source data and destination data used by the **gc_QueryConfigData()** function. For example, GCQUERY_PARM_NAME_TO_ID implies the source data is a character string, and the destination data is a GC_PARM_ID data structure.

Note: The **gc_QueryConfigData()** function cannot be called in asynchronous mode for the following target types: GCTGT_GCLIB_SYSTEM, GCTGT_CCLIB_SYSTEM, GCTGT_PROTOCOL_SYSTEM, and GCTGT_FIRMWARE_SYSTEM. The function returns invalid target type. The **gc_QueryConfigData()** function must be called in synchronous mode for these target types.

9.6 Handling RTCM Errors

Configuration data for multiple parameters of a target object can be updated in a single function call. The function will abort on any single parameter retrieval failure. If the function returns a Global Call error, the application calls the **gc_ErrorInfo()** function immediately to obtain the last error code, error message, and additional message. An additional message identifies which parameter has an error. In the asynchronous mode, the application calls the **gc_ResultInfo()** function immediately to obtain the result value, error message, and additional message.


See the *Global Call API Library Reference* for Global Call RTCM error values and messages.

9.7 Configuration Procedure

The basic steps for using the Global Call RTCM feature are:

1. Ensure that the target object has been opened or loaded and find the target object ID.
2. Find the parameter information (set ID, parm ID, and data type) related to the target object.
3. Find the parameter update condition or requirement. Understand the impact on the operation of itself or other target objects after change of parameters.
4. Select the appropriate programming mode, timeout, and update condition (if applicable) to allow Global Call to finish the request efficiently without blocking the application program.

Figure 35 illustrates the run-time configuration procedure.

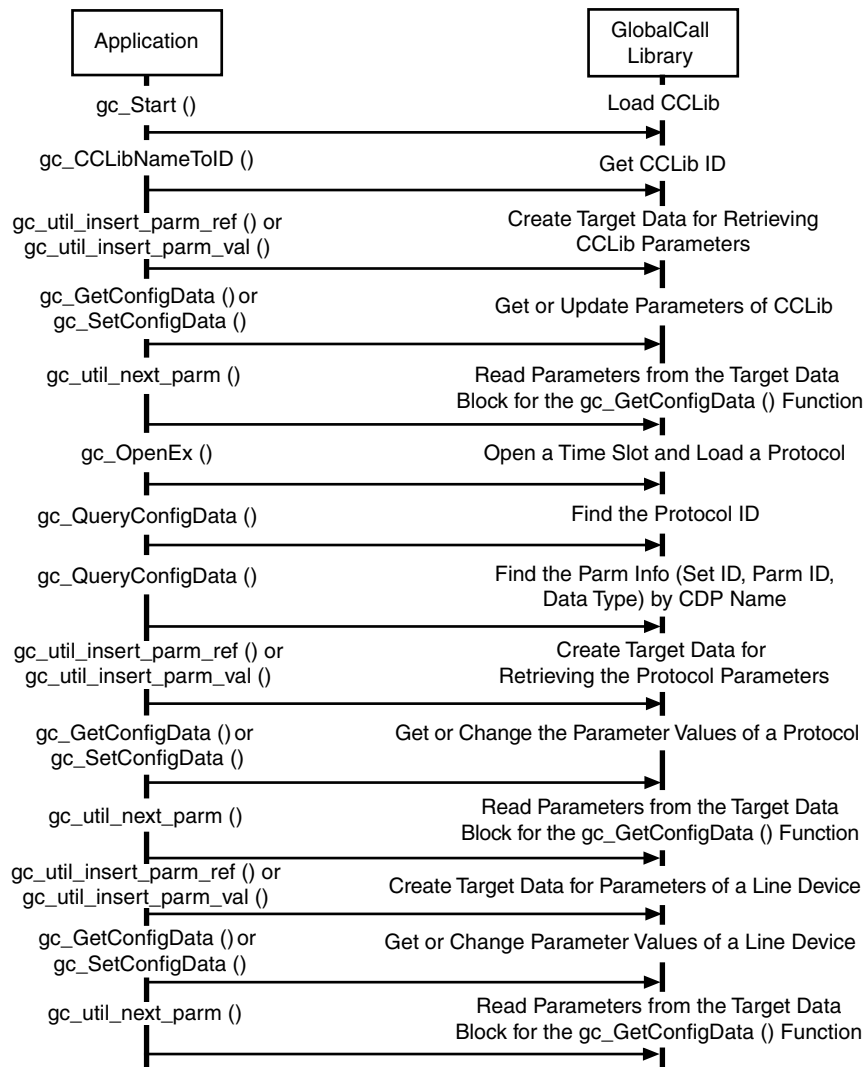Figure 35. Run Time Configuration Procedure


9.8 Sample Scenarios Using the RTCM API Functions


This section shows the following examples in which the customer application uses the Global Call RTCM API functions to get or set the configuration of various target objects. The examples include:

- [Getting or Setting GCLib Configuration in Synchronous Mode](#)
- [Getting or Setting CCLib Configuration in Synchronous Mode](#)
- [Getting or Setting Protocol Configuration in Synchronous Mode](#)
- [Getting or Setting Line Device Configuration in Synchronous Mode](#)
- [Setting Line Device Configuration in Asynchronous Mode](#)

9.8.1 Getting or Setting GCLib Configuration in Synchronous Mode

The Global Call RTCM feature allows the customer application to retrieve or change the default configuration of a GCLib even before any line device is opened. Figure 36 shows the procedure for synchronous mode.

Figure 36. Getting or Setting GCLib Configuration in Synchronous Mode

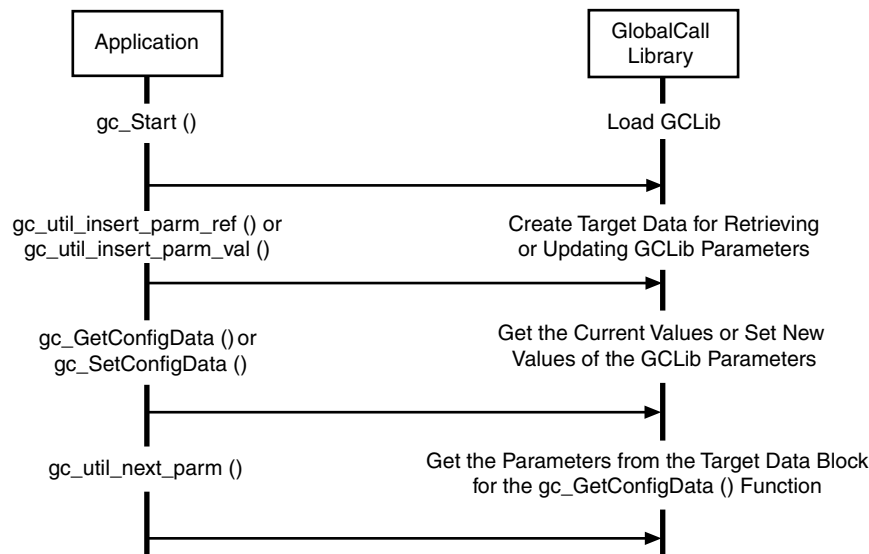


The following describes the procedure for getting or setting the configuration of the GCLib in synchronous mode:

1. Load the GCLib (after the **gc_Start()** function is called).
2. Create the target object data (a `GC_PARM_BLK` data structure) with the appropriate set ID, parm ID, value size, and value, if applicable, by calling the Global Call utility functions **gc_util_insert_ref()** or **gc_util_insert_val()**. See the *Global Call API Library Reference* for more information.
3. Call the **gc_GetConfigData()** or **gc_SetConfigData()** function with: **target_type** = `GCTGT_GCLIB_SYSTEM`
target_id = 0
time_out = 0
mode = `EV_SYNC`
4. If the **gc_GetConfigData()** function returns successfully, then obtain the individual parameter data by calling the **gc_util_get_next_parm()** function. If an error occurs, call the **gc_ErrorInfo()** function to find the error and correct it.

9.8.2 Getting or Setting CCLib Configuration in Synchronous Mode

The Global Call RTCM feature allows the customer application to retrieve or change the default configuration of a CCLib even before any line device is opened. Figure 37 shows the procedure for synchronous mode.

Figure 37. Getting or Setting CCLib Configuration in Synchronous Mode

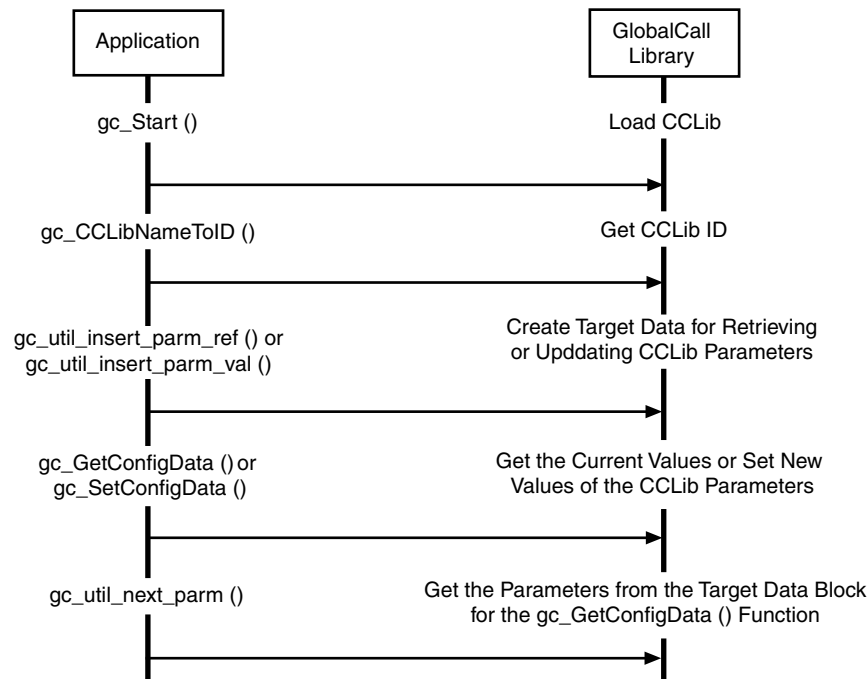

The following describes the procedure for getting or setting the configuration of a CCLib in synchronous mode.


1. Load the call control library after the `gc_Start ()` function is called.
2. Find the CCLib ID using its name by calling the `gc_CCLibNameToID ()` function. If the application has doubt about the CCLib name, it can call the `gc_GetCCLibStatusAll ()` function to verify whether the CCLib has been started.
3. Create the target object data (a `GC_PARM_BLK` data structure) with the appropriate set ID, parm ID, value size, and value, if applicable, by calling the Global Call utility functions `gc_util_insert_ref ()` or `gc_util_insert_val ()`. See the *Global Call API Library Reference* for more information.
4. Call the `gc_GetConfigData ()` or `gc_SetConfigData ()` function with:
 - `target_type = GCTGT_CCLIB_SYSTEM`
 - `target_id = CCLib ID`
 - `time_out = 0`
 - `mode = EV_SYNC`

5. If the **gc_GetConfigData()** function returns successfully, then obtain the individual parameter data by calling the **gc_util_get_next_parm()** function. If an error occurs, call the **gc_ErrorInfo()** function to find the error and correct it.

9.8.3 Getting or Setting Protocol Configuration in Synchronous Mode

The Global Call RTCM feature allows the customer application to retrieve or change the default configuration of a protocol. Figure 38 shows the procedure for the synchronous mode.

Figure 38. Getting or Setting Protocol Configuration in Synchronous Mode

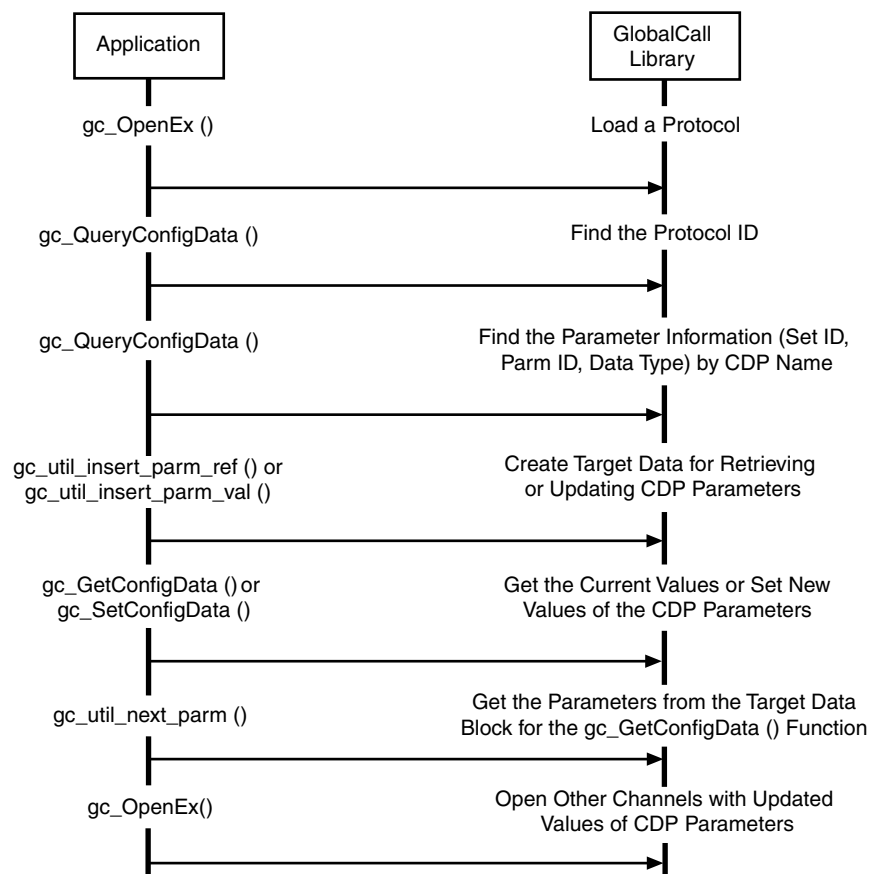

The following describes the procedure for getting or setting the configuration of a Protocol in the synchronous mode.

1. Load the protocol (after, in many cases, calling the **gc_OpenEx()** function for the first channel running the protocol).
2. Find the protocol ID by its name. Call the **gc_QueryConfigData()** function with:
target type = GCTGT_GCLIB_SYSTEM
target id = 0

- query ID** = GCQUERY_PROTOCOL_NAME_TO_ID
source data = protocol name
- Find the CDP parameter ID by its name. Call **gc_QueryConfigData()** function with:
target type = GCTGT_PROTOCOL_SYSTEM
target id = protocol ID
query ID = GCQUERY_PARM_NAME_TO_ID
source data = CDP name
 - Create the target object data (a GC_PARM_BLK data structure) with the appropriate set ID, parm ID, value size, and value by calling the Global Call utility functions **gc_util_insert_ref()** or **gc_util_insert_val()**. See the *Global Call API Library Reference* for more information.
 - Call the **gc_GetConfigData()** or **gc_SetConfigData()** function with:
target_type = GCTGT_PROTOCOL_SYSTEM (for getting or setting the parameter on a system-wide basis, that is, for all channels) or GCTGT_PROTOCOL_CHAN (for getting or setting the parameter on an individual channel)
target_id = protocol ID
time_out = 0
mode = EV_SYNC

Note: If a CDP parameter value is changed, the change takes effect for newly opened devices only. It does not apply to devices that are already opened.
 - If the **gc_GetConfigData()** function returns successfully, then obtain the individual parameter data by calling the **gc_util_get_next_parm()** function. If an error occurs, call the **gc_ErrorInfo()** function to find the error and correct it.
 - Call the **gc_OpenEx()** function to open other channels with updated values of CDP parameters.

The following code shows a function that can be used to change a modifiable CDP parameter value for a channel:

```
// name = CDP parameter name
// val = pointer to data
// size = size of data

void ChangeChannelCDPParm( LINEDEV chan, char *name, void *val, int size )
{
    int id;          /* protocol ID */
    char prot_name[] = "pdk_ar_r2_io";
    GC_PARM src, dest;
    GC_PARM_ID pair;
    GC_PARM_BLK *pblkp = NULL;
    GC_PARM_DATA *parm;
    long req_id;

    // Get Protocol ID from name
    src.paddress = prot_name;
    gc_QueryConfigData( GCTGT_GCLIB_SYSTEM, 0, &src,
                       GCQUERY_PROTOCOL_NAME_TO_ID, &dest );
    id = dest.intvalue;

    // Get CDP parameter IDs from name
    src.paddress = name;
    dest.pstruct = &pair;
    gc_QueryConfigData( GCTGT_PROTOCOL_SYSTEM, id, &src,
                       GCQUERY_PARM_NAME_TO_ID, &dest );
```

```

// Build GC_PARM_BLK and call SetConfigData to change CDP parameter
gc_util_insert_parm_ref( &pblkp, pair.set_ID, pair.parm_ID, size, val );
gc_SetConfigData( GCTGT_PROTOCOL_CHAN, chan, pblkp, 0, GCUPDATE_ATNULL,
                 &req_id, EV_SYNC ); /* Must be GCUPDATE_ATNULL for CDP parameters */
gc_util_delete_parm_blk( pblkp );
pblkp = NULL; /* strictly speaking, not necessary, but it is good practice to
              always set the parm block pointer to NULL when done with it */
}

```


9.8.4 Getting or Setting Line Device Configuration in Synchronous Mode

The Global Call RTCM feature also allows the customer application to retrieve or change the default configuration of a line device in synchronous mode. Synchronous mode can be used effectively in any of the following cases:

- The request is to retrieve parameters.
- The request is to update parameters that are NOT call related.
- The request is to update parameters that are call related but there is no active call on the target object.
- The **target type** is neither GCTGT_FIRMWARE_CHAN nor GCTGT_FIRMWARE_NETIF (that is, the parameters are not maintained in the firmware).

Figure 39 shows the procedure for getting or setting line device configuration in synchronous mode.

Figure 39. Getting or Setting Line Device Configuration in Synchronous Mode

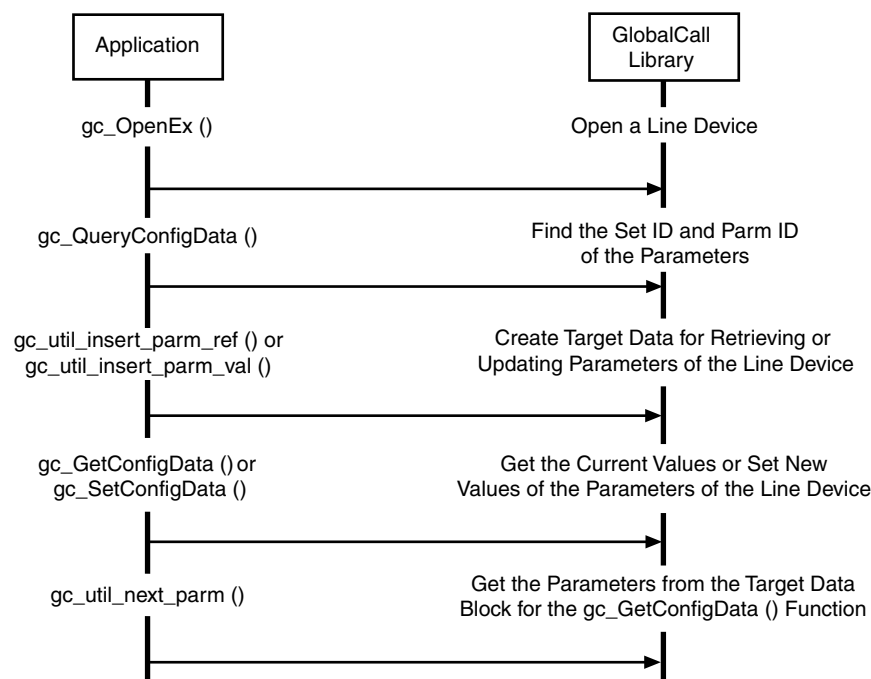

The following describes the procedure for getting or setting the configuration of a Line Device:

1. Open the line device (by calling the **gc_OpenEx()** function) and get the line device ID.
2. If the parameters of the line device are protocol CDP parameters, use an approach similar to getting the CDP **parameter ID** described in the “Getting or Setting Protocol Configuration in Synchronous Mode” section.
3. Create the target object data (a GC_PARM_BLK data structure) with the appropriate set ID, parm ID, value size, and value, if applicable, by calling the Global Call utility functions. See the *Global Call API Library Reference* for more information on the utility functions.
4. Call the **gc_GetConfigData()** or **gc_SetConfigData()** function with:
target_type = GCTGT_CCLIB_NETIF, GCTGT_PROTOCOL_NETIF,
GCTGT_CCLIB_CHAN or GCTGT_PROTOCOL_CHAN
target_id = Global Call line device ID
time_out > 0
mode = EV_SYNC
update condition = GCUPATE_IMMEDIATE (**gc_SetConfigData()** function only)
5. If the **gc_GetConfigData()** function returns successfully, obtain the individual parameter data by calling the **gc_util_get_next_parm()** function. If an error occurs, call the **gc_ErrorInfo()** function to find the error and then correct it.


9.8.5 Setting Line Device Configuration in Asynchronous Mode

The Global Call RTCM allows the customer application to retrieve or change the default configuration of a line device in asynchronous mode. Asynchronous mode is generally suggested to be used in either of the following cases:

- The request is to update parameters that are call related and the channel is not at the NULL state
- The **target type** is GCTGT_FIRMWARE_CHAN or GCTGT_FIRMWARE_NETIF (that is, the parameters are maintained in firmware).

Figure 40 shows the procedure for setting line device configuration in asynchronous mode.

Figure 40. Setting Line Device Configuration in Asynchronous Mode

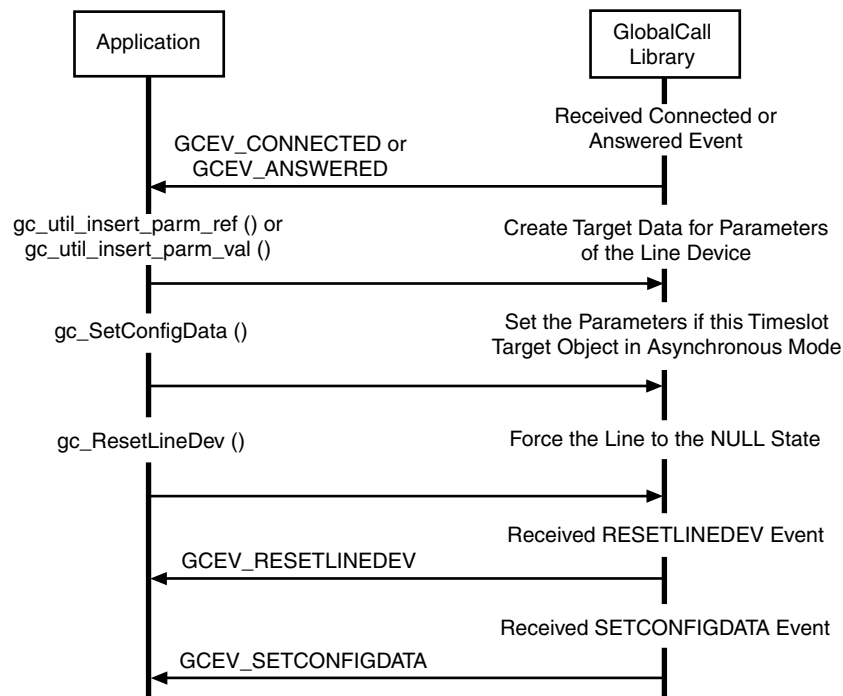

The procedure for setting the configuration of a Line Device in asynchronous mode is as follows:

1. The channel has an active call. Create the target object data (that is, a GC_PARM_BLK data structure) with the appropriate **set ID**, **parm ID**, **value size**, and **value buffer** by calling the Global Call utility functions. See the *Global Call API Library Reference* for more information.
2. Call the **gc_SetConfigData()** function with:
target_type = GCTGT_CCLIB_NETIF, GCTGT_PROTOCOL_NETIF, GCTGT_FIRMWARE_NETIF, GCTGT_CCLIB_CAHN, GCTGT_PROTCOOL_CHAN, or GCTGT_FIRMWARE_CHAN
target_id = Global Call line device ID
time_out = 0
mode = EV_ASYNC
update condition = GCUPATE_ATNULL
3. Call the **gc_ResetLineDev()** function to enforce the line to the NULL state.
4. If the **gc_ResetLineDev()** function is successful, a GCEV_RESETLINE event is received. If the **gc_SetConfigData()** function is successful, a GCEV_SETCONFIGDATA event is received. If the GCEV_SETCONFIGDATA_FAIL event is received, call the **gc_ResultInfo()** function to find the error and correct it.

This chapter describes the Global Call Service Request (GCSR) feature. Topics include the following:

- Service Request Overview. 153
- Service Request Components 154
- Service Request Data. 155
- General Service Request Scenario. 155
- ISDN BRI-Specific Service Request Scenario 156

10.1 Service Request Overview

The Global Call Service Request (GCSR) feature is an optional feature that allows a device to send a request to another remote device for some kind of service. Some examples of the services that may be requested are:

- Device Registration
- Channel Setup
- Call Setup
- Information Requests
- Operational Requests

In general, this feature is useful when a Global Call application needs to make a request between two Global Call devices across a network.


Some examples of typical uses are:

- Registration Requests
- Administration Requests (for example, logon requests)
- Bandwidth Requests
- Capabilities Requests (for example, determining remote-side capabilities)
- Preference Requests (for example, informing remote-side of setup preferences)

Since this feature is rather generic, the capabilities in a given technology are largely dependent on the support provided by the call control libraries for that technology. Refer to the appropriate *Global Call Technology User's Guide* for more information.

Figure 41 shows the architecture of the GCSR feature.

Figure 41. Service Request Architecture

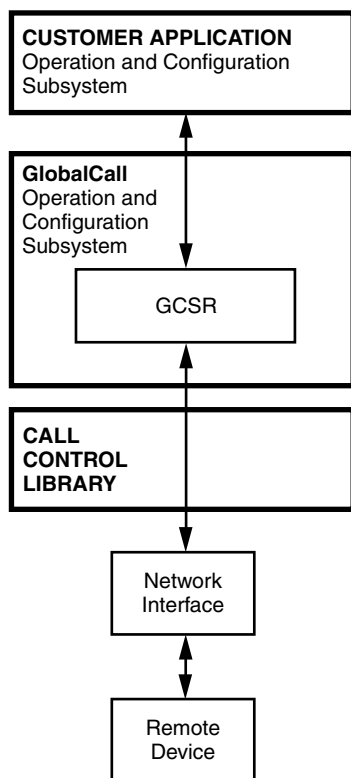

10.2 Service Request Components

Using the Global Call Service Request (GCSR) feature involves the following API components:

gc_ReqService()

function to make a request

gc_RespService()

function to respond to a request

GCEV_SERVREQ

an event indicating that a request has been received

GCEV_SERVRESP

an event indicating a response has been received; therefore, this is also a termination event for the **gc_ReqService()** function

GCEV_SERVRESPCMPLT

termination event for the **gc_RespService()** function

When using the GCSR, all requests and responses are to be made on specific device targets (that is, LDID, CRN), and depending on the type of request and the call control library used, additional

restrictions may apply. See the appropriate *Global Call Technology User's Guide* for more information.

10.3 Service Request Data

All information transmitted and received using the Service Request feature is done using the generic GC_PARM_BLK data structure. Three parameter IDs, under the GCSET_SERVREQ set ID, are used for all requests and responses:

PARM_SERVICEID (unsigned long)

the service identification number. This is a number assigned by the call control library to distinguish between requests and is used as follows:

- When making a request (**gc_ReqService()**), ignore this field.
- When generating a response (**gc_RespService()**), this value needs to be set to the same ID as the ID of the received request (through GCEV_SERVREQ).
- When receiving a response (through GCEV_SERVRESP), this field should match the ID assigned when the request was first made.

PARM_REQTYPE (int)

the type of request made. Refer to the appropriate *Global Call Technology User's Guide* for the actual values.

PARM_ACK (short)

the acknowledgement field with the following usage:

- When used for a service request, a value of GC_ACK indicates that a response is required, and a value of GC_NACK indicates that no response is necessary.
- When used for a service response, a value of GC_ACK indicates a confirmation, and a value of GC_NACK indicates a rejection.

Depending on the call control library used, additional parameters may also be used. Refer to the *Global Call API Library Reference* for more information about the GC_PARM_BLK data structure. Before the Service Request feature can be used, a GC_PARM_BLK data structure must be set up to handle the data associated with the service request. Each request or response is assigned a Service ID by the call control library and should be used by the application when generating responses as well as to distinguish among different request and responses. See the GC_PARM_BLK data structure and utility functions (gc_util_*) in the *Global Call API Library Reference* for more information on setting up the data structure for the Service Request feature.


- Notes:**
1. When using the **gc_ReqService()** function, PARM_REQTYPE and PARM_ACK are *mandatory* parameters of the GC_PARM_BLK pointed to by the **reqdatap** function parameter.
 2. When using the **gc_RespService()** function, PARM_SERVICEID is a *mandatory* parameter of the GC_PARM_BLK pointed to by the **datap** function parameter.

10.4 General Service Request Scenario

Figure 42 is a general scenario of how the Service Request feature operates in asynchronous mode. Since the Service Request feature is generic, the nature of each request and response depends on

the underlying call control library. Refer to the appropriate *Global Call Technology User's Guide* for more information.

Figure 42. Generic Service Request Operation

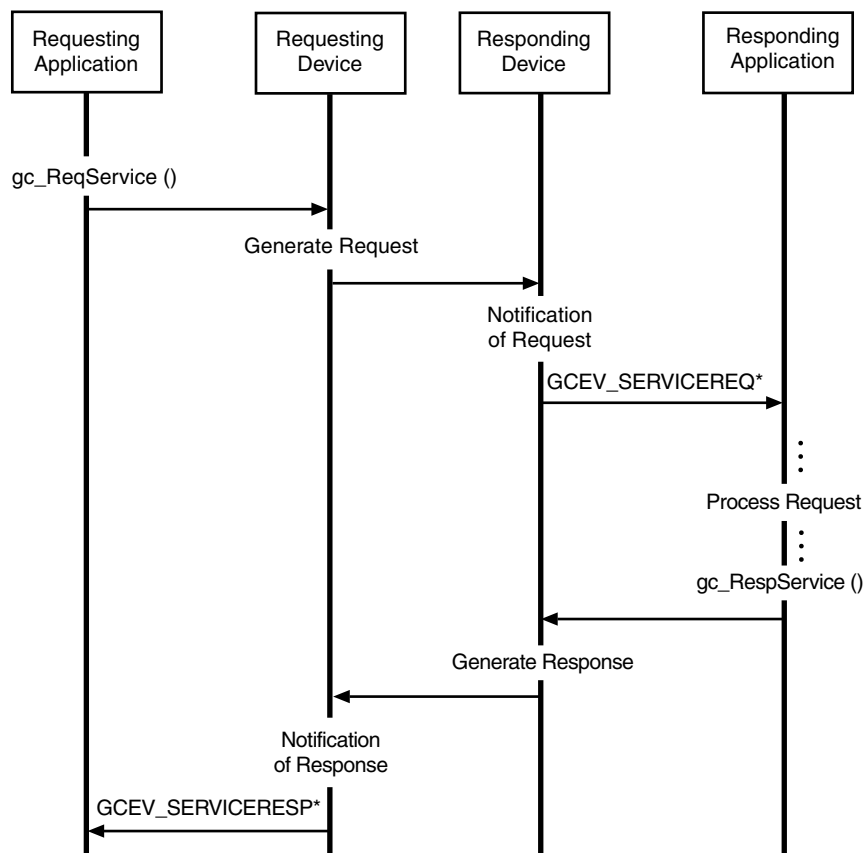


Note: * Indicates that the extdatap of each of these events contains a pointer to GC_PARM_BLK, which in turn contains all the information associated with the corresponding request or response. The pointer is only valid until the next call to `gc_GetMetaEvent ()` or `gc_GetMetaEventEx ()`.

10.5 ISDN BRI-Specific Service Request Scenario

In ISDN BRI, the request for device registration is automatically generated when the device is initialized, so this feature is essentially used in a response-only manner by the network side. See Figure 43.

Figure 43. ISDN BRI Service Request Operation

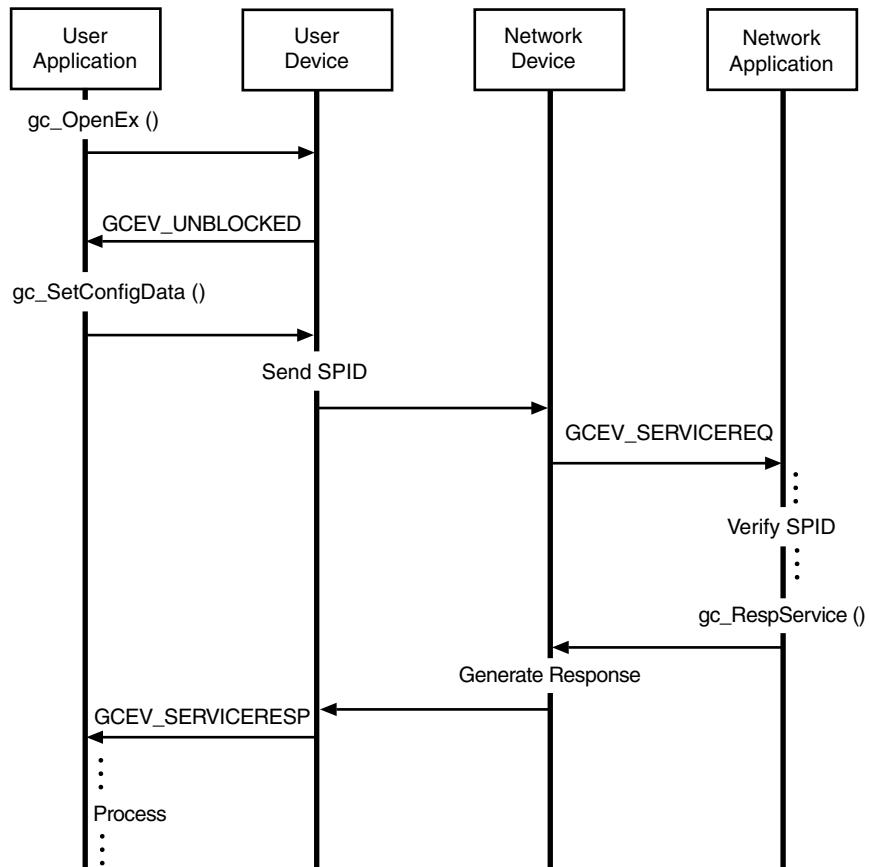

This chapter provides general information for build applications that use the Global Call software. For additional technology-specific information, refer to the appropriate *Global Call Technology User's Guide*. Topics included in this chapter are:

- [Compiling and Linking](#) 159

11.1 Compiling and Linking

An application that uses the Global Call software must include references to the Global Call header files and must include the appropriate library files. In addition, when using specific protocols, other libraries and protocol modules are dynamically loaded. The Windows libraries may be linked and run using Microsoft Visual C++ (version 6.x or later) or the Borland C++ compiler but restrictions apply when using the Borland software. The following topics provide more information:

- [Include Files](#)
- [Required Libraries](#)
- [Variables for Compiling and Linking Commands](#)
- [Dynamically Loaded Libraries](#)
- [Dynamically Loaded Protocol Modules](#)
- [Compiling Libraries for Cross-Compatibility](#)

11.1.1 Include Files

The following header files contain equates that are required for each Windows application that uses the Global Call library:

gc.lib.h
primary Global Call header file

gcerr.h
header file containing equates for error codes

Note: See the appropriate *Global Call Technology User's Guide* for technology-specific header files.

11.1.2 Required Libraries

The following library files must be linked to the application:

libgc.lib
the primary Global Call library file.

libdxxmt.lib
the primary Voice library file. This library is only required if the application uses voice library functions directly, for example, **dx_play()**.

11.1.3 Variables for Compiling and Linking Commands

In System Release 6.0, the following variables have been introduced to provide a standardized way of referencing the directories that contain header files and shared objects:

INTEL_DIALOGIC_INC

Variable that points to the directory where header files are stored.

INTEL_DIALOGIC_LIB

Variable that points to the directory where shared library files are stored.

These variables are automatically set at login and should be used in compiling and linking commands. The following is an example of a compiling and linking command that uses these variables:

```
cc -I${INTEL_DIALOGIC_INC} -o myapp myapp.c -L${INTEL_DIALOGIC_LIB} -lgc
```

Note: It is strongly recommended that developers begin using these variables when compiling and linking applications since they will be required in future releases. The name of the variables will remain constant, but the values may change in future releases.

The following library files should be linked to the application:

libgc.lib

the primary Global Call library

libdxxmt.lib

the primary Voice library. This library is required only if the application uses R4 voice library functions directly, for example, **dx_play()**.

11.1.4 Dynamically Loaded Libraries

When the **gc_Start()** function is called, the configured library or libraries that are used by the application are dynamically loaded. The libraries include:

libgcan.dll

ANAPI call control library

pdkrt.dll

PDKRT call control library

libgcr2.dll

ICAPI call control library

libgcis.dll

ISDN call control library

libdm3cc.dll

DM3 call control library

libgcs7.dll

SS7 call control library

libgcipm.dll

IP call control library

If a configured library cannot be found, the Global Call API enters an error message in the event logger.

Note: The PDKRT and ICAPI call control libraries can be concurrently linked and loaded.

11.1.5 Dynamically Loaded Protocol Modules

When an application uses ANAPI, ICAPI or PDK protocols, protocol libraries and modules are also dynamically loaded when requested by an application, typically when a device that uses the protocol is opened using **gc_OpenEx()**.

Caution: For System Release 5.1 or later, you must use protocols from the Global Call Protocol Package CD that contains shared library versions of all protocols for each operating system that Global Call supports. Previously released static protocol modules are **not** supported by System Release 5.1 or later.

For the ANAPI (analog) protocol, the libgcan.dll is dynamically loaded. In addition, a protocol module is loaded. The protocol module uses the following naming format:

- *cc_an_ffff_io.dll* or *cc_an_d.dll*
Where: cc=country, an=analog, ffff=special hardware or software feature, io=input/output, d=direction

For PDK protocols (E-1 CAS or T-1 robbed bit), protocol modules [protocol state information (.psi) files] are also dynamically loaded when required by the application. These protocol modules use the following naming format:

- *ccl_cc_tt_ffff_d.psi* or *cc_tt_d.psi*
Where: ccl=call control library, cc=country code, tt=protocol type, ffff=special hardware or software feature, d=direction indicator

For ICAPI protocols (E-1 CAS or T-1 robbed bit), protocol modules are dynamically loaded when required by the application. These protocol modules use the following naming format:

- *ccl_cc_tt_ffff_d.dll* or *ccl_cc_tt_d.dll*
Where: ccl=call control library, cc=country code, tt=protocol type, ffff=special hardware or software feature, d=direction indicator

See the *Global Call E-1/T-1 CAS/R2 Technology User's Guide* for more information.

See the *Global Call ISDN Technology User's Guide* for more information about using ISDN protocols.

11.1.6 Compiling Libraries for Cross-Compatibility

For users of the Borland C++ compiler, the Global Call API allows multiple libraries to be compiled for cross-compatibility. When using Borland to create cross-compatibility between libraries, observe the following:

- The application needs to compile with all the cross-compatibility libraries it uses (GCLIB, SRL, DTI, etc.).



- The application needs to call the **gcapi_libinit(DLGC_MT)** function before making any calls to other Intel® Dialogic® functions. This function loads all the DLLs for the Global Call and system libraries.

This chapter provides references to Global Call Technology User's Guides that include technology-specific information for debugging applications that use the Global Call software.

The facilities that Global Call provides for debugging applications are technology-specific. The following guides provide debugging information:

- *Global Call Analog Technology User's Guide*
- *Global Call E-1/T-1 CAS/R2 Technology User's Guide*
- *Global Call ISDN Technology User's Guide*
- *Global Call IP Technology User's Guide*
- *Global Call SS7 Technology User's Guide*

Glossary

ASO: Alarm Source Object. The source of an alarm, for example, either a physical alarm or a logical alarm.

ANI-on-Demand: A feature of AT&T ISDN service whereby the user can automatically request caller ID from the network even when caller ID does not exist.

ANI: Automatic Number Identification. A service that identifies the phone number of the calling party.

ASCII: American Standard Code for Information Interchange.

asynchronous function: A function that returns immediately to the application and returns a completion/termination at some future time. An asynchronous function allows the current thread to continue processing while the function is running.

asynchronous mode: Classification for functions that operate without blocking other functions.

atomic synchronous function: Typically terminates immediately, returns control to the application and does not cause a call state transition.

available library: A call control library configured to be recognized by the Global Call API and successfully started by the Global Call `gc_Start()` function.

B channel: A bearer channel used in ISDN interfaces. This circuit-switched, digital channel can carry voice or data at 64,000 bits/second in either direction

BC: see Bearer Capability.

Bearer Capability: A field in an ISDN call setup message that specifies the speed at which data can be transmitted over an ISDN line.

blind dialing: Dialing without waiting for dial tone detection.

blocked: The condition of a line device initially when it is opened and after a `GCEV_BLOCKED` event has been received on that line device. When a line device is in a blocked condition, the application can only perform a limited subset of the Global Call commands on that line device. Call related functions may not be called with the exception of `gc_DropCall()`, `gc_ReleaseCall()` and `gc_ReleaseCallEx()`. Non-call related functions are generally allowed. See also “unblocked” below.

blocking alarm: An alarm that causes a `GCEV_BLOCKED` event to be sent to the application. When the application receives a `GCEV_BLOCKED` event, the line device is blocked which means only a limited subset of the Global Call commands are available to the application.

bonding: Bandwidth ON Demand Interoperability Group - an inverse-multiplexing method used to combine multiple channels into a single, coherent channel.

call analysis: a process used to automatically determine what happened after an outbound call is dialed. Call analysis monitors the progress of an outbound call after dialing and provides information to allow the application to process the call based on the status of the call. Call analysis can determine 1) if the line is answered and, in many cases, how the line is answered, 2) if the line rings but is not answered, 3) if the line is busy or 4) the problem in completing the call.

call control: the process of setting up a call and call tear-down.

Call control library: A collection of routines that interact directly with a network interface. These libraries are used by the Global Call functions to implement network specific commands and communications.

call progress tone: a tone sent from the PTT to tell the calling party the progress of the call, (for example, a dial tone, busy tone, or ringback tone). The PTT's can provide additional tones, such as a confirmation tone, splash tone or a reminder tone, to indicate a feature in use.

Call Reference Number (CRN): A number assigned by the Global Call library to identify a call on a specific line device.

call states: Call processing stages in the application.

CAS: Channel Associated Signaling. Signaling protocols in which the signaling bits for each time slot are in a fixed location with respect to the framing. In E-1 systems, time slot 16 is dedicated to signaling for all 30 voice channels (time slots). The time slot the signaling corresponds to is determined by the frame number within the multiframe and whether it's the high or low nibble of time slot 16. In T-1 systems, the signaling is also referred to as robbed-bit signaling, where the least significant bit of each time slot is used for the signaling bits during specific frames.

CEPT: Conference des Administrations Europeenes des Postes et Telecommunications. A collection of groups that set European telecommunications standards.

compelled signaling: Transmission of next signal is held until acknowledgement of the receipt of the previous signal is received at the transmitting end.

configured library: A call control library supported by the Global Call API.

congestion: Flow of user-to-user data

CDP: Country Dependent Parameter; see the Global Call Country Dependent (CDP) Reference for details.

CRN: see Call Reference Number.

CRV: Call Reference Value

D channel: The data channel in an ISDN interface that carries control signals and customer call data in packets. This information is used to control transmission of data on associated B channels.

data structure: Programming term for a data element consisting of fields, where each field may have a different definition and length. A group of data structure elements usually share a common purpose or functionality.



device handle: numerical reference to a device, obtained when a device is opened. This handle is used for all operations on that device. See also Call Reference Number.

DDI string: string of Direct Dialing In digits that identifies a called number.

DLL (Dynamically Linked Library) (Windows): a sequence of instructions, dynamically linked at runtime and loaded into memory when they are needed. These libraries can be shared by several processes.

device: Any computer peripheral or component that is controlled through a software device driver.

device channel: An Intel® Dialogic® data path that processes one incoming or outgoing call at a time. Compare time slot.

digital channel: Designates a bi-directional transfer of data for a single time slot of a T-1 or an E-1 digital frame between a T-1/E-1 device that connects to the digital service and the SCbus. Digitized information from the T-1/E-1 device is sent to the SCbus over the digital transmit channel. The response to this call is sent from the SCbus to the T-1/E-1 device over the digital receive (listen) channel.

DNIS: Dialed Number Identification Service. A feature of 800 lines that allows a system with multiple 800 lines in its queue to access the 800 number the caller dialed. Also provides caller party number information.

DPNSS: Digital Private Network Signaling System. An E-1 primary rate protocol used in Europe to pass calls transparently between PBXs.

driver: A software module that provides a defined interface between a program and the hardware.

Drop and Insert: 1. A process where the information carried by a transmission system is demodulated (dropped) at an intermediate point and different information is entered (inserted) for subsequent transmission. 2. A configuration in which two network interface resources are connected via an internal bus, such as the SCbus, to connect calls from one network interface to the other. A call from one network interface can be dropped to a resource, such as a voice resource, for processing. In return, the resource can insert signaling and audio and retransmit this new bit stream via the internal bus and connect the call to a different channel. Drop and insert configurations provide the ability to access an operator or another call.

E-1 CAS: E-1 line using Channel Associated Signaling. In CAS, one of the 32 channels (time slot 16) is dedicated to signaling for all of the 30 voice channels.

E-1: Another name given to the CEPT digital telephony format devised by the CCITT that carries data at the rate of 2.048 Mbps (DS-1 level).

en-bloc mode: Mode where the setup message contains all the information required by the network to process the call, such as the called party address information.

event: An unsolicited communication from a hardware device to an operating system, application, or driver. Events are generally attention-getting messages, allowing a process to know when a task is complete or when an external event occurs.

extended asynchronous: For Windows environments, the extended asynchronous (multithread asynchronous) model extends the features of the asynchronous model with the extended functions, **sr_WaitEvtEx()** and

gc_GetMetaEventEx(). These extended functions allow an application to run different threads, wherein each thread handles the events from a different device.

failed library: A call control library configured to be recognized by the Global Call API and which did not successfully start when the Global Call `gc_Start()` function was issued.

glare: when an inbound call arrives while an outbound call is in the process of being setup, a *glare* condition occurs. Unless the protocol specifies otherwise, the incoming call takes precedence over the outbound call.

Global Call: A unified, high-level API that shields developers from the low-level signaling protocol details that differ in countries around the world. Allows the same application to easily work on multiple signaling systems worldwide (for example, ISDN, T-1 robbed bit, R2/MF, pulsed, SS7, IP H.323 etc.).

IA5: International Alphabet No. 5 (defined by CCITT).

ICAPI: The Interface Control Application Programming Interface. Provides a device specific telephony and signaling interface for the Global Call API to control Intel® Dialogic network interface boards using T-1 robbed bit or E-1 CAS signaling schemes. Also the name of a call control library configured for Global Call. This library cannot be accessed directly.

IE: see Information Element.

Information Element (IE): Used by the ISDN (Integrated Services Digital Network) protocol to transfer information. Each IE transfers information in a standard format defined by CCITT standard Q.931.

Integrated Services Digital Network: see ISDN.

ISDN: Integrated Services Digital Network. An internationally accepted standard for voice, data, and signaling that provides users with integrated services using digital encoding at the user-network interface. Also the name of a call control library configured for Global Call.

LAPB: Link Access Protocol Balanced.

LAPD: Link Access Protocol on the D channel.

Line Device Identifier: (LDID) A unique number that is assigned to a specific device or device group by Global Call.

main thread: see thread.

multitasking functions: Functions that allow the software to perform concurrent operations. After being initiated, multitasking functions return control to the application so that during the time it takes the function to complete, the application program can perform other operations, such as servicing a call on another line device. When using the MS-DOS operating system, Global Call multitasking functions operate in the same manner as asynchronous functions.

multithread asynchronous: see extended asynchronous.

network handle: SRL device handle associated with a network interface board or time slot; equivalent to the device handle returned from the network library's `dt_open()` function.



network resource: Any device or group of devices that interface with the telephone network. Network resources include digital (E-1 CAS, T-1 robbed bit, and ISDN) network interface devices. Network resources are assigned to telephone lines (calls) on a dedicated or a shared resource basis. Network resources control the signal handling required to manage incoming calls from the network and the outgoing calls to the network.

NCAS: Non-Call Associated Signal - allows users to communicate by user-to-user signaling without setting up a circuit-switched connection (this signal does not occupy B channel bandwidth). A temporary signaling connection is established and cleared in a manner similar to the control of a circuit-switch connection. Since NCAS calls are not associated with any B channel, applications receive and transmit NCAS calls on the D channel line device. Once the NCAS connection is established, the application can transmit user-to-user messages using the CRN associated with the NCAS call. An ISDN feature that supports the 5ESS protocol.

Network Facility Associated Signal: see NFAS.

NFAS: Network Facility Associated Signal - allows multiple spans to be controlled by a single D channel subaddressing.

Non-Call Associated Signal: see NCAS.

NSI: Network Specific Information message.

NT1: Network Terminator - the connector at either end of an ISDN link that converts the two-wire ISDN circuit interface to four wires.

null: A state in which no call is assigned to the device (line or time slot).

overlap viewing: a condition of waiting for additional information about the called party number (destination number).

PDKRT: The Intel® Dialogic Protocol Development Kit Run Time call control library. Provides a device specific telephony and signaling interface for the Global Call API to control Intel® Dialogic network interface boards using T-1 robbed bit or E-1 CAS signaling schemes. A call control library configured for Global Call.

preemptive multitasking: a form of multitasking wherein the execution of one thread or process can be suspended by the operating system to allow another thread to execute. Windows uses preemptive multitasking to support multiple simultaneous processes.

PRI: Primary Rate Interface - interface at the ends of high-volume trunks linking CO facilities and ISDN network switches to each other. A T-1 ISDN PRI transmits 23 B channels (voice/data channels) and one D channel (signaling channel), each at 64 Kbps. An E-1 ISDN PRI transmits 30 B channels, one D channel and one framing channel (synchronization channel), each at 64 Kbps. A standard digital telecommunication service, available in many countries and most of the United States, that allows the transfer of voice and data over T-1 or E-1 trunks.

Primary Rate Interface: see PRI.

primary thread: see thread.

process (Windows): (1) an executing application comprising a private virtual address space, code, data and other operating system resources, such as files, pipes and synchronization objects that are visible to the process. A process contains one or more threads that run in the context of the process. (2) is the address space where the

sequence of executable instructions is loaded. A process in Windows consists of blocks of code in memory loaded from executables and dynamically linked libraries (DLL). Each process has its own 4 GB address space and owns resources such as threads, files and dynamically allocated memory. Code in the address space for a process is executed by a thread. Each process comprises at least one thread which is the component that Windows actually schedules for execution. When an application is launched, Windows starts a process and a primary thread. Windows processes: 1). are implemented as objects and accessed using object services; 2). can have multiple threads executing in their address space; 3). have built-in synchronization for both process objects and thread objects. Unlike other operating systems, Windows does not use a parent/child relationship with the processes it creates.

PSI: Protocol State Information file used by the PDKRT to define a specific protocol.

PSTN: see Public Switched Telephone Network.

Public Switched Telephone Network (PSTN): Refers to the worldwide telephone network accessible to all those with either a telephone or access privileges.

R2 MFC: An international signaling system that is used in Europe, South America and the Far East to permit the transmission of numerical and other information relating to the called and calling subscribers' lines.

receive: Accepting or taking digitized information transmitted by another device.

result value: Describes the reason for an event.

RFU: Reserved for future use.

SCbus: Signal Computing bus. Third generation TDM (Time Division Multiplexed) resource sharing bus that allows information to be transmitted and received among resources over multiple data lines. A hardwired connection between Switch Handlers (SC2000 chips) on SCbus-based products for transmitting information over 1024 time slots to all devices connected to the SCbus.

SCSA: Signal Computing System Architecture. An open-hardware and software standard architecture that incorporates virtually every other standard in PC-based switching. SCSA describes the components and specifies the interfaces for a signal processing system. SCSA describes all elements of the system architecture from the electrical characteristics of the SCbus and SCxbus to the high level device programming interfaces. All signaling is out of band. In addition, SCSA offers time slot bundling and allows for scalability.

SDP: Site Dependent Parameter file used by the PDKRT. Protocol configuration parameters that are user modifiable for a specific installation site.

SIT: Special Information Tone.

Special Information Tone (SIT): Detection of an SIT sequence indicates an operator intercept or other problem in completing a call.

SRL (Standard Runtime Library): A Intel® Dialogic library that contains C functions common to all Intel® Dialogic devices, a data structure to support application development, and a common interface for event handling.

supervised transfer: A call transfer in which the person transferring the call stays on the line, announces the call, and consults with the party to whom the call is being transferred before the transfer is completed.



synchronous function: Synchronous functions block an application or process until the required task is successfully completed or a failed/error message is returned.

synchronization objects: Windows executive objects used to synchronize the execution of one or more threads. These objects allow one thread to wait for the completion of another thread and enable the completed thread to signal its completion to any waiting thread(s). Threads in Windows are scheduled according to their priority level (31 levels are available) and run until one of the following occurs: 1) its maximum allocated execution time is exceeded, 2) a higher priority thread marked as waiting becomes waiting or 3) the running thread decides to wait for an event or an object.

synchronous mode: programming characterized by functions that run uninterrupted to completion. Synchronous functions block an application or process until the required task is successfully completed or a failed/error message is returned.

T-1: A digital line transmitting at 1.544 Mbps over 2 pairs of twisted wires. Designed to handle a minimum of 24 voice conversations or channels, each conversation digitized at 64 Kbps. T-1 is a digital transmission standard in North America.

T-1 robbed bit: A T-1 digital line using robbed bit signaling. In T-1 robbed bit signaling systems, typically the least significant bit in every sixth frame of each of the 24 time slots is used for carrying dialing and control information. The signaling combinations are typically limited to ringing, hang up, wink and pulse digit dialing.

TBCT: see Two B Channel Transfer.

TEI: Terminal Endpoint Identifier (see Recommendations Q.920 and Q.921).

termination condition: An event that causes a process to stop.

termination events: Global Call events returned to the application to terminate function calls.

thread (Windows): The executable instructions stored in the address space of a process that the operating system actually executes. All processes have at least one thread, but no thread belongs to more than one process. A multithreaded process has more than one thread that are executed seemingly simultaneously. When the last thread finishes its task, then the process terminates. The main thread is also referred to as a primary thread; both main and primary thread refer to the first thread started in a process. A thread of execution is just a synonym for thread.

time slot: In a digital telephony environment, a normally continuous and individual communication (for example, someone speaking on a telephone) is (1) digitized, (2) broken up into pieces consisting of a fixed number of bits, (3) combined with pieces of other individual communications in a regularly repeating, timed sequence (multiplexed), and (4) transmitted serially over a single telephone line. The process happens at such a fast rate that, once the pieces are sorted out and put back together again at the receiving end, the speech is normal and continuous. Each individual pieced-together communication is called a time slot.

tone resource: Same as a voice resource except that a tone resource cannot perform voice store and forward functions.

transmit: Sending or broadcasting of digitized information by a device.

Two B Channel Transfer (TBCT): Connects two independent B Channel calls at an ISDN PRI user's interface to each other at the PBX or CO. The ISDN PRI user sends a Facility message to the PBX or CO requesting that the two B Channel calls be connected. If accepted, the user is released from the calls.

unsolicited event: An event that occurs without prompting (for example, GCEV_BLOCKED, GCEV_UNBLOCKED, etc.).

USID: User Service Identifier.

unblocked: The condition of a line device such that an application can perform any valid function on the line device, for example, wait for a call or make a call. By default, when a line device is first opened, it is in the blocked condition. The application receives a GCEV_UNBLOCKED event to indicate that the line device has moved to an unblocked condition from a previously blocked condition. See also “blocked” above.

unsupervised transfer: A transfer in which the call is transferred without any consultation or announcement by the person transferring the call.

UUI: User-to-User Information. Proprietary messages sent to remote system during call establishment.

Vari-A-Bill: Service bureaus can vary the billing rate of a 900 call at any time during the call. Callers select services from a voice-automated menu and each service can be individually priced.

voice channel: Designates a bi-directional transfer of data for a single call between a voice device processing that call and the SCbus. Digitized voice from the T-1/E-1 interface device is transmitted over the SCbus to the voice receive (listen) channel for processing by the voice device. The voice device sends the response to the call over the voice transmit channel to an SCbus time slot that transmits this response to the T-1/E-1 interface device.

voice handle: SRL device handle associated with a voice channel; equivalent to the device handle returned from the voice library's **dx_open()** function.

voice resource: same as a voice channel.

A

- abandoned calls 48
 - GCRV_CALLABANDONED 48
- alarm flow 127
- alarm handling 121
- alarm source objects 121
- ALARM_SOURCE_ID_NETWORK_ID
 - usage 126
- alarms 121
 - blocking 123
 - GCEV_UNBLOCKED event 123
 - non-blocking 123
 - recovery 123
- analog links 117
- application-handler thread, Windows 95
- ASO 121
- asynchronous mode
 - Windows 29
- asynchronous models
 - Windows 29
- asynchronous programming model
 - Windows 29
- asynchronous with SRL callback 95
- asynchronous with SRL callback model
 - Windows 29, 30
- asynchronous with SRL callback thread 28
- asynchronous with Win32 synchronization
 - Windows 29
- asynchronous with Win32 synchronization model 30
- asynchronous with Windows callback
 - Windows 29
- asynchronous with Windows callback model
 - Windows 30
- automatic error recovery 98

B

- blocking alarms 123
 - time slot level 124
 - trunk level 124
- blocking condition 93

C

- call disconnect 80
- call reference number
 - multiple 115
- call state
 - transitions summary 55
- call states
 - asynchronous termination summary 63
 - synchronous call termination transitions 80
- call teardown 62
- call termination 62
 - asynchronous 64
 - synchronous mode 80
- Configuration
 - fixed/flexible routing 103
- coupled resources 104
- CRN
 - support for multiple on DM3 boards 115
- CRN (Call Reference Number) 19
 - lifespan 20
 - released CRN and late events 93

D

- data structures
 - GC_RTCM_EVTDATA 142
 - METAEVENT 93
- device handles
 - extracting 118
- device threads 27
- Disconnected state
 - transition 64, 82
 - transition when alarm occurs 124
- drop and insert applications
 - programming tips 102
- dt_getevt(_) 28
- dx_getevt(_) 28

E

- error events
 - GCEV_TASKFAIL 97
- error handling 97
 - automatic error recovery 98
 - fatal errors 98

- event data in metaevent 93
- event handlers 28, 94
 - event handler thread 95
 - SRL event handler thread 30
 - Windows 30
- event mask 84
- event notification, asynchronous mode programming 29
- event processing thread, SRL 28
- event processing, Windows 94
- events
 - CRN in METAEVENT structure 93
 - LDID association 19
 - non GlobalCall events 93
 - reason code 93
 - retrieving 93
- exiting an application
 - programming tips 101
- extended asynchronous programming model, Windows 29, 31

F

- fatal errors 98
- fax device handle
 - fixed routing 113
- Features
 - call control 14
 - operation, administration and maintenance 14
- firmware 138
- firmware module 138
- Fixed routing
 - configuration 103
- fixed routing
 - GlobalCall API 111
- Flexible routing
 - configuration 103
- fx_open()
 - fixed routing 113

G

- gc_BlindTransfer(_) 87
- gc_Close()
 - LDID becomes invalid 19
 - programming tips 101
- gc_CompleteTransfer(_) 86
- gc_DropCall(_) 64, 82
 - programming tips 101
- gc_GetMetaEvent(_) 28, 29, 30, 93, 95

- gc_GetMetaEventEx(_) 31, 93
 - caution re. Multiple threads 31
 - programming tips 102
- gc_GetNetworkH(_) 118
 - programming tips 101
- gc_GetVoiceH(_) 118
- gc_HoldCall(_) 85
- gc_OpenEx()
 - LDID assignment 19
- gc_ReleaseCallEx(_) 20, 64, 82
 - late events 93
 - programming tips 101
- gc_ResultInfo(_) 93, 97
- gc_ResultValue(_) 124
- gc_RetrieveCall(_) 85
- GC_RTCM_EVTDATA data structure 142
- gc_SetConfigData(_) 84
- gc_SetUpTransfer(_) 86
- gc_SwapHold(_) 87
- gc_WaitCall(_) 124
 - GCEV_UNBLOCKED event 124
- gcerr.h header 97
- GCEV_ALARM 124
- GCEV_ALARM events 125
- GCEV_BLOCKED 123
- GCEV_BLOCKED event
 - Alarm On condition 124
- GCEV_DISCONNECTED event
 - asynchronous call termination 64
 - sent when alarm occurs 123
 - synchronous call termination 82
- GCEV_ERROR
 - error indicating event 94
- GCEV_FATALERROR event 98
- GCEV_GETCONFIGDATA_FAIL event 97
- GCEV_SETCONFIGDATA event 97
- GCEV_TASKFAIL
 - error indicating event 94
- GCEV_TASKFAIL event 97
- GCEV_UNBLOCKED 123
- GCEV_UNBLOCKED event
 - Alarm Off condition 124
 - with gc_WaitCall(_) pending 124
- GCEV_UNBLOCKED event for alarm recovery 123
- glare
 - handling for DM3 boards 115



GlobalCall

- API overview 16
- architecture 15
- call control library overview 17
- major components 13
- product overview 13

GlobalCall API

- fixed routing 111

I

ID number

- library 18

identifying a call using CRN 19

Idle state

- transition to 64, 82

independent resources 104

information retrieval via metaevents 93

internal SRL event handler thread 95

L

late events 93

LDID (Line Device Identifier) 19

- in METAEVENT structure 93

libraries

- ASCII name string 18
- ID numbers 18

Line Device Identifier (LDID) 19

M

message/eventing

- Windows 29

METAEVENT data structure 29, 31

- caution re. Multiple threads 31
- retrieval of LDID 19

metaevents 93

multiple threads

- caution re. gc_GetMetaEventEx(_) 31

N

network ASO ID

- usage 126

network time slot 118

non-blocking alarms 123

Null state 66

- call termination 64, 82

O

operating modes 27

P

porting applications

- fixed routing
- DM3 boards 114

programming models

- Linux environment 27

programming tips

- choosing a programming model in Windows 102
- drop and insert applications 102
- general 101

protocol handler 91

protocol operation

- errors 97

R

resource sharing 20

resources, coupled/independent 104

ringback tone 117

routing 118

Routing configuration (fixed/flexible)

- overview 103

S

setting up a call 55, 66

signal handlers 84

sr_enbhdr(_) 30, 95

sr_getboardcnt() 114

SR_MODELTYPE 30, 31, 95

SR_MODELTYPE value 95

sr_NotifyEvt(_) 30

sr_setparm(_) 28, 95

SR_STASYNC 95

sr_waitvt(_) 29, 30, 31, 95

sr_waitvtEx(_) 31

SRL

- event handler thread 30, 31

SRL callback thread 28

SRL events 29

SRL handler thread 30

- Windows 30

SRL handler thread, Windows 95

state

- accepted 42, 68
- alerting 57, 78
- connected 42, 68
- dialing 57
- null 43, 57, 69, 78
- offered 43, 69

state diagrams

- asynchronous call tear-down 63

states, call establishment 55, 66

supervised transfer 87

synchronous mode 27

synchronous programming model

- Windows 27

synchronous threads 28

T

terminating a call

- asynchronous mode 64
- synchronous mode 82

termination events 29

thread execution 27

tips

- drop and insert applications 102
- general programming 101

transfer

- one-step 87
- supervised 87
- unsupervised 87, 88

U

unsolicited event

- synchronous mode 84

unsolicited events

- alarm events 123
- processing in synchronous model 28

unsupervised transfer 88

user-specified message 30

V

voice device handles 118

W

Windows message handling 30