



[Bezel REPLACEMENT PROCESSING - HBZL]

1. Hardware Replacement Processing

Location	Function Name of Component		Part Name
DKC	1	Front Bezel	• Front Bezel for DKC
SBX/UBX/FBX/NBX	2	Front Bezel	• Front Bezel for SBX/UBX/FBX/NBX
HSNBX	3	Front Bezel	• Front Bezel for HSNBX

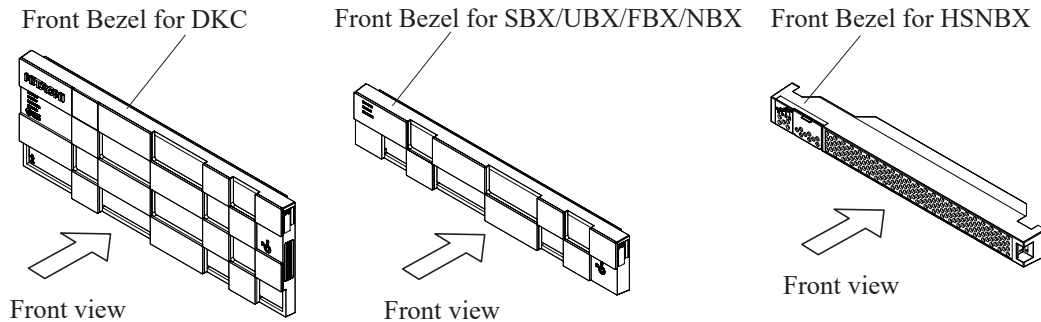

- NOTICE:**
- To prevent part failures caused by static electrical charge built up on your own body, be sure to wear a wrist strap connected to the Storage System before starting and do not take it off until you finish. See “Note on Installing and Removing Parts”(REP(GE)01-30).
 - When inserting and turning the key, have it inserted completely. If it is turned when it is inserted half way, a damage of it may be caused.
 - When removing the key after locking up the Front Bezel, pull it off aligning its groove with the positioning mark on the lock.
When the key is pulled off in the state where its groove is not aligned with the positioning mark on the lock, a damage of the lock may be caused.

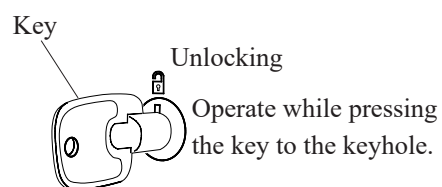

Insert or pull off the key aligning its groove with the positioning mark on the lock.



The key cannot be pulled off when its groove is not aligned with the positioning mark on the lock.

The procedure differs according to Controller Chassis/Drive Box/HSNBX.

- When replacing the Front Bezel of DKC
“1. Replacing the Front Bezel of DKC”
- When replacing the Front Bezel of SBX/UBX/FBX/NBX
“2. Replacing the Front Bezel of SBX/UBX/FBX/NBX”
- When replacing the Front Bezel of HSNBX
“3. Replacing the Front Bezel of HSNBX”

1. Replacing the Front Bezel of DKC

1. Replace the Front Bezel.

A key is necessary to attach or remove a Front Bezel.

(1) Insert the key into the keyhole on the Front Bezel and release the Lock of the Front Bezel (①).

(2) Pull the key toward you while holding the lower right portion of the Front Bezel, and then disengage the right side of the Front Bezel from the ball catch (②).

NOTE : When disengaging the Front Bezel, work with the opening angle between the Front Bezel and the Storage System of up to 45 degrees.

Do not force the Front Bezel open too wide. Otherwise, a damage of Front Bezel may be caused.

(3) Disengage the spare Front Bezel from the left tabs and then remove it (③).


(4) Unlock the spare Front Bezel with the key, and hold the key and bottom of Front Bezel with your both hands.

(5) Insert the tabs on the left front side of the chassis into the tab holes on the spare Front Bezel (④).

(6) Fix the Front Bezel by pressing the right side of the Front Bezel to engage it with the ball catch on the front side of the chassis (⑤).

(7) Lock the Front Bezel with the key (⑥).

Figure 1-1 Procedure for Replacing Front Bezel for DKC

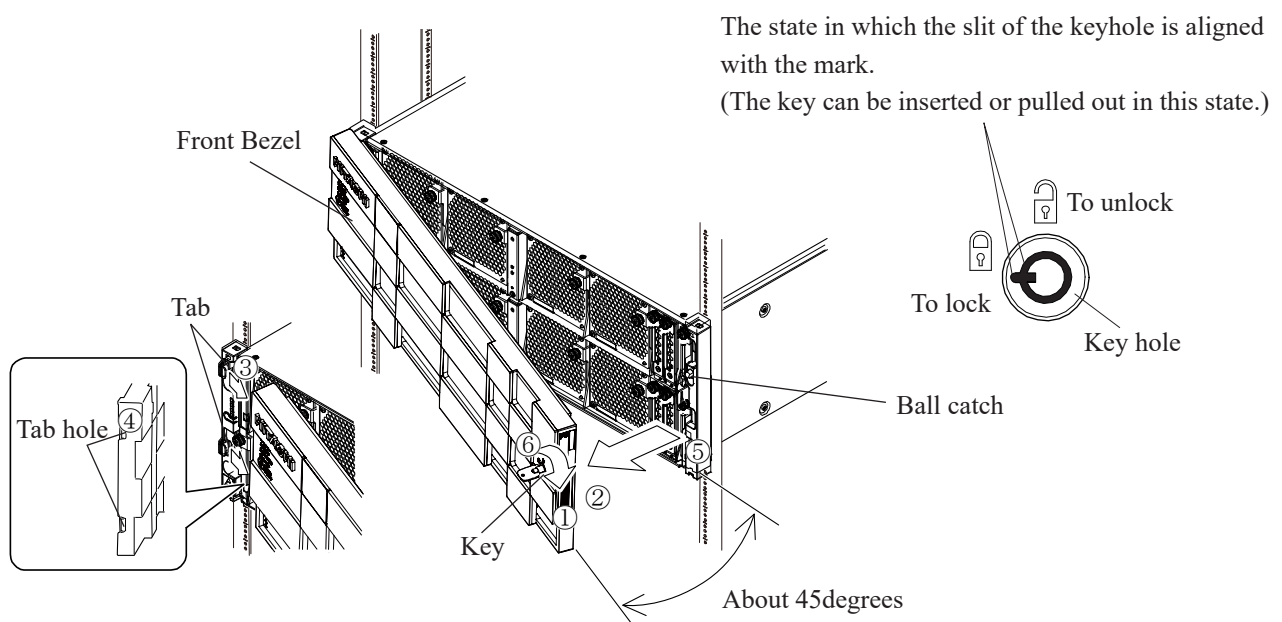

2. Replacing the Front Bezel of SBX/UBX/FBX/NBX

1. Replace the Front Bezel.

A key is necessary to attach or remove a Front Bezel.

(1) Insert the key into the keyhole on the Front Bezel and release the Lock of the Front Bezel (①).

(2) Pull the key toward you while holding the lower right portion of the Front Bezel, and then disengage the right side of the Front Bezel from the ball catch (②).

NOTE : When disengaging the Front Bezel, work with the opening angle between the Front Bezel and the Storage System of up to 45 degrees.

Do not force the Front Bezel open too wide. Otherwise, a damage of Front Bezel may be caused.

(3) Disengage the spare Front Bezel from the left tabs and then remove it (③).


(4) Unlock the spare Front Bezel with the key, and hold the key and bottom of Front Bezel with your both hands.

(5) Insert the tabs on the left front side of the chassis into the tab holes on the spare Front Bezel (④).

(6) Fix the Front Bezel by pressing the right side of the Front Bezel to engage it with the ball catch on the front side of the chassis (⑤).

(7) Lock the Front Bezel with the key (⑥).

Figure 2-1 Procedure for Replacing Front Bezel for SBX/UBX/FBX/NBX

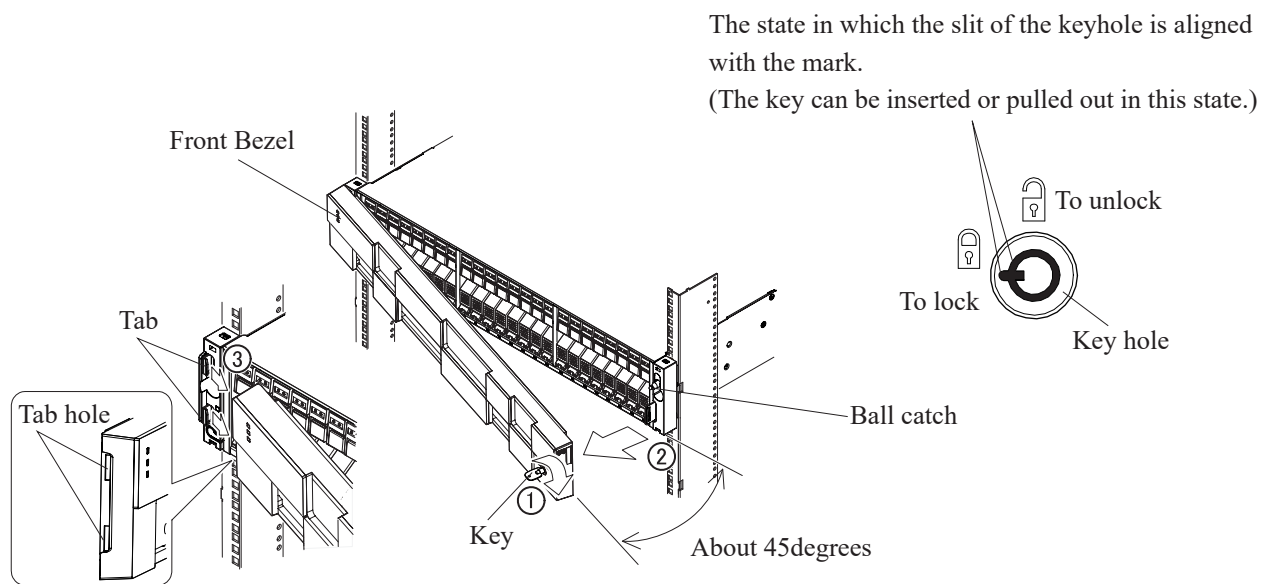

3. Replacing the Front Bezel of HSNBX

1. Replace the Front Bezel.

- (1) To remove the Front Bezel, pull it toward you.
- (2) To attach the Front Bezel, insert the tabs on the Front Bezel into the tab holes on the front side of HSNBX, and then press the Front Bezel against the HSNBX.

Figure 3-1 Procedure for Replacing Front Bezel for HSNBX

