



## **Hitachi NAS Platform**

# **3080 and 3090 G2 Hardware Reference**

**Release 12.3**

© 2011-2015 Hitachi, Ltd. All rights reserved.

No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, or stored in a database or retrieval system for any purpose without the express written permission of Hitachi, Ltd.

Hitachi, Ltd., reserves the right to make changes to this document at any time without notice and assumes no responsibility for its use. This document contains the most current information available at the time of publication. When new or revised information becomes available, this entire document will be updated and distributed to all registered users.

Some of the features described in this document might not be currently available. Refer to the most recent product announcement for information about feature and product availability, or contact Hitachi Data Systems Corporation at <https://portal.hds.com>.

**Notice:** Hitachi, Ltd., products and services can be ordered only under the terms and conditions of the applicable Hitachi Data Systems Corporation agreements. The use of Hitachi, Ltd., products is governed by the terms of your agreements with Hitachi Data Systems Corporation.

Hitachi Data Systems products and services can be ordered only under the terms and conditions of Hitachi Data Systems' applicable agreements. The use of Hitachi Data Systems products is governed by the terms of your agreements with Hitachi Data Systems.

Hitachi is a registered trademark of Hitachi, Ltd., in the United States and other countries. Hitachi Data Systems is a registered trademark and service mark of Hitachi, Ltd., in the United States and other countries.

Archivas, Dynamic Provisioning, Essential NAS Platform, HiCommand, Hi-Track, ShadowImage, Tagmaserve, Tagmasoft, Tagmasolve, Tagmastore, TrueCopy, Universal Star Network, and Universal Storage Platform are registered trademarks of Hitachi Data Systems Corporation.

AIX, AS/400, DB2, Domino, DS8000, Enterprise Storage Server, ESCON, FICON, FlashCopy, IBM, Lotus, OS/390, RS6000, S/390, System z9, System z10, Tivoli, VM/ESA, z/OS, z9, zSeries, z/VM, z/VSE are registered trademarks and DS6000, MVS, and z10 are trademarks of International Business Machines Corporation.

All other trademarks, service marks, and company names in this document or website are properties of their respective owners.

Microsoft product screen shots are reprinted with permission from Microsoft Corporation.

This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>). Some parts of ADC use open source code from Network Appliance, Inc. and Traakan, Inc.

Part of the software embedded in this product is gSOAP software. Portions created by gSOAP are copyright 2001-2009 Robert A. Van Engelen, Genivia Inc. All rights reserved. The software in this product was in part provided by Genivia Inc. and any express or implied warranties, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose are disclaimed. In no event shall the author be liable for any direct, indirect, incidental, special, exemplary, or consequential damages (including, but not limited to, procurement of substitute goods or services; loss of use, data, or profits; or business interruption) however caused and on any theory of liability, whether in contract, strict liability, or tort (including negligence or otherwise) arising in any way out of the use of this software, even if advised of the possibility of such damage.

The product described in this guide may be protected by one or more U.S. patents, foreign patents, or pending applications.

### **Notice of Export Controls**

Export of technical data contained in this document may require an export license from the United States government and/or the government of Japan. Contact the Hitachi Data Systems Legal Department for any export compliance questions.



# Contents

Preface.....	8
Contacting Hitachi Data Systems.....	8
Related Documentation.....	8
<b>1 About this manual.....</b>	<b>12</b>
Audience.....	13
Conventions.....	13
Related documentation.....	17
<b>2 Safety information.....</b>	<b>20</b>
Electrostatic discharge precautions.....	21
Safety and handling precautions.....	21
Electrical precautions.....	22
Data protection precautions.....	22
<b>3 Mandatory regulations.....</b>	<b>24</b>
International standards.....	25
Federal Communications Commission (FCC).....	25
European Union (EU) Statement.....	26
Canadian Department of Communication Compliance Statement.....	26
Avis de conformité aux normes du ministère des Communications du Canada.....	27
Radio Protection for Germany.....	27
Food and Drug Administration (FDA).....	27
Chinese RoHS Compliance Statement.....	27
<b>4 System overview.....</b>	<b>30</b>
System components.....	31
Server specifications.....	32
Attaching a rack stabilizer plate.....	34

<b>5</b>	<b>Hitachi NAS Platform server components.....</b>	<b>36</b>
	Ventilation.....	38
	Server front panel.....	38
	LED status indicators.....	39
	NVRAM backup battery pack.....	42
	Hard disk drives.....	44
	Fans.....	45
	Server rear panel.....	46
	Rear panel server LED and button locations.....	48
	Rear panel LED state descriptions.....	48
	Power button (PWR).....	49
	Reset button (RST).....	50
	Fibre channel storage ports.....	50
	10/100 private Ethernet ports.....	51
	GE Ethernet network ports .....	52
	10 GbE Ports.....	52
	10 Gigabit Ethernet cluster interconnect ports.....	52
	10 Gigabit Ethernet customer data network ports.....	53
	Power supply units .....	54
	Ethernet management ports 0 and 1.....	56
	Serial port .....	56
	USB ports.....	56
	Management interfaces.....	56
	RS-232 serial management port .....	57
	10/100/1000 Ethernet management ports.....	58
	Ethernet cables .....	58
<b>6</b>	<b>Replacing server components.....</b>	<b>60</b>
	Field-replaceable units.....	61
	Hot-swappable components.....	61
	Removing and replacing the front bezel.....	62
	Bezel removal.....	62
	Bezel replacement.....	62
	Replacing a fan.....	62
	Replacing the NVRAM backup battery pack.....	64
	Checking battery pack status.....	64
	Identifying a cluster node that requires battery replacement .....	65
	Replacing the NVRAM battery module.....	66
	Collecting system backups and diagnostics.....	67
	Resetting the battery age and restarting the chassis monitor .....	68
	Collecting a final diagnostic .....	69
	Replacing a hard disk.....	70
	Deciding on hard disk recovery or replacement.....	70
	Replacing a hard disk drive.....	71
	Synchronizing a new disk.....	73
	Replacing a power supply unit.....	74
	Replacing an FPGA board as a FRU.....	76
	Requirements for Replacing FPGA board.....	76
	Replacing the FPGA board.....	76

7	Rebooting, shutting down, and powering off.....	82
	Rebooting or shutting down a server.....	83
	Rebooting or shutting down a cluster.....	84
	Restarting an unresponsive server.....	85
	Powering down the server for maintenance.....	87
	Powering down the server for shipment or storage.....	87
	Powering on the server or cluster.....	88
	Recovering from power standby.....	89
A	Server replacement procedures.....	90
	Replacement procedure overview.....	91
	Requirements.....	91
	Swapping components.....	91
	Model selection.....	92
	MAC ID and license keys.....	92
	Previous backups.....	92
	Upgrades.....	93
	Replacing a single server with an embedded SMU.....	93
	Obtaining backups, diagnostics, firmware levels, and license keys.....	93
	Shutting down the server you are replacing.....	95
	Configuring the replacement server.....	97
	Finalizing and verifying the replacement server configuration.....	99
	Replacing a single server with an external SMU.....	101
	Obtaining backups, diagnostics, firmware levels, and license keys.....	101
	Shutting down the server you are replacing.....	103
	Configuring the replacement server.....	105
	Finalizing and verifying the replacement server configuration.....	107
	Replacing a node within a cluster.....	109
	Obtaining backups, diagnostics, firmware levels, and license keys.....	109
	Shutting down the server you are replacing.....	111
	Configuring the replacement server.....	113
	Finalizing and verifying the server configuration.....	115
	Replacing all servers within a cluster.....	118
	Obtaining backups, diagnostics, firmware levels, and license keys.....	118
	Shutting down the servers you are replacing.....	120
	Configuring the replacement servers.....	122
	Finalizing and verifying the system configuration.....	124
B	Parts list for 3080/3090 G2 servers.....	126



# Preface

This manual provides an overview of the Hitachi NAS Platform and the Hitachi Unified Storage File Module hardware. The manual explains how to install and configure the hardware and software, and how to replace faulty components.

The following server models are covered: 3080 and 3090

For assistance with storage arrays connected to the server, refer to the *Storage Subsystem Administration Guide*.

## Contacting Hitachi Data Systems

2845 Lafayette Street  
Santa Clara, California 95050-2627  
U.S.A.  
<https://portal.hds.com>  
North America: 1-800-446-0744

## Related Documentation

**Release Notes** provide the most up-to-date information about the system, including new feature summaries, upgrade instructions, and fixed and known defects.

### Administration Guides

- *System Access Guide* (MK-92HNAS014)—In PDF format, this guide explains how to log in to the system, provides information about accessing the NAS server/cluster CLI and the SMU CLI, and provides information about the documentation, help, and search capabilities available in the system.
- *Server and Cluster Administration Guide* (MK-92HNAS010)—In PDF format, this guide provides information about administering servers, clusters, and server farms. Includes information about licensing, name spaces, upgrading firmware, monitoring servers and clusters, the backing up and restoring configurations.
- *Storage System User Administration Guide* (MK-92HNAS013)—In PDF format, this guide explains user management, including the different types of system administrator, their roles, and how to create and manage these users.
- *Network Administration Guide* (MK-92HNAS008)—In PDF format, this guide provides information about the server's network usage, and explains



how to configure network interfaces, IP addressing, name and directory services.

- *File Services Administration Guide* (MK-92HNAS006)—In PDF format, this guide explains about file system formats, and provides information about creating and managing file systems, and enabling and configuring file services (file service protocols).
- *Data Migrator Administration Guide* (MK-92HNAS005) —In PDF format, this guide provides information about the Data Migrator feature, including how to set up migration policies and schedules.
- *Storage Subsystem Administration Guide* (MK-92HNAS012)—In PDF format, this guide provides information about managing the supported storage subsystems (RAID arrays) attached to the server/cluster. Includes information about tiered storage, storage pools, system drives (SDs), SD groups, and other storage device related configuration and management features and functions.
- *Snapshot Administration Guide* (MK-92HNAS011)—In PDF format, this guide provides information about configuring the server to take and manage snapshots.
- *Replication and Disaster Recovery Administration Guide* (MK-92HNAS009) —In PDF format, this guide provides information about replicating data using file-based replication and object-based replication, provides information on setting up replication policies and schedules, and using replication features for disaster recovery purposes.
- *Antivirus Administration Guide* (MK-92HNAS004)—In PDF format, this guide describes the supported antivirus engines, provides information about how to enable them, and how to configure the system to use them.
- *Backup Administration Guide* (MK-92HNAS007)—In PDF format, this guide provides information about configuring the server to work with NDMP, and making and managing NDMP backups. Also includes information about Hitachi NAS Synchronous Image Backup.
- *Command Line Reference* Opens in a browser, and describes the commands used to administer the system.



**Note:** For a complete list of Hitachi NAS open source software copyrights and licenses, see the *System Access Guide*.

---

### Hardware References

- *Hitachi NAS Platform 3080 and 3090 G1 Hardware Reference* (MK-92HNAS016)—Provides an overview of the second-generation server hardware, describes how to resolve any problems, and replace potentially faulty parts.
- *Hitachi NAS Platform 3080 and 3090 G2 Hardware Reference* (MK-92HNAS017)—Provides an overview of the second-generation server hardware, describes how to resolve any problems, and replace potentially faulty parts.

- *Hitachi NAS Platform Series 4000 Hardware Reference* (MK-92HNAS030) (MK-92HNAS030)—Provides an overview of the Hitachi NAS Platform Series 4000 server hardware, describes how to resolve any problems, and how to replace potentially faulty components.
- *Hitachi High-performance NAS Platform* (MK-99BA012-13)—Provides an overview of the NAS Platform 3100/NAS Platform 3200 server hardware, and describes how to resolve any problems, and replace potentially faulty parts.

## **Best Practices**

- *Hitachi USP-V/VSP Best Practice Guide for HNAS Solutions* (MK-92HNAS025)—The HNAS practices outlined in this document describe how to configure the HNAS system to achieve the best results.
- *Hitachi Unified Storage VM Best Practices Guide for HNAS Solutions* (MK-92HNAS026)—The HNAS system is capable of heavily driving a storage array and disks. The HNAS practices outlined in this document describe how to configure the HNAS system to achieve the best results.
- *Hitachi NAS Platform Best Practices Guide for NFS with VMware vSphere* (MK-92HNAS028)—This document covers VMware best practices specific to HDS HNAS storage.
- *Hitachi NAS Platform Deduplication Best Practice* (MK-92HNAS031) —This document provides best practices and guidelines for using HNAS Deduplication.
- *Hitachi NAS Platform Best Practices for Tiered File Systems* (MK-92HNAS038) —This document describes the Hitachi NAS Platform feature that automatically and intelligently separates data and metadata onto different Tiers of storage called Tiered File Systems (TFS).
- *Hitachi NAS Platform Data Migrator to Cloud Best Practices Guide* (MK-92HNAS045)—Data Migrator to Cloud allows files hosted on the HNAS server to be transparently migrated to cloud storage, providing the benefits associated with both local and cloud storage.
- *Brocade VDX 6730 Switch Configuration for use in an HNAS Cluster Configuration Guide* (MK-92HNAS046)—This document describes how to configure a Brocade VDX 6730 switch for use as an ISL (inter-switch link) or an ICC (inter-cluster communication) switch.
- *Best Practices for Hitachi NAS Universal Migrator* (MK-92HNAS047)—The Hitachi NAS Universal Migrator (UM) feature provides customers with a convenient and minimally disruptive method to migrate from their existing NAS system to the Hitachi NAS Platform. The practices and recommendations outlined in this document describe how to best use this feature.
- *Hitachi NAS Platform Storage Pool and HDP Best Practices* (MK-92HNAS048)—This document details the best practices for configuring and using HNAS storage pools, related features, and Hitachi Dynamic Provisioning (HDP).

- *Hitachi Data Systems SU 12.x Network File System (NFS) Version 4 Feature Description* (MK-92HNAS056) —This document describes the features of Network File System (NFS) Version 4.
- *Hitachi NAS Platform Hitachi Dynamic Provisioning with HNAS v12.1* (MK-92HNAS057)—This document lists frequently asked questions regarding the use of Hitachi Dynamic Provisioning.
- *Hitachi Multi-tenancy Implementation and Best Practice Guide* (MK-92HNAS059)—This document details the best practices for configuring and using HNAS Multi-Tenancy and related features, and EVS security.

## About this manual

This manual provides an overview of the Hitachi NAS Platform and the Hitachi Unified Storage File Module hardware. The manual explains how to install and configure the hardware and software, and how to replace faulty components.

The following server models are covered: 3080 and 3090.

For assistance with storage arrays connected to the server, refer to the *Storage Subsystem Administration Guide*.

- ☐ [Audience](#)
- ☐ [Conventions](#)
- ☐ [Related documentation](#)

## Audience



This guide is written for owners and field service personnel who may have to repair the system hardware. It is written with the assumption that the reader has a good working knowledge of computer systems and the replacement of computer parts.



## Conventions

The following conventions are used throughout this document:

Convention	Meaning
<b>Command</b>	This fixed-space font denotes literal items such as commands, files, routines, path names, signals, messages, and programming language structures.
<i>variable</i>	The italic typeface denotes variable entries and words or concepts being defined. Italic typeface is also used for book titles.
<b>user input</b>	This bold fixed-space font denotes literal items that the user enters in interactive sessions. Output is shown in nonbold, fixed-space font.
[ and ]	Brackets enclose optional portions of a command or directive line.
...	Ellipses indicate that a preceding element can be repeated.
GUI element	This font denotes the names of graphical user interface (GUI) elements such as windows, screens, dialog boxes, menus, toolbars, icons, buttons, boxes, fields, and lists.

The following types of messages are used throughout this manual. It is recommended that these icons and messages are read and clearly understood before proceeding:

	A tip contains supplementary information that is useful in completing a task.
	A note contains information that helps to install or operate the system effectively.

	A caution indicates the possibility of damage to data or equipment. Do not proceed beyond a caution message until the requirements are fully understood.
	A warning contains instructions that you must follow to avoid personal injury.

### Før du starter (DANSK)

Følgende ikoner anvendes i hele guiden til at anføre sikkerhedsrisici. Det anbefales, at du læser og sætter dig ind i, og har forstået alle procedurer, der er markeret med disse ikoner, inden du fortsætter.

**Bemærk:** "Bemærk" indikerer informationer, som skal bemærkes.

**FORSIGTIG:** "Forsigtig" angiver en mulig risiko for beskadigelse af data eller udstyr. Det anbefales, at du ikke fortsætter længere end det afsnit, der er mærket med dette ord, før du helt har sat dig ind i og forstået proceduren.

**ADVARSEL:** "Advarsel" angiver en mulig risiko for den personlige sikkerhed.

### Vorbereitung (DEUTSCH)

Die folgenden Symbole werden in diesem Handbuch zur Anzeige von Sicherheitshinweisen verwendet. Lesen Sie die so gekennzeichneten Informationen durch, um die erforderlichen Maßnahmen zu ergreifen.

**Anmerkung:** Mit einer Anmerkung wird auf Informationen verwiesen, die Sie beachten sollten.

**VORSICHT:** Das Wort "Vorsicht" weist auf mögliche Schäden für Daten oder Ihre Ausrüstung hin. Sie sollten erst dann fortfahren, wenn Sie die durch dieses Wort gekennzeichneten Informationen gelesen und verstanden haben.

**WARNUNG:** Mit einer Warnung wird auf mögliche Gefahren für Ihre persönliche Sicherheit verwiesen.

### Antes de comenzar (ESPAÑOL)

Los siguientes iconos se utilizan a lo largo de la guía con fines de seguridad. Se le aconseja leer, y entender en su totalidad, cualquier procedimiento marcado con estos iconos antes de proceder.

**Sugerencia:** Una sugerencia indica información adicional que puede serle de utilidad en la finalización de una tarea.

**PRECAUCIÓN:** Una precaución indica la posibilidad de daños a los datos o equipo. Se le aconseja no continuar más allá de una sección marcada con este mensaje, a menos que entienda el procedimiento por completo.

**ADVERTENCIA:** Una advertencia indica la posibilidad de un riesgo a la seguridad personal.

#### **Avant de commencer (FRANÇAIS)**

Les icônes ci-dessous sont utilisées dans le manuel pour mettre en évidence des procédures de sécurité. Nous vous invitons à les lire et à bien comprendre toutes les procédures signalées par ces icônes avant de poursuivre.

**Conseil :** "Conseil" signale les informations complémentaires que vous pouvez trouver utiles pour mener à bien une tâche.

**ATTENTION :** "Attention" signale qu'il existe une possibilité d'endommager des données ou de l'équipement. Nous vous recommandons de ne pas poursuivre après une section comportant ce message avant que vous ayez pleinement assimilé la procédure.

**AVERTISSEMENT :** "Avertissement" signale une menace potentielle pour la sécurité personnelle.

#### **Operazioni preliminari (ITALIANO)**

Le seguenti icone vengono utilizzate nella guida a scopo cautelativo. Prima di procedere Vi viene richiesta un'attenta lettura di tutte le procedure, contrassegnate dalle suddette icone, affinché vengano applicate correttamente.

**Suggerimento:** "Suggerimento" fornisce indicazioni supplementari, comunque utili allo scopo.

**ATTENZIONE:** "Attenzione" indica il potenziale danneggiamento dei dati o delle attrezzature in dotazione. Vi raccomandiamo di non procedere con le operazioni, prima di aver ben letto e compreso la sezione contrassegnata da questo messaggio, onde evitare di compromettere il corretto svolgimento dell'operazione stessa.

**PERICOLO:** "Pericolo" indica l'eventuale pericolo di danno provocato alle persone, mettendo a rischio la vostra incolumità personale.

#### **Vóór u aan de slag gaat (NEDERLANDS)**

De volgende pictogrammen worden in de hele handleiding gebruikt in het belang van de veiligheid. We raden u aan alle procedure-informatie die door deze pictogrammen wordt gemarkeerd, aandachtig te lezen en ervoor te zorgen dat u de betreffende procedure goed begrijpt vóór u verder gaat.

**VOORZICHTIG:** “Voorzichtig” geeft aan dat er risico op schade aan data of apparatuur bestaat. We raden u aan even halt te houden bij de sectie die door dit woord wordt gemarkeerd, tot u de procedure volledig begrijpt.

**WAARSCHUWING:** Een waarschuwing wijst op een mogelijk gevaar voor de persoonlijke veiligheid.

### **Antes de começar (PORTUGUÊS)**

Os ícones mostrados abaixo são utilizados ao longo do manual para assinalar assuntos relacionados como a segurança. Deverá ler e entender claramente todos os procedimentos marcados com estes ícones ande de prosseguir.

**Sugestão:** Uma sugestão assinala informações adicionais que lhe poderão ser úteis para executar uma tarefa.

**CUIDADO:** “Cuidado” indica que existe a possibilidade de serem causados danos aos dados ou ao equipamento. Não deverá avançar para lá de uma secção marcada por esta mensagem sem ter primeiro entendido totalmente o procedimento.

**AVISO:** Um aviso indica que existe um possível risco para a segurança pessoal.

### **Ennen kuin aloitat (SUOMI)**

Seuraavilla kuvakkeilla kiinnitetään tässä oppaassa huomiota turvallisuusseikkoihin. Näillä kuvakkeilla merkityt menettelytavat tulee lukea ja ymmärtää ennen jatkamista.

**Huomautus:** Huomautus sisältää tietoja, jotka tulee ottaa huomioon.

**VAROITUS:** Varoitus varoittaa tietojen tai laitteiden vahingoittumisen mahdollisuudesta. Tällä merkillä merkitystä kohdasta ei tule jatkaa eteenpäin ennen kuin täysin ymmärtää kuvatun menettelyn.

**VAARA:** Vaara varoittaa henkilövahingon mahdollisuudesta.

### **Innan du startar (SVENSKA)**

Följande ikoner används i hela handboken för att markera säkerhetsaspekter. Läs igenom handboken ordentligt så att du förstår steg som har markerats med dessa ikoner innan du fortsätter.

**Obs:** “Obs” anger vad du ska observera.

**FÖRSIKT:** “Försikt” anger vad som kan leda till data eller utrustningsskador. Fortsätt inte till nästa avsnitt innan du förstår det steg som har markerats med detta meddelande.

**VARNING:** “Varning” anger vad som kan leda till personskador.



## Related documentation

- *System Access Guide* (MK-92HNAS014)—In PDF format, this guide explains how to log in to the system, provides information about accessing the NAS server/cluster CLI and the SMU CLI, and provides information about the documentation, help, and search capabilities available in the system.
- *Server and Cluster Administration Guide* (MK-92HNAS010)—In PDF format, this guide provides information about administering servers, clusters, and server farms. Includes information about licensing, name spaces, upgrading firmware, monitoring servers and clusters, the backing up and restoring configurations.
- *Storage System User Administration Guide* (MK-92HNAS013)—In PDF format, this guide explains user management, including the different types of system administrator, their roles, and how to create and manage these users.
- *Network Administration Guide* (MK-92HNAS008)—In PDF format, this guide provides information about the server's network usage, and explains how to configure network interfaces, IP addressing, name and directory services.
- *File Services Administration Guide* (MK-92HNAS006)—In PDF format, this guide explains about file system formats, and provides information about creating and managing file systems, and enabling and configuring file services (file service protocols).
- *Data Migrator Administration Guide* (MK-92HNAS005)—In PDF format, this guide provides information about the Data Migrator feature, including how to set up migration policies and schedules.
- *Storage Subsystem Administration Guide* (MK-92HNAS012)—In PDF format, this guide provides information about managing the supported storage subsystems (RAID arrays) attached to the server/cluster. Includes information about tiered storage, storage pools, system drives (SDs), SD groups, and other storage device related configuration and management features and functions.
- *Snapshot Administration Guide* (MK-92HNAS011)—In PDF format, this guide provides information about configuring the server to take and manage snapshots.
- *Replication and Disaster Recovery Administration Guide* (MK-92HNAS009)—In PDF format, this guide provides information about replicating data using file-based replication and object-based replication, provides information on setting up replication policies and schedules, and using replication features for disaster recovery purposes.
- *Antivirus Administration Guide* (MK-92HNAS004)—In PDF format, this guide describes the supported antivirus engines, provides information about how to enable them, and how to configure the system to use them.

- *Backup Administration Guide* (MK-92HNAS007)—In PDF format, this guide provides information about configuring the server to work with NDMP, and making and managing NDMP backups. Also includes information about Hitachi NAS Synchronous Image Backup.
- *Command Line Reference*—Opens in a browser, and describes the commands used to administer the system.
- *Hitachi NAS Platform 3080 and 3090 G1 Hardware Reference* (MK-92HNAS016)—Provides an overview of the second-generation server hardware, describes how to resolve any problems, and replace potentially faulty parts.
- *Hitachi NAS Platform 3080 and 3090 G2 Hardware Reference* (MK-92HNAS017)—Provides an overview of the first-generation server hardware, describes how to resolve any problems, and replace potentially faulty parts.
- *Hitachi NAS Platform Series 4000 Hardware Reference* (MK-92HNAS030)—Provides an overview of the Hitachi NAS Platform Series 4000 server hardware, describes how to resolve any problems, and how to replace potentially faulty components.
- *Release notes*—provide the most up-to-date information about the system, including new feature summaries, upgrade instructions, and fixed and known defects.



**Note:** For a complete list of Hitachi NAS open source software copyrights and licenses, see the *System Access Guide*.

---



## Safety information

This section lists important safety guidelines to follow when working with the equipment.

- ☐ [Electrostatic discharge precautions](#)
- ☐ [Safety and handling precautions](#)
- ☐ [Electrical precautions](#)
- ☐ [Data protection precautions](#)

## Electrostatic discharge precautions

To ensure proper handling of system components and to prevent hardware faults caused by electrostatic discharge, follow all safety precautions:

- Wear an anti-static wrist or ankle strap.
- Observe all standard electrostatic discharge precautions when handling plug-in modules or components that have been removed from any anti-static packaging.
- **Avoid** contact with backplane components and module connectors.

## Safety and handling precautions

To ensure your safety and the safe handling and correct operation of the equipment, follow all of the safety precautions and instructions.



**Caution:** Observe safe lifting practices. Each server or each storage array can weigh 56 lb. (25 kg) or more. At least two people are required to handle and position a server in a rack.

---



**Caution:** There is a risk that a cabinet could fall over suddenly. To prevent this from occurring:

- If your system comes with a rack stabilizer plate, install it.
  - Fill all expansion cabinets, including all storage enclosures, from the bottom to the top.
  - Do *not* remove more than one unit from the rack at a time.
- 

To help prevent serious injuries, load the components in the storage cabinet in the prescribed order:

1. If present, install the rack stabilizer plate to the front of the system cabinet.
2. Load the Fibre Channel (FC) switches in the storage cabinet at the positions recommended in the *System Installation Guide*. The positions can be adjusted according to a specific storage cabinet configuration.
3. Load and position the server(s) directly above the FC switches, if used in your configuration.
4. The System Management Unit (SMU), if used in your configuration, should be placed directly below the FC switches.
5. The first storage enclosure should be positioned at the bottom of the storage cabinet. Additional enclosures are then placed above existing enclosures, going towards the top of the system cabinet.
6. Once the bottom half of the storage cabinet has been filled, the top half of the storage cabinet can be filled. Begin by placing a storage component directly above the server and then fill upwards.

## Electrical precautions

To help ensure your safety and the safe handling of equipment, follow these guidelines.

- Provide a suitable power source with electrical overload protection to meet the power requirements of the entire system (the server/cluster, and all storage subsystems and switches). The power requirements per cord are - North America: 2 phase, 208Vac, 24A max; 1 phase 110Vac, 16A max. Europe: 230Vac, 16A max.
- Provide a power cord that is suitable for the country of installation (if a power cord is not supplied).
- Power cords supplied with this server or system may be less than 1.5m in length. These cords are for use with a power distribution unit (PDU) which is mounted inside the 19 inch rack. If you require longer cables, please contact your local sales representative.
- Provide a safe electrical ground connection to the power cord. Check the grounding of an enclosure before applying power.
- Only operate the equipment from nominal mains input voltages in the range 100 - 240Vac, 6A max, 50/60Hz.



**Caution:** Turn off all power supplies or remove all power cords before undertaking servicing of the system.

---

- Unplug a system component if it needs to be moved or if it is damaged.



**Note:** For additional data protection, Hitachi recommends that you use an external UPS to power the server. Also, each of the redundant power supplies in the server and in the storage subsystems should be operated from a different mains power circuit in order to provide a degree of protection from mains power supply failures. In the event that one circuit fails, the other continues to power the server and the storage subsystem.

---

## Data protection precautions

To help ensure the protection of data and safe handling of equipment, follow these guidelines.

- Each storage enclosure contains multiple removable hard disk drive (HDD) modules. These units are fragile. Handle them with care and keep them away from strong magnetic fields.
- All supplied plug-in modules and blanking plates must be in place to complete the internal circuitry and enable air to flow correctly around an enclosure.

- Using the system for more than a few minutes with modules or blanking plates missing can cause an enclosure to overheat, leading to power failure and data loss. Such use may invalidate the warranty.
- A loss of data can occur if a hard drive module is removed. Immediately replace any modules that are removed. If a module is faulty, replace it with one of the same type, of at least the same capacity and speed.
- Always shut down the system before it is moved, switched off, or reset.
- All storage enclosures are fitted with optical SFP transceivers. The transceivers that are approved for use with supported storage enclosures vary depending on the unit. The transceivers qualified for older systems might not be approved for use with the most current storage systems. To ensure proper operation of the server and the storage subsystems, use only the approved replacement parts for each system. Contact the Hitachi Data Systems Support Center for technical details about replacement parts.
- Maintain backup routines. Do not abandon backup routines. No system is completely foolproof.

## Mandatory regulations

The sections that follow outline the mandatory regulations governing the installation and operation of the system. Adhere to these instructions to ensure that regulatory compliance requirements are met.

- ☐ [International standards](#)
- ☐ [Federal Communications Commission \(FCC\)](#)
- ☐ [European Union \(EU\) Statement](#)
- ☐ [Canadian Department of Communication Compliance Statement](#)
- ☐ [Radio Protection for Germany](#)
- ☐ [Food and Drug Administration \(FDA\)](#)
- ☐ [Chinese RoHS Compliance Statement](#)



## International standards

The equipment described in this manual complies with the requirements of the following agencies and standards.

### Safety

- Worldwide: IEC60950-1: 2nd edition
- EU: EN60950-1: 2nd edition
- North America: UL60950-1: 2nd edition; CAN/CSA-C22.2 No.60950-1-07 2nd edition

### EMC

- USA: FCC Part 15 Subpart B class A
- Canada: ICES-003 Issue No 4 class A
- EU: EN55022 class A; EN61000-3-2; EN61000-3-3; EN55024
- Australia & New Zealand: C-Tick – AS/NZS CISPR22 class A
- South Korea: KCC class A
- Japan: VCCI class A

Certification for the following approvals marks have been granted:

- European Union CE mark, including RoHS2
- China: CCC
- Russia: GOST-R
- Taiwan: BSMI
- Argentina: IRAM
- Australia & New Zealand: C-Tick
- Mexico: NOM and CONUEE
- South Africa: SABS (safety) and EMC (self-certification by CoC)

## Federal Communications Commission (FCC)

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if it is not installed and used in accordance with the instruction manual, might cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference, in which case the users will be required to correct the interference at their own expense.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. Neither the provider nor the manufacturer is

responsible for any radio or television interference caused by using non-recommended cables and connectors, or by unauthorized changes or modifications to this equipment.

Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. The device can not cause harmful interference.
2. The device must accept any interference received, including interference that might cause undesired operation.

## European Union (EU) Statement

This product conforms to the protection requirements of the following EU Council Directives:

- 89/336/EEC Electromagnetic Compatibility Directive
- 73/23/EEC Low Voltage Directive
- 93/68/EEC CE Marking Directive
- 2002/95/EC Restriction in the use of Certain Hazardous Substances in Electrical and Electronic Equipment (RoHS) - This product is 6/6 (fully) compliant.

The manufacturer cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product.

This product has been tested and found to comply with the limits for Class A Information Technology Equipment according to European Standard EN 55022. The limits for Class A equipment were derived for commercial and industrial environments to provide reasonable protection against interference with licensed communication equipment.



**Caution:** This is a Class A product and as such, in a domestic environment, might cause radio interference.

---

## Canadian Department of Communication Compliance Statement

This Class A digital apparatus meets all the requirements of the Canadian Interference - Causing Equipment Regulations.

## **Avis de conformité aux normes du ministère des Communications du Canada**

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

## **Radio Protection for Germany**

Dieses Gerät erfüllt die Bedingungen der EN 55022 Klasse A.

## **Food and Drug Administration (FDA)**

The product complies with FDA 21 CFR 1040.10 and 1040.11 regulations, which govern the safe use of lasers.

## **Chinese RoHS Compliance Statement**

# 有毒有害物质名称标识

## Toxic and Hazardous Substances Table

部件名称 Part Name	有毒有害物质或元素 Toxic and Hazardous Substances and Elements					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
机箱 Chassis	O	O	O	O	O	O
电源 Power Supply Module	O	O	O	O	O	O
电池包 Battery Pack	O	O	O	O	O	O
风扇模块 Fan Module	O	O	O	O	O	O
硬盘 Hard Disk Drive	O	O	O	O	O	O

O：表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 规定的限量要求以下

O：Indicates that the toxic or hazardous substances contained in all of the homogeneous materials for this part is below this limit requirement in SJ/T 11363-2006.

X：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 规定的限量要求

X：Indicates that the toxic or hazardous substances contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T 11363-2006.



## System overview


This chapter describes the components in the Hitachi NAS Platform server system for the following models:

- Hitachi NAS Platform, Model 3080
- Hitachi NAS Platform, Model 3090

- ☐ [System components](#)
- ☐ [Server specifications](#)
- ☐ [Attaching a rack stabilizer plate](#)

## System components

The system contains many components and is housed in a rack or cabinet. This section describes the main system components.

Component	Description
Hitachi NAS Platform or Hitachi Unified Storage File Module server	<p>The system can contain a single server or several servers that operate as a cluster. Clusters that use more than two servers include two 10 Gbps Ethernet switches. Hitachi Data Systems supports two switches for redundancy.</p> <p>For information about the physical configuration of a cluster configuration, see the <i>Hitachi Unified Storage File Module and Hitachi NAS Platform System Installation Guide</i>.</p> <hr/> <p> <b>Note:</b> For additional data protection, it is recommended to use an external UPS to power the server. Also, each of the redundant power supplies in the server and in the storage subsystems should be operated from a different mains power circuit in order to provide a degree of protection from mains power supply failures. In the event that one circuit fails, the other will continue to power the server and the storage subsystem.</p> <hr/>
System management unit (SMU)	<p>A standalone server can operate without an external SMU, but all of the cluster configurations require an external SMU.</p> <p>The SMU is the management component for the other components in a system. An SMU provides administration and monitoring tools. It supports data migration and replication, and acts as a quorum device in a cluster configuration. Although integral to the system, the SMU does not move data between the network client and the servers.</p> <p>In a single-server configuration, typically an embedded SMU manages the system. In clustered systems and some single-node systems, an external SMU provides the management functionality. In some cases, multiple SMUs are advisable.</p>
Storage subsystems	<p>A Hitachi NAS Platform or Hitachi Unified Storage File Module system can control several storage enclosures. The maximum number of storage enclosures in a rack depends on the model of storage enclosures being installed. Refer to the <i>Storage Subsystem Administration Guide</i> for more information on supported storage subsystems.</p>
Fibre Channel (FC) switches	<p>The server supports FC switches that connect multiple servers and storage subsystems.</p> <p>Contact Hitachi Data Systems Support Center for information about which FC switches are supported.</p>
External Fast Ethernet (10/100) or Gigabit Ethernet (GigE) switches	<p>A standalone server can operate without an external Ethernet switch, provided that it uses an embedded SMU and there are less than three RAID subsystems attached.</p> <p>A standalone server requires an external Ethernet switch if there are more than two RAID subsystems attached or if there are two RAID subsystems attached and an external SMU is used.</p>

Component	Description
	All cluster configurations require an external Ethernet switch.
10 Gigabit Ethernet (10 GbE) switches	<p>Used in cluster configurations only.</p> <p>A server connects to a 10 GbE switch for connection with the public data network (customer data network).</p> <p>A 10 GbE switch is required for internal cluster communications for clusters of three or more nodes.</p> <p>Contact Hitachi Data Systems Support Center for information about the 10 GbE switches that have been qualified for use with the server, and to find out about the availability of those switches.</p> <p>Hitachi Data Systems requires dual 10 GbE switches for redundancy. In a dual-switch configuration, if one switch fails, the cluster nodes remain connected through the second switch.</p>

## Server specifications

The following specifications are for the server. Except for the power and cooling values, these specifications do not reflect differences among models; they are the maximum for all server models. For more detailed specifications of a particular model or configuration, contact your representative.

Physical:

- Weight: 25 kg (55 lb.)
- Height: 132 mm. (5.2 in.)
- Depth (including handles and bezel): 685 mm. (27 in.)
- Width: 440 mm. (17.3 in.)
- Rack space required: 3U (5.25 in.)



**Note:** A rack unit, or U, is a unit of measure that is used to describe the height of equipment intended to be mounted in a rack. One rack unit is equivalent to 1.75 inches or 44.45 millimeters.

Power and cooling:



**Note:** The power supplies and cooling fans noted in the following table are hot-swappable.

Item	Models 3080 G2 and 3090 G2
Power supplies	2
Cooling fans	2
Voltage range	110 VAC: 2.3A to 2.8A 208 VAC: 1.2A to 1.5A



Item	Models 3080 G2 and 3090 G2
	230 VAC: 1.1A to 1.4A
Power supply rating	450W
Average thermal (BTU per hour)	853
Max thermal (BTU per hour)	1057
Max power usage	310W

Other thermal:

- Temperature range (operational): 10° to 35° C (50° to 95° F)
- Maximum rate of temperature change per hour (operational) 10° C (18° F)
- Temperature range (storage): -10° to 45° C (14° to 113° F)
- Maximum rate of temperature change per hour (storage) 15° C (27° F)
- Temperature range (transit): -20° to 60° C (-4° to 140° F)
- Maximum rate of temperature change per hour (transit) 20° C (36° F)

Humidity:

- Operational: 20-80%
- Storage: 10-90%
- Transit: 5-95%

Noise: A-weighted Sound Power Level, Lwa (db re 1pW):

- Typical: 71
- Max: 81

Shock and vibration:

- Optional random vibration: 10 to 350 Hz @ 0.18 Grms
- Non-operational sinusoidal vibration: 60 to 350 Hz: @ 1g
- Non-operational shock: 3g 11ms, half sine

Packaged transport specification:

- Drops from 356mm and 508mm as per ASTM D5276
- Vibration at up to 0.53 Grms as per ASTM D4728

Altitude:

- Maximum of 2000 meters

**海拔气候声明:**

- 该产品只能用于 2000 米以下地区。

Approvals:

- Europe: CE, RoHS (6) & WEEE compliant
- EMC: EN55022, FCC & VCCI, all class A. EN55024
- Safety: CSA/UL 60950-1, EN60950-1

## Attaching a rack stabilizer plate

A rack stabilizer plate and mounting hardware are supplied with some system configurations. Hitachi Data Systems recommends that you always use the stabilizer plate when provided. Use of a stabilizer plate is required for those installations with dense trays.

The stabilizer contains two holes for securing it to the ground. Use suitable screws to secure the stabilizer.



**Note:** Attach the stabilizer plate to the rack **before** loading the cabinet.

---

### Procedure

1. Place the stabilizer plate up against the bottom of the front side of the cabinet.
2. Align the holes from the stabilizer plate to the holes on the bottom of the cabinet.
3. Place the screws in the holes and secure them into the cabinet.



## Hitachi NAS Platform server components

This section describes the components included in the server chassis.

A Hitachi Unified Storage File Module system can contain single Hitachi NAS Platform server or several servers that operate as a cluster. Clusters of more than two servers include two 10 Gbps Ethernet switches. Hitachi Data Systems only requires two switches for redundancy.

For information about the physical configuration of a cluster configuration, see the *Hitachi NAS Platform and Hitachi Unified Storage File Module System Installation Guide*.

The Hitachi NAS Platform server chassis consists of

- A removable fascia
- MMB (Mercury Motherboard)
- MFB (Mercury FPGA Board)
- Two hot-swappable fan assemblies
- Dual power supplies
- NVRAM backup battery pack
- Dual hot-swappable 2.5 inch disk drives
- Two PCI slots, two PCI-e x16 slots, and two PCI-X slots (not used at this time)

- ☐ [Ventilation](#)
- ☐ [Server front panel](#)
- ☐ [LED status indicators](#)
- ☐ [NVRAM backup battery pack](#)
- ☐ [Hard disk drives](#)
- ☐ [Fans](#)

- ☐ [Server rear panel](#)
- ☐ [Rear panel server LED and button locations](#)
- ☐ [Management interfaces](#)
- ☐ [Ethernet cables](#)

## Ventilation

There are vents and fan openings on the front and the rear of the server. These openings are designed to allow airflow, which prevents the server from overheating.



**Note:** At least four inches of clearance must be present at the rear of the server rack so that airflow is unrestricted.

---




**Caution:** Do not place the server in a built-in installation unless proper ventilation is provided.

Do not operate the server in a cabinet whose internal ambient temperature exceeds 35° C (95° F).

---


## Server front panel

The front of the server features a removable bezel that shields the front-facing server components.

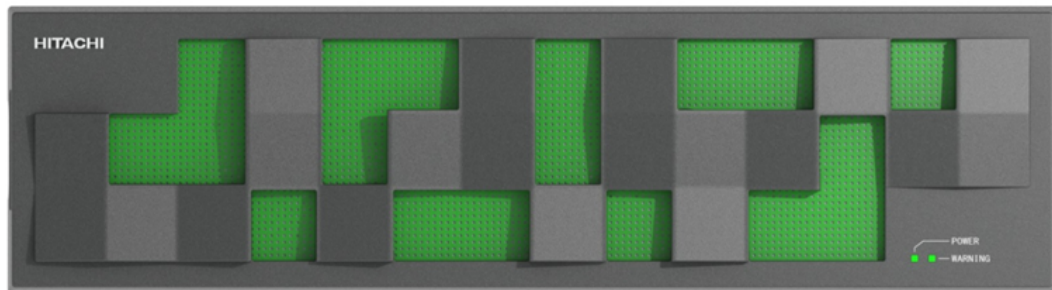

Once the bezel is removed, the front-facing components on the server chassis are visible.

**Figure 5-1 Server front panel bezel**

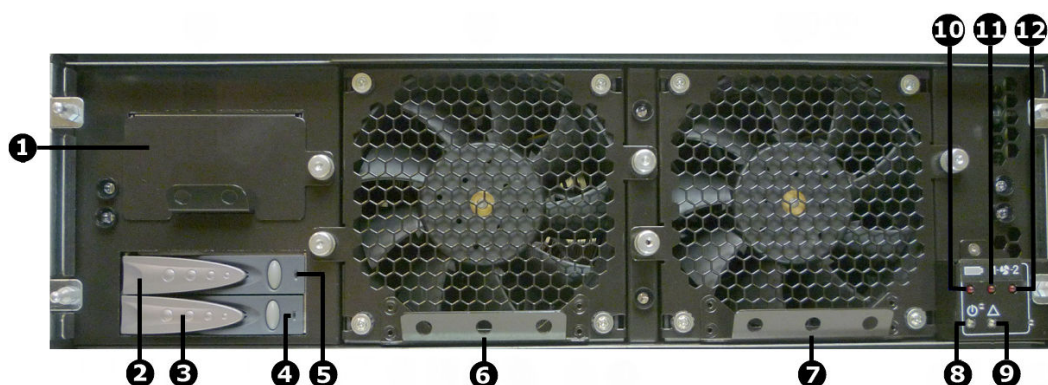


**Figure 5-2 Server model 3080 and 3090 front panel components (bezel removed)**

**Table 5-1 Server front panel component descriptions**

Item	Description
1	NVRAM battery backup pack
2	Hard disk drive A (top)
3	Hard disk drive B (bottom)
4	Disk B status LED
5	Disk A status LED
6	Fan 1
7	Fan 2
8	Power status LED
9	Server status LED
10	NVRAM battery backup pack status LED
11	Fan 1 status LED
12	Fan 2 status LED

## LED status indicators

The LEDs (light emitting diodes) on the front of the chassis indicate the overall status of the server, as well as the status of some of the individual components. The NVRAM backup battery pack, each of the hard disk drives, and each of the fan assemblies has a status LED.

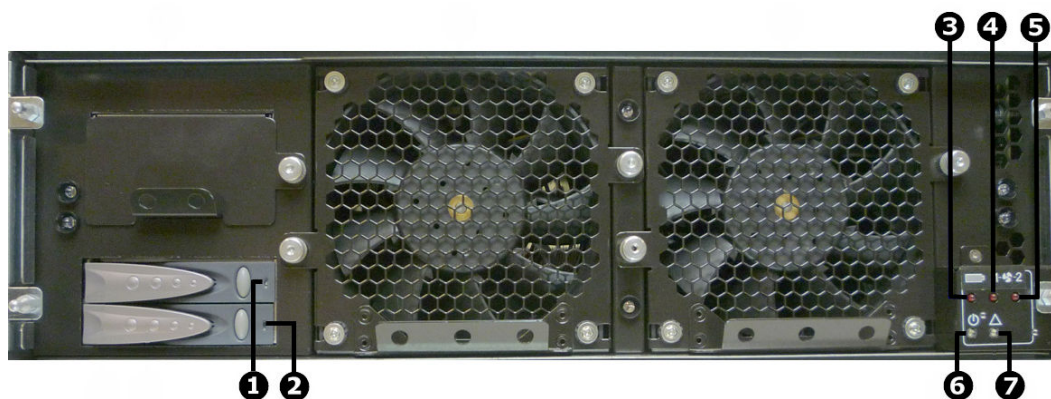

**Figure 5-3 Model 3080 and 3090 status LEDs**

**Table 5-2 LED descriptions**

LEDs	Meaning
1	Hard disk drive A status LED
2	Hard disk drive B status LED
3	NVRAM battery backup pack status LED
4	Fan 1 status LED
5	Fan 2 status LED
6	Power status LED
7	Server status LED

**Table 5-3 Power status LED (green)**

LEDs	Meaning
Green	Normal operation with a single server or an active cluster node in operation.
Slow flash (once every three seconds)	The system has been shut down.
Medium flash (once every .8 seconds)	The server is available to host file services but is not currently doing so. Also if no EVS is configured or all EVSs are running on the other node in a cluster.
Fast flash (five flashes per second)	The server is rebooting.
Off	The server is not powered up.



**Table 5-4 Server status LED (amber)**

LEDs	Meaning
Amber	Critical failure and the server is not operational.
Slow flash (once every three seconds)	System shutdown has failed. Flashes once every three seconds.
Medium flash (once every .8 seconds)	The server needs attention, and a non-critical failure has been detected, for example, a fan or power supply has failed.
Off	Normal operation.

**Table 5-5 Battery pack status LED**

LEDs	Meaning
Red	<p>If this LED is on immediately after installing a new battery pack, it indicates that an initial battery charging and conditioning cycle is in progress. The initial battery conditioning takes approximately 24 hours, and the LED will turn off after the cycle is complete.</p> <p>If this LED is on during normal operation (not after installing a new battery pack), either the battery has exceeded its two year life or a problem has been detected. Check the battery status before determining any service operation.</p>
Off	Normal operation.

**Table 5-6 Fan status LEDs**

LEDs	Meaning
Red	<p>Fan has failed, fan speed is out of acceptable range, or fan speed is not being reported. (This LED will be on if the corresponding fan has been removed.)</p> <p>When on, this LED indicates a failure and that the fan is not operating correctly. Replace the fan as soon as possible.</p>
Off	Normal operation.

**Table 5-7 Hard disk activity and status LEDs**

LEDs	Meaning
Blue	If this LED is on and blue, the disk is operating normally and no problems have been detected. If the LED is flashing blue, it indicates disk activity. If the LED is on, but not flashing, there is currently no disk activity.
Red	If this LED is on immediately after installing a new hard disk, it indicates that the RAID configuration for the server is being rebuilt. The LED will turn off after the RAID configuration is restored. The amount of time it takes for the RAID configuration to be rebuilt after a new disk drive is installed depends on the amount of user and system configuration data stored.


LEDs	Meaning
	If this LED is on during the course of normal operation (not after installing a new hard disk), either the disk has failed or the server's RAID configuration has been degraded.

## NVRAM backup battery pack

Each server contains a battery pack. The battery pack maintains the NVRAM contents when the server is not receiving power (due to a power failure or a short-term shut down). The battery pack is located behind the front bezel cover of the server, on the left-hand side. The battery pack is hot-swappable and can only be accessed after the front bezel has been removed.



**Figure 5-4 Model 3080 and 3090 NVRAM backup battery pack (front view)**

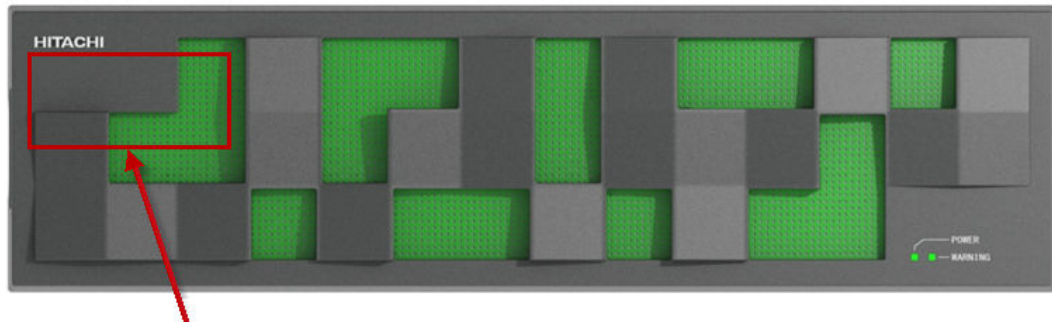

**Figure 5-5 NVRAM battery backup pack location behind bezel**

Battery pack characteristics:

- Each server contains a single battery module. The module contains dual redundancy inside.
- The battery pack uses NiMH technology.
- A battery pack has a two year operational life. A timer starts when a server is booted for the first time, and the timer is manually restarted when a replacement battery pack is installed. After two years of operation, a log warning event is issued to warn the user that the battery pack should be replaced.
- The battery pack is periodically tested to ensure it is operational.
- A fully charged battery pack maintains the NVRAM contents for approximately 72 hours.

- When a new server is installed and powered on, the battery pack is not fully charged (it will not be at 100% capacity). After being powered on, the server performs tests and starts a conditioning cycle, which may take up to 24 hours to complete. During the conditioning cycle, the full NVRAM content backup protection time of 72 hours cannot be guaranteed.
- A replacement battery pack may not be fully charged (it may not be at 100% capacity) when it is installed. After a new battery pack is installed, the server performs tests and starts a conditioning cycle, which may take up to 24 hours. During the conditioning cycle, the full NVRAM content backup protection time of 72 hours cannot be guaranteed.
- If a server is left powered off, the battery will discharge slowly. This means that, when the server is powered up, the battery will take up to a certain number of hours to reach full capacity and the time depends upon whether a conditioning cycle is started. The scenarios are:
  - 24 hours if a conditioning cycle is started
  - 3 hours if a conditioning cycle is *not* started

During the time it takes for the battery pack to become fully charged, the full 72 hours of NVRAM content protection cannot be guaranteed. The actual amount of time that the NVRAM content is protected depends on the charge level of the battery pack.

- A battery pack may become fully discharged because of improper shutdown, a power outage that lasts longer than 72 hours, or if a server is left unpowered for a long period of time.  
If the battery pack is fully discharged:
  - The battery pack may permanently lose some long term capacity.
  - Assuming a battery conditioning cycle is not started, a fully discharged battery pack takes up to 3 hours before it is fully charged. If a battery conditioning cycle is started, a fully discharged battery pack takes up to 24 hours before it is fully charged.
  - A battery conditioning cycle is started if the server is powered down for longer than three months.
- A battery pack may be stored outside of the server for up to one year before it must be charged and/or conditioned. After one year without being charged and possibly conditioned, the battery capacity may be permanently reduced.

If you store battery packs for more than one year, contact your representative to find out about conditioning your battery packs.

- When preparing a server for shipment, if the NVRAM is still being backed up by battery (indicated by the flashing NVRAM LED), the battery can be manually isolated using the reset button. See [Reset button \(RST\) on page 50](#) for the location of the reset button.

When preparing a server for shipment or if it will be powered down for any length of time, it is important that the server has been shut down correctly before powering-off. Otherwise, if the server is improperly shut down, the batteries supplying the NVRAM will become fully discharged. This also

occurs if the system is powered down for too long without following the proper shutdown procedure.

---

**Note:** If the batteries become fully discharged, or the system is to be powered down for an extended period, see [Powering down the server for shipment or storage on page 87](#). Contact Hitachi Data Systems Support Center for information about recharging batteries.

---

To replace the NVRAM battery backup pack, see [Replacing the NVRAM backup battery pack on page 64](#).

## Hard disk drives


The server contains two hard disks, which are configured as a Linux SW RAID 1 pair, and they store server or cluster-related data. These hard disks are not part of the customer-usable data storage that is available to the server.

Hard disks are located behind the bezel on the left side of the chassis.

---

**Note:** Failed hard disks are hot-swappable, so a failed hard disk can be replaced without shutting down the server. However, there are serious risks in trying to swap a drive that is not failed.

---

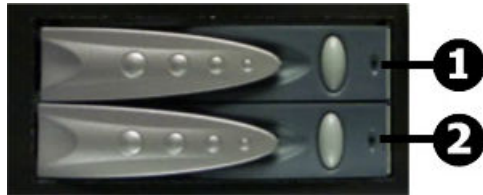

**Figure 5-6 Hard disk drives status and activity status LEDs - models 3080 and 3090**

Item	Description
1	Disk A status and activity LEDs
2	Disk B status and activity LEDs

**Table 5-8 Hard disk activity and status LEDs**

LEDs	Meaning
Blue	If this LED is on and blue, the disk is operating normally and no problems have been detected. If the LED is flashing blue, it indicates disk activity. If the LED is on, but not flashing, there is currently no disk activity.

LEDs	Meaning
Red	<p>If this LED is on immediately after installing a new hard disk, it indicates that the RAID configuration for the server is being rebuilt. The LED will turn off after the RAID configuration is restored. The amount of time it takes for the RAID configuration to be rebuilt after a new disk drive is installed depends on the amount of user and system configuration data stored.</p> <p>If this LED is on during the course of normal operation (not after installing a new hard disk), either the disk has failed or the server's RAID configuration has been degraded.</p>

## Fans

The server features dual hot-swappable fan assemblies. The fans provide for front-to-back airflow to be consistent with other storage system components.

The server's cooling airflow enables the system to operate in an ambient temperature range of 10°C to 35°C when mounted in a rack or cabinet with associated components required to make up a storage system. The storage system administrator is responsible for ensuring that the ambient temperature within the rack does not exceed the 35°C operating limit.

The server continues to operate following the failure of a single fan and during the temporary removal of a fan for replacement. Replace a failed fan as soon as possible.




**Caution:** If a fan has failed, replace the fan as soon as possible to reduce the amount of time the server is operating with reduced airflow.

---

The fans are contained within two assemblies, each containing a single variable-speed fan. Fan assemblies are located behind the front bezel. Each fan assembly is secured to the chassis with two thumbscrews and a blind-mate electrical connector; no tools are required to remove or install a fan assembly.

Two fan status LEDs provide fan status information. These LEDs are located behind the bezel on the right side of the chassis.

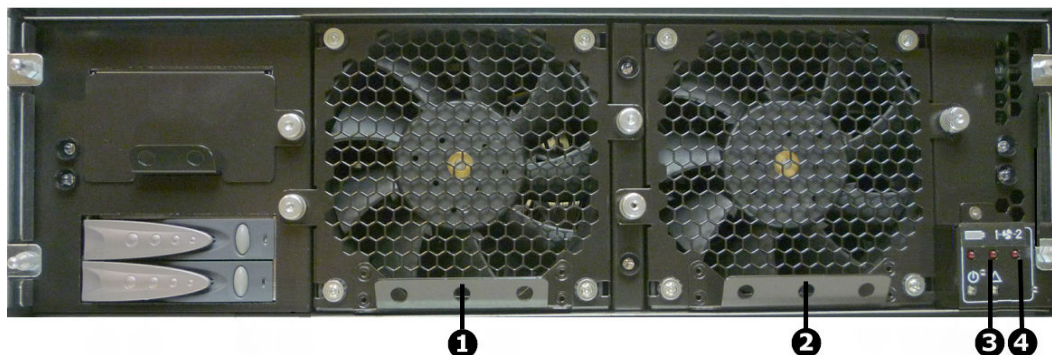

**Figure 5-7 Fan and fan status LED locations - models 3080 and 3090**


Item	Description
1	Fan 1 (left)
2	Fan 2 (right)
3	Fan 1 status LED
4	Fan 2 status LED

**Table 5-9 Fan status LEDs**

LEDs	Meaning
Red	<p>Fan has failed, fan speed is out of acceptable range, or fan speed is not being reported. (This LED will be on if the corresponding fan has been removed.)</p> <p>When on, this LED indicates a failure and that the fan is not operating correctly. Replace the fan as soon as possible.</p>
Off	Normal operation.

## Server rear panel

The rear panel of the server features numerous ports, connectors, switches, and LEDs.

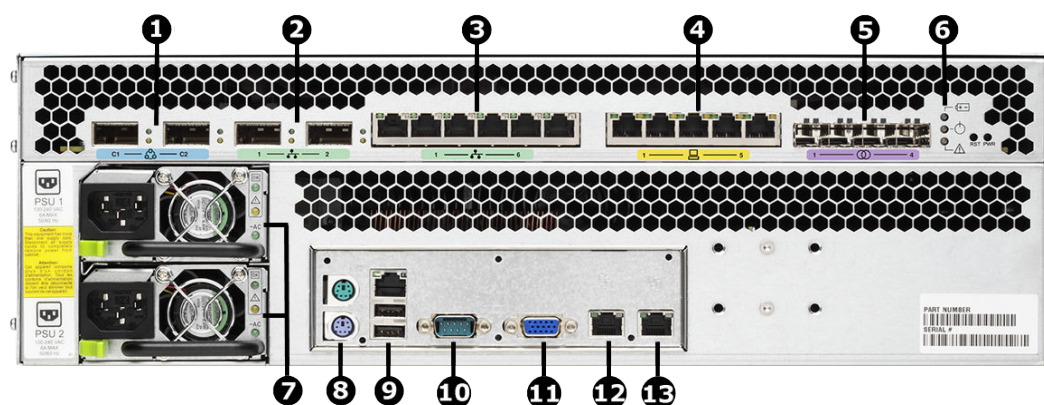

**Figure 5-8 Server rear panel components - models HNAS 3080 and HNAS 3090**



**Note:** Except for the ports and connectors described in the following, none of the other ports or connectors should be used without guidance from technical support.

**Table 5-10 Server rear panel components descriptions**


Item	Connectivity	Quantity	Description
1	Clustering ports 10 GbE	2	For cluster management and heartbeat, connect to: <ul style="list-style-type: none"> <li>Two way configuration: Connect to corresponding cluster server ports (left port to left port and right port to right port).</li> <li>N-way configuration: Connect to 10 GbE switch.</li> </ul>
2	10 GbE network ports	2	Connection to external 10 Gbps Ethernet data network.
3	Gigabit Ethernet network ports	6	Connection to external Ethernet data network.
4	10/100 Ethernet port	5	Connection to private management network.
5	Storage or FC switch	4	Connection to disk arrays or (where present) to the FC switches.
6	n/a	3	Status LEDs (NVRAM, power, and server), and Power and Reset buttons.
7	Power supply units: PSU 1 PSU 2	2	Connect to the rack's Fault group: <ul style="list-style-type: none"> <li>PSU 1 to Fault group A</li> <li>PSU 2 to Fault group B</li> </ul>
8	I/O ports	2	Keyboard (purple) and mouse (green) ports. <i>(Reserved for Customer Service Engineer access only.)</i>



Item	Connectivity	Quantity	Description
9	I/O ports	2	USB port. <i>(Reserved for Customer Service Engineer access only.)</i>
10	RS-232	1	Management interface. <i>(Reserved for Customer Service Engineer access only.)</i>
11	Video port	1	Video management interface port. <i>(Reserved for Customer Service Engineer access only.)</i>
12	ETH0 1000baseT Ethernet (gray logo)	1	External system management. Connect to the customer's management switch.
13	ETH1 1000baseT Ethernet (yellow logo)	1	Management port. Connect to the rack's internal Ethernet switch.

## Rear panel server LED and button locations

The rear panel of the server contains three (3) status LEDs that indicate server status and two (2) buttons that are used to power up and reset the server.

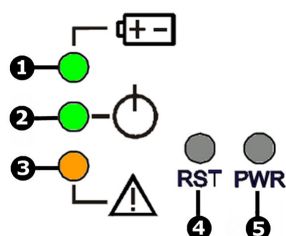

**Figure 5-9 Rear panel server LEDs and buttons**

Item	Meaning
1	NVRAM battery backup status LED
2	Power status symbol and LED
3	Server status LED
4	Reset button
5	Power button

## Rear panel LED state descriptions

The NVRAM, power, and server status LEDs indicate whether the server is powered, its operational state, and whether the NVRAM is currently being protected by battery backup power. The way an LED flashes provides further information about what is currently occurring.



**Table 5-11 NVRAM status LED (green/amber)**

State	Meaning
Green (solid)	Normal operation
Green (flashing)	NVRAM contents are protected by battery power
Amber (solid)	Battery pack is faulty or not fitted
Off	Disabled or NVRAM battery power exhausted

**Table 5-12 Power status LED (green)**

LEDs	Meaning
Green	Normal operation with a single server or an active cluster node in operation.
Slow flash (once every three seconds)	The system has been shut down.
Medium flash (once every .8 seconds)	The server is available to host file services but is not currently doing so. Also if no EVS is configured or all EVSs are running on the other node in a cluster.
Fast flash (five flashes per second)	The server is rebooting.
Off	The server is not powered up.

**Table 5-13 Server status LED (amber)**

LEDs	Meaning
Amber	Critical failure and the server is not operational.
Slow flash (once every three seconds)	System shutdown has failed. Flashes once every three seconds.
Medium flash (once every .8 seconds)	The server needs attention, and a non-critical failure has been detected, for example, a fan or power supply has failed. Flashes once every .8 seconds.
Off	Normal operation.

## Power button (PWR)

Under normal circumstances, the power button is rarely used. However, the power button can be used to restore power to the system when the server is in a standby power state.

When power cables are connected to the PSUs, the server normally powers up immediately. If, after 10 seconds, the LEDs on the power supplies are lit, but the Power Status LED is not lit, press the PWR button to restore power to the system. Open a case with the Hitachi Data Systems Support Center to get the problem resolved.



**Note:** Do not use the power button during normal operation of the server. Pressing the power button immediately causes an improper shutdown of the system. The PSUs will continue to run.

---

## Reset button (RST)

The reset button has several functions.

- Pressing the reset button when the server is powered on causes a hard reset of the server.

This reset occurs after a 30-second delay, during which the server status LED flashes rapidly and the server attempts to shut down properly. Even with the delay, pressing the reset button does not guarantee a complete shutdown before rebooting. Only press the reset button when the server is powered on to recover a server which has become unresponsive. Pressing the reset button at this time may produce a dump automatically.

- Pressing the reset button for more than five seconds when the server is not powered up disables the NVRAM battery pack (which may be necessary prior to shipping if an incomplete shutdown occurred.) See [Powering down the server for shipment or storage on page 87](#) for more information.



**Caution:** If the server is non-responsive, see [Restarting an unresponsive server on page 85](#). Do not pull the power cord. Pulling the power cord does not produce a dump.

---

## Fibre channel storage ports

The Fibre Channel (FC) storage ports allow you to connect the server with other FC devices, such as storage subsystems.

FC ports operate at speeds of two to eight (8) gigabits per second. FC ports use an enhanced small form factor pluggable (SFP+) optical connector.

The SFP+ ports can be removed from the chassis.



**Note:** When removed, the 10 GbE and 8 GB Fibre Channel (FC) SFP+ storage ports are indistinguishable from one another except for their part numbers. The part number is located on the side of the port housing and is only visible when the port is removed. Part number prefixes are different as follows:

- 10 GbE: FTLX<number>
  - FC: FTLF<number>
-



**Figure 5-10 Fibre Channel storage ports label**

Status/Activity (per port)		Meaning
<b>Status</b>	Green (on, not flashing)	FC link present
	Green off	No link
<b>Activity</b>	Amber flashing	Data activity
	Amber off	No data activity

## 10/100 private Ethernet ports

The 10/100 Private Ethernet Network ports function as an unmanaged switch for the private management network (refer to the *Network Administration Guide* for more information on the private management network). These ports are used by the server and other devices (such as an external SMU and other cluster nodes) to form the private management network. There are no internal connections to the server from these ports; instead, when joining a server to the private management network, you must connect from one of these ports to the management interface port on the server.

The 10/100 ports operate at speeds of up to 100 megabits per second, and require the use of a standard RJ45 cable connector.

The 10/100 Private Management Ethernet Network ports are labeled as shown next:



**Figure 5-11 10/100 Private Management Network Ethernet Ports Label**

Once connected, each 10/100 port has two indicator LEDs; one green and one amber. These LEDs provide link status and network activity status information as follows:

Status/Activity (Per Port)		Meaning
<b>Status</b>	Green (On, not flashing)	10 or 100 Mbps link present
	Green Off	No link
<b>Activity</b>	Amber Flashing	Network activity
	Amber Off	No network activity

# GE Ethernet network ports

The GE Ethernet Network ports are used to connect the server or cluster node to the customer's data network (also called the public network), and these ports may be aggregated into a single logical port (refer to the *Network Administration Guide* for more information on creating aggregations). GE ports operate at speeds of up to one (1) gigabit per second, and require the use of a standard RJ45 cable connector.

The GE Customer Ethernet Network ports are labeled as shown next:




**Figure 5-12 GE Customer Ethernet Network Ports Label**

Once connected, each GE port has two indicator LEDs; one green and one amber. These LEDs provide link status and network activity status information as follows:

Status/Activity (Per Port)		Meaning
Status	Green (On, not flashing)	1 Gbps link present
	Green Flashing	1 Gbps link standby in a redundant configuration
	Green Off	No link
Activity	Amber Flashing	Network activity
	Amber Off	No network activity

## 10 GbE Ports

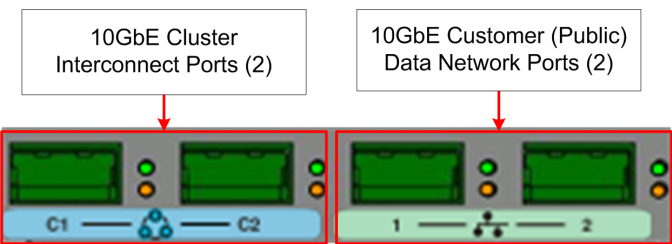

**Figure 5-13 NAS Platform 10 GbE Ports**

### 10 Gigabit Ethernet cluster interconnect ports

The 10 gigabit per second Ethernet (10 GbE) cluster ports allow you to connect cluster nodes together. The cluster ports are used only in a cluster configuration. The 10 GbE ports operate at speeds of ten (10) gigabits per second.

Do *not* use the 10 GbE cluster interconnect ports to connect to the customer data network (also known as the public data network).



**Figure 5-14 10 GbE cluster interconnect ports label**

Once connected, each 10 GbE port has two indicator LEDs; one green and one amber. These LEDs provide link status and network activity status information as follows:

Status/Activity (per port)		Meaning
<b>Status</b>	Green (on, not flashing)	10 Gbps link present
	Green flashing	10 Gbps link standby in a redundant configuration
	Green off	No link
<b>Activity</b>	Amber flashing	Network activity
	Amber off	No network activity

## 10 Gigabit Ethernet customer data network ports

The 10 Gigabit Ethernet (GbE) customer data network ports are used to connect the server or cluster node to the customer's data network (also called the public data network). These ports may be aggregated into a 1, 2, 3, or 4 aggregated port.

See the *Network Administration Guide* for more information on creating aggregations.

The 10 GbE ports operate at speeds of ten (10) gigabits per second. The 10 GbE ports use enhanced small form factor pluggable (SFP+) optical connectors.



**Note:** The 10 GbE customer data network ports cannot be used to interconnect cluster nodes.



**Figure 5-15 10 GbE customer data network ports label**


Once connected, each 10 GbE port has two indicator LEDs; one green and one amber. These LEDs provide link status and network activity status information as follows:

Status/Activity (per port)		Meaning
<b>Status</b>	Green (on, not flashing)	10 GbE network link present
	Green off	No link
<b>Activity</b>	Amber flashing	Network activity
	Amber off	No network activity

## Power supply units

The server has dual, hot-swappable, load sharing, AC power supply units (PSUs). The PSUs are accessible from the rear of the server.

The server monitors the operational status of the power supply modules so that the management interfaces can indicate the physical location of the failed PSU. LED indicators provide PSU status information for the state of the PSU.

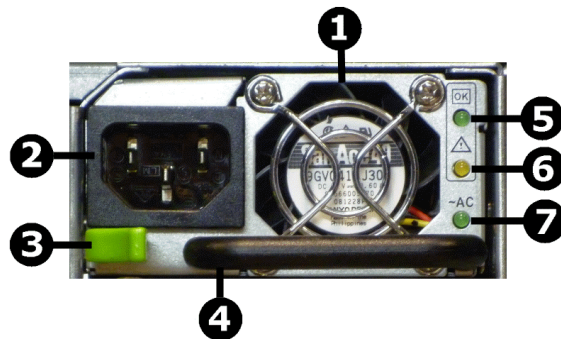

**Figure 5-16 Power supply unit details**

Item	Description
1	PSU fan exhaust
2	Power cord connector
3	PSU retention latch
4	PSU handle
5	DC power status LED
6	PSU status LED
7	AC power status LED



**Note:** There are no field-serviceable parts in the PSU. If a PSU unit fails for any reason, replace it. See [Replacing a power supply unit on page 74](#) for information about replacing a power supply.

**Table 5-14 DC power status LED (green)**

Status	Meaning
Green	DC output operating normally
Off	DC output not operating

If the DC Power status LED is off, unplug the power cable, wait 10 seconds, then reconnect the cable. If the DC Power Status LED remains off, the PSU has failed and must be replaced.

**Table 5-15 PSU status LED (amber)**

Status	Meaning
Off	PSU operating normally
Amber	PSU internal failure (over temperature, fan, or internal component)

If the PSU status LED is on, unplug the power cable, wait 10 minutes, then reconnect the cable. If the PSU Status LED remains off, the PSU has failed and must be replaced. See [Replacing a power supply unit on page 74](#) for more information on replacing a PSU.

**Table 5-16 AC power status LED (green/amber)**

Status	Meaning
Green	Receiving AC power and operating normally
Off	Not receiving AC power (check mains and power cable connections)

Mains power connections are an IEC inlet in each power supply. Each PSU is only powered from its mains inlet. Two power feeds are required for the system. PSU units do not have an on/off switch. To turn on power, simply connect the power cable. To turn off the unit, remove the power cable.

When both PSUs are installed, if only one PSU is connected and receiving adequate power, the fans on both PSUs will operate, but only the PSU receiving power will provide power to the server.

Each power supply auto-ranges over an input range of 100V to 240V AC, 50 Hz to 60 Hz.



**Caution:** If the server is non-responsive, see [Restarting an unresponsive server on page 85](#). Do not pull the power cord.

## Ethernet management ports 0 and 1

Standard 10/100/1000 Ethernet ports, used to connect to the server for management purposes.

## Serial port

A standard serial (RS-232) port, used to connect to the server for management purposes. See [RS-232 serial management port on page 57](#) for more information.

## USB ports

Standard USB 2.0 (Universal Serial Bus 2.0) connectors. These ports are used to connect USB devices to the server during some operations.

Valid USB devices include:

- Flash drives
- External hard drives
- USB keyboards

Valid operations include:

- Management
- Install
- Upgrade
- Update
- Repair




**Note:** The USB ports should not be used without guidance from Hitachi Data Systems Support Center.

---

## Management interfaces

The server panel features two types of physical management ports: RS-232 Serial (DB-9) and 10/100/1000 Ethernet (RJ45).



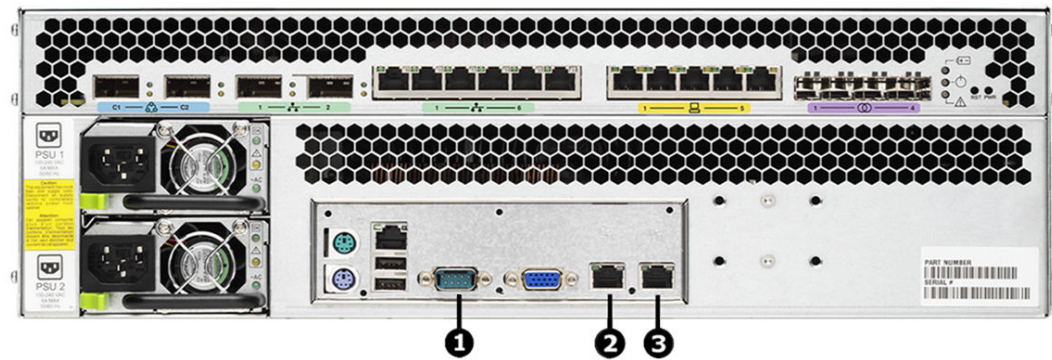

**Figure 5-17 Management interface ports on rear panel - models 3080 and 3090**

Item	Description
1	Serial management port (RS-232 DB-9 connector)
2	Ethernet management port 0 for customer facing management (RJ45 connector)
3	Ethernet management port 1 for private management (RJ45 connector)

## RS-232 serial management port

The server has one RS-232 connection port, located on the rear panel of the server. This serial port is intended to be used during system setup. The serial port is not intended as a permanent management connection. This port should not be used as the primary management interface for the server. The primary management interface to the server is through the Web Manager GUI or through server's command line interface (CLI), which can be accessed through the network.

Any VT100 terminal emulation interface can be used to access to the CLI so that you can perform management or configuration functions. Connect the terminal to the serial port on the rear panel of the server, then set the host settings to the values shown in the following table to ensure proper communication between the terminal and the server.

**Table 5-17 Host setting values**

Terminal	Requirement
Connection	Crossover (null modem) cable
Emulation	VT100
Baud rate	115,200 Bps
Data bits	8
Stop bits	1

Terminal	Requirement
Parity	None
Flow control	None



**Note:** Once the initial setup has been completed, disconnect the serial cable. If you need to manage the server through a serial connection, connect to the serial port on the external SMU and use SSH to access the server's CLI. If your system does not include an external SMU, connect to the server's internal SMU and use SSH to access the server's CLI.

## 10/100/1000 Ethernet management ports

The 10/100/1000 Ethernet management ports are used to connect the server or node to the customer facing management network and the private management network, or to connect directly to another device for management purposes.

The 10/100/1000 Ethernet ports operate at speeds of up to one (1) gigabit per second, and require the use of a standard RJ45 cable connector. Once connected, each GE port has two indicator LEDs; one on the top left and the second on the top right of the port. These LEDs provide link status and network activity status information as described in the next table:

## Ethernet cables

The HNAS 3080 and 3090 models require CAT6 cables that fully comply with the CAT6 SF/UTP standard for the 1000Base-T GE Ethernet network ports. Always use CAT6 cables that fully comply, such as those supplied by Harting.

See the following examples of Harting cables that comply with the standard:

Cable	Part number
CABLE ETHERNET PATCH LEAD CAT6 SF/UTP 1 Meter	HARTING 09474747109
CABLE ETHERNET PATCH LEAD CAT6 SF/UTP 2 Meter	HARTING 09474747111
CABLE ETHERNET PATCH LEAD CAT6 SF/UTP 3 Meter	HARTING 09474747113
CABLE ETHERNET PATCH LEAD CAT6 SF/UTP 5 Meter	HARTING 09474747115
CABLE ETHERNET PATCH LEAD CAT6 SF/UTP 10 Meter	HARTING 09474747121



## Replacing server components

This section describes which components are field replaceable units (FRUs) and how to replace those components. The section also describes which components are hot-swappable.

- ☐ [Field-replaceable units](#)
- ☐ [Hot-swappable components](#)
- ☐ [Removing and replacing the front bezel](#)
- ☐ [Replacing a fan](#)
- ☐ [Replacing the NVRAM backup battery pack](#)
- ☐ [Replacing a hard disk](#)
- ☐ [Replacing a power supply unit](#)
- ☐ [Replacing an FPGA board as a FRU](#)

## Field-replaceable units

Some components are field-replaceable units (FRUs).



**Important:** The FRUs can only be replaced by certified engineers. These components are *not* customer replaceable units (CRUs).

---

FRUs include the following components:

- Hitachi NAS Platform or Hitachi Unified Storage File Module servers
- Bezels
- Hard disk drives (HDDs)
- Power supply unit (PSUs)
- NVRAM battery backup packs
- Fan assemblies



**Note:** Main Motherboards (MMBs) and Main FPGA Boards (MFBs) are pre-installed boards that perform functions essential to the integrity of the server. If there is an issue with the MMB, or the MFB (typically), you must return the server for repair. MMBs are *not* FRUs, and, typically, MFBs are also *not* FRUs. However, an MFB may be replaced under certain specific circumstances. Contact Hitachi Data Systems Support Center to determine whether your MFB can be replaced as a FRU.

---

Some components are also hot-swappable. See [Hot-swappable components on page 61](#) for details.

## Hot-swappable components

Some components are hot-swappable. Such components can be changed *without* shutting down the server.

Before replacing a component that is *not* hot-swappable, you must shut down and power off the server. See [Rebooting or shutting down a server on page 83](#) for details.

The HNAS 3080 and 3090 models includes the following hot-swappable components:

- HDDs
- PSUs
- NVRAM battery backup packs
- Fan assemblies


## Removing and replacing the front bezel

To access some server components, or field replaceable units (FRUs), you must first remove the front bezel. Replace the bezel after the part replacement is complete.

### Bezel removal

The server bezel is held onto the server chassis through a friction fit onto four retention posts, which are mounted to the chassis along the left and right edges of the chassis. There are no screws or other fasteners.

There are four (4) retention screws that hold the bezel retention posts onto the chassis.

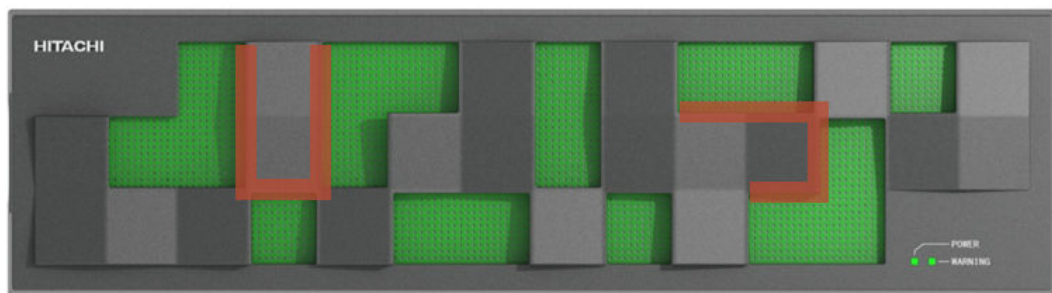

**Figure 6-1 Server front bezel with grasping areas**

#### Procedure

1. To remove the bezel, grasp the front of the bezel by the grasping areas.
2. Gently pull the bezel straight out away from the server.

### Bezel replacement

#### Procedure

1. Place the bezel on the server, making sure that the bezel fits inside the outer edges of the chassis and that the retention posts and status LEDs are aligned.
2. Using the solid portions of bezel (near the edges), press the bezel straight into the server until it is firmly in place against the server chassis.


## Replacing a fan

Replace a fan assembly, which is one of the server's hot-swappable components.

## Procedure

1. Remove the front bezel. The fan assemblies will then be visible.
2. Identify the fan to be replaced.

Fans are labeled on the chassis, and are numbered 1 and 2, with fan 1 on the left and fan 2 on the right. Refer to the fan status LEDs on front panel of the server (behind the bezel) to see which fan has failed. In the following figure, number 1 indicates the status LED for fan 1 (the left-side fan), and number 2 indicates the status LED for fan 2 (the right-side fan).

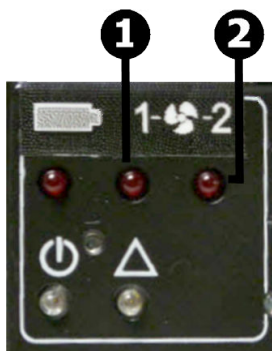

**Figure 6-2 Fan status LEDs**

Item	Description
1	Fan 1 status LED
2	Fan 2 status LED

3. Remove the faulty fan by loosening the thumbscrews (turning them counter-clockwise) until they are loose, then pulling the fan unit straight out of the chassis. (The fan lead connector disengages automatically as you remove the fan assembly.)



**Figure 6-3 Fan assembly - G2 models 3080 and 3090**

4. Put the new fan assembly into place.
5. Gently press the fan assembly back into the chassis. The fan electrical connector will be aligned automatically when the fan is fully inserted into the chassis.
6. Secure the fan assembly in position by tightening the thumbscrews (turning them clockwise).
7. Replace the front bezel.

## Replacing the NVRAM backup battery pack

To replace the NVRAM backup battery pack in a server, you remove the old battery and install the new replacement. Perform the battery pack replacement as quickly as possible, and only when the new pack is present.

The replacement NVRAM backup battery pack comes pre-assembled. Do *not* remove the batteries from the case.



**Note:** If possible, shut down the server before replacing the battery backup pack. Shutting down the server or migrating all of the EVSs to the other node is not required. However, during the replacement procedure, there will be a period of time when the NVRAM contents are not backed up by the battery pack. If a power failure occurs during this period, the NVRAM contents may be lost.


## Checking battery pack status

The battery pack status LED indicates the status of the server's NVRAM battery pack.

**Table 6-1 Battery pack status LED**

LEDs	Meaning
Red	<p>If this LED is on immediately after installing a new battery pack, it indicates that an initial battery charging and conditioning cycle is in progress. The initial battery conditioning takes approximately 24 hours, and the LED will turn off after the cycle is complete.</p> <p>If this LED is on during normal operation (not after installing a new battery pack), either the battery has exceeded its two year life or a problem has been detected. Check the battery status before determining any service operation.</p>
Off	Normal operation.



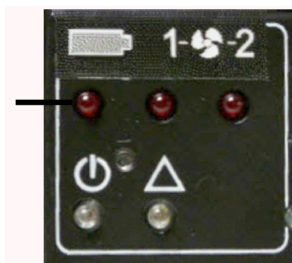

**Figure 6-4 Battery pack status LED location**

Battery-related events are recorded in the server's event log. Other battery-related information is also saved in a battery status log. These logs, along with the server's event log, are useful in monitoring the state of the battery.

Turning the battery status LED off can require one or more of the following steps. Try the steps in the following order:

#### **Procedure**

1. Perform a battery pack test cycle. To begin the test cycle, do the following:
  - a. Access the server CLI.
  - b. Issue the following Linux command: `touch /var/opt/chassis-monitor/.testbattery`
2. Remove and reinstall the battery pack.
3. If the battery is still having problems, replace the battery pack. (A new battery pack is required.)

## **Identifying a cluster node that requires battery replacement**

If you have warnings or battery-related events in the Event Log of a cluster, you can identify the cluster node requiring battery replacement using the following procedure:

#### **Procedure**

1. Access the server command line interface.  
For information about how to access the server command line interface, refer to the *Hitachi NAS Platform System Access Guide*.
2. Log in to the server as manager with the default password of `nasadmin`. These credentials provide access to the Bali console.
3. Enter the command `led-identify-node x`, where `x` is the node mentioned in the Event Log message.

Both the server status and fault LEDs on the node will flash, allowing you to identify the node. Refer to the *Hitachi NAS Platform Command Line Reference* for more information on the `led-identify-node` command.

## Replacing the NVRAM battery module


You can easily replace the NVRAM battery pack in a server. The battery module is hot-swappable; however, if possible, shutdown the server before replacing the module.

### Prerequisites

Identify the server model before installing the battery.



**Important:** During the replacement procedure, the NVRAM contents are not backed up by the battery pack. If a power failure occurs during this period, NVRAM contents may be lost. See the appropriate hardware reference or maintenance documentation for procedures to power down a server.

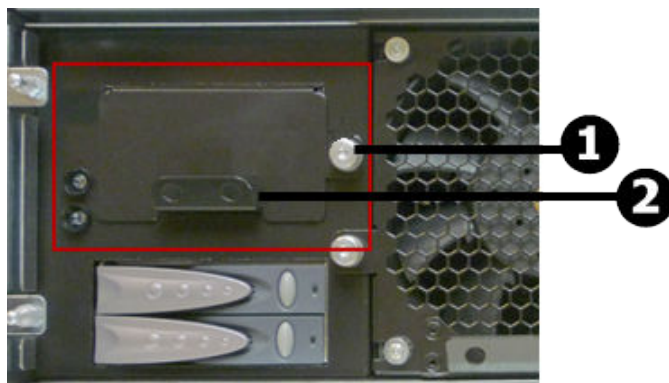

**Figure 6-5 NVRAM battery module removal components - models 3080 and 3090**

Item	Description
1	Thumbscrew that holds the battery pack in place
2	Handle for moving the battery pack forward and backward in the chassis

### Procedure

1. Remove the bezel cover from the front of the server for access to the batteries.
2. Loosen the thumbscrew to the right of the battery pack module cover by turning it counter-clockwise.
3. Using the handle, pull the battery pack module straight out of the chassis.  
The battery pack is automatically disconnected.
4. Insert the pre-assembled replacement module straight into the chassis, and gently but firmly push the pack into position.  
The battery pack is automatically connected.

5. Tighten the thumbscrew by turning it clockwise.
6. Replace the server bezel.
7. Dispose of the old battery pack in accordance with environmental regulations or return to the supplier.


## Collecting system backups and diagnostics

After replacing the battery, collect system backups and diagnostics.

### Procedure

1. Connect to the back-end HNAS Private Management Switch.
2. Open a browser session to the SMU. (External: 192.0.2.1; Internal: 192.0.2.2).
3. Login as Username: `admin` Password: `nasadmin`
4. Back up the Server registry (Internal SMU - this will include the SMU configuration).
  - a. Navigate to **Home > Server Settings > Configuration Backup and Restore**.
  - b. Click **Backup**.
  - c. Save the registry file to a location on your computer.
  - d. Verify that the archive file can be opened and the contents can be extracted.
5. Backup the SMU Configuration - External SMU ONLY.
  - a. In the GUI, navigate to **SMU Administration > SMU Backup and Restore**
  - b. Click **Backup SMU: Backup**.
  - c. Save the configuration file to a location on your computer.
  - d. Verify that the archive file can be opened and the contents can be extracted.

6. Collect Diagnostics from the cluster.
  - a. Navigate to **Home > Status and Monitoring > Download Diagnostics**
  - b. Check only the check boxes and radio button shown below .

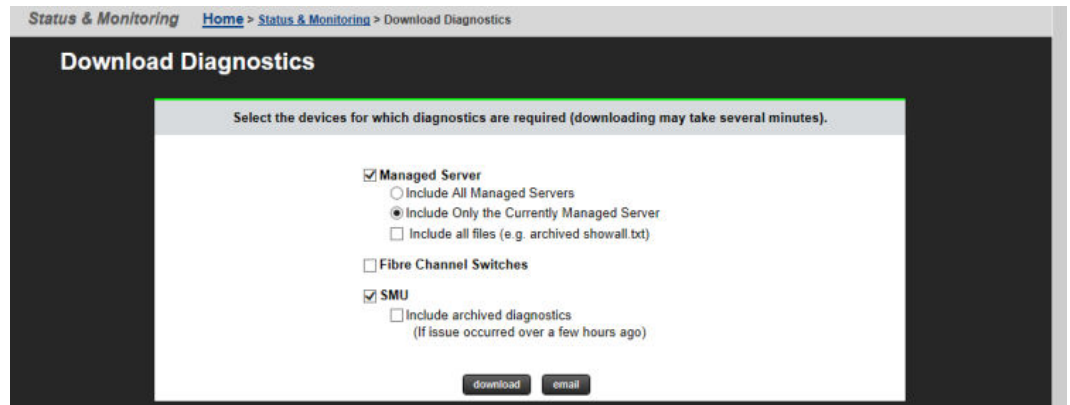

- c. Click **download**.
- d. Save to a location on your computer.
- e. Verify that the archive file can be opened and the contents can be extracted.
- f. If the archive file contains the words "MISSING\_FILES", repeat step 6. If this does not resolve the issue, then check that both nodes are fully operational and resolve any issues identified before repeating the procedure.

## Resetting the battery age and restarting the chassis monitor

Reset the battery age and Restart the Chassis Monitor as necessary.

### Procedure

1. Connect a serial cable to the serial port of the node with the new battery.
2. Open a putty application and set up a serial console session.
  - a. Select the **Serial Radio** button.
  - b. Enter the COM port that your serial dongle is using.
  - c. Enter 115200 in the **Speed** box.
  - d. Click **Serial** in the Category Tree on the left.
  - e. Make sure the Speed is 115200.
  - f. Set the Data bits to 8.
  - g. Set the Stop bits to 1.
  - h. Set the Parity to None.
  - i. Set the Flow Control to None.
  - j. Click **Session** in the Category Tree on the left.
  - k. Enter SMU serial (or similar) in the **Saved Sessions** box.
  - l. Click **Save**.

3. Turn on the putty session logging.
  - a. Click **Logging** from the Category Tree on the left.
  - b. Select **Printable output** in Session logging.
  - c. Set the location for the putty output file.
  - d. In the section **What to do if the log file already exists**, select **Ask the user every time**.
  - e. Click **Session** from the Category Tree on the left, which returns you to the Session window.
  - f. Click **Save**.
4. Click **Open** to open the session to the Node console.
  - a. Login as Username: `manager` Password: `nasadmin`
5. Type the command `ipaddr` and verify that you are connected to the correct node.
6. Perform ONLY ONE of the following procedures.
  - If the node firmware is **below** 11.1.3225.02, perform the following procedure:
    - a. Type the command: `new-battery-fitted --field --confirm`
    - b. Once the prompt returns, press: **<ctrl>+d** to exit out of BALI into the Linux Layer.
    - c. Type `su` to change the login to root.
    - d. Password: `nasadmin`.
    - e. Restart the chassis monitor by issuing the command: `/etc/init.d/chassis-monitor restart`
    - f. Type `scc localhost` to return to the Bali prompt.
  - If the node firmware is **at or later than** 11.1.3225.02 then perform the following procedure:
    - a. Type the command `new-battery-fitted --field --confirm`
7. Check the Battery Status.
  - a. Type the command `batt-log-show`; the output should show that the battery is fitted and initialization has started.
  - b. If the battery is not showing fitted or initialization does not start, call the GCC to open a SR for resolution.

## Collecting a final diagnostic

Collect a final diagnostic as the last step in battery replacement.

### Procedure

1. Open a browser session to the SMU. (External: 192.0.2.1; Internal: 192.0.2.2).
2. Login as Username: `admin` Password: `nasadmin`

3. Collect Diagnostics from the cluster.
  - a. Navigate to **Home > Status and Monitoring > Download Diagnostics**
  - b. Check only the checkboxes and radio button shown below.

- c. Click **download**.
- d. Save to a location on your computer.
- e. Verify that the archive file can be opened and the contents can be extracted.
- f. If the archive file contains the words "MISSING\_FILES", repeat step 3. If this does not resolve the issue, then check that both nodes are fully operational and resolve any issues identified before repeating the procedure.
- g. Upload both the diagnostic taken in the beginning of the procedure and this diagnostic to TUF using the SR for the battery replacement.

## Replacing a hard disk

Before you replace a hard disk, determine whether the disk is truly bad.

See [Deciding on hard disk recovery or replacement on page 70](#) to make that determination.

After you replace a hard disk, synchronize the new disk with the older disks in the system.

## Deciding on hard disk recovery or replacement

A number of hard disk drive failures can occur. Some failures require disk replacement, others only require performing a recovery process. Use the process described in this section to help ensure that all partitions are recovered before proceeding with any further disk recovery or replacement procedures.

Before you consider replacing a hard disk drive, be sure you understand the following points:

- Do not attempt to replace an HDD unless you are instructed to do so by Hitachi Data Systems Support Center.
- Failed hard disks are hot-swappable, so a failed hard disk can be replaced without shutting down the server. However, there are serious risks in trying to swap a drive that is *not* failed.
- Do *not* assume that because the red LED is illuminated that a drive is faulty. Under a RAID rebuild/recovery, the red LED would be illuminated. If the drive is failed and needs replacing, you can remove it from the server.
- Do *not* replace a drive that has not actually failed. If the disk shows signs of failure, shut down the server before replacing the drive and restarting the server.
- There should be no reason to pull out a hard drive while it is in a known good configuration, and doing so can potentially lead to data corruption.
- Unless you are certain the hard disk has failed, perform a disk recovery.
- Disk redundancy is unsupported while the disk is removed from the server.

Hard disks can fail for a number of reasons, including corrupt sectors or erroneous blocks of data. Typically, the RAID controller handles these types of errors and they do not cause the server to fail.

More serious errors may cause a disk failure, causing one or both hard disks to fall out of the RAID. Should one partition of a disk fail, attempt a disk recovery. If a partition fails repeatedly, replace the hard disk. If all the partitions fall out of RAID, replace the failed drive.

## Replacing a hard disk drive

The server contains two hard disk drives (HDDs). The HDDs are field replaceable when directed by Hitachi Data Systems Support Center.

### Prerequisites

Obtain the new HDD or HDDs.

Before you replace a hard disk drive, be sure you understand the following points:

- Do not attempt to replace an HDD unless you are instructed to do so by Hitachi Data Systems Support Center.
- Failed hard disks are hot-swappable, so a failed hard disk can be replaced without shutting down the server. However, there are serious risks in trying to swap a drive that is *not* failed.
- Disk redundancy is unsupported while the disk is removed from the server.



### Caution:

- Do not remove or replace a non-failed (operational) HDD that is in a working configuration; that means that the HDD is in use. Replacing a disk while the disk is in use can cause data corruption or disk damage.

- When ejecting an HDD, be certain that you only press the release button for the one drive. If you press the wrong release button or both release buttons, the server will malfunction.
  - If, by chance, you eject both of the HDDs, it is highly likely that the system is corrupted. The best chance for data recovery is to do the following. Do *not* re-insert the drives. First, hard power down the server, and then re-insert the drives and reboot. When the system comes back online, confirm whether the NVRAM is recovered.
- 

Both HDDs are located at the front of the chassis behind the bezel. The HDDs are mounted in drive trays for ease of replacement. The trays are marked with their drive numbers, A and B. No tools are required for drive replacement.

### Procedure

1. Make sure you have the new hard disk(s) present.
2. Identify the HDD to be replaced. Using Web Manager GUI, confirm which HDD is to be replaced.

The LED of the drive that requires replacement is red. If both drive LEDs are red, see the SMU messages for guidance.

3. From the node's CLI, issue the command `chassis-drive-clean-configuration --disable --drive drive_letter`

Where *drive\_letter* is A or B, the letter of the drive you are replacing.

For example, `chassis-drive-clean-configuration --disable --drive A`

This command removes the drive from the RAID group, so you can continue with the rest of the steps

4. Remove the HDD:
    - a. Double-check that you are looking at the intended drive to be removed.
    - b. Carefully press the button on the right side of the front of the disk tray to release the retention latch handle.
- 



**Caution:** Make sure that you only press the release button for that one drive.

---

- c. Pull the retention latch handle outward to disengage the disk from the server.
  - d. Slide the disk tray out of the chassis.
5. Insert the replacement HDD:
    - a. Slide the replacement disk into the chassis until the retention latch handle starts to close.





3. Once you have successfully logged in, select the server or node that has the disks you want to synchronize.
4. Run the `chassis-drive-status` command, and look at the values in the **Status** and **% Rebuild** columns for each device.
  - The values in the **Status** column should be "Invalid."
  - The **% Rebuild** column should not display any values.
5. Run the script `/opt/raid-monitor/bin/recover-replaced-disk.sh`. This script partitions the replacement disk appropriately, updates the server's internal RAID configuration, and initiates rebuilding the replaced disk.

The RAID system rebuilds the disk as a background operation, which takes approximately 50 minutes to complete. Events are logged as the RAID partitions rebuild and become fully fault tolerant.
6. Monitor the rebuilding process by running the `chassis-drive-status` command, and check the values in the **Status** column for each device. The values in the **Status** column should be:
  - "Good" for synchronized volumes.
  - "Rebuilding" for the volume currently being synchronized.
  - "Degraded" for any volume(s) that have not yet started the synchronization process.
7. Once the rebuild process has successfully completed, run the trouble `chassis-drive` command.


If the command response displays issues, resolve them if possible, or contact technical support for assistance.

If the command response displays "No faults found," continue the disk replacement process by replacing the second hard disk.
8. Shut down the server.

## Replacing a power supply unit


You can replace a power supply unit (PSU) as a hot-swappable server component. The server can operate on a single PSU if necessary, making it possible to replace a failed PSU without shutting down the server. If a PSU fails, it should be replaced as quickly as possible, because operating on a single PSU means that there is no redundancy in that area, increasing the risk of an interruption in service to clients.

LED indicators on each PSU indicate the PSU status.

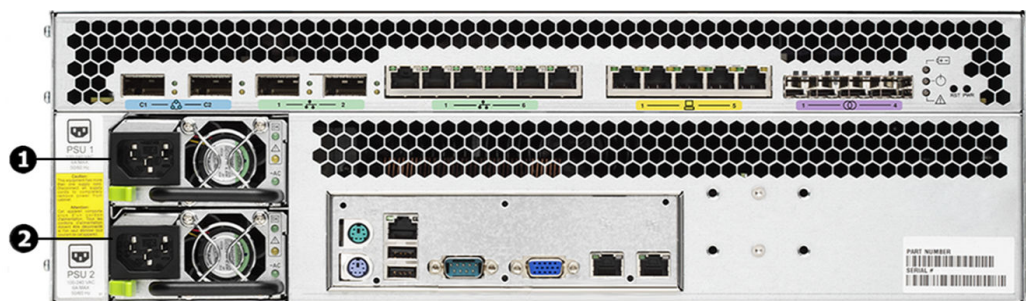

**Figure 6-6 PSU locations on HNAS 3080 and 3090 rear panel**

Item	Description
1	PSU 1
2	PSU 2

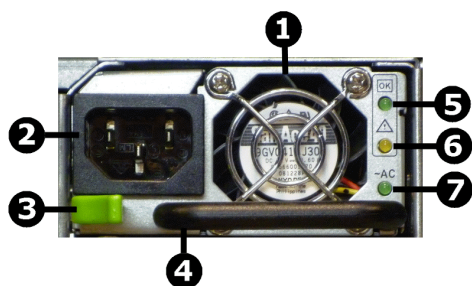

**Figure 6-7 PSU components**

Item	Description
1	PSU fan
2	Power plug
3	Retaining latch
4	Handle
5	DC power LED
6	Malfunction or failure LED
7	AC power LED

### Procedure

1. Remove the power cord from the PSU.
2. Move the retaining latch to the right (you may hear a slight click if the PSU moves when the latch disengages).

3. Using the handle on the PSU, pull the PSU out from the back of the server until you can completely remove the PSU from the chassis.
4. Insert the replacement PSU. The retention latch should click into position all the way to the left when the PSU is fully inserted.  
If the PSU that is not being replaced is receiving mains power when the replacement PSU is fitted, the fan on the replacement PSU becomes active.
5. Connect the power cord to the back of the PSU.  
The PSU should start as soon as the power connection is made. If the PSU does not start immediately, make sure the mains power circuit is live and that the other end of the power cable is connected to a live outlet.

## Replacing an FPGA board as a FRU

Typically, when an FPGA board fails, the whole Hitachi NAS Platform server is replaced. However, in some cases with the HNAS 3080 and 3090 platform models, an FPGA board may be replaced as a field replaceable unit (FRU).

An FPGA board is also known as the main FPGA board (MFB).

Contact Hitachi Data Systems Support Center to determine whether your FPGA can be replaced as a FRU.



**Note:** If you receive a replacement FRU, in some instances, a complete server FRU may be received, instead of just the FPGA FRU.


---

## Requirements for Replacing FPGA board

MFB replacement may not be performed while the server is operation; the server must be shut down and removed from the rack before the replacement procedure can be started. After the MFB has been replaced, the server can be put back into the rack, reattached, and restarted.

### Tools and Requirements

- #1 Phillips screwdriver.
- Replacement MFB.
- ESD wrist strap.

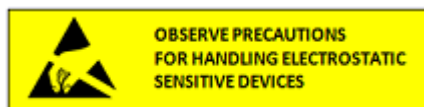

## Replacing the FPGA board

MFB replacement may not be performed while the server is operation; the server must be shut down and removed from the rack before the

replacement procedure can be started. After the MFB has been replaced, the server can be put back into the rack, reattached, and restarted.

### Procedure

1. Using Web Manager, log in and select **Reboot/Shutdown** from the **Server Settings** page to display the **Restart, Reboot and Shutdown** page. Note that the page has different options depending on the configuration of your system.
2. Click **Shutdown** to stop file serving EVSs on the server, and then shut down and power off the server.
3. Remove the fascia. See [Bezel removal on page 62](#).
4. Disconnect all power and networking cables from the server.
5. Completely remove the server from the rack.

Use caution when removing the server as the current rails do not have "stops." Two people should be available to unmount and move the unit.

6. Place the server on a level work surface such as a table or cart.
7. Using the #1 Phillips screwdriver, remove and set aside the two (2) MFB retaining screws.




8. Without lifting the MFB, slide the MFB towards the rear of the server, as shown in the next illustration.



The MFB should slide approximately 2 to 2.5 inches (5 to 7 centimeters), creating a gap between the MFB and the top front of the chassis.

Looking into the gap, you will see six (6) cables connecting the MFB to the rest of the server. A cable tie is used to secure each cable.

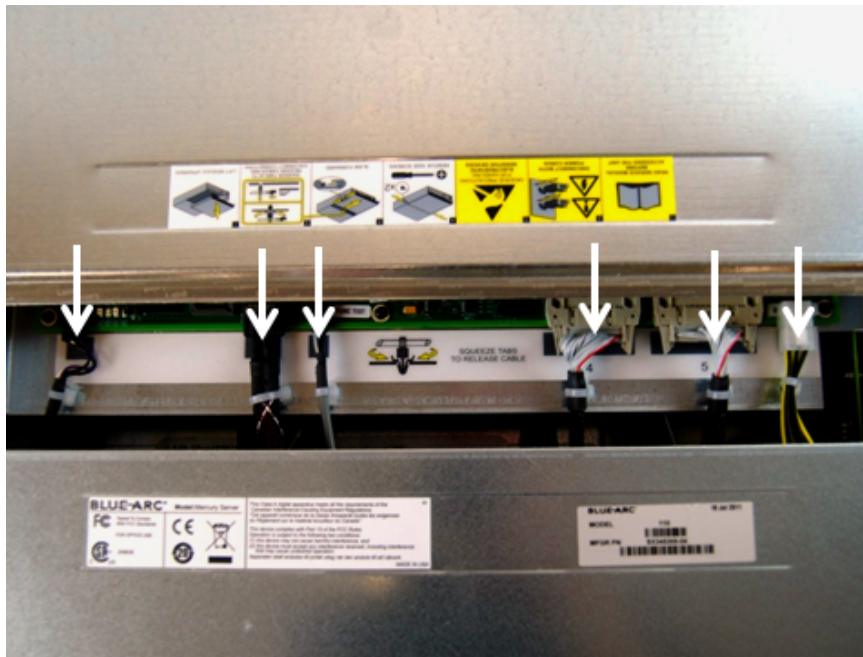

9. Disengage the cable ties from the shell of the MFB by squeezing the tabs at the base of the cable ties.



10. Once all cable ties have been disconnected, disconnect the cable connectors from the mating MFB connectors by pressing the connector retainer tabs.
11. Once all internal cables have been disconnected, remove the MFB. Turn it upside down and place it on a flat work surface.
12. Open the box that contains the replacement MFB module. Remove the module and orient it so that the module cover labels face down. This will protect the sheet metal tabs on the bottom side of the module (see next illustration).



- 13.** Place the labeled cover down on a flat work surface and remove the module from the ESD shielding bag.



- 14.** MFBs may be shipped with a metal shim under the retaining clip. Remove the metal shim before proceeding to the next step.
- 15.** Replacement modules may ship with a metal shim under the sheet metal retainer tabs. If so, remove the tape and slide the shim out from under the tabs.
- 16.** Lift the module from the work surface, turn it over so the labels face up, and place it into the server chassis. Slide it fully to the rear to expose mating cables.
- 17.** Connect the cables, ensuring that each is securely fastened.
- 18.** Engage the cable ties.
- 19.** Push the MFB module forward until the front lip slides under the front half of the server cover. Apply adequate pressure to force the woven EMI gasket under the front cover and to align the MFB front retainer holes with the mating threads on the base server sheet metal
- 20.** Secure the MFB to the chassis base using the screws that were previously removed. Carefully secure the screws using the #1 Phillips driver. Avoid over-tightening the fasteners.
- 21.** Replace the server in the rack, and reconnect the network and power cables. Refer to the *System Installation Guide* for more information about racking and cabling the server.
- 22.** Transfer the SFPs and XFPs from the old MFB to the replacement MFB.
- 23.** After the replacement, you can power up the server and check the dblog for the message:

```
MMB1 Warning: Hardware MFB1 has been replaced (B1004002 ->
B0916023)
```



- 24.** Place the replaced module in the shielding bag and insert it in the original packaging for return to the supplier.

## Rebooting, shutting down, and powering off

This section provides instructions on how to reboot, shut down, and power off a server or cluster.

See the *System Installation Guide* for details about server software licenses.

- ☐ [Rebooting or shutting down a server](#)
- ☐ [Rebooting or shutting down a cluster](#)
- ☐ [Restarting an unresponsive server](#)
- ☐ [Powering down the server for maintenance](#)
- ☐ [Powering down the server for shipment or storage](#)
- ☐ [Powering on the server or cluster](#)
- ☐ [Recovering from power standby](#)

## Rebooting or shutting down a server

The server can be shutdown or reset if a manual reboot is necessary.

### Procedure

1. Using Web Manager, log in and select **Reboot/Shutdown** from the **Server Settings** page to display the Restart, Reboot and Shutdown page. Note that the page has different options depending on the configuration of your system.

Server Settings [Home](#) > [Server Settings](#) > Restart, Reboot or Shut Down Server

### Restart, Reboot or Shut Down Server

**Restart File Serving**

Restart

**Stop File Serving**

Stop

**Reboot**

Reboot

**Shut Down**

Shut down

2. Click the button for the action you want to perform as described next:
  - ☐ Configuring cipher suites
  - ☐ Configuring the SSL/TLS version
  - ☐ Obtaining and importing a CA-signed certificate


Click **restart** to restart all file serving EVSs on the server.

  - Click **stop** to stop file all serving EVSs on the server.
  - Click **Reboot** to stop file serving EVSs on the server, and then reboot the entire server. Note that rebooting may take up to five minutes.
  - Click **Shutdown** to stop file serving EVSs on the server, and then shut down and power off the server.

# Rebooting or shutting down a cluster



## Procedure

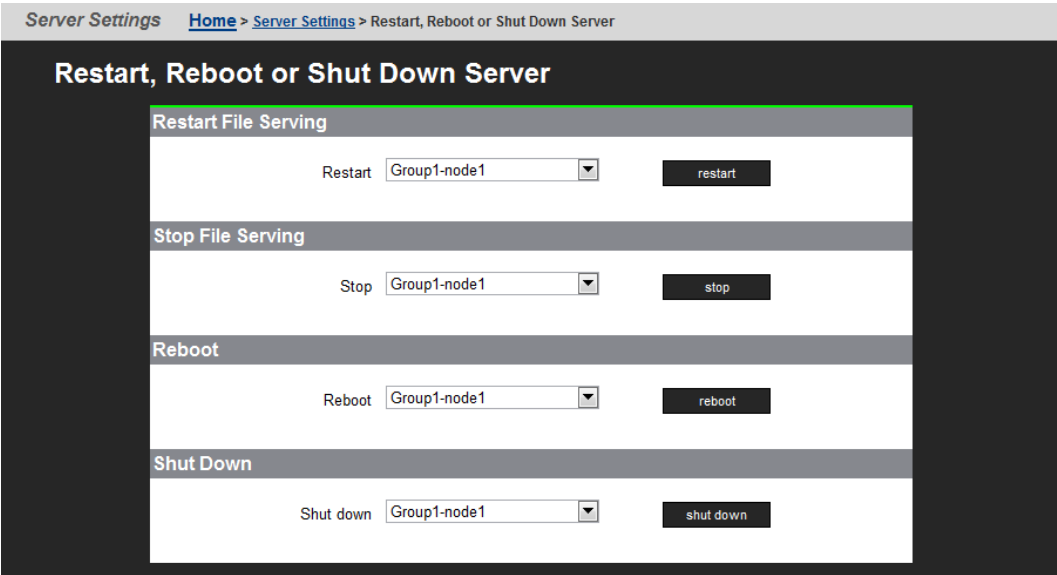1. Using Web Manager, log in and select **Reboot/Shutdown** from the **Server Settings** page to display the Restart, Reboot and Shutdown page. Note that the page has different options depending on the configuration of your system.



2. Click the button for the action you want to perform as described next:

Option	Action
Restarting File Serving	<ul style="list-style-type: none"><li>• To restart all file serving EVSs on a single node, select the <b>Restart on node</b> option, use the drop-down list to select a node, and then click <b>restart</b>.</li><li>• To restart all file serving EVSs on all cluster nodes, select the <b>Restart on all nodes</b> option and then click <b>restart</b>.</li></ul>
Stop File Serving	<ul style="list-style-type: none"><li>• To stop all file serving EVSs on a single node, select the <b>Stop file serving on node</b> option, use the drop-down list to select a node and then click <b>stop</b>.</li><li>• To stop all file serving EVSs on all cluster nodes, select the <b>Stop file serving on all nodes</b> option and then click <b>stop</b>.</li></ul>
Reboot	<ul style="list-style-type: none"><li>• To reboot a single node, select the <b>Reboot node</b> option, use the drop-down list to select a node, and then click <b>reboot</b></li><li>• To reboot all cluster nodes, select the <b>Reboot all nodes</b> option and then click <b>reboot</b>.</li></ul>

Option	Action
	 <b>Note:</b> Clicking Reboot stops all file serving EVSs on the selected node or all cluster nodes, then reboots the node/nodes. Rebooting may take up to five minutes.
Shutdown	<ul style="list-style-type: none"> <li>To shut down a single node, select the <b>Shutdown node</b> option, use the drop-down list to select a node, and then click <b>shutdown</b></li> <li>To shut down all cluster nodes, select the <b>Shutdown all nodes</b> option, and then click <b>shutdown</b>.</li> </ul>  <b>Note:</b> Clicking <b>Shutdown</b> stops all file serving EVSs on the selected node or the cluster, then shuts down and powers off the selected node or all nodes in the cluster. The PSU is still powered on and the node is not ready for shipment.

## Restarting an unresponsive server

Perform this process to restart an unresponsive server from the server operating system (OS) console. You generate a diagnostic log that can help you better understand the problems. You can gain access either by using SSH software to connect to the server's CLI or connecting to the server serial port.

### Procedure

1. Connect to the SMU using the ssh software.
2. From the siconsole, select the server.
  - If the system fails to respond, go to step 3.
  - If the system takes you to the server OS console, issue the command: **bt active**, so you can view the display.
  - If you are still at the siconsole, select **q**, press **Return**, and then perform the following steps:
    1. Connect directly to the MMB as manager using ssh.
    2. If the connection succeeds, you are taken to the server OS console, where you issue the command: **bt active**
    3. If the connection fails, continue to step 4.
3. Connect to the system with a serial null modem cable, and perform the following steps:

See [Serial port on page 56](#) if you need details.

  1. Login as manager or you will get the Linux prompt, not the server OS.  
If you use root, use **ssc localhost**.
  2. Issue the command: **bt active**

4. If you are still unable to get to the server OS, perform the following steps:
  1. Check to make sure that the Bali CLI is booting successfully.
  2. Log in through the serial cable connection.
  3. Tail `/var/opt/mercury-main/logs/dblog`
  4. Search the log for the entry `MFB.ini not found run nas-preconfig`.
    - If the entry is present, the system has been unconfigured by either running the `unconfig` script or removing the node from a cluster.
    - If the entry is not present, monitor the `dblog` during the boot cycle to see where it fails.



**Warning:** If the server is still unresponsive, do not pull the plug. Instead, see the next step. The reboot time varies from system to system. The reboot can take up to 20 minutes, because a dump is compiled during the reset process.

---

5. Check the green LED on the front panel of the server for the server status.

**Table 7-1 Server status - model HNAS 3080 and 3090**

Server status LED	Meaning
Amber	Critical failure and server is not operational.
Slow green flash (every three seconds)	System has been shut down and you can remove the power.
Medium green flash (every .8 seconds)	Server needs attention, and a non-critical failure has been detected. For example, a fan or power supply has failed.
Off	Normal operation.

6. If the green LED is flashing 5 times per second, plug in the serial cable.
  - If the terminal screen is generating output, let the process complete.
  - If the terminal screen is blank, press the Reset button.



**Note:** Pulling the power cord from the server is *not* recommended. Do not pull the power cord unless it is absolutely necessary. First, complete the steps above.

---

## Powering down the server for maintenance

This procedure should be followed whenever a server is to be powered down and will be left off for less than a day. If, however, the system is being rebooted, this procedure is not necessary.

### Procedure

1. Shut down the server(s) as described in [Rebooting or shutting down a server on page 83](#).
2. If your system is configured with an external System Management Unit (SMU), depress the red button located on the right of the unit to turn it off (an internal SMU is turned off when the server shuts down).
3. Power off the storage subsystems, beginning with the enclosures that house the RAID controllers.
4. Power off the expansion enclosures for the storage subsystems.

## Powering down the server for shipment or storage

Follow this procedure whenever a server is to be powered down and will be left off for more than a day. If the system is being restarted or power-cycled, this procedure is not required.

When the system is properly shut down, depending on the battery charge level, the battery may last up to one year without being charged or conditioned . See [NVRAM backup battery pack on page 42](#) for details.

Contact your representative for special instructions if servers or NVRAM battery backup packs will be in storage for more than one year. Special provisions are required for field or factory recharging and retesting of NVRAM battery backup packs.

### Procedure

1. From the NAS operating system (Bali) console, issue the command:  
`shutdown --ship --powerdown`
2. Wait until the console displays the message **Information: Server has shut down** and the rear panel LEDs turn off.



**Note:** The PSUs continue to run, and the PSU LEDs stay on.

---

3. Power down the server by removing the power cables from the PSU modules.
4. Wait 10-15 seconds, then check that the NVRAM Status LED on the rear panel of the server is off.

- If the NVRAM status LED is off, the battery backup pack no longer powers the NVRAM, so that the battery does not drain.



**Note:** Use this state for server storage or shipment.

---

- If the NVRAM status LED is on (either on steady or flashing), press and hold the reset button for five seconds until the NVRAM Status LED begins to flash rapidly. Release the reset button to disable the battery. The NVRAM Status LED goes out.



**Note:** The NVRAM contents are lost. The battery is re-enabled when power is restored to the server.

---

## Powering on the server or cluster

To start/power on a server or cluster:

### Procedure

1. Verify that all servers are switched off.
2. Start **all** storage subsystems, beginning with the expansion enclosures.

Wait until the disk LEDs on all of the expansion enclosures have stopped blinking (which indicates that they are spinning up) or two minutes, whichever comes first, then start the storage subsystem RAID controller enclosures. Note that the disk drives in some storage enclosures will not spin up until commanded to do so by the RAID controller, so the LEDs may continue to blink until after the RAID controller enclosure has sent those commands and the drives have spun up.

3. For a cluster configuration, or when using an external System Management Unit (SMU), start the SMU by depressing the red button located on the right of the unit.  
Wait one minute to allow the external SMU to start.
4. Power up the server or the first node in the cluster:
  - a. If the power cables are not connected to the PSU, plug in the power cables.
  - b. If, after 10 seconds, the PSU LEDs are lit but the Power Status LED on the rear panel is not lit, press the PWR button on the MFB to restore the power to the system boards. Report this as a problem to the Hitachi Data Systems Support Center.
  - c. If the power cables are connected to the PSU, press the PWR (power) button on the rear of the server.
5. If you are starting a cluster, wait 5-10 seconds before powering on the next node in the cluster.



## Recovering from power standby

When the server is in a power standby state, the power supplies are powered and the PSU LEDs are lit, but the Power Status LED on the rear panel is not lit.

The server will enter a standby power state due to any the following:

- The `shutdown --ship --powerdown` command has been issued.
- The PWR button was pressed when the server is running.
- The server has shut down automatically due to an over temperature condition.

You can restore the server to its normal power state by either of the following methods:

- Pressing the PWR button.
- Remove the power cables from both PSUs, wait for 10 seconds, then reconnect the cables to the PSUs.

## Server replacement procedures

The replacement of the server as part of a field service process can take several forms depending on how the system was originally deployed. The typical field deployment scenarios documented for service replacement include:

- Single stand-alone server using an embedded SMU for management
- Single stand-alone server using an external SMU for management
- Two-node cluster using an external SMU for management-replacing only one node
- Two-node cluster using an external SMU for management-replacing both nodes



**Important:** This document does not treat migration scenarios between different configurations at the time of replacement.

---

- ☐ [Replacement procedure overview](#)
- ☐ [Replacing a single server with an embedded SMU](#)
- ☐ [Replacing a single server with an external SMU](#)
- ☐ [Replacing a node within a cluster](#)
- ☐ [Replacing all servers within a cluster](#)

## Replacement procedure overview

This section highlights the requirements and considerations when replacing nodes.

### Requirements

*Any personnel attempting the following procedures must have completed the necessary training before proceeding. Much of the process required for a server replacement is the same process covered in installation and configuration training. No personnel should attempt to replace a unit without adequate training and authorization.*

Determine which replacement scenario is being encountered in advance. The replacement process is different for each scenario.

Acquire the temporary license keys before arriving onsite to expedite the server replacement. The license keys are necessary because they are based on the unique MAC ID for the server or cluster. New license keys are not required when replacing one server in a cluster.



**Note:** Replacement servers are shipped without an embedded system management unit (SMU), so you must have a SMU installed before you can connect to a standalone server.

---

You can use a KVM (keyboard, video, and mouse) device or a serial cable to connect to the serial port. Bring both devices with you just in case both are needed when the unit arrives. If you connect to the serial port, use the following SSH client settings:

- 115,200 b/s
- 8 data bits
- 1 stop bit
- No parity
- No flow control
- VT100 emulation

### Swapping components

The server can be replaced onsite. However, some components are not included in the replacement server that you receive. You must remove those components from the original server and use them in the replacement server. There are a minimum of four parts to be reused in the replacement server.

The components that can be swapped include:

- Battery
- Bezel
- Rack mounting guides

**Note:**

- New power supplies are shipped installed in the server, and do not need to be swapped.
- 

## Model selection

The software for all server models is pre-loaded on the replacement server before it is shipped from either the factory or depot location.

If for any reason the model selection does not match that which is required for replacement, then an upgrade process may be required in the field.

The upgrade process is outside the scope of this document and documented separately. Contact Hitachi Data Systems Support Center for upgrade information.

## MAC ID and license keys

The replacement server will have a new MAC ID. The new ID forces the need for new license keys regardless whether it is a single node or complete cluster replacement.

As part of a field replacement process, Hitachi Data Systems recommends that temporary keys be obtained to enable quick delivery and implementation. However, any temporary keys used must eventually be replaced with a permanent key. This is required for all field scenarios, except when replacing a single node in a cluster.



**Note:** If the scenario is a single node or all cluster node replacement, use the `span-allow-access` command to attach the storage when the MAC ID changes.

---

## Previous backups

A system backup preserves two critical components of information:

- SMU configuration
- Server configuration

The backup form for an embedded SMU is different than one from an external SMU. Depending on the replacement scenario severity, different limitations might exist for the system recovery.



**Important:** It is assumed that customers are frequently establishing backups somewhere safely off the platform for recovery purposes. If there is no backup, and the system to be replaced is nonfunctional, then a manual recovery process is required to reestablish a functional system. The duration of this manual recovery is directly related to the complexity of the original configuration. All data and file systems are preserved independent of a backup.

---

## Upgrades

Replacement servers can be down or above a revision, and not at the expected level of firmware required at the customer site. An upgrade is typically required during the replacement process, which is not covered in this document. It is assumed that all services personnel performing a replacement have already been trained, and know where to get this information within their respective organization.

## Replacing a single server with an embedded SMU

If a single server with an embedded SMU is non-functioning, and does not have a recent backup saved off platform, then a challenging and manual recovery process is necessary. If this circumstance is encountered, call the support organization for a copy of the system's latest diagnostics files. If available, these files can be used as a guide in reestablishing the system manually. The data and file systems will remain intact independent of the replacement and without a backup.



**Note:** Replacement servers are shipped without an embedded system management unit (SMU), so you must have a SMU installed before you can connect to a standalone server.

---



**Important:** Set expectations up front with the customer that this will delay time to recovery, and that some aspects of the systems configuration might never be recovered.


---

## Obtaining backups, diagnostics, firmware levels, and license keys

On the old server:

## Procedure


1. If the server is online, using Web Manager (SMU GUI), navigate to **Home > Server Settings > Configuration Backup & Restore**, click **backup**, and then select a location to save the backup file.

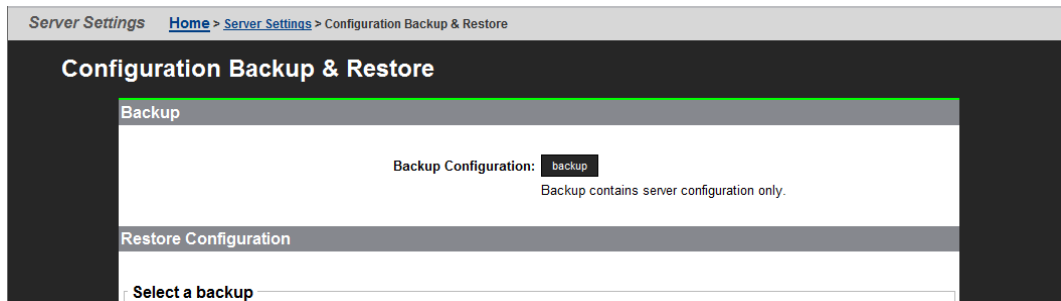

Ensure you save the backup file to a safe location off platform so that you can access it after the storage system is offline.

The backup process performed by the embedded SMU will automatically capture both the SMU and server configuration files in one complete set.

2. Navigate to **Home > Status & Monitoring > Diagnostics download** to download the diagnostic test results.

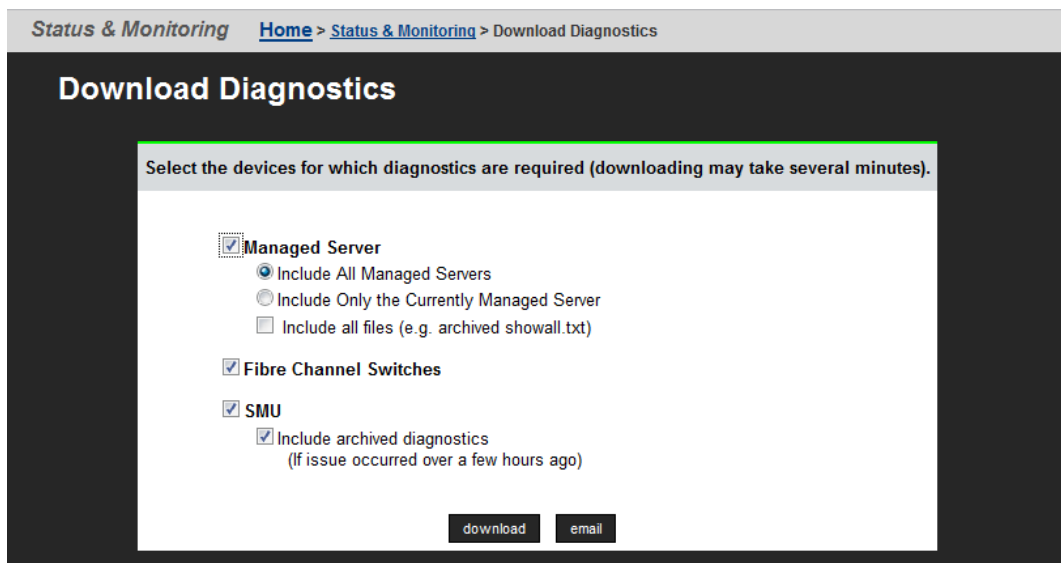

3. Navigate to **Home > SMU Administration > Upgrade SMU** to verify SMU type and firmware release level.  
Both the server and SMU firmware versions must match those on the failed server; otherwise, the server cannot properly restore from the backup file. See the release notes and the *System Installation Guide* for release-specific requirements.

4. Navigate to **Home > Server Settings > Firmware Package Management** to verify the existing server (SU) firmware release level.

Server Settings [Home > Server Settings > Firmware Package Management](#)

### Firmware Package Management

Filter ☐ Include System Patch Packages

#### Node View

Cluster Node ID (Name)	Status	Current Package	Default Package	Free Space	
1 (Group1-node1)	Online	12.1.3600.00	12.1.3600.00	293.77 GB (97 %)	<a href="#">details</a>
2 (Group1-node2)	Online	12.1.3600.00	12.1.3600.00	297.36 GB (97 %)	<a href="#">details</a>

Actions: [restart cluster file serving](#) [restart file serving on node](#) | [upload package](#)

#### Package View

Package	Present On Cluster Nodes	Install Status
<a href="#">nas-11.3.3434.01.tar</a>	1, 2	<span style="color: green;">●</span> OK
<a href="#">nas-11.2.3319.06.tar</a>	1, 2	<span style="color: green;">●</span> OK
<a href="#">nas-11.2.3319.09.tar</a>	1, 2	<span style="color: green;">●</span> OK
<a href="#">nas-11.1.3225.00.tar</a>	1, 2	<span style="color: green;">●</span> OK
<a href="#">nas-12.1.3600.00.tar</a>	1, 2	<span style="color: green;">●</span> OK
<a href="#">nas-12.0.3525.00.tar</a>	1, 2	<span style="color: green;">●</span> OK
<a href="#">nas-12.0.3528.01.tar</a>	1, 2	<span style="color: green;">●</span> OK

Actions: [delete](#) [set as default on all nodes](#)

5. Navigate to **Home > Server Settings > License Keys** to check the license keys to ensure you have the correct set of new license keys.

## Shutting down the server you are replacing

On the server that you are replacing:

### Procedure

1. From the server console, issue the command: **shutdown --ship --powerdown**


Wait until the console displays `Information: Server has shut down`, and the rear panel LEDs turn off. The PSU and server fans continue to run until you remove the power cables from the PSU module. See the appropriate system component section for more information.






**Note:** This specific **powerdown** command prepares the system for both shipping, and potential long-term, post-replacement storage.

2. Unplug the power cords from the power supplies.
3. Wait approximately 15 seconds, and then confirm the NVRAM status LED is off.  
If the LED is flashing or fixed, press and hold the **reset** button for five seconds until the LED starts flashing. The battery disables when you release the **reset** button.

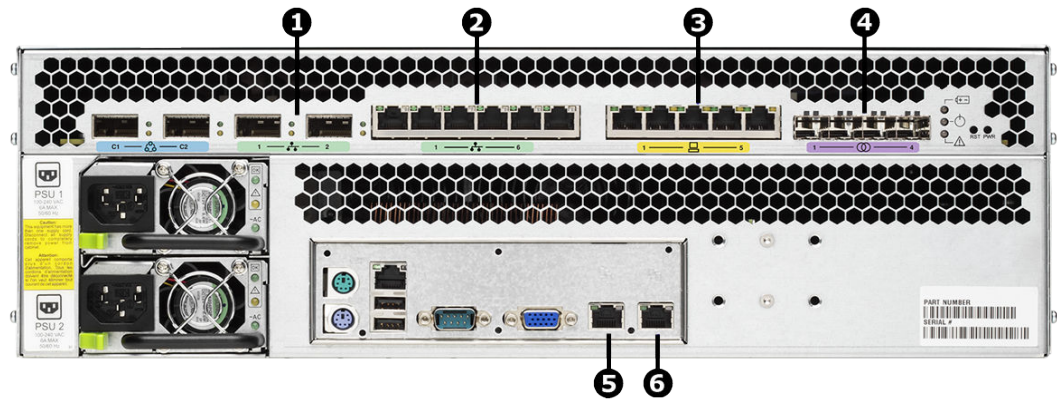


4. Use the following rear panel figure and table to identify and label the cabling placement on the existing server.



**Figure A-1 Rear view of server - models 3080 and 3090**

Item	Labels	Ports	Connections
1		1	Customer data network
		2	Customer data network
2		1	Gigabit Ethernet network port
		2	Gigabit Ethernet network port
		3	Gigabit Ethernet network port
		4	Gigabit Ethernet network port
		5	Gigabit Ethernet network port
		6	Gigabit Ethernet network port
3		1	10/100 Private management network Ethernet port
		2	10/100 Private management network Ethernet port
		3	10/100 Private management network Ethernet port
		4	10/100 Private management network Ethernet port
		5	10/100 Private management network Ethernet port
4		1	Storage or FC switch



Item	Labels	Ports	Connections
		2	Storage or FC switch
		3	Storage or FC switch
		4	Storage or FC switch
5		0	Customer facing management network
6		1	Private management network

5. If cables are not labeled, label them before removing them from the server.
6. Remove all cables from the server, and remove the server from the rack.
7. Remove the rail mounts from the old server, and install them on the new server.
8. Remove the battery from the old server, and install it in the new server.
9. Remove the bezel from the old server, and install it on the new server.
10. Insert the new server into the rack, and connect the power cords to the power supplies.



**Note:** Do not make any other cable connections at this time.

## Configuring the replacement server

### Prerequisites

Obtain the necessary IP addresses to be used for the replacement server. Servers shipped from the factory have not yet had the nas-preconfig script run on them, so a replacement server will not have any IP addresses pre-configured for your use. You need IP addresses for the following:

- 192.0.2.200/24 eth1 (cluster IP)
- 192.0.2.2/24 eth1 (testhost private IP)
- 192.168.4.120/24 eth0 (testhost external IP, which might vary)

When you run the nas-preconfig script, it reconfigures the server to the previous settings. This step allows the SMU to recognize the server as the same and allows it to be managed. Reconfigured settings:

- IP addresses for Ethernet ports 0 and 1
- Gateway
- Domain name
- Host name

On the replacement server:

### Procedure

1. Log in to the server.
2. Run the nas-preconfig script.
3. Reboot if you are instructed to by the script.
4. Log in to the SMU using one of the IP addresses you obtained.
5. Use a KVM (keyboard, video, and mouse) or a serial cable to connect to the serial port on the server.


Alternatively, you can connect by way of SSH using the following settings:

- 115,200 b/s
  - 8 data bits
  - 1 stop bit
  - No parity
  - No flow control
  - VT100 emulation
6. Log in as `root` (default password: `nasadmin`), and enter `ssc localhost` to access the BALI level command prompt.
  7. Enter `evs list` to obtain the IP configuration for the server.
  8. Using a supported browser, launch the Web Manager (SMU GUI) using either of the IP addresses acquired from the EVS list output.
  9. Click **Yes**, and log in as `admin` (default password: `nasadmin`).
  10. Verify and, if necessary, convert the new server to the model profile required.

This step requires a separate process, training, and license keys. Contact Hitachi Data Systems Support Center if the incorrect model arrives for replacement.

11. Navigate to **Home > SMU Administration > Upgrade SMU** to verify and, if necessary, upgrade the embedded SMU to the latest SMU release.
12. Navigate to **Home > Server Settings > Firmware Package Management** to verify and, if necessary, upgrade the new server to the latest SU release.

13. Navigate to **Home > Server Settings > Configuration Backup & Restore**, select the desired backup file, and click **restore** to restore the system from that backup file.

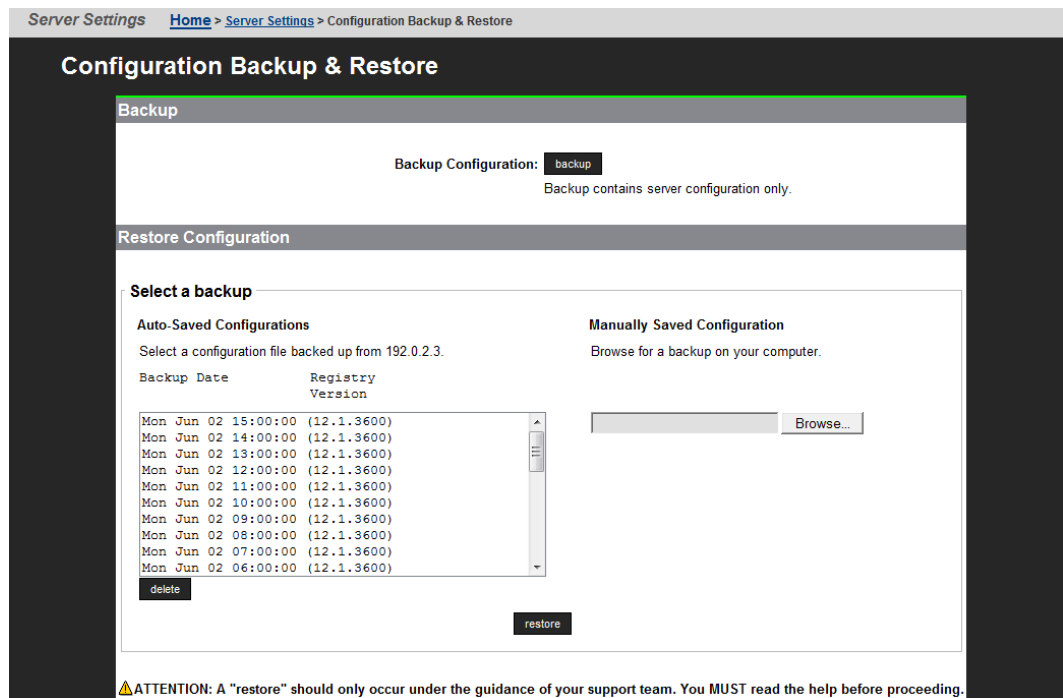

Server Settings [Home > Server Settings > Configuration Backup & Restore](#)

### Configuration Backup & Restore

**Backup**

Backup Configuration: **backup**  
Backup contains server configuration only.

**Restore Configuration**

**Select a backup**

**Auto-Saved Configurations**

Select a configuration file backed up from 192.0.2.3.

Backup Date	Registry Version
Mon Jun 02 15:00:00	(12.1.3600)
Mon Jun 02 14:00:00	(12.1.3600)
Mon Jun 02 13:00:00	(12.1.3600)
Mon Jun 02 12:00:00	(12.1.3600)
Mon Jun 02 11:00:00	(12.1.3600)
Mon Jun 02 10:00:00	(12.1.3600)
Mon Jun 02 09:00:00	(12.1.3600)
Mon Jun 02 08:00:00	(12.1.3600)
Mon Jun 02 07:00:00	(12.1.3600)
Mon Jun 02 06:00:00	(12.1.3600)

delete

**Manually Saved Configuration**

Browse for a backup on your computer.

restore

**ATTENTION:** A "restore" should only occur under the guidance of your support team. You MUST read the help before proceeding.

14. Reboot the server.
15. Reconnect the data cables to the server.

## Finalizing and verifying the replacement server configuration

The Fibre Channel (FC) link speed varies according to the server model. Use the appropriate speed for your model.

Model	Fibre Channel link speed
HNAS 3080 and 3090	4 Gbps

On the replacement server:



**Note:** The following steps show the FC link speed as 8 Gbps as an example.

### Procedure

1. Navigate to **Home > Server Settings > License Keys** to load the license keys.
2. Remove the previous license keys in the backup file, and add the new keys.

3. Use **fc-link-speed** to verify and, if necessary, configure the FC port speed as required.; for example:

- a. Enter **fc-link-speed** to display the current settings.

```
host:$ fc-link-speed
FC 1:      4 Gbps
FC 2:      4 Gbps
FC 3:      4 Gbps
FC 4:      4 Gbps
```

- b. Enter **fc-link-speed -i port\_number -s speed** for each port.

```
host:$ fc-link-speed -i 1 -s 4
Set interface 1 link speed OK
FC 1:      4 Gbps
host:$ fc-link-speed -i 2 -s 4
Set interface 2 link speed OK
FC 2:      4 Gbps
host:$ fc-link-speed -i 3 -s 4
Set interface 3 link speed OK
FC 3:      4 Gbps
host:$ fc-link-speed -i 4 -s 4
Set interface 4 link speed OK
FC 4:      4 Gbps
```

- c. Enter **fc-link-speed** to verify the settings.

```
host:$ fc-link-speed
FC 1:      4 Gbps
FC 2:      4 Gbps
FC 3:      4 Gbps
FC 4:      4 Gbps
```

4. Use the **fc-link-type** command to configure the server in fabric (N) or loop (NL) mode.
5. Modify zoning and switches with the new WWPN, if you are using WWN-based zoning.  
If you are using port-based zoning, the no modifications are necessary for the switches configurations.
6. Open Storage Navigator and reconfigure LUN mapping and host group on the storage system that is dedicated to the server with the new WWPNs. Perform this step for every affected server port.
7. If the server does not recognize the system drives, enter **fc-link-reset** to reset the fiber paths.
8. Enter **sdpath** to display the path to the devices (system drives) and which hport and storage port are used.
9. Enter **sd-list** to verify the system drives statuses as OK and access is allowed.
10. Enter **span-list** to verify the storage pools (spans) are accessible.



**Note:** In this instance, *cluster* is synonymous with the standalone server.

---

11. Enter **span-list-cluster-uuids span\_label** to display the cluster serial number (UUID) to which the storage pool belongs.

The UUID is written into the storage pool's configuration on disk (COD). The COD is a data structure stored in every SD, which provides information how the different SDs are combined into different stripesets and storage pools.

12. Enter **span-assign-to-cluster** *span\_label* to assign all the spans to the new server.
13. Verify the IP routes, and enable all the EVs for file services in case they are disabled.
14. Reconfigure any required tape backup application security.
15. Navigate to **Home > Status & Monitoring > Event Logs**, and click **Clear Event Logs**.
16. Navigate to **Home > Status & Monitoring > System Monitor** and verify the server status:
  - If the server is operating normally, and is not displaying any alarm conditions, run a backup to capture the revised configuration, and then download another diagnostic to support. Permanent license keys for the replacement server are normally provided within 7 days.
  - If the server is not operating normally for any reason, contact support for assistance.
17. Confirm all final settings, IP addresses, customer contact information, service restarts, client access, and that customer expectations are all in place. Features such as replication and data migration should all be confirmed as working, and all file systems and storage pools should be online.

## Replacing a single server with an external SMU

Note that if it is a single server with an external SMU that is nonfunctioning, and does not have a recent backup saved off platform, then a challenging and manual recovery process is necessary. If this circumstance is encountered, call the support organization for a copy of the system's latest diagnostics files, if available, to be used as a guide in reestablishing the system manually. The data and file systems will remain intact independent of the replacement and without a backup.



**Note:** Replacement servers are shipped without an embedded system management unit (SMU), so you must have a SMU installed before you can connect to a standalone server.

---



**Important:** Set expectations up front with the customer that this will delay time to recovery, and that some aspects of the systems configuration might never be recovered.


---

## Obtaining backups, diagnostics, firmware levels, and license keys

On the old server:

## Procedure


1. If the server is online, using Web Manager (SMU GUI), navigate to **Home > Server Settings > Configuration Backup & Restore**, click **backup**, and then select a location to save the backup file.

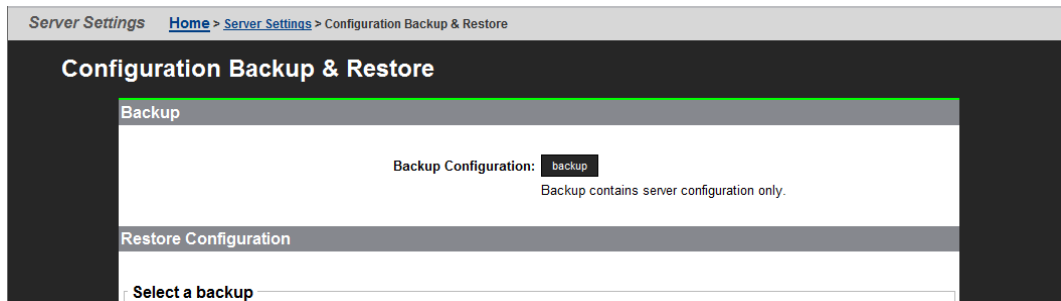

Ensure you save the backup file to a safe location off platform so that you can access it after the storage system is offline.

The backup process performed by the embedded SMU will automatically capture both the SMU and server configuration files in one complete set.

2. Navigate to **Home > Status & Monitoring > Diagnostics download** to download the diagnostic test results.
3. Navigate to **Home > Server Settings > Firmware Package Management** to verify the existing server (SU) firmware release level.

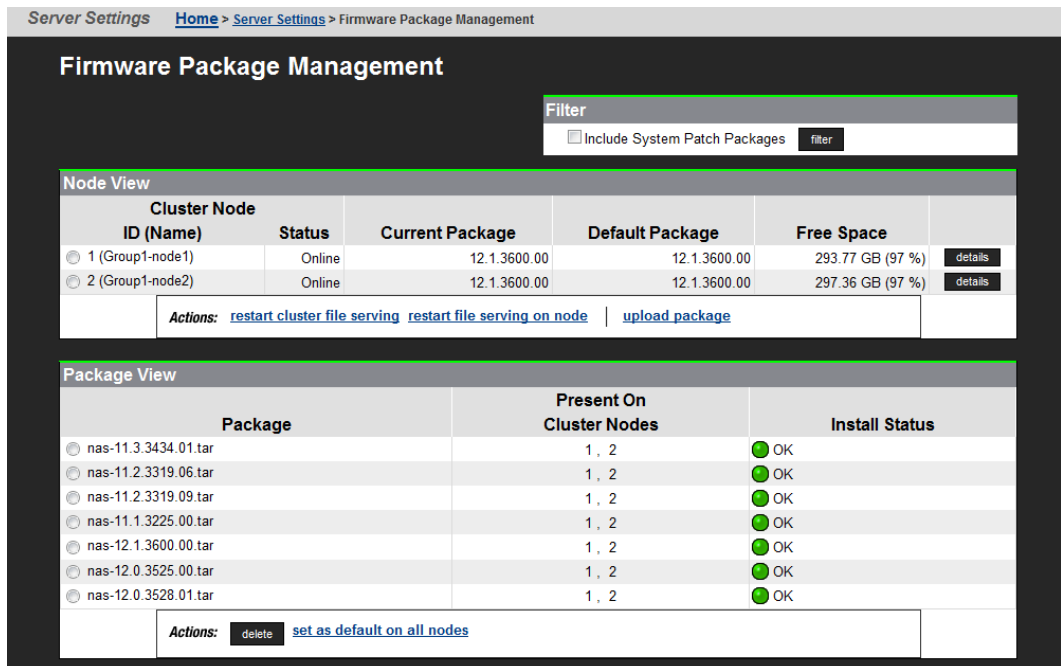

The server firmware version must match the failed server; otherwise, the server cannot properly restore from the backup file. See the release notes and system installation guide for release-specific requirements.

4. Navigate to **Home > Server Settings > License Keys** to check the license keys to ensure you have the correct set of new license keys.

5. Record the following information:
  - IP addresses for Ethernet ports 0 and 1
  - Gateway
  - Domain name
  - Host name

## Shutting down the server you are replacing

On the server that you are replacing:

### Procedure

1. From the server console, issue the command: **shutdown --ship --powerdown**

Wait until the console displays `Information: Server has shut down`, and the rear panel LEDs turn off. The PSU and server fans continue to run until you remove the power cables from the PSU module. See the appropriate system component section for more information.




**Note:** This specific **powerdown** command prepares the system for both shipping, and potential long-term, post-replacement storage.

---




2. Unplug the power cords from the power supplies.
3. Wait approximately 15 seconds, and then confirm the NVRAM status LED is off.

If the LED is flashing or fixed, press and hold the **reset** button for five seconds until the LED starts flashing. The battery disables when you release the **reset** button.

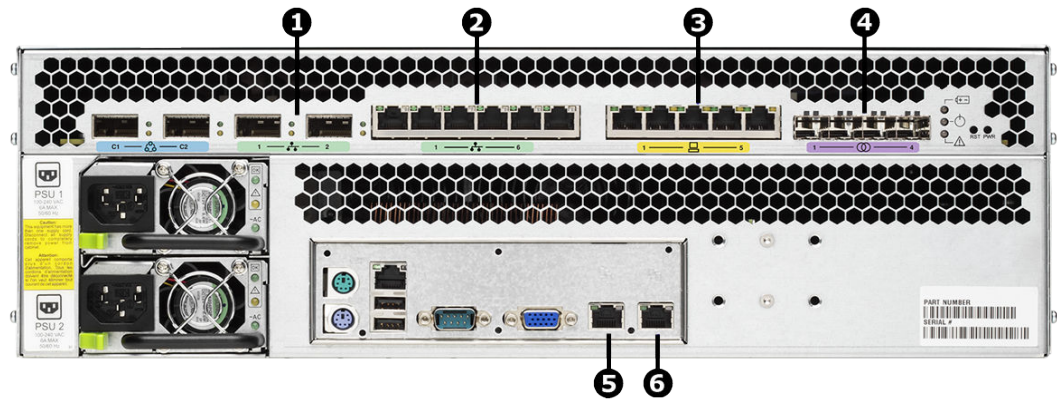


4. Use the following rear panel figure and table to identify and label the cabling placement on the existing server.



**Figure A-2 Rear view of server - models 3080 and 3090**

Item	Labels	Ports	Connections
1		1	Customer data network
		2	Customer data network
2		1	Gigabit Ethernet network port
		2	Gigabit Ethernet network port
		3	Gigabit Ethernet network port
		4	Gigabit Ethernet network port
		5	Gigabit Ethernet network port
3		1	10/100 Private management network Ethernet port
		2	10/100 Private management network Ethernet port
		3	10/100 Private management network Ethernet port
		4	10/100 Private management network Ethernet port
		5	10/100 Private management network Ethernet port
4		1	Storage or FC switch



Item	Labels	Ports	Connections
		2	Storage or FC switch
		3	Storage or FC switch
		4	Storage or FC switch
5		0	Customer facing management network
6		1	Private management network

5. If cables are not labeled, label them before removing them from the server.
6. Remove all cables from the server, and remove the server from the rack.
7. Remove the rail mounts from the old server, and install them on the new server.
8. Remove the battery from the old server, and install it in the new server.
9. Remove the bezel from the old server, and install it on the new server.
10. Insert the new server into the rack, and connect the power cords to the power supplies.



**Note:** Do not make any other cable connections at this time.

## Configuring the replacement server

### Prerequisites

Obtain the necessary IP addresses to be used for the replacement server. Servers shipped from the factory have not yet had the nas-preconfig script run on them, so a replacement server will not have any IP addresses pre-configured for your use. You need IP addresses for the following:

- 192.0.2.200/24 eth1 (cluster IP)
- 192.0.2.2/24 eth1 (testhost private IP)
- 192.168.4.120/24 eth0 (testhost external IP, which might vary)

When you run the nas-preconfig script, it reconfigures the server to the previous settings. This step allows the SMU to recognize the server as the same and allows it to be managed. Reconfigured settings:

- IP addresses for Ethernet ports 0 and 1
- Gateway
- Domain name
- Host name

On the replacement server:


### Procedure

1. Log in to the server.
2. Run the nas-preconfig script.
3. Reboot if you are instructed to by the script.
4. Log in to the SMU using one of the IP addresses you obtained once they can successfully connect using `ssc localhost`.
5. Use a KVM (keyboard, video, and mouse) or a serial cable to connect to the serial port on the server.

Alternatively, you can connect by way of SSH using the following settings:

- 115,200 b/s
  - 8 data bits
  - 1 stop bit
  - No parity
  - No flow control
  - VT100 emulation
6. Log in as `root` (default password: `nasadmin`), and enter `ssc localhost` to access the BALI level command prompt.
  7. Enter `evs list` to obtain the IP configuration for the server.
  8. Using a supported browser, launch the Web Manager (SMU GUI) using either of the IP addresses acquired from the EVS list output.
  9. Click **Yes** to proceed past the Security Alert, and log in as `admin` (default password: `nasadmin`).
  10. Verify and, if necessary, convert the new server to the model profile required.  
This step requires a separate process, training and equipment. Contact support if the incorrect model arrives for replacement.
  11. Navigate to **Home > Server Settings > Firmware Package Management** to verify and, if necessary, upgrade the new server to the latest SU release.

12. Navigate to **Home > Server Settings > Configuration Backup & Restore**, select the backup file you want, and click **restore** to restore the system from that backup file.

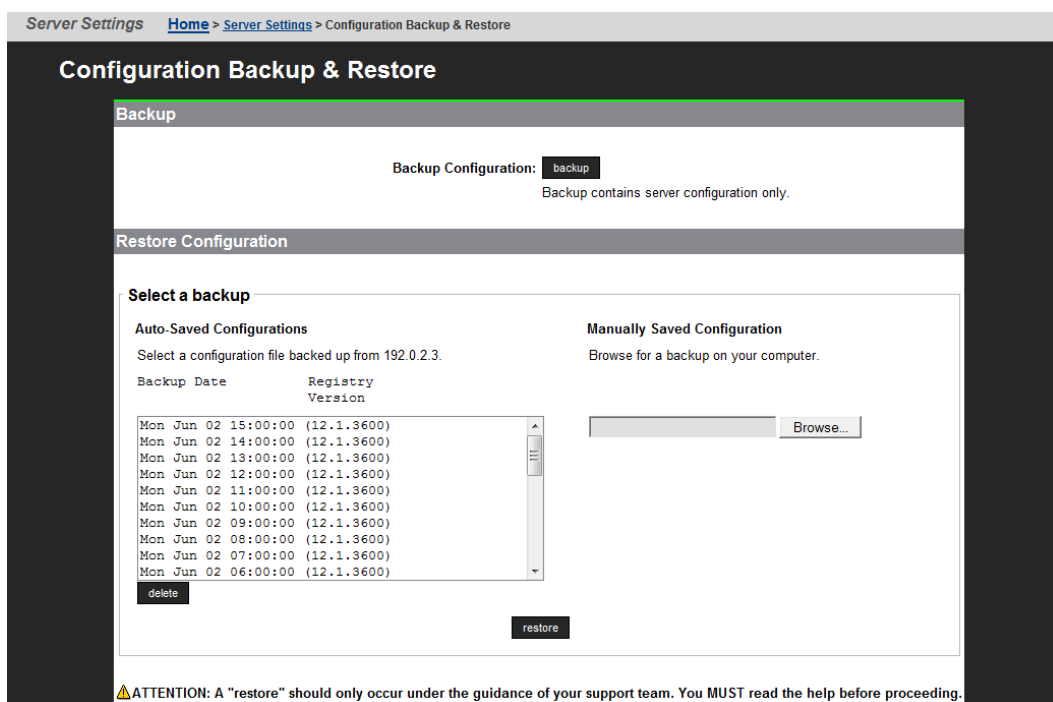

Server Settings [Home > Server Settings > Configuration Backup & Restore](#)

## Configuration Backup & Restore

### Backup

Backup Configuration: **backup**

Backup contains server configuration only.

### Restore Configuration

**Select a backup**

#### Auto-Saved Configurations

Select a configuration file backed up from 192.0.2.3.

Backup Date	Registry Version
Mon Jun 02 15:00:00	(12.1.3600)
Mon Jun 02 14:00:00	(12.1.3600)
Mon Jun 02 13:00:00	(12.1.3600)
Mon Jun 02 12:00:00	(12.1.3600)
Mon Jun 02 11:00:00	(12.1.3600)
Mon Jun 02 10:00:00	(12.1.3600)
Mon Jun 02 09:00:00	(12.1.3600)
Mon Jun 02 08:00:00	(12.1.3600)
Mon Jun 02 07:00:00	(12.1.3600)
Mon Jun 02 06:00:00	(12.1.3600)

delete

#### Manually Saved Configuration

Browse for a backup on your computer.

Browse...

restore

**ATTENTION:** A "restore" should only occur under the guidance of your support team. You MUST read the help before proceeding.

13. Reboot the server.
14. Reconnect the data cables to the server.
15. To uninstall the embedded SMU, log in as root and issue the command:  
**smu-uninstall**
16. Navigate to **Home > Server Settings > License Keys** to load the license keys.
17. Remove the previous license keys and add the new keys.

## Finalizing and verifying the replacement server configuration

The Fibre Channel (FC) link speed varies according to the server model. Use the appropriate speed for your model.

Model	Fibre Channel link speed
HNAS 3080 and 3090	4 Gbps

On the replacement server:



**Note:** The following steps show the FC link speed as 8 Gbps as an example.

## Procedure

1. Navigate to **Home > Server Settings > License Keys** to load the license keys.
2. Remove the previous license keys in the backup file, and add the new keys.
3. Use **fc-link-speed** to verify and, if necessary, configure the FC port speed as required.; for example:

- a. Enter **fc-link-speed** to display the current settings.

```
host:$ fc-link-speed
FC 1:      4 Gbps
FC 2:      4 Gbps
FC 3:      4 Gbps
FC 4:      4 Gbps
```

- b. Enter **fc-link-speed -i port\_number -s speed** for each port.

```
host:$ fc-link-speed -i 1 -s 4
Set interface 1 link speed OK
FC 1:      4 Gbps
host:$ fc-link-speed -i 2 -s 4
Set interface 2 link speed OK
FC 2:      4 Gbps
host:$ fc-link-speed -i 3 -s 4
Set interface 3 link speed OK
FC 3:      4 Gbps
host:$ fc-link-speed -i 4 -s 4
Set interface 4 link speed OK
FC 4:      4 Gbps
```

- c. Enter **fc-link-speed** to verify the settings.

```
host:$ fc-link-speed
FC 1:      4 Gbps
FC 2:      4 Gbps
FC 3:      4 Gbps
FC 4:      4 Gbps
```

4. Use the **fc-link-type** command to configure the server in fabric (N) or loop (NL) mode.
5. Modify zoning and switches with the new WWPN, if you are using WWN-based zoning.  
If you are using port-based zoning, the no modifications are necessary for the switches configurations.
6. Open Storage Navigator and reconfigure LUN mapping and host group on the storage system that is dedicated to the server with the new WWPNs. Perform this step for every affected server port.
7. If the server does not recognize the system drives, enter **fc-link-reset** to reset the fiber paths.
8. Enter **sdpath** to display the path to the devices (system drives) and which hport and storage port are used.
9. Enter **sd-list** to verify the system drives statuses as OK and access is allowed.
10. Enter **span-list** to verify the storage pools (spans) are accessible.



**Note:** In this instance, *cluster* is synonymous with the standalone server.

---

11. Enter **span-list-cluster-uuids** *span\_label* to display the cluster serial number (UUID) to which the storage pool belongs. The UUID is written into the storage pool's configuration on disk (COD). The COD is a data structure stored in every SD, which provides information how the different SDs are combined into different stripesets and storage pools.
12. Enter **span-assign-to-cluster** *span\_label* to assign all the spans to the new server.
13. Verify the IP routes, and enable all the EVSs for file services in case they are disabled.
14. Reconfigure any required tape backup application security.
15. Navigate to **Home > Status & Monitoring > Event Logs**, and click **Clear Event Logs**.
16. Navigate to **Home > Status & Monitoring > System Monitor** and verify the server status:
  - If the server is operating normally, and is not displaying any alarm conditions, run a backup to capture the revised configuration, and then download another diagnostic to support. Permanent license keys for the replacement server are normally provided within 7 days.
  - If the server is not operating normally for any reason, contact support for assistance.
17. Confirm all final settings, IP addresses, customer contact information, service restarts, client access, and that customer expectations are all in place. Features such as replication and data migration should all be confirmed as working, and all file systems and storage pools should be online.

## Replacing a node within a cluster


Replacing a single node within a cluster assumes only two-node clusters and the presence of an external SMU, which acts as a quorum device. This helps to simplify the replacement process because a cluster preserves operational state of the entire system beyond any single node failure. In this particular scenario temporary license keys are not required.

## Obtaining backups, diagnostics, firmware levels, and license keys

On the old server:

## Procedure


1. If the server is online, using Web Manager (SMU GUI), navigate to **Home > Server Settings > Configuration Backup & Restore**, click **backup**, and then select a location to save the backup file.

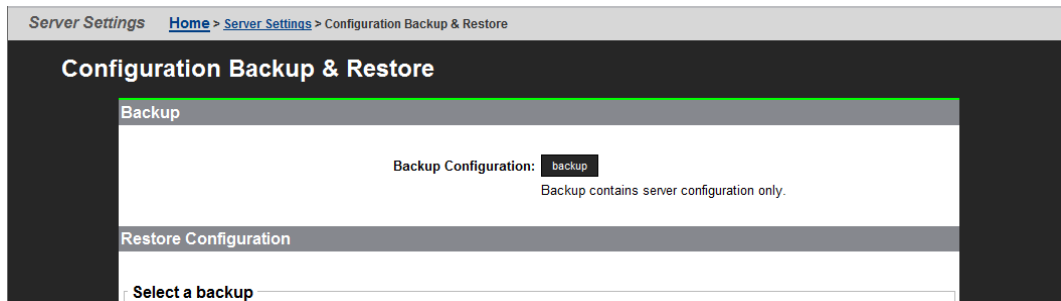

Ensure you save the backup file to a safe location off platform so that you can access it after the storage system is offline.

The backup process performed by the embedded SMU will automatically capture both the SMU and server configuration files in one complete set.

2. Navigate to **Home > Status & Monitoring > Diagnostics Download** to download the diagnostic test results.
3. Navigate to **Home > Server Settings > Firmware Package Management** to verify the existing server (SU) firmware release level.

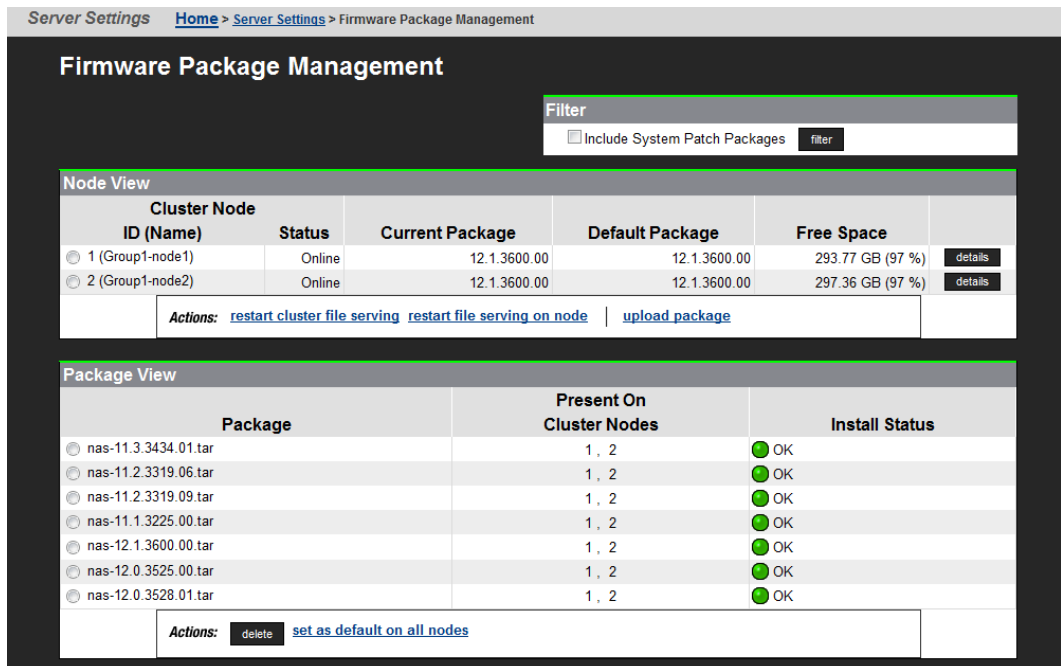

The new server firmware version must match the failed server; otherwise, the server cannot properly restore from the backup file. See the release notes and the system installation guide for release-specific requirements.

4. Navigate to **Home > Server Settings > IP Addresses** to obtain the node IP address.

The `ipaddr` command also displays these IP addresses.

## Shutting down the server you are replacing

On the server that you are replacing:

### Procedure

1. From the server console, issue the command: `shutdown --ship --powerdown`

Wait until the console displays `Information: Server has shut down`, and the rear panel LEDs turn off. The PSU and server fans continue to run until you remove the power cables from the PSU module. See the appropriate system component section for more information.




**Note:** This specific `powerdown` command prepares the system for both shipping, and potential long-term, post-replacement storage.




---

2. Unplug the power cords from the power supplies.
3. Wait approximately 15 seconds, and then confirm the NVRAM status LED is off.  
If the LED is flashing or fixed, press and hold the **reset** button for five seconds until the LED starts flashing. The battery disables when you release the **reset** button.

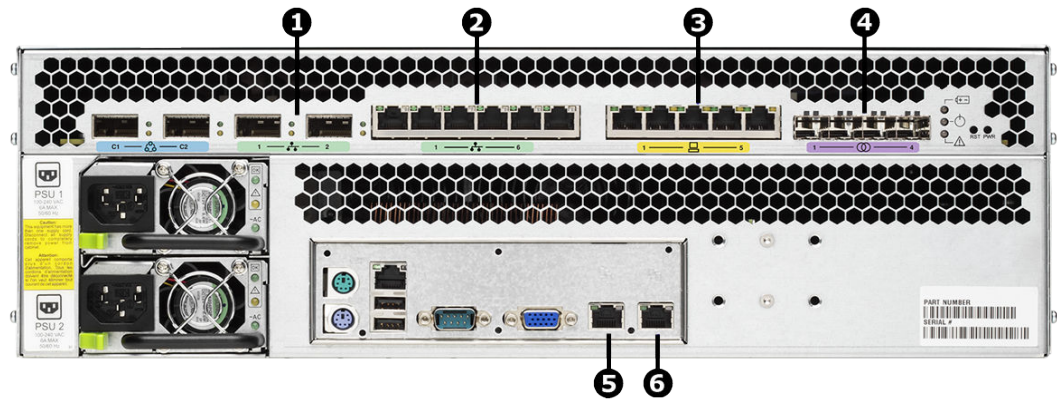


4. Use the following rear panel figure and table to identify and label the cabling placement on the existing server.



**Figure A-3 Rear view of server - models 3080 and 3090**

Item	Labels	Ports	Connections
1		1	Customer data network
		2	Customer data network
2		1	Gigabit Ethernet network port
		2	Gigabit Ethernet network port
		3	Gigabit Ethernet network port
		4	Gigabit Ethernet network port
		5	Gigabit Ethernet network port
		6	Gigabit Ethernet network port
3		1	10/100 Private management network Ethernet port
		2	10/100 Private management network Ethernet port
		3	10/100 Private management network Ethernet port
		4	10/100 Private management network Ethernet port
		5	10/100 Private management network Ethernet port
4		1	Storage or FC switch



Item	Labels	Ports	Connections
		2	Storage or FC switch
		3	Storage or FC switch
		4	Storage or FC switch
5		0	Customer facing management network
6		1	Private management network

5. If cables are not labeled, label them before removing them from the server.
6. Remove all cables from the server, and remove the server from the rack.
7. Remove the rail mounts from the old server, and install them on the new server.
8. Remove the battery from the old server, and install it in the new server.
9. Remove the bezel from the old server, and install it on the new server.
10. Insert the new server into the rack, and connect the power cords to the power supplies.



**Note:** Do not make any other cable connections at this time.

## Configuring the replacement server

### Prerequisites

Obtain the necessary IP addresses to be used for the replacement server. Servers shipped from the factory have not yet had the nas-preconfig script run on them, so a replacement server will not have any IP addresses pre-configured for your use. You need IP addresses for the following:

- Eth1 (cluster IP)
- Eth1 (testhost private IP)
- Eth0 (testhost external IP)
- 192.0.2.200/24 eth1 (cluster IP)

- 192.0.2.2/24 eth1 (testhost private IP)
- 192.168.4.120/24 eth0 (testhost external IP, which might vary)

On the replacement server:

### Procedure

1. Log in to the server.
2. Run the nas-preconfig script.  
The IP addresses are assigned at this step.
3. Reboot if you are instructed to by the script.
4. Log in to the SMU using one of the IP addresses you obtained once they can successfully connect using `ssc localhost`.
5. Use a KVM (keyboard, video, and mouse) or a serial cable to connect to the serial port on the server.  
Alternatively, you can connect by way of SSH using the following settings:
  - 115,200 b/s
  - 8 data bits
  - 1 stop bit
  - No parity
  - No flow control
  - VT100 emulation
6. Log in as `root` (default password: `nasadmin`), and enter `ssc localhost` to access the BALI level.
7. Enter `evs list` to see the IP configuration for the server.
8. Using a supported browser, launch the Web Manager (SMU GUI) using either of the IP addresses acquired from the EVS list output.
9. Click **Yes** to proceed past the Security Alert, and log in as `admin` (default password: `nasadmin`).
10. Verify and, if necessary, convert the new server to the model profile required.  
This step requires a separate process, training and equipment. Contact support if the incorrect model arrives for replacement.
11. Navigate to **Home > Server Settings > Firmware Package Management** to verify and, if necessary, upgrade the new server to the latest SU release.
12. Navigate to **Home > Server Settings > IP Addresses**, and change the node IP address acquired from the old server.
13. If necessary, change the default private IP address (192.0.2.2) if it conflicts with an existing IP address in the cluster configuration.
14. Reconnect the data cables to the server, including the intercluster and private management network cables.

15. Navigate to **Home > Server Settings > Add Cluster Node**, and log in as `supervisor` (default password: `supervisor`) to add the new node to the cluster configuration.


16. Confirm that you want to overwrite the node, review the settings, and then click **finish**.  
Wait for about 10 minutes for the node to reboot and join the cluster successfully.
17. Enter `smu-uninstall` to uninstall the embedded SMU.

## Finalizing and verifying the server configuration

On the new server:

### Procedure

1. Navigate to **Home > Status & Monitoring > System Monitor** to verify the server status:

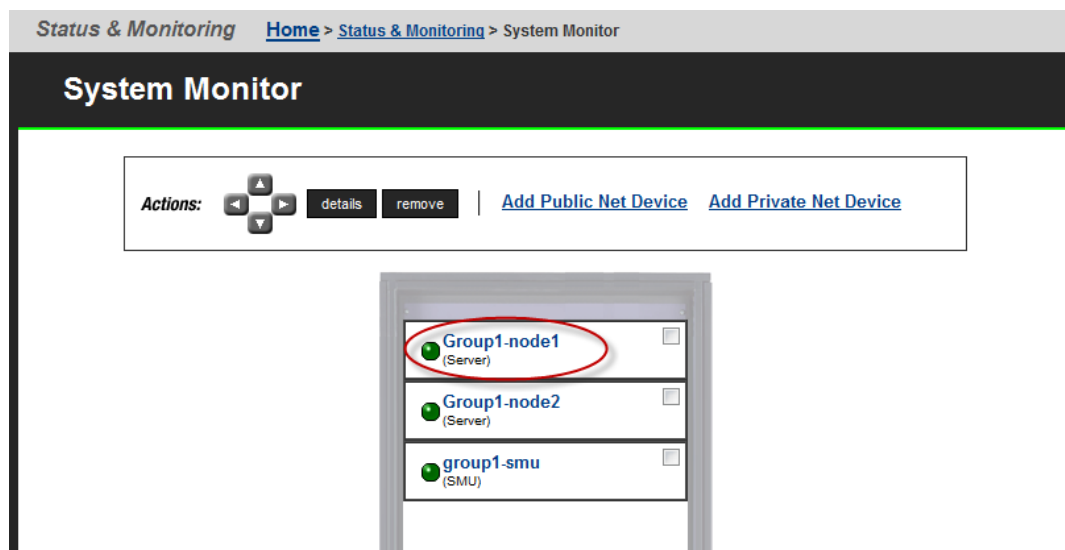

- If the server is operating normally, and is not displaying any alarm conditions, run a backup to capture the revised configuration, and


 
then download another diagnostic to support. Permanent license keys for the new server will be provided within 15 days.

- If the server is not operating normally for any reason, contact support for assistance.

2. Navigate to **Home > Server Settings > Cluster Configuration** to verify the cluster configuration status.

Server Settings [Home](#) > [Server Settings](#) > Cluster Configuration

## Cluster Configuration

Cluster Nodes					
Name	IP Address	Status	Model	Health	EVS
Group1-node1	192.0.2.200	Online	3090-G2	 OK	<a href="#">Group1-admin</a> , <a href="#">g1-evs3</a> , <a href="#">g1-evs1</a> , <a href="#">LNAS</a> , <a href="#">g1-evs2</a> , <a href="#">EVS1</a> <a href="#">details</a>
Group1-node2	192.0.2.201	Online	3090-G2	 OK	<a href="#">donotdelete</a> <a href="#">details</a>

Cluster Information	Quorum Device
Cluster Name: <input type="text" value="g1-cluster"/> <a href="#">rename</a> Status: Online Health: Robust Cluster UUID: a6e6ddf0-9627-11cb-9000-d428dd993ca4 MAC: d4-28-dd-99-3c-a4	Name: GROUP1-SMU IP Address: 192.0.2.1 Status: Configured <a href="#">add</a> <a href="#">remove</a>

**Actions:** [Add Cluster Node](#)

**Shortcuts:** [Quorum Services v2](#) [EVS Management](#) [EVS Migration](#)

3. If EVS mapping or balancing is required, select the EVS to migrate, assign it to the preferred node, and then click **migrate**.

Server Settings [Home](#) > [Server Settings](#) > EVS Migration

## EVS Migration

### EVS Mappings

Node	Current EVS Mapping	Preferred EVS Mapping
Group1-node1	g1-eva3 , <b>g1-eva1</b> , LNAS , g1-eva2 , EVS1	g1-eva3 , LNAS , g1-eva2 , EVS1
Group1-node2	donotdelete	donotdelete , g1-eva1

[Save current](#) as preferred | [Migrate all](#) to preferred

An **orange** EVS indicates the EVS is **not on its preferred** cluster node.

A **grey** EVS indicates the EVS does **not have a preferred** cluster node.

A **black** EVS indicates the EVS is **on its preferred** cluster node.

### EVS Migrations

☐ Migrate EVS Group1-admin to cluster node Group1-node2

☐ Migrate all EVSes from cluster node Group1-node1 to cluster node Group1-node2

⚠ Migrating the EVS will disrupt file system services to any existing clients.

**migrate**

4. To set the preferred node for any remaining EVSs, navigate to **Home > Server Settings > EVS Management > EVS Details**.

g1-cluster - 192.0.2.3 Help About Sign Out

Server Settings [Home](#) > [Server Settings](#) > [EVS Management](#) > EVS Details

## EVS Details EVS1

Name: EVS1 **rename**

EVS ID: 6

Status: Online

Type: File Services

Enabled: Yes

Preferred Cluster Node: Group1-node1 **apply**

EVS Security: Global **change...** (Disable EVS to alter EVS security)

Default File System Security Mode: [Mixed \(Windows and Unix\)](#)

### File Systems

[FS11](#)

### IP Addresses

Port	IP Address
ag1	172.31.60.47/24
ag1	face::17/64

5. Select the node from the Preferred Cluster Node list, and then click **apply**.
6. Navigate to **Home > Status & Monitoring > Event Logs**, and then click **Clear Event Logs**.
7. Confirm all final settings, IP addresses, customer contact information, service restarts, client access, and that customer expectations are all in place. Features such as replication and data migration should all be confirmed as working, and all file systems and storage pools should be online.

## Replacing all servers within a cluster

If both servers with an external SMU that are nonfunctioning, and does not have a recent backup saved off platform, then a challenging and manual recovery process is necessary. If this circumstance is encountered, call the support organization for a copy of the system's latest diagnostics files, if available, to be used as a guide in reestablishing the system manually. The data and file systems will remain intact independent of the replacement and without a backup.




**Important:** Set expectations up front with the customer that this will delay time to recovery, and that some aspects of the systems configuration might never be recovered.

## Obtaining backups, diagnostics, firmware levels, and license keys

On the old server:

### Procedure

1. If the server is online, using Web Manager (SMU GUI), navigate to **Home > Server Settings > Configuration Backup & Restore**, click **backup**, and then select a location to save the backup file.

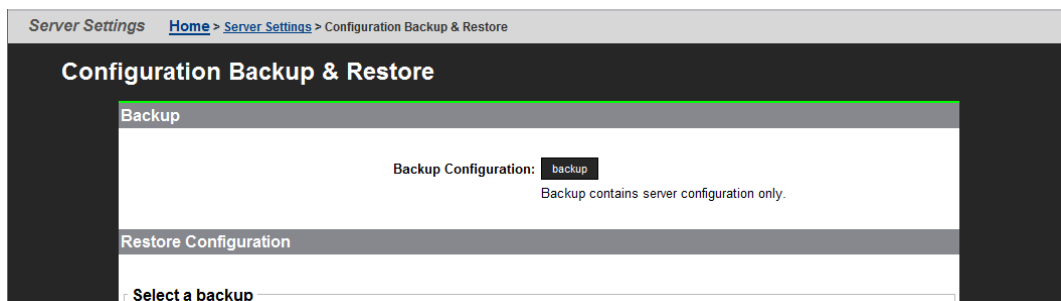

Ensure you save the backup file to a safe location off platform so that you can access it after the storage system is offline.

The backup process performed by the embedded SMU will automatically capture both the SMU and server configuration files in one complete set.

2. Navigate to **Home > Status & Monitoring > Diagnostics download** to download the diagnostic test results.

Status & Monitoring [Home > Status & Monitoring > Download Diagnostics](#)

## Download Diagnostics

Select the devices for which diagnostics are required (downloading may take several minutes).

☒ **Managed Server**

- ☒ Include All Managed Servers
- ☐ Include Only the Currently Managed Server
- ☐ Include all files (e.g. archived showall.txt)

☒ **Fibre Channel Switches**

☒ **SMU**

- ☒ Include archived diagnostics (if issue occurred over a few hours ago)

[download](#) [email](#)

Select the devices for which diagnostics are required by checking the appropriate boxes. Then click **download**.

3. Navigate to **Home > Server Settings > Firmware Package Management** to verify the existing server (SU) firmware release level.

Server Settings [Home > Server Settings > Firmware Package Management](#)

## Firmware Package Management

Filter ☐ Include System Patch Packages [filter](#)

### Node View

Cluster Node ID (Name)	Status	Current Package	Default Package	Free Space	
1 (Group1-node1)	Online	12.1.3600.00	12.1.3600.00	293.77 GB (97 %)	<a href="#">details</a>
2 (Group1-node2)	Online	12.1.3600.00	12.1.3600.00	297.36 GB (97 %)	<a href="#">details</a>

Actions: [restart cluster file serving](#) [restart file serving on node](#) | [upload package](#)

### Package View

Package	Present On Cluster Nodes	Install Status
<a href="#">nas-11.3.3434.01.tar</a>	1, 2	OK
<a href="#">nas-11.2.3319.06.tar</a>	1, 2	OK
<a href="#">nas-11.2.3319.09.tar</a>	1, 2	OK
<a href="#">nas-11.1.3225.00.tar</a>	1, 2	OK
<a href="#">nas-12.1.3600.00.tar</a>	1, 2	OK
<a href="#">nas-12.0.3525.00.tar</a>	1, 2	OK
<a href="#">nas-12.0.3528.01.tar</a>	1, 2	OK

Actions: [delete](#) [set as default on all nodes](#)

The new server firmware version must match the failed server; otherwise, the server cannot properly restore from the backup file. See the release notes and the *System Installation Guide* for release-specific requirements.

4. Navigate to **Home > Server Settings > IP Addresses** to obtain:

- Admin IP address and name
- Cluster node IP address

The `evs list` command also displays these IP addresses.

## Shutting down the servers you are replacing

On the servers that you are replacing:

### Procedure

1. From the server console, issue the command: `cn node shutdown --ship --powerdown`

(where *node* represents the targeted node)

Wait until the console displays `Information: Server has shut down`, and the rear panel LEDs turn off. The PSU and server fans continue to run until you remove the power cables from the PSU module. See the appropriate system component section for more information.




**Note:** This specific `powerdown` command prepares the system for both shipping, and potential long-term, post-replacement storage.

---




2. Unplug the power cords from the power supplies.
3. Wait approximately 15 seconds, and then confirm the NVRAM status LED is off.  
If the LED is flashing or fixed, press and hold the **reset** button for five seconds or until the LED starts flashing. The battery disables when you release the **reset** button.



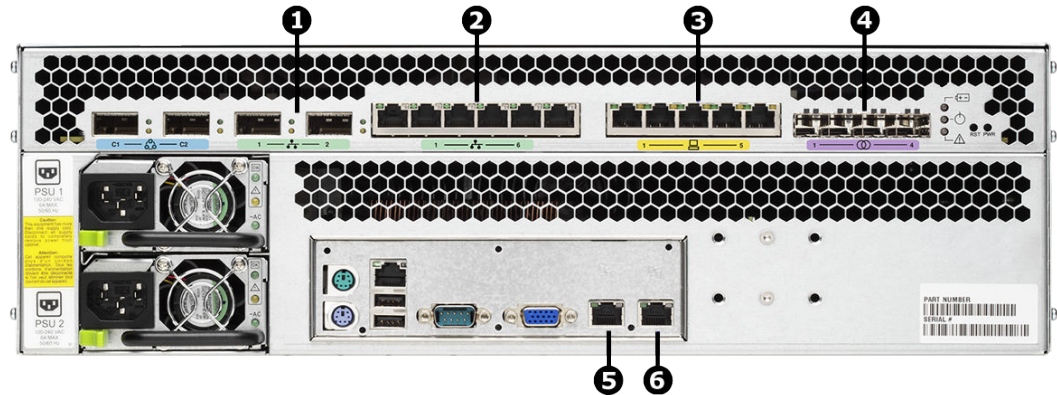


4. Use the following rear panel figure and table to identify and label the cabling placement on the existing server.



**Figure A-4 Rear view of server - HNAS 3080 and 3090 models**

Item	Labels	Ports	Connections
1		1	10 GbE data network
		2	10 GbE data network
2		1	Gigabit Ethernet network port
		2	Gigabit Ethernet network port
		3	Gigabit Ethernet network port
		4	Gigabit Ethernet network port
		5	Gigabit Ethernet network port
		6	Gigabit Ethernet network port
3		1	10/100 Private management network Ethernet port
		2	10/100 Private management network Ethernet port
		3	10/100 Private management network Ethernet port
		4	10/100 Private management network Ethernet port
		5	10/100 Private management network Ethernet port
4		1	Storage or FC switch
		2	Storage or FC switch

Item	Labels	Ports	Connections
		3	Storage or FC switch
		4	Storage or FC switch
5		0	Customer facing management network
6		1	Private management network

5. If cables are not labeled, label them before removing them from the server.
6. Remove all cables from the server, and remove the server from the rack.
7. Remove the rail mounts from the old server, and install them on the new server.
8. Remove the battery from the old server, and install it in the new server.
9. Remove the bezel from the old server, and install it on the new server.
10. Insert the new server into the rack, and connect the power cords to the power supplies.



**Note:** Do not make any other cable connections at this time.

## Configuring the replacement servers

### Prerequisites

Obtain the necessary IP addresses to be used for the replacement server. Servers shipped from the factory have not yet had the nas-preconfig script run on them, so a replacement server will not have any IP addresses pre-configured for your use. You need IP addresses for the following:

- Eth1 (cluster IP)
- Eth1 (testhost private IP)
- Eth0 (testhost external IP)
- 192.0.2.200/24 eth1 (cluster IP)
- 192.0.2.2/24 eth1 (testhost private IP)
- 192.168.4.120/24 eth0 (testhost external IP, which might vary)

On a replacement server:

### Procedure

1. Log in to the server.
2. Run the `nas-preconfig` script.  
The IP addresses are assigned at this step.
3. Reboot if you are instructed to by the script.
4. Log in to the SMU using one of the IP addresses you obtained once they can successfully connect using `ssc localhost`.
5. Use a KVM (keyboard, video, and mouse) or a serial cable to connect to the serial port on the server.  
Alternatively, you can connect by way of SSH using the following settings:
  - 115,200 b/s
  - 8 data bits
  - 1 stop bit
  - No parity
  - No flow control
  - VT100 emulation
6. Log in as `root` (default password: `nasadmin`), and enter `ssc localhost` to access the BALI level command prompt.
7. Enter `evs list` to see the IP configuration for the server.
8. Using a supported browser, launch the Web Manager (SMU GUI) using either one of the IP addresses acquired from the EVS list output.
9. Click **Yes** to proceed past Security Alert, and log in as `admin` (default password: `nasadmin`).
10. Verify and, if necessary, convert the new server to the model profile required.  
This step requires a separate process, training and equipment. Contact support if the incorrect model arrives for replacement.
11. Navigate to **Home > Server Settings > Firmware Package Management** to verify and, if necessary, upgrade the new server to the latest SU release.
12. Navigate to **Home > Server Settings > Cluster Wizard**, and promote the node to the cluster.
13. Enter the cluster name, cluster node IP address, subnet, and select a quorum device.  
Note that the node reboots several times during this process.
14. When prompted, add the second node to the cluster.
15. Enter the physical node IP address, log in as `supervisor` (default password: `supervisor`), and click **finish**.  
Wait for the system to reboot.
16. Enter `smu-uninstall` to uninstall the embedded SMU.

17. Navigate to **Home > Server Settings > Configuration Backup & Restore**, locate the desired backup file, and then click **restore**.
18. Reconfigure the server to the previous settings:
  - IP addresses for Ethernet ports 0 and 1
  - Gateway
  - Domain name
  - Host name

The SMU should recognize the node as the same and allow it to be managed.


19. Navigate to **Home > Server Settings > License Keys** to load the license keys.
20. Repeat steps for any other replacement servers to be configured.

## Finalizing and verifying the system configuration

On the new server:

### Procedure

1. Navigate to **Home > Status & Monitoring > System Monitor** to verify the server status:

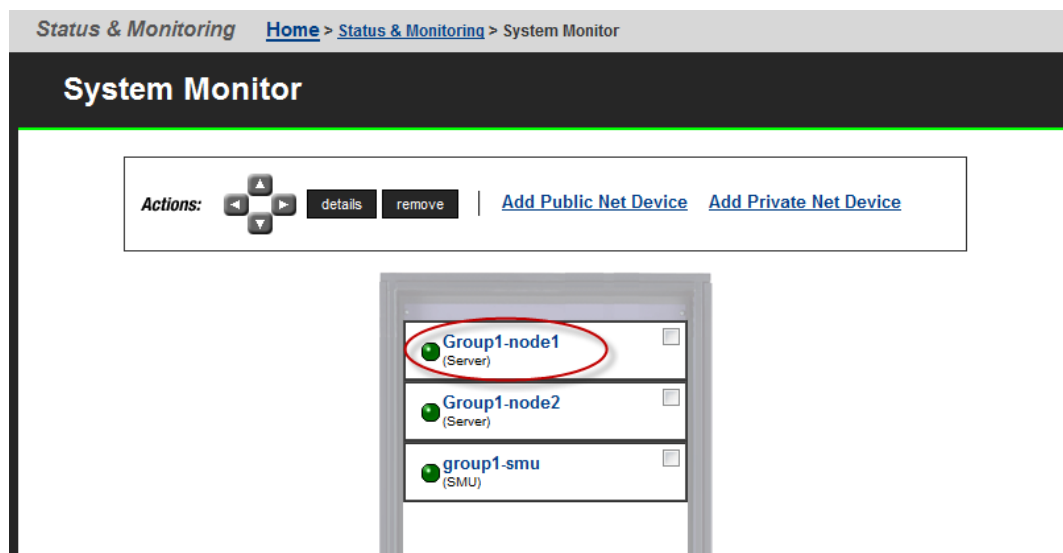

- If the server is operating normally, and is not displaying any alarm conditions, run a backup to capture the revised configuration, and then download another diagnostic to support. Permanent license keys for the new server will be provided within 15 days.
  - If the server is not operating normally for any reason, contact support for assistance.
2. Navigate to **Home > Status & Monitoring > Event Logs**, and then click **Clear Event Logs**.

- 3.** Confirm all final settings, IP addresses, customer contact information, service restarts, client access, and that customer expectations are all in place. Features such as replication and data migration should all be confirmed as working, and all file systems and storage pools should be online.

## Parts list for 3080/3090 G2 servers

### Parts for 3080/3090 servers

Part number	Description	Notes
SX325074	PSU Module - 450W	
SX325116	Fan Tray	RoHS6
SX320164	USB Configure Tool	Included in part number SX325104
SX325130	PSU- 450W	<ul style="list-style-type: none"> <li>RoHS 2013</li> <li>Required for EMEA</li> <li>RoHS 2013 spares are required for EMEA units start with a S/N starting with M2SEKW13 or higher</li> </ul>
SX325147	HNAS 3080/3090 Server	<ul style="list-style-type: none"> <li>Includes fans and HDDs</li> <li>Does not include PSUs or battery</li> <li>The base system and MFB have been replaced by whole unit servers</li> </ul>
SX325148	HNAS 3080/3090 Server HDS	<ul style="list-style-type: none"> <li>Includes fans and HDDs</li> <li>Does not include PSUs, battery, rails, or bezel</li> <li>RoHS 2013</li> <li>RoHS 2013 spares are required for EMEA units start with a S/N starting with M2SEKW13 or higher</li> </ul>
SX325097	MK1 Battery Module (each)	
SX325098	Fan Tray ea (Fan ID: 3)	Can also use SX325116
SX325099	Hard Disk ea (500GB)	

### System Management Unit (SMU) parts

Part number	Description	Notes
SX325094	SMU300 w/CentOS 4.4	<ul style="list-style-type: none"> <li>No SMU code</li> <li>RoHS5</li> </ul>
SX325121	SMU300 HDS Branded, CentOS6.2	No SMU code

Part number	Description	Notes
SX325134	SMU300 HDS Branded, CentOS6.2	<ul style="list-style-type: none"> <li>no SMU code</li> <li>RoHS 2013 (Required for EMEA)</li> <li>RoHS 2013 spares are required for EMEA units start with a S/N starting with M2SEKW13 or higher</li> </ul>
SX345278	System Management Unit 300 (SMU300)	<ul style="list-style-type: none"> <li>Required for Cluster (current)</li> <li>Can use SX325121</li> </ul>

## Switch parts

Part number	Description	Notes
SX220421	HP ProCurve 1800-24G (Managed 24 port Ethernet 10/100/1000BASE-T)	
SX220480	HP ProCurve 1810-24G (Managed 24 port Ethernet 10/100/1000 BASE-T)	
HD-TI-24X-AC	TurboIron 24 Port switch (10GbE/1GbE, SFP+)	This switch is required for configurations that include 3 or more nodes
224-5880	Dell PowerConnect 2824 Switch (24 Ports, GigE)	Can use part number 222-2257
XBR-VDX6730-16-R	Brocade VDX 6730 10GbE Switch, 16 Ports SFP+, AC, Port Side Exhaust AF	
XBR-250WPSAC-R	Brocade VDX 6730 250W AC PS/fan, Port Side Exhaust	
XBR-VDX6730-16-F	Brocade VDX 6730 10GbE Switch, 16 Ports SFP+, AC, Non Port Side Exhaust AF	
XBR-250WPSAC-F	Brocade VDX 6730 250W AC PS/fan, Non Port Side Exhaust	
XBR-VDX6730-40-R	Brocade VDX 6730 10GbE Switch, 40 Ports SFP+, AC, Port Side Exhaust AF	
XBR-500WPSAC-R	Brocade VDX 6730 500W AC PS, Port Side Exhaust	
XBR-FAN-80-R	Brocade VDX 6730 80MM Fan assy, Port Side Exhaust	
XBR-VDX6730-40-F	Brocade VDX 6730 10GbE Switch, 40 Ports SFP+, AC, Non Port Side Exhaust AF	

Part number	Description	Notes
XBR-500WPSAC-F	Brocade VDX 6730 500W AC PS, Non Port Side Exhaust	
XBR-FAN-80-F	Brocade VDX 6730 80MM Fan assy, Non Port Side Exhaust	
SX222096	Copper cable - SFP+ 10GE passive twinax, Cluster & 10GbE, 1 meter, RoHS 6	
SX222097	Copper cable - SFP+ 10GE passive twinax, Cluster & 10GbE, 3 meters, RoHS 6	
SX222098	Copper cable - SFP+ 10GE passive twinax, Cluster & 10GbE, 5 meters, RoHS 6	
SX222099	Copper cable - SFP+ 10GE passive twinax, Cluster & 10GbE, 7 meters, RoHS 6	

### Optics parts

Part number	Description	Notes
HD-10G-SFPP-SR	10GBASE-SR, SFP+ optic (LC), target range 300m over MMF	This SFP is used in the TurboIron switch (part number HD-TI-24X-AC)
SX350004	SFP 1000BaseT Copper	Manufacturer part number is FCMJ-8521-3
SX350000	SFP - Multi-Mode Fiber - 2 Gbps	Manufacturer part number is FTRJ8519P1BNL
SX350010	SFP - Multi-Mode Fiber - 4 Gbps	Manufacturer part number is FTLF8524P2BNV
SX350011	XFP - 10G 850NM 1-Pk for Cluster only	Manufacturer part number is FTLX8511D3
FTLX1412D3BCL	Multi-source XFP 10Gbps; Single Mode 1310nm; LC 3.3v	Substitute part number FTLX1411D3
FTLX1411D3	XFP - 10G LWL 10km Finisar 1-Pk	Can use FTLX1412D3BCL







## **Hitachi Data Systems**

### **Corporate Headquarters**

2845 Lafayette Street  
Santa Clara, California 95050-2639  
U.S.A.  
[www.hds.com](http://www.hds.com)

### **Regional Contact Information**

#### **Americas**

+1 408 970 1000  
[info@hds.com](mailto:info@hds.com)

#### **Europe, Middle East, and Africa**

+44 (0) 1753 618000  
[info.emea@hds.com](mailto:info.emea@hds.com)

#### **Asia Pacific**

+852 3189 7900  
[hds.marketing.apac@hds.com](mailto:hds.marketing.apac@hds.com)



**MK-92HNAS017-06**