# REPLACE SECTION

# A SAFETY SUMMARY

Notes on the operation on the password inputting screen.

The password inputting screen is displayed on the SVP screen to arouse maintenance person's attention when the operation concerned can cause a serious failure such as a system down or a data loss.

- When the password inputting screen is displayed, be sure to observe the cautions given in the procedure concerned in the maintenance manual.
- When a confirmation by the technical support center is required in the maintenance manual, be sure to get it before executing the maintenance procedure concerned.
- Each PCB is operated by the microprogram owned by it individually. If the PCB is replaced in the procedure that makes the version of the microprogram disagree with that of the PCB, the subsystem cannot operate normally. Be sure to make the revisions consistent each other.


REV.0	Jun.2001					
-------	----------	--	--	--	--	--

## Contents

1.			
	1.1 Hot Replace Flowcha	rt	REP01-10
	1.2 Concept of Drive Main	ntenance	REP01-20
	1.3 Concept of Cache Ma	aintenance	REP01-90
	1.4 How to Interpret the H	lot Replace Procedure	REP01-100
	1.5 Parts Replacement P	rocess Table	REP01-150
		able	
		ne	
		ne maintenance when HRC/HOR(	
		ne maintenance when HODM is u	
		line maintenance when HMRCF is	
	1.11 Availability of the on	line maintenance when HXRC is u	usedREP01-250
	[Pre A] REP02-10	[Hardware A]REP03-10	[Post a]REP04-10
	[Pre B] REP02-30	[Hardware B] REP03-50	[Post b]REP04-50
	[Pre C] REP02-90	[Hardware C] REP03-80	[Post c]REP04-90
	[Pre D] REP02-130	[Hardware D] REP03-110	[Post d]REP04-150
	[Pre E] REP02-180	[Hardware E]REP03-140	[Post e]REP04-180
	[Pre F] REP02-240	[Hardware F] REP03-170	[Post f]REP04-210
	[Pre H] REP02-300	[Hardware G] REP03-200	[Post i]REP04-240
	[Pre K] REP02-370	[Hardware T1] REP03-230	[Post j]REP04-270
	[Pre L] REP02-410	[Hardware T2] REP03-280	[Post k]REP04-300
	[Pre M] REP02-460	[Hardware T3] REP03-330	[Post t1]REP04-320
	[Pre T1] REP02-510	[Hardware T4] REP03-360	[Post t3]REP04-900
	[Pre T3] REP02-660	[Hardware T5] REP03-410	[Post t4]REP04-1000
	[Pre T4] REP02-750	[Hardware T6] REP03-430	[Post t5]REP04-1100
	[Pre T5] REP02-820	[Hardware T7] REP03-450	[Post u]REP04-1360
	[Pre V] REP02-880	[Hardware T8] REP03-550	[Post z]REP04-1400
		[Hardware T11] REP03-570	
		[Hardware T12] REP03-600	
		[Hardware T13] REP03-620	
		[Hardware T15] REP03-660	
		[Hardware T16] REP03-690	
		[Hardware T19] REP03-710	
		[Hardware T20] REP03-730	
		[Hardware T21] REP03-750	
		[Hardware T23] REP03-880	
		[Hardware T24] REP03-910	
		[Hardware T25] REP03-930	
		[Hardware T26] REP03-950	
		[Hardware T27] REP03-970	

#### 1 Hot Replace

#### 1.1 Hot Replace Flowchart

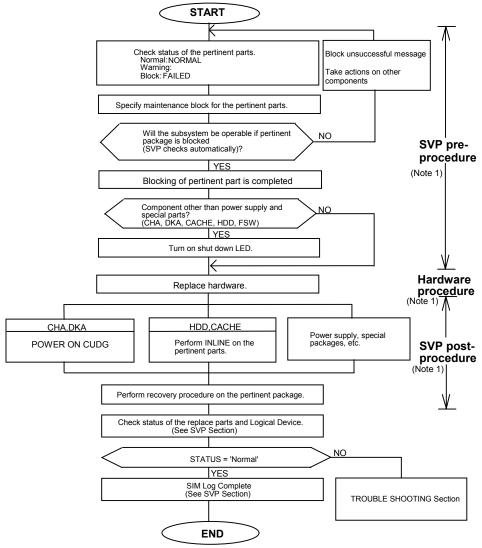

# Note 1:

SVP pre-procedure: An SVP (PC) process of issuing a maintenance block instruction after checking the status of the parts to be

replaced so that the live parts can be removed and replaced.

Hard ware procedure: A process of removing a parts to be replaced

(shut down LED on) and installing a maintenance package.

Be sure to wear your wrist strap, and attach to ground, prior to

performing the following work.


This will insure that the IC and LSI on the PCB, are protected from static electricity.

SVP post-procedure: An SVP (PC) process of making functional checks

(CUDG and INLINE) on the replacement package and building

it into the subsystem.


#### 1.2 Concept of Drive Maintenance

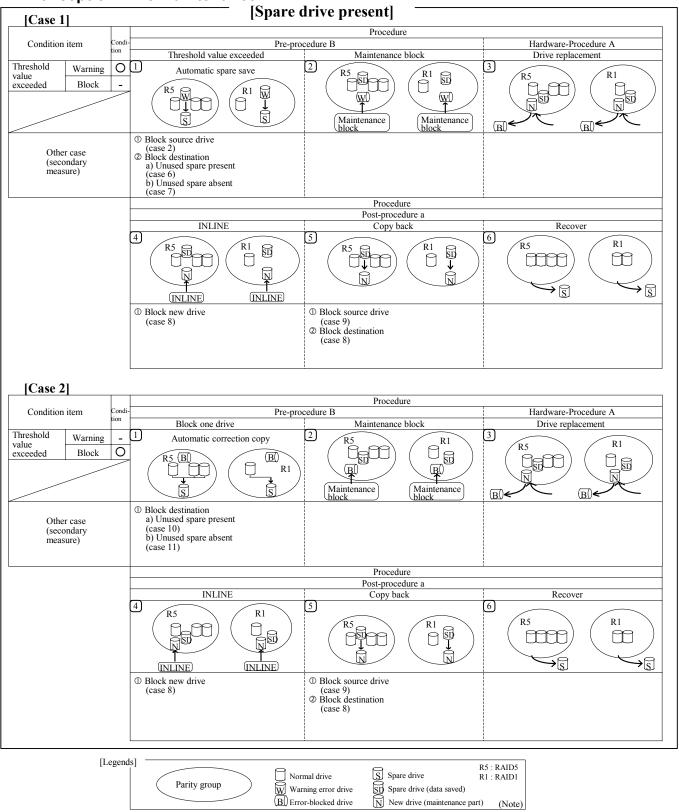

(Note) In RAID 1 method, Parity group consists of four drives.

Copyright ©2001,	Hitachi, Ltd.


DEV/0	Jun.2001			
REV.U	Jun.2001			

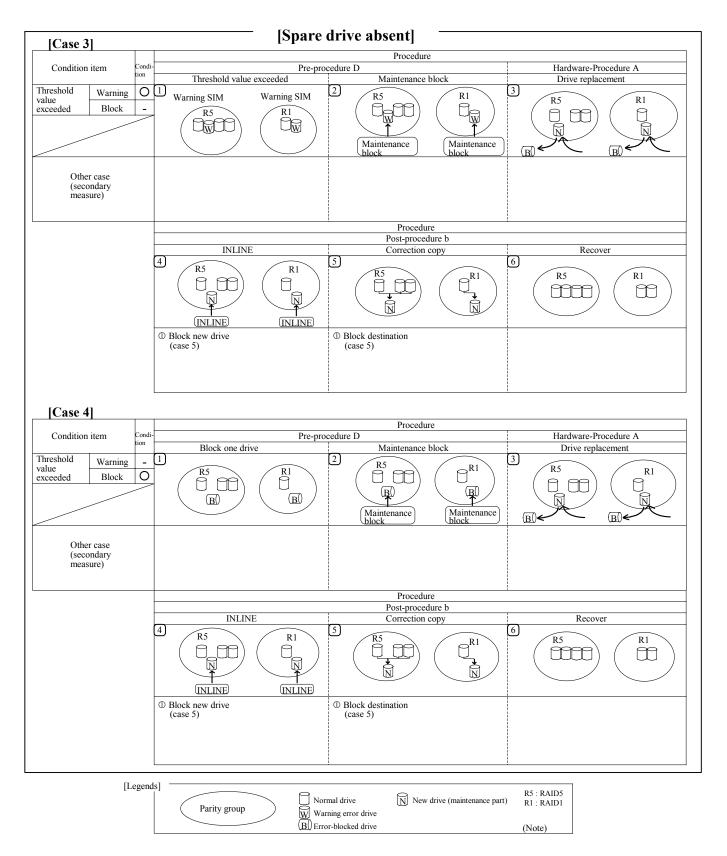

(Note) In RAID 1 method, Parity group consists of two drives.


Copyright ©2001, Hitachi, Ltd.

REV.0 Jun.2001 REP01-30

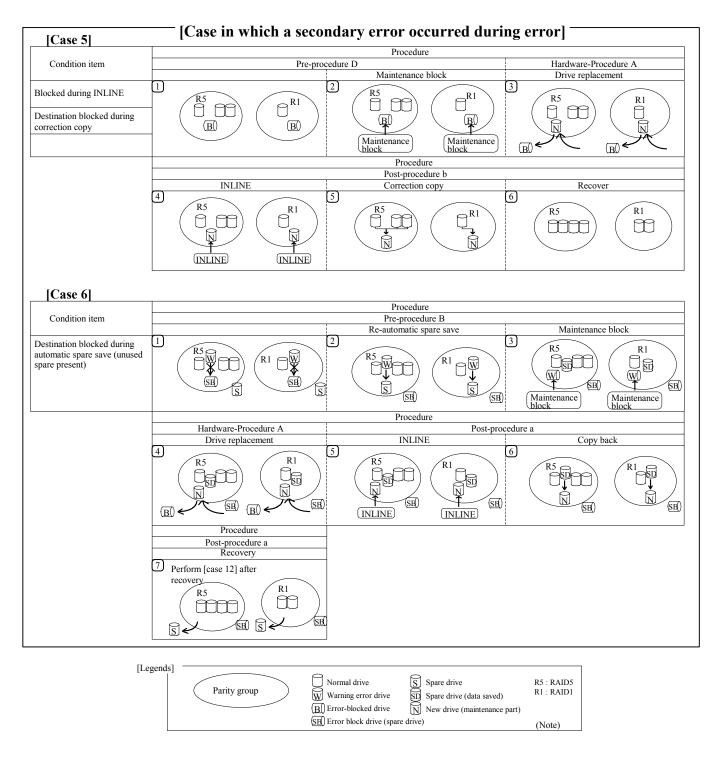


(Note) In RAID 1 method, Parity group consists of two drives.

REV.0 Jun.2001			
----------------	--	--	--

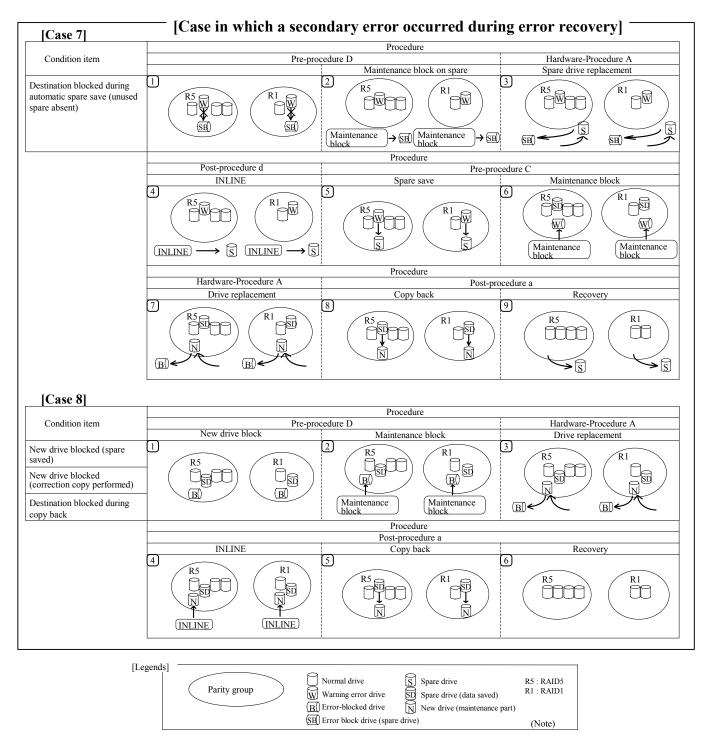


(Note) In RAID 1 method, Parity group consists of two drives.

REV.0 Jun.2001		
----------------	--	--

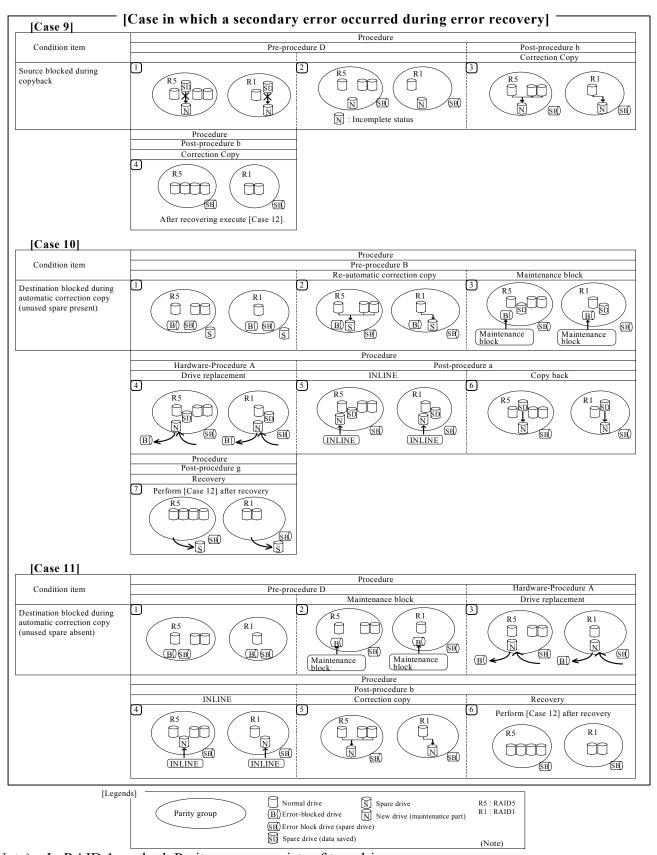


(Note) In RAID 1 method, Parity group consists of two drives.

REV.0 Jun.2001			
----------------	--	--	--

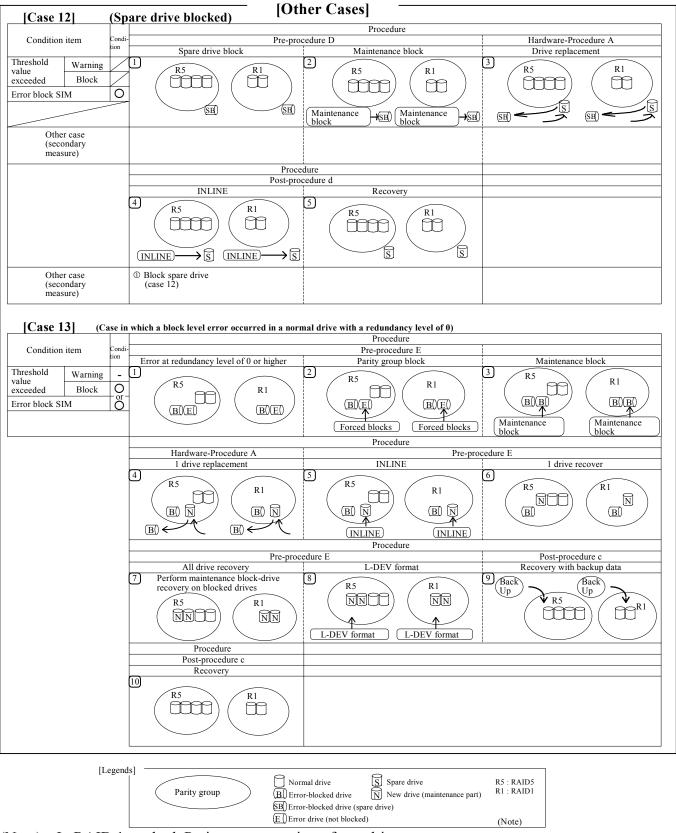

(Note) In RAID 1 method, Parity group consists of two drives.

REV.0	Jun.2001			

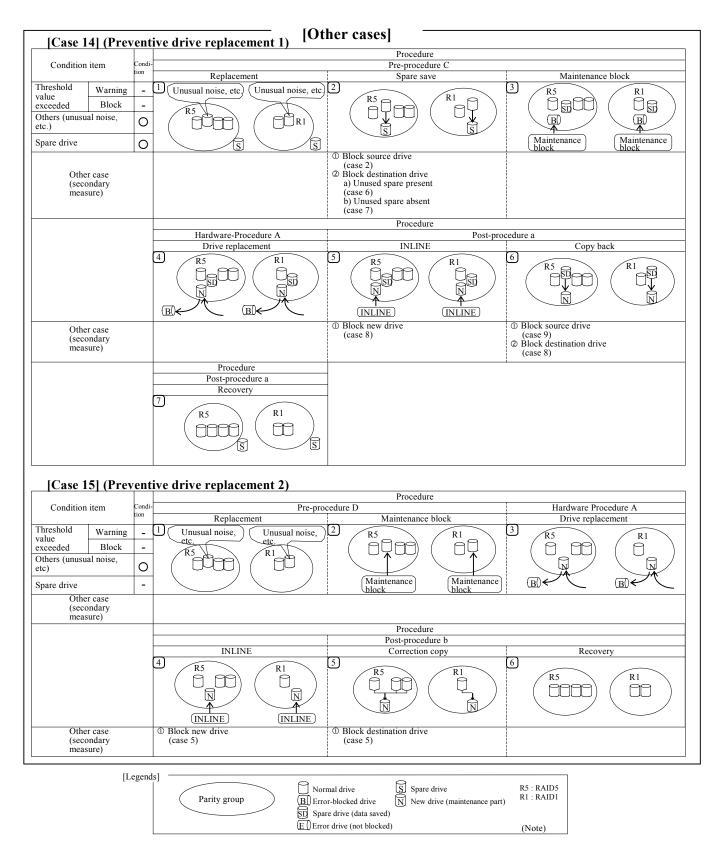



(Note) In RAID 1 method, Parity group consists of two drives.

 $Copyright @2001, \, Hitachi, \, Ltd.$ 

REV.0 Jun.200			
---------------	--	--	--

#### 1.3 Concept of Cache Maintenance

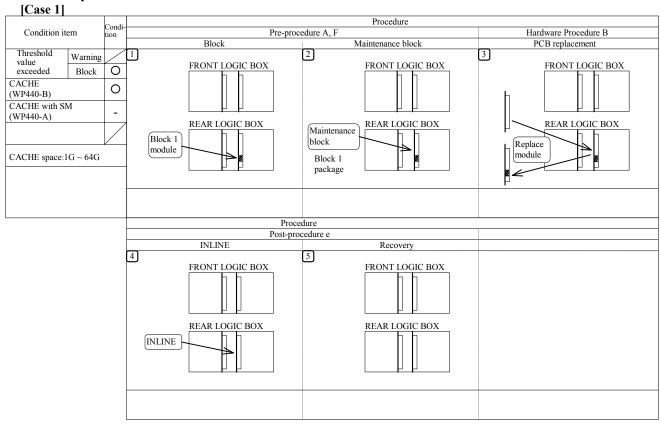

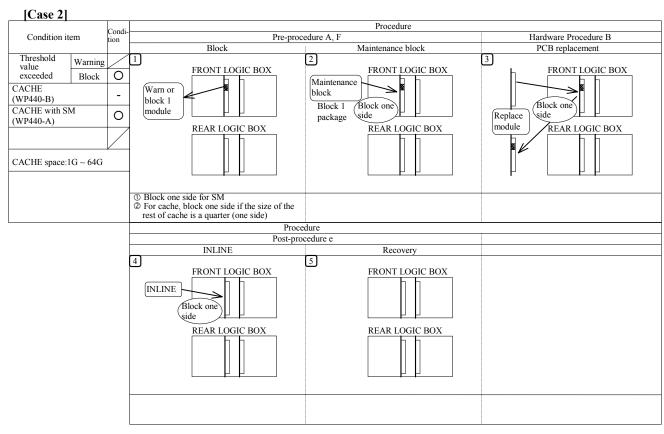

REV.0 Jun	.2001				
-----------	-------	--	--	--	--

#### 1.4 How to Interpret the Hot Replace Procedure

[In case of replacement when SIM was reported]

- Search a work ID which coincides with the work ID corresponding to SIM ACC(FPC) (refer to FPC list on page ACC04-10) from Parts Replacement Process Table on page REP01-150. Search a work ID corresponding to the pertinent condition if "Condition Item" is described in Parts Replacement Process Table.
- ② If the work ID is found,
  - Take actions according to the SVP pre-procedure, hardware procedure, SVP post-procedure number that match the work ID.

If no work ID is found.

- •Search a work ID corresponding to SIM ACC(FPC, and error details) from Parts Replacement Process Table on page REP01-150.
- Take actions according to the SVP pre-procedure, hardware procedure, SVP post-procedure number that match the work ID.

Note: See page REP01-130 for the procedure for searching a work ID to replace a drive. When replacing a drive, be sure to see page REP01-110 and REP01-120.

[In case of replacement when SIM was not reported]

- ① Search a work ID corresponding to the part to be replaced from Parts Replacement Process Table on page REP01-150.
- ② Take actions according to the SVP pre-procedure, hardware procedure, SVP post-procedure number that match the work ID.

Note:	See page REP01-130 for the procedure for searching the work ID to replace a drive.
	When replacing a drive, be sure to see page REP01-110 and REP01-120.

-----<Example>-----

Condition to replace

SIM was reported

Work ID corresponding to SIM ACC FPC is RCA1

\* Search an applicable Work ID identified by shaded area in the following sample of Parts Replacement Process Table under the above conditions.

#### <CACHE>

Work ID	Part name	Procedure			Replacing time
		SVP re-procedure	Hardware procedure	SVP post-procedure	
		re-procedure	procedure	post-procedure	
RCA1	CACHE with SM (WP440-A)	Pre A, pre F	Hardware B	Post e	15 minutes
RCA2					

Copyright ©2001, Hitachi, Ltd.
--------------------------------

REV.0 Jun.2001			
----------------	--	--	--

#### PROCEDURE BEFORE PDEV EXCHANGE AND CORRECTION COPY


Instructions before blocking and exchanging PDEV with a drive failure error is listed below.


When exchanging unblocked PDEV, redundancy in the ECC group is lost. Therefor, during PDEV exchange, the other PDEV in the same ECC group is fenced by a drive failure error, all the LDEV in the ECC group is fenced. Accordingly, to prevent the above problem from occurring, the status of PDEV. When there is a PDEV in the same ECC group having more drive failure errors than the exchanging PDEV exists, replace the PDEV with highest drive failure errors.

Before PDEV exchange, following items are checked.

#	Items checked	Procedure
1	Error Count	"Threshold Counter Display" (See SVP02-460)
2	ORM Over Rate	"ORM Over Rate HDD# Display" (See SVP02-290)
3	Write Error	"Pinned Track Display" (See SVP02-940)

#### PROCEDURE BEFORE PDEV EXCHANGE and CORRECTION COPY.

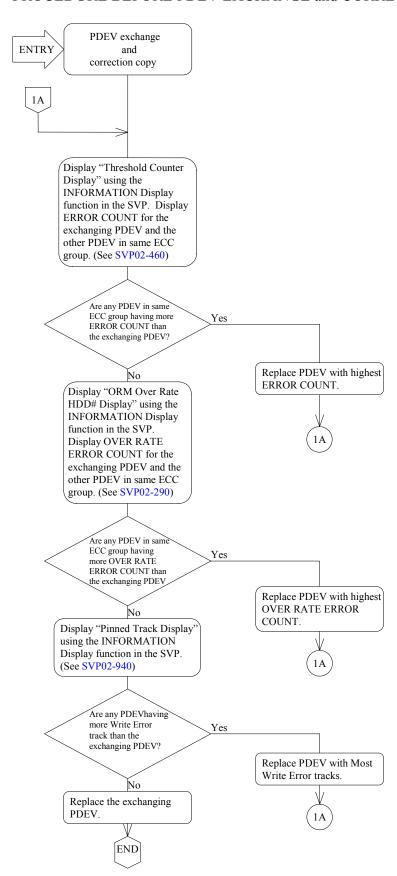

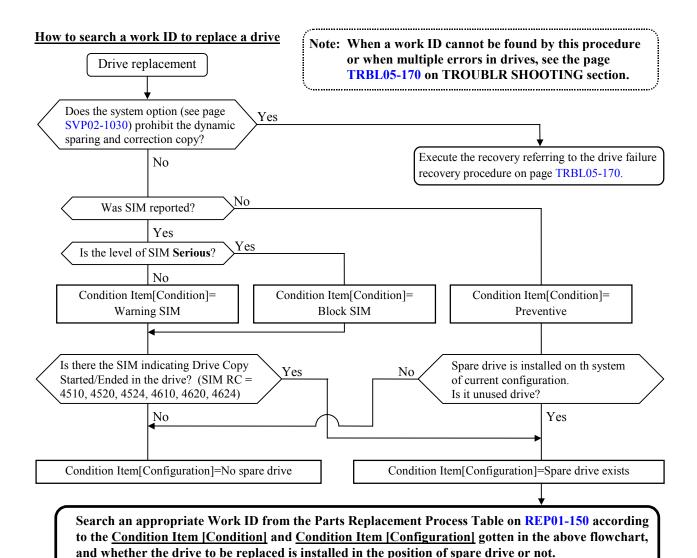

REV.1	Jun.2001	Feb.2002				
-------	----------	----------	--	--	--	--

- SIM was reported.
- Level of the SIM is not "Serious". = Condition Item[Condition] is "Warning SIM".
- There is the SIM that RC is 4510 in the drive. = Condition Item[Configuration] is "Unused spare drive exists".
- The drive to be replaced is not a spare drive. = "Data Drive"
- \* Under the above conditions, the shaded area is searched from Parts Replacement Process Table. Therefore, in this example Work ID should be RDK1.

<Data Drive, Spare Drive>

Work ID	Parts Name	Condition Item				Procedure			Reference information Image of replacement		
	,		Condition		Configu-	SVP	Hardware	SVP		Outline	Case
					ration	pre-procedure	procedure	post-procedure			
		Fail	ure	Preven-	Unused						Refer to "1.2
		Warning	Block	tive	spare						Concept of Drive
		SIM	SIM		drive						Maintenance" on
											REP01-20.
RDK1	Data Drive	×	-	-	Yes	Pre A, Pre B	Hard A	Post a		Drive replacement ~	Case 1
						*1	*1	*1		Copy back	
RDK2	Data Drive	-	×	-	Yes						

REV.0 Jun.2001			
----------------	--	--	--

#### 1.5 Parts Replacement Process Table

<Data Drive, Spare Drive>

Work	Parts Name		Condit	ion Item			Procedure	Note 1	Reference information		n	
ID		(	Conditio	n	Configu -ration	SVP pre-	Hardware procedure	SVP post-	Replacing time	Outline	Case Note 2	
		Fail Warning SIM	ure Block SIM	Preven- tive	Unused Spare drive	procedure		procedure	Note 3			
RDK1	Data Drive Note 4	×	-	-	Yes	Pre A, Pre B Note 1	Hardware A Note 1	Post a, Post z Note 1	20 min	Drive replace ~ Copy back	Case1	
RDK2	Data Drive Note 4	-	×	1	Yes	Pre A, Pre B Note 1	Hardware A Note 1	Post a, Post z Note 1	20 min	Drive replace ~ Copy back	Case 2	
RDK3	Data Drive Note 4	-	-	×	Yes	Pre A, Pre C, Pre B Note 1	Hardware A Note 1	Post a, Post z Note 1	Copy to Spare drive ~ Drive replace ~ Copy back		Case 14	
RDK4	Data Drive Note 4,7	×	-	-	No	Pre A, Pre D Note 1	Hardware A Note 1	Post b, Post z Note 1	20 min	Drive replace ~ Correction copy	Case 3	
RDK5	Data Drive Note 4,7	-	×	-	No	Pre A, Pre D Note 1	Hardware A Note 1	Post b, Post z Note 1	1 1		Case 4	
RDK6	Data Drive Note 4,7	-	-	×	No	Pre A, Pre D Note 1	Hardware A Note 1	Post b, Post z Note 1			Case 15	
RDK7 Note 5 Note 6	Data Drive Note 4	Note 5		e Note 5			Pre A, Pre E Note 1	Hardware A Note 1	Post c, Post z Note 1		LDEV formatting after replacing all the HDDs blocked in a parity group Note 6	Case 13
RDK8	Spare Drive Note 4			-		Pre A, Pre D Note 1	Hardware A Note 1	Post d, Post z Note 1	20 min	Spare drive replace	Case 12	

- Note 1) Refer to REP01-190
- Note 2) Refer to REP01-20
- Note 3) This time does not include copy back time of data in HDD.
- Note 4) Parts Name is indicates attribute of a drive.
  - Data Drive: The drive is installed in the position for a drive except spare drive (Data Drive).
  - Spare Drive: The drive is installed in the position for a spare drive.
- Note 5) RDK7 is a Work ID for a work which is applicable to a case that two or more drives in a same parity group are blocked.
  - When the procedures instructed by RDK7 are executed, data will be lost. Ask the technical support center about the appropriateness of the operation.
- Note 6) Confirm the parity group and the LDEV No. corresponding to the HDD through the SVP STATUS. See page SVP03-130 for the procedure for referring to SVP STATUS
- Note 7) See "PROCEDURE BEFORE PDEV EXCHANGE AND CORRECTION COPY" (REP01-110).

Note: If a Work ID cannot be found or if multiple drive error is occurring, see page TRBL05-170 on TROUBLE SHOOTING section.

	Copyright	©2001,2002,	Hitachi.	Ltd.
--	-----------	-------------	----------	------

REV.2 Jun.20	1 Feb.2002	Jun.2002			
--------------	------------	----------	--	--	--

#### <Cache>

			*2		
Work ID	Part Name	SVP	Hardware	SVP	Replacing
		Pre-procedure	procedure	post-procedure	Time
RCA1	CACHE (with SM)	Pre A, Pre F	Hardware B	Post e, Post z	15 min
	(WP490-A)				

<sup>\*1</sup> Refer to REP01-190

Note: Cache PCB Exchange for preventive cause cache close.

Therefore subsystem ability may fall.

< Channel Adapter, Disk Adapter, FSW, and CARB Switch>

	•	-	Procedure	*1	
Work ID	Parts Name	SVP	Hardware	SVP	Replacing
		Pre-procedure	procedure	Post-procedure	Time
RCH1	Serial CHA	Pre A, Pre H	Hardware C	Post f, Post z	20 min
RCH5	Fibre CHA	Pre A, Pre H	Hardware D	Post f, Post z	20 min
RCH6	MF Fibre CHA	Pre A, Pre H	Hardware E	Post f, Post z	20 min
RDA1	DKA	Pre A, Pre H	Hardware F	Post f, Post z	20 min
RFS1	FSW	Pre A, Pre L	Hardware T20	Post j, Post z	13 min
RCS1	CSW	Pre A, Pre M	Hardware G	Post k, Post z	13 min

<sup>\*1</sup> Refer to REP01-190

If a failure occurs in replacing a channel adaptor or a disk adaptor, see "Error Recovery Procedure during CHA/DKA replacement" (TRBL05-100).

If a failure occurs in replacing a CARB Switch, see "Recovery procedure when CSW PCB replacement failed" (TRBL05-560).

Copyright ©2001,2002, I	Hitachi, Lt	d.
-------------------------	-------------	----

REV.2	Jun.2001 Feb.2002	Jun.2002			
-------	-------------------	----------	--	--	--

<sup>\*2</sup> This time does not include destaging time

<DKC, special P/K, Fan, Others>

Work	Parts Name	SVP	Hardware	SVP	Replacing
ID		pre-procedure	procedure	post-procedure	Time
RT1	DKC Panel	Pre A, Pre T1	Hardware T1	Post t1, Post z	16 min
RT4	EPO SW	Pre A, Pre T1	Hardware T2	Post t1, Post z	12 min
RT5	DKCMN	Pre A, Pre T1	Hardware T3	Post t1, Post z	22 min
RT6	PCI CON Note 2)	Pre A, Pre T1	Hardware T4	Post t1, Post z	16 min
RT8	Fan assembly(DKC)	Pre A, Pre T3	Hardware T5	Post t3, Post z	8 min
RT9	Thermostat assembly	Pre A, Pre T3	Hardware T6	Post t3, Post z	8 min
RT10	SVP/Flash Memory Card	Pre A, Pre T1 Note 3)	Hardware T7	Post t1	40 min
		Pre A, Pre T5 Note 4)	Hardware T7	Post t5, Post z	60 min
RT11	SSVP	Pre A, Pre T1	Hardware T8	Post t1, Post z	29 min
RT14	Battery Box	Pre A, Pre T3	Hardware T11	Post t3, Post z	11 min
RT15	BAT CTR	Pre A, Pre T3	Hardware T12	Post t3, Post z	8 min
RT17	RS CON	Pre A, Pre T1	Hardware T19	Post t1, Post z	8 min
RT18	Flash Memory Card	Pre A, Pre T1	Hardware T7	Post t1, Post z	15 min
RT35	AC BOX-0, AC BOX-1 (Single Phase/50A Model)	Pre A, Pre T4	Hardware T21	Post t4, Post z	28 min
RT36	AC BOX-0, AC BOX-1 (3 Phase/30A Model)	Pre A, Pre T4	Hardware T21	Post t4, Post z	28 min
RT16	SVPPS	Pre A, Pre T3	Hardware T23	Post t3, Post z	8 min
RT38	HUB Box	Pre A, Pre T1	Hardware T25	Post t1, Post z	20 min
RT40	SVPPS Box Note 4)	Pre A, Pre T1	Hardware T26	Post t1, Post z	8 min
RT6	UPS CON	Pre A, Pre T1	Hardware T27	Post t1, Post z	16 min
	AC BOX-0, AC BOX-1 (Single Phase/30A Model)	Pre A, Pre T1	Hardware T21	Post t4	

- Note 1) Refer to REP01-190
- Note 2) All connected devices to DKC465I are powered off by EPO signal of PCI when the PCI CON PCB is removed.
  - Prevent the trouble for connected devices from EPO signal.
- Note 3) When SVP is not able to operate, start from Hardware procedure. (When SVP High Reliability Kit is not installed.)
- Note 4) Valid when SVP High Reliability Kit is installed.

## <DKC Power Supply>

		Procedure Note 1)			
		SVP	Hardware	SVP	Replacing
Work ID	Parts Name	pre-procedure	procedure	post-procedure	Time
RT20	SW PS(LOGIC,5/3V)	Pre A, Pre T3	Hardware T13	Post t3, Post z	
RT23	SW PS(LOGIC,Sub PS)	Pre A, Pre T3	Hardware T13	Post t3, Post z	
RT26	SW PS(LOGIC,3.3V)	Pre A, Pre T3	Hardware T13	Post t3, Post z	

Note 1) Refer to REP01-190.

#### <DKU, Special P/K, Power Supply, Fan>

Work ID Parts Name		SVP	Hardware	SVP	Replacing
		pre-procedure	procedure	post-procedure	Time
RT37	JMP	Pre A, Pre T4	Hardware T24	Post t4, Post z	10 min
RT30	SW PS(DKU Multi)	Pre A, Pre T4 Note 2)	Hardware T15	Post t4, Post z	10 min
RT31	Fan assembly(DKU)	Pre A, Pre T4	Hardware T16	Post t4, Post z	5 min
	Tan assumery (B110)	Note 2)	11010,,010 110	2 350 0 1, 1 050 2	, , , , , , , , , , , , , , , , , , ,

Note 1) Refer to REP01-190.

Note 2) When SVP is not able to operate, start from Hardware procedure.

REV.2 Jun.	2001 Apr.2002	Jun.2002			
------------	---------------	----------	--	--	--

#### 1.6 Procedure contents table

<b>SVP Pre</b>	GO TO
Pre A	REP02-10
Pre B	REP02-30
Pre C	REP02-90
Pre D	REP02-130
Pre E	REP02-180
Pre F	REP02-240
Pre H	REP02-300
Pre K	REP02-370
Pre L	REP02-410
Pre M	REP02-460
Pre T1	REP02-510
Pre T3	REP02-660
Pre T4	REP02-750
Pre T5	REP02-820
Pre V	REP02-880

	GO TO	
Procedure	Parts Name	
Hardware A	HDD Canister	REP03-10
Hardware B	Cache Memory PCB	REP03-50
Hardware C	Serial CHA	REP03-80
Hardware D	Fibre CHA	REP03-110
Hardware E	Mainframe Fibre CHA	REP03-140
Hardware F	DKA	REP03-170
Hardware G	CSW	REP03-200
Hardware T1	DKC Panel	REP03-230
Hardware T2	EPO Switch	REP03-280
Hardware T3	DKCMN	REP03-330
Hardware T4	PCI CON	REP03-360
Hardware T5	Fan Assembly(DKC)	REP03-410
Hardware T6	Thermostat Assembly	REP03-430
Hardware T7	• SVP	REP03-450
	Flash Memory Card	
	Additional SVP Memory	
Hardware T8	SSVP	REP03-550
Hardware T11	Battery Box	REP03-570
Hardware T12	BAT CTR	REP03-600
Hardware T13	Power Supply(DKC)	REP03-620
Hardware T15	Power Supply(DKU)	REP03-660
Hardware T16	HDD Fan Assembly	REP03-690
Hardware T19	RS CON	REP03-710
Hardware T20	FSW	REP03-730
Hardware T21	AC BOX (Single Phase/50A)	REP03-750
	AC BOX (3 Phase/30A)	
	AC BOX (Single Phase/30A)	
Hardware T23	SVPPS	REP03-880
Hardware T24	JMP	REP03-910
Hardware T25	HUB Box	REP03-930
Hardware T26	SVPPS Box	REP03-950
Hardware T27	UPS CON	REP03-970

<b>SVP Post</b>	GO TO
Post a	REP04-10
Post b	REP04-50
Post c	REP04-90
Post d	REP04-150
Post e	REP04-180
Post f	REP04-210
Post i	REP04-240
Post j	REP04-270
Post k	REP04-300
Post t1	REP04-320
Post t3	REP04-900
Post t4	REP04-1000
Post t5	REP04-1100
Post u	REP04-1360
Post z	REP04-1400

## 1.7 MAINTENANCE outline

	) How				

① The status information is displayed on the SVP screen is not on a realtime basis. It reflects the state that was established.

REV.0 Jun.2001			
----------------	--	--	--

# 1.8 Availability of the online maintenance when HRC/HORC is used

Component	Maintenance	Condition	HRC path established		During initial copy		After completing initial copy		Suspend	
	Type		MCU	RCU	MCU	RCU	MCU	RCU	MCU	RCU
Logical	Blockade	_	×	×	SVP2031W	SVP2034W	SVP2031W	SVP2034W	SVP2031W	SVP2034W
Device	Recovery		×	×	SVP2031W	SVP2034W	SVP2031W	SVP2034W	SVP2031W	SVP2034W
	Format	_	×	×	SVP2031W	SVP2034W	SVP2031W	SVP2034W	SVP2031W	SVP2034W
	Verify		×	×	×	×	×	×	×	×
HDD canister	Replace		×	×	×	×	×	×	×	×
Cache PCB	Replace	_	×	×	SVP2059W	SVP2079W	× (*)	×	×	×
CHE or CHF	Replace	With Alternate path.	×	×	×	SVP2038W	×	SVP2038W	×	SVP2038W
		Without Alternate path.	×	×	SVP2073W	SVP2038W	SVP2074W	SVP2038W	×	SVP2038W
DKA	Replace		×	×	×	×	×	×	×	×
CSW PCB	Replace		×	×	×	×	×	×	×	×
DKC	Replace	With Alternate path.	×	×	SVP2059W	SVP2079W	×	SVP2038W	×	SVP2038W
		Without Alternate path.	×	×	SVP2059W	SVP2079W	SVP2074W	SVP2038W	×	SVP2038W

Component	Maintenance	Condition	Suspe	ending	Dele	eting
	Туре		MCU	RCU	MCU	RCU
Logical	Blockade	_	SVP2031W	SVP2034W	SVP2031W	SVP2034W
Device	Recovery	_	SVP2031W	SVP2034W	SVP2031W	SVP2034W
	Format		SVP2031W	SVP2034W	SVP2031W	SVP2034W
	Verify	_	×	×	×	×
HDD canister	Replace	_	×	×	×	×
CACHE	Replace	_	× (*)	×	× (*)	×
CHE or CHF	Replace	With Alternate path.	×	SVP2038W	×	SVP2038W
		Without Alternate path.	SVP2075W	SVP2038W	SVP2075W	SVP2038W
DKA	Replace	_	×	×	×	×
CSW PCB	Replace	_	×	×	×	×
DKC	Replace	With Alternate path.	×	SVP2038W	×	SVP2038W
		Without Alternate path.	SVP2075W	SVP2038W	SVP2075W	SVP2038W

REV.0 Jun.20	001				
--------------	-----	--	--	--	--

× : Maintenance is available.

SVPXXXXW: Maintenance is not available based on the specification. Refer to SVP-MSG SECTION.

Note.1 About replacement of CHE in the RCU side

If the CHE that will be replaced is connected to a path, from MCU please confirm that the Path is deleted from MCU.

After replacement, please add the Path.

The pair can be suspended if the ESTPAIR or paircreate (pairresync) command is issued during the HDD Canister or the Cache PCB replacement. Please ask your customer before the online maintenance operation.

Refer to "8.3.5 Procedures for online microprogram exchange and CHS/CHF replacement using alternate path" (OPEN08-60).

\* : For HRC ASYNC Pairs, a maintenance with the cache blockage is recommended to operate with capacities of Side file and Write Pending Data being 20% below. If the above maintenance is Performed with high capacities of side file and Write Pending Data, the operation will take long and way cause impact such as MIH occurrence on the host operation.

Besides, in the case of cache de-install operation, you must suspend ASYNC HRC pairs by RMC (SVP) before operation regardless of the capacities of Side file and Write Pending Data. If you don't suspend the ASYNC pairs as above, available cache capacity will decrease to suspend the pairs.

Refer to "Monitoring" in the SVP SECTION for the side file monitor.

Copyright ©2001,2002, Hitachi, Ltd	Cor	ovriaht	©2001	.2002.	Hitachi.	Ltd.
------------------------------------	-----	---------	-------	--------	----------	------

REV.1 Jun.2001 Feb	.2002	
--------------------	-------	--

#### 1.9 Availability of the online maintenance when HODM is used

Component	Maintenance	Condition	HODN	A path	During in	itial copy	Waiting	to erased	Susp	end
	Type		MCU	RCU	MCU	RCU	MCU	RCU	MCU	RCU
Logical	Blocade	_	×		SVP2031W		SVP2031W		SVP2031W	
Device	Recovery	_	×		SVP2031W		SVP2031W		SVP2031W	
	Format	_	×		SVP2031W		SVP2031W		SVP2031W	
	Verify	_	×		×		×		×	
HDD canister	Replace	_	×		SVP2059W		×		×	
Cache PCB	Replace	_	×		SVP0259W		×		×	
СНЕ	Replace	With Alternate path.	×		×		×		×	
		Without Alternate path.	×		SVP2076W		SVP2078W		SVP2077W	
CHT	Replace	_	×		×		×		×	
DKA	Replace	_	×		×		×		×	
CSW PCB	Replace	_	×		×		×		×	

Component	Maintenance	Condition	During R-Vol Erasing		Erasing Error	
	Туре		MCU	RCU	MCU	RCU
Logical	Blocade	_	SVP2031W		SVP2031W	
Device	Recovery	_	SVP2031W		SVP2031W	
	Format	_	SVP2031W		SVP2031W	
	Verify	_	×		×	
HDD canister	Replace	_	×		×	
Cache PCB	Replace	_	×		×	
СНЕ	Replace	With Alternate path.	×		×	
		Without Alternate path.	SVP2078W		SVP2078W	
CHT	Replace	_	×		×	
DKA	Replace	_	×		×	
CSW PCB	Replace		×		×	

× : Maintenance is available.

SVPXXXXW: Maintenance is not available based on the specification. Refer to SVP-MSG SECTION.

Note.1 About replacement of CHE in the RCU side

If the CHE to be replaced is connected to a path, please confirm that the Path is deleted from MCU.

After the replacement, please reconnect the path.

Refer to "8.3.5 Procedures for online microprogram exchange and CHS/CHF replacement using alternate path" (OPEN08-60).

	Copyright	©2001	.2002.	Hitachi.	Ltd.
--	-----------	-------	--------	----------	------

REV.1 Jun.2001	Feb.2002				
----------------	----------	--	--	--	--

# 1.10 Availability of the online maintenance when HMRCF/HOMRCF is used

Component	Maintenance Type	Condition	Reserve- Volume		/Resync/ END	Dup	olex	Sp	olit	Susp	pend
				S-VOL/ P-VOL	T-VOL/ S-VOL	S-VOL/ P-VOL	T-VOL/ S-VOL	S-VOL/ P-VOL	T-VOL/ S-VOL	S-VOL/ P-VOL	T-VOL/ S-VOL
Logical	Blockade	_	SVP2484W	SVP2483W	SVP2485W	SVP2483W	SVP2485W	SVP2483W	SVP2485W	>	<
Device	Restore	_	SVP2484W	SVP2483W	SVP2485W	SVP2483W	SVP2485W	SVP2483W	SVP2485W	>	<
	Format	_	SVP2484W	SVP2483W	SVP2485W	SVP2483W	SVP2485W	SVP2483W	SVP2485W	>	<
	Verify	_	×	>	<	>	<	>	<	>	<
HDD	Replace	_	×	>	<	>	<	>	<	>	<
canister	Dynamic Sparing	_	×	SVP2	486W	>	<	>	<	>	<
	Correction Copy	_	×	SVP2	486W	>	<	>	<	>	<
Cache PCB	Replace	_	×	>	<	>	<	>	<	>	<
СНА	Replace	_	×	>	<	>	<	>	<	>	<
DKA	Replace	_	×	>	<	>	<	>	<	>	<
LTM PCB	Replace	_	×	>	<	>	<	>	<	>	<

REV.1	Jun.2001 Feb.2002			
-------	-------------------	--	--	--

#### 1.11 Availability of the online maintenance when HXRC is used

Component	Maintenance Type	During initial copy		Estab	lished	Suspend	
		Primary	Secondary	Primary	Secondary	Primary	Secondary
Logical	Blockade	**	**	**	**	**	**
Device	Recovery	**	**	**	**	**	**
	Format	**	**	**	**	**	**
	Verify	X	X	X	X	X	X
HDD	Replace	X	X	X	X	X	X
canister							
Cache PCB	Replace	*	X	*	X	*	X
CHA	Replace	X	X	X	X	X	X
DKA	Replace	X	X	X	X	X	X
LTM PCB	Replace	X	X	X	X	X	X

x: Maintenance is available

If the maintenance operation must be done while HXRC is being used, you must confirm that the usage of Sidefile monitor is less than 20% of total Cache capacity before you start the maintenance operation. Only when the usage of Sidefile monitor is less than 20% of total Cache capacity, you can proceed the maintenance operation.

Refer to "Monitoring" in the SVP SECTION about Sidefile monitor.

Select the [Information] icon in the 'SVP' window.

Next select the [Monitor] menu in the 'Information' window and select [start....].

Next select the 'Sideflie' box in the 'Item' menu in the 'Monitoring' window and select [OK].

\*\*: When a maintenance operation is needed while HXRC is being used, HXRC should be stopped before the maintenance operation.

Copyright ©2001	, Hitachi,	Ltd.
-----------------	------------	------

REV.0 Jun.2001			
----------------	--	--	--

<sup>\*:</sup> When a maintenance operation is needed while HXRC is being used, I/O's for HXRC pair volumes or HXRC itself should be stopped before the maintenance operation.

# [PRE-PROCEDURE A]

#### - OUTLINE -

- ① Display Initial Screen.
- ② Change SVP operation mode.
- 3 Open Maintenance window.


REV.0 Jun.2001		
----------------	--	--

1. <Initial screen>


<Operation mode change> Change the mode to [Modify Mode]. Select (CL) [Maintenance].

<Maintenance window> The 'Maintenance' window is displayed.



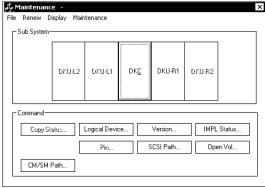

(Single Cabinet Model)

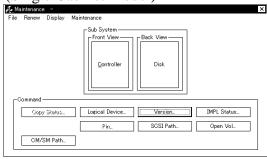

# [PRE-PROCEDURE B]

#### - OUTLINE -

- ① Select drive (status check).
- ② Check progress of copy processing
- ③ Specify Replacement.
- ④ Place HDD into unpluggable state.

REV.0 Jun.20	001				
--------------	-----	--	--	--	--

#### 1. <Maintenance window>


(Multi Cabinet Model)

In the 'Maintenance' window, check and select (CL) [DKU-Rn] or [DKU-Ln] to be replaced.


(Single Cabinet Model)

In the 'Maintenance' window, check and select (CL) [Disk] to be replaced.

#### (Multi Cabinet Model)

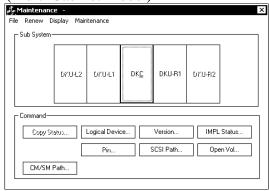

(Single Cabinet Model)

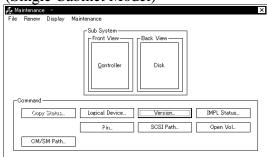

#### 2. <Select HDU-BOX>

(Multi Cabinet Model)


Check and select (CL) [HDU-Rnn] or [HDU-Lnn] to be replaced.

(Single Cabinet Model)


Check and select (CL) [HDU-n] to be replaced.

Selecting (CL) [Close] returns you to step 1.

#### (Multi Cabinet Model)

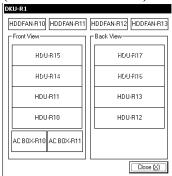

#### (Single Cabinet Model)

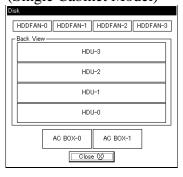

#### 3. <Select HDD>

(Multi Cabinet Model [DKU455])

Check and select (CL) [nn] to be replaced.

(Multi Cabinet Model [DKU405])


Check and select (CL) [Rnnn] or [Lnnn] to be replaced.

(Single Cabinet Model)


Check and select (CL) [nn] to be replaced.

Selecting (CL) [Close] returns you to step 2.


#### (Multi Cabinet Model [DKU455])

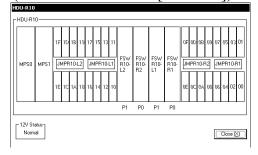

#### (Multi Cabinet Model [DKU405])

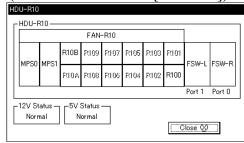


#### (Single Cabinet Model)

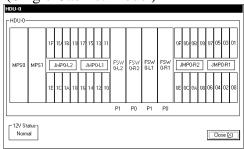

- 4. <Specify replacement on HDD> Check status display.
  - ◆ In the case of a warning SIM, "NORMAL" is displayed.
  - ◆ In the case of a blocking SIM, "FAILED" is displayed.

Select (CL) [Replace].

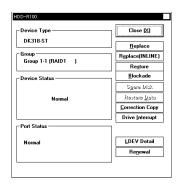

#### 5. < Check progress of copy processing>

(Multi Cabinet Model)

Check the status (other than preventive) of [HDD-nn] to be replaced from [HDU-Rnn] or [HDU-Lnn].

(Single Cabinet Model)

Check the status of the [HDD-nn] to be replaced in the [HDU-n] window (in the case of other than preventive maintenance).

#### [Warning threshold value]

- \* [RECOVERING] :Copy processing is in progress.
  - [FAILED] (S/D set to S): End of copy processing.

[Block threshold value]

- \* [FAILED] (S/D set to D): Copy processing is in progress.
  - [FAILED] (S/D set to S): End of copy processing.
- 6. <Check progress of copy processing>

See SVP section. (SVP03-160)

After copy processing is complete, perform the replacement procedure.

If any other message than the list is displayed, see the SVP Message Section (SVPMSG00-00).

7. <Checking the P-DEV status> "Checking..." is displayed.

When "You can restore the replaced physical device by restoring logical devices. Do you continue to this operation?" is displayed, PDEV is automatically recovered by recovering LDEV.




When you want to continue PDEV Replace, please select (CL) [Yes]. When you want to recover PDEV by recovering LDEV, please select (CL) [No] and see Restore the Logical Device (SVP02-840).

## 8. <P-DEV blocking>

# **A** CAUTION

When the screen appears prompting the operator to input a password to prevent multiple maintenance or for executing a pin check, contact the technical support center to ask for instructions.

Select (CL) [Yes] in response to "Are you sure you want to replace the physical device?".

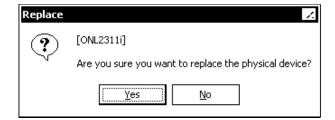

9. <Blocking the Physical device> "Blocking..." is displayed.

10. <Spin down the Physical device>

"Spinning down..." is displayed.

## 11. <Check shut down LED>


# A CAUTION

If a wrong HDD is removed, a data loss or a system down may occur.

Check the shut down LED on the HDD to be replaced.

If LED is off, reconfirm the location of the HDD to be replaced with LOCATION SECTION before replacing the hardware.

12. <Confirm Replacement.>
Select (CL) [OK] in response to "Please replace the physical device, and then select OK." after the unit is replaced.

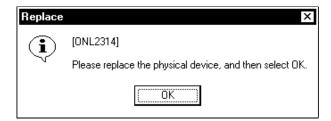

13. <Replace HDU>
Replace HDU.
See HARDWARE A (REP03-10).

# [PRE-PROCEDURE C]

#### - OUTLINE -

- ① Select drive (status check).
- ② Specify Replacement.
- 3 Save Spare.

#### 1. <Maintenance window>


(Multi Cabinet Model)

In the 'Maintenance' window, check and select (CL) [DKU-Rn] or [DKU-Ln] to be replaced.


(Single Cabinet Model)

In the 'Maintenance' window, select (CL) [Disk].

#### (Multi Cabinet Model)

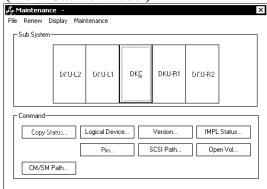

(Single Cabinet Model)

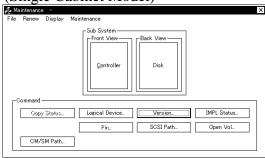

#### 2. <Select HDU-BOX>

(Multi Cabinet Model)


Check and select (CL) [HDU-Rnn] or [HDU-Lnn] to be replaced.

(Single Cabinet Model)

Check and select (CL) [HDU-n] to be replaced.

Selecting (CL) [Close] returns you to step 1.

#### (Multi Cabinet Model)

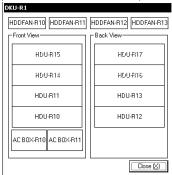

#### (Single Cabinet Model)



REV.1 Jun.2001	Jun.2002				
----------------	----------	--	--	--	--

#### 3. <Select HDD>

(Multi Cabinet Model [DKU455])

Check and select (CL) [nn] to be replaced.

(Multi Cabinet Model [DKU405])


Check and select (CL) [Rnnn] or [Lnnn] to be replaced.

(Single Cabinet Model)


Check and select (CL) [nn] to be replaced.

Selecting (CL) [Close] returns you to step 2.


#### (Multi Cabinet Model [DKU455])

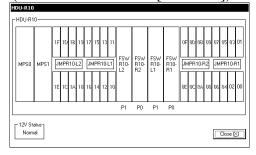

(Multi Cabinet Model [DKU405])

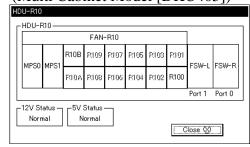


(Single Cabinet Model)

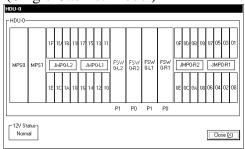

- 4. <Specify replacement on HDD> Check status display.
  - ◆ In the case of a warning SIM, "NORMAL" is displayed.
  - ◆ In the case of a blocking SIM, "FAILED" is displayed.

Select (CL) [Spare Disk].

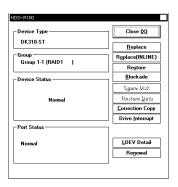

If any other message than the list is displayed, see the SVP Message Section (SVPMSG00-00).


5. <Checking the P-DEV status>



When the screen appears prompting the operator to input a password to prevent multiple maintenance, or for executing a pin check, contact the technical support center to ask for instructions.

"Checking..." is displayed.


6. <Saving the spare>
Select (CL) [Yes] in response to "Are you sure you want to copy data in the physical device to spare?".

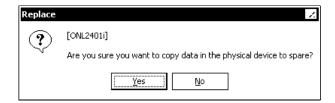

7. <Saving in process>

"Copying..." is displayed.

8. <End of spare saving>
Select (CL) [OK] in response to "Copying data in the physical device to spare has been started.".

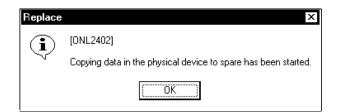

9.

Please execute Pre procedure B after finishing copy. (REP02-30)

REV.0 Jun.2001			
----------------	--	--	--

# [PRE-PROCEDURE D]

#### - OUTLINE -

- ① Select P-DEV (status check).
- ② Specify Replacement.
- ③ Place HDD into unpluggable state.

Copyright ©2001, Hitachi, Ltd.

REV.0 Jun.2001			
----------------	--	--	--

#### 1. <Maintenance window>


(Multi Cabinet Model)

In the 'Maintenance' window, check and select (CL) [DKU-Rn] or [DKU-Ln] to be replaced.


(Single Cabinet Model)

In the 'Maintenance' window, select (CL) [Disk].

#### (Multi Cabinet Model)

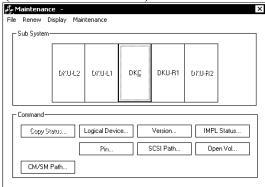

(Single Cabinet Model)

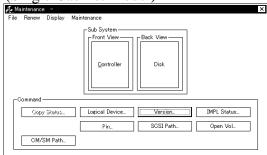

#### 2. <Select HDU-BOX>

(Multi Cabinet Model)


Check and select (CL) [HDU-Rnn] or [HDU-Lnn] to be replaced.

(Single Cabinet Model)

Check and select (CL) [HDU-n] to be replaced.

Selecting [Close] (CL) returns you to step 1.

#### (Multi Cabinet Model)

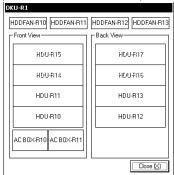

#### (Single Cabinet Model)



REV.1 Jun.2001	Jun.2002				
----------------	----------	--	--	--	--

#### 3. <Select HDD>

(Multi Cabinet Model [DKU455])

Check and select (CL) [nn] to be replaced.

(Multi Cabinet Model [DKU405])


Check and select (CL) [Rnnn] or [Lnnn] to be replaced.

(Single Cabinet Model)


Check and select (CL) [nn] to be replaced.

Selecting (CL) [Close] returns you to step 2.


#### (Multi Cabinet Model [DKU455])

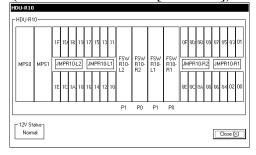

(Multi Cabinet Model [DKU405])

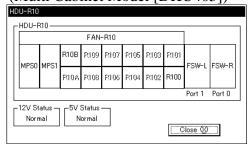

(Single Cabinet Model)

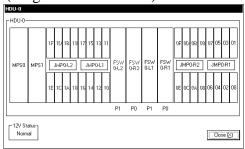

- 4. <Specify replacement on HDD> Check status display.
  - ◆ In the case of a warning SIM, "NORMAL" is displayed.
  - ◆ In the case of a blocking SIM, "FAILED" is displayed.

Select (CL) [Replace].



If any other message than the list is displayed, see the SVP Message Section (SVPMSG00-00).

5. < Checking the P-DEV status & saving the spare>

#### **A** CAUTION

When the screen appears prompting the operator to input a password to prevent multiple maintenance or for executing a pin check, contact the technical support center to ask for instructions.


"Checking..." is displayed.

When "You can restore the replaced physical device by restoring logical devices. Do you continue to this operation?" is displayed, PDEV is automatically recovered by recovering LDEV.



When you want to continue PDEV Replace, please select (CL) [Yes]. When you want to recover PDEV by recovering LDEV, please select (CL) [No] and see Restore the Logical Device (SVP02-840).

6. <P-DEV blocking>
Select (CL) [Yes] in response to "Are you sure you want to replace the physical device?".

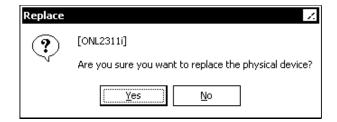

7. <Blocking the Physical device> "Blocking..." is displayed.

8. <Spin down the Physical device> "Spinning down..." is displayed

#### 9. <Check shut down LED>


#### A CAUTION

If a wrong HDD is removed, a data loss or a system down may occur.

Check the shut down LED on the HDD to be replaced.

If LED is off, reconfirm the location of the HDD to be replaced with LOCATION SECTION before replacing the hardware.

10. <Confirmation of replace>
Select (CL) [OK] in response to "Please replace the physical device, and then select OK." after the unit is replaced (Step 11).

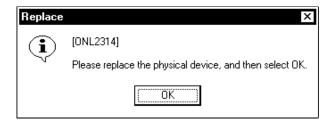

11. <Replace HDD>
Replace HDD.
See HARDWARE A (REP03-10).

## [PRE-PROCEDURE E]

#### — OUTLINE —

- ① Select HDD (status check).
- 2 Specify Replacement.
- 3 Block parity group (enter password).
- Place HDD into unpluggable state.
- ⑤ Replace HDD.
- © Perform steps ② to ⑤ on blocked drives in parity group.

#### **A** CAUTION

This is a special (exceptional) operation that can cause a serious failure such as a system down or a data loss and requires an input of a password. Ask the technical support center about the appropriateness of the operation, and input the password after getting an approval of executing the operation.

Copyright ©2001, Hitachi, Ltd.

REV.0 Jun.200			
---------------	--	--	--

#### 1. <Maintenance window>


(Multi Cabinet Model)

In the 'Maintenance' window, check and select (CL) [DKU-Rn] or [DKU-Ln] to be replaced.


(Single Cabinet Model)

In the 'Maintenance' window, check and select (CL) [Disk] to be replaced.

#### (Multi Cabinet Model)

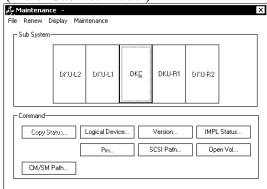

#### (Single Cabinet Model)

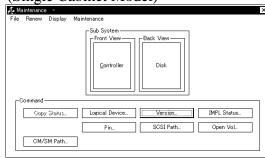

#### 2. <Select HDU-BOX>

(Multi Cabinet Model)


Check and select (CL) [HDU-Rnn] or [HDU-Lnn] to be replaced.

(Single Cabinet Model)


Check and select (CL) [HDU-n] to be replaced.

Selecting [Close] (CL) returns you to step 1.

#### (Multi Cabinet Model)

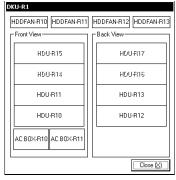

#### (Single Cabinet Model)

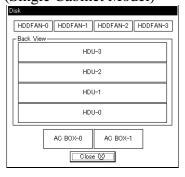

#### 3. <Select HDD>

(Multi Cabinet Model [DKU455])

Check and select (CL) [nn] to be replaced.

(Multi Cabinet Model [DKU405])


Check and select (CL) [Rnnn] or [Lnnn] to be replaced.

(Single Cabinet Model)


Check and select (CL) [nn] to be replaced.

Selecting [Close] (CL) returns you to step 2.


#### (Multi Cabinet Model [DKU455])

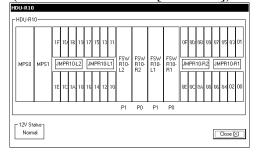

#### (Multi Cabinet Model [DKU405])

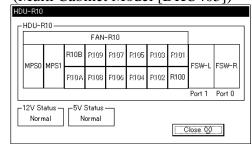


#### (Single Cabinet Model)

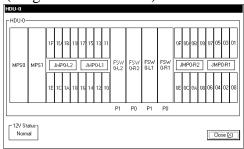

4. <Specify replacement on HDD> Make sure that the status is FAILED.

Select (CL) [Replace].

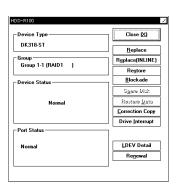

#### 5. <Confirm lost data>

#### **A** CAUTION

Executing this operation may cause a serious error such as a system down or a data loss. Accordingly, confirmation of the appropriateness of the operation and input of a password on the succeeding password input screen is required.

Select (CL) [No] in response to "Redundancy is lost and blocking this part stops subsystem functionality. Do you want to stop this process?"



#### 6. <Enter password>

#### **A** CAUTION

This is a special (exceptional) operation that can cause a serious failure such as a system down or a data loss and requires an input of a password. Ask the technical support center about the appropriateness of the operation, and input the password after getting an approval of executing the operation.

Enter the password in response to "Ask the TSC about the appropriateness of this operation, and enter the password." and select (CL) [OK].

Password is needed for this operation.



If any other message than the list is displayed, see the SVP Message Section (SVPMSG00-00).


7. <Checking the P-DEV status> "Checking..." is displayed.

When "You can restore the replaced physical device by restoring logical devices. Do you continue to this operation?" is displayed, PDEV is automatically recovered by recovering LDEV.



When you want to continue PDEV Replace, please select (CL) [Yes]. When you want to recover PDEV by recovering LDEV, please select (CL) [No] and see Restore the Logical Device (SVP02-840).


8. <P-DEV blocking>
Select (CL) [Yes] in response to "Are you sure you want to replace the physical device?".

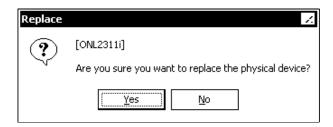

9. <Blocking the Physical device> "Blocking..." is displayed.

10. <Spin down the Physical device> "Spinning down..." is displayed.
The Shut down LED is lit.

11. <Replace HDU>
Select (CL) [OK] in response to "Please replace the physical device, and then select OK." after the unit is replaced.
(See HARDWARE A (REP03-10))

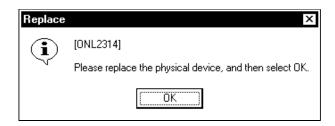

12. <Replace HDD>
Replace HDD.
See HARDWARE A (REP03-10).

Copyright ©2001, Hitachi, Ltd.

REV.0 Jun.20	001				
--------------	-----	--	--	--	--

## [PRE-PROCEDURE F]

#### - OUTLINE -

- ① Select (main platter) cache (status check).
- ② Specify Replacement.
- ③ Place PCB into unpluggable state.

REV.0 Jun.20	001				
--------------	-----	--	--	--	--

1. <Maintenance window>

The 'Maintenance' window is displayed.


(Multi Cabinet Model)

In the 'Maintenance' window, check and select (CL) [DKC] to be replaced.


(Single Cabinet Model)

In the 'Maintenance' window, check and select (CL) [Controller] to be replaced.

(Multi Cabinet Model)

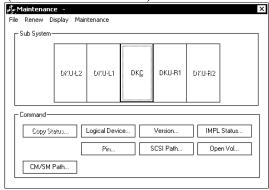

(Single Cabinet Model)

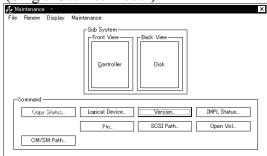

2

(Multi Cabinet Model)


<DKC window>

Select (CL) [Cluster-n] in the 'DKC'.

(Single Cabinet Model)

<Controller window>


Select (CL) [Cluster-n] in the 'Controller'.

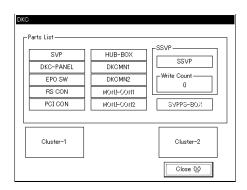


REV.1 Jun.2001	Jun.2002				
----------------	----------	--	--	--	--

3. <Select Part> Select (CL) the appropriate part.


(Multi Cabinet Single Phase Model, Multi Cabinet 3 Phase Model [30A AC BOX])

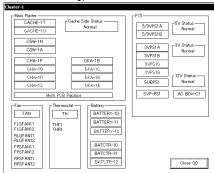

(Multi Cabinet 3 Phase Model [Without 30A AC BOX])

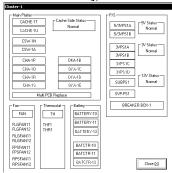

(Single Cabinet Model)

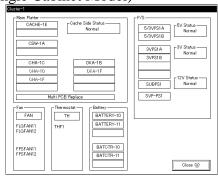

(ex. Cluster-1)


#### 4. <Select Cache>

#### **A** CAUTION

When the screen appears prompting the operator to input a password to prevent multiple maintenance or for executing a pin check, contact the technical support center to ask for instructions.


Check status display.

Select (CL) a cache and select (CL) [Replace].

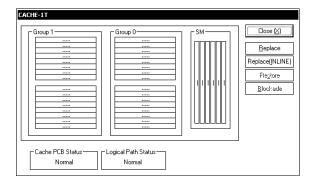

If any other message than the list is displayed, see the SVP Message Section (SVPMSG00-00).


5. <Check the beginning of cache blocking> Select (CL) [Yes] after making sure that the package to be blocked is correct in response to:

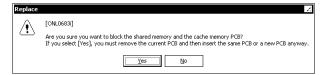

- \* For CACHE (with SM) -- [Go to step 6]
- "Are you sure you want to block the Shared Memory and Cache Memory PCB? If you select [Yes], physically pulling off and putting in of PCB will be unavoidable."
- \* For CACHE ----- [Go to step 6]
- "Are you sure you want to block the cache memory? If you select [Yes] in response to this inquiry, it is required to pull out and reinsert the cache memory PCBA concerned."
- 6. <Cache blocking>
  - "The Cache Memory PCB is being blocked." is displayed.
  - "The Shared Memory PCB is being blocked..." is displayed.

- 7. <Check removal of cache> Select (CL) [Yes] in response to:
  - \* For CACHE (with SM)
  - "Do you want to pull out the Shared Memory and Cache Memory PCB now?"
  - \* For CACHE

"Do you want to pull out the Cache Memory PCB now?"

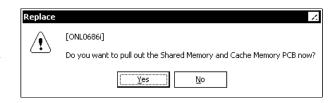

#### 8. <Check shut down LED>

Select (CL)

- \* [Yes] if LED is on
- \* [No] if LED is off

in response to "Is the LED of the target PCB lit?".

When [No] is selected, the same message is displayed again.

Check the LED and then reply to a message.

[ONL0842i]
Is the LED of the target PCB lit?

Yes No

<Forcing shut down LED on>



If the jumper is inserted in the wrong PCB, a system down may be caused.

#### If [No] is selected:

Insert a jumper in response to "Please insert jumper into the target PCB (CACHE-nn), then pull it out without considering the status of the LED".




(Refer REP03-50)

Go to step 9.

#### 9. <Cache Replacement>

"Please replace the PCB (CACHE-nn), and then select OK." is displayed.

(Select (CL) [OK] after replacing the PCB.)

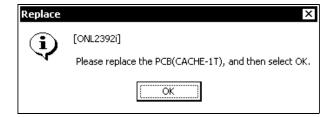

#### 10. <Replace cache PCB>

Replace cache.

For CACHE (with SM) see HARDWARE B (REP03-50)

## [PRE-PROCEDURE H]

#### - OUTLINE -

- ① Select CHA/DKA (status check).
- ② Specify Replacement.
- 3 Place PCB into blocked state.

REV.0 Jun.20	001				
--------------	-----	--	--	--	--

#### 1. <Set path offline>

#### A CAUTION

The path to be placed offline is that connected with the CHA concerned.

Set the path offline from HOST when replacing the CHA by your customer.

### 2. <Maintenance window> The 'Maintenance' window is displayed.

(Multi Cabinet Model)
In the 'Maintenance' window, check and select

(CL) [DKC] to be replaced.

(CL) [Controller] to be replaced.

(Single Cabinet Model)
In the 'Maintenance' window, check and select

# Maintenance File Renew Display Maintenance Sub System DYU-L2 DYU-L1 DKC DKU-R1 DYU-R2

Version.

SCSI Path

Logical Device...


IMPL Status.

Open Vol..

(Single Cabinet Model)

CM/SM Path..

(Multi Cabinet Model)

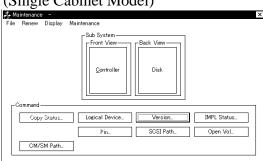

3.

(Multi Cabinet Model)

<DKC window>

Select (CL) [Cluster] in the 'DKC'.

(Single Cabinet Model)

<Controller window>


Select (CL) [Cluster] in the 'Controller'.

SVP	HUB-BOX	] [SSVP
DKC-PANEL	DKCMN1	SSVP
EPO SW	DKCMN2	Write Count —
RS CON	H100-H10M	] [
PCI CON	MONE-CON2	SVPPS-BOX
Cluster-1		Cluster-2


4. <Select CHA/DKA> Select (CL) CHA/DKA.

Selecting (CL) [Close] returns you to step 3.


(Multi Cabinet Single Phase Model, Multi Cabinet 3 Phase Model [30A AC BOX])

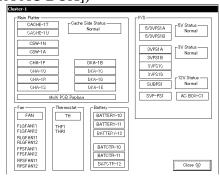

(Multi Cabinet 3 Phase Model [Without 30A AC BOX])

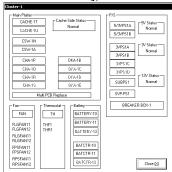

(Single Cabinet Model)

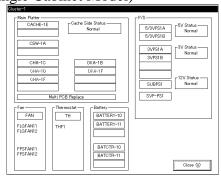

(ex. Cluster-1)

#### 5. <Specify Replacement of CHA/DKA>


#### A CAUTION

When the subsystem is placed online, ask the customer to place it offline. (When the CHA replace)

#### **A** CAUTION

When the screen requests an operator to input a password in order to prevent multiple maintenance contact the technical support center to ask for instructions.

Make sure that the status is WARNING. Select (CL) [Replace].

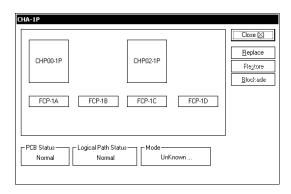

If any other message than the list is displayed, see the SVP Message Section (SVPMSG00-00).

[ONL0574W]

6. <CHA/DKA blocking> Select (CL) [Yes] in response to:



"Are you sure you want to block the CHA? If you select [Yes], physically pulling off and putting in of PCB will be unavoidable." Go to step 7.

\* For DKA

"Are you sure you want to block the DKA? If you select [Yes], physically pulling off and putting in of PCB will be unavoidable."

Go to step 8.



<Confirm Channel Path offline>
 Select (CL) [OK] in response to:
 "Please confirm you have already varied off
 the concerned Channel paths. If OK, please
 press OK."

If Fibre channel adapter is installed: After you confirm that you have stopped the concerned SCSI channel paths, select (CL) [Yes].






8. <Caution message for system down>



Select (CL) [Yes] in response to the message below.

"Automatic subsystem check for error prevention will be performed when blocking target PCB.

Yes = Normal replacement No = Forcible replacement (Possible critical errors)"

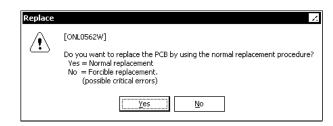


- 9. <CHA/DKA blocking>
  - \* For CHA
  - "The CHA is being blocked..."
  - \* For DKA
  - "The DKA is being blocked..."

#### 10. <Removal of CHA/DKA>

Select (CL) [Yes] in response to:

- \* For CHA
- "Do you want to pull out the CHA now?"
- \* For DKA
- "Do you want to pull out the DKA now?"

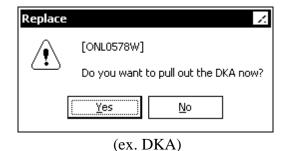


## 11. <Check to see if the shut down LED is lit> Select (CL)

- \* [Yes] if LED is on
- \* [No] if LED is off

in response to "Is the LED of the target PCB lit?". If [No] is selected:

Select in response to "Is the LED of the target PCB lit?" again.

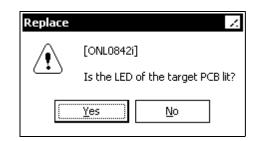


<Forcing shut down LED on>

#### **A** CAUTION

If the jumper is inserted in the wrong PCB, a system down may occur.

#### If [No] is selected twice:


Insert a jumper in response to "Please insert the jumper into the target PCB (CHA-nn/DKA-nn), then pull it out without considering the status of the LED". (Refer REP03-80)

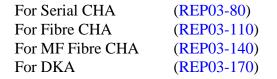



12. <Beginning of CHA/DKA Replacement>
"Please replace the PCB (CHA-nn/DKA-nn),
and then select OK." is displayed. Select
(CL) [OK] after replacing the PCBs.

For Serial CHA Go to (REP03-80)
For Fibre CHA Go to (REP03-110)
For MF Fibre CHA Go to (REP03-140)
For DKA Go to (REP03-170)

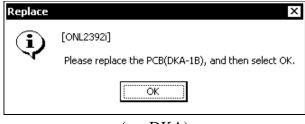

(ex. DKA)

## [PRE-PROCEDURE K]

#### - OUTLINE -

- ① Select drive (status check).
- ② Check progress of copy processing
- ③ Specify Correction Copy
- Save Spare

Copyright ©2001, Hitachi, Ltd.

REV.0 Jun.20	001				
--------------	-----	--	--	--	--

#### 1. <Maintenance window>


(Multi Cabinet Model)

In the 'Maintenance' window, check and select (CL) [DKU-Rn] or [DKU-Ln] to be replaced.


(Single Cabinet Model)

In the 'Maintenance' window, select (CL) [Disk].

#### (Multi Cabinet Model)

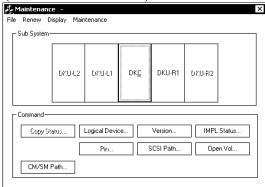

(Single Cabinet Model)

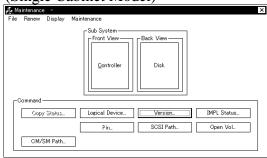

#### 2. <Select HDU-BOX>

(Multi Cabinet Model)


Check and select (CL) [HDU-Rnn] or [HDU-Lnn] to be replaced.

(Single Cabinet Model)


Check and select (CL) [HDU-n] to be replaced.

Selecting (CL) [Close] returns you to step 1.

#### (Multi Cabinet Model)

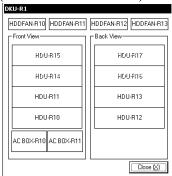

#### (Single Cabinet Model)

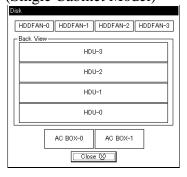

#### 3. <Select HDD>


(Multi Cabinet Model [DKU455]) Check and select [nn] to be replaced.

(Multi Cabinet Model [DKU405]) Check and select [Rnnn] or [Lnnn] to be replaced.


(Single Cabinet Model)
Check and select [nn] to be replaced.

Selecting (CL) [Close] returns you to step 2.


#### (Multi Cabinet Model [DKU455])

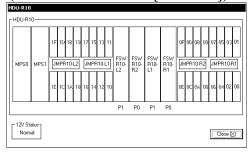

#### (Multi Cabinet Model [DKU405])

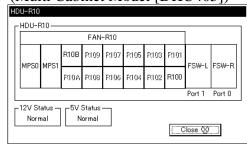


#### (Single Cabinet Model)

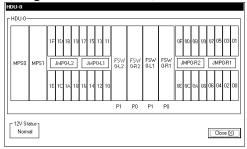

- 4. <Specify replacement on HDD> Check status display.
  - ◆ In the case of a warning SIM, "NORMAL" is displayed.
  - ◆ In the case of a blocking SIM, "FAILED" is displayed.


Select (CL) [Correction Copy].

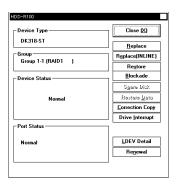

If any other message than the list is displayed, see the SVP Message Section (SVPMSG00-00).

5. <Reading the subsystem configuration data and Checking the P-DEV status> "Checking..." is displayed.

6. <Saving the spare>
Select (CL) [Yes] in response to "Are you sure you want to correct data in the physical device?".

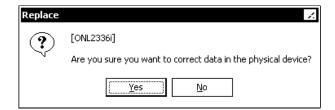

7. <Correction copy in progress> "Correcting..." is displayed.

8. <End of starting correction copy>
Select (CL) [OK] in response to "Correcting data in the physical device has been started.".



# [PRE-PROCEDURE L]

- OUTLINE -

- ① Select FSW.
- ② Specify Replacement.
- 3 Please FSW into unplugable state.

Copyright ©2001, Hitachi, Ltd.

REV.0 Jun.20	001				
--------------	-----	--	--	--	--

#### 1. <Maintenance window>


(Multi Cabinet Model)

In the 'Maintenance' window, check and select (CL) [DKU-Rn] or [DKU-Ln] to be replaced.


(Single Cabinet Model)

In the 'Maintenance' window, check and select (CL) [Disk] to be replaced.

#### (Multi Cabinet Model)

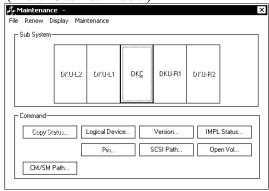

#### (Single Cabinet Model)

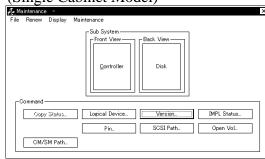

#### 2. <Select HDU-BOX>

(Multi Cabinet Model)


Check and select (CL) [HDU-Rnn] or [HDU-Lnn] to be replaced.

(Single Cabinet Model)


Check and select (CL) [HDU-n] to be replaced.

Selecting (CL) [Close] returns you to step 1.

#### (Multi Cabinet Model)

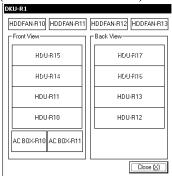

#### (Single Cabinet Model)

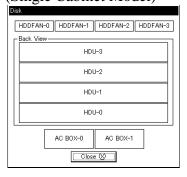


#### 3. <Select FSW>

(Multi Cabinet Model)
Select (CL) [FSWXnn-Xn] to be replaced.


(Single Cabinet Model)
Select (CL) [FSWn-Xn] to be replaced.

Selecting (CL) [Close] returns you to step 2.


## (Multi Cabinet Model [DKU455])

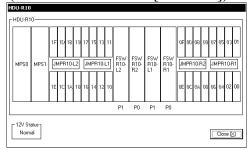

#### (Multi Cabinet Model [DKU405])

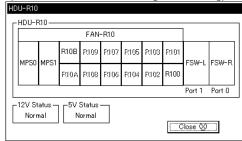

#### (Single Cabinet Model)

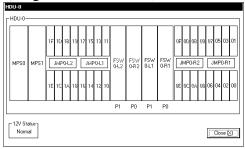


#### 4. <Specify replacement>

#### A CAUTION

When the screen requests an operator to input a password in order to prevent multiple maintenance, contact the technical support center to ask for instructions.


Select (CL) [Execute].

Selecting (CL) [Cancel] returns you to step 3.

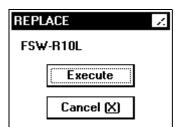

If any other message than the list is displayed, see the SVP Message Section (SVPMSG00-00).

5. <Check beginning of DKP blocking> Select (CL) [Yes] in response to "Are you sure you want to replace the FSW? If you select [Yes], blocking of the DKP will be unavoidable.".

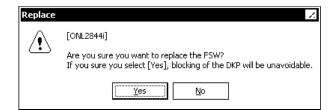


#### 6. <Check system down>

#### A CAUTION

Select (CL) [Yes] in response to the message below.

"Automatic subsystem check for error prevention will be performed when blocking target PCB.

Yes = Normal replacement No = Forcible replacement (Possible critical errors)"

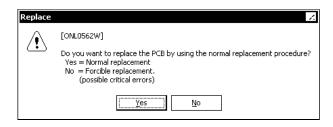

# 7. <Check DKP blocking>

"The DKP is being blocked..." is displayed.

# 8. < Replace FSW >

replace FSW PCB.


"Please replace the FSW, and then select OK. (FSW-nnnn)" or "Please replace the FSW which connected by same Fibre Interface cable, and then select OK. (FSW-nnnn····)" is displayed.

Make sure of the FSW PCB location is displayed, select (CL) the [OK] button after replaced all target FSW PCB.

If the FSW LED is not turned on, please

Refer HARDWARE T20 (REP03-730)

### (A PCB to be replaced)

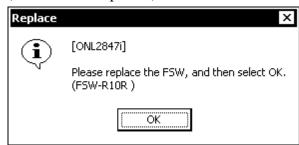

#### (Two or more PCBs to be replaced)



# [PRE-PROCEDURE M]

#### - OUTLINE -

- ① Select CSW (status check).
- ② Specify Replacement.
- 3 Place PCB into blocked state.


REV.0 Jun.20	001				
--------------	-----	--	--	--	--

# 1. <Maintenance window>


(Multi Cabinet Model) In the 'Maintenance' window, check and select (CL) [DKC] to be replaced.

(Single Cabinet Model)
In the 'Maintenance' window, check and select
(CL) [Controller] to be replaced.

#### (Multi Cabinet Model)

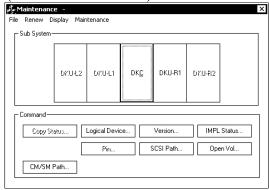

(Single Cabinet Model)

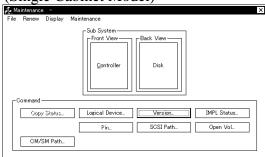

2

(Multi Cabinet Model)


<DKC window>

Select (CL) [Cluster] in the 'DKC'.

(Single Cabinet Model)


<Controller window>

Select (CL) [Cluster] in the 'Controller'.

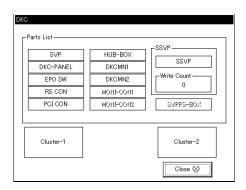


3. <Select CSW>
Select (CL) [CSW]
Selecting (CL) [Close] returns you to step 2.


(Multi Cabinet Single Phase Model, Multi Cabinet 3 Phase Model [30A AC BOX])

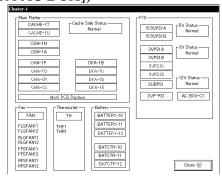

(Multi Cabinet 3 Phase Model [Without 30A AC BOX])

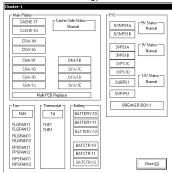

(Single Cabinet Model)

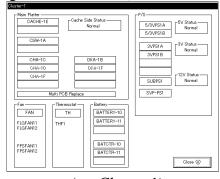


(ex. Cluster-1)

# 4. <Specify replacement>

# A CAUTION

Be sure to operate procedure 5 to 7 within thirty minutes.


Select (CL) [Execute]. Selecting (CL) [Cancel] returns you to step 3.

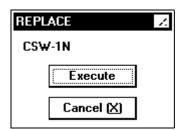

If any other message than the list is displayed, see the SVP Message Section (SVPMSG00-00).

5. <Check CSW blocking> "Blocking the CSW..." is displayed.

- 6. <Check to see if shut down LED is lit> Select (CL)
  - \* [Yes] if the LED is on
  - \* [No] if the LED is off in replace to "Is the LED of the target CSW lit?".

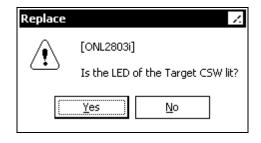

<Forcing shut down LED on>



If the jumper is inserted in the wrong PCB, a system down may be caused.

If [No] is selected twice:

Insert a jumper in response to "Please insert the jumper into the target PCB (CSW-nn), then pull out the target PCB without considering the status of the LED". (Refer REP03-210)



# 7. <Blocking of CSW replacement>

The LED on the operator panel shown in the following table goes out during a period from a pulling off of the CSW to an insertion of the new CSW.

Location of CSW	LED on the operator panel		
to be replaced	Cluster 1	Cluster 2	
CSW-1A	ABCD EFGH JKLM	_	
CSW-2M	_	ABCD EFGH JKLM	


# **A** CAUTION

If you take procedure 5 to 7 operation, the 'ONL0117E' message will be displayed on SVP after you select [OK]. Please start PRE-PROCEDURE M all over again.

"Please replace the CSW (CSW-nn), and then select OK." is displayed.

Select (CL) [OK] after replacing the CSW.

Go to HARDWARE G (REP03-200)

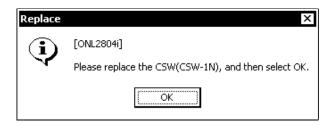

REV.2 Jun.2001 Feb.2	2002 Jul.2002		
----------------------	---------------	--	--

# [PRE-PROCEDURE T1]

#### - OUTLINE -

- ① Select special (DKC) part (status check).
- ② Specify Replacement.
- 3 Detach parts related to special part.

REV.0 Jun.2001
----------------

#### [1] Select special part




When you want to replace the FLASH CARD, Complete SIM before operation.

1. <Maintenance window> 'Maintenance' window is displayed.


(Multi Cabinet Model) In the 'Maintenance' window, check and select (CL) [DKC] to be replaced.

(Single Cabinet Model) In the "Maintenance' window, check and select (CL) [Controller] to be replaced.

#### (Multi Cabinet Model)

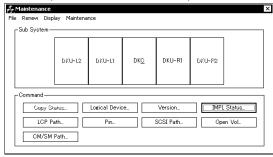

(Single Cabinet Model)

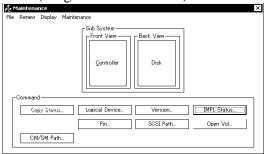

## 2. <Specify special part>

(Multi Cabinet Model)

Select (CL) part [XXXXX] to be replaced from 'DKC'.

(Single Cabinet Model)


Select (CL) part [XXXXX] to be replaced from 'Controller'.

Valid [XXXXX] values are listed below.


- DKC-PANEL ----- [DKC-PANEL]
- DKCMN ----- [DKCMN 1/2]
- PCI CON ----- [PCI CON]
- UPS CON ----- [PCI CON]
- EPO SW ----- [EPO SW]
- SVP----- [SVP]
- SSVP ----- [SSVP]
- RS CON ----- [RS CON]
- SVP&FLASH CARD- [SVP]
- FLASH CARD ----- [SVP]
- HUB-BOX----- [HUB-BOX]
- MONI-CON ----- [MONI-CON]
- Switch SVP----- [SVP]
- SVPPS-BOX ----- [SVPPS-BOX]

Note: When replacing the UPS CON, select (CL) [PCI CON].

### (Multi Cabinet Model)

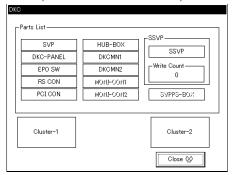

#### (Single Cabinet Model)

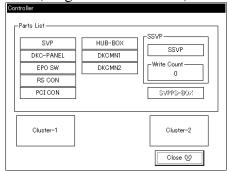

## 3. <Execute>


# A CAUTION

When the screen prompting an operator to input a password in order to prevent a multiple maintenance, contact the technical support center to ask for an instruction.

If any other message than the list is displayed, see the SVP Message Section (SVPMSG00-00).

When the part you have selected in step 1 is one of the following, a window shown on the right is displayed.

- DKC-PANEL
- DKCMN
- PCI CON (UPS CON)
- EPO SW
- SSVP
- HUB-BOX
- RS CON
- MONI-CON

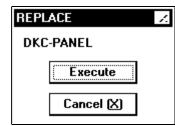

(ex. DKC-PANEL)

Select (CL) [Execute].


When the part you have selected in step 2 is the following, a window shown on the right is displayed.

• SVP

When you replace a part, select (CL) [Replace], select (CL) replacement parts [XXXXX], and select (CL) [Execute].

Valid [XXXXX] values are listed below.

- SVP -----[SVP]
- SVP&FLASH CARD-[SVP], [FLASH CARD]
- FLASH CARD -----[FLASH CARD]

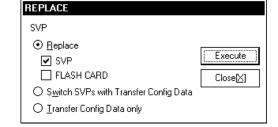


When you switch a Master SVP to a Standby SVP and vice versa, select (CL) [Switch SVPs with Transfer Config Data], and select (CL) [Execute].

When you transfer Master SVP's Configuration Data to a Standby SVP, select (CL) [Transfer Config Data only], and select (CL) [Execute].

4. <Check beginning of special part Replacement> Select (CL) [Yes] in response to "Do you want to replace the "XXXXX?"".

XXXXX represents one of the part names listed in step 2.

- "DKC-PANEL"----- Go to [2] (REP02-550)
- "EPO SW"----- Go to [3] (REP02-560)
- "DKCMN 1/2" ----- Go to [5] (REP02-590)
- "RS CON" ----- Go to [10] (REP02-650)
- "MONI-CON" ----- Go to [9] (REP02-640)

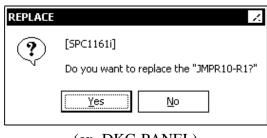


(ex. DKC-PANEL)

#### • "SVPPS-BOX" ------

When replacing the SVPPS-BOX, the SVP in operation is checked before confirming the replacement start. In response to a message, "Are you using the basic SVP now?" select (CL) [Yes] when the SVP being operated is a Basic SVP or select (CL) [No] when the SVP being operated is an Optional SVP. When a Basic SVP is being operated, go to Item [11] (REP02-651).

When an Optional SVP is being operated, a message, "When the optional SVP is operating as the master SVP, you cannot

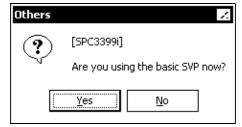



replace SVPPS-BOX. You must ensure that the basic SVP is operating as the master SVP." is displayed. Select (CL) [OK]. Replace the SVPPS-BOX after switching the Master SVP (by selecting "Switch SVP") since replacement of the SVPPS-BOX cannot be performed when the Optional SVP is activated.

- "SVP" ----- Go to [6] (REP02-600)
- "SVP&FLASH CARD" Go to [6] (REP02-600)
- "FLASH CARD" ----- Go to [8] (REP02-620)

If SVP high Reliability Kit is installed, the following message is displayed. "There are two SVPs. It will be safer if you switch to the other SVP and replace SVP according to the instruction in the maintenance manual. Do you want to replace the SVP?"

Refer to PRE-PROCEDURE T5 (REP02-820).



(ex. SVP)

• "HUB-BOX" ----- Go to [10] (REP02-650) REPLACE [SPC2973i] **(i)** DKC-SVP communication will be blocked. Do you want to replace the "SVP?" (ex. SVP) • "SSVP"----- Go to [7] (REP02-610) [SPC2972i] RESTART switch, REMOTE MAINTENANCE switch and the environment check will be disabled. SVP-SSVP communication will be blocked. Do you want to replace the "SSVP/HUB?" Yes <u>N</u>o • "PCI CON" (UPS CON) ----- Go to [4] (REP02-570) [SPC3194W] When the PCI cable is daisy-chained, you cannot replace the PCI CON unless the corresponding DKC is connected to the PCI cable end (see the Replace Section in the Maintenance Manual for detail). Do you want to replace the PCI CON? Yes No • "Switch SVPs with Transfer Config Data" ---- Go to [12] (REP02-652) Communication between the DKC and the SVP will be blocked. Do you want to switch SVPs? <u>Y</u>es <u>N</u>o • "Transfer Config Data only" ----- Go to [13] (REP02-653) Others

Note: When replacing the UPS CON, execute the PCI CON replacement procedure.

[SPC3412i]

<u>Y</u>es

Do you want to transfer configuration data?


<u>N</u>o

#### [2] DKC-PANEL

1. <Read environment monitor>

The SVP automatically read REMOTE/LOCAL position of the CE part. When SVP occurred read failure, "Is the REMOTE/LOCAL switch of DKC-PANEL LOCAL position?" is displayed.

In the case REMOTE/LOCAL switch is LOCAL position, select (CL) [Yes].

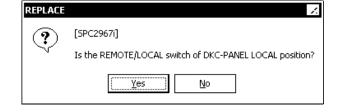

In the case REMOTE/LOCAL switch is REMOTE position, select (CL) [No].


<Check jumper installation>

Attach jumper on DKCMN 1/2 in response to "Please attach DKC Panel INH jumper plug. Then press OK.". (see HARDWARE T1 (REP03-230 step 2)).

Select (CL) [OK] after confirming that jumper is attached.

Go to step 4.

If jumper plug is not attached, go to step 3.

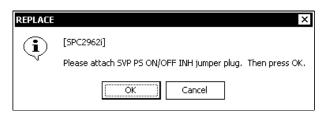

 $3. \quad <\!\! \text{Check jumper reinstallation}\!\!>$ 

"The DKC Panel INH jumper plug is not attached. If you want to abort the replacement of the DKC-PANEL, press Cancel." is displayed if no jumper is attached. Attach jumper and select (CL) [OK].


Go to step 4.

If jumper plug is not attached, step 3 again.



4. < Check beginning of special part Replacement> "Please replace the "DKC-PANEL." After replacement, press OK." is displayed. (Reply with [OK] after replacing the special part.)

see HARDWARE T1 (REP03-230)

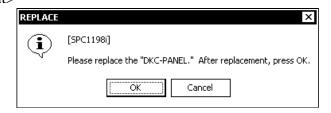

#### [3] EPO SW

1. <Check jumper installation>


Attach jumper on DKCMN 1/2 in response to "Please attach DKC PANEL ON/OFF INH jumper plug. Then press OK.".

(see HARDWARE T2 (REP03-280 step 1)).

Select (CL) [OK] after confirming that jumper is attached.

Go to step 3.

If jumper plug is not attached, go to 2.

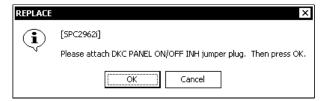

2. <Check jumper reinstallation>
"The DKC Panel INH jumper plug is not attached. If you want to abort the replacement of the DKC-PANEL, press Cancel." is displayed if no jumper is attached. Attach jumper and select (CL) [OK].

Go to step 3.

If jumper plug is not attached, step 2 again.



Check beginning of special part Replacement>
 "Please replace the "XXXXX." After
 replacement, press OK." is displayed.
 (Reply with [OK] after replacing the special
 part.)



(ex. DKC-PANEL)

see HARDWARE T2 (REP03-280)


#### [4] PCI CON (UPS CON)



< When the part concerned is the PCI CON >

Replacement of PCI CON Panel causes other devices running on the same PCI connection line to be powered off except a) and b) shown below (because giving the EPO instruction is assumed). Therefore, stop the other device before performing replacement.

- a) If PCI cable is not connected to the replacing DKC.
- b) If the replacing DKC (DKC concerned) is connected to the end of the PCI cable as shown below.

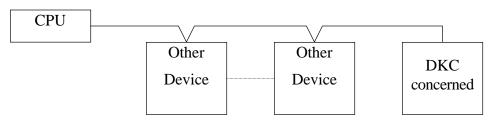

1. <Check DKC-PANEL switches>
Set REMOTE/LOCAL switch to LOCAL and select (CL) [OK] in response to "Please switch REMOTE/LOCAL switch, on "DKC-PANEL" to the LOCAL position. Then press OK.". (see HARDWARE T4 (REP03-360 step 1))



Go to step 3. If REMOTE/LOCAL switch is not LOCAL, go to 2.

Copyright ©2001, 2002, Hitachi, Ltd.

REV.1 Jui	n.2001 Feb.20	002			
-----------	---------------	-----	--	--	--

2. < Check that the REMOTE/LOCAL switch of DKC-PANEL is LOCAL>

"REMOTE/LOCAL switch is not LOCAL. Please check it. If you want to abort the replacement of the PCI CON, press Cancel." is displayed if REMOTE/LOCAL switch is



not LOCAL. Turn to LOCAL and select (CL) [OK], or [Cancel] to terminate replacing. If REMOTE/LOCAL switch is not LOCAL, step 2 again.

3. <Check jumper installation>

Attach jumper on DKCMN 1/2 in response to "Please attach DKC PANEL ON/OFF INH jumper plug. Then press OK.". (see HARDWARE T4 (REP03-360 step 2)). Select (CL) [OK] after confirming that jumper is attached.

Go to step 5.

If jumper plug is not attached, go to 4.



4. <Check jumper reinstallation>

"The DKC PANEL INH jumper plug is not attached. If you want to abort the replacement of the DKC-PANEL press Cancel." is displayed if no jumper is attached. Attach jumper and select (CL) [OK].

Go to step 5.

If jumper plug is not attached, step 4 again.



<Check beginning of special part Replacement>
 "Please replace the "XXXXX." After
 replacement, press OK." is displayed.
 (Reply with [OK] after replacing the special
 part.)



(ex. DKC-PANEL)

PCI CON -- see HARDWARE T4 (REP03-360) UPS CON-- see HARDWARE T27 (REP03-970)


#### [5] DKCMN

1.

The message "Are the LED of the target PCB(s) turned on?" is displayed.

If you select (CL) [Yes], go to step 3.

If you select (CL) [No], go to step 2.

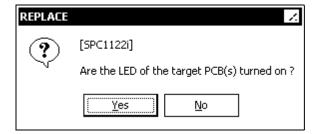

2.

The message shown on the right is displayed. Check the location of the DKCMN. (see HARDWARE T3 (REP03-330)) Select (CL) [OK].



3. <Check beginning of special part Replacement>
"Please replace the "DKCMNx." After
replacement, press OK." is displayed.
(Reply with [OK] after replacing the special
part.)



see HARDWARE T3 (REP03-330)

(ex. DKC - PANEL)

#### [6] SVP, SVP&FLASH CARD

1. <Attaching a jumper plug>
Attach a jumper plug to the RSCON
following a message, "Please attach SVP PS
ON/OFF INH jumper plug. Then press OK.".
(see HARDWARE T7 (on page REP03-450)).
After checking that the jumper plug has been
attached, select (CL) [OK].



At this time, do not attach Shut Down jumper plug. Go to step 3.

When the jumper plug has not been attached, go to step 2.

2. <Checking re-attachment of the jumper plug> When the jumper plug has not been attached, a message, "The SVP PS ON/OFF INH jumper plug is not attached. If you want to abort the replacement of the SVP, press




Cancel." is displayed. Attach the jumper plug and select (CL) [OK]. Go to step 3.

When the jumper plug has not been attached, execute step 2 again.

3.

The message "After the SVP was turned off automatically, replace the XXXXX." is displayed.

- In the case that SNMP Option is installed. Go to 4.
- In the case that SNMP Option is not installed.

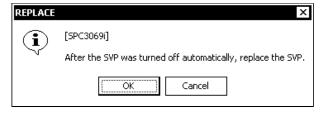

(ex. SVP)


If the CD-ROM disk inserted into the CD-ROM drive, remove the CD-ROM disk. Select (CL) [OK], so SVP is turned off automatically. (See HARDWARE T7 (REP03-450))

#### [7] SSVP

1.


The message "Are the LED of the target PCB(s) turned on?" is displayed.

If you select (CL) [Yes], go to step 3. If you select (CL) [No], go to step 2.

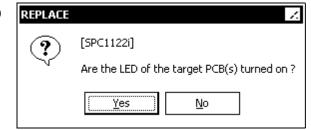


2.

The message shown on the right is displayed. Check the location of the SSVP. (see HARDWARE T8 (REP03-550)) Select (CL) [OK].

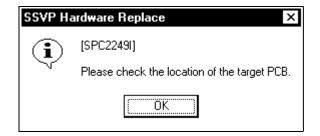

3. < Check beginning of special part Replacement> "Please replace the "SSVP." After replacement, press OK." is displayed. (Reply with [OK] after replacing the special part.)

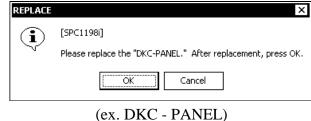

see HARDWARE T8 (REP03-550)

# [8] FLASH CARD



When the "Explorer" windows are executing, close them before replacement procedure.

REV.0 Jun.2001
----------------

 $1. \quad <\!\! \text{Check beginning of FLASH CARD Replacement} \!\!>$ 

The message "After the SVP was turned off automatically, replace the FLASH CARD." is displayed.

Select (CL) [OK], so it will reboot the SVP, and the files on FLASH CARD are moved to HD. Then SVP is turned off automatically. (See HARDWARE T7 (REP03-450))




#### [9] MONI-CON 1/2

1. <Checking DKUMN switch>

Set the DKUMN switches to "DISABLE" and then select (CL) the [OK] in response to the following message.

"Please switch "DKUMN-n" of all DKUs (the DKUMN-F switches are located on the front side of the DKUs and the DKUMN-R switches, on the rear side of the DKUs) to "DISABLE." Then press OK."

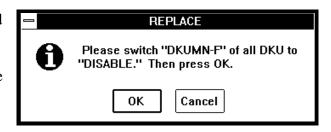


(For the locations and connections of the DKUMN switches, refer to pages LOCATION02-10 and LOCATION05-40 of LOCATION SECTION respectively.

#### DKUMN-n:

- In the case of the MONI-CON1
  - n = F (DKUMN-F): Reset the DKUMN switch on the front side of the DKU to "DISABLE."
- In the case of the MONI-CON2
  - n = R (DKUMN-F): Reset the DKUMN switch on the rear side of the DKU to "DISABLE."
- 2. < Checking beginning of special part replacement>

A message, "Please replace the XXXXX. After replacement, press OK." is displayed. (Select (CL) the [OK] after replacing the special part.)


See HARDWARE Tx (page REP03-xxx).

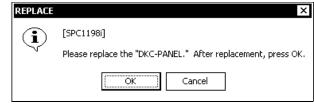

(ex. DKC - PANEL)

#### [10] RS CON, HUB-BOX

<Check beginning of special part Replacement>
 "Please replace the "XXXXXX." After
 replacement, press OK." is displayed.
 (Reply with [OK] after replacing the special
 part.)

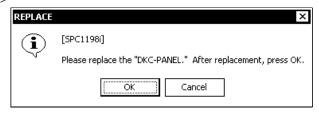


(ex. DKC-PANEL)

RS CON -----see HARDWARE T19 (REP03-710) HUB-BOX----see HARDWARE T25 (REP03-930)

#### [11] SVPPS-BOX


1. <Check environment monitor stopped state> "Processing to disable the environment check..." is displayed.

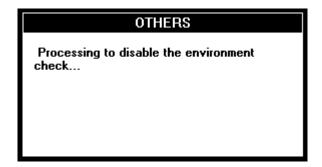

2. <Attaching a jumper plug>

You must ensure that an Optional SVP is powered off.

Attach a jumper plug to the SVPPS-BOX in response to a message, "Please attach PS SD jumper plug. Then press OK." (See Steps 2 and 3 in HARDWARE T26 (REP03-960).)

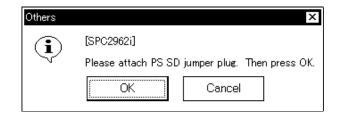


After making sure that the jumper plug has been attached, select (CL) [OK].

3. <Check beginning of special part Replacement>
"Please replace the "XXXXX." After
replacement, press OK." is displayed.
(Select (CL) [OK] after the replacement.)

See HARDWARE T26 (REP03-950).


[End of PRE-PROCEDURE]

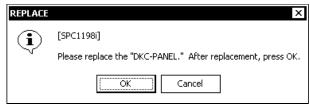

(ex. DKC-PANEL)


# [12] Switch SVPs with Transfer Config Data

1. <Transferring Subsystem Configuration Data>
The message "Transferring subsystem configuration data..." is displayed.

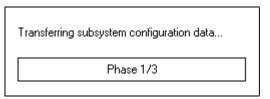

2. <Checking beginning of the SVP switching >
The message "Switching SVPs has started." is displayed.
The SVP is powered off automatically owing to the SVP switching. Make sure that the Standby SVP has started up.

See SVP POST-PROCEDURE t1 (REP04-320).

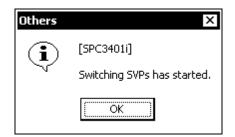

# [13] Transfer configuration data only

1. <Status>

"Transferring subsystem configuration data..." is displayed.


Transferring subsystem configuration data...

Phase 1/3

Check end of transferring>
 "Configuration data has been transferred." is displayed. Select OK.

See SVP POST-PROCEDURE t1 (REP04-320).

[End of PRE-PROCEDURE]

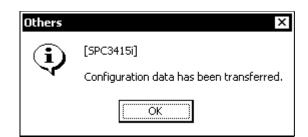

3.

(Multi Cabinet Model)

Close 'DKC' window.

Close 'Maintenance' window.

(Single Cabinet Model)

Close 'Controller' window.

Close 'Maintenance' window.

Go to POST-PROCEDURE z (REP04-1400).

REV.0 Jul.2002			
----------------	--	--	--

# [PRE-PROCEDURE T3]

#### - OUTLINE -

- ① Select special (DKC) part (status check).
- ② Specify Replacement.
- 3 Detach parts related to special part.
- ④ Place parts related to special part into unpluggable state.

REV.0 Jun.2	2001				
-------------	------	--	--	--	--

#### [1] Select special part

#### 1. <Maintenance window>


(Multi Cabinet Model)

In the 'Maintenance' window, check and select (CL) [DKC] to be replaced.


(Single Cabinet Model)

In the 'Maintenance' window, check and select (CL) [Controller] to be replaced.

#### (Multi Cabinet Model)

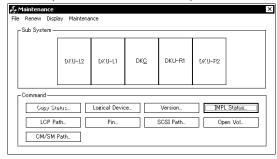

### (Single Cabinet Model)

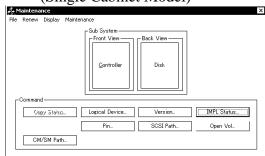

#### 2. <DKC window>


(Multi Cabinet Model)

Select (CL) [Cluster-n] in the 'DKC'.


(Single Cabinet Model)

Select (CL) [Cluster-n] in the 'Controller'.

#### (Multi Cabinet Model)

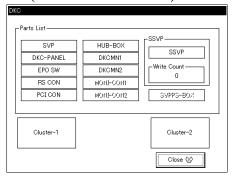

# (Single Cabinet Model)

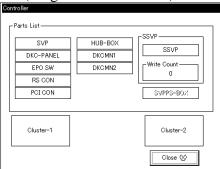

## 3. <Select special part>

If any other message than the list is displayed, see the SVP Message Section (SVPMSG00-00).


(Multi Cabinet Single Phase Model

(Multi Cabinet Single Phase Model, er-n) Multi Cabinet 3 Phase Model


Select (CL) part [XXXX] to be replaced from [Cluster-n] Multi Cabinet 3 Phase Model window and select (CL) [Execute]. [30A AC BOX])

Valid [XXXX] values are listed below.


- Fan assembly(DKC) ... [FAN]
- PS......[5/3VPSn], [3VPSn], [SUBPS]
- SVP-PS ......[SVP-PSn]
- Battery, BAT CTR...... [BATTERY-mm, BAT CTR-mm]
- Breaker Box ...... [BREAKER BOX-n]
- Thermostat assembly .. [TH]
- AC BOX(DKC) ...... [AC BOX-Cn]

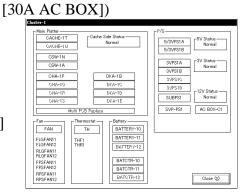


(Multi Cabinet 3 Phase Model [Without 30A AC BOX])

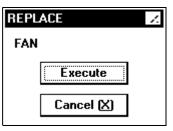

(ex. Fan assembly)

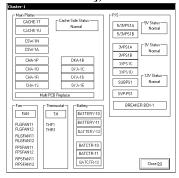


(Single Cabinet Model)

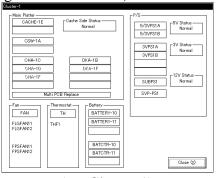


(ex. Cluster-1)

4. <Check beginning of special part Replacement> Select (CL) [Yes] in response to "Do you want to replace the "XXXXX?."".

XXXXX represents one of the part names listed in step 3.

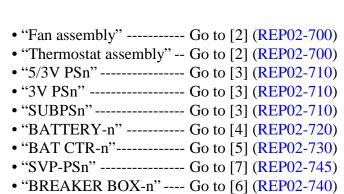


• "AC BOX-Cn" ----- Go to [6] (REP02-740)

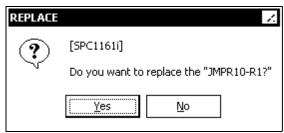


(ex. JMPR10-R1)

- [2] Fan assembly, Thermostat assembly
- 1. <Check environment monitor stopped state> "Processing to disable the environment check..." is displayed.

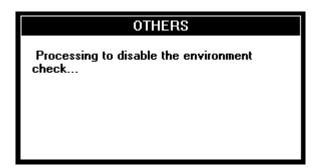

<Special part Replacement>
 "Please replace the "XXXXX." After
 replacement, press OK." is displayed.
 (Reply with [OK] after replacing the special
 part.)

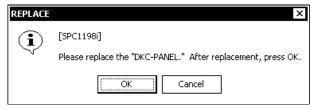


(ex. DKC-PANEL)

Fan assembly----see HARDWARE T5 (REP03-410) Thermostat assembly----see HARDWARE T6 (REP03-430)

#### [3] 5/3V PS, 3V PS, SUBPS

1. <Check matching power supply>
The SVP automatically checks the power supply to see if it is replaceable.

2. <Environment monitor state> "Processing to disable the environment check..." is displayed.

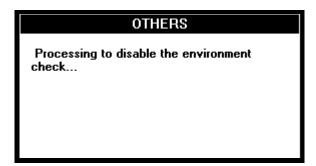

- $3. \quad <\!\! \text{Special part replacement}\!\!>$
- v The message shown on the right is displayed.(Reply with [OK] after replacing the special part.)

see HARDWARE T13 (REP03-620)



(ex. MPS-R100)

#### [4] BATTERY

1. <Check source power>
The SVP automatically checks the 5/3V power supply to determine whether it is not shut down.

2. <Check beginning of special part Replacement>
"Please replace the "XXXXX." After
replacement, press OK." is displayed.
(Reply with [OK] after replacing the special
part.)

REPLACE

[SPC1198i]

Please replace the "DKC-PANEL." After replacement, press OK.

OK

Cancel

(ex. DKC-PANEL)

see HARDWARE T11 (REP03-570)

#### [5] BATCTR


1. <Check source power>

The SVP automatically checks the 5/3V power supply to determine whether it is not shut down.

2.

The message "Are the LED of the target PCB(s) turned on?" is displayed.

If you select (CL) [Yes], go to step 4. If you select (CL) [No], go to step 3.

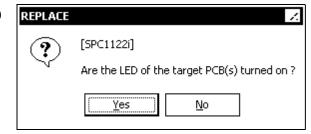


3.

The message shown on the right is displayed. Check the location of the BATCTR. (see HARDWARE T12 (REP03-600)) Select (CL) [OK].



4. <Check beginning of special part Replacement>
"Please replace the "XXXXX." After
replacement, press OK." is displayed.
(Reply with [OK] after replacing the special
part.)

see HARDWARE T12 (REP03-600)

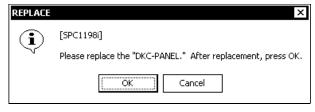


(ex. DKC-PANEL)

#### [6] BREAKER BOX, AC BOX(DKC)

These parts equip Multi Cabinet Model only.

- <Check matching power supply>
   The SVP automatically checks the power supplies to see if the part is replaceable.
- 2. <Check environment monitor stopped state> "Processing to disable the environment check..." is displayed.

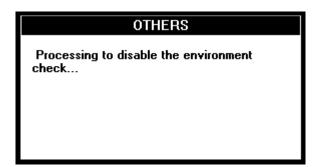

3. In the case of Breaker

In the case of Breaker Box replacement with 1-Phase Power Supply option, SVP displays "Installed AC BOX is 1-Phase type. Turn off the DKC AC BOX which supplies power source for XXXXXX, when you replace it." Message. Select (CL) [OK]. In the other case, go to [4].



(ex. BREAKER BOX-2)

4.

The message shown on the right is displayed. (Reply with [OK] after replacing the special part.)



(ex. AC BOX-R10)

BREAKER BOX-1----- see HARDWARE T9 (REP03-1000) of Multi Cabinet Model

Maintenance Manual

BREAKER BOX-2-----see HARDWARE T10 (REP03-1070) of Multi Cabinet Model

Maintenance Manual

AC BOX(DKC)-----see HARDWARE T21 (REP03-750) of Multi Cabinet Model Maintenance Manual


#### [7] SVPPS

1. <Check matching power supply>
The SVP automatically checks the power supply to see if it is replaceable.

2.


Please attach the jumper in response to the displayed message.

(see HARDWARE T23 (REP03-890 step 1))
Select (CL) [OK].

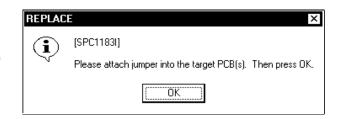

3.
The message "Please replace the "SVPPS1."
After replacement, press OK." is displayed.
(Reply with [OK] after replacing the special part.)

see HARDWARE T23 (REP03-880)

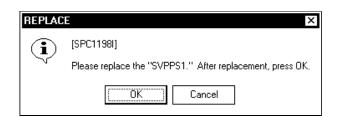

# [PRE-PROCEDURE T4]

#### — OUTLINE —

- ① Select special (DKU) part (status check).
- ② Specify Replacement.
- 3 Detach parts related to special part.
- Place part into unpluggable state.

REV.0 Jun.2001
----------------


# [1] Select special part


## 1. <Select DKU-X>

(Multi Cabinet Model) Select (CL) [DKU] from 'Maintenance'.

(Single Cabinet Model)
Select (CL) [Disk] from 'Maintenance'.

## (Multi Cabinet Model)

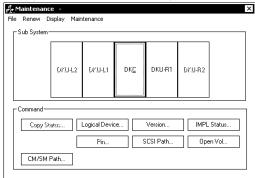

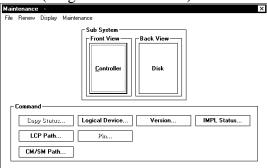

2. <Specify special part>

Select part [XXXXX] to be Replaced.

- DKUMN ----- [DKUMN-X]
- AC BOX ----- [AC BOX-X]
- Fan assembly (DKU455, Single Cabinet Model)


----- [HDDFAN-X]

Go to step 4.

- Fan assembly (DKU405)
- SW PS (DKU Multi)
- JMP


Select (CL) [HDU-X]. Go to step 3.

#### (Multi Cabinet Model [DKU455])

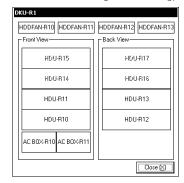


(ex. DKU-R1)

### (Multi Cabinet Model [DKU405])

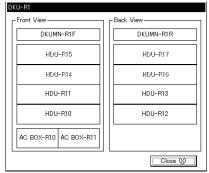


(ex. DKU-R1)

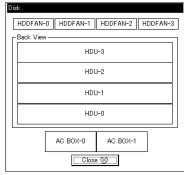


- 3. <Specify special part>
  Perform the replacement using the [HDU-x] window.
  Select (CL) [xxxxx].
  - Fan assembly (DKU405) ---- [FAN-X]
  - SW PS (DKU, Multi) ----- [MPS-n]
  - JMP-----[JMPY-m]

#### (Multi Cabinet Model [DKU455])

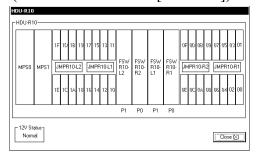


(ex. HDU-R10)

## (Multi Cabinet Model [DKU405])

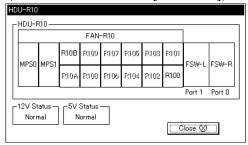


(ex. HDU-R10)

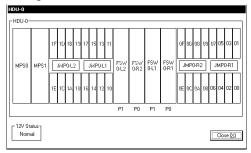

(ex. HDU-0)

4. <Specify special part Replacement>
If any other message than the list is displayed, see the SVP Message Section (SVPMSG00-00).

Select (CL) [Execute].

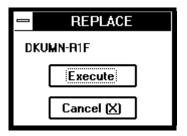


(ex. DKUMN-R1F of Multi Cabinet Model)

5. <Special part Replacement> Select (CL) [Yes] in response to "Do you want

to replace the "XXXXXX?"". XXXXX represents one of the part names listed in step 2 or 3.

Valid [XXXXX] values are listed below.

- 'DKUMN-X' -----Go to [2] (REP02-780)
- 'MPS-X' -----Go to [3] (REP02-790)
- 'Fan assembly' ----- Go to [4] (REP02-800)
- 'AC BOX-X' -----Go to [5] (REP02-810)
- 'JMPY-m' -----Go to [6] (REP02-815)

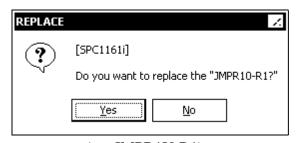

(ex. JMPR1U-R1)


#### [2] DKUMN PCB

1. <Environment monitor state> "Processing to disable the environment check..." is displayed.

(Multi Cabinet Model)

• DKUMN-R3n, DKUMN-L3n ----- Go to 3

(Single Cabinet Model) Go to 3.

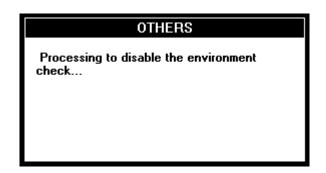

#### 2. <Disable DKUMN>

When Multi Cabinet Model, if DKUMN-XXX (listed below) is installed, this message is displayed.


Disable the DKUMN in response to "Please switch DKUMN-X to DISABLE.

Then press OK." (see HARDWARE T14 (REP03-xxx)).

After confirming that the DKUMN-X has been disabled, select (CL) [OK].

DKUMN-X (Multi Cabinet Model):

Replace parts	X
DKUMN-R1F	R2F, R3F
DKUMN-R1R	R2R, R3R
DKUMN-R2F	R3F
DKUMN-R2R	R3R
DKUMN-L1F	L2F, L3F
DKUMN-L1R	L2R, L3R
DKUMN-L2F	L3F
DKUMN-L2R	L3R

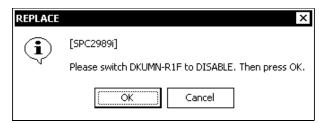

(ex. Replacement of the DKUMN-R1F)

3. <Special part Replacement>

"Please switch "DKUMN-X" to
"DISABLE," and replace it. After
replacement, switch it to "ENABLE" and
press OK." is displayed.
(Reply with [OK] after replacing the special

see HARDWARE T24 (REP03-910)

[ End of PRE-PROCEDURE ]




(ex. MPS-R100)

part.)

## [3] MPS (DKU, Disk)

1. <Check matching power supply>
The SVP automatically checks that the mate power supply is normal.

<Environment monitor state>
 "Processing to disable the environment check..." is displayed.

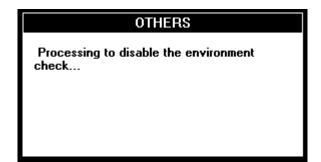

3. <Special part replacement>
The message shown on the right is displayed.
(Reply with [OK] after replacing the special part.)




(ex. MPS-R100)


see HARDWARE T15 (REP03-660)

# [4] Fan assembly

1. <Environment monitor state> "Processing to disable the environment check..." is displayed.

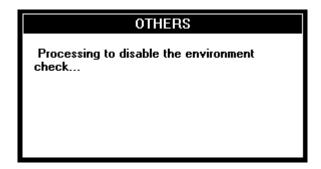

<Special part Replacement>
 "Please replace the "XXXXX." After
 replacement, press OK." is displayed.
 (Reply with [OK] after replacing the special
 part.)

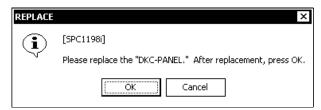

(ex. DKC-PANEL)

see HARDWARE T16 (REP03-690)

#### [5] AC BOX

1.

(Multi Cabinet Model)
"The AC BOX that you will replace is
XXXX. Please confirm type of maintenance
part. Do you want to continue?" is displayed.
Confirm the maintenance part "XXXX" with
Power Supply option, and select (CL) [Yes].

XXXX : 3-Phase type 1-Phase type


(Single Cabinet Model) Go to 2.



2.

The SVP automatically checks the power supplies to see if AC BOX is replaceable.

<Check environment monitor stopped state> "Processing to disable the environment check..." is displayed.

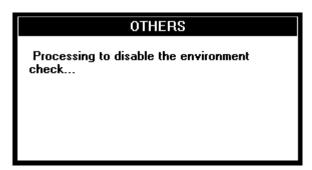

4.

"Turn off the breaker which supplies power source for AC-BOX-X. After that please replace it. When replacement is completed, press OK." is displayed.

(Reply with [OK] after replacing the special part.)



(ex. AC BOX-R10 of Multi Cabinet Model)

AC BOX-R10(3 Phase Type for Multi Cabinet Model)

AC BOX(except AC BOX-R10 of 3 Phase Type for Multi Cabinet Model)


-----see HARDWARE T18

AC BOX(1 Phase Type for Multi Cabinet Model) -----see HARDWARE T22

AC BOX(Single Cabinet Model) -----see HARDWARE T21 (REP03-750)


### [6] JMP

1. <Check environment monitor stopped state> "Processing to disable the environment check..." is displayed.

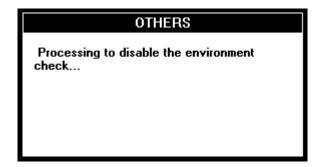


2.

The message "Are the LED of the target PCB(s) turned on?" is displayed. If you select (CL) [Yes], go to step 4.

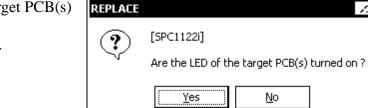

If you select (CL) [No], go to step 3.

3.
The message shown on the right is displayed.
Check the location of the JMP.
(see HARDWARE T24 (REP03-910))
Select (CL) [OK].

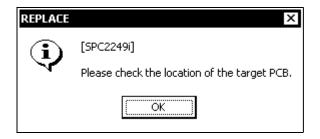

4. <Check beginning of special part Replacement>
"Please replace the "XXXXX." After
replacement, press OK." is displayed.
(Reply with [OK] after replacing the special
part.)



see HARDWARE T24 (REP03-910)

(ex. DKC-PANEL)

Note: If the switch is wrongly set, an error message is displayed. Reset the switch correctly and replace the part concerned. After the replacement, select (CL) [Retry].

# [PRE-PROCEDURE T5]

## - OUTLINE -

- ① Select a procedure for SVP replacement.
- 2 Replace an SVP.

REV.1 Jun.2001	Jun.2002				
----------------	----------	--	--	--	--

[1] Select a procedure for the SVP replacement.

1.

Select a procedure for replacing an SVP and/or a Flash Card according to a part(s) to be replaced.

Procedure for replacement of an SVP and/or a Flash Card in the normal state

```
• "SVP" ----- Go to [2] (REP02-840)
```

- "SVP & FLASH CARD" Go to [2] (REP02-840)
- "FLASH CARD" ----- Go to [3] (REP02-850)

Procedure for replacing an SVP and / or a Flash Card on master mode when the SVP cannot be switched


<Specify special part>


(Multi Cabinet Model)

Select (CL) part [SVP] to be replaced from "DKC".

(Single Cabinet Model)
Select (CL) part [SVP] to be replaced from "Controller".


## (Multi Cabinet Model)

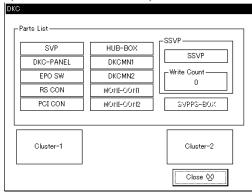

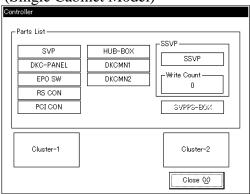


A window shown on the right is displayed. Select (CL) "Replace" and select replacement parts [xxxxx], and select (CL) [Execute]. Valid [XXXXX] values are listed below.

- SVP----- [SVP]
- SVP & FLASH CARD -- [SVP][FLASH CARD]
- FLASH CARD----- [FLASH CARD]

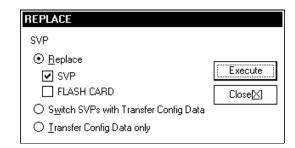

<Check beginning of special part Replacement>
In response to a message, "There are two SVPs. It will be safer if you switch to the other SVP and replace SVP according to the instruction in the maintenance manual. Do you want to replace the SVP?", select (CL) [Yes].

In response to a message, "DKC-SVP communication will be blocked. Do you want to replace the "SVP?"", select (CL) [Yes].

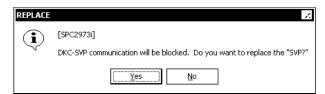

Yes No

(ex. SVP)

- "SVP" ----- Go to [4] (REP02-860)
- "SVP & FLASH CARD" Go to [4] (REP02-860)
- "FLASH CARD" ----- Go to [5] (REP02-870)

#### [2] Replacement of an SVP with or without a Flash Card

## 1. <Checking the SVP to be replaced>

Check whether the SVP to be replaced is a Basic SVP or an Optional SVP. (For the location of the SVP, refer to LOCATION SECTION (LOCATION02-10).)

When the SVP to be replaced is operating as a Master SVP, go to Step 2.

When the SVP to be replaced is powered on, go to Step 3.

In the case other than the above, go to Step 4.

# 2. <Switching the SVP>

When you want to replace an SVP, it is necessary to place it in the Standby mode. Replace the SVP after switching it if necessary. When you want to replace the SVP without performing the switching, refer to Item [4], procedure for replacement of an SVP with or without a Flash Card (without SVP switching).

# 3. <Powering off the Standby SVP>

When the SVP to be replaced is powered on, shutdown the OS by manual operation and go to Step 4 after checking that the SVP has been powered off.

# 4. <Replacing hardware>

Attach a jumper plug to the SVP PS ON/OFF INH pin of the RS CON. When the SVP to be replaced is an Optional SVP, attach a jumper plug to the PS CTLINH pin of the SVPPS-BOX too.

(See HARDWARE T7 (Step 4 on REP03-470).)

Replace the SVP according to HARDWARE T7 (REP03-450).

However you must not connect the LAN cable to the HUB-BOX.

See POST-PROCEDURE t5 (REP04-1100).

#### [3] Replacement of a Flash Card

1. <Checking the SVP to be replaced>

Check whether the SVP in which the Flash Card to be replaced is inserted is a Basic SVP or an Optional SVP. (For the location of the SVP, refer to LOCATION SECTION (LOCATION02-10).)

When the SVP to be replaced is operating as a Master SVP, go to Step 2.

When the SVP to be replaced is powered on, go to Step 3.

In the case other than the above, go to Step 4.

## 2. <Switching the SVP>

When you want to replace a FLASH CARD, it is necessary to place it in the Standby mode. Replace the FLASH CARD after switching the SVP if necessary. When you want to replace the FLASH CARD without performing the switching, refer to Item [5], procedure for replacement of a Flash Card (without SVP switching).

# 3. <Powering off the Standby SVP>

When the SVP to be replaced is powered on, shutdown the OS by manual operation and go to Step 4 after checking that the SVP has been powered off.

# 4. <Replacing hardware>

Replace the SVP according to HARDWARE T7 (REP03-450).

See POST-PROCEDURE t5 (REP04-1100).


[4] Replacement of an SVP with or without a Flash Card (without SVP switching)

<Checking the SVP to be replaced>
 Check whether the Master SVP is a Basic SVP or an Optional SVP. (For the location of the SVP, refer to LOCATION SECTION (LOCATION02-10).)

<Attaching a jumper plug>
 When the SVP is a Basic SVP:
 Attach a jumper plug to the RS CON in response to a message, "Please attach SVP PS ON/OFF INH jumper plug. Then press OK."
 (See HARDWARE T7 (Step 4 on REP03-470))



When the SVP is an Optional SVP: Attach a jumper plug to the SVPPS-BOX and the RS CON in response to a message, "Please attach PS CTLINH jumper plug. Then press OK." (See HARDWARE T7 (Step 4 on REP03-470))

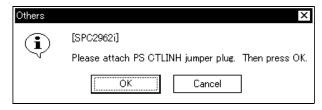


After making sure that the jumper plug has been attached, select (CL) [OK]. Do not attach the shutdown jumper at this time.

3.

The message "After the SVP turned off automatically, replace the XXXXX." is displayed.

- In the case that SNMP Option is installed. Go to 4.
- In the case that SNMP Option is not installed.

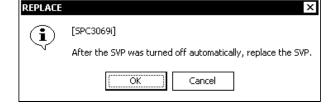

If the CD-ROM disk inserted into the CD-ROM drive, remove the CD-ROM disk. Select (CL) [OK], so SVP is turned off automatically. (See HARDWARE T7 (REP03-450))

[5] Replacement of a Flash Card (without SVP switching)

<Checking the SVP to be replaced>
 Check whether the Master SVP is a Basic SVP or an Optional SVP. (For the location of the SVP, refer to LOCATION SECTION (LOCATION02-10).)

<Check beginning of FLASH CARD>
 The message "After the SVP was turned off automatically, replace the 128MB type FLASH CARD." is displayed.
 Select (CL) [OK], so it will reboot the SVP, and the files on FLASH CARD are moved to HD. Then SVP is turned off automatically. (See HARDWARE T7 (REP03-450))



# [PRE-PROCEDURE V]

#### - OUTLINE -

- ① Select P-DEV (status check).
- ② Specify Replacement.
- 3 Place HDD into unpluggable state.

# A CAUTION

This processing is a special operation for detecting a cause of a Fibre loop error. Ask the technical support center about the appropriateness of the operation.

Copyright ©2002, Hitachi, Ltd.


REV.0 Jun.2002				
----------------	--	--	--	--

This processing is a special operation for detecting a cause of a Fibre loop error. Ask the technical support center about the appropriateness of the operation.


1. <Maintenance window> (Multi Cabinet Model)
In the 'Maintenance' window, check and select
(CL) [DKU-Rn] or [DKU-Ln] to be replaced.

(Single Cabinet Model)
In the 'Maintenance' window, select (CL) [Disk].

### (Multi Cabinet Model)

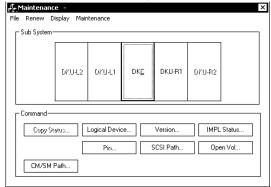

(Single Cabinet Model)

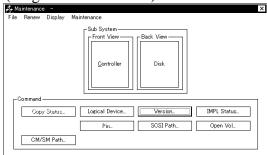


2. <Select HDU-BOX> (Multi Cabinet Model)
Check and select (CL) [HDU-Rnn] or [HDU-Lnn] to be replaced.

(Single Cabinet Model)
Check and select (CL) [HDU-n] to be replaced.

Selecting (CL) [Close] returns you to step 1.

#### (Multi Cabinet Model)

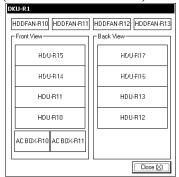



This processing is a special operation for detecting a cause of a Fibre loop error. Ask the technical support center about the appropriateness of the operation.

### 3. <Select HDD>

(Multi Cabinet Model [DKU455]) Check and select (CL) [nn] to be replaced.

(Multi Cabinet Model [DKU405])


Check and select (CL) [Rnnn] or [Lnnn] to be replaced.

(Single Cabinet Model)


Check and select (CL) [nn] to be replaced.

Selecting (CL) [Close] returns you to step 2.


#### (Multi Cabinet Model [DKU455])

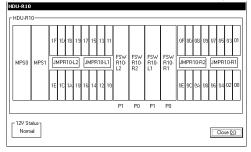

## (Multi Cabinet Model [DKU405])

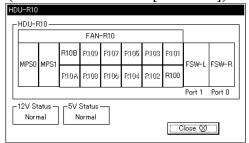

#### (Single Cabinet Model)

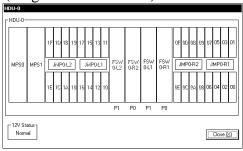

4. <Specify replacement on HDD>

Check the status display.

- ◆ In the case of a warning SIM, "NORMAL" is displayed.
- ◆ In the case of a blocking SIM, "FAILED" is displayed.

Select (CL) [Replace (INLINE)].

DD-R100	
- Device Type -	Close (≾)
DK318-ST	<u>R</u> eplace
Group 1-1 (RAID1 )	Replace(INLINE)
Group 1-1 (RAID1 )	Re <u>s</u> tore
Device Status	Blockade
	Spare Disk
Normal	Restore <u>D</u> ata
	Correction Copy
	Drive Interrupt
- Port Status	
Normal	<u>L</u> DEV Detail
	Renewal

This processing is a special operation for detecting a cause of a Fibre loop error. Ask the technical support center about the appropriateness of the operation.

If any other message than the list is displayed, see the SVP Message Section (SVPMSG00-00).

5. < Checking the P-DEV status & saving the spare>

# **A** CAUTION

When the screen appears prompting the operator to input a password to prevent multiple maintenance or for executing a pin check, contact the technical support center to ask for instructions.


"Checking..." is displayed.

When "You can restore the replaced physical device by restoring logical devices. Do you continue to this operation?" is displayed, PDEV is automatically recovered by recovering LDEV.




When you want to continue PDEV Replace, please select (CL) [Yes]. When you want to recover PDEV by recovering LDEV, please select (CL) [No] and see Restore the Logical Device (SVP02-840).

6. <P-DEV blocking>
Select (CL) [Yes] in response to "Are you sure you want to block the physical device?".

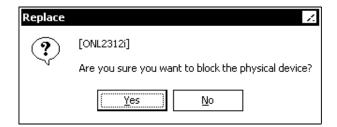

- 7. <Blocking the Physical device> "Blocking..." is displayed.
- 8. <Spin down the Physical device> "Spinning down..." is displayed

9. <P-DEV pull out> Select (CL) [Yes] in response to "Are you sure you want to pull out the physical device?".

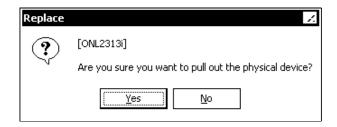

# A CAUTION

This processing is a special operation for detecting a cause of a Fibre loop error. Ask the technical support center about the appropriateness of the operation.

10. <Check shut down LED>


Check the shut down LED on the HDD to be replaced.

If LED is off, reconfirm the location of the HDD to be replaced with LOCATION SECTION before replacing the hardware.

# **A** CAUTION

If a wrong HDD is removed, a data loss or a system down may occur.

11. <Confirmation of replace>
Select (CL) [OK] in response to "Please replace the physical device, and then select OK." after the unit is replaced (Step 12).

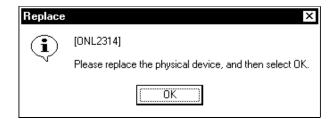

12. <Replace HDD> Replace HDD.

See HARDWARE A (REP03-10).

Copyright ©2002, Hitachi, Ltd.

REV.0 Jun.2002				
----------------	--	--	--	--


# [HARDWARE A]

Location	Function Name of Component		Part Name	HDA Label
HDU Box	1 HDD Canister		HDU450-36K1FC	DKS2B-K36FC
			HDU450-72J1FC	DKR2D-J72FC

#### NOTICE:

Replace the HDD canister in the subsystem power on status only.

Do not replace with the subsystem power off status.

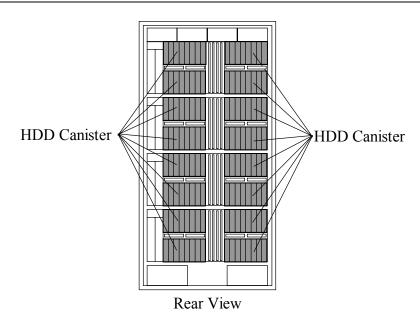


#### NOTICE:

- (1) Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.
- (2) HDD is a precise component. Be careful in handling HDD to avoid vibration and impact.

REV.1 Jun.2	2001 Feb.2002				
-------------	---------------	--	--	--	--


- 1. The following figure shows the correct way to replace the HDD canister.
  - a. Check Shut Down LED on the JMP PCB.

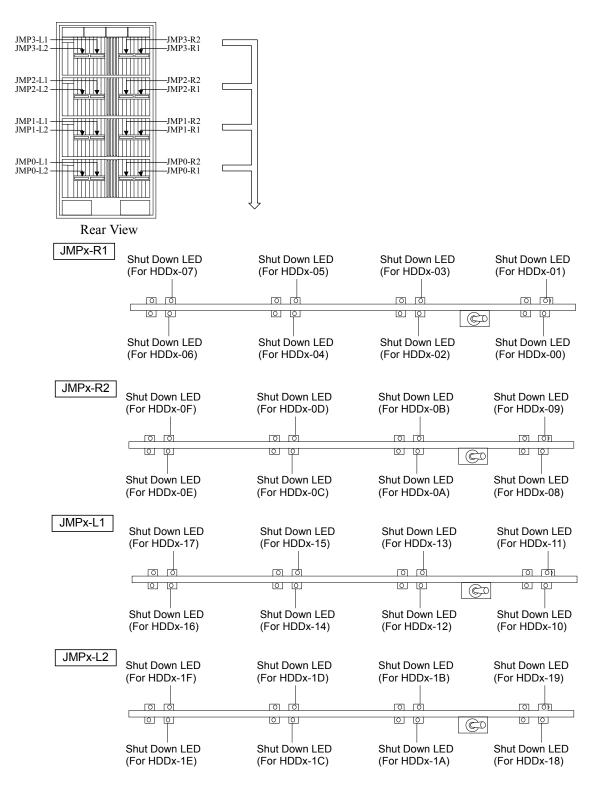

REV.1 Jun.2	2001 Feb.2002				
-------------	---------------	--	--	--	--

A system down may be caused by a replacement of an HDD canister other than that to be replaced. Make sure that it is the HDD canister to be replaced.

- b. After pushing up the stopper on the front side of the HDD canister, pull the handle toward you to remove the HDD canister.
- c. Install a spare HDD canister. (For the detailed procedure for installation, refer to the procedure for installing HDD canister on page REP03-35.)

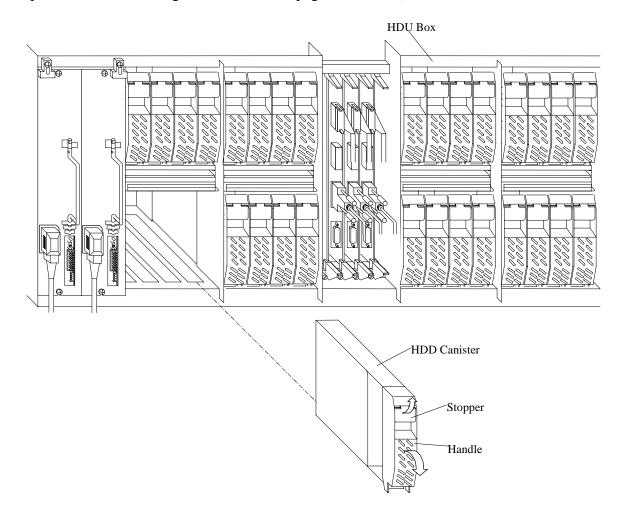


## **HDD** canister install procedure

Note on the installation: Do not insert the HDD canister by pushing its frame.


- (1) Insert the HDD canister into the HDU Box holding its handle.
  - (Insert the canister until the claws that are located at the bottom of the handle come in contact with the front side of the HDU Box.)
- (2) Turn the handle at a stroke by pushing its top with your thumb.

(Turn the handle until it latches with the stopper. Do not stop the handle on its way of turning.)

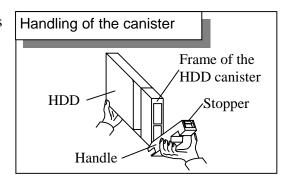

## (1) Insert the HDD canister into the HDU Box holding its handle.

A gap exists between the connectors.

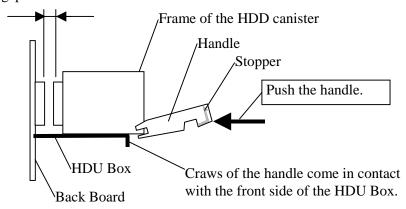

(2) Turn the handle at a stroke by pushing its top with your thumb. (Do not stop the handle on its way of turning.)

The connectors have been coupled.

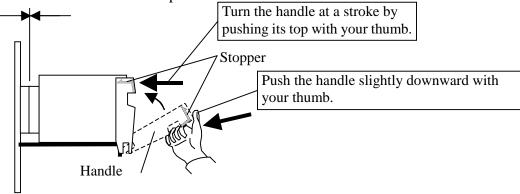


Fig. A-1 Method of Installing HDD Canister

REV.0	Apr.2002				
-------	----------	--	--	--	--

### 2. See SVP post-procedure as follows.

Note: Before starting the <Check the beginning of recovery> operation in POST-PROCEDURES a, b, c and d, be sure to insert a floppy disk for dump, collect failure information, and return the floppy disk with the failed HDD.

A dump floppy disk is attached with a Spare HDD.

<Data drive, spare drive>

Work	Part name		Condition Item			Procedure
ID						*1
			Condition		Configuration	SVP post-
		Fail	lure	Preventive	Unused Spare	procedure
		Warning SIM	Block SIM		drive	
RDK1	Data Drive Note 1	×	-	-	Yes	Post a *1
RDK2	Data Drive Note 1	-	×	-	Yes	Post a *1
RDK3	Data Drive Note 1	-	-	×	Yes	Post a *1
RDK4	Data Drive Note 1	×	-	-	No	Post b *1
RDK5	Data Drive Note 1	-	×	-	No	Post b *1
RDK6	Data Drive Note 1	-	-	×	No	Post b *1
RDK7	Data Drive Note 1		No	te 2		Post c *1
Note 2						
Note 3						
RDK8	Spare Drive Note 1		-	=		Post d *1

<sup>\*1:</sup> Refer to REP01-190

Note 1) Parts Name is indicates attribute of a drive.

Data Drive : The drive is installed in the position for a drive except spare drive (Data Drive).

Spare Drive: The drive is installed in the position for a spare drive.

Note 2) RDK7 is a Work ID for a work which is applicable to a case that two or more drives in a same parity group are blocked.

When the procedures instructed by RDK7 are executed, data will be lost. Ask the technical support center about the appropriateness of the operation.

Note 3) Confirm the parity group and the LDEV No. corresponding to the HDD through the SVP STATUS. See page SVP03-130 for the procedure for referring to SVP STATUS.


Note: If a Work ID cannot be found or if multiple drive error is occurring, see page TRBL05-170 on TROUBLE SHOOTING section.

	Copyright	©2001	.2002.	Hitachi.	Ltd.
--	-----------	-------	--------	----------	------

REV.1 Jun.2001	Feb.2002				
----------------	----------	--	--	--	--

# [HARDWARE B]

Location		Function Name of Component	Part Name	Remarks
Front Logic Box	1	Cache Memory PCB	• WP490-A	Color of PCB
				lever : Blue
	2	Cache Memory Module on Cache Memory PCB	• SH288-B	
	3	Shared Memory Module on Cache Memory PCB	• SH287-B	

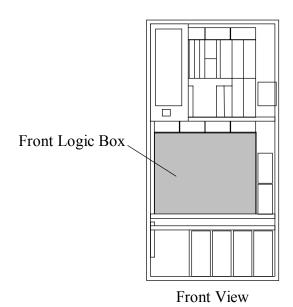


# NOTICE:

Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.


REV.1 J	n.2001 Feb.2002				
---------	-----------------	--	--	--	--

- 1. Remove the Cache Memory PCB.
  - a. Check that the Shut Down LED is on. If not, connect the Maintenance Jumper to the Shut Down Connector. (only hot replace)

A system down may be caused if the Maintenance Jumper is inserted in a PCB other than that to be replaced. Make sure that it is the PCB to be replaced.

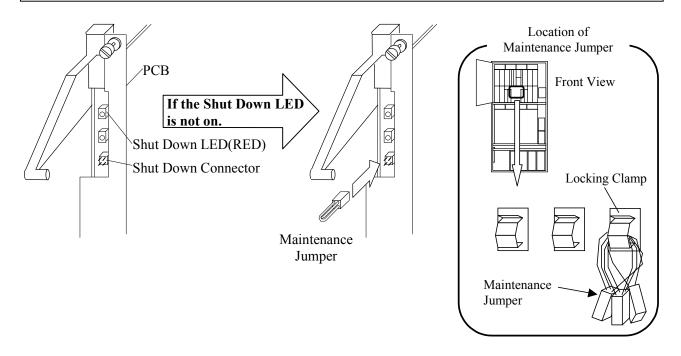


b. Remove the two screws and remove the Cache Memory PCB.

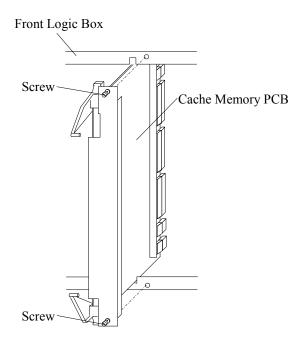



c. Remove the Maintenance Jumper if it is mounted.


REV.0 Jun.
------------


- 2. Replace the failed part to spare part.
  - a. When replacing the CM PCB, move all the shared memory modules and cache memory modules (including dust covers if any) mounted on an extracted PCB to the same mounting positions on the spare PCB.
  - b. When the failed part is Cache Memory Module, replace the Cache Memory Module.
  - c. When the failed part is Shared Memory Module, replace the Shared Memory Module.

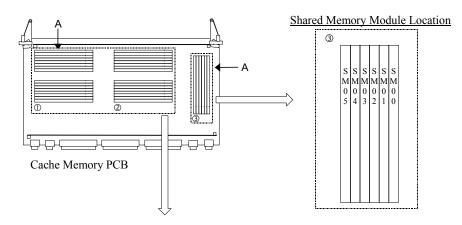


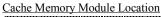

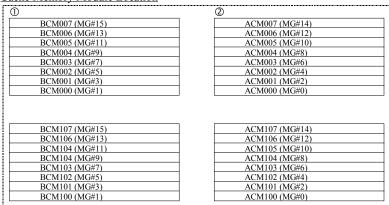

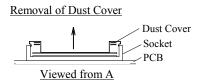

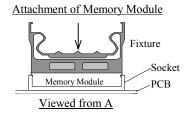

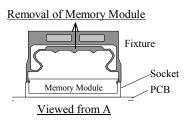

3. Insert the Cache Memory PCB.


Note: Make sure that a color of the levers of the PCB to be installed is blue. Never insert a PCB whose lever is not blue.

- a. Insert the Cache Memory PCB and fasten the two screws.
- 4. Go to SVP post-procedure e [REP04-180].

REV.1 Jun.2001	Feb.2002				
----------------	----------	--	--	--	--

# [HARDWARE C]

Location	Function Name of Component		Part Name	Remarks
Front Logic Box	1	CHA (Channel Adapter) PCB for serial channel	• WP462-A ×1 & SH281-C ×4	Color of PCB lever : Blue

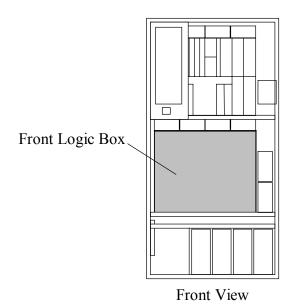

## NOTICE:


Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

REV.1 Jun.20
--------------


1. Check that the Shut Down LED is on. If not, connect the Maintenance Jumper to the Shut Down Connector. (only hot replace)

# **A** CAUTION

A system down may be caused if the Maintenance Jumper is inserted in a PCB other than that to be replaced. Make sure that it is the PCB to be replaced.

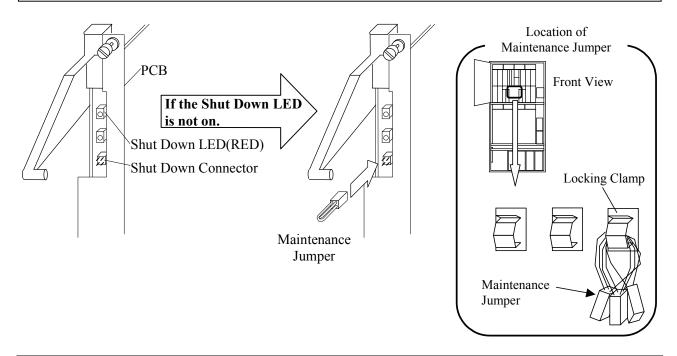

- 2. Disconnect the optical fiber cables from the failed Channel Adapter PCB.
- 3. Remove the two screws and remove the failed PCB. **Note:** If the Maintenance Jumper is used, remove it.

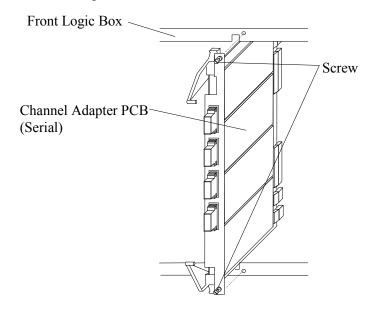

4. Insert the spare PCB to the correct location and fasten the two screws.


Note: Make sure that a color of the levers of the PCB to be installed is blue. Never insert a PCB whose lever is not blue.

- 5. Cleaning the fiber cable connectors.
  - For the tools needed for the cleaning, refer to the tool list on page PARTS06-10.
  - a. Blow compressed gas against the connector using an air sprayer (for about five seconds).
  - b. Wipe the connector lightly with a piece of cut gauze wet with ethyl alcohol.
  - c. Blow compressed air again and check the result of the cleaning. (None of dust, sticking of foreign matter, and dirt must be observed.)
- 6. Connect the optical fiber cables to the spare PCB.
- 7. Go to SVP post procedure f [REP04-210].

REV.1 Jun.2001	Feb.2002				
----------------	----------	--	--	--	--

# [HARDWARE D]

Location		Function Name of Component	Part Name	Remarks
Front Logic	1	Fibre 4-port Adapter PCB for Short	• WP461-D ×1 & SH281-A ×2	Color of PCB
Box	wavelength (DKC-F460I-8GSE)			lever : Blue
	2	Fibre 2-port Adapter PCB for Short	• WP461-E ×1 & SH281-A ×2	
		Wavelength (DKC-F460I-4HSE)		
	3	Fibre 4-port Adapter PCB for Short	• WP461-B ×1 & SH281-A ×4	
		Wavelength (DKC-F460I-8HSE)		
	4	Fibre 4-port Adapter PCB for Long	• WP461-C ×1 & SH281-A ×4	
		Wavelength (DKC-F460I-8HLE)		
	5	Fibre 4-port Adapter PCB for Short	• WP461-H ×1 & SH281-A ×2	
		Wavelength (DKC-F460I-8GSF)		
	6	Fibre 2-port Adapter PCB for Short	• WP461-J ×1 & SH281-A ×2	
		Wavelength (DKC-F460I-4HSF)		
	7	Fibre 4-port Adapter PCB for Short	• WP461-F ×1 & SH281-A ×4	
		Wavelength (DKC-F460I-8HSF)		
	8	Fibre 4-port Adapter PCB for Long	• WP461-G ×1 & SH281-A ×4	
		Wavelength (DKC-F460I-8HLF)		

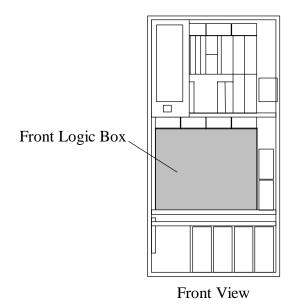

### NOTICE:

Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.


Copyright ©2001,2002, Hitachi, Ltd.

REV.2 Jun.2001 Feb.2002
-------------------------


1. Check that the Shut Down LED is on. If not, connect the Maintenance Jumper to the Shut Down Connector. (only hot replace)

# **A** CAUTION

A system down may be caused if the Maintenance Jumper is inserted in a PCB other than that to be replaced. Make sure that it is the PCB to be replaced.

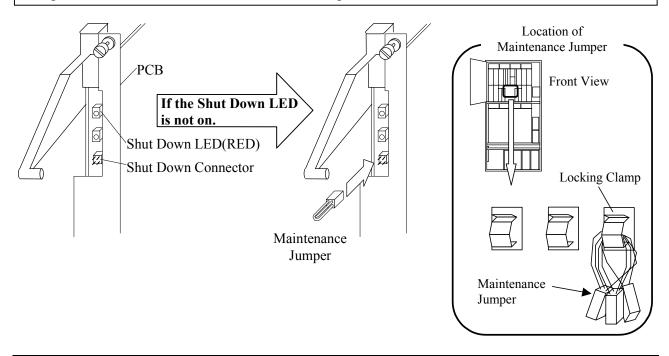


2. Disconnect the fibre cables from the failed PCB.

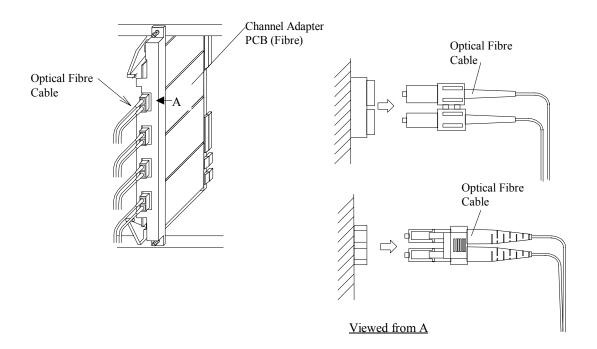

Copyright ©2001, Hitachi, Ltd.

REV.0	Jun.2001				
-------	----------	--	--	--	--

3. Remove the two screws and remove the failed PCB. **Note:** If the Maintenance Jumper is used, remove it.

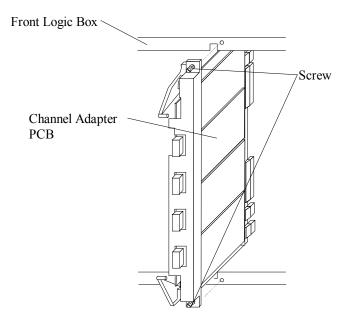

4. Insert the spare PCB to the correct location and fasten the two screws.


Note: Make sure that a color of the levers of the PCB to be installed is blue. Never insert a PCB whose lever is not blue.

- 5. Cleaning the fiber cable connectors.
  - For the tools needed for the cleaning, refer to the tool list on page PARTS06-10.
  - a. Blow compressed gas against the connector using an air sprayer (for about five seconds).
  - b. Wipe the connector lightly with a piece of cut gauze wet with ethyl alcohol.
  - c. Blow compressed air again and check the result of the cleaning. (None of dust, sticking of foreign matter, and dirt must be observed.)
- 6. Connect the fibre cables to the spare PCB.
- 7. Go to SVP post procedure f [REP04-210].

REV.1	Jun.2001	Feb.2002				
-------	----------	----------	--	--	--	--

# [HARDWARE E]

Location	I	Function Name of Component	Part Name	Remarks
Front Logic Box	1	MF Fibre 4-port Adapter	• WP465-A ×1 & SH281-D ×4	Color of PCB
		PCB for Short Wavelength		lever : Blue
		(DKC-F460I-8MS)		
	2	MF Fibre 4-port Adapter	• WP465-B ×1 & SH281-D ×4	
		PCB for Long Wavelength		
		(DKC-F460I-8ML)		

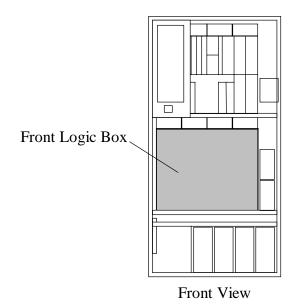


#### NOTICE:

REV.2	Jun.2001	Feb.2002	Jun.2002			
-------	----------	----------	----------	--	--	--


1. Check that the Shut Down LED is on. If not, connect the Maintenance Jumper to the Shut Down Connector. (only hot replace)

## **A** CAUTION

A system down may be caused if the Maintenance Jumper is inserted in a PCB other than that to be replaced. Make sure that it is the PCB to be replaced.

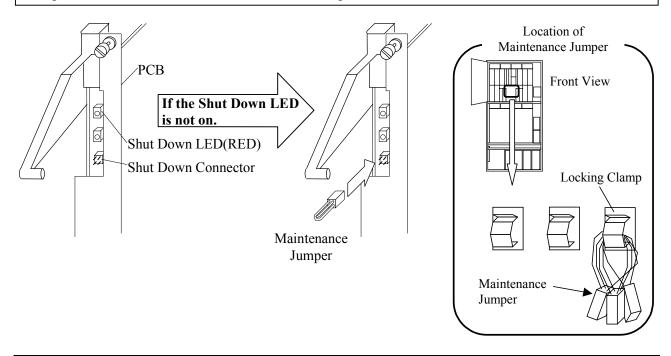


2. Disconnect the fibre cables from the failed PCB.

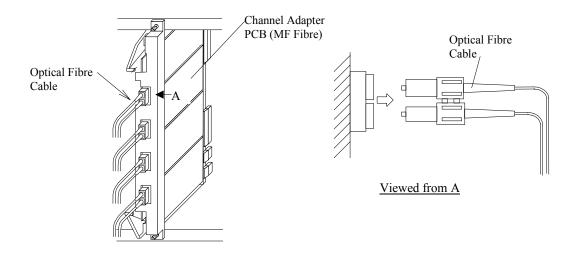

REV.1 Jun.2	2001 Feb.2002				
-------------	---------------	--	--	--	--

3. Remove the two screws and remove the failed PCB. **Note:** If the Maintenance Jumper is used, remove it.

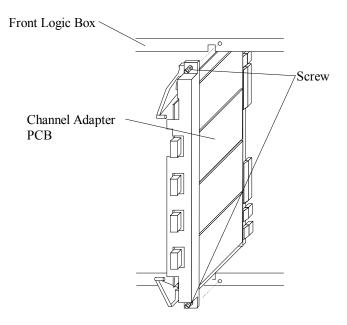


4. Insert the spare PCB to the correct location and fasten the two screws.

Note: Make sure that a color of the levers of the PCB to be installed is blue. Never insert a PCB whose lever is not blue.

- 5. Cleaning the fiber cable connectors.
  - For the tools needed for the cleaning, refer to the tool list on page PARTS06-10.
  - a. Blow compressed gas against the connector using an air sprayer (for about five seconds).
  - b. Wipe the connector lightly with a piece of cut gauze wet with ethyl alcohol.
  - c. Blow compressed air again and check the result of the cleaning. (None of dust, sticking of foreign matter, and dirt must be observed.)
- 6. Connect the fibre cables to the spare PCB.
- 7. Go to SVP post procedure f [REP04-210].

# [HARDWARE F]

Location	Function Name of Component		Function Name of Component Part Name	
Front Logic Box	1	DKA (Disk Adapter) PCB	• WP471-A & SH281-B × 2	Color of PCB
			• WP471-B & SH281-B × 4	lever : Blue

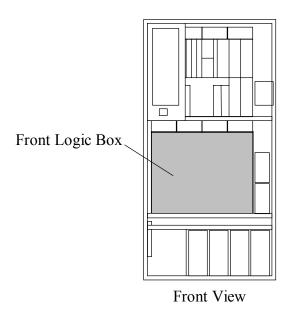


### NOTICE:

REV.1 Jun.20
--------------


1. Check that the Shut Down LED is on. If not, connect the Maintenance Jumper to the Shut Down Connector. (only hot replace)

## **A** CAUTION

A system down may be caused if the Maintenance Jumper is inserted in a PCB other than that to be replaced. Make sure that it is the PCB to be replaced.

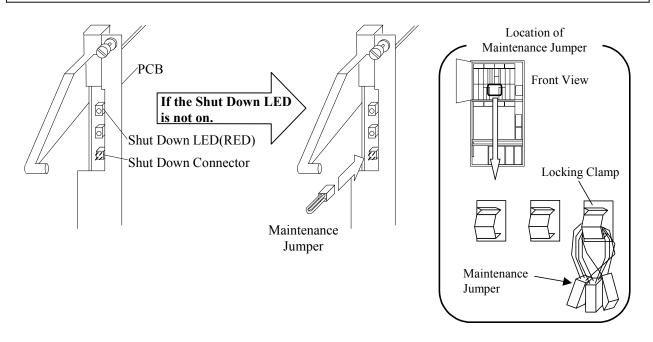

- 2. Remove the PCB.
  - a. Disconnect the cables.
  - b. Remove two screws and remove the failed Disk Adapter PCB.
  - c. If the Maintenance Jumper is used, remove it.

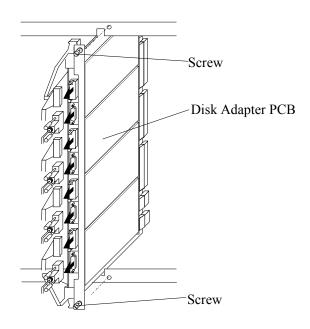

REV.0 Jun.2001			
----------------	--	--	--

3.	Insert the spare	PCB to	the correct	location and	fasten the screws.
٠.	TITO OIL OF OFFI		*****	10 00001011 00110	


Note: Make sure that a color of the levers of the PCB to be installed is blue. Never insert a PCB whose lever is not blue.

- 4. Connect the cables to the spare PCB.
- 5. Go to SVP post procedure f [REP04-210].

REV.1 Jun.20	001 Feb.2002			
--------------	--------------	--	--	--

# [HARDWARE G]

Location		Function Name of Component	Part Name	Remarks
Front Logic Box	1	CSW PCB		Color of PCB
				lever : Blue

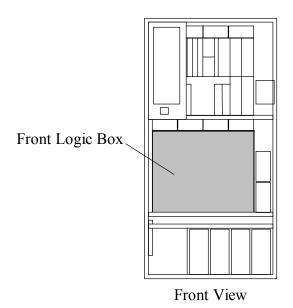


#### NOTICE:

REV.1	Jun.2001	Feb.2002				
-------	----------	----------	--	--	--	--

1. Check that the Shut Down LED is on. If not, connect the Maintenance Jumper to the Shut Down Connector. (only hot replace)

### A CAUTION

A system down may be caused if the Maintenance Jumper is inserted in a PCB other than that to be replaced. Make sure that it is the PCB to be replaced.

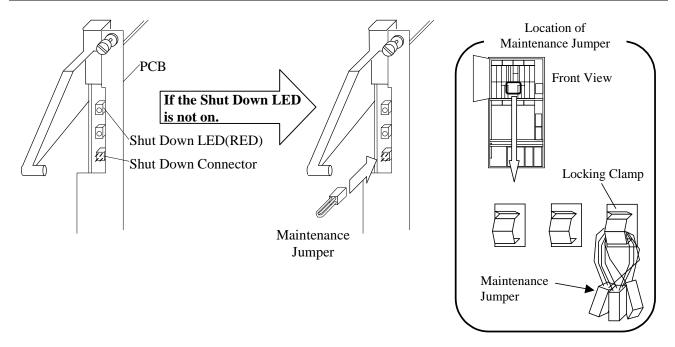


REV.1 Ju	un.2001 Feb.2002				
----------	------------------	--	--	--	--

#### 2. Remove the CSW PCB.

The LED on the operator panel shown in the following table goes out during a period from a pulling off of the CSW to an insertion of the new CSW.

Location of CSW	LED on the o	perator panel
to be replaced	Cluster 1	Cluster 2
CSW-1A	ABCD EFGH JKLM	_
CSW-2M	_	ABCD EFGH JKLM

- a. Disconnect the cables from the sub-edge of the failed PCB.
- b. Remove the two screws and remove the failed CSW PCB.
- c. If the Maintenance Jumper is used, remove it.

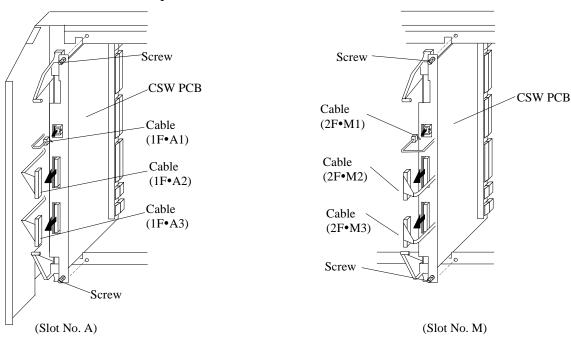

3. Insert the spare PCB to the correct location and fasten the screws.

Note: Make sure that a color of the levers of the PCB to be installed is blue. Never insert a PCB whose lever is not blue.


(When you plug in new PCB, the Shut Down LED is lit on again.)

- 4. Connect the cable to the sub-edge of the spare PCB.
- 5. Go to SVP post procedure k [REP04-300].

K6602675-

# [HARDWARE T1]

Location	Function Name of Component	Part Name
Front of DKC	1 DKC Panel	• SH302-A
		• SH302-C (for UPS)

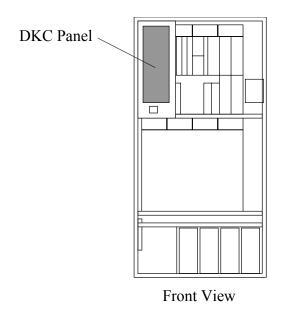

#### NOTICE:

REV.0 Jun.2	2001			
-------------	------	--	--	--

Note: The COMP signal of PCI is turned off, if the DKC Panel is removed.

- 1. Set the switches of the spare PCB to the same positions as those of the failed PCB.
- 2. Connect the Maintenance Jumper to the connector plug on the DKCMN1 and DKCMN2.

### A CAUTION

A system down is caused if the Maintenance Jumper is not inserted. Be sure to insert the Maintenance Jumper before starting the work.

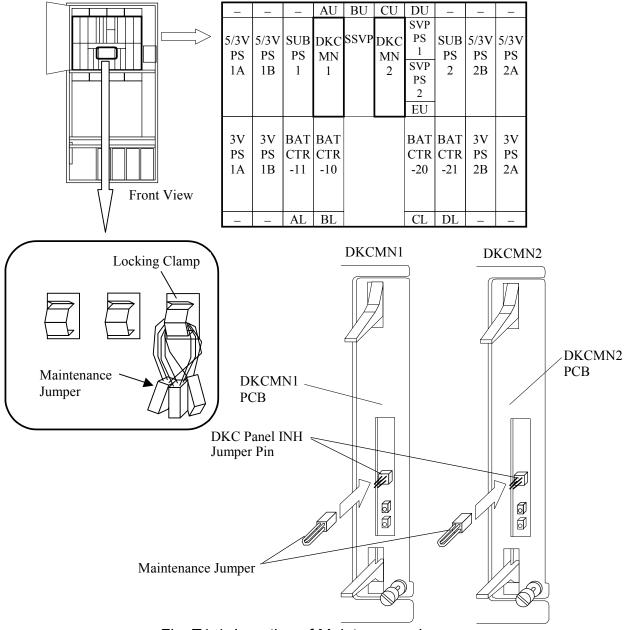


Fig. T1-1 Insertion of Maintenance Jumpers

- 3. Remove the plate from the Movable rack.
  - a. Loosen the screw and remove the plate from the Movable rack.

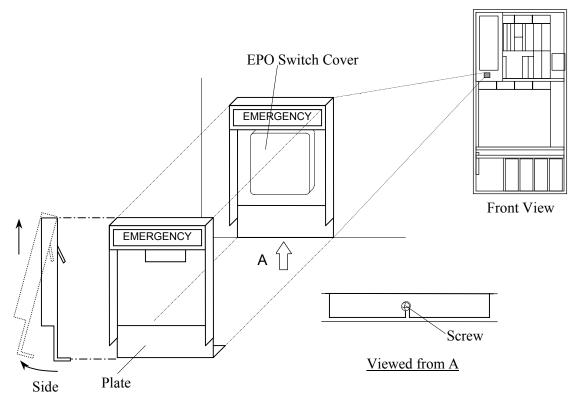


Fig. T1-2 Removal of Plate

b. Remove the EPO Switch cover.

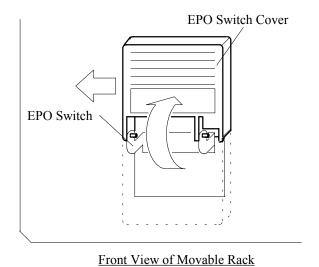


Fig. T1-3 Removal of EPO Switch Cover

REV.0 Jun.2001			
----------------	--	--	--

c. Loosen the three screws and remove the plate.

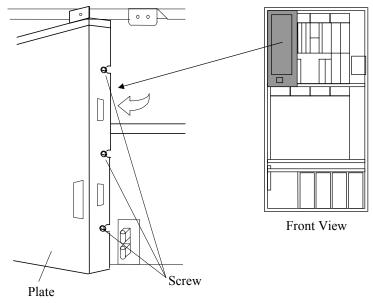


Fig. T1-4 Removal of Plate

- 4. Replace the PCB.
  - a. Disconnect the cables from the DKC Panel PCB.
  - b. Loosen the six screws and remove the DKC Panel PCB from the Movable rack.
  - c. Attach the spare PCB and fasten the six screws.
  - d. Connect the cables to the spare PCB.

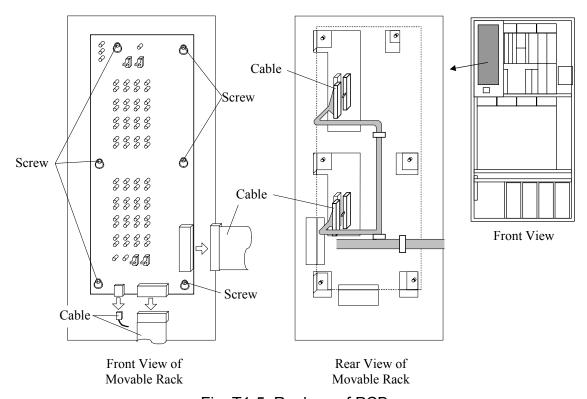


Fig. T1-5 Replace of PCB

REV.0 Jun.2001			
----------------	--	--	--

- 5. Make sure of condition of the EPO switch.
  - a. Make sure that the EPO switch is in normal condition. If the EPO switch is in a condition in which it has been operated, return its condition to normal by pressing the plunger after pressing down the spring.

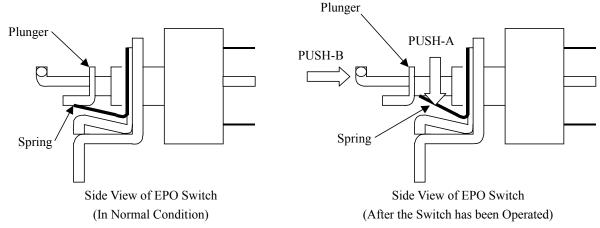


Fig. T1-6 Condition of the EPO switch

- 6. Attach the Plate.
  - a. Attach the plate to the Movable rack and fasten the three screws. Refer to Fig. T1-4.
  - b. Attach the EPO Switch cover. Refer to Fig. T1-3.
  - c. Attach the plate and fasten the screw. Refer to Fig. T1-2.
- 7. Go to SVP post procedure t1 [REP04-320].

## **A** CAUTION


Disconnect the Maintenance Jumper from the connector plug on the DKCMN according to the guidance of SVP.

REV.0	Jun.2001				
-------	----------	--	--	--	--

K6602675-

# [HARDWARE T2]

Location	Function Name of Component					
Front of DKC	1 EPO Switch					
(Reference)						
The related PCB for replacement of EPO Switch						
1. DKCMN PCB (Front PS Box)						

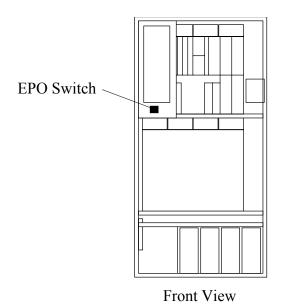

#### NOTICE:

REV.0 Jun.200			
---------------	--	--	--

1. Connect the Maintenance Jumper connector to the connector plug on the DKCMN1 and DKCMN2.

### **A** CAUTION

A system down is caused if the Maintenance Jumper is not inserted. Be sure to insert the Maintenance Jumper before starting the work.

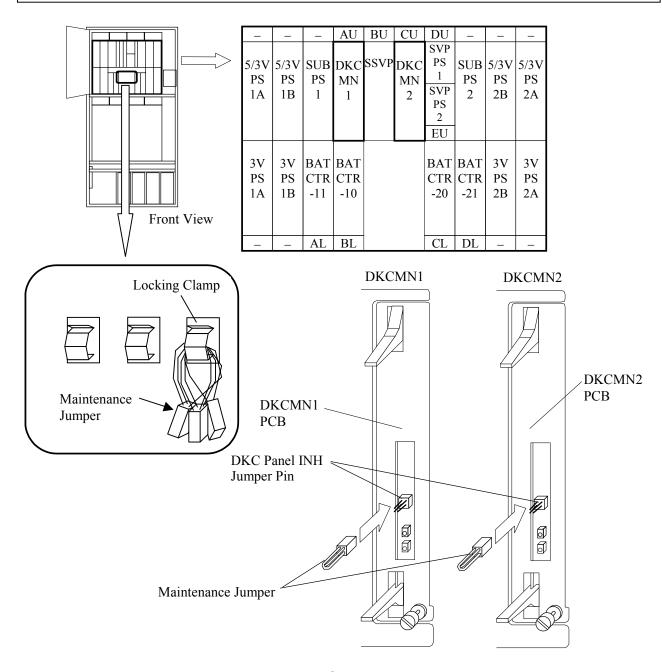


Fig. T2-1 Insertion of Maintenance Jumpers

- 2. Remove the plate from the Movable rack.
  - a. Loosen the screw.
  - b. Pull the plate forward, then lift up and remove it. (Make sure you don't pull and turn off EPO switch.)

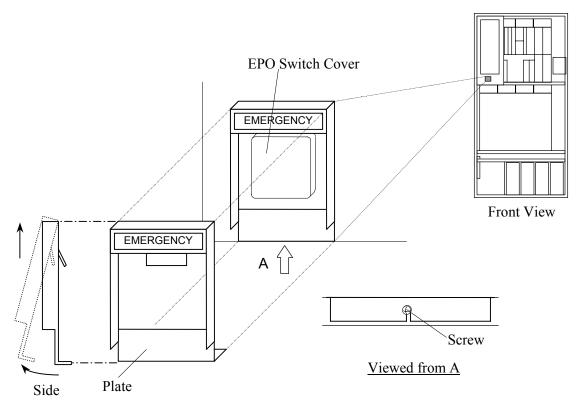


Fig. T2-2 Removal of Plate

c. Remove the EPO switch cover.

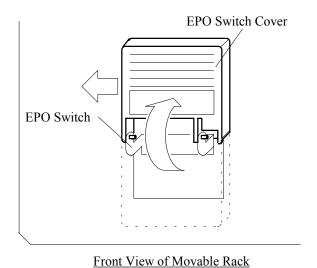


Fig. T2-3 Removal of EPO Switch Cover

d. Loosen the three screws and remove the plate.

## A CAUTION

When removing the plate of the DKC panel, do it with care not to touch the EPO switch.

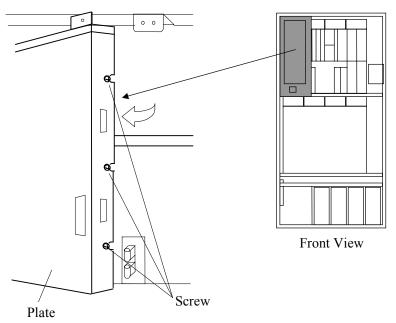


Fig. T2-4 Removal of Plate

- 3. Remove the EPO Switch.
  - a. Disconnect the cable from the DKC panel.
  - b. Loosen the two screws and remove the EPO switch.

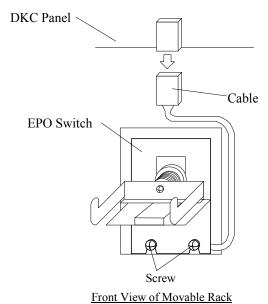


Fig. T2-5 Removal of EPO Switch

REV.0 Jun.20					
--------------	--	--	--	--	--

- 4. Make sure of condition of the spare part EPO switch.
  - a. Make sure that the spare part EPO switch is in normal condition. If the spare part EPO switch is in a condition in which it has been operated, return its condition to normal by pressing the plunger after pressing down the spring.

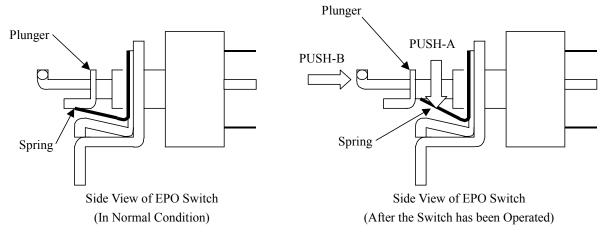


Fig. T2-6 Condition of the spare part EPO switch

- 5. Attach the EPO Switch
  - a. Attach the spare EPO switch with the two screws. Refer to Fig. T2-5.
  - b. Connect the cable to the DKC panel.
  - c. Attach the plate and fasten the three screws. Refer to Fig. T2-4.
  - d. Attach the EPO switch cover. Refer to Fig. T2-3.
  - e. Attach the plate and fasten the screw. Refer to Fig. T2-2.
- 6. Go to SVP post procedure t1 [REP04-320].




Disconnect the Maintenance jumper from the connector plug on the DKCMN according to the guidance of SVP.

REV.0 Jun	.2001				
-----------	-------	--	--	--	--

K6602675-

# [HARDWARE T3]

Location	Function Name of Component		Part Name
Front PS Box	1	DKCMN1 or DKCMN2	• SH307-A
			• SH307-B (for UPS)

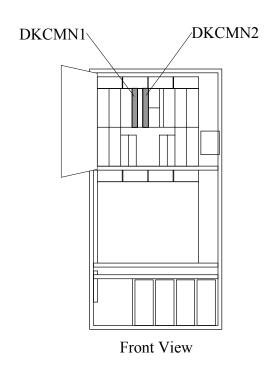

### NOTICE:

Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

Copyright ©2001, Hitachi, Ltd.

REV.0 Jun.2001			
----------------	--	--	--

#### DKCMN1 or DKCMN2


Note: Do not replace DKCMN1 PCB and DKCMN2 PCB at the same time.


If you want to replace the both PCB, first complete the replacement of one PCB and then start the replacement of the other.

1. Check that the Shut Down LED is on. (only hot replace)


## **A** CAUTION

A system down is caused by a replacement of the DKCMN PCB other than that to be replaced. Make sure that it is the DKCMN PCB to be replaced.

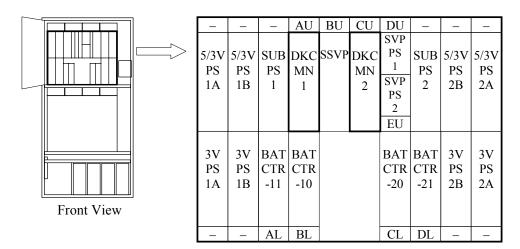

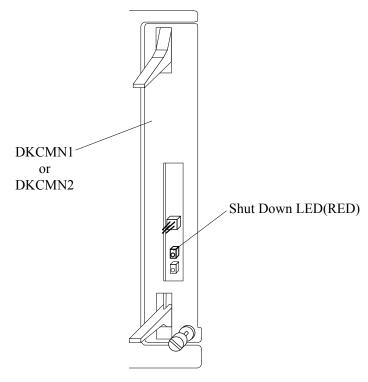

- 2. Replace the DKCMN PCB.
  - a. Loosen the screw and remove the DKCMN PCB.
  - b. Insert the spare DKCMN PCB and fasten the screw.

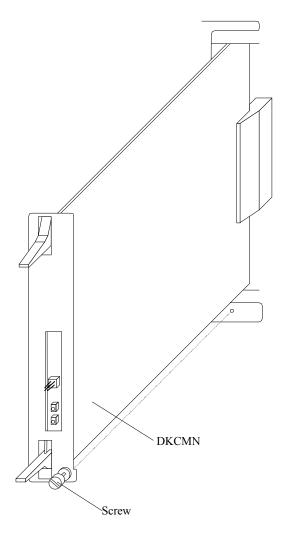

3. Go to SVP post procedure t1 [REP04-320].

REV.0
-------

K6602675-


## [HARDWARE T4]

Location	Function Name of Component		Part Name
Lower left front of	1	PCI CON	• SH218-A
DKC			

#### (Reference)

The related PCB for replacement of PCI CON.

- 1. DKC Panel PCB (Front of DKC)
- 2. DKCMN PCB (Front PS Box in DKC)

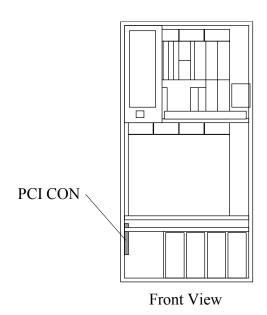


#### NOTICE:


REV.0 Jun.200				
---------------	--	--	--	--

## A CAUTION

- 1: Replacement of PCI CON Panel causes other devices running on the same PCI connection line to be powered off except a and b shown below (because giving the EPO instruction is assumed). Therefore, stop the other device before performing replacement.
  - a. If PCI cable is not connected to the replacing DKC.
  - b. If the replacing DKC (DKC concerned) is connected to the end of the PCI cable as shown below.

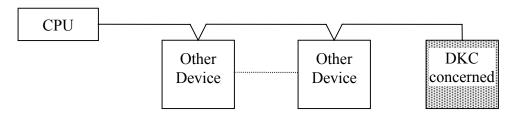

- 2: The COMP signal of PCI is turned off, if the PCI cable is disconnected.
- 1. Confirm that the REMOTE/LOCAL Switch of DKC Panel is set to LOCAL. If not, set the REMOTE/LOCAL Switch to LOCAL.

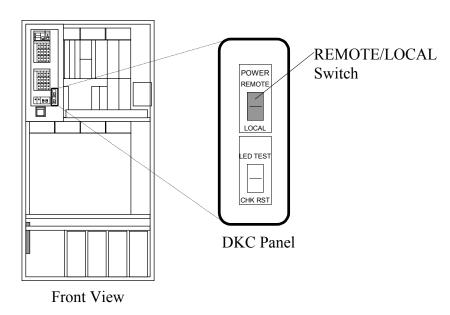


REV.0 Jun.2001			
----------------	--	--	--


2. Connect the Maintenance Jumper to the connector plug on the DKCMN1 and DKCMN2.

## **A** CAUTION


A system down is caused if the Maintenance Jumper is not inserted. Be sure to insert the Maintenance Jumper before starting the work.

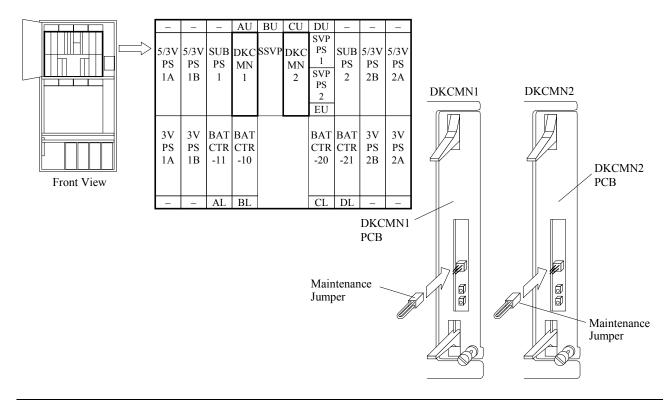


3. Set the jumper connectors(J1 and J2) of the spare PCI CON PCB to the same positions as those of the failed PCB.

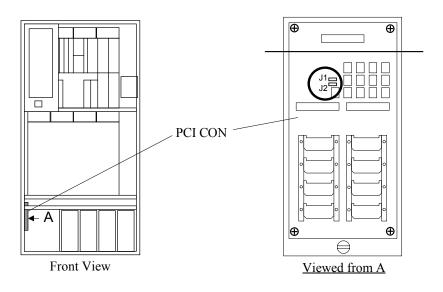

- 4. Replace the PCI CON.
  - a. Disconnect all cables from PCI CON.
  - b. Loosen the screw① and remove the screw② from base plate.
  - c. Slide the plate and turn it using the screw① as an axis.
  - d. Remove the screw3 and remove the PCI CON.

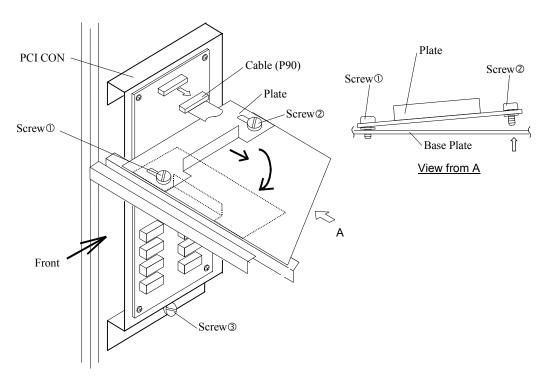


- 5. Remove the plate from the failed PCB, and then attach them to the spare PCB.
  - a. Remove the six screws and the plate from the failed PCB.
  - b. Attach the plate to the spare PCB and fasten the six screws.

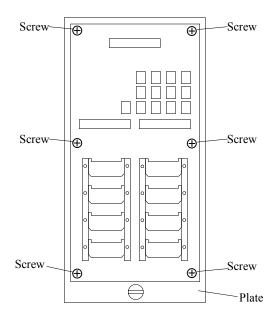

REV.1 Jun.20	01 Feb.2002				
--------------	-------------	--	--	--	--

- 6. Attach the PCI CON.
  - a. Attach the PCI CON and fasten the screw②.
  - b. Slide the plate and fasten the screw① and ②.
  - c. Connect the cables.

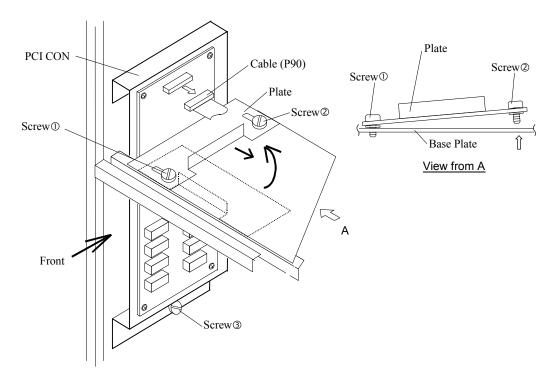


- 7. Restore the REMOTE/LOCAL switch on the DKC panel in step 1.
- 8. Disconnect the Maintenance Jumper from the connector plug on the DKCMN.
- 9. Go to SVP post procedure t1 [REP04-320].

K6602675-

# [HARDWARE T5]

Location	Function Name of Component				
Top of Box	1	Fan Assembly		DKC FAN ASSY (A)	
				DKC FAN ASSY (B)	

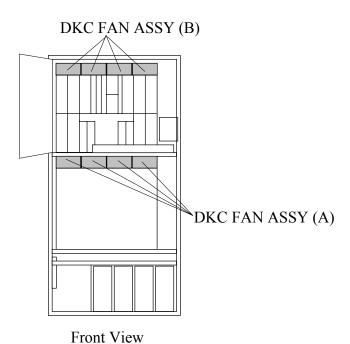

#### NOTICE:

REV.0 Jun.2001
----------------


### Fan Assembly



Hazardous rotating mechanism:

Can cause injury if touched. Stay clear of it when machine is running.

- 1. The following figure shows the correct way to replace the Fan Assembly.
  - a. Loosen the screw.
  - b. Replace the Fan Assembly.
  - c. Fasten the screw.

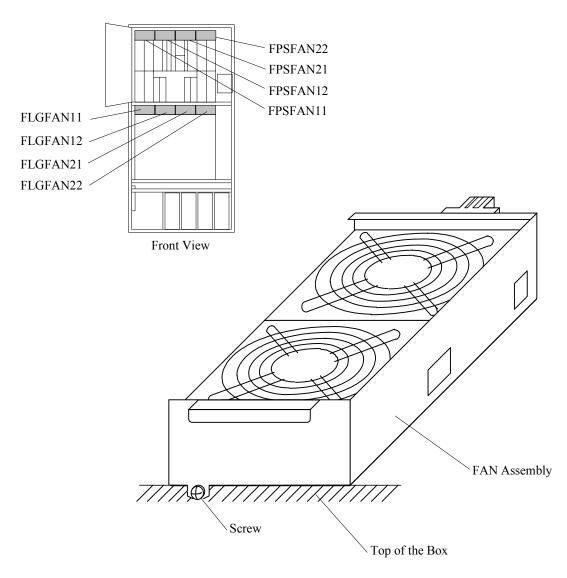


2. Go to SVP post procedure t3 [REP04-900].

REV.0 Jun.
------------

## [HARDWARE T6]

Location		Function Name of Component	
Front Logic Box	1	Thermostat Assembly	

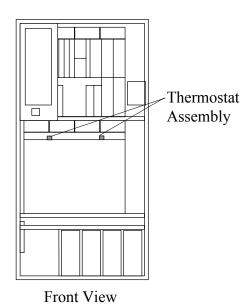


#### NOTICE:

REV.0 Ju	n.2001				
----------	--------	--	--	--	--

### Thermostat Assembly

- 1. The following figure shows the correct way to replace the Thermostat Assembly.
  - a. Disconnect the cable.
  - b. Loosen the screw and remove the thermostat assembly.
  - c. Attach a spare thermostat assembly and tighten the screw.
  - d. Connect the cable.

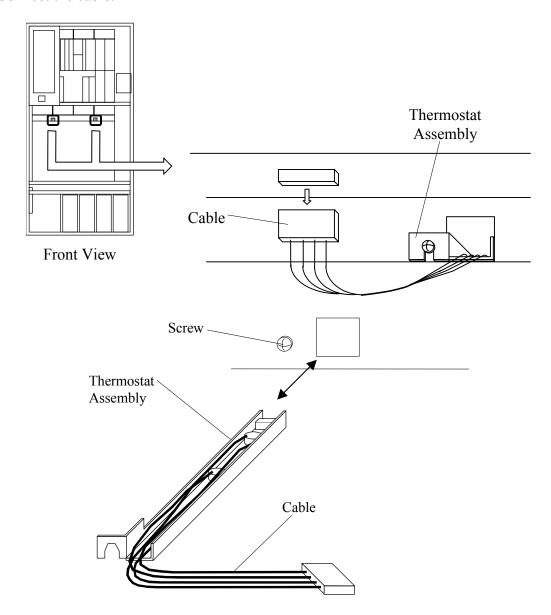


2. Go to SVP post procedure t3 [REP04-900].

REV.0
-------

## [HARDWARE T7]

Location	Function Name of Component		Part Name	
Front upside of	1 SVP ASSY		• FLORA270HX (HITACHI)	
DKC	2	Flash Memory Card	• PCCF-H128MS	
	3	Additional SVP Memory		

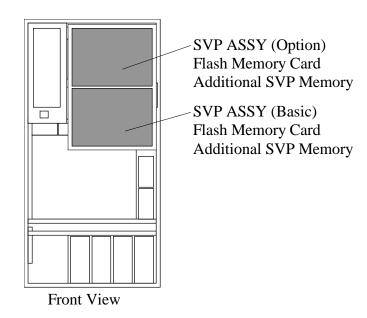

### NOTICE:

REV.1 Jun.2001	n.2001	2001 May.2002			
----------------	--------	---------------	--	--	--

#### Replacement of SVP ASSY

- 1. Open the front door and then open the DKC panel.
- 2. Turn the SVP Assy and turn off the power for the SVP. (When you operate this operation from Pre-Procedure T1, do not this operation.)
- 3. Open the SVP frame.

#### SVP frame type1

a. Loosen the screw① and open the SVP frame.

#### SVP frame type2

- a. Loosen the screw② and the SVP stopper is slide to the left.
- b. Open the SVP ASSY (Basic).
- c. Loosen the screw3 and open the SVP frame.

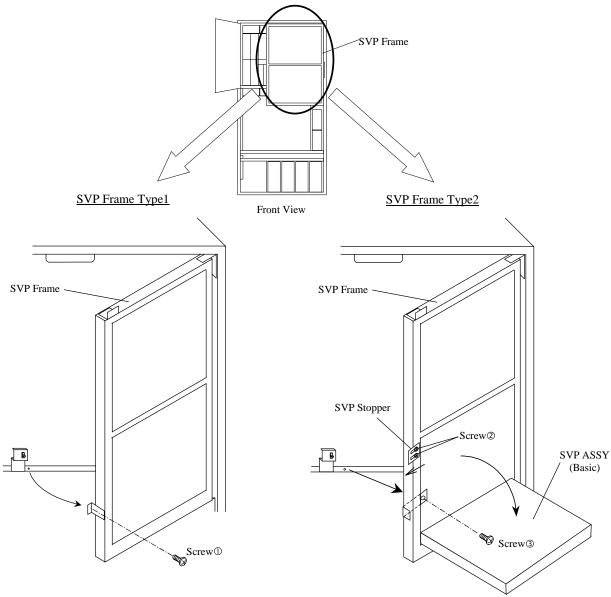


Fig. T7.1-1 Open the SVP Frame

#### 4. Insert the Jumper.

#### Replacement of Basic SVP ASSY

a. Insert the maintenance jumper into JP1 on the RS CON PCB.

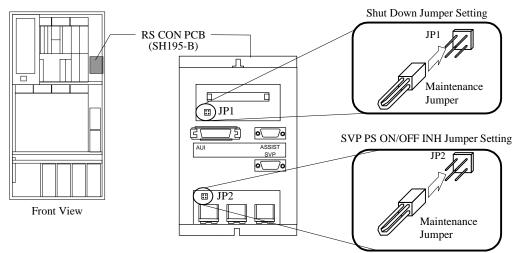


Fig. T7.1-2 Jumper settings of RS CON PCB

### Replacement of Option SVP ASSY

a. Insert the maintenance jumper into PS SD on the SVPPS BOX.

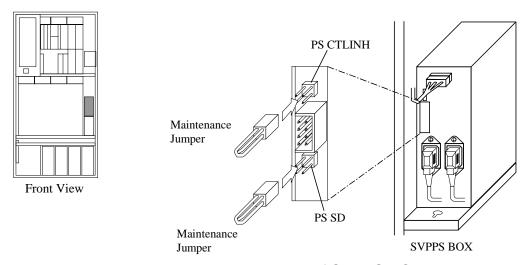


Fig. T7.1-3 Jumper settings of SVPPS BOX

#### 5. Remove the cables.

#### Replacement of Basic SVP ASSY

a. Disconnect the cables (PSVP-1 and RSVP-1) from the RS CON PCB.

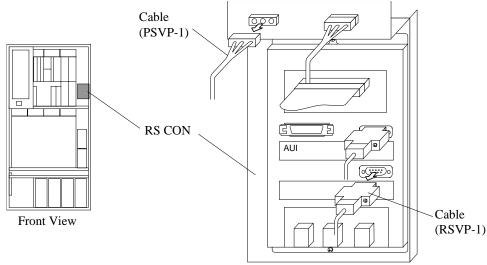


Fig. T7.1-4 Disconnect of Cables

b. Disconnect the LAN cable (LSVP-1) from the HUB BOX.

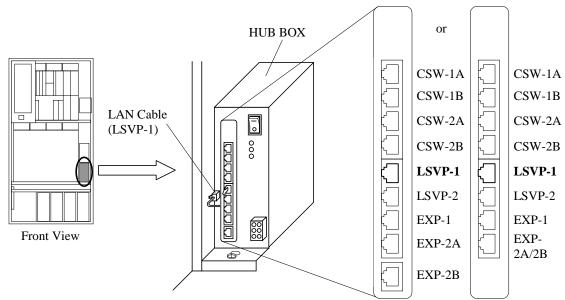


Fig. T7.1-5 Disconnect of LAN Cable

c. Open the locking clamps and remove the cables.

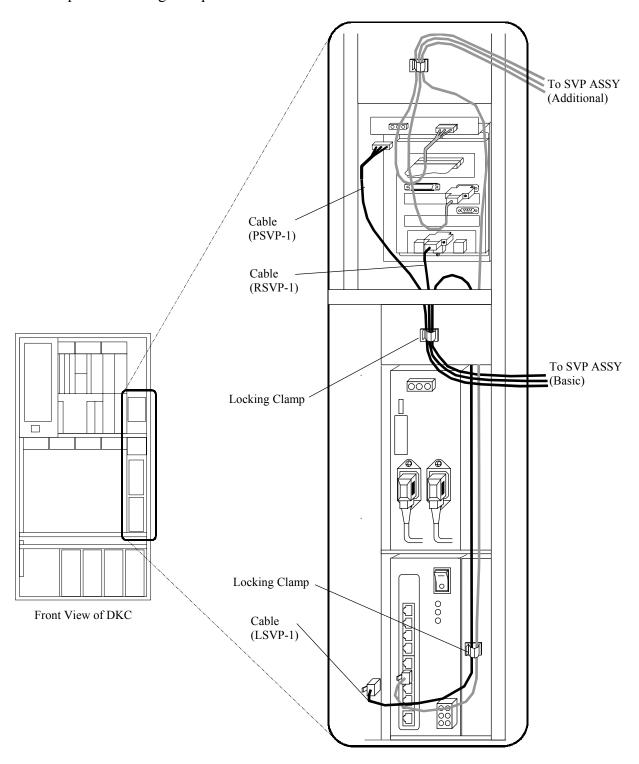


Fig. T7.1-6 Removal of Cables

#### Replacement of Option SVP ASSY

a. Disconnect the cables (PSVP-2 and RSVP-2) from the RS CON PCB.

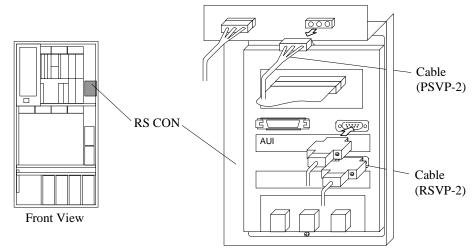


Fig. T7.1-7 Disconnect of Cables

b. Disconnect the LAN cable (LSVP-2) from the HUB BOX.

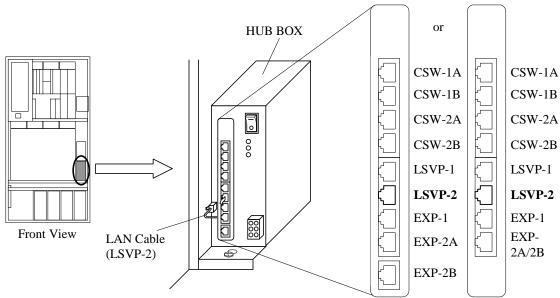


Fig. T7.1-8 Disconnect of LAN Cable

c. Open the locking clamps and remove the cables.

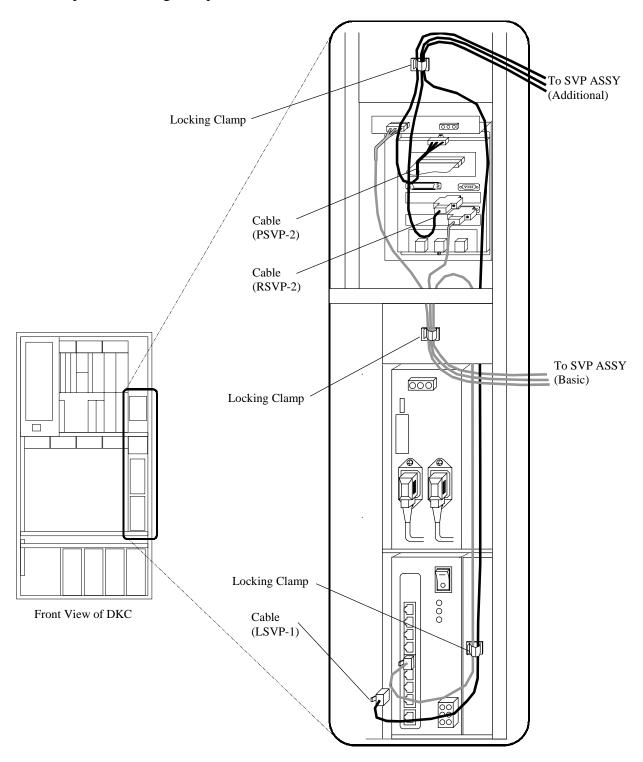


Fig. T7.1-8A Removal of Cables

- 6. Remove the SVP cover.
  - a. Close the SVP frame.
  - b. Loosen the screws and remove the SVP cover.

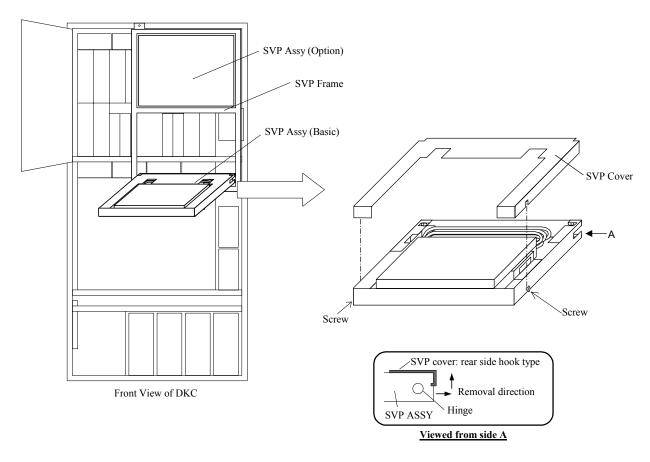
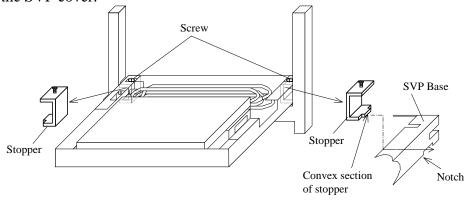


Fig. T7.1-9 Removing SVP cover

- 7. Loosen the screws and remove the stopper.
- 8. Pull out the defective SVP Assy.
- 9. Remove the flash memory card which are attached to the SVP and attach it to a spare SVP. (See REP03-540.)
- 10. Install a spare SVP Assy.
  - a. Loosen the screws and remove the SVP cover and stopper from the SVP Assy.
  - b. Remove the Additional SVP memory which are attached to the SVP and attach it to a spare SVP. (See REP03-541 through 03-544.)
  - c. Install the SVP Assy to the SVP frame and attach the stoppers with screws. At the time, confirm that the convex sections of the stoppers are inserted into the notches of the SVP base.
  - d. Attach the SVP Assy cables to the RS CON PCB and HUB BOX. And then close the four locking clamps. (See Fig. T7.1-7.)
  - e. Install the SVP cover.



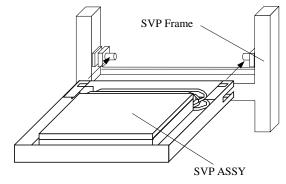


Fig. T7.1-10 Removing and installing the SVP Assy

#### 11. Set the Jumper.

#### Replacement of Basic SVP ASSY

- a. Remove the maintenance jumper of the JP1 on the RS CON PCB. (See Fig. T7.1-2.) (When the maintenance jumper is pulled off, power supply of the SVP is turned on.)
- b. Insert the maintenance jumper into the JP2 on the RS CON PCB. (See Fig. T7.1-2.)

#### Replacement of Option SVP ASSY

- a. Remove the maintenance jumper of the PS SD on the SVPPS BOX. (See Fig. T7.1-3.) (When the maintenance jumper is pulled off, power supply of the SVP is turned on.)
- b. Insert the maintenance jumper into the PS CTLINH on the SVPPS BOX. (See Fig. T7.1-3.)

#### 12. Go to SVP post procedure t1 [REP04-320].

REV.2

#### Replacement of Flash Memory Card


- 1. Open the front door and then open the DKC panel.
- 2. Turn the SVP Assy and turn off the power for the SVP.
- 3. Insert the jumper.

#### Replacement of Basic SVP ASSY

d. Insert the maintenance jumper into JP1 on the RS CON PCB. (See Fig. T7.1-2 [REP03-470].)

#### Replacement of Option SVP ASSY

- e. Insert the maintenance jumper into PS SD on the SVPPS BOX. (See Fig. T7.1-3 [REP03-480].)
- 4. Loosen the screws and remove the SVP cover. (See Fig. T7.1-9 [REP03-520].)
- 5. Operate the card IN/OUT lever to remove the flash memory card from the SVP.
- 6. Insert a spare flash memory card.

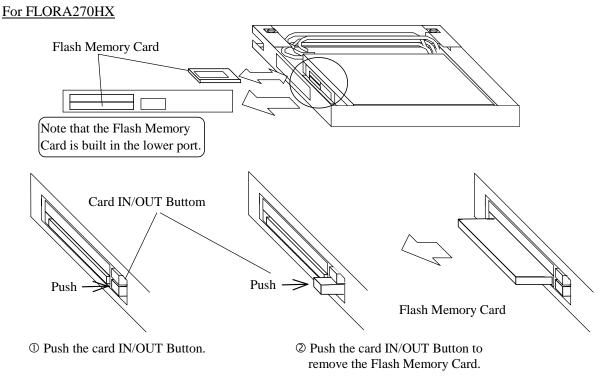

#### How to remove the Flash Memory Card

Fig. T7.2-1 Replacing the flash memory card (for FLORA270HX)

- 7. Attach the SVP cover.
- 8. Pull out the maintenance jumper on the RS CON PCB or SVPPS BOX. (See Fig. T7.1-2 [REP03-470].)

(When the maintenance jumper is pulled off, power supply of the SVP is turned on.)

9. Go to SVP post procedure t1 [REP04-320].

REV.1

#### Replacement of Additional SVP Memory

- 1. Open the front door and then open the DKC panel.
- 2. Turn the SVP ASSY and turn off the power for the SVP.
- 3. Loosen the screw and open the SVP frame. (See Fig. T7.1-1 [REP03-460].)
- 4. Insert the jumper.

#### Replacement of Basic SVP ASSY

Insert the maintenance jumper into JP1 on the RS CON PCB. (See Fig. T7.1-2 [REP03-470].)

#### Replacement of Option SVP ASSY

Insert the maintenance jumper into PS SD on the SVPPS BOX. (See Fig. T7.1-3 [REP03-470].)

5. Remove the cables.

#### Replacement of Basic SVP ASSY

- a. Disconnect the RS232C cable (RSVP-1) from the RS CON PCB. (See Fig. T7.1-4 [REP03-480].)
- b. Disconnect the LAN cable (LSVP-1) from the HUB BOX.
   Disconnect the SVP PS cable (PSVP-1) from the CON PLATE. (See Fig. T7.1-5 [REP03-480].)
- c. Open the locking clamps and remove the cables. (See Fig. T7.1-6 [REP03-490].)

#### Replacement of Option SVP ASSY

- a. Disconnect the RS232C cable (RSVP-2) from the RS CON PCB. (See Fig. T7.1-7 [REP03-500].)
- b. Disconnect the LAN cable (LSVP-2) from the HUB BOX.
   Disconnect the SVP PS cable (PSVP-2) from the CON PLATE. (See Fig. T7.1-8 [REP03-500].)
- c. Open the locking clamps and remove the cables. (See Fig. T7.1-8A [REP03-510].)
- 6. Loosen the screws and remove the SVP cover. (See Fig. T7.1-9 [REP03-520].)
- 7. Loosen the screws and remove the stopper. (See Fig. T7.1-10 [REP03-530].)
- 8. Pull out the defective SVP ASSY. (See Fig. T7.1-10 [REP03-530].)

Codyriant ©2002. Hitachi. Lt	©2002, Hitachi, Ltd.
------------------------------	----------------------

REV.0	May.2002				
-------	----------	--	--	--	--

9. Remove the DC Cable LAN Cable and LAN Port cable.

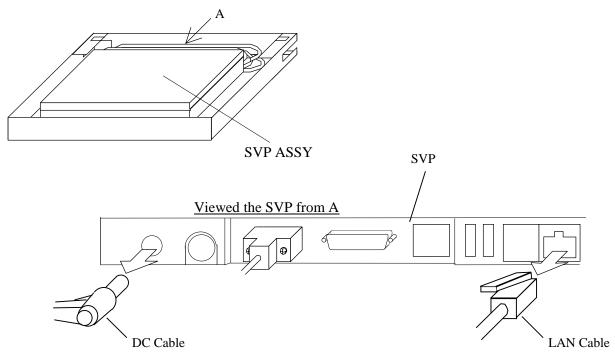


Fig. T7.3-1 Removing and installing Cables

10. Loosen the screw and remove the SVP stoppers.

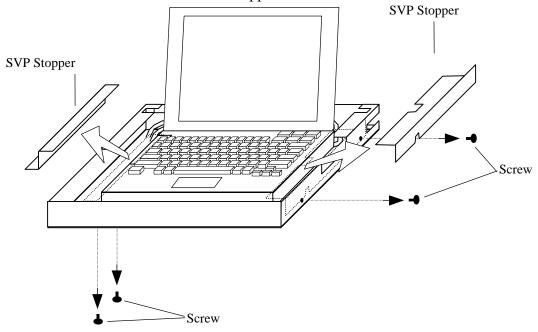


Fig. T7.3-2 Removing and installing the SVP Stoppers

REV.0
-------

11. Remove the RS232C Cable from the SVP ASSY.


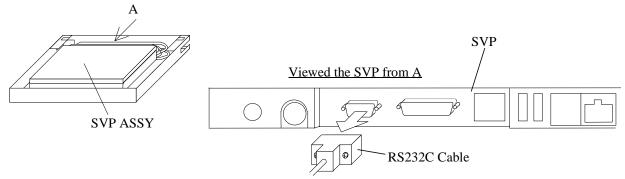



Fig. T7.3-3 Removing and installing RS232C Cable

#### 12. Replacement of Additional SVP Memory

a. Loosen the screw and remove the Memory cover.

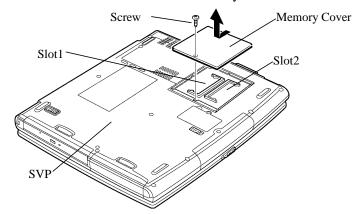

b. Remove the Memory module.

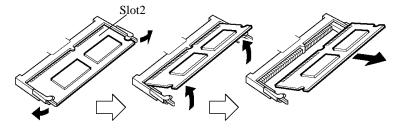

- c. Insert the Memory module.
- d. Attach the Memory cover with screw.

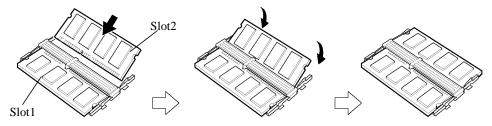


Fig. T7.3-4 Replacing the Additional SVP Memory

REV.0 May.2002				
----------------	--	--	--	--

#### 13. Install a SVP.

- a. Attach the SVP and RS232C Cable. (See Fig. T7.3-3.)
- b. Install the SVP to the SVP ASSY and attach the SVP stoppers with screws. (See Fig. T7.3-2)
- c. Connect the LAN cable and DC cable to the SVP. (See Fig. T7.3-1.)

#### 14. Install a SVP Assy.

- a. Install the SVP to the SVP ASSY and attach the SVP stoppers with screws. (See Fig. T7.1-10 [REP03-530].)
- b. Attach the SVP ASSY cables to the RS CON PCB, HUB BOX and CON PLATE. And then close the locking clamps. (See Fig. T7.1-2 through T7.1-8A [REP03-470 through 520].)
- c. Attach the SVP cover. (See Fig. T7.1-9 [REP03-520].)

#### 15. Set the Jumper.

#### Replacement of Additional SVP Memory of Basic SVP ASSY

- a. Remove the maintenance jumper of the JP1 on the RS CON PCB. (See Fig. T7.1-2 [REP03-470].)
- b. Insert the Maintenance jumper into the JP2 on the RS CON PCB. (See Fig. T7.1-2 [REP03-470].)

#### Replacement of Additional SVP Memory of Option SVP ASSY

- a. Remove the maintenance jumper of the PS SD on the SVPPS BOX. (See Fig. T7.1-3 [REP03-470].)
- b. Insert the Maintenance jumper into the PS CTLINH on the SVPPS BOX. (See Fig. T7.1-3 [REP03-470].)


Copyright ©2002, Hitachi, Ltd.

REV.0 May.2002			
----------------	--	--	--

K6602675-

# [HARDWARE T8]

Location	ocation Function Name of Component		Part Name
Front PS Box	1	SSVP PCB	• SH313-A

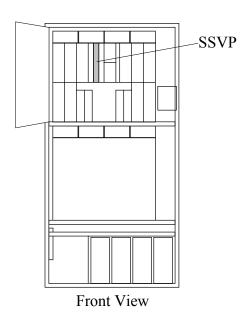


#### NOTICE:


Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

REV.0 Ju	n.2001				
----------	--------	--	--	--	--

#### SSVP PCB

- 1. Checking that the shut-down LED is turned on.
  - a. Check that the shut-down LED on the SSVP PCB in the front PS box is turned on.
- 2. Replacing the SSVP PCB.
  - a. Disconnect the cable from SSVP PCB.
  - b. Loosen the screw and remove the SSVP PCB.
  - c. Inset the spare SSVP PCB and fix it with the screw.
  - d. Connect the cable to the SSVP PCB.
  - e. Push the SSVP ALARM RESET switch.

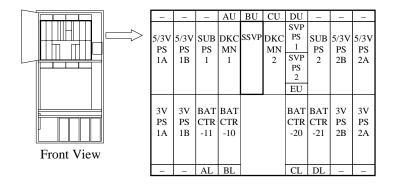

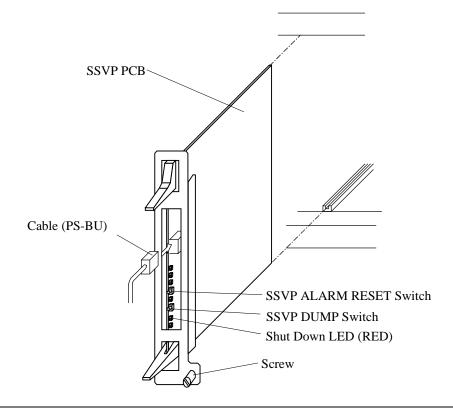


3. Go to SVP post procedure t1 [REP04-320].

K6602675-

# [HARDWARE T11]

Locat	ion	F	unction Name of Component		Part Name
Lower	front	1	BATTERY BOX	•	BATTERY-10 (CL1 Shared Memory)
				•	BATTERY-11 (CL1 Cache Memory)
				•	BATTERY-20 (CL2 Shared Memory)
				•	BATTERY-21 (CL2 Cache Memory)

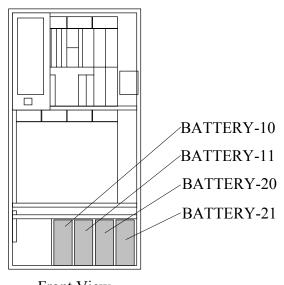

### Front View

#### NOTICE:

Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

REV.0 Jun.2001
----------------

#### **BATTERY BOX**

#### CAUTION

The weight of the battery box is 20 kg. When you handle it, be sure to hold the grip at the front and rear sides by both hands firmly.

Paying attention to falls:


If the battery box falls, injury may occur. Hold the battery box firmly by both hands and use caution to prevent it from falling.

Watching for short-circuits:

A Short-circuit may cause a fire.


Never insert metal or the like into the battery box connector or a short-circuit may occur.

1. Insert the pins of the digital voltmeter into the Connectors on the spare part to make sure that battery voltage is within the allowable voltage.

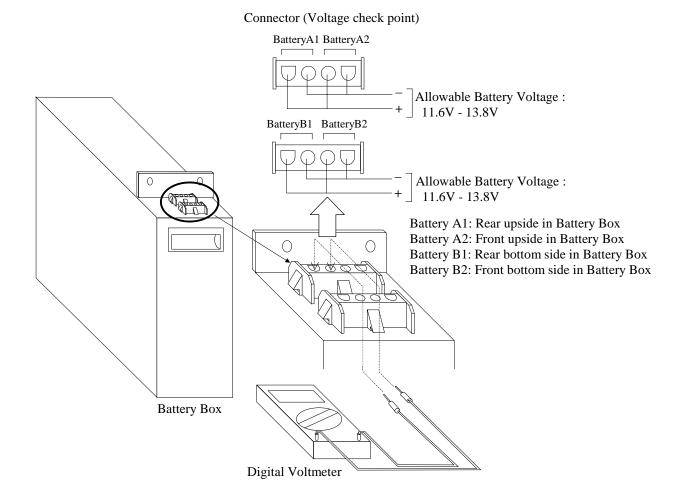

REV.1 Jun.2001	Feb.2002				
----------------	----------	--	--	--	--

- 2. Replacing the battery box.
  - a. Remove the cables connected to the battery box you intend to remove.
  - b. Loosen the screws and remove the battery box.
  - c. Insert the spare battery box and tighten with the screws.
  - d. Connect the cables to the battery box.

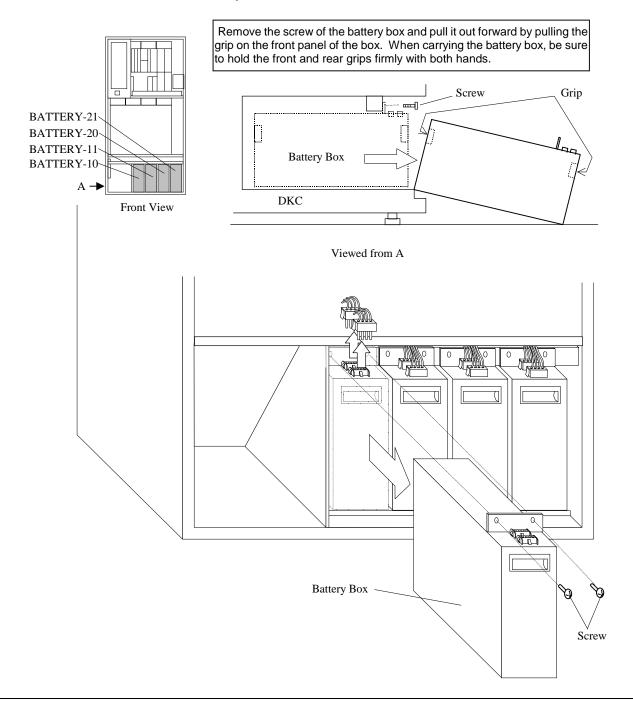


3. Go to SVP post procedure t3 [REP04-900].

K6602675-

# [HARDWARE T12]

Location	Function Name of Component	Part Name
Front PS Box	1 BAT CTR (Battery Control) PCB	• SH200-A

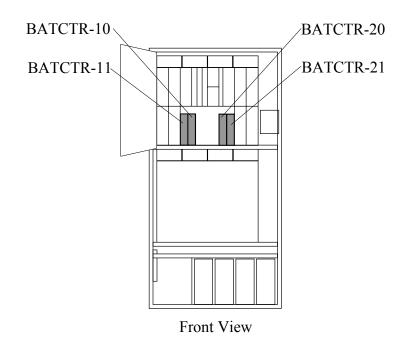

#### NOTICE:


Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.


Copyright ©2001, Hitachi, Ltd.

REV.0 Jun.2	2001			
-------------	------	--	--	--

#### **BAT CTR PCB**

- 1. Replacing the BAT CTR PCB.
  - a. Loosen the screw① and turn the stopper. (Perform this when replacing the BATCTR-10/11 only.)
  - b. Remove the jumper connector connected to the BAT CTR PCB you intend to remove.
  - c. Loosen the screw2 and remove the BAT CTR PCB.
  - d. Replace the BAT CTR PCB with a spare BAT CTR PCB.
     Don't connect the Jumper Connector before insertion of the PCB.
  - e. Insert the spare BAT CTR PCB and tighten with the screw②. Then, insert the jumper connector removed in step 'b' described above.
  - f. Return the stopper and tighten the screw①. (Perform this when replacing the BATCTR-10/11 only.)

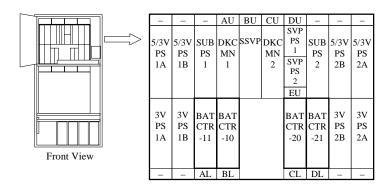

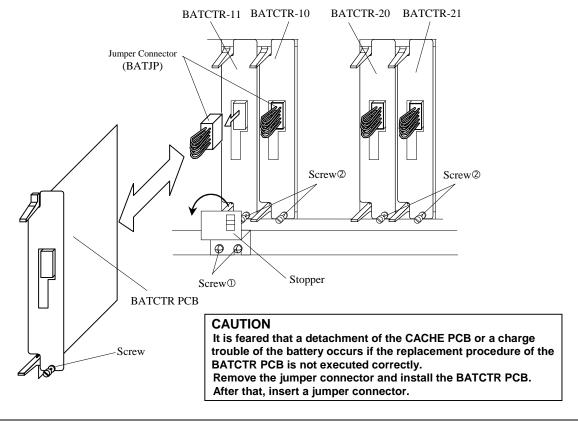


2. Go to SVP post procedure t3 [REP04-900].

K6602675-

# [HARDWARE T13]

Location		Function Name of Component	Part Name
Front PS Box	1	3V Power Supply	• PPD03130
			• HS0429
	2	5/3V Power Supply	• PPD5002-1
			• HS0482
	3	SUB Power Supply	• PPD7502
			• HS0591

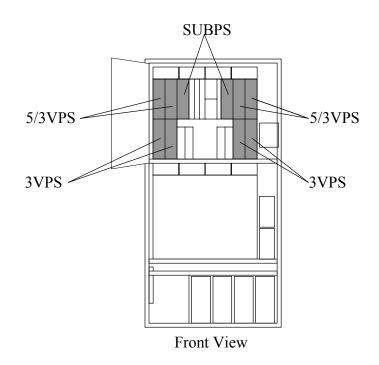

REV.0 Jun.200			
---------------	--	--	--

#### Replacement of Power Supply


- 1. Open the front door and then open the DKC panel.
- 2. Turn the SVP Assy and turn off the power for the SVP. (When you operate this operation from Pre-Procedure T1, do not this operation.)
- 3. Open the SVP frame.

#### SVP frame type1

a. Loosen the screw① and open the SVP frame.

#### SVP frame type2

- a. Loosen the screw② and the SVP stopper is slide to the left.
- b. Open the SVP ASSY (Basic).
- c. Loosen the screw3 and open the SVP frame.

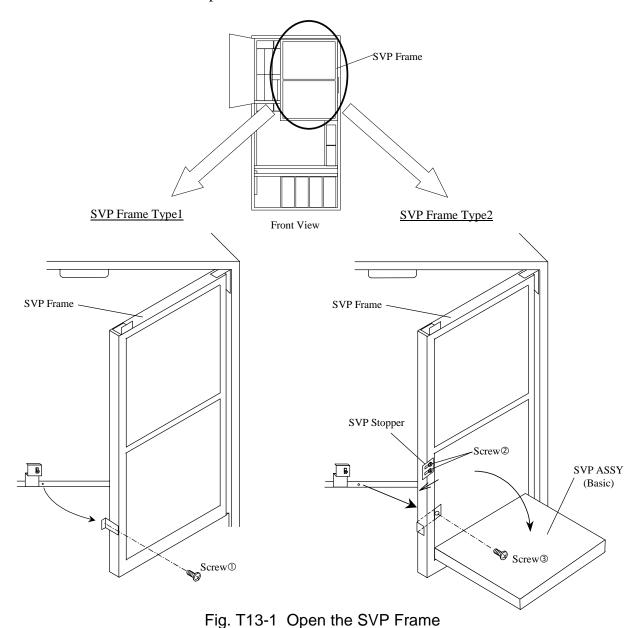

- 3. The following figure shows the correct way to replace the power supply (PS).
  - a. Set PS Enable/Disable Switch to Disable (DOWN).

### A CAUTION

A system down may be caused by setting the PS Enable/Disable switch of the power supply other than that to be replaced to "Disable". Make sure that it is a power supply to be replaced.

- b. Remove the power supply lever and disconnect the inlet cable.
- c. Loosen the screw and remove the failed PS.
- d. Perform the short circuit check on the spare power supply. (Refer to REP03-650.)
- e. Confirm that PS Enable/Disable Switch of spare PS is set to Disable (DOWN)
- f. Insert the spare PS and fasten the screw.
- g. Connect the inlet cable and secure it with the lever.
- h. Set PS Enable/Disable Switch to Enable (UP).

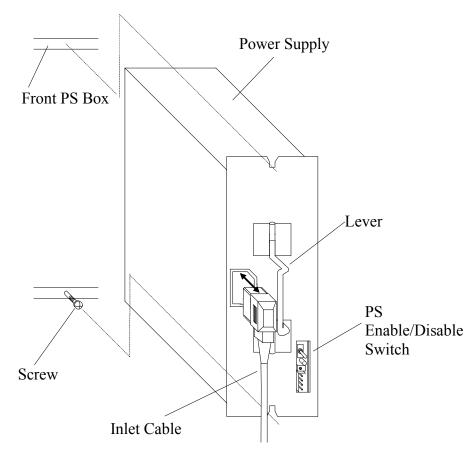


Fig. T13-2 Replacement of Power Supply

- 4. Close the SVP frame and fasten the screw.
- 5. Go to SVP post procedure t3 [REP04-900].

REV.0 Jun.200					
---------------	--	--	--	--	--

#### Procedure for short circuit check on the power supply

- a. Check the power supply for short circuit by connecting the voltage checking jig to the short circuit check point of the power supply as shown below.
- b. Measure the resistance at the check points on the individual power supply before installation shown below. Confirm that the measured resistance values are over the value shown in the table below. If the resistance values are not over the value, replace it to the new part.

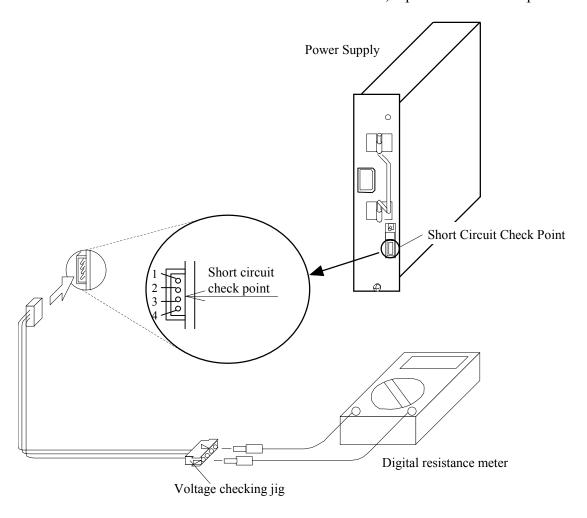


Fig. T13-3 Short Circuit Check Point

Table T13-1 Short Circuit Check Point


PS	Check pin	Resistance
3V PS	Between 1 and 4	1.7 kΩ
5/3V PS	Between 1 and 4	1.7 kΩ
	Between 2 and 4	1.7 kΩ
SUB PS	Between 1 and 4	1.7 kΩ
	Between 2 and 4	1.7 kΩ

Note: Pin number 4 is ground.

REV.1 Jun.2001	Feb.2002				
----------------	----------	--	--	--	--

# [HARDWARE T15]

Location		Function Name of Component	Part Name
Rear Side	1	Multi Power Supply	• PPD13502
			• HS1182

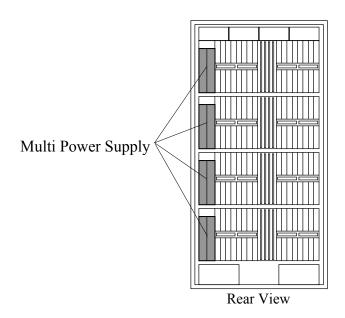

REV.0	Jun2001				
-------	---------	--	--	--	--

#### Replacement of Multi Power Supply

- 1. The following figure shows the correct way to replace the multi power supply (MPS).
  - a. Set PS Enable/Disable Switch to Disable (DOWN).

### A CAUTION

A system down may be caused by setting the PS Enable/Disable switch of the power supply other than that to be replaced to "Disable". Make sure that it is a power supply to be replaced.

- b. Disconnect the inlet cable and remove the two screws ①.
- c. Move up the rubber absorber.
- d. Remove the multi power supply (MPS).
- e. Perform the short circuit check on the spare power supply. (Refer to REP03-680.)
- f. Set the jumper plugs of the spare power supply. (Refer to LOCATION06-120.)
- g. Confirm that PS Enable/Disable Switch of the spare PS is set to Disable (DOWN).
- h. With the rubber absorber set down, insert the spare PS. Shock caused by the insertion is absorbed by the rubber absorber.
- i. With the rubber absorber set up, push the MPS into the HDU box until secure.
- j. Secure the MPS with the two screws ① and connect the inlet cable.
- k. Set PS Enable/Disable Switch to Enable (UP).

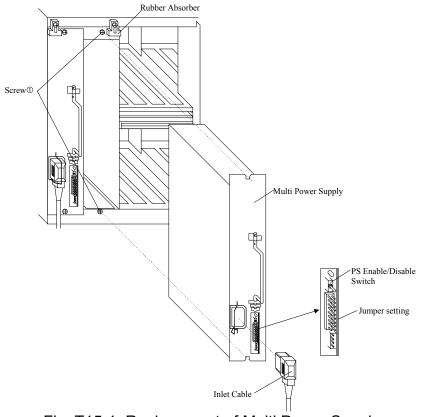


Fig. T15-1 Replacement of Multi Power Supply

2. Go to SVP post procedure t4 [REP04-1000].

#### Procedure for short circuit check on the power supply

- a. Check the power supply for short circuit by connecting the voltage checking jig to the short circuit check point of the power supply as shown below.
- b. Measure the resistance at the check points on the individual power supply before installation shown below. Confirm that the measured resistance values are over the value shown in the table below. If the resistance values are not over the value, replace it to the new part.

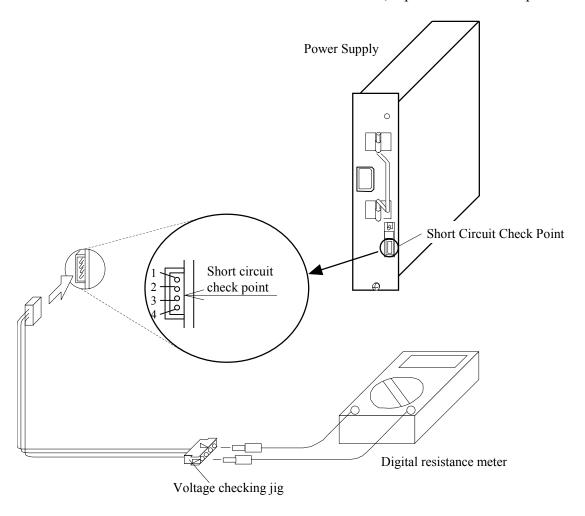


Fig. T15-2 Short Circuit Check Point

Table T15-1 Short Circuit Check Point

PS	Check pin	Resis	tance
		TAJ-490HS	PPD5002
Multi PS	Between 1 and 4	1.7 kΩ	1.7 kΩ
	Between 2 and 4	1.7 kΩ	1.7 kΩ


Note: Pin number 4 is ground.

REV.1 Jui	ın2001 Feb.2002				
-----------	-----------------	--	--	--	--

# [HARDWARE T16]

Location		Function Name of Component
Top of HDD BOX	1	HDD FAN Assembly

#### **HDD FAN Assembly**

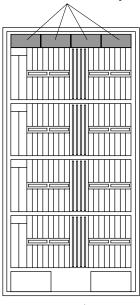

Rear View

#### NOTICE:

Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

REV.0 Jun.200			
---------------	--	--	--

#### Replacement of HDD FAN Assembly

### **A** CAUTION

### Hazardous rotating mechanism

Can cause injury if touched. Stay clear when machine is running.

- 1. The following figure shows the correct way to replace the HDD FAN Assembly.
  - a. Disconnect the cables (x-P401 and x-P402) from the HDD FAN Assembly.
  - b. Loosen the two screws.
  - c. Replace the HDD FAN assembly.
  - d. Fasten the screw.
  - e. Connect the cables to HDD FAN Assembly.

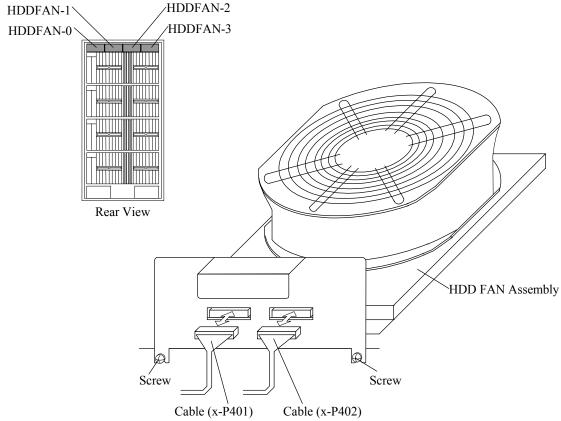


Fig. T16-1 Removal of HDD FAN Assembly


2. Go to SVP post procedure t4 [REP04-1000].

REV.0
-------

K6602675-

# [HARDWARE T19]

Location	Function Name of Component		Part Name	
Upper right front of DKC	1	RS CON (Connector) Panel	• SH195-B	

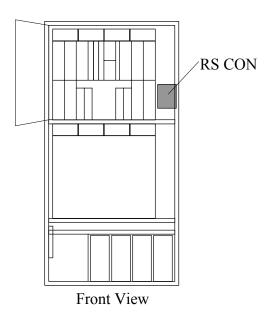

#### NOTICE:

Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

Copyright ©2001, Hitachi, Ltd.

REV.0 Jun.2001
----------------

#### Replacement of RS CON (Connector) Panel

- 1. The following figure shows the correct way to replace the RS CON.
  - a. Disconnect all cables from RS CON.
  - b. Slide the stopper and pull out the Connector.
  - c. Loosen two screws and remove RS CON.
  - d. Attach the RS CON and fasten two screws.
  - e. Attach the Connector and slide the stopper.
  - f. Connect all the cables.

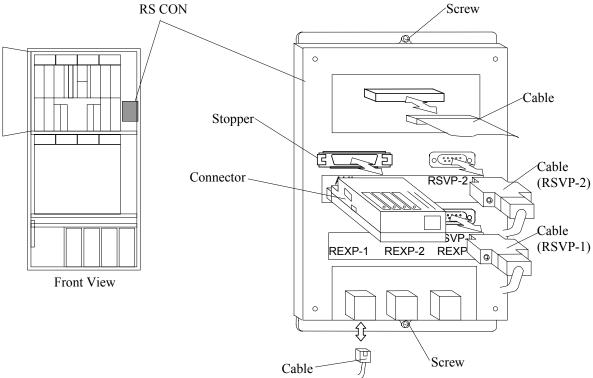



Fig. T19-1 Replacement of RS CON

2. Go to SVP post procedure t1 [REP04-320].

REV.0 Jun.2001			
----------------	--	--	--


# [HARDWARE T20]

Location	Function Name of Component		Part Name
HDU Box	1	FSW PCB	• SH303-A
			• SH303-B
			• SH303-C

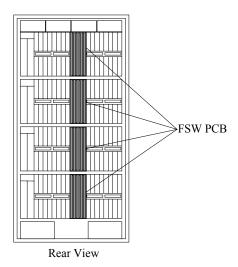

#### NOTICE:

- ① Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.
- ② Replace the FSW to be replaced following the direction given in "Replace the FSW PCB". Make the Shut Down LEDs go out by removing all the FSWs (whose Shut Down LEDs are on) once and then installing them.

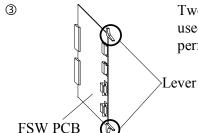

Two types of levers for inserting/removing the FSW, large and small ones, are used. The levers were enlarged to make the operation easier, accordingly their performance and function are the same.

Copyright ©2001,2002, Hitachi, Ltd.

REV.1 Jun.2	2001 Feb.2002				
-------------	---------------	--	--	--	--

- 1. Replace the FSW PCB.
  - a. Loosen the screws ① and remove the cable cover.
  - b. Check Shut Down LED on the FSW PCB.

### **A** CAUTION

A system down is caused by a replacement of the FSW PCB other than that to be replaced. Make sure that it is the FSW PCB to be replaced.

- c. Disconnect the DEV interface cables.
- d. Loosen the screw 2 and rotate the stopper.
- e. Make sure that the model name of the spare FSW PCB is correct.
- f. Replace the FSW PCB.
- g. Rotate the stopper and fasten the screw ②.
- h. Connect the DEV interface cables.
- i. Attach the cable cover with the screws ①.

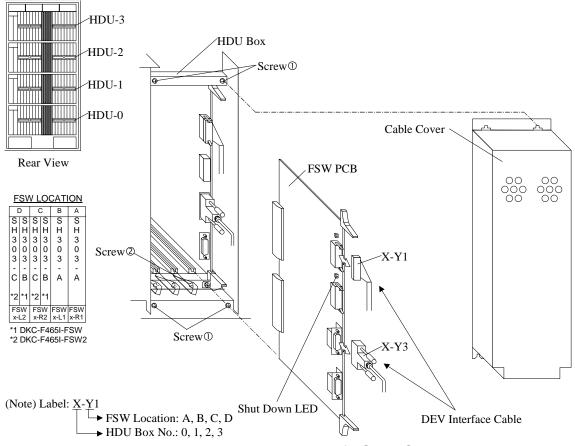


Fig. T20-1 Replacement of FSW PCB

2. Go to SVP post procedure j [REP04-270].

### [HARDWARE T21]

Location	Function Name of Component	Part Name
Lower Rear	1 AC BOX (Single Phase 50A Model)	•AC BOX-0, 1
of DKC	2 AC BOX (3 Phase 30A Model)	•AC BOX-0, 1
	3 AC BOX (Single Phase 30A Model)	•AC BOX-0, 1


#### (Reference)


The related parts for replacement of AC BOX-0

- 1. DKC PANEL PCB (Front Upside in DKC)
- 2. Circuit breakers on the power distribution panel that are connected to the AC BOX-0

The related parts for replacement of AC BOX-1

- 1. DKC PANEL PCB (Front Upside in DKC)
- 2. Circuit breakers on the power distribution panel that are connected to the AC BOX-1

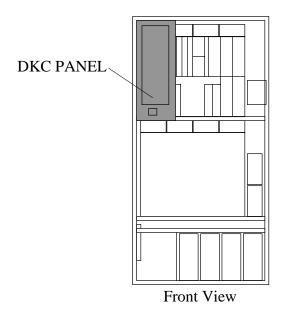

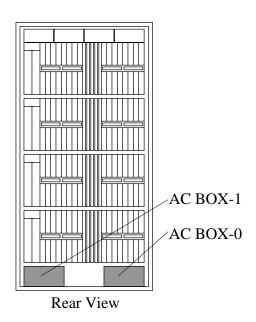

#### NOTICE:

Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

REV.1 Jun.2001	Jun.2002		
----------------	----------	--	--

### Replacement of AC BOX for Single Phase 50A Model

- 1. Open the front door.
- 2. Connection of the Jumper.
  - a. Connect the Maintenance Jumper to the connector on the DKC Panel PCB.

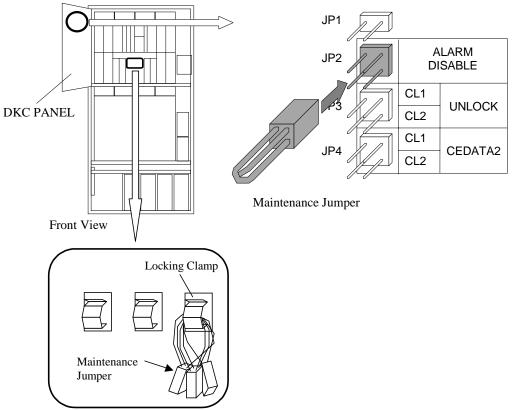


Fig. T21-1 Connection of Alarm INH Jumper

#### 3. Power Off the Component to be Replaced

### **A** WARNING

#### Be Careful of Electric Shock

- The power to the device is still on after turning off the breakers shown below.
- The device may be powered off when turning off the breakers not shown below.
- The circuit has residual voltage for one minute after turning off the breakers, so be sure to disconnect all the connectors after this period.
- a. Turn off the circuit breaker (CB101) on AC BOX.

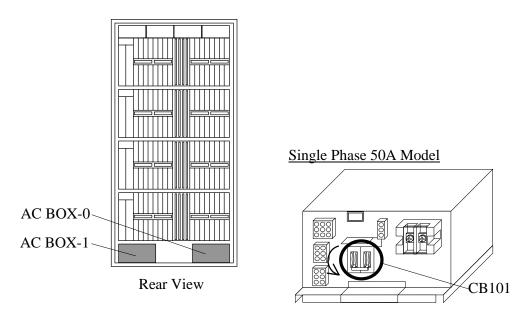


Fig. T21-2 Circuit Breakers to be Turned Off When Replacing AC BOX

b. Turn off the circuit breakers on the power distribution panel in the plant that are connected to AC BOX.



Warning: You will get an electric shock if you fail to turn it off.

Start your work after turning off the breaker on the distribution board connected to the AC BOX.


REV.1 Jun.2001	Jun.2002				
----------------	----------	--	--	--	--

#### 4. Removal of AC BOX

### **A** WARNING

Warning: You will get an electric shock if you fail to turn it off. Start your work after turning off the breaker on the distribution board connected to the AC BOX.


- a. Disconnect the cable connectors (P101-#, P102-#, P103-# and P104-#) from AC BOX.
- b. Remove the terminal block cover from AC BOX. Remove the three screws, and then disconnect the AC power cable and frame ground cable.

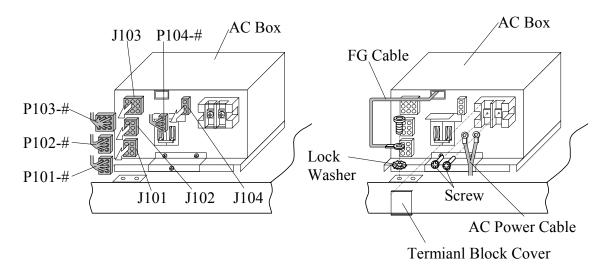

- (1) Removal of Cable Connector
- (2) Disconnection of AC Power Cable

Fig. T21-3 Removal of Cable Connector

- c. Remove the three screws.
- d. Remove AC BOX.

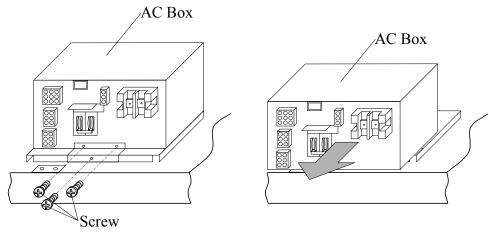


(3)Removal of screws

REV.1

(4) Removal of AC Box

Fig. T21-4 Removal of AC BOX

- 5. Installation of Spare AC BOX
  - a. Check that the circuit breaker (CB101) on the spare AC BOX are turned off.
  - b. Attach the spare AC BOX.
  - c. Secure AC BOX at the front with the screws.

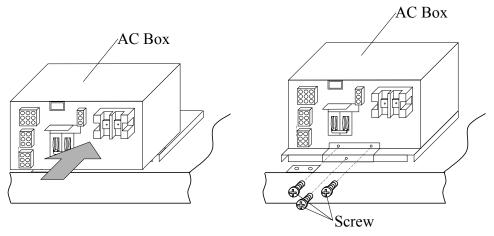

- (1) Attachment of spare AC Box
- (2) Attachment of AC Box

Fig. T21-5 Attachment of AC BOX

- d. Connect the frame ground cable to the frame ground.
- e. Connect the AC power cable to the terminal block. Attach the terminal block cover.

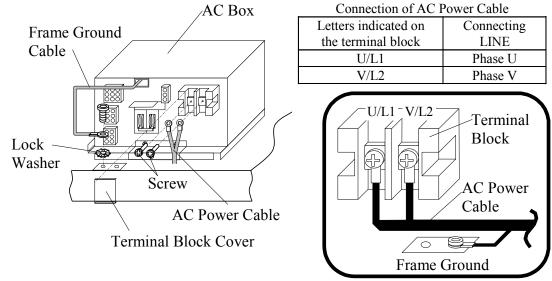


Fig. T21-6 Connection of AC Power Cable

f. Connect the cable connectors (P101-#, P102-#, P103-# and P104-#) to AC BOX.

Table T21-1	Cable Connection	of $\Delta C$ $ROX$

No.	Cable No.		Connector No.	Remarks
	AC BOX-0	AC BOX-1		
1	P101-1	P101-2	J101	
2	P102-1	P102-2	J102	
3	P103-1	P103-2	J103	
4	P104-1	P104-2	J104	

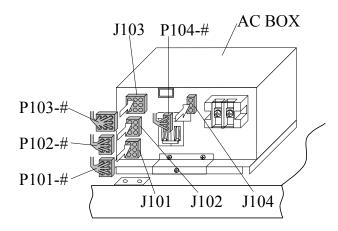


Fig. T21-7 Connection of Cable Connectors

REV.1	Jun.2001 Feb.200	2			
-------	------------------	---	--	--	--

- 6. Power On the Replacement Component
  - a. Turn on the circuit breakers on the power distribution panel that are connected to AC BOX.
  - b. Turn on all the circuit breakers on AC BOX.
  - c. Turn "LED TEST/CHK RST" switch on the DKC panel to "CHK RST".

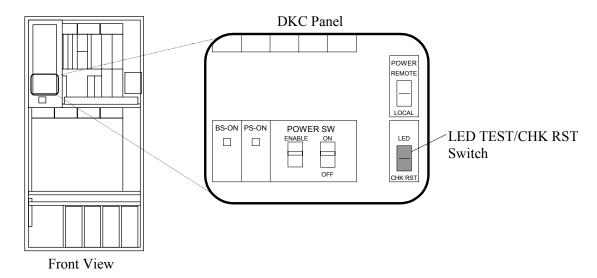


Fig. T21-8 Setting of LED TEST/CHK RST Switch

- 7. Disconnection of the Jumper
  - a. Disconnect the Maintenance Jumper from the connector on the DKC Panel PCB.

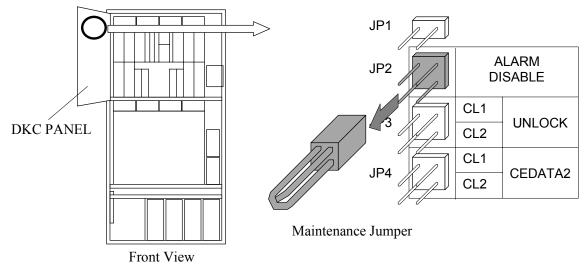


Fig. T21-9 Disconnection of Jumper

8. Go to SVP post-procedure t4 [REP04-1000].

#### Replacement of AC BOX for 3 Phase 30A Model

- 1. Open the front door.
- 2. Connection of the Jumper
  - a. Connect the Maintenance Jumper to the connector on the DKC Panel PCB.

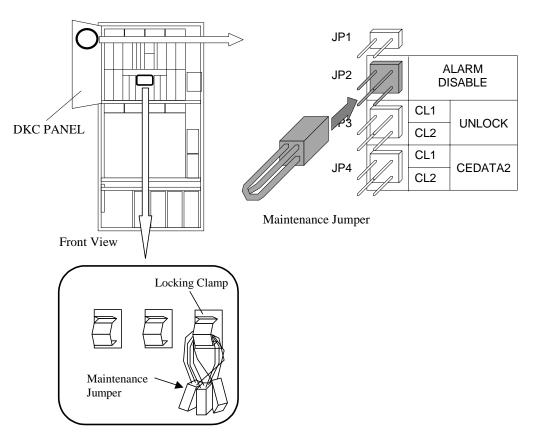


Fig. T21-10 Connection of Alarm INH Jumper

REV.1 Jun.2001	Jun.2002				
----------------	----------	--	--	--	--

#### 3. Power Off the Component to be Replaced

## **A** WARNING

#### Be Careful of Electric Shock

- The power to the device is still on after turning off the breakers shown below.
- The device may be powered off when turning off the breakers not shown below.
- The circuit has residual voltage for one minute after turning off the breakers, so be sure to disconnect all the connectors after this period.
- a. Turn off the circuit breaker (CB101) on AC BOX.

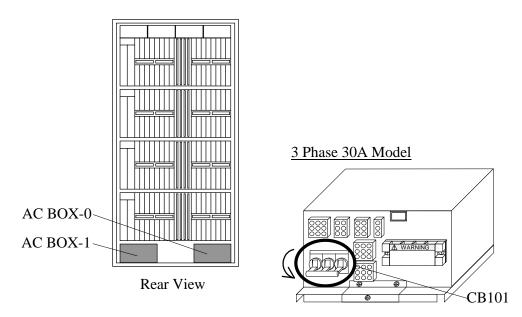


Fig. T21-11 Circuit Breakers to be Turned Off When Replacing AC BOX

b. Turn off the circuit breakers on the power distribution panel in the plant that are connected to AC BOX.



Warning: You will get an electric shock if you fail to turn it off.

Start your work after turning off the breaker on the distribution board connected to the AC BOX.

REV.1 Jun.2001	Jun.2002				
----------------	----------	--	--	--	--


#### 4. Removal of AC BOX

## **A** WARNING

Warning: You will get an electric shock if you fail to turn it off.

Start your work after turning off the breaker on the distribution board connected to the AC BOX.

- a. Disconnect the cable connectors (P101-#, P102-#, P103-# and P104-#) from AC BOX.
- b. Remove the terminal block cover from AC BOX. Remove the screws, and then disconnect the AC power cable and frame ground cable.

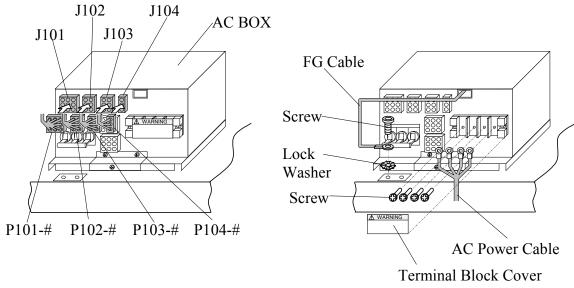

(1) Removal of Cable Connector

(2) Disconnection of AC Power Cable

Fig. T21-12 Removal of Cable Connector

- c. Remove the three screws.
- d. Remove AC BOX.

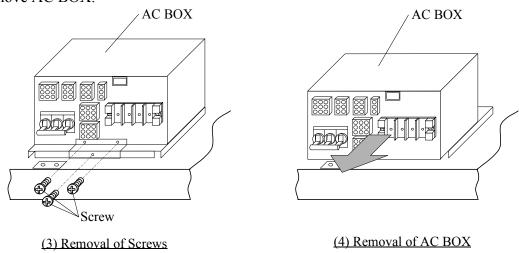


Fig. T21-13 Removal of AC BOX

- 5. Installation of Spare AC BOX
  - a. Check that the circuit breaker (CB101) on the spare AC BOX are turned off.
  - b. Attach the spare AC BOX.
  - c. Secure AC BOX at the front with the screws.

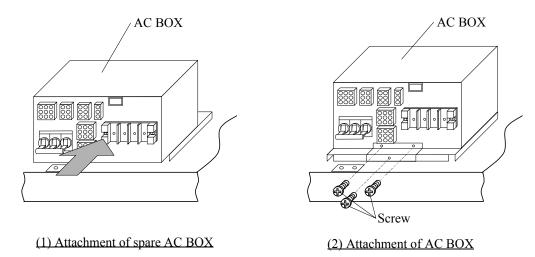


Fig. T21-14 Attachment of AC BOX

- d. Connect the frame ground cable to the frame ground.
- e. Connect the AC power cable to the terminal block. Attach the terminal block cover.

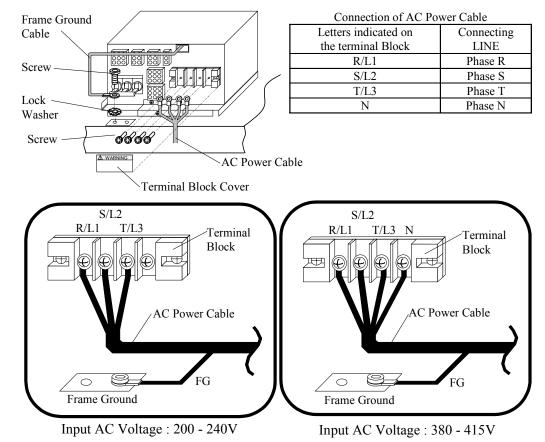


Fig. T21-15 Connection of AC Power Cable

REV.0

f. Connect the cable connectors (P101-#, P102-#, P103-#, P104-# and P105) and dummy connector to AC BOX.


### A CAUTION


The mate connectors of the P105 shown as No.5 in Table T21-2 vary depending on the voltage of the AC power inputted.


Never make a wrong connection because the subsystem will be damaged if the connection is wrongly made.

Table T21-2 Cable Connection of AC BOX

No.	Cable	e No.	Connector No.	Remarks
	AC BOX-0	AC BOX-1		
1	P101-1	P101-2	J101	
2	P102-1	P102-2	J102	
3	P103-1	P103-2	J103	
4	P104-1	P104-2	J104	
5	P105	P105	J105-1	Input AC Voltage
6	Dummy Connector	<b>Dummy Connector</b>	J105-2	200-240V
7	<b>Dummy Connector</b>	<b>Dummy Connector</b>	J105-1	Input AC Voltage
8	P105	P105	J105-2	380-415V

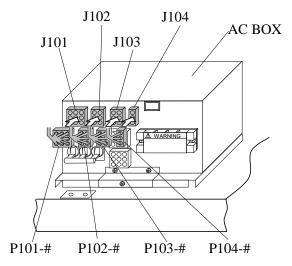

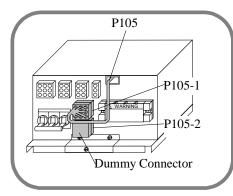

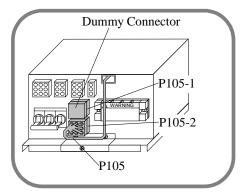

Input AC Voltage: 200-240V Input AC Voltage: 380-415V

Fig. T21-16 Connection of Cable Connector

- 6. Power On the Replacement Component
  - a. Turn on the circuit breakers on the power distribution panel that are connected to AC BOX.
  - b. Turn on all the circuit breakers on AC BOX.
  - c. Turn "LED TEST/CHK RST" switch on the DKC panel to "CHK RST".

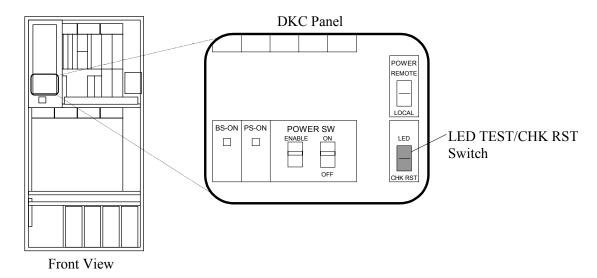


Fig. T21-17 Setting of LED TEST/CHK RST Switch

- 7. Disconnection of the Jumper
  - a. Disconnect the Maintenance Jumper from the connector on the DKC Panel PCB.

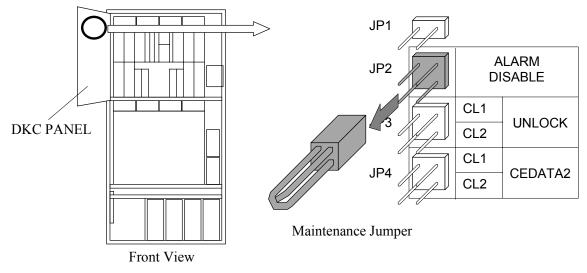


Fig. T21-18 Disconnection of Jumper

8. Go to SVP post-procedure t4 [REP04-1000].

### Replacement of AC BOX for Single Phase 30A Model

- 1. Open the front door.
- 2. Connection of the Jumper
  - a. Connect the Maintenance Jumper to the connector (JP2) on the DKC Panel PCB.

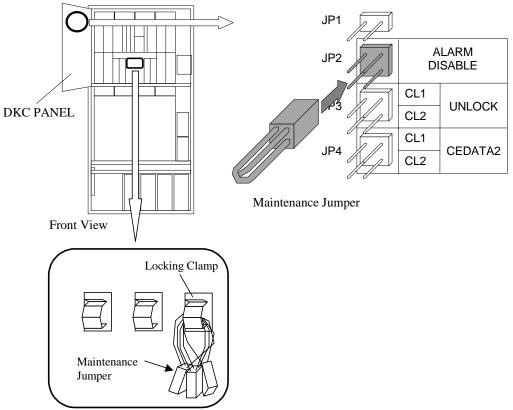


Fig. T21-19 Connection of Alarm INH Jumper

REV.0	Jun.2002					
-------	----------	--	--	--	--	--

3. Power Off the Component to be Replaced

## **A** WARNING

#### Be Careful of Electric Shock

- The power to the device is still on after turning off the breakers shown below.
- The device may be powered off when turning off the breakers not shown below.
- The circuit has residual voltage for one minute after turning off the breakers, so be sure to disconnect all the connectors after this period.
- a. Turn off the circuit breaker (CB101) on the failed AC BOX.

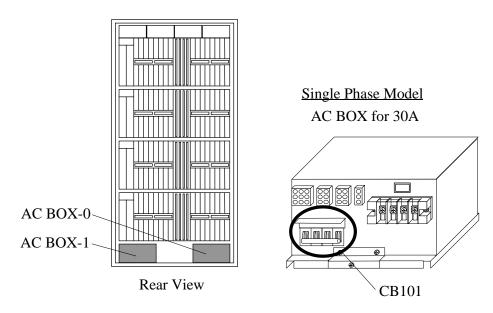


Fig. T21-2 Circuit Breakers to be Turned Off When Replacing AC BOX

b. Turn off the two circuit breakers on the power distribution panel in the plant that are connected to the failed AC BOX.



Warning: You will get an electric shock if you fail to turn it off.

Start your work after turning off the two breakers on the distribution board connected to the AC BOX.

REV.1 Jun.2002	Jul.2002				
----------------	----------	--	--	--	--


#### 4. Removal of AC BOX

## **A** WARNING

Warning: You will get an electric shock if you fail to turn it off.

Start your work after turning off the breaker on the distribution board connected to the AC BOX.


- a. Disconnect the cable connectors (P101-#, P102-#, P103-# and P104-#) from AC BOX.
- b. Remove the terminal block cover from AC BOX. Remove the five screws, and then disconnect the AC power cables and frame ground cable.

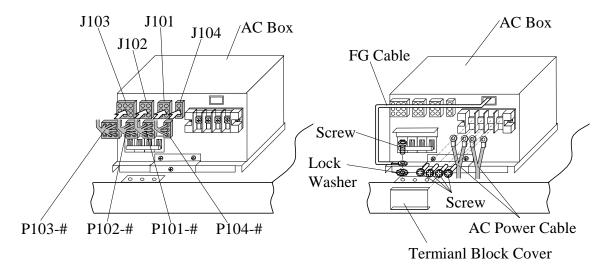

- (1) Removal of Cable Connector
- (2) Disconnection of AC Power Cable

Fig. T21-20 Removal of Cable Connector

- c. Remove the three screws.
- d. Remove AC BOX.

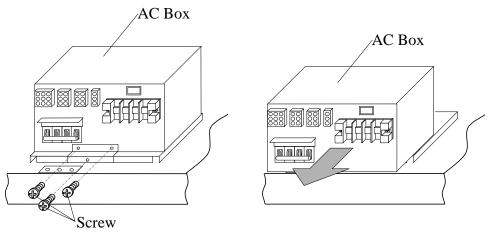


(3)Removal of screws

(4) Removal of AC Box

Fig. T21-21 Removal of AC BOX

REV.0 Jun.2002					
----------------	--	--	--	--	--

- 5. Installation of Spare AC BOX
  - a. Check that the circuit breaker (CB101) on the spare AC BOX is turned off.
  - b. Attach the spare AC BOX.
  - c. Secure AC BOX at the front with the screws.

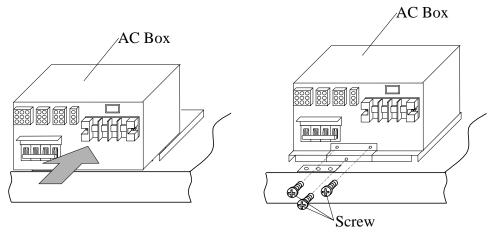

- (1) Attachment of spare AC Box
- (2) Attachment of AC Box

Fig. T21-22 Attachment of AC BOX

- d. Connect the frame ground cable to the frame ground.
- e. Connect the AC power cables to the terminal block. Attach the terminal block cover.

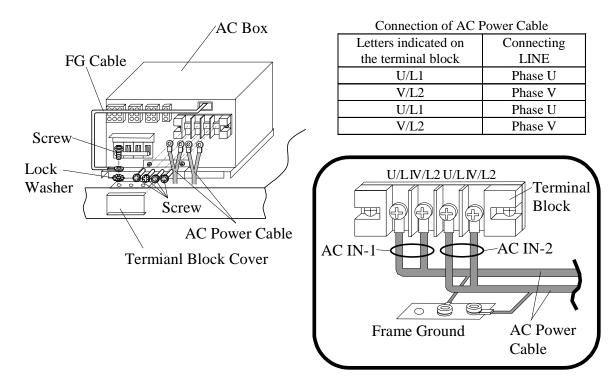


Fig. T21-23 Connection of AC Power Cable

REV.0	Jun.2002				
-------	----------	--	--	--	--

f. Connect the cable connectors (P101-#, P102-#, P103-# and P104-#) to AC BOX.

Table T21-3 Cable Connection of AC BOX

No.	Cable	e No.	Connector No.	Remarks
	AC BOX-0	AC BOX-1		
1	P101-1	P101-2	J101	
2	P102-1	P102-2	J102	
3	P103-1	P103-2	J103	
4	P104-1	P104-2	J104	

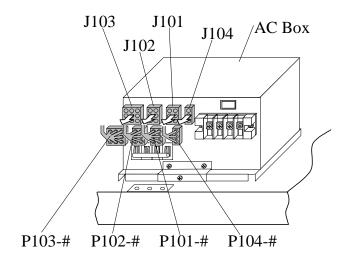


Fig. T21-24 Connection of Cable Connectors

REV.0	Jun.2002					
-------	----------	--	--	--	--	--

- 6. Power On the Replacement Component
  - a. Turn on the two circuit breakers on the power distribution panel that are connected to AC BOX.
  - b. Turn on all the circuit breakers on AC BOX.
  - c. Turn "LED TEST/CHK RST" switch on the DKC panel to "CHK RST".

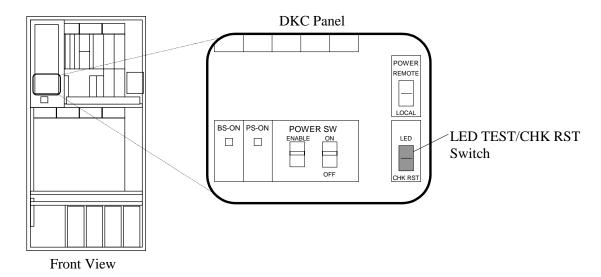


Fig. T21-25 Setting of LED TEST/CHK RST Switch

- 7. Disconnection of the Jumper
  - a. Disconnect the Maintenance Jumper from the connector (JP2) on the DKC Panel PCB.

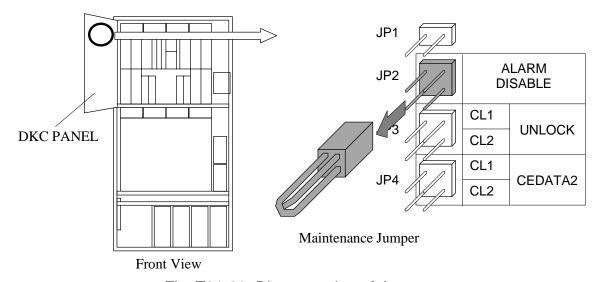



Fig. T21-26 Disconnection of Jumper

8. Go to SVP post-procedure t4 [REP04-1000].

K6602675-

# [HARDWARE T23]

Location		Function Name of Component	Part Name		
Front PS Box	1	SVPPS PCB	• SH111-B		

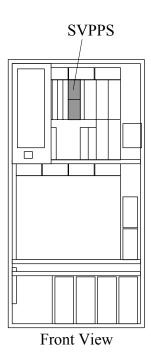

#### NOTICE:

Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

REV.0	Jun.2001			

#### Replacement of SVPPS

Note: Do not replace SVPPS 1 and SVPPS 2 at the same time.


If you want to replace the both PCB, first complete the replacement of one PCB and then start the replacement of the other.

1. Check that the Shut Down LED is on. (only hot replace)

### A CAUTION

A system down is caused by a replacement of the PCB other than that to be replaced. Make sure that it is the PCB to be replaced.

- a. Check that the Shut Down LED is on.
- b. Connect the Maintenance Jumper to the Shut Down connector. When the Maintenance Jumper is inserted, go to step c.
- c. Wait for 15 seconds after inserting the jumper, then go to next operation.

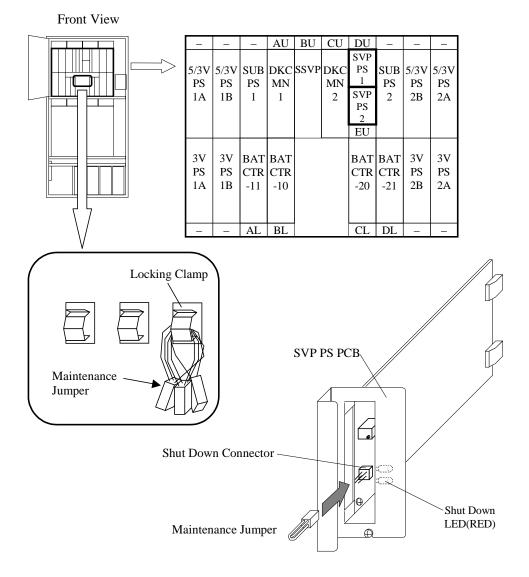


REV.1 Jun.2001	Apr.2002			
----------------	----------	--	--	--

- 2. Replace the SVPPS PCB.
  - a. Loosen the screw and remove the SVPPS PCB.
  - b. Remove the maintenance jumper and connect it to the spare PCB.
  - c. Insert the spare PCB and fasten the screw.

#### Note:

Remove the maintenance jumper attached to the SVP PS PCB in Step (3) following instructions given by the SVP.

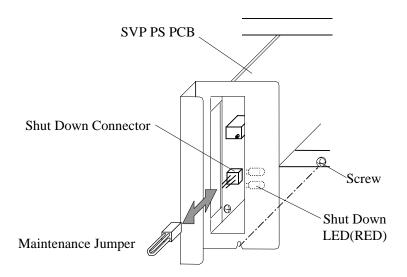


3. Go to SVP post procedure t3 [REP04-900].

REV.1
-------

## [HARDWARE T24]

Location	Function Name of Component		Part Name
HDU Box	1 JMP PCB		• SH304-A

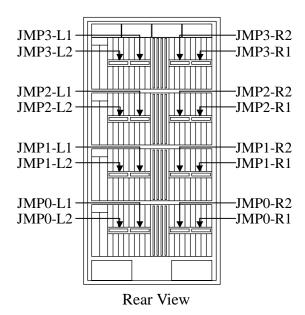

#### NOTICE:

- ① Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.
- ② When the Shut Down LED on the JMP PCB to be replaced is on, replace the JMP PCB irrespective of the status of the HDD ENABLE LED (green) on the JMP PCB concerned.

REV.2 Jun.2001 Feb.2002 Apr	2002
-----------------------------	------

#### Replacement of JMP PCB


#### NOTICE:

- ① When replacing the JMP PCB, check if the switches on the other three JMP PCBs installed in the same HDU BOX are set correctly.
- ② If any of the switches on the JMP PCB to be replaced and the other ones installed are wrongly set, an error of SIM = 3daxxx (such as an LED BUS TEST error) occurs. Set them correctly as shown in the figure below.
- 1. Check that the Shut Down LED is on.



- 2. Replace the JMP PCB.
  - a. Loosen the two screws and remove the JMP PCB.
  - b. The switch of the spare JMP PCB is set to the right side.
  - c. Insert the spare JMP PCB and fasten the two screws.

#### NOTICE: Shut Down LED light off when you operated post procedure on SVP.

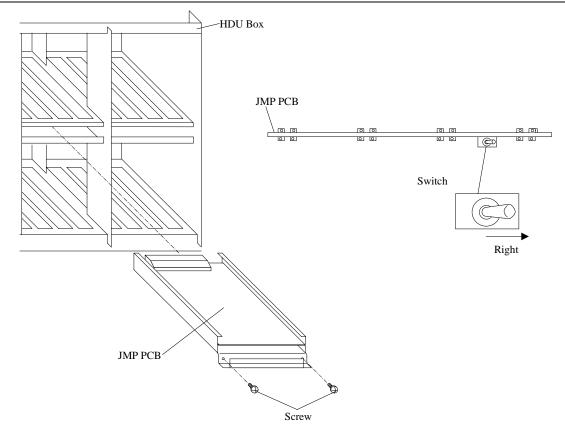


3. Go to SVP post procedure t4 [REP04-1000].

REV.1 Jun.2001 I	Feb.2002				
------------------	----------	--	--	--	--

K6602675-

## [HARDWARE T25]

Location	Function Name of Component		Part Name
Right of	1	HUB Box	HUB Box
Front Logic Box			

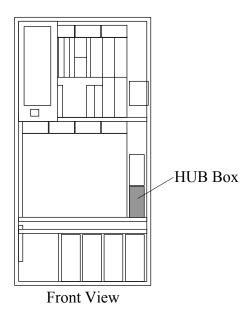


#### NOTICE:

Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

REV.0 Ju	n.2001				
----------	--------	--	--	--	--

#### Replacement of HUB Box

- 1. Replace the HUB BOX.
  - a. Turn off the HUB BOX ENABLE switch on the HUB BOX.
  - b. Disconnect the cables from the HUB BOX.
  - c. Loosen the screw and remove the HUB BOX.
  - d. Insert the spare HUB BOX and fasten the screw.
  - e. Connect the cables to the HUB BOX.
  - f. Turn on the HUB BOX ENABLE switch on the HUB BOX.

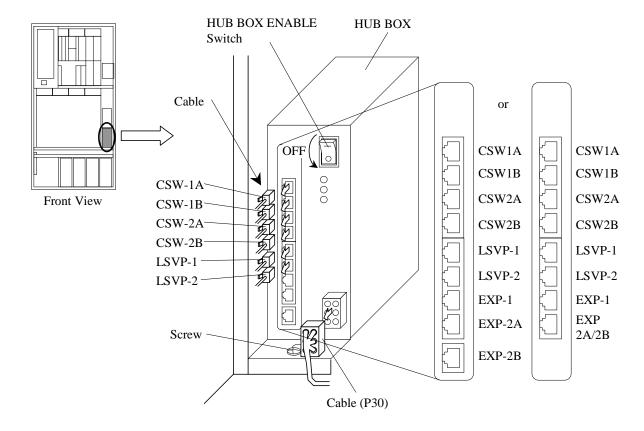


2. Go to SVP post procedure t1 [REP04-320].

REV.1 Jun.2001 I	Feb.2002				
------------------	----------	--	--	--	--

# [HARDWARE T26]

Location	Function Name of Component		Part Name
Right of	1	SVPPS Box	SVPPS Box
Front Logic Box			

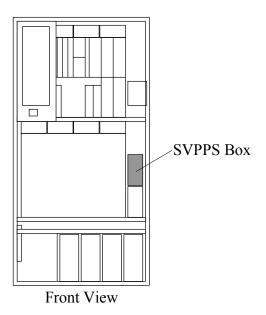


#### NOTICE:

Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.


REV.0 Jun.2001	
----------------	--

#### Replacement of SVPPS Box

1. Insert the maintenance jumper into PS SD on the SVPPS BOX.

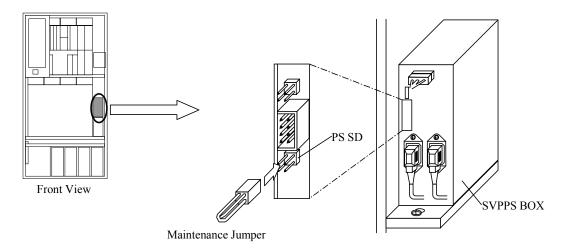

- 2. Replace the SVPPS BOX.
  - a. Disconnect the cables from the SVPPS BOX.
  - b. Loosen the screw and remove the SVPPS BOX.
  - c. Insert the spare SVPPS BOX and fasten the screw.
  - d. Connect the cables to the SVPPS BOX.

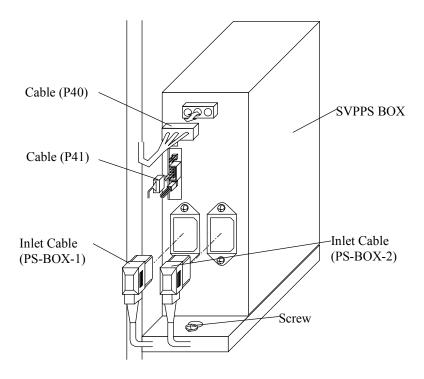


3. Go to SVP post procedure t1 [REP04-320].

REV.0 Jun.2001			
----------------	--	--	--

# [HARDWARE T27]

Location	Function Name of Component		Part Name
Lower left front of	1	UPS CON	• SH298-A
DKC			

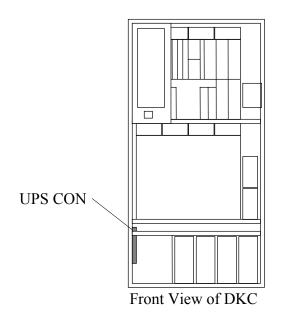

#### NOTICE:

Be sure to wear your wrist strap and attach to ground prior to performing the following work. This will ensure that the IC and LSI on the PCB are protected from static electricity.

Copyright ©2001, Hitachi, Ltd.

REV.0 Jun.2001			
----------------	--	--	--

- 1. Disconnect the DBUS Cables.
  - a. Disconnect the DBUS cables from the UPS CON.

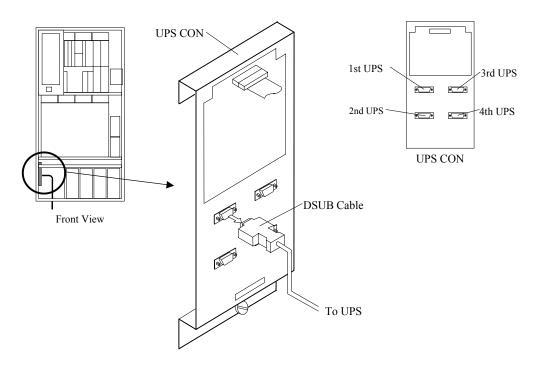


Fig. T27-1 Disconnection of Cables

REV.0	Jun.2001					
-------	----------	--	--	--	--	--

- 2. Replace the UPS CON.
  - a. Disconnect cable from UPS CON.
  - b. Loosen the screw① and remove the screw② from the base plate
  - c. Slide the plate and turn it using the screw① as an axis.
  - d. Remove the screw3 and remove the UPS CON.
  - e. Attach the UPS CON of spare parts and fixed it with screw3.
  - f. Return the plate as it was and tighten the screw① and ②.
  - g. Connect the cable to the UPS CON.

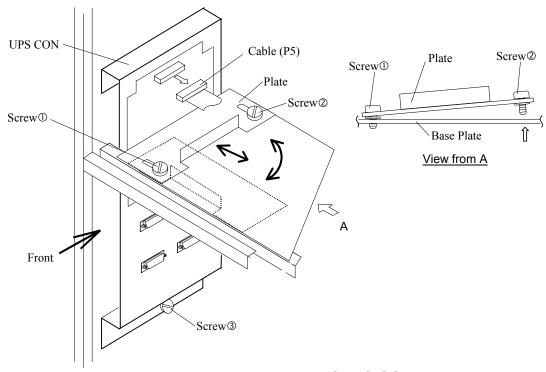


Fig. T27-2 Replacement of UPS CON

- 3. Connect the DBUS Cables.
  - a. Connect the DBUS cables to UPS CON. Refer to Fig. T27-1.
- 4. Go to SVP post procedure t1 [REP04-320].

## [POST-PROCEDURE a]

#### - OUTLINE -

- ① Execute CUDG on P-DEV.
- ② Specify recovery.
- 3 Copy back
- **4** SIM Complete

REV.0 Jun.2001		
----------------	--	--

## **A** CAUTION

Before starting the <Check the beginning of recovery> operation in POST-PROCEDURES a, b, c and d, be sure to insert a floppy disk for dump, collect failure information, and return the floppy disk with the failed HDD.

A dump floppy disk is attached with a Spare HDD.

<Check the beginning of recovery>
 Please insert the floppy disk and select (CL)
 [OK].
 Failure information of the physical device is



[After the completion of writing failure information:] "Please remove the FD." is displayed.
Please remove the floppy disk and select (CL) [OK].



2. <Spin up the Physical Drive> "Spinning up..." is displayed.

written to the floppy disk.

3. <DKU INLINE>

"DKU INLINE is now running..." is displayed.

4. < Replacement of the DKU micro-program>

When the revision of the DKU micro-program in the SVP hard disk is newer than that in the PDEV, the following message appears on the screen.

The message "Exchanging DKU micro-program..." appears.


5. <Restore Physical Drive> "Restoring..." is displayed.

Copyright ©2001, Hitachi, Ltd.

REV.0 Jun.2001		
----------------	--	--

6. < Check the Physical Drive> "Checking..." is displayed.

7. <Check the beginning of copyback>
Select (CL) [Yes] in response to "Are you sure you want to copy data in spare device to the physical device?".

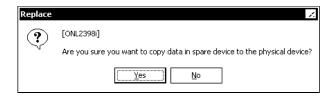

8. <Check starting of copyback>
"Copying..." is displayed.
Select (CL) [OK] in response to "Copying data in spare device to the physical device has been started.".



9. <SIM Complete>
Refer to SVP02-580.

## [POST-PROCEDURE b]

#### - OUTLINE -

- ① Execute CUDG on P-DEV.
- ② Specify recovery.
- ③ Correction copy
- **4** Reset ORM Error Count on the P-DEV.
- S Reset Threshole Counter
- **© SIM Complete**

## **A** CAUTION

Before starting the <Check the beginning of recovery> operation in POST-PROCEDURES a, b, c and d, be sure to insert a floppy disk for dump, collect failure information, and return the floppy disk with the failed HDD.

A dump floppy disk is attached with a Spare HDD.

Check the beginning of recovery>
 Please insert the floppy disk and select (CL)
 [OK].
 Failure information of the physical device is



[After the completion of writing failure information:] "Please remove the FD." is displayed.
Please remove the floppy disk and select (CL) [OK].



2. <Spin up the Physical Drive> "Spinning up..." is displayed.

written to the floppy disk.


3. <DKU INLINE>

"DKU INLINE is now running..." is displayed.

4. <Restore Physical Drive> "Restoring..." is displayed.

5. <Check the Drive Status> "Checking..." is displayed. Device is still blocked.


6. <Check the beginning of correction copy> Select (CL) [Yes] in response to "Are you sure you want to correct data in the physical device?".

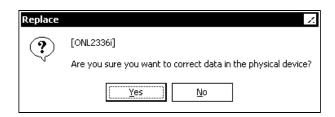

7. <Correct data>

"Correcting..." is displayed.

8. <Check the starting of Correction copy> Select (CL) [OK] in response to "Correcting data in the physical device has been started.".

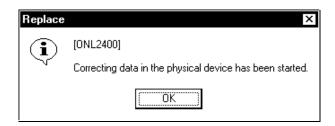

9. <Check the end of P-DEV recovery> Select (CL) [OK] in response to "Replace finished.".



10. <SIM Complete>
Refer to SVP02-580.

Copyright ©2001, Hitachi, Ltd.

REV.0	Jun.2001				
-------	----------	--	--	--	--

## [POST-PROCEDURE c]

#### - OUTLINE -

- ① Perform L-DEV formatting on P-DEV.
- ② Reset ORM Error Count on P-DEVs.
- ③ Recover with backup data.
- Reset Threshold Counter
- **SIM Complete**

REV.0 Jun.2001		
----------------	--	--

## **A** CAUTION

Before starting the <Check the beginning of recovery> operation in POST-PROCEDURES a, b, c and d, be sure to insert a floppy disk for dump, collect failure information, and return the floppy disk with the failed HDD.

A dump floppy disk is attached with a Spare HDD.

1. <Check the beginning of recovery>
Insert the floppy disk and select (CL) [OK].
Failure information of the physical device is written to the floppy disk.



[After the completion of writing failure information:] "Please remove the FD." is displayed.
Remove the floppy disk and select (CL) [OK].



2. <Spin up the Physical Drive> "Spinning up..." is displayed.

3. <DKU INLINE>

"DKU INLINE is now running..." is displayed.

REV.0 Jun.200			
---------------	--	--	--

4.	<replacement dku="" micro-program="" of="" the=""></replacement>
----	--

When the revision of the DKU micro-program in the SVP hard disk is newer than that in the PDEV, the following message appears on the screen.

The message "Exchanging DKU micro-program..." appears.

5. <Restore Physical Drive> "Restoring..." is displayed.

6. < Check the Drive Status> "Checking..." is displayed.

Copyright ©2001, Hitachi, Ltd.


REV.0 Jun.2001	
----------------	--

### 7. <Correction Copy disable message>

## A CAUTION

If a blocked HDD exists in the same parity group, replace the HDD. After confirming that "NORMAL" is indicated for all the HDDs in the same parity group, execute an L-DEV formatting following the procedure below.

Select (CL) [OK] in response to "Correcting data in the physical device could not be done.".

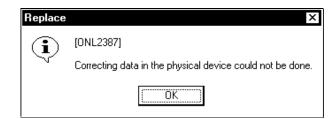


#### 8. <Select [Logical Device]>

### **A** CAUTION


Before you perform following steps, be sure to call T.S.C. Data housed in Logical Device will be lost due to formatting Logical Device.

Select (CL) [Logical Device] from [Maintenance].


#### (Multi Cabinet Model)

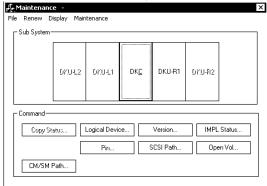

#### (Single Cabinet Model)

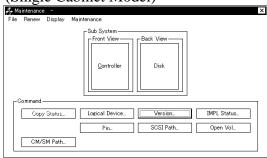


9. <Logical Device Status> Select (CL) [Format...].

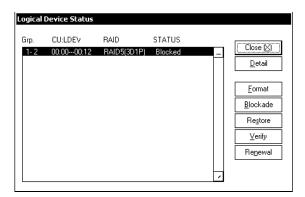

10. <Format Logical Device>

Select (CL) corresponding LDEV from the LDEV ID list in the 'Logical Device' dialog box and select (CL) [OK].

If the target LDEV is not blocked, return to 'Logical Device Status' dialog box.

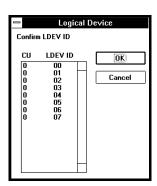


#### 11. <Caution message for DATA lost>


# **A** CAUTION

This is a special (exceptional) operation that can cause a serious failure such as a system down or a data loss and requires an input of a password. Ask the technical support center about the appropriateness of the operation, and input the password after getting an approval of executing the operation.


"Data in the specified logical device may be lost due to this operation. You need the password to continue." is displayed. Enter the password and select (CL) [OK].

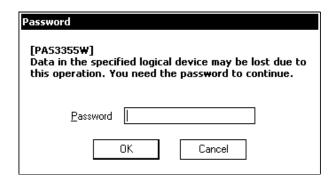

12. <Check Formatting the logical Device> "Formatting the logical device..." is displayed.

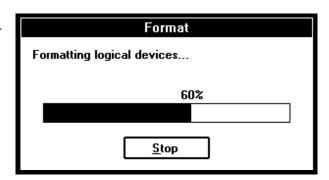

13. <Check the end of Format Logical Device> Select (CL) [OK] in response to "Formatting was finished.".

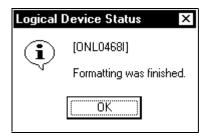

14. <SIM Complete>
Refer to SVP02-580.

 $\overline{15}$ . < Recover data >

Ask the customer for recovering data with backup data.

# [POST-PROCEDURE d]

#### - OUTLINE -

- ① Execute CUDG on P-DEV.
- ② Specify recovery.
- 3 Reset ORM Error Count on the P-DEV.
- Reset Threshold Counter.
- ⑤ SIM Complete.

REV.0 Jun.2	2001				
-------------	------	--	--	--	--

# **A** CAUTION

Before starting the <Check the beginning of recovery> operation in POST-PROCEDURES a, b, c and d, be sure to insert a floppy disk for dump, collect failure information, and return the floppy disk with the failed HDD.

A dump floppy disk is attached with a Spare HDD.

1. <Check the beginning of recovery>
Please insert the floppy disk and select (CL)
[OK].

Failure information of the physical device is written to the floppy disk.



[After the completion of writing failure information:] "Please remove the FD." is displayed.

Please remove the floppy disk and select (CL) [OK].



2. <Check the spin up process> "Spinning up..." is displayed.

3. <Check the INLINE process>

"DKU INLINE is now running..." is displayed.


4. <Replacement of the DKU micro-program>

When the revision of the DKU micro-program in the SVP hard disk is newer than that in the PDEV, the following message appears on the screen.

The message "Exchanging DKU micro-program..." appears.

5. <Restore Physical Drive> "Restoring..." is displayed.

6. <Check the end of P-DEV recovery> Select (CL) [OK] in response to "Replace finished.".

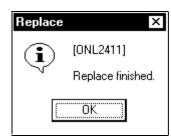

7. <SIM Complete>
Refer to SVP02-580.

# [POST-PROCEDURE e]

#### - OUTLINE -

- ① Execute CUDG on cache.
- ② Specify recovery.
- 3 SIM Complete

REV.0 Jun.2001
----------------

1. <INLINE CUDG>

"INLINE CUDG is now running..." is displayed.

<Check the beginning of cache/SM recovery>




#### **CAUTION**

Selecting "No" stops the recovery and places the cache in the status being blocked for maintenance.

Select (CL) [Yes] in response to:

- \* For CACHE (with SM)
- "Do you want to restore the Shared Memory and Cache Memory PCB now?"
- \* For CACHE ----- [Go to step 4]
- "Do you want to restore the Cache Memory PCB now?"

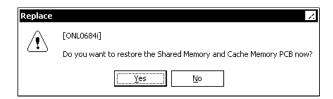

 $3. \quad < Restore \ the \ Shared \ Memory>$ 

"Restoring the Shared Memory PCB..." is displayed.

4. <Restore the Cache Memory> "Restoring the Cache Memory PCB..." is displayed.

5. <Check the end of Cache/Shared Memory recovery> Select (CL) [OK] in response to "Replace finished.".



6. <SIM Complete> Refer to SVP02-580.

7.

Close the 'cache-xx' window.

Close the 'cluster-n' window.

(Multi Cabinet Model)

Close 'DKC' window.

(Single Cabinet Model)

Close 'Controller' window.

Close 'Maintenance' window.

# [POST-PROCEDURE f]

#### - OUTLINE -

- ① Specify recovery for CHA/DKA.
- ② Path online (for CHA)
- 3 SIM Complete

#### <For CHA/DKA>

1. <Waiting for Power Event>

"Waiting for Power Event...

Usually several minutes (maximum 15 minutes)." is displayed.

"DKU PATH INLINE is now running..." is displayed.

 $3. \quad \text{<Check the recovery processing>} \\$ The following message is displayed:

\* For DKA

"Restoring the DKA..."

REV.3

#### 4. <Check the end of CHA/DKA recovery>

# **A** CAUTION

Confirm the version of the exchanged CHA/DKA microprogram on the "STATUS" screen.

Select (CL) [OK] in response to "Replace finished.".



5. <Path on-line when CHA is replaced>
Whenever a CHA is replaced, set the path (from the host) on the replaced CHA to ONLINE by

6. <SIM Complete>

Refer to SVP02-580.

your customer.

7.

Close the 'CHA-xx' window.

Close the 'cluster-n' window.

(Multi Cabinet Model)

Close 'DKC' window.

(Single Cabinet Model)

Close 'Controller' window.

Close 'Maintenance' window.

# [POST-PROCEDURE i]

- OUTLINE -

- ① Specify recovery for DKA.
- 2 SIM Complete

## **A** CAUTION

This processing is a special procedure for detecting a cause of a path error. Contact the technical support center before performing this processing.


Copyright ©2001, Hitachi, Ltd.

REV.0 Jun.2001
----------------



This processing is a special procedure for detecting a cause of a path error. Contact the technical support center before performing this processing.

1. <Check the execution of PATH INLINE>
Select (CL) [Yes] in response to:
"Are you sure you want to perform DKU
PATH INLINE for the physical device?"
Go to step 2.
Select (CL) [No] in response to:
Go to step 3.

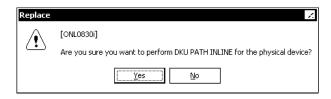


2. "DKU PATH INLINE is now running..." is displayed.

3. <Check the DKA recovery processing>
The following message is displayed:
"Restoring the DKA..."

# **A** CAUTION

This processing is a special procedure for detecting a cause of a path error. Contact the technical support center before performing this processing.

4. <Check the end of DKA recovery> Select (CL) [OK] in response to "Replace finished.".

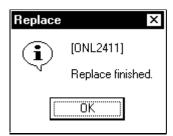

5. <SIM Complete>
Refer to SVP02-580.

6.

Close the 'DKA-xx' window. Close the 'cluster-n' window.

(Multi Cabinet Model) Close 'DKC' window.

(Single Cabinet Model) Close 'Controller' window.

Close 'Maintenance' window.

Copyright ©2001, 2002, Hitachi, Ltd.


REV.2	Jun.2001	Feb.2002	Jun.2002			
-------	----------	----------	----------	--	--	--

# [POST-PROCEDURE j]

#### - OUTLINE -

- ① Specify recovery of DKP was connected FSW.
- 2 SIM Complete

1. <Check the beginning of DKP recovery> Select (CL) [Yes] in response to "Do you want to restore the DKP now?".

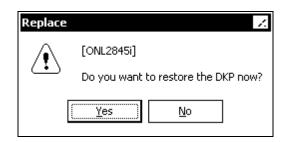

2. <DKU PATH INLINE> "DKU PATH INLINE is now running..." is displayed.


# **A** CAUTION

DKP connected to the loop concerned blockades with DKU PATH INLINE at the time of obstacle discovery.

Confirm the Diagnosis Log and solve the problem.

3. <Check DKP recovery processing> "Restoring the DKP..." is displayed.

4. <Check the end of FSW replace>
Select (CL) [OK] in response to "Replace finished.".

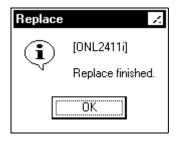

5. <SIM Complete>
Refer to SVP02-580.

6.

Close the 'HDU-xxx' window. Close the 'Disk-xx' window.

Close 'Maintenance' window.

Copyright ©2001, 2002, Hitachi, Ltd.

REV.1	Jun.2001 Feb.2002		
-------	-------------------	--	--

# [POST-PROCEDURE k]

- OUTLINE -

- ① Specify recovery of CSW.
- 2 SIM Complete

REV.0 Jun.2001
----------------

1. <Check the CSW recovery procedure> "Restoring the CSW..." is displayed.

2. <Check the CSW replace finished> Select (CL) [OK] in response to "Replace finished.".



3. <SIM Complete>
Refer to SVP02-580.

4.

Close 'Cluster-n' window.

(Multi Cabinet Model) Close 'DKC' window.

(Single Cabinet Model) Close 'Controller' window.

Close 'Maintenance' window.

Copyright ©2001,2002, Hitachi, Ltd.

REV.2	Jun.2001	Feb.2002	Jun.2002			
-------	----------	----------	----------	--	--	--

# [POST-PROCEDURE t1]

#### - OUTLINE -

- ① Specify end of special part replacement.
- ② Reinstall related parts.
- 3 Start environment monitor.
- **4** SIM Complete.

REV.0 Jun.2	2001				
-------------	------	--	--	--	--

#### [1] Start of POST-PROCEDURE

<Check replacement of special part>
 Select (CL) [OK] in response to "Please replace the "XXXXX." After replacement, press OK.".
 Valid "XXXXX" values are listed below.

- DKC-PANEL ---Go to [2] (REP04-340)
  PCI CON-----Go to [3] (REP04-370)
  UPS CON-----Go to [3] (REP04-370)
  EPO SW ------Go to [6] (REP04-400)
- RS CON-----Go to [5] (REP04-390)
- DKCMN 1/2----Go to [4] (REP04-380)
- SSVP -----Go to [7] (REP04-410)
- HUB-BOX-----Go to [8] (REP04-430)
- MONI-CON1/2 -Go to [9] (REP04-440)
- SVPPS-BOX ----Go to [12] (REP04-590)



(ex. DKC-PANEL)

For each of the following, no message is displayed when a part (hardware) of it has been replaced. Proceed to the respective steps shown below.

- SVP-----Go to [10] (REP04-460)
- SVP&FLASH --- Go to [10] (REP04-460)
- FLASH CARD--Go to [11] (REP04-580)
- Switch SVP-----Go to [13] (REP04-610)

Note: When you want to replace UPS CON, execute PCI CON Replacement Process.

REV.2
-------

#### [2] DKC-PANEL


#### 1. <LED TEST>

Select (CL) [OK] in response to "Please turn the LED TEST/CHK RST switch to LED TEST, and check if LEDs are on. Then select OK.".



2.


Select (CL) [OK] in response to "REMOTE MAINTENANCE SWITCH TEST: After turning switch to ENABLE position, press OK.".

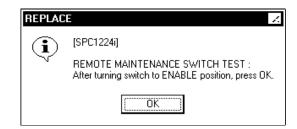

3.


If an error has occurred in the switch test, an error message is displayed.

If you select (CL) [Yes], go back to step 2. If you select (CL) [No], go to step 8.

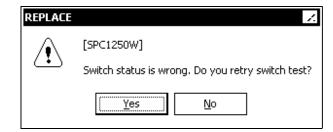

4.


Select (CL) [OK] in response to "REMOTE MAINTENANCE SWITCH TEST: After turning switch to DISABLE position, Press OK.".

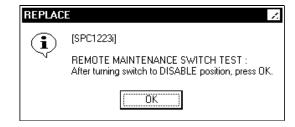

5.


If an error has occurred in the switch test, an error message is displayed.

If you select (CL) [Yes], go back to step 4. If you select (CL) [No], go to step 8.

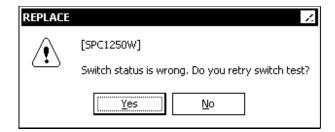

6.


Select (CL) [OK] in response to "RESTART SWITCH TEST: After turning switch, press OK.".

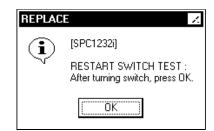

7.

If an error has occurred in the switch test, an error message is displayed.

If you select (CL) [Yes], go back step 6. If you select (CL) [No], go to step 8.

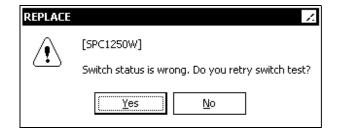

#### 8. <Set REMOTE/LOCAL>

Set REMOTE/LOCAL switch, in response to the message "Please set "REMOTE/LOCAL" switch of "DKC-PANEL" "LOCAL". Then press OK.".

After confirming that switch set, select (CL) [OK].




The SVP automatically checks the REMOTE/LOCAL switch status.

#### 9. < Detach jumper>

Detach jumper from DKCMN in response to "Please detach DKC Panel INH jumper plug. Then press OK.".

After confirming that jumper is detached, select (CL) [OK].

The SVP automatically checks that jumper plug is detached.

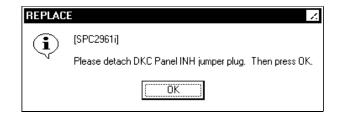


# 10. <Reset REMOTE/LOCAL switch> Reset REMOTE/LOCAL switch to original

value in response to "Please return REMOTE/LOCAL switch, on DKC-PANEL as before. Then press OK." (REP03-370). After checking SW setting, select (CL) [OK].



# 11. <Check end of replacement>

Select (CL) [OK] in response to "Replacement of the "DKC-PANEL" is done.".

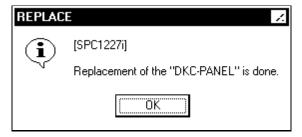

(ex. RS CON)

# 12. <SIM Complete>

See SVP02-580.

(Multi Cabinet Model)

Close 'DKC' window.

Close 'Maintenance' window.

(Single Cabinet Model)

Close 'Controller' window.

Close 'Maintenance' window.


#### [3] PCI CON (UPS CON)

#### 1. < Detach jumper>

Detach jumper from DKCMN in response to "Please detach DKC Panel INH jumper plug. Then press OK.".

After confirming that jumper is detached, select (CL) [OK].

The SVP automatically checks that jumper plug is detached.

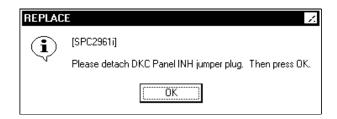


#### 2. <Reset DKC-PANEL switch>

Reset REMOTE/LOCAL switch to original value in response to "Please return REMOTE/LOCAL switch, on DKC-PANEL as before. Then press OK." (REP03-370). After checking SW setting, select (CL) [OK].



3. <Check end of replacement>
Select (CL) [OK] in response to "Replacement of the "PCI CON" is done.".

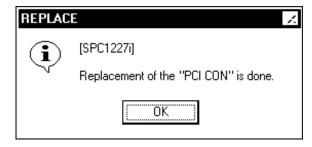

(ex. RS CON)

## 4. <SIM Complete>

See SVP02-580.

(Multi Cabinet Model)

Close 'DKC' window.

Close 'Maintenance' window.


(Single Cabinet Model)

Close 'Controller' window.


Close 'Maintenance' window.

#### [4] DKCMN 1/2

1. <Check environment monitor start processing> "Processing to enable the environment check..." is displayed.

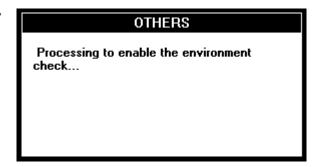

2. <Check end of replacement>
Select (CL) [OK] in response to "Replacement of the "DKCMNn" is done.".

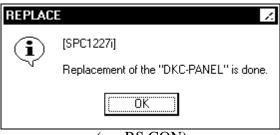

(ex. RS CON)

- 3. <Confirm status>
  - DKCMN 1/2

Confirm the status display.

If button is normal (lighting), go to step 4.

If button is blinking, replace the target part again, or see TROUBLE SHOOTING SECTION.

4. <SIM Complete>

See SVP02-580.

(Multi Cabinet Model)

Close 'DKC' window.

Close 'Maintenance' window.


(Single Cabinet Model)

Close 'Controller' window.

Close 'Maintenance' window.

#### [5] RS CON

1. <Check end of replacement> Select (CL) [OK] in response to "Replacement of the "RS CON" is done.".

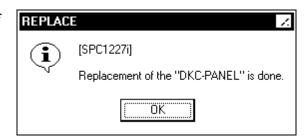

<Check normal operation of the remote maintenance support system>
 When the remote maintenance support system (ASSIST) is not installed, go to step 3.
 Perform the line connection test on the SVP connecting line of the remote maintenance support system.

#### 3. <SIM Complete>

See SVP02-580.

(Multi Cabinet Model)

Close 'DKC' window.

Close 'Maintenance' window.

(Single Cabinet Model)

Close 'Controller' window.

Close 'Maintenance' window.

#### [6] EPO SW

1.


The SVP automatically checks the EPO SW status.

2. <Detach jumper>


Detach jumper from DKCMN in response to "Please detach DKC Panel INH jumper plug. Then press OK.".

After confirming that jumper is detached, select (CL) [OK].

The SVP automatically checks that jumper plug is detached.

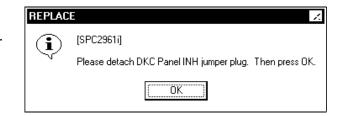

3. <Check end of replacement> Select (CL) [OK] in response to "Replacement of the "EPO SW" is done.".

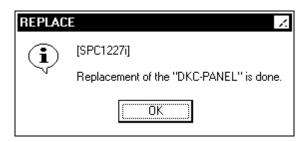

(ex. RS CON)

## 4. <SIM Complete>

See SVP02-580.

(Multi Cabinet Model)

Close 'DKC' window.

Close 'Maintenance' window.

(Single Cabinet Model)

Close 'Controller' window.

Close 'Maintenance' window.

#### [7] SSVP

#### 1. <Warning message>

# **A** CAUTION

When performing a down-load, a request for an entry of a password is displayed. Contact the Technical Support Center to ask for an instruction.

When versions of the microprogram to be downloaded to the SSVP and that stored in an ROM in the SSVP are the same, a message, "The version of SSVP micro program in SSVP and SVP are same. So micro program is not downloaded." is displayed. Select (CL) [OK], go to step 3.



When a number of the SSVP microprogram down-loads exceeds 100, a message, "Write count of SSVP micro program exceeds warranted value (100). Do you want to continue?" is displayed.




When you want to download, select (CL) [Yes] and go to the next step. When you do not want to download, select (CL) [No] and go to step 3.

The message "SSVP microprogram download." is displayed.

SSVP microprogram download.(07/16)

3. <Check end of replacement>
Select (CL) [OK] in response to "Replacement of the "SSVP" is done.".

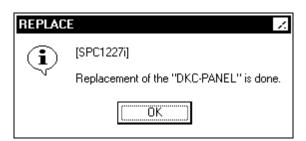

## 4. <SIM Complete>

See SVP02-580.

(Multi Cabinet Model)

Close 'DKC' window.

Close 'Maintenance' window.


(Single Cabinet Model)

Close 'Controller' window.

Close 'Maintenance' window.

#### [8] HUB-BOX

1. <Check end of replacement>
Select (CL) [OK] in response to "Replacement of the "HUB-BOX" is done.".

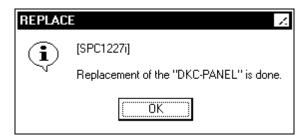

(ex. RS CON)

#### 2. <SIM Complete>

See SVP02-580.

(Multi Cabinet Model)

Close 'DKC' window.

Close 'Maintenance' window.

(Single Cabinet Model)

Close 'Controller' window.

Close 'Maintenance' window.

#### [9] MONI-CON 1/2

#### 1. <Enable DKUMN>


Enable DKUMN in response to "Please switch "DKUMN-n" of all DKU to "ENABLE." Then press OK.".

After confirming DKUMN is enabled, select (CL) [OK].


# Please switch "DKUMN-F" of all DKU to "ENABLE." Then press OK. OK

#### DKUMN-n

- For MONI-CON1: [Power on DKUMN on front side of DKU]
- For MONI-CON2: [Power on DKUMN on rear side of DKU]
- 2. <Check environment monitor start processing> "Processing to enable the environment check..." is displayed.

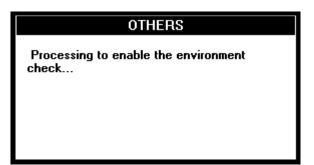

3. <Check end of replacement> Select (CL) [OK] in response to "Replacement of the "MONI-CONn" is done.".

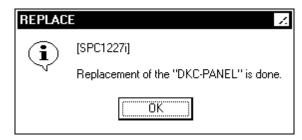

(ex. RS CON)

## 4. <SIM Complete>

See SVP02-580.

(Multi Cabinet Model)

Close 'DKC' window.

Close 'Maintenance' window.

(Single Cabinet Model)

Close 'Controller' window.

Close 'Maintenance' window.

#### [10] SVP, SVP&FLASH CARD

# 1. Powering up the SVP

## **A** CAUTION

If the MESSAGE LED on DKC-PANEL has lit on when power on SVP, please complete SIM before operation.


(Although "SIM RC = BFE010 (SVP PS1 Warning) and BFE011 (SVP PS2 Warning)" may occur, because it was generated in the process which replaces a SVP, and there is no problem.)

## **A** CAUTION

When an SSVP alarm is issued during replacement of the PC, reset the SSVP.

#### 1-1. Set Date/Time


(1) <Open [Control Panel]>
Select (DR) [Settings] and then [Control Panel] from [Start].

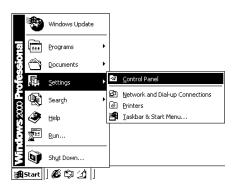


(2) <Open [Date/Time]>
Select (DC) [Date/Time] from [Control Panel].




(3) <Select [Time Zone]> Select (CL) [Time Zone].

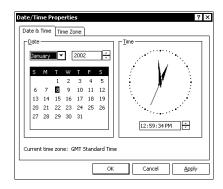

(4) <Check the setting of [Time Zone]>
Make sure that the setting of [Time Zone] is without the relation of a subsystem position "[GMT] Greenwich Mean Time; Dublin, Edinburgh, Lisbon, London". Also, make sure that a check box on the left of "Automatically adjust clock for daylight saving changes" is □ (without a check mark). Then, select (CL) [Date/Time].

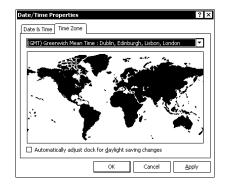

(5) <Set the [Date/Time]>
Check if the [Date/Time] is set to the current time and date.
If not, reset it correctly. Then, select (CL) [OK].

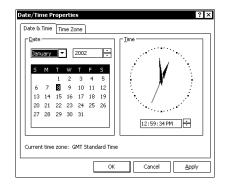

(6) <Close "Control Panel"> Select (CL) [File] on "Control Panel". Select (CL) [Close].



Blank Sheet

Copyright ©2001, 2002, Hitachi, Ltd.

REV.1	Jun.2001	Feb.2002				
-------	----------	----------	--	--	--	--


## 2. Installation of Micro-program

- ① Insert the CD-ROM disk into the CD-ROM drive and then wait one minute.
- ② Select (CL) [Run...] from the [Start]. Enter "e:\setup.exe" and select (CL) [OK].

## 3. Installation of Configuration


- (1) Inserting the Config FD
  - ① A message "Please insert the Config FD into the FDD." is displayed.
  - ② Insert the Config FD into the FDD and select (CL) [OK].

If you insert the previously backed-up Config FD, the original configuration is recovered.

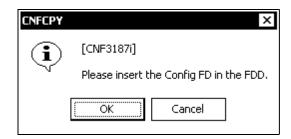

#### (2) Removing the Config FD

- ① When the copying of the Config is completed, a message "Please remove the Config FD." is displayed.
- ② Remove the Config FD from the FDD and select (CL) [OK].

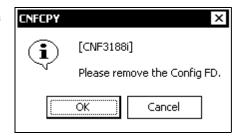


# 4. JAVA Setup


4-1 JAVA Setup

Java Setup is executed. When Java is installed, it progresses to step 4-2.


(1) Select (CL) [Yes].

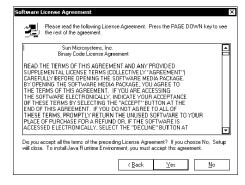


(2) Select (CL) [Next].

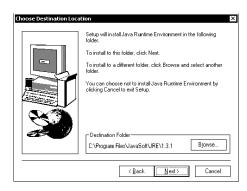


- 4-2 APACHE Setup
  - APACHE Setup is executed. When APACHE is installed, it progresses to step 5.
- (1) Select (CL) [Next].

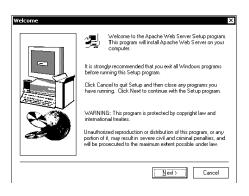


(2) Select (CL) [Yes].

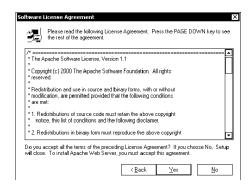


(3) Select (CL) [Next].

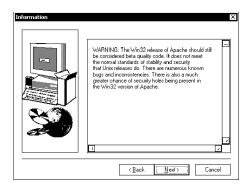


(4) Select (CL) [Next].

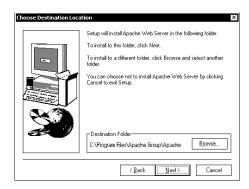


(5) Select (CL) [Next].

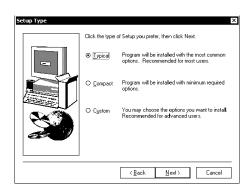

(6) Select (CL) [Next].

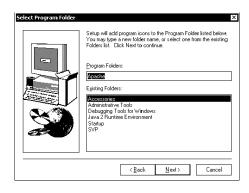

Remove the check box of "Yes and I want to view the README file.", and select (CL) [Finish].

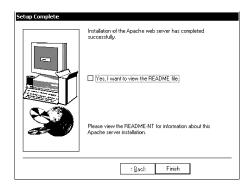

# 5. Restarting the SVP

When the setup is completed, the SVP restarts automatically.

# 6. Removing the SVP PS ON/OFF INH jumper

Remove the SVP PS ON/OFF INH jumper plug that was attached according to Step1 of [6] in PRE-PROCEDURE T1 (REP02-510).




Although "RC = bf85a2" may occur, it generated in process of replacement, and there is no problem. Please complete SIM before operation.

REV.2	Jun.2001	Feb.2002	Apr.2002			
-------	----------	----------	----------	--	--	--


#### 7. Set IP address of SVP

(1) <Open [Install]> Select (CL) [Install] from 'SVP'.

(2) <Select [Set Subsystem IP Address...]> Select (CL) [Set IP Address...] from 'Install'.

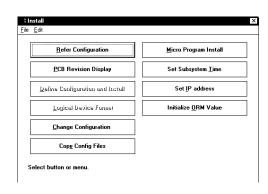

(3) <Set IP Address>
Select (CL) [SVP] from [Target], confirm "IP
Address" and "Subnet Mask". Select (CL) [OK].
If the IP Address or Subnet Mask is wrong, enter a correct value.

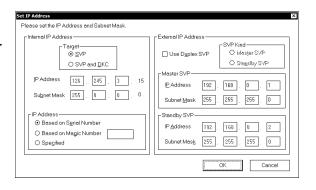

(4) Inserting the Config FD
Insert the Config FD into the FDD and select (CL)
[OK].




#### (5) Removing the Config FD

When the copying of the Config is completed, a message "Please remove the Config FD." is displayed. Remove the Config FD from the FDD and select (CL) [OK].



(6) <Check SVP reboot> Select (CL) [OK].

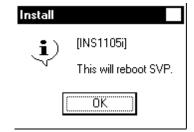

## 8. TOD Setting

Wait a few minutes, message "Loading SVP Program... SVP requests to DKC can not be performed presently. Please wait..." will be extinguished. Then set TOD. See SVP02-10.


# 9. Load the Configuration from the SM to the SVP's HDD

(1) <Open [Maintenance]> Select (CL) [Maintenance] form 'SVP'.


(2) Check "Connection error occurred SVP-DKC." is not displayed. If "Connection error occurred SVP-DKC" is displayed, see TRBL05-60.

(3) <Select [Exit]>
Select (CL) [File] from the "Maintenance".
Select (CL) [Exit].



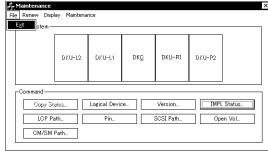

(Single Cabinet Model)

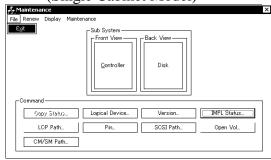

## 10. Setting Web Console

Make a setting of the Web Console according to [Web Station] section. (WEB01-10)

When you have installed from the backed-up Config FD,

- i) Storage list / user list / environment information can be recovered to the backed-up status by copy the following files under c:\program files\apache \group\apache\cgi-bin\Utility\CSV.
- USERLIST.CSV
- STRLIST.CSV
- ENV.CSV
- ii) Please perform the following procedure, when you use SNMP Agent.
  - 1. Push Web Console button.
  - 2. Open the SNMP Information Tab.
  - 3. Remove the check mark of Extension SNMP and push Apply button.
  - 4. Add the check mark of Extension SNMP and push Apply button again.
- iii)Please perform the following procedure, when you don't use SNMP Agent.
  - 1. Push Web Console button.
  - 2. Specify Name, Contact and Location on Information Tab again.

#### 11. Confirm status

Confirm the status display.

If button is valid, go to [12].

If button is blinking, replace the FLASH CARD.

## 12. Configuration Back

Make a backup copy of the configuration in the CONFIG FD. (See MICRO-FC08-10)

REV.2	Jun.2001	Feb.2002	Apr.2002			
-------	----------	----------	----------	--	--	--

# 13. SIM Complete

See SVP02-580.

[End of POST-PROCEDURE]

REV.2 Jun.200	Feb.2002	Jun.2002			
---------------	----------	----------	--	--	--

#### [11] FLASH CARD

## **A** CAUTION

SIM (SIM RC = BFE010 (SVP PS1 Warning) and BFE011 (SVP PS2 Warning)) generates, after power on SVP (PC). Because it was generated in the process which replaces a SVP, and there is no problem. Please complete SIM before operation.

#### 1. <Confirm status>

Confirm the status display.

If button is blinking, refer to SIM and replace the target part again, or see TROUBLE SHOOTING SECTION.

Go to POST-PROCEDURE z (REP04-1400).

#### [12] SVPPS-BOX


1. <Detaching the jumper plug>
Detach the jumper plug from the SVPPSBOX PS SD pin in response to a message,
"Please detach the PS SD jumper plug. Then
select OK.". If you have already detached the
jumper plug according to HARDWARE T26,
go to Step 2.




After making sure that the jumper plug has been detached, select (CL) [OK]. The Optional SVP will be started when the jumper plug is removed. Shutdown the OS.

2. < Checking the environment monitor start processing>

"Processing to enable the environment check..." is displayed.

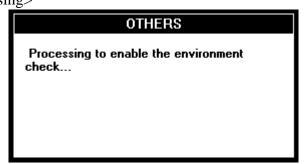

3. <Checking the end of replacement> Select (CL) [OK] in response to "Replacement of the "SVPPS-BOX" is done.".

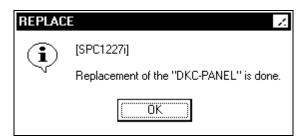

(ex. RS CON)

- 4. <Checking the status>
  - SVPPS-BOX

Check the status display.

If the button is normal (kept on), go to Step 5.

If the button is blinking, perform the replacement again or refer to TROUBLE SHOOTING SECTION.

# 5. <Complete status of SIM log>

See page SVP02-580.

(Multi Cabinet model)

Close the 'DKC' window.

Close the 'Maintenance' window.

(Single Cabinet model)

Close the 'Controller' window.

Close the 'Maintenance' window.

Go to POST-PROCEDURE z (REP04-1400).

REV.1 Jun.2001	Jun.2002				
----------------	----------	--	--	--	--

## [13] Switch SVP

 $1. \quad {<} Verifying \ the \ SVP \ switching > \\$ 

The SVP which was the Standby SVP before the switching starts up automatically, and reboots after a setup of Subsystem Configuration.

Check if the SVP is operating normally (without error) after reboot.

REV.2 Jun.200	Jun.2002	Jul.2002			
---------------	----------	----------	--	--	--

REV.0 Jun.2001		
----------------	--	--

REV.0 Jun.2	2001				
-------------	------	--	--	--	--

REV.0 Jun.2001		
----------------	--	--

REV.0 Jun.2	2001				
-------------	------	--	--	--	--

REV.0 Jun.2001		
----------------	--	--

REV.0 Jun.2	2001				
-------------	------	--	--	--	--

REV.0 Jun.2001		
----------------	--	--

REV.0 Jun.2	2001				
-------------	------	--	--	--	--

REV.0 Jun.2001		
----------------	--	--

REV.0 Jun.2	2001				
-------------	------	--	--	--	--

REV.0 Jun.2001		
----------------	--	--

REV.0	Jun.2001					
-------	----------	--	--	--	--	--

REV.0 Jun.2001		
----------------	--	--

REV.0 Jun.2001		
----------------	--	--

REV.0 Jun.2	2001				
-------------	------	--	--	--	--

REV.0 Jun.2001		
----------------	--	--

REV.0 Jun.2	2001				
-------------	------	--	--	--	--

REV.0 Jun.2001		
----------------	--	--

REV.0 Jun.2	2001				
-------------	------	--	--	--	--

# [POST-PROCEDURE t3]

#### - OUTLINE -

- ① Specify end of special part replacement.
- ② Reinstall related parts.
- 3 Start environment monitor.
- **4** SIM Complete.

#### [1] START OF POST-PROCEDURE

<Check special part replacement>
 Select (CL) [OK] in response to "Please replace the "XXXXX" After replacement, press OK.".
 Valid "XXXXX" values are listed below.

'Fan assembly (DKC)'

-----Go to [2] (REP04-920)


'Thermostat assembly'

------Go to [3] (REP04-930)

• 'BATTERY-x' ----- Go to [4] (REP04-940)

• 'BATCTRL-x' ----- Go to [5] (REP04-950)

• 'SVPPSx' ----- Go to [9] (REP04-995)

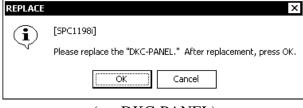

(ex. DKC-PANEL)

Select (CL) [OK] in response to "Please switch "xxPSn" to "DISABLE," and replace it. After replacement, switch it to "ENABLE" and press OK.".

• 'xxPSn' ----- Go to [6] (REP04-960)



(ex. MPS-R100)

Select (CL) [OK] in response to "Turn off the breaker which supplies power source for AC BOX-x. After that please replace it. When replacement is completed, press OK.".

• 'BREAKER BOX-x'
-----Go to [7] (REP04-980)

• 'AC BOX-Cn'----- Go to [8] (REP04-990)




(ex. AC BOX-R10)


#### [2] Fan assembly

1. < Checking the environment monitor start processing>

"Processing to enable the environment check..." is displayed.

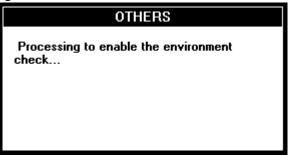

2. <Checking the end of replacement> Select (CL) [OK] in response to "Replacement of the "Fan assembly" is done.".

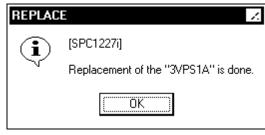

(ex. 3VPS1A)

3. <Confirm status>

Confirm the status display.

If button is normal (The string is normally display), go to step 4.

If button is abnormal (The string is blinking), replace the target part again, or see TROUBLE SHOOTING SECTION.

4. < SIM Complete >

See SVP02-580.

(Multi Cabinet Model)

Close 'Cluster-X' window.

Close 'DKC' window.

Close 'Maintenance' window.

(Single Cabinet Model)

Close 'Cluster-X' window.


Close 'Controller' window.

Close 'Maintenance' window.


#### [3] Thermostat assembly

1. < Checking the environment monitor start processing>

"Processing to enable the environment check..." is displayed.

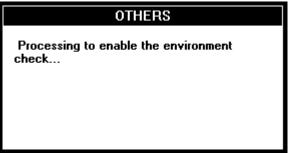

2. <Checking the end of replacement>
Select (CL) [OK] in response to "Replacement of the "Themostat assembly" is done.".

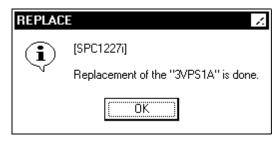

(ex. 3VPS1A)

3. <Confirm status>

Confirm the status display.

If button is normal (The string is normally display), go to step 4.

If button is abnormal (The string is blinking), replace the target part again, or see TROUBLE SHOOTING SECTION.

4. <SIM Complete>

See SVP02-580.

(Multi Cabinet Model)

Close 'Cluster-X' window.

Close 'DKC' window.

Close 'Maintenance' window.

(Single Cabinet Model)

Close 'Cluster-X' window.


Close 'Controller' window.

Close 'Maintenance' window.


#### [4] BATTERY

1. < Checking the environment monitor start processing>

"Processing to enable the environment check..." is displayed.

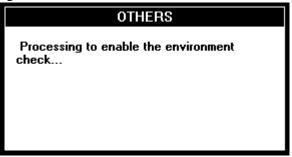

2. <Checking the end of replacement> Select (CL) [OK] in response to "Replacement of the "BATTERY-x" is done.".

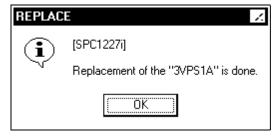

(ex. 3VPS1A)

3. <Setting Battery Warning SIM> Set the Battery Warning SIM in response to "Select the Setting Battery Life button in the Install panel and then make settings.".



4. <Confirm status>

Confirm the status display.

If button is normal (The string is normally display), go to step 4.

If button is abnormal (The string is blinking), replace the target part again, or see TROUBLE SHOOTING SECTION.

# 5. < SIM Complete >

See SVP02-580.

(Multi Cabinet Model)

Close 'Cluster-X' window.

Close 'DKC' window.

Close 'Maintenance' window.

(Single Cabinet Model)

Close 'Cluster-X' window.

Close 'Controller' window.


Close 'Maintenance' window.

REV.1 Apr.200	Jun.2002				
---------------	----------	--	--	--	--


#### [5] BATCTR

1. < Checking the environment monitor start processing>

"Processing to enable the environment check..." is displayed.

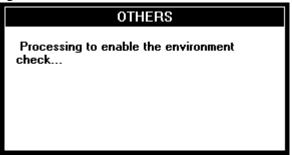

2. <Checking the end of replacement> Select (CL) [OK] in response to "Replacement of the "BATCTR-x" is done.".

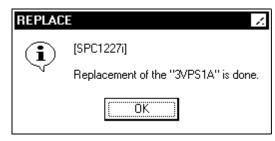

(ex. 3VPS1A)

3. <Confirm status>

Confirm the status display.

If button is normal (The string is normally display), go to step 4.

If button is abnormal (The string is blinking), replace the target part again, or see TROUBLE SHOOTING SECTION.

4. <SIM Complete>

See SVP02-580.

(Multi Cabinet Model)

Close 'Cluster-X' window.

Close 'DKC' window.

Close 'Maintenance' window.

(Single Cabinet Model)

Close 'Cluster-X' window.


Close 'Controller' window.

Close 'Maintenance' window.


[6] PS

1. < Checking the environment monitor start processing>

"Processing to enable the environment check..." is displayed.

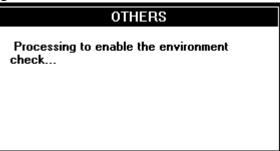

<Checking the end of replacement> Select (CL) [OK] in response to "Replacement of the "PS-X" is done.".

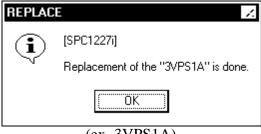

(ex. 3VPS1A)

3. <Confirm status>

Confirm the status display.

If button is normal (The string is normally display), go to step 4.

If button is abnormal (The string is blinking), replace the target part again, or see TROUBLE SHOOTING SECTION.

4. <Confirm Cluster>

If Cluster is blocked, recover it.

See SVP02-1110.

# 5. < SIM Complete >

See SVP02-580.

(Multi Cabinet Model)

Close 'Cluster-X' window.

Close 'DKC' window.

Close 'Maintenance' window.

(Single Cabinet Model)

Close 'Cluster-X' window.

Close 'Controller' window.


Close 'Maintenance' window.

REV.1 Jun.2001	Jun.2002				
----------------	----------	--	--	--	--


#### [7] BREAKER BOX

1. < Checking the environment monitor start processing>

"Processing to enable the environment check..." is displayed.

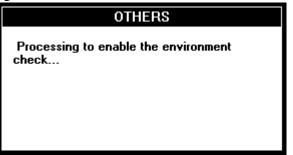

2. <Checking the end of replacement> Select (CL) [OK] in response to "Replacement of the "BREAKER BOX-X" is done.".

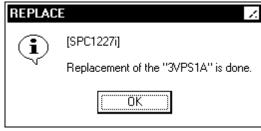

(ex. 3VPS1A)

3. <Confirm Cluster>
If Cluster is blocked, recover it.
See SVP02-1110.

4. <SIM Complete>

See SVP02-580.

(Multi Cabinet Model)

Close 'Cluster-X' window.

Close 'DKC' window.

Close 'Maintenance' window.

(Single Cabinet Model)

Close 'Cluster-X' window.

Close 'Controller' window.


Close 'Maintenance' window.

REV.1 Jun.2001	Jun.2002				
----------------	----------	--	--	--	--


#### [8] AC BOX(DKC)

1. < Checking the environment monitor start processing>

"Processing to enable the environment check..." is displayed.

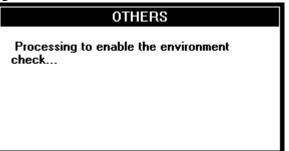

2. <Checking the end of replacement> Select (CL) [OK] in response to "Replacement of the "AC BOX-x" is done.".

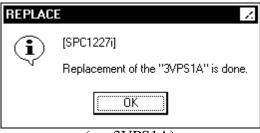

(ex. 3VPS1A)

3. <Confirm Cluster>
If Cluster is blocked, recover it.
See SVP02-1110.

4. <SIM Complete>

See SVP02-580.

(Multi Cabinet Model)

Close 'Cluster-X' window.

Close 'DKC' window.

Close 'Maintenance' window.

(Single Cabinet Model)

Close 'Cluster-X' window.

Close 'Controller' window.

Close 'Maintenance' window.

Copyright ©2001,2002, F	litachi, Ltd.
-------------------------	---------------


REV.1
-------

#### [9] SVPPS

1. < Detaching a jumper plug>


Detach a jumper plug to the SVPPS following a message, "Please detach the jumper plug of replaced PCB(s).".

After checking that the jumper plug has been detached, select (CL) [OK]. (See REP03-880)

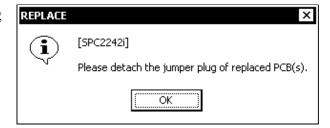


2. < Checking the environment monitor start processing>

"Processing to enable the environment check..." is displayed.

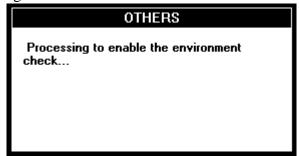

3. <Checking the end of replacement> Select (CL) [OK] in response to "Replacement of the "SVPPSx" is done.".

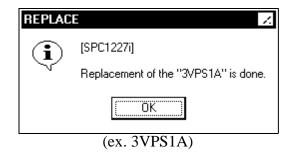

4. <Confirm Cluster>
If Cluster is blocked, recover it.
See SVP02-1110.

# 5. < SIM Complete >

See SVP02-580.

(Multi Cabinet Model)

Close 'Cluster-X' window.

Close 'DKC' window.

Close 'Maintenance' window.

(Single Cabinet Model)

Close 'Cluster-X' window.

Close 'Controller' window.

Close 'Maintenance' window.

REV.1 Feb.2002	Jun.2002				
----------------	----------	--	--	--	--

# [POST-PROCEDURE t4]

#### - OUTLINE -


- ① Specify end of special part replacement.
- ② Reinstall related parts.
- 3 Start environment monitor.
- ⑤ SIM Complete.

#### [1] Start of POST-PROCEDURE

- 1. <Making part replacement check>
  - Fan assembly

Select (CL) [OK] in response to "Please replace the "XXXXX" After replacement, press OK."

'Fan assembly' ---- Go to [2] (REP04-1020)

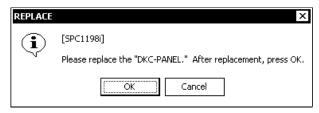

(ex. DKC-PANEL)

#### • MPS-X, DKUMN-X

Select (CL) [OK] in response to "Please switch "XXXXX" to "DISABLE," and replace it. After replacement, switch it to "ENABLE" and press OK.".

'MPS-n'----- Go to [3] (REP04-1030)



(ex. MPS-R100 of Multi Cabinet Model)

'DKUMN-R3n', 'DKUMN-L3n' --- Go to [4] (REP04-1050) Other 'DKUMN-X' ----- Go to [5] (REP04-1060)

#### • AC BOX-X

Select (CL) [OK] in response to "Turn off the breaker which supplies power source for AC BOX-X. After that please replace it. When replacement is completed, press OK.".

'AC BOX-X'----- Go to [6] (REP04-1080)




(ex. AC BOX-R10 of Multi Cabinet Model)

#### • JMP

Select (CL) [OK] in response to "Please replace the "JMPm-n". After replacement, press OK.".

'JMPm-n' ----- Go to [7] (REP04-1091)

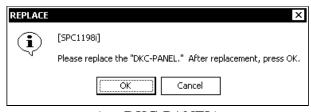

(ex. DKC-PANEL)

#### [2] Fan assembly

is displayed.

1. <Checking environment monitor start processing> "Processing to enable the environment check..."

# OTHERS Processing to enable the environment check...

<Checking end of replacement>
 Select (CL) [OK] in response to
 "Replacement of the "Fan assembly" is
 done.".



(ex. MPS-R100 of Multi Cabinet Model)

3. <Confirm status>

Confirm the status display.

If button is normal (lighting), go to step 4.

If button is blinking, replace the target part again, or TROUBLE SHOOTING SECTION.

4. <SIM Complete>

See SVP02-580.

(Multi Cabinet Model)

Close 'HDU-X' window.

Close 'DKU-X' window.

Close 'Maintenance' window.


(Single Cabinet Model)

Close 'Disk' window.

Close 'Maintenance' window.

#### [3] MPS

1. <Checking environment monitor start processing> "Processing to enable the environment check..." is displayed.

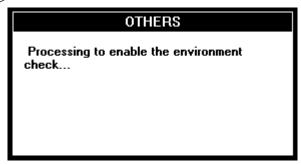

2. <Checking end of replacement> Select (CL) [OK] in response to "Replacement of the "MPS-n" is done.".



(ex. MPS-R100 of Multi Cabinet Model)

3. <Confirm status>

Confirm the status display.

If button is normal (lighting), go to step 4.

If button is blinking, replace the target part again, or TROUBLE SHOOTING SECTION.

4. <Confirm Cluster>
If Cluster is blocked, recover it.
See SVP02-1110.

# 5. < SIM Complete >

See SVP02-580.

(Multi Cabinet Model)

Close 'HDU-X' window

Close 'DKU-X' window.

Close 'Maintenance' window.

(Single Cabinet Model)

Close 'HDU-X' window.

Close 'Disk' window.


Close 'Maintenance' window.

Go to POST-PROCEDURE z (REP04-1400).


REV.1 Jun.2001	Jun.2002				
----------------	----------	--	--	--	--

#### [4] DKUMN-R3n, DKUMN-L3n

1. <Checking environment monitor start processing> "Processing to enable the environment check..." is displayed.

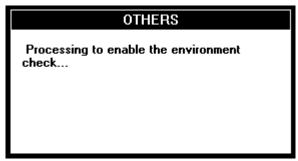

2. <Checking end of replacement>
Select (CL) [OK] in response to
"Replacement of the "DKUMN-X" is done.".

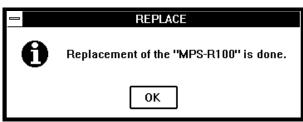

(ex. MPS-R100 of Multi Cabinet Model)

3. <Confirm status>

Confirm the status display.

If button is valid, go to step 4.

If button is blinking, replace the target part again, or TROUBLE SHOOTING SECTION.

4. <SIM Complete> See SVP02-580.

(Multi Cabinet Model)

Close 'DKU-X' window.

Close 'Maintenance' window.

Go to POST-PROCEDURE z (REP04-1400).

REV.1 Jun.2001	Jun.2002				
----------------	----------	--	--	--	--

#### [5] Other DKUMN-X

#### 1. <Enabling DKUMN>

When Multi Cabinet Model, if DKUMN-X (listed below) is installed, this message is displayed.


Enable DKUMN in response to "Please switch "DKUMN-X" to "ENABLE".

Then press OK.".

After confirming DKUMN-X is enabled, Select (CL) [OK].

DKUMN-X (Multi Cabinet Model):


DICOMITY II (Ma	iti Cuomet Mot
Replace parts	X
DKUMN-R1F	R2F, R3F
DKUMN-R1R	R2R, R3R
DKUMN-R2F	R3F
DKUMN-R2R	R3R
DKUMN-L1F	L2F, L3F
DKUMN-L1R	L2R, L3R
DKUMN-L2F	L3F
DKUMN-L2R	L3R

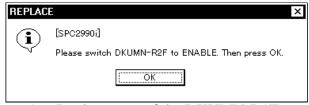


(ex. Replacement of the DKUMN-R1F)

Checking environment monitor start processing>

"Processing to enable the environment check..." is displayed.

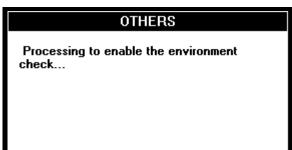

3. <Checking end of replacement> Select (CL) [OK] in response to "Replacement of the "DKUMN-X" is done.".

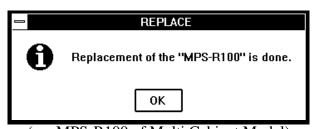

(ex. MPS-R100 of Multi Cabinet Model)

REV.1 Jun.2001	Jun.2002				
----------------	----------	--	--	--	--

## 4. <Confirm status>

Confirm the status display.

If button is valid, go to step 5.

If button is blinking, replace the target part again, or TROUBLE SHOOTING SECTION.

# 5. < SIM Complete >

See SVP02-580.

(Multi Cabinet Model)

Close 'DKU-X' window.


Close 'Maintenance' window.

REV.1 Jun.2001	Jun.2002				
----------------	----------	--	--	--	--


#### [6] AC BOX-X

1. <Checking environment monitor start processing>

"Processing to enable the environment check..." is displayed.

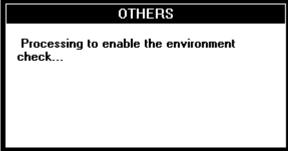

2. <Checking end of replacement> Select (CL) [OK] in response to "Replacement of the "AC BOX-X" is done.".

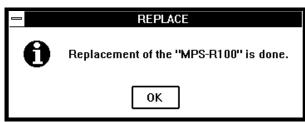

(ex. MPS-R100 of Multi Cabinet Model)

3. <Confirm status>

Confirm the status display.

If button is normal (lighting), go to step 4.

If button is blinking, replace the target part again, or TROUBLE SHOOTING SECTION.

4. <Confirm Cluster>
If Cluster is blocked, recover it.
See SVP02-1110.

# 5. < SIM Complete >

See SVP02-580.

(Multi Cabinet Model)

Close 'DKU-X' window.

Close 'Maintenance' window.

(Single Cabinet Model)

Close 'Disk' window.


Close 'Maintenance' window.

Go to POST-PROCEDURE z (REP04-1400).


REV.1 J	1 Jun.2002	REV.1 Jun.				
---------	------------	------------	--	--	--	--

#### [7] JMP

1. <Checking environment monitor start processing> "Processing to enable the environment check..." is displayed.

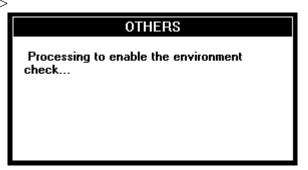

2. <Checking end of replacement>
Select (CL) [OK] in response to "Replacement of the "JMPm-n" is done.".

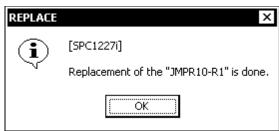

(ex. JMPR10-R1 of Multi Cabinet Model)

3. <Confirm status>

Confirm the status display.

If button is normal (lighting), go to step 4.

If button is blinking, replace the target part again, or TROUBLE SHOOTING SECTION.

# 4. <SIM Complete>

See SVP02-580.

(Multi Cabinet Model)

Close 'HDU-X' window

Close 'DKU-X' window.

Close 'Maintenance' window.

(Single Cabinet Model)

Close 'HDU-X' window.

Close 'Disk' window.

Close 'Maintenance' window.

# [POST-PROCEDURE t5]

#### - OUTLINE -

- ① Select a part to be replaced.
- ② Reinstall the related parts.
- 3 Complete status of SIM log.

REV.1 Jun.2001	Jun.2002				
----------------	----------	--	--	--	--

[1] Select a procedure for SVP replacing.

1.

Select a procedure for replacing an SVP and/or a Flash Card according to a part(s) to be replaced.

Procedure for replacing an SVP and/or a Flash Card in the normal state

- "SVP" ----- Go to [2] (REP04-1120)
- "SVP & FLASH CARD" Go to [2] (REP04-1120)
- "FLASH CARD" ----- Go to [3] (REP04-1230)

Procedure for replacing an SVP and/or a Flash Card on master mode when the SVP cannot be switched


- "SVP" ----- Go to [4] (REP04-1240)
- "SVP & FLASH CARD" Go to [4] (REP04-1240)
- "FLASH CARD" ----- Go to [5] (REP04-1350)

[2] Replacement of an SVP with or without a Flash Card


Perform the following operation at a Standby SVP.

## 1. Set Date/Time


(1) <Open [Control Panel]>
Select (DR) [Settings] and then [Control Panel] from [Start].

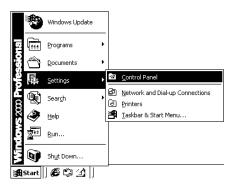

(2) <Open [Date/Time]> Select (DC) [Date/Time] from [Control Panel].

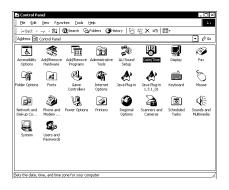


(3) <Select [Time Zone]> Select (CL) [Time Zone].

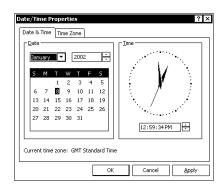


(4) <Check the setting of [Time Zone]> Make sure that the setting of [Time Zone] is without the relation of a subsystem position "[GMT] Greenwich Mean Time; Dublin, Edinburgh, Lisbon, London". Also, make sure that a check box on the left of "Automatically adjust clock for

daylight saving changes" is  $\square$  (without a check mark). Then, select (CL) [Date/Time].

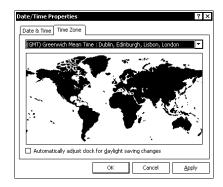

(5) <Set the [Date/Time]>

Check if the [Date/Time] is set to the current time and date. If not, reset it correctly. Then, select (CL) [OK].

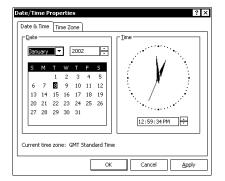

(6) <Close "Control Panel"> Select (CL) [File] on "Control Panel". Select (CL) [Close].



# 2. Installation of Micro-program


- ① Insert the CD-ROM disk into the CD-ROM drive and then wait one minute.
- ② Select (CL) [Run...] from the [Start]. Enter "setup-exe" and press the [Enter] key.

REV.1
-------

## 3. Installation of Configuration


- (1) Inserting the Config FD
  - ① A message "Please insert the Config FD into the FDD." is displayed.
  - ② Insert the Config FD into the FDD and select (CL) [OK].

If you insert the previously backed-up Config FD, the original configuration is recovered.

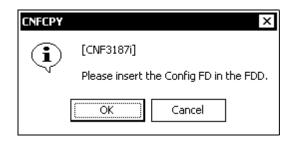

#### (2) Removing the Config FD

- ① When the copying of the Config is completed, a message "Please remove the Config FD." is displayed.
- ② Remove the Config FD from the FDD and select (CL) [OK].

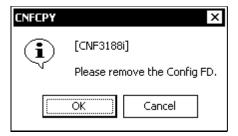


### 4. JAVA Setup


4-1 JAVA Setup

Setting up of Java is executed. When Java has already been installed, the routine proceeds to Step 4-2.


(1) Select (CL) [Yes].

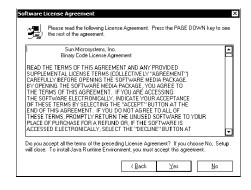


(2) Select (CL) [Next].

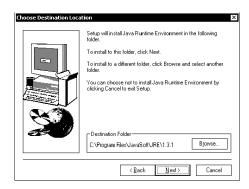


- 4-2 APACHE Setup
  - Setting up of APACHE is executed. When APACHE has already been installed, the routine proceeds to Step 5.
- (1) Select (CL) [Next].

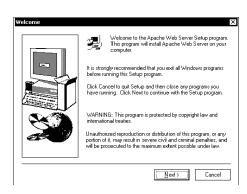

(2) Select (CL) [Yes].

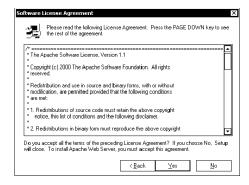


(3) Select (CL) [Next].

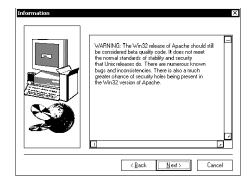


REV.0 Jun.2002			
----------------	--	--	--


(4) Select (CL) [Next].

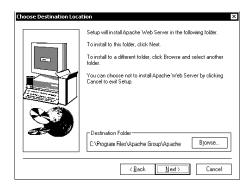


(5) Select (CL) [Next].

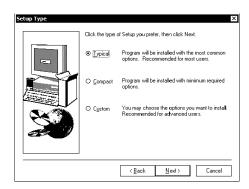

(6) Select (CL) [Next].

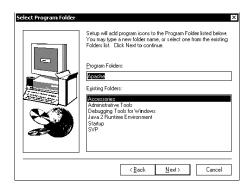

(7)
Remove the check box of "Yes and I want to view the README file.", and select (CL) [Finish].

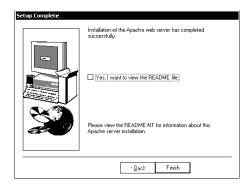

5.	Restarting	the	<b>SVP</b>
			~


When the setup is completed, the SVP restarts automatically.

#### 6. Set IP address of SVP


(1) <Changing the mode>
Change the mode by selecting [Modify Mode].

(2) <Opening the Install window> Select (CL) [Install] from the [SVP] menu.

(3) <Selecting [Set SVP IP Address]>
Select (CL) [Set IP Address] in the [Install] window.

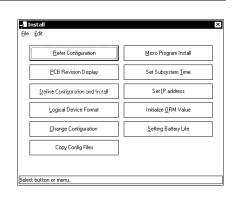

(4) <Setting an IP address>
Select (CL) [SVP] in the Internal IP Address box and enter an IP address and subnet mask of the internal IP address.

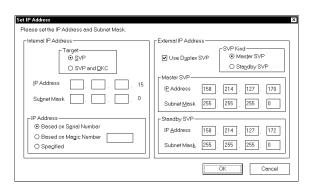

Master SVP

O Standby SVP

214 . 127 . 170

255 . 255 . 0

255 0

Cancel

IP <u>A</u>ddress [158 214 127 172

Subnet Mask 255 255

- (5) <Setting the SVP duplication>
  - (a) Select (CL) [Use Duplex SVP] in the External IP address box.
  - (b) Select (CL) [Standby SVP] in the SVP Kind box.
  - (c) Enter the IP addresses and subnet masks of the Master and Standby SVPs, and then select (CL) [OK].
    - \* You do not have to enter the information of Item (c) above when the setting of the external IP address is not required.
- (6) <Confirming the external IP address setting>
  When a message, "After finishing this operation, you must use the Windows Control Panel to change the external IP address." is displayed, select (CL) the [OK] button.



I<u>P</u> Address

Standby SVP

Please set the IP Address and Subnet Mask

Based on Serial Number

O Based on Magic Number


O Spe<u>c</u>ified

O SVP and DKC

(7) <Inserting the Config FD> Insert the Config FD into the FDD and select (CL) [OK].



(8) <Removing the Config FD>
When the copying of the Config is completed, a
message, "Please remove the Config FD." is displayed.
Remove the FD and select (CL) [OK].

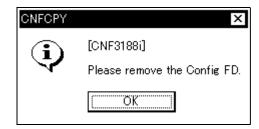


(9) <Confirming rebooting of the SVP> Select (CL) [OK] in response to a message, "This will reboot SVP.".




(10) < Opening the Network and Dial-up Connections window>

When the setting of the external IP address is not required, go to Step 8.


Select (CL) [Settings] and [Network and Dialup Connections] in this order from the [Start].

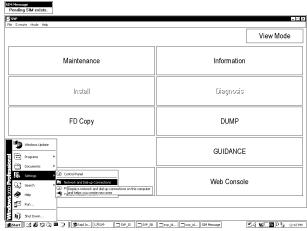


(11) < Opening the Local Area Connection 2 window> Select (CL) [Local Area Connection 2] in the Network and Dial-up Connections window.

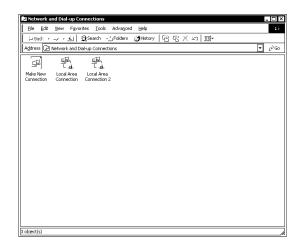

(12) <Opening the Local Area Connection 2 Properties window> Select (CL) [Internal Protocol (TCP/IP)] in the Local Area Connection 2 Properties window, and then select the [Properties] button.

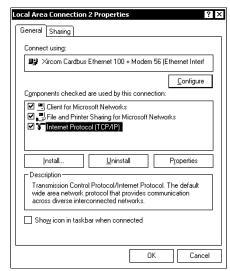

(13) <Setting an external IP address>
Set the IP address and subnet mask, and then select (CL) the [OK] button.

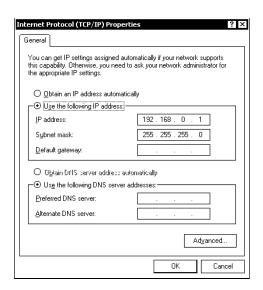

## 7. Removing the SVP PS ON/OFF INH jumper

Remove the jumper plug that was attached in Step 4 of Item [2] in PRE-PROCEDURE T5. Remove the jumper plug from the SVP PS ON/OFF INH pin of the RS CON. When the SVP is an Optional SVP, remove the jumper plug from the PS CTLINH pin of the SVPPS-BOX, too. (See HARDWARE T7 (Step 5 on REP03-480))

REV.0	Jul.2002					
-------	----------	--	--	--	--	--

	8.	Setting	Web	Console
--	----	---------	-----	---------

Make a setting of the Internet Explorer according to [Web Station] section. (WEB01-10)

# 9. Shutting down the SVP

Power off the SVP (PC) by shutting it down.

#### 10. Connect the LAN cable

- (1) Connect the LAN cable that was removed in Step 4 of Item [2] in PRE-PROCEDURE T5 to the HUB Box. (See Fig. T7.1-6, Fig. T7.1-9)
- (2) Attach the Lower SH Box Cover (See Fig. T7.1-2)

#### 11. Reset the SSVP

Press the SSVP ALARM RESET switch of the SSVP (see LOCATION SECTION (LOCATION03-40 and LOCATION03-60)).

REV.1	Jun.2002 Jul.2002				
-------	-------------------	--	--	--	--


## 12. Transferring configuration data

(1) Change the mode to [Modify Mode]. Select (CL) [Maintenance].

(2) The "Maintenance" window is displayed.

(Multi Cabinet Model) In the 'Maintenance' window, check and select (CL) [DKC] to be replaced.

(Single Cabinet Model)
In the "Maintenance' window, check and select (CL) [Controller] to be replaced.

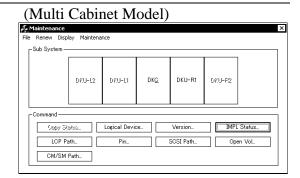

(Single Cabinet Model)

Maintenance
File Renew Display Maintenance

Sub System
Front View

Pront View

Disk

Controller

Disk

Command

Copy Statuz.

Logical Device.

Pin.

SCSI Path.

Open Vol.

CM/SM Path...

(3)


(Multi Cabinet Model)

In the 'DKC' window, check and select (CL) [SVP] to be replaced.


(Single Cabinet Model)

In the 'Controller' window, check and select (CL) [SVP] to be replaced.


#### (Multi Cabinet Model)

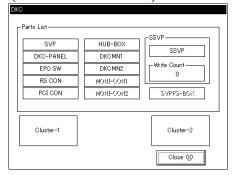


(Single Cabinet Model)

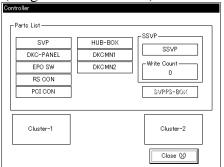

(4) Select (CL) "Transfer Config Data only", and select (CL) [Execute].

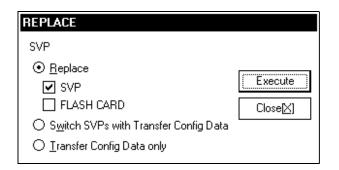

(5) In response to a message "Do you want to transfer configuration data?", select (CL) [Yes].

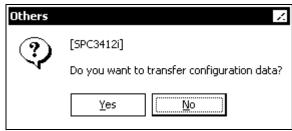


(6) "Transferring subsystem configuration data..." is displayed.

Transferring subsystem configuration data...
Phase 1/3

(7) "Configuration data has been transferred." is displayed, when Configuration data has been transferred. Select (CL) [OK].

If error has occurred while transferring, correct that a replaced SVP has problem of connecting and/or setting.

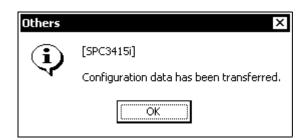

(8)

(Multi Cabinet Model)

Close 'DKC' window.

Close 'Maintenance' window.

(Single Cabinet Model)

Close 'Controller' window.

Close 'Maintenance' window.

Go to POST-PROCEDURE z (REP04-1400).

## [3] Replacement of a Flash Card

Perform the following operation at a Standby SVP.

 $1. \quad <\!\! \text{Shutting down the SVP}\!\!>$ 

When the SVP whose Flash Card was replaced starts, power off the SVP (PC) by shutting it down.

Go to POST-PROCEDURE z (REP04-1400).


REV.1	Jun.2002	Jul.2002				
-------	----------	----------	--	--	--	--

[4] Replacement of an SVP with or without a Flash Card (without SVP switching)

Perform the following operation at a Master SVP.

## 1. Set Date/Time


(1) <Open [Control Panel]>
Select (DR) [Settings] and then [Control Panel] from [Start].

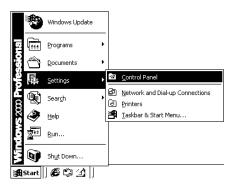

(2) <Open [Date/Time]> Select (DC) [Date/Time] from [Control Panel].




(3) <Select [Time Zone]> Select (CL) [Time Zone].

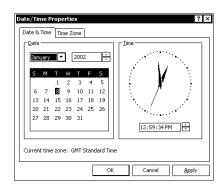


(4) <Check the setting of [Time Zone]>

Make sure that the setting of [Time Zone] is without the relation of a subsystem position "[GMT] Greenwich Mean Time; Dublin, Edinburgh, Lisbon, London". Also, make sure that a check box on the left of "Automatically adjust clock for daylight saving changes" is □ (without a check mark). Then, select (CL) [Date/Time].

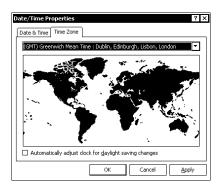

(5) <Set the [Date/Time]>

Check if the [Date/Time] is set to the current time and date. If not, reset it correctly. Then, select (CL) [OK].

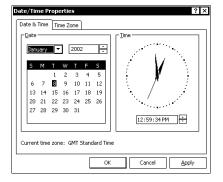

(6) <Close "Control Panel"> Select (CL) [File] on "Control Panel". Select (CL) [Close].



## 2. Installation of Micro-program


- ① Insert the CD-ROM disk into the CD-ROM drive and then wait one minute.
- ② Select (CL) [Run...] from the [Start]. Enter "setup-exe" and press the [Enter] key.

REV.0	Jun.2002				
-------	----------	--	--	--	--

## 3. Installation of Configuration


- (1) Inserting the Config FD
  - ① A message "Please insert the Config FD into the FDD." is displayed.
  - ② Insert the Config FD into the FDD and select (CL) [OK].

If you insert the previously backed-up Config FD, the original configuration is recovered.

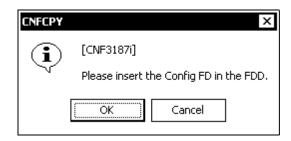

#### (2) Removing the Config FD

- ① When the copying of the Config is completed, a message "Please remove the Config FD." is displayed.
- ② Remove the Config FD from the FDD and select (CL) [OK].

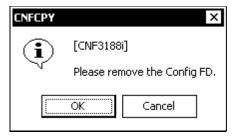


#### 4. JAVA Setup


4-1 JAVA Setup

Setting up of Java is executed. When Java has already been installed, the routine proceeds to Step 4-2.


(1) Select (CL) [Yes].

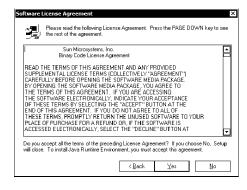


(2) Select (CL) [Next].

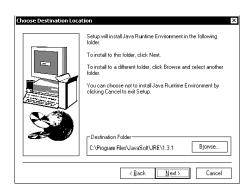


- 4-2 APACHE Setup
  - Setting up of APACHE is executed. When APACHE has already been installed, the routine proceeds to Step 5.
- (1) Select (CL) [Next].

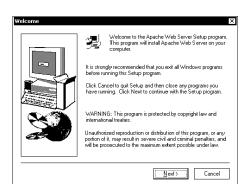

(2) Select (CL) [Yes].

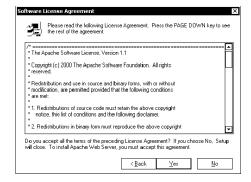


(3) Select (CL) [Next].

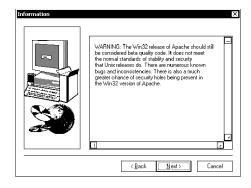


REV.0 Jun.2002
----------------


(4) Select (CL) [Next].

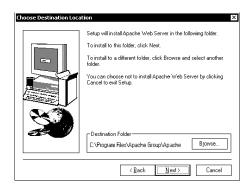


(5) Select (CL) [Next].

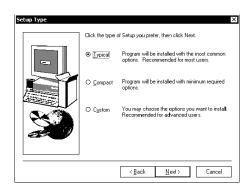

(6) Select (CL) [Next].

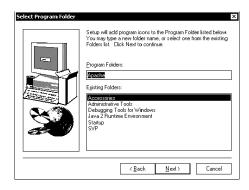

(7)
Remove the check box of "Yes and I want to view the README file.", and select (CL) [Finish].

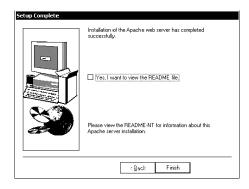

5.	Restarting	the	SVP
•			~

When the setup is completed, the SVP restarts automatically.


REV.1	Jun.2002	Jul.2002				
-------	----------	----------	--	--	--	--

#### 6. Set IP address of SVP


(1) <Changing the mode>
Change the mode by selecting [Modify Mode].

(2) <Opening the Install window> Select (CL) [Install] from the [SVP] menu.

(3) <Selecting [Set SVP IP Address]>
Select (CL) [Set IP Address] in the [Install] window.

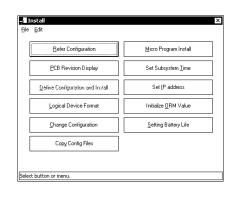

(4) <Setting an IP address>
Select (CL) [SVP] in the Internal IP Address box and enter an IP address and subnet mask of the internal IP address.

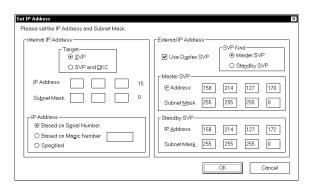

SVP Kind ——— • Master SVP

O Standby SVP

214 . 127 . 170

255 . 255 . 0

Cancel

158 214 127 172


Subnet Mask 255 255 255 0

✓ Use Duplex SVP

Subnet Mask 255

IP Address

(5) <Setting an IP address> Select (CL) [SVP] in the Internal IP Address box and enter an IP address and subnet mask of the internal IP address.

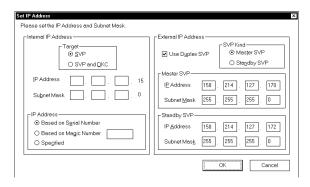

Please set the IP Address and Subnet Mask

⊕ SVP

O SVP and DKC


Subnet Mask . .

Based on Serial Number

O Specified

O Based on Magic Number

- (6) <Setting the SVP duplication>
  - (a) Select (CL) [Use Duplex SVP] in the External IP address box.
  - (b) Select (CL) [Standby SVP] in the SVP Kind box.
  - (c) Enter the IP addresses and subnet masks of the Master and Standby SVPs, and then select (CL) [OK].

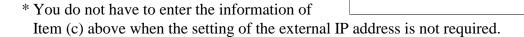

(7) <Confirming the external IP address setting>
When a message, "After finishing this operation, you must use the Windows Control Panel to change the external IP address." is displayed, select (CL) the [OK] button.



(8) <Inserting the Config FD> Insert the Config FD into the FDD and select (CL) [OK].



(9) <Removing the Config FD> When the copying of the Config is completed, a message, "Please remove the Config FD." is displayed. Remove the FD and select (CL) [OK].



(10) <Confirming rebooting of the SVP> Select (CL) [OK] in response to a message, "This will reboot SVP.".




(11) < Opening the Network and Dial-up Connections window>

When the setting of the external IP address is not required, go to Step 8.


Select (CL) [Settings] and [Network and Dialup Connections] in this order from the [Start].



(12) <Opening the Local Area Connection 2 window> Select (CL) [Local Area Connection 2] in the Network and Dial-up Connections window.

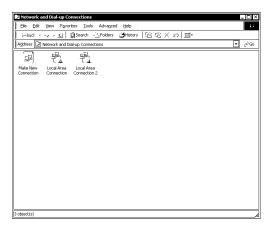


(13) <Opening the Local Area Connection 2 Properties window> Select (CL) [Internal Protocol (TCP/IP)] in the [Local Area Connection 2 Properties window, and then select (CL) the [Properties] button.

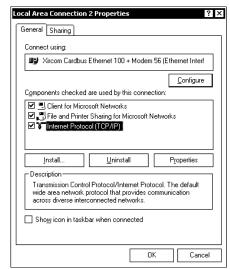

(14) < Setting an external IP address>

Set the IP address and subnet mask, and then select (CL) the [OK] button.

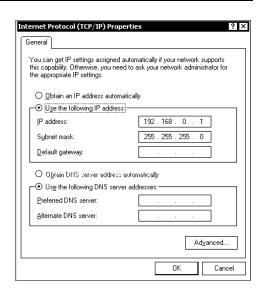

## 7. Removing the SVP PS ON/OFF INH jumper

Remove the jumper plug that was attached in Step 4 of Item [4] in PRE-PROCEDURE T5. Remove the jumper plug from the SVP PS ON/OFF INH pin of the RS CON.

When the SVP is an Optional SVP, remove the jumper plug from the PS CTLINH pin of the SVPPS-BOX, too.

(See HARDWARE T7 (Step 5 on REP03-480))

## 8. TOD Setting

Wait a few minutes, message "Loading SVP Program... SVP requests to DKC can not be performed presently. Please wait..." will be extinguished. Then set TOD. See SVP02-10.

REV.0
-------


# 9. Load the Configuration from the SM to the SVP's HDD

(1) <Open [Maintenance]> Select (CL) [Maintenance] form 'SVP'.


(2) Check "Connection error occurred SVP-DKC." is not displayed. If "Connection error occurred SVP-DKC" is displayed, see TRBL05-60.

(3) <Select [Exit]>
Select (CL) [File] from the "Maintenance".
Select (CL) [Exit].

#### (Multi Cabinet Model)

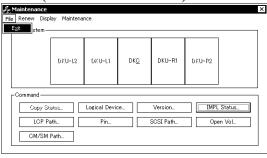

(Single Cabinet Model)

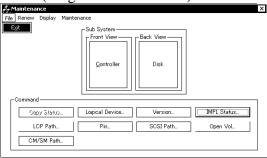

#### 10. Setting Web Console

Make a setting of the Web Console according to [Web Station] section. (WEB01-10)

When you have installed from the backed-up Config FD,

- i) Storage list / user list / environment information can be recovered to the backed-up status by copy the following files under c:\program files\apache group\apache\cgi-bin\Utility\CSV.
- USERLIST.CSV
- STRLIST.CSV
- ENV.CSV
- ii) Please perform the following procedure, when you use SNMP Agent.
  - 1. Push Web Console button.
  - 2. Open the SNMP Information Tab.
  - 3. Remove the check mark of Extension SNMP and push Apply button.
  - 4. Add the check mark of Extension SNMP and push Apply button again.
- iii)Please perform the following procedure, when you don't use SNMP Agent.
  - 1. Push Web Console button.
  - 2. Specify Name, Contact and Location on Information Tab again.

#### 11. Confirm status

Confirm the status display.

If button is valid, go to [12].

If button is blinking, replace the FLASH CARD.

## 12. Configuration Back

Make a backup copy of the configuration in the CONFIG FD. (See MICRO-FC08-10)

	Copyri	ght ©20	<ol><li>02, Hita</li></ol>	ichi, Ltd
--	--------	---------	----------------------------	-----------

REV.0 Jun.2002		
----------------	--	--

13. SIM Co	omplete
------------	---------

See SVP02-580.

[End of POST-PROCEDURE]

REV.0 Jun.2002			
----------------	--	--	--

[5] Replacement of a Flash Card (without SVP switching)

Perform the following operation at a Master SVP.

1. <Confirm status>

Confirm the status display.

If button is blinking, refer to SIM and replace the target part again, or see TROUBLE SHOOTING SECTION.

[End of POST-PROCEDURE]

REV.1	Jun.2002	Jul.2002				
-------	----------	----------	--	--	--	--

# [POST-PROCEDURE u]

#### — OUTLINE —

- ① Execute CUDG on P-DEV.
- ② Specify recovery.
- ③ Correction copy
- Reset ORM Error Count on the P-DEV.
- S Reset Threshole Counter
- © SIM Complete.

## **A** CAUTION

This processing is a special operation for detecting a cause of a Fibre loop error. Ask the technical support center about the appropriateness of the operation.

REV.0	Jun.2002					
-------	----------	--	--	--	--	--

# **A** CAUTION

This processing is a special operation for detecting a cause of a Fibre loop error. Ask the technical support center about the appropriateness of the operation.

<Check the beginning of recovery>
 Please insert the floppy disk and select (CL)
 [OK].

Failure information of the physical device is written to the floppy disk.



[After the completion of writing failure information:] "Please remove the FD." is displayed.


Please remove the floppy disk and select (CL) [OK].



2. <Spin up the Physical Drive> "Spinning up..." is displayed.

# 3. <DKU INLINE>

Select (CL) [No] in response to "Are you sure you want to diagnose the physical device?".

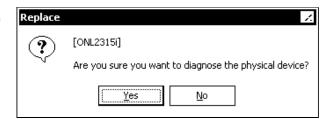


REV.0 Jun.2002			
----------------	--	--	--

# **A** CAUTION


This processing is a special operation for detecting a cause of a Fibre loop error. Ask the technical support center about the appropriateness of the operation.

4. <Restore Physical Drive>
Select (CL) [Yes] in response to "Are you sure you want to restore the physical device?".

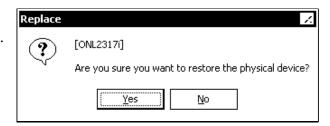

5. <Check the Drive Status> "Checking..." is displayed. Device is still blocked.

6. <Check the beginning of correction copy> Select (CL) [Yes] in response to "Are you sure you want to correct data in the physical device?".

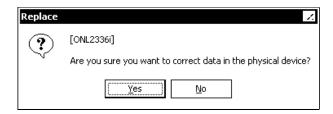


7. <Correct data>

"Correcting..." is displayed.

# **A** CAUTION

This processing is a special operation for detecting a cause of a Fibre loop error. Ask the technical support center about the appropriateness of the operation.

8. <Check the starting of Correction copy> Select (CL) [OK] in response to "Correcting data in the physical device has been started.".

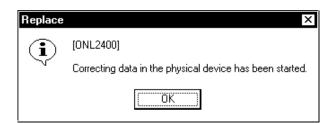

9. <Check the end of P-DEV recovery> Select (CL) [OK] in response to "Replace finished.".



10. <SIM Complete>
Refer to SVP02-580.

# [POST-PROCEDURE z]

- OUTLINE -

- ① SVP Window
- ② Change the SVP operation mode.

REV.0 Jun.2002			
----------------	--	--	--

 $1. \quad <\!\! SVP \ window \!\!>$ 

2. <Changing the SVP operation mode> Change the mode to [View Mode].

REV.0 Jun.2002		
----------------	--	--