



EMULEX®

We network storage

AutoPilot Installer

for

Windows Server 2003 and Windows 2000 Server

Quick Installation Manual

Copyright© 2005 Emulex Corporation. All rights reserved worldwide. No part of this document may be reproduced by any means nor translated to any electronic medium without the written consent of Emulex Corporation.

Information furnished by Emulex Corporation is believed to be accurate and reliable. However, no responsibility is assumed by Emulex Corporation for its use; or for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of Emulex Corporation.

Emulex and LightPulse are registered trademarks, and AutoPilot Installer, AutoPilot Manager, BlockGuard, FibreSpy, HBAnyware, InSpeed, MultiPulse and SBOD are trademarks, of Emulex Corporation. All other brand or product names referenced herein are trademarks or registered trademarks of their respective companies or organizations.

Emulex provides this manual "as is" without any warranty of any kind, either expressed or implied, including but not limited to the implied warranties of merchantability or fitness for a particular purpose. Emulex Corporation may make improvements and changes to the product described in this manual at any time and without any notice. Emulex Corporation assumes no responsibility for its use, nor for any infringements of patents or other rights of third parties that may result. Periodic changes are made to information contained herein; although these changes will be incorporated into new editions of this manual, Emulex Corporation disclaims any undertaking to give notice of such changes.

Introduction

AutoPilot Installer™ for Emulex® drivers provides installation options that range from a simple installation with a few mouse clicks to custom unattended installations using predefined script files.

AutoPilot Installer is included with Emulex drivers and utilities in Windows executable files that can be downloaded from the Emulex Web site. Run the distribution executable file to extract all of the software needed for an installation, then complete the installation using AutoPilot Installer.

AutoPilot Installer allows you to install a driver using any of the following methods:

Hardware-first installation. The host bus adapter (HBA) is installed before the downloaded Emulex drivers and utilities are installed. See page 3 for this procedure.

Software-first installation. This new installation method allows drivers and utilities to be downloaded from the Emulex Web site and installed using AutoPilot Installer prior to the installation of any HBAs. The drivers and utilities are automatically used when HBAs are installed at a later time. See page 4 for this procedure.

Unattended installation. This new installation method allows you to set up AutoPilot Installer to run unattended using customized scripts. Unattended installation can be used for both hardware-first and software-first installations. See the complete Installation section of the driver User Manual for more information.

Note: Complete driver and utilities documentation may be downloaded from the Emulex Web site (www.emulex.com). Click "Drivers, Software and Manuals" and navigate by clicking the appropriate links.

Updating the Driver Using AutoPilot Installer

If you are currently running an older driver version, use the hardware-first installation procedure to update your driver. Begin at step 2 to update the driver.

You can also update the Emulex drivers following the manual installation method. See the complete Installation section of the driver User Manual for this procedure.

Changing the Driver Type

If you are currently using a driver type different from the one you are installing with AutoPilot Installer, you must uninstall HBAnyware™ before running AutoPilot Installer. Uninstall HBAnyware from the Control Panel using Add/Remove Programs.

AutoPilot Installer can only install the driver type that is included in the Distribution Executable File.

Distribution Executable File Overview

The distribution executable file is a self-extracting file that includes the following:

- AutoPilot Installer - installs driver and utilities.
- Driver - manages communication and data transfer between applications and I/O devices, using HBAs as agents.
- HBAnyware utility - performs installation and configuration tasks on remote and local adapters.
- Driver-specific utility (elxcfg for FC Port, lputilnt for Storport Miniport and SCSIport Miniport) - provides a user-friendly interface that allows you to examine, manage and configure local HBAs.

Distribution Executable File Procedure

1. Download the distribution executable file from the Emulex Web site to your system.
2. Double-click the distribution executable file. A window is displayed with driver version information and Emulex contact information.
3. Click **Next** to access the Location window or click **Cancel** to close the window.
4. The default installation location is displayed. Browse to a different location, if desired. Click **Install** to continue the installation.
5. The Progress window is displayed. As each task is completed, the corresponding checkbox is automatically selected.
6. After all tasks are completed, a confirmation window is displayed. The Start AutoPilot Installer checkbox is automatically selected. To start AutoPilot Installer later, clear this checkbox.
7. Click **Finish** to close the distribution executable file.

AutoPilot Installer Introduction

The Emulex AutoPilot Installer is a Fibre Channel HBA installation wizard for Windows. The AutoPilot Installer installs (or updates) Emulex drivers and utilities, and configures HBAs, drivers and utilities.

Prerequisites

- One of the following operating systems:
 - Windows Server 2003 running on an x86 or 64-bit platform.
 - For the Emulex Storport Miniport driver, a Microsoft driver update is required. See the Emulex Web site for the latest update to the Microsoft Storport driver.
 - Windows 2000 Server - Service Pack 4 or later is recommended for all installations. Storport Miniport is not compatible with Windows 2000 Server.

Installation Planning

The following table describes the types of installations that can be performed under certain conditions. Use this information to determine which method to use for your situation. This document includes instructions for attended installations only. See the complete Installation section of the driver User Manual for more information on unattended installations.

Condition	Attended Installations		Unattended Installations	
	Hardware-First	Software-First	Unattended Installation	Replicated Installation
No HBA in a single system		X	X	X
New HBA in a single system	X		X	X
Existing HBAs and drivers installed, updated driver available	X		X	X
Multiple systems, no HBAs installed		X	X	X
Multiple systems, new HBAs installed	X		X	X

AutoPilot Installation Procedures

Hardware-First Installation

Prerequisites

- If you are currently using a driver type different from the one you are installing with AutoPilot Installer, you must uninstall HBAnyware before running AutoPilot Installer. Uninstall HBAnyware from the Control Panel using Add/Remove Programs.
- Distribution executable file downloaded from the Emulex Web site.

Note: To update the driver, begin the following procedure at Step 2.

Procedure

1. Install a new Emulex HBA and power-on the system. If the Windows Found New Hardware wizard window is displayed, click Cancel to exit. AutoPilot Installer performs this function.

Note: If there are multiple HBAs in the system, the Windows Found New Hardware wizard is displayed for each HBA. Cancel to exit the wizard for each HBA.

2. If you have already extracted the driver and utility files, run the APInstaller.exe file.
If you have not extracted the driver and utility files, run the distribution executable file (see page 2) and leave the Start AutoPilot Installer check box selected. Click **Finish**.
A window lists the installed HBAs (click on the HBA to view a window with an expanded list of the information for the HBA. Click **OK** to exit this window.).
3. Click **Next**. The Available Drivers window shows the drivers available for your HBA. The new driver to be installed is displayed above the HBA listing.

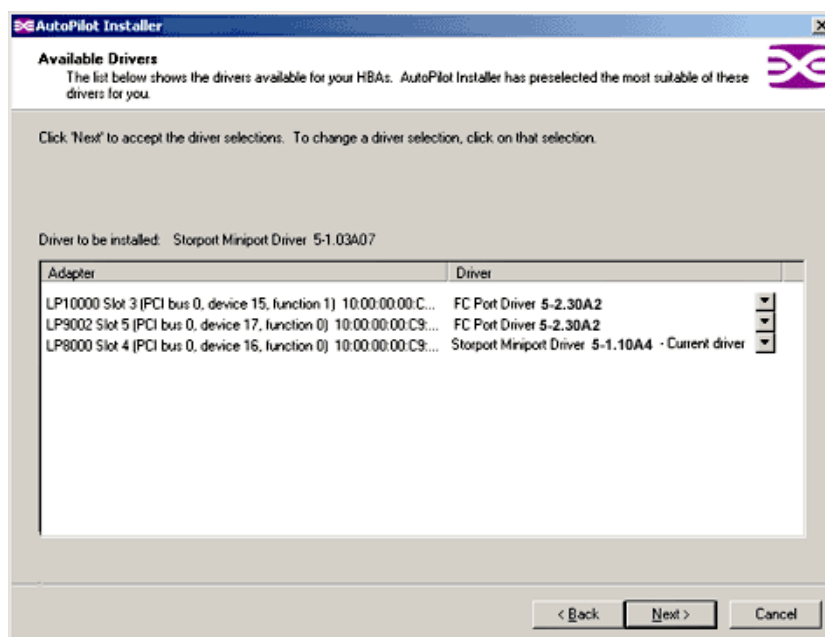


Figure 1: AutoPilot Installer, Available Drivers Window

Note: Illustrations in this document are examples; model and version numbers on your screens will reflect your system's configuration.

4. Select the driver version to be installed for each HBA and click **Next**.
 - To install the new driver for the HBA, select it from the drop-down list.
 - If you do not want to install a new driver on an HBA, select the existing (current) driver version from the drop-down list.
5. A vendor-specific version of the Emulex driver installation program may include one or more windows with questions that you must answer before continuing the installation process. Answer each question and click **Next** on each window to continue.
6. View the progress of the installation. After all four tasks are completed, click **Next**.
7. View or print a report, if desired.
8. Click **Finish** to close AutoPilot Installer. If your system requires a reboot for this change to take effect, you are prompted to do so when you click **Finish**.

If the Installation Fails

If the installation fails, the Diagnostics window is displayed. To view the reason an HBA failed, select the HBA row. The reason and suggested corrective action are displayed below the list.

Software-First Installation

Prerequisites

- Distribution executable file downloaded from the Emulex Web site.

Procedure

1. If you have already extracted the driver and utility files, run the APInstaller.exe file.
If you have not extracted the driver and utility files, run the distribution executable file (see page 2), and leave the start AutoPilot Installer check box selected. Click **Finish**. The following message is displayed:

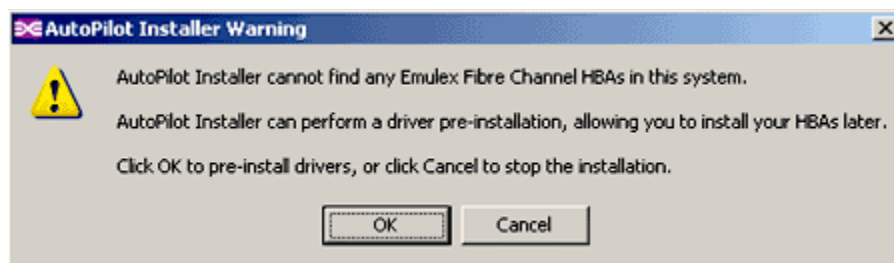


Figure 2: Message (Software-First Installation)

2. Click **OK**.
3. The Welcome window is displayed. Click **Next**.
The driver version to be installed is displayed on the Available Drivers window. Click **Next**.
4. A window verifies the progress of the installation. Tasks are automatically checked off as they are completed. Click **Next**.
5. If the installation is successful, the Congratulations window is displayed.
6. View or print a report, if desired.
7. Click **Finish** to close AutoPilot Installer. If the system requires a reboot for this change to take effect, you are prompted to do so when you click **Finish**.