
Index

A

- accessing Configuration/Setup Utility program 4-7
- activity monitor option 4-22
- adapter slot position 3-5
- adapters, installing 3-8
- adding
 - cache memory 3-6
 - drivers 2-4
 - internal drive 3-10
 - memory module kits 3-3
 - memory modules 3-3
 - SBC 3-2
 - system memory (SIMMs) 3-3
- address conflicts 5-7
- administrator password option 4-15
- advanced CPU setup option 4-18
- advanced power management option 4-21
- advanced setup option 4-17
- air filters 4-2
- Analog Video PMC Form Factor Card
 - See PMC video card
- APM BIOS mode option 4-21
- application-specific drivers 4-22
- assignments, serial port 4-25
- automatic power management (APM) 4-22

B

- backplane and cables (FRUs) 9-2
- backplane, removing and replacing 8-46
- battery failure error message 5-10
- battery, memory-retention 4-24
- beep symptoms 8-19
- beeps, POST 8-3
- BIOS level 8-2
- BIOS, updating 4-31
- blank screen 5-5
- boot error, hard disk 8-32
- bottom cover (FRUs) 9-6
- broken cover lock 5-6
- bus card connectors C-4

C

- cable connectors C-4
- cables, connecting 2-2
- cache control option 4-18
- cache memory, installing 3-6
- CAD Panacea video drivers, installing E-6
- card hold-down spacers 3-9
- channel assignments, DMA D-2

- check voltage setting 2-1
- checkouts
 - beeps 8-19
 - display 8-18
 - general 8-10
 - keyboard 8-12
 - Module Tests Menu 8-6
 - no beeps 8-20
 - power supply 8-16
 - power-supply connections 8-17
 - printer 8-16
 - USB port 8-14
- code page 4-31
- color graphics adapter (CGA) 4-30
- color, high resolution 4-30
- COM1 serial port 4-25
- command-line options 8-7
- communications 4-26
- component layout
 - 586 and 586E SBCs 6-2
 - 586U and 586EU SBCs 6-3
 - 7587 Industrial Computer 1-2
- configuration
 - 7587 Industrial Computer 4-1
 - activity monitor 4-22
 - administrator password 4-15
 - advanced power management 4-21
 - advanced setup 4-17
 - APM BIOS mode 4-21
 - cache control 4-18
 - changing 4-6
 - conflicts 4-5
 - CPU advanced setup 4-18
 - date and time 4-14
 - device change 5-13
 - DMA resources 4-20
 - drive security option 4-15
 - errors 4-5
 - ethernet setup 4-18
 - hardware change 5-9
 - I/O port resources 4-20
 - interrupt resources 4-21
 - ISA legacy resources 4-19
 - memory change 5-13
 - memory resources 4-19
 - overview 4-5
 - PCI bus 0 data 4-10
 - PCI control 4-18
 - plug and play control 4-18
 - power-on password 4-15
 - product data 4-9
 - ROM shadowing 4-18

- configuration (*continued*)
 - start options 4-16
 - system security 4-14
 - system summary 4-9
 - USB setup 4-18
 - utility program 4-6
 - video 4-31
 - viewing information 4-9
 - watchdog/thermal setup 4-18
- Configuration/Setup Utility program
 - activity monitor option 4-22
 - administrator password option 4-15
 - advanced power management option 4-21
 - advanced setup 4-17, 4-18
 - APM BIOS mode option 4-21
 - cache control option 4-18
 - date and time option 4-14
 - description 5-1
 - devices and I/O ports option 4-10
 - DMA resources 4-20
 - drive security option 4-15
 - ethernet setup 4-18
 - hard disk drive option 4-13
 - I/O port resources 4-20
 - IDE drives setup option 4-13
 - interrupt resources option 4-21
 - ISA legacy resources 4-19
 - main menu screen 4-8
 - memory resources option 4-19
 - moving around in the screens 4-8
 - options
 - activity monitor 4-22
 - administrator password 4-15
 - advanced power management 4-21
 - advanced setup 4-17
 - APM BIOS mode 4-21
 - cache control 4-18
 - CPU advanced setup 4-18
 - date and time 4-14
 - devices and I/O ports 4-10
 - DMA resources 4-20
 - drive security option 4-15
 - ethernet setup 4-18
 - hard disk drive 4-13
 - I/O port resources 4-20
 - IDE drives setup 4-13
 - interrupt resources 4-21
 - ISA legacy resources 4-19
 - memory resources 4-19
 - PCI bus 0 data 4-10
 - PCI control 4-18
 - plug and play control 4-18
 - power-on password 4-15
 - product data 4-9
 - ROM shadowing 4-18
 - start options 4-16
 - system security 4-14

- Configuration/Setup Utility program (*continued*)
 - options (*continued*)
 - system summary 4-9
 - USB setup 4-18
 - video setup 4-12
 - watchdog/thermal setup 4-18
 - PCI bus 0 data 4-10
 - PCI control option 4-18
 - plug and play control 4-18
 - power-on password 4-15
 - product data option 4-9
 - ROM shadowing 4-18
 - run 2-4
 - selecting a monitor E-2
 - service procedures 8-1
 - start options 4-16
 - starting 4-7
 - system security option 4-14
 - system summary 4-9
 - USB setup 4-18
 - use 4-6
 - video setup option 4-12
 - watchdog/thermal setup 4-18
- conflicts, eliminating assignment 5-7
- connecting cables 2-2
- connectivity F-2
- connectors, PMC video card 7-1
- cover lock, broken 5-6
- cover, remove 3-2
- CPU setup option 4-18

D

- data, transferring 4-26
- date and time option 4-14
- date and time, setting 4-14
- default resolutions E-1
- detecting POST errors 5-1, 5-2
- device configuration error 5-13
- device drivers
 - installing CAD Panacea E-6
 - installing MicroStation PC E-7
 - installing OS/2 E-5
 - installing Windows 3.1 E-2
 - installing Windows 95 E-4
 - installing Windows NT E-5
 - overview 4-22
- device drivers, downloading 8-2
- device records A-1
- devices and I/O ports option 4-10
- devices, handling discharge-sensitive F-16
- diagnostic
 - command-line options 8-7
 - diskette 5-1
 - error messages 5-2, 5-13
 - errors 5-9

- diagnostic (*continued*)
 - programs 5-1
 - QAPlus/PRO program 8-5
 - starting diagnostic program 8-8
 - tests, extended memory 8-8
 - tools 5-1, 8-3
- dimensions B-1
- DIN (Deutsches Institut für Normung) connector 6-10
- direct memory access (DMA) channel
 - assignments 4-23, 4-24, D-2
- discharge-sensitive devices, handling F-16
- disconnecting cables 8-33
- diskette
 - diagnostic programs 5-3
 - Diagnostics 5-1
 - drive access 4-3
 - drive in-use lights 5-4
 - drive replacement 8-35
 - FRUs 9-4
 - parts catalog 9-4
 - security option 4-15
 - starting the diagnostic program 8-8
 - update 4-31
- diskettes drives, security 4-15
- display
 - blank screen 5-5
 - checkout 8-18
 - distorted screen 5-5
 - error codes 5-2, 5-8
 - jitter 5-5
 - problems 5-5, 5-8
 - rolling screen 5-5
 - selecting 4-30
 - self-tests 5-4
 - support 4-30
 - SVGA 4-29
 - wavy screen 5-5
- DMA channel assignments 4-23, 4-24, D-2
- DMA resources option 4-20
- downloading programs 8-2
- drivers
 - adding 2-4
 - application specific 4-22
 - device specific 4-22
 - installing 2-4
 - installing CAD Panacea E-6
 - installing MicroStation PC E-7
 - installing OS/2 E-5
 - installing Windows 3.1 E-2
 - installing Windows 95 E-4
 - installing Windows NT E-5
 - overview 4-22
 - S3 Trio64V+ video E-1
 - video 4-29
- drives
 - diskette drive replacement 8-35

- drives (*continued*)
 - hard disk 4-13
 - hard disk boot error 8-32
 - hard disk jumper settings C-2
 - in-use lights 5-4
 - installing external device 4-27
 - installing internal 3-10
 - parts catalog 9-4
 - replacing hard disk 8-36
 - security option 4-15

E

- EEPROM, Flash 4-31
- electrical safety F-12
- electronic emission F-2
- electrostatic devices, handling F-16
- emission, electronic F-2
- enhanced graphics adapter (EGA) 4-30
- environment 1-4
- error recovery timer 4-29
- errors
 - battery failure 5-10
 - beep symptoms 8-19
 - code format, POST 8-4
 - configuration 4-5
 - detecting POST 5-2
 - device configuration 5-13
 - diagnostic 5-9, 5-13
 - hard disk boot error 8-32
 - memory configuration 5-13
 - message types 8-4
 - messages 5-2, 5-8, 5-9, 8-25
 - numeric codes 8-21
 - POST 4-6, 5-2, 5-9, 5-10
 - prompt 5-8
 - software 5-9
 - types of messages 8-4
- ethernet setup option 4-18
- external power connector 6-14
- external serial devices, installing 4-26

F

- fan (power supply) problems 5-6
- fans and filters (FRUs) 9-7
- feature cards, replacing 8-34
- field-replaceable units (FRUs)
 - backplane and cables 9-2
 - bottom cover 9-6
 - diskette drives 9-4
 - fans and filters 9-7
 - hard disk drives 9-4
 - IBM SBC 9-6
 - keyboards 9-9
 - mouse 9-9

- field-replaceable units (FRUs) (*continued*)
 - numbers 9-1
 - parts catalog 9-1
 - power cord 9-10
 - top cover 9-5
- Flash (BIOS/VPD) update procedure 8-2
- flash, updating 4-31
- flash, verifying revision level 4-31
- flicker 4-29
- front fan, replacing 8-37
- front-view dimensions B-1
- FRUs
 - See field-replaceable units (FRUs)

G

- general checkout 8-10
- general problems 5-6
- general safety F-11
- graphics 4-29
- grounding requirements F-16
- guide, safety inspection F-15

H

- handling electrostatic-discharge-sensitive devices F-16
- handling static-sensitive devices F-16
- hard disk
 - bad sector 5-8
 - boot error 8-32
 - drive access 4-3
 - FRUs 9-4
 - jumper settings C-2
 - parts catalog 9-4
 - replacing 8-36
 - secure drives 4-15
 - security option 4-15
 - testing 5-8
- hardware
 - diagnostic error messages 5-13
 - problems 5-1, 8-3
 - testing programs 5-1
- heat output 1-4
- high-resolution color 4-30
- hold-down, card spacers 3-9
- home page, Internet 8-2
- hub, USB port 4-28

I

- I/O port resources option 4-20
- I/O ports, configuration information 4-10
- IBM SBC
 - See single-board computer (IBM SBC)
- IDE drives setup option 4-13

- in-use lights 5-4
- indicator lights problem 5-6
- indicators, SBC 6-4
- industry-standard architecture (ISA)-bus adapters D-1
- inspection guide, safety F-15
- installing
 - 7587 Industrial Computer 2-1
 - adapters 3-8
 - application programs 4-3
 - cache memory 3-6
 - CAD Panacea video drivers E-6
 - card hold-down spacers 3-9
 - device drivers 2-4
 - external parallel devices 4-27
 - external serial devices 4-26
 - internal drive 3-10
 - internal options 2-2
 - memory modules 3-3
 - MicroStation PC video drivers E-7
 - options 3-1
 - OS/2 video drivers E-5
 - parallel devices, external 4-27
 - RAM memory module kits 3-3
 - S3 Trio64V+ driver E-1
 - SBC 3-2
 - serial devices, external 4-26
 - Windows 3.1 video drivers E-2
 - Windows 95 video drivers E-4
 - Windows NT video drivers E-5
- intermittent problems 5-6
- internal drive, installing 3-10
- Internet address 8-2
- interrupt conflicts 5-7
- interrupt resources option 4-21
- ISA legacy resources 4-19
- ISA-bus adapters D-1

J

- jumper block 6-14
- jumpers and switches, SBC 4-24

K

- keyboard part numbers 9-9
- keyboard problems 5-6
- keyboardless operation mode 4-4
- kits, installing RAM memory module 3-3

L

- languages 4-31
- layout
 - 586 and 586E SBCs 6-2
 - 586U and 586EU SBCs 6-3
 - 7587 Industrial Computer components 1-2

- LED assembly, replacing 8-38
- LEDs 4-1
- lights not working 5-6
- lights, in-use 5-4
- lithium battery 4-24
- lock for cover, broken 5-6
- logical unit numbers, changing 8-8

M

- mass storage device configuration information 4-13
- MCGA (multicolor graphics array) 4-30
- memory configuration error 5-13
- memory resources option 4-19
- Memory Test Group 8-8
- memory-retention battery 4-24
- menu, module tests 8-6
- messages
 - battery failure error 5-10
 - beep/blink patterns 8-4
 - device configuration error 5-13
 - diagnostic error 5-9, 5-13, 8-4
 - Enter password prompt 5-2
 - error 5-2, 8-25
 - memory configuration error 5-13
 - multiple 8-4
 - POST error 5-1, 5-2, 5-10, 8-4
 - software-generated 8-4
 - types of error 8-4
- MicroStation PC video drivers, installing E-7
- miscellaneous connectors 6-13
- Module Tests Menu 8-6
- module tests selection 8-8
- monitor, selecting E-2
- monitor, thermal/watchdog 4-29
- mounting 7587 Industrial Computer 2-2
- mouse (FRUs) 9-9
- mouse problems 5-6

N

- no beeps 8-20
- notices F-1
- numeric error codes 8-21

O

- occasional problems 5-6
- on/off switch 4-1
- open 7587 Industrial Computer 3-2
- opening the system unit 8-34
- operator information 4-1
- options problems 5-7
- options, adding 3-1
- OS/2 video drivers, installing E-5

- overview of 7587 Industrial Computer 1-1

P

- parallel devices, external 4-27
- parallel port assignments 4-27
- parallel port mode, changing 4-27
- parts catalog 9-1
- parts warranty 9-1
- passwords
 - administrator 4-15
 - keyboard 4-4
 - power-on 4-3, 4-15, 5-2, 5-6
 - prompt 5-8
 - removing 4-4
 - system administrator 4-3
- PCI bus 0 data option 4-10
- PCI control option 4-18
- physical dimensions B-1
- pin assignments, serial port C-8
- plug and play control 4-18
- PMC video card
 - features 7-1
 - removing and replacing 8-45
- pointing-device problems 5-6
- port assignment conflicts 5-7
- ports, configuring I/O 4-10
- POST
 - See power-on self-test (POST)
- power cord part numbers 9-10
- power supply 1-4
- power supply fan problems 5-6
- power supply, replacing 8-36
- power switch, replacing 8-39
- power-on password 5-2, 5-6
- power-on password option 4-15
- power-on problems 5-2, 5-7
- power-on self-test (POST)
 - battery failure error 5-10
 - beeps 8-3
 - description 5-1
 - detecting problems 8-3
 - error 4-6
 - error detection 5-1, 5-2
 - error messages 5-2, 5-10
 - operation 5-1, 5-2
 - problem detecting 8-3
 - updating 4-31
- power, switching off 8-33
- printer problems 5-8
- problems
 - diskette drive 5-4
 - display 5-5
 - error prompt 5-8
 - fan 5-6
 - forgotten power-on password 5-6

problems (*continued*)

- general 5-6
- hardware 5-1
- hardware related 8-3
- intermittent 5-6
- keyboard 5-6
- mouse 5-6
- no LED blinks 5-5
- occasional 5-6
- options 5-7
- overview 5-1
- password prompt 5-8
- pointing-device 5-6
- power-on 5-2, 5-7
- printer 5-8
- screen distortion 5-5
- screen jitter 5-5
- screen roll 5-5
- software 5-1, 5-9
- solving 5-1, 5-2
- troubleshooting charts 5-4
- undetermined 8-32
- user error 5-1
- wrong number of LED blink 5-5
- wrong screen characters 5-5
- processor chip, removing and replacing 8-42
- product data option 4-9
- program
 - Configuration/Setup Utility 5-1
 - diagnostic 5-1, 5-3
 - navigation 8-6
 - power-on self-test (POST) 5-1
 - QAPlus/PRO 8-5
 - system 4-6, 4-31
 - test 8-5
 - utility 4-6

Q

- QAPlus/PRO diagnostic program 8-5

R

- RAM memory module kits, installing 3-3
- records, device A-1
- remove cover 3-2
- removing and replacing
 - backplane 8-46
 - diskette drive 8-35
 - feature cards 8-34
 - front fan 8-37
 - hard disk drive 8-36
 - LED assembly 8-38
 - PMC video card 8-45
 - power supply 8-36
 - power switch 8-39

removing and replacing (*continued*)

- procedures for 8-1, 8-33
- processor chip 8-42
- SBC 8-39
- removing the system unit from its mounting 8-34
- replacement parts 9-1
- requirements, grounding F-16
- restore configuration 4-6
- revision level, verifying flash 4-31
- ROM (read-only memory) 4-31
- ROM shadowing 4-18
- run selected module tests 8-9

S

- S3 Trio64V+ driver, installing E-1
- safety
 - electrical F-12
 - general F-11
 - information F-11
 - inspection guide F-15
- scripting 8-8
- security features 4-3
- security option, drive 4-15
- select monitor E-2
- selected module tests, running 8-9
- selected tests in test groups, changing 8-9
- self-tests, internal 5-1, 5-2
- sensor, temperature 4-29
- serial devices, external 4-26
- serial port 4-25
- serial port assignments 4-26
- serial port pin assignments C-8
- service
 - information 8-1
- service parts warranty 9-1
- set date and time 4-14
- shadow ROM 4-18
- SIMMs (single inline memory modules) 3-3
- SIMMs, installing 3-3
- single inline memory modules (SIMMs) 3-3
- single-board computer (IBM SBC)
 - cache memory 3-6
 - component layout 6-2
 - connectors 6-6
 - features 6-1
 - FRUs 9-6
 - indicators 6-4
 - installing 3-2
 - jumpers 6-15
 - jumpers and switches 4-24
 - memory subsystem 6-4
 - parts catalog 9-6
 - ports, USB 4-28
 - power-supply connections 8-17
 - remove 3-3

- single-board computer (IBM SBC) *(continued)*
 - removing and replacing 8-39
 - SIMMs 3-3
 - switch functions 6-16, C-6
 - updating flash EEPROM 4-31
- slot position, adapter 3-5
- software
 - errors 5-9
 - problems 5-1, 5-2
- solving problems 5-1
- spacers, card hold-down 3-9
- special characters 4-31
- specifications 1-3
- start options 4-16
- starting
 - Configuration/Setup Utility program 4-7
 - diagnostic programs 5-3
 - system unit 5-2
- startup-sequence control 4-4
- static-sensitive devices, handling F-16
- stopping tests 8-9
- storage device, mass, configuration information 4-13
- SVGA
 - advantages 4-29
 - description 4-29
 - languages 4-31
 - software compatibility 4-30
 - special characters 4-31
 - video configuration 4-31
- switch, voltage-selection 5-2
- switching off power 8-33
- symptom-to-FRU index 8-18
- symptoms, beep 8-19
- symptoms, no beeps 8-20
- system memory (SIMMs) 3-3
- system records A-1
- system security option 4-14
- system summary option 4-9
- system unit, opening 8-34

T

- test group, memory 8-8
- test groups, viewing 8-7
- test programs, hardware 5-1
- test scripts 8-8
- test the system unit 5-2
- tests menu, module 8-6
- tests, stopping 8-9
- thermal monitor 4-29
- time and date, setting 4-14
- timer, watchdog 4-29
- tools, diagnostic 5-1
- top cover (FRUs) 9-5
- top-view dimensions (7587 Industrial Computer) B-2

- trademarks and service marks F-1
- transferring data 4-26
- troubleshooting charts 5-4

U

- undetermined problems 8-32
- universal serial bus (USB)
 - port checkout 8-14
 - port connector 6-12
 - ports 4-28
 - setup option 4-18
- update programs, downloading 8-2
- user error problems 5-1
- using QAPlus/PRO program 8-5
- using test programs 8-5
- utility program, Configuration/Setup 4-6

V

- verifying flash revision level 4-31
- vertical-refresh rate 4-30
- video drivers
 - See device drivers
- video setup option 4-12
- vital product data code 8-2
- voltage selection, processor C-6
- voltage setting 2-1
- voltage-selection switch 5-2

W

- warranty service parts 9-1
- watchdog timer 4-29
- watchdog/thermal setup option 4-18
- Web site 8-2
- Windows video drivers, installing E-2, E-4, E-5



Part Number: 20L2778



Printed in the United States of America
on recycled paper containing 10%
recovered post-consumer fiber.

S20L-2778-00



20L2778

