

Change Manual Backup Name

OPERATING INSTRUCTIONS

Copyright

© Ericsson AB 2016. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

Disclaimer

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

Trademark List

All trademarks mentioned herein are the property of their respective owners. These are shown in the document Trademark Information.



Contents

1	Introduction	1
1.1	Prerequisites	1
2	Procedure	3



Change Manual Backup Name



1 Introduction

This document describes how to change manual backup name.

The syntax of a manual backup is as follows:

`<manualBackupName>_<creation_date>_<creation_time>`

The default value of the manual backup name is "".

1.1 Prerequisites

This section describes the prerequisites, which must be fulfilled before using the procedure.

1.1.1 Conditions

The following conditions must apply:

- The new manual backup name is known.
- An Ericsson Command-Line Interface (ECLI) session in Exec mode is in progress.





2 Procedure

To change manual backup name:

1. Navigate to the `BrmBackupManagermanaged` object, for example:

```
>dn ManagedElement=NODE06ST,SystemFunctions=1,BrM=1,BrmBackupMa  
nager=SYSTEM_DATA
```

2. Enter Config mode:

```
(BrmBackupManager=SYSTEM_DATA)>configure
```

3. Change the manual backup name, for example:

```
(config-BrmBackupManager=SYSTEM_DATA)>manualBackupName=PERF_BA  
CKUP_NAME1
```

4. Commit the change:

```
(config-BrmBackupManager=SYSTEM_DATA)>commit
```

5. Verify the change:

```
(BrmBackupManager=SYSTEM_DATA)>show
```

The following is an example output:

```
BrmBackupManager=SYSTEM_DATA  
[...]  
    manualBackupName="PERF_BACKUP_NAME1"  
[...]
```