

Delete Trusted Certificate

OPERATING INSTRUCTIONS

Copyright

© Ericsson AB 2014, 2016, 2017. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

Disclaimer

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

Trademark List

All trademarks mentioned herein are the property of their respective owners. These are shown in the document Trademark Information.



Contents

1	Description	1
2	Procedure	1
2.1	Delete Trusted Certificate	1



Delete Trusted Certificate



1 Description

This instruction describes how to delete a trusted certificate.

2 Procedure

2.1 Delete Trusted Certificate

Prerequisites

- No documents are required.
- No tools are required.
- The following conditions must apply:
 - The user has the System Security Administrator role.
 - The trusted certificate identity is known.
 - The trusted certificate is not reserved by any trust category.
 - An Ericsson Command-Line Interface (ECLI) session in Exec mode is in progress

Steps

1. Navigate to the trusted certificate to be deleted, for example:

```
>dn ManagedElement=NODE06ST,SystemFunctions=1,SecM=1,CertM=1,TrustedCertificate=1
```

2. Show the trust category it is associated to:

```
(TrustedCertificate=1)>show reservedByCategory
```

The following is an example output:

```
ManagedElement=NODE06ST,SystemFunctions=1,SecM=1,⇒  
CertM=1,TrustCategory=aurora
```

3. Navigate to the **TrustCategory** Managed Object (MO) referred by attribute **reservedByCategory**, for example:



```
(TrustedCertificate=1)>dn ManagedElement=NODE06ST,SystemFunctions=1,SecM=1,CertM=1,TrustCategory=aurora
```

4. Enter Config mode:

```
(TrustCategory=aurora)>configure
```

5. Remove all references from the TrustCategory MOs to the TrustedCertificate MO to be deleted, for example:

```
(Config-TrustCategory=aurora)>no trustedCertificates="ManagedElement=NODE06ST,SystemFunctions=1,SecM=1,CertM=1,TrustedCertificate=1"
```

6. Commit the change:

```
(Config-TrustCategory=aurora)>commit
```

7. Navigate to the CertM MO, for example:

```
(TrustCategory=aurora)>dn ManagedElement=NODE06ST,SystemFunctions=1,SecM=1,CertM=1
```

8. Enter Config mode:

```
(CertM=1>)>configure
```

9. Delete the trusted certificate, for example:

```
(Config-CertM=1)>removeTrustedCert "ManagedElement=NODE06ST,SystemFunctions=1,SecM=1,CertM=1,TrustedCertificate=1"
```

The system returns output true or false.

All resources belonging to the targeted trusted certificate are deleted.

10. Commit the change:

```
(Config-CertM=1)>commit
```

11. Verify the deletion by checking attribute trustedCertificateId:

```
(CertM=1)>show -v
```

The following is an example output:



```
CertM=1
certMId="1"
localFileStorePath="certificates" <read-only>
userLabel="Certificate Management"
reportProgress <read-only>
  actionId=0 <read-only>
  actionName="removeTrustedCert" <read-only>
  additionalInfo
    "" <read-only>
  progressInfo="" <read-only>
  progressPercentage=100 <read-only>
  result=SUCCESS <read-only>
  resultInfo="the TrustedCertificate instance removed" <read-only>
  state=FINISHED <read-only>
  timeActionCompleted="2014-03-07T11:42:17Z" <read-only>
  timeActionStarted="2014-03-07T11:42:17Z" <read-only>
  timeOfLastStatusUpdate="2014-03-07T11:42:17Z" <read-only>
CertMCapabilities=1
EnrollmentAuthority=1
EnrollmentServerGroup=1
NodeCredential=1
NodeCredential=2
TrustCategory=aurora
TrustedCertificate=2
```