

Push XML Model File to Remote File Location

OPERATING INSTRUCTIONS

Copyright

© Ericsson AB 2016, 2017. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

Disclaimer

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

Trademark List

All trademarks mentioned herein are the property of their respective owners. These are shown in the document Trademark Information.



Contents

1	Description	1
2	Procedure	1
2.1	Push XML Model File to Remote File Location	1



Push XML Model File to Remote File Location



1 Description

This instruction describes how to push an XML model file to a remote file location with a File Transfer Protocol (FTP).

Note: Only the standard SSH FTP (SFTP) is supported.

2 Procedure

2.1 Push XML Model File to Remote File Location

Prerequisites

- No documents are required.
- No tools are required.
- The following conditions must apply:
 - The remote server Fully Qualified Domain Name (FQDN) or IP address, directory, and SFTP password are known.
 - The schema ID is known.
 - An Ericsson Command-Line Interface (ECLI) session in Exec mode is in progress.

Steps

1. Navigate to the **Schema** managed object to be exported, for example:

```
>dn ManagedElement=NODE06ST, SystemFunctions=1, SysM=1, Schema=2
```

2. Export the XML model file using the Uniform Resource Identifier (URI) and password input options, for example:

```
(Schema=2)>export --uri sftp://user@10.64.88.91/tmp/ --password  
userpwd
```

The system outputs `File transfer successful` after a successful export operation.