

# Disable Automatic Deletion of Manual Backups

## OPERATING INSTRUCTIONS

**Copyright**

© Ericsson AB 2016, 2017. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

**Disclaimer**

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

**Trademark List**

All trademarks mentioned herein are the property of their respective owners. These are shown in the document Trademark Information.



# Contents

<b>1</b>	<b>Description</b>	<b>1</b>
<b>2</b>	<b>Procedure</b>	<b>1</b>
2.1	Disable Automatic Deletion of Manual Backups	1





# 1 Description

This instruction describes how to disable automatic deletion of manual backups in the managed element.

Disabling automatic deletion of manual system backups when the maximum number of manual system backups is below or equal to the existing number of stored manual system backups results in failure of the next manual system backup.

For information on how to modify the maximum number of system manual backups, refer to [Change Maximum Number of Manual Backups](#).

## 2 Procedure

### 2.1 Disable Automatic Deletion of Manual Backups

#### Prerequisites

- No documents are required.
- No tools are required.
- The following conditions must apply:
  - The existing value of attribute `autoDelete` has been checked and is equal to `ENABLED`.
  - An Ericsson Command-Line Interface (ECLI) session in Exec mode is in progress.

#### Steps



---

---

#### Attention!

Risk of data loss or data corruption.

---

---

Disabling automatic deletion of manual backups can lead to file storage space issues and generation of alarm.



To disable automatic deletion of manual backups:

1. Navigate to the `BrmBackupHousekeeping` managed object, for example:

```
>dn ManagedElement=NODE06ST,SystemFunctions=1,BrM=1,BrmBackupMa  
nager=SYSTEM_DATA,BrmBackupHousekeeping=SYSTEM_DATA
```

2. Enter Config mode:

```
(BrmBackupHousekeeping=SYSTEM_DATA)>configure
```

3. Disable automatic deletion of manual backups:

```
(config-BrmBackupHousekeeping=SYSTEM_DATA)>autoDelete=DISABLED
```



---

---

### Attention!

Risk of data loss or data corruption.

---

---

Depending on the number of stored manual system backups and the value of the maximum number of manual system backups, commit of this change can result in failure of the next manual system backup.

**Note:** The value of the `autoDelete` attribute cannot be cleared by the `no autoDelete` ECLI command.

4. Commit the change:

```
(config-BrmBackupHousekeeping=SYSTEM_DATA)>commit
```

5. Verify the change:

```
(BrmBackupHousekeeping=SYSTEM_DATA)>show
```

An output example:

```
BrmBackupHousekeeping=SYSTEM_DATA  
  autoDelete=DISABLED  
[...]
```