

# CLM Node Connection Loss

## OPERATING INSTRUCTIONS

OPERATING INSTRUCTIONS

**Copyright**

© Ericsson AB 2018. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

**Disclaimer**

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

**Trademark List**

All trademarks mentioned herein are the property of their respective owners. These are shown in the document Trademark Information.



# Contents

<b>1</b>	<b>Alarm Description</b>	<b>1</b>
<b>2</b>	<b>Procedure</b>	<b>1</b>
2.1	2.1 Handle Alarm CLM Node Connection Loss	1



CLM Node Connection Loss



# 1 Alarm Description

The alarm is raised by the middleware Cluster Membership (CLM) service.

Table 1 CLM Node Connection Loss Alarm Causes

Alarm Cause	Description	Fault Reason	Fault Location	Impact
Failure of communication with the reported node.	A node has lost contact with the remaining cluster members.	Faulty physical Ethernet device.	Physical Ethernet interface.	The capacity or redundancy of the cluster is reduced.
		The operating system and middleware layer are incorrectly configured.	Incorrect High Availability (HA) configuration for the cluster.	

## 2 Procedure

### 2.1 2.1 Handle Alarm CLM Node Connection Loss

#### Prerequisites

- This instruction references the following document: [Data Collection Guideline](#).
- No tools are required.
- The following conditions must apply:
  - The alarm is raised.
  - An Ericsson Command-Line Interface (ECLI) session in Exec mode is in progress.

#### Steps

1. Was the alarm raised during initial installation or upgrade?
  - Yes: Contact the deployment organization. Proceed with Step 5.
  - No: Continue with the next step.
2. Is any LOTC Ethernet Bonding alarm raised?



- Yes: Clear the LOTC Ethernet Bonding alarm. Further actions are outside the scope of this instruction. Proceed with Step 5.
  - No: Continue with the next step.
3. Perform data collection, refer to [Data Collection Guideline](#).
  4. Consult the next level of maintenance support for an analysis of the root cause to the change in cluster state. Further actions are outside the scope of this instruction.
  5. Job is completed.