

Delete Inactive Software Version

OPERATING INSTRUCTIONS

Copyright

© Ericsson AB 2014, 2015. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

Disclaimer

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

Trademark List

All trademarks mentioned herein are the property of their respective owners. These are shown in the document Trademark Information.



Contents

1	Introduction	1
1.1	Prerequisites	1
2	Procedure	3





1 Introduction

This document describes how to delete an inactive software version from the managed element. This operation can be used to save disk space when an inactive software version, which is no longer needed, has not been deleted automatically by the latest software upgrade.

1.1 Prerequisites

This section describes the prerequisites, which must be fulfilled before using the procedure.

1.1.1 Conditions

The following condition must apply:

- An Ericsson Command-Line Interface (ECLI) session in Exec mode is in progress.





2 Procedure

To delete an inactive software version:

1. Navigate to the *SwM* managed object, for example:

```
>dn ManagedElement=NODE06ST, SystemFunctions=1, SwM=1
```

2. Identify the inactive software version to delete:

```
(SwM=1) >show -v
```

The following example output shows that two software versions are present. The software version with revision *R7F01* is explicitly indicated as active. The other software version with revision *R7E01* is inactive because it is not indicated as active. It is therefore possible to delete *R7E01*.

```
SwM=1
  activeSwVersion
    "ManagedElement=1, SystemFunctions=1, =>
SwM=1, SwVersionMain=ERIC-COREMW_RUNTIME-CXP9020355_1-R7F01" <read-only>
[...]
  SwVersionMain=ERIC-COREMW_RUNTIME-CXP9020355_1-R7E01
  SwVersionMain=ERIC-COREMW_RUNTIME-CXP9020355_1-R7F01
[...]
```

3. Delete the inactive software version, for example:

```
(SwM=1) >removeSwVersion ManagedElement=NODE06ST, SystemF
unctions=1, SwM=1, SwVersionMain=ERIC-COREMW_RUNTIME-CXP
9020355_1-R7E01
```

The system returns output *true* or *false*.

4. Verify that the software version is deleted:

```
(SwM=1) >show -v
```

The following is an example output showing the final result. If *state=RUNNING*, the operation is not yet completed. Result *result=FAILURE* means that the deletion failed.



```
SwM=1
  activeSwVersion
    "ManagedElement=1, SystemFunctions=1, SwM=1, =>
SwVersionMain=ERIC-COREMW_RUNTIME-CXP9020355_1-R7F01" <read-only>
[...]
  reportProgress <read-only>
    actionId=13 <read-only>
    actionName="RemoveSwVersion" <read-only>
    additionalInfo
      "" <read-only>
    progressInfo="Remove SwVersion" <read-only>
    progressPercentage=100 <read-only>
    result=SUCCESS <read-only>
    resultInfo="Successfully removed swVersion/swVersionMain." <read-only>
    state=FINISHED <read-only>
    timeActionCompleted="2014-04-03T13:48:03" <read-only>
    timeActionStarted="2014-04-03T13:46:31" <read-only>
    timeOfLastStatusUpdate="2014-04-03T13:48:03" <read-only>
  SwVersionMain=ERIC-COREMW_RUNTIME-CXP9020355_1-R7F01
[...]
```