

# Activate Emergency Unlock Mode

---

## OPERATING INSTRUCTIONS

**Copyright**

© Ericsson AB 2014, 2015. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

**Disclaimer**

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

**Trademark List**

All trademarks mentioned herein are the property of their respective owners. These are shown in the document Trademark Information.



# Contents

<b>1</b>	<b>Introduction</b>	<b>1</b>
1.1	Prerequisites	1
<b>2</b>	<b>Procedure</b>	<b>3</b>



Activate Emergency Unlock Mode



# 1 Introduction

This document describes how to activate the Emergency Unlock mode. This mode is activated by the user to restore system functionality temporarily in extraordinary situations.

## 1.1 Prerequisites

This section describes the prerequisites, which must be fulfilled before using the procedure.

### 1.1.1 Conditions

The following conditions must apply:

- The Emergency Unlock mode is `INACTIVE`.
- Attribute `activationsLeft` is not equal to 0 (zero).
- An Ericsson Command-Line Interface (ECLI) session in Exec mode is in progress.



Activate Emergency Unlock Mode



## 2 Procedure

To activate the Emergency Unlock mode:

1. Navigate to the *EmergencyUnlock* managed object, for example:

```
>dn ManagedElement=NODE06ST,SystemFunctions=1,Lm=1,EmergencyUnlock=1
```

2. Activate the Emergency Unlock mode:

```
(EmergencyUnlock=1)>activate
```

The system returns `true` if the operation is successful.

3. Verify that the Emergency Unlock mode was activated correctly:

```
(EmergencyUnlock=1)>show activationState
```

The system returns `activationState=ACTIVATED` if the system now operates in Emergency Unlock mode.

4. View the expiration date of the Emergency Unlock period:

```
(EmergencyUnlock=1)>show expiration
```

The following is an example output:

```
expiration=2014-05-25T00:00:00
```

**Note:** Emergency Unlock automatically ceases at the end of the seven-day emergency unlock window.