

# List Backups

---

## OPERATING INSTRUCTIONS



**Copyright**

© Ericsson AB 2016. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

**Disclaimer**

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

**Trademark List**

All trademarks mentioned herein are the property of their respective owners. These are shown in the document Trademark Information.





# Contents

<b>1</b>	<b>Introduction</b>	<b>1</b>
1.1	Prerequisites	1
<b>2</b>	<b>Procedure</b>	<b>3</b>









# 1 Introduction

This document describes how to list the available backups and backup labels.

## 1.1 Prerequisites

This section describes the prerequisites, which must be fulfilled before using the procedure.

### 1.1.1 Conditions

The following condition must apply:

- An Ericsson Command-Line Interface (ECLI) session in Exec mode is in progress.









## 2 Procedure

To list the available backups and backup labels:

1. Navigate to the *BrmBackupManager* Managed Object (MO), for example:

```
>dn ManagedElement=NODE06ST,SystemFunctions=1,BrM=1,BrmBackupManager=SYSTEM_DATA
```

2. List the backups:

```
(BrmBackupManager=SYSTEM_DATA) >show-table -m BrmBackup  
-p backupName,creationType,creationTime
```

The following is an example output:

backupName	creationType	creationTime
BrmBackup=PERF_BACKUP_NAME1_20140428_175907	SCHEDULED	2014-04-28T00:00:00
BrmBackup=PERF_BACKUP_NAME1_20140501_100533	MANUAL	2014-05-01T20:00:02
BrmBackup=PERF_BACKUP_NAME1_20140501_100926	SCHEDULED	2014-05-01T22:00:00
BrmBackup=PERF_BACKUP_NAME1_20140501_101310	MANUAL	2014-05-01T16:41:31
BrmBackup=PERF_BACKUP_NAME1_20140501_102102	SCHEDULED	2014-05-01T02:00:00
BrmBackup=PERF_BACKUP_NAME1_20140501_102500	SCHEDULED	2014-05-01T04:00:00

3. View the system software version of a backup, for example:

```
(BrmBackupManager=SYSTEM_DATA) >show BrmBackup=PERF_BACKUP_NAME1_20140501_102500,swVersion
```

```
swVersion  
description="ERIC-COREMW_RUNTIME"  
productionDate="2014-04-02T11:42:34"  
productName="ERIC-COREMW_RUNTIME"  
productNumber="CXP9020355_1"  
productRevision="R7E01"  
type="MW"
```

4. Navigate to the *BrmBackupLabelStore* MO, for example:





```
(BrmBackupManager=SYSTEM_DATA) >BrmBackupLabelStore=SYSTEM_DATA
```

5. List the backup labels:

```
(BrmBackupLabelStore=SYSTEM_DATA) >show
```

The following is an example output:

```
lastCreatedBackup=PERF_BACKUP_NAME1_20140501_102500  
lastExportedBackup=PERF_BACKUP_NAME1_20140501_102102  
lastImportedBackup=PERF_BACKUP_NAME1_20140501_100926  
lastRestoredBackup=PERF_BACKUP_NAME1_20140501_100533  
restoreEscalationList=PERF_BACKUP_NAME1_20140501_102500
```

The output includes the following:

- Last created backup – Identifies the most recently created backup.
- Last imported backup – Identifies the latest imported backup to the Managed Element (ME).
- Last exported backup – Identifies the latest exported backup from the ME.
- Last restored backup – Identifies the backup that was last used to restore the ME.
- Restore escalation list – Identifies the last created or last restored backup, whichever is the last backup.