

Delete Threshold Monitoring Job

OPERATING INSTRUCTIONS

Copyright

© Ericsson AB 2014, 2015. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

Disclaimer

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

Trademark List

All trademarks mentioned herein are the property of their respective owners. These are shown in the document Trademark Information.



Contents

1	Introduction	1
1.1	Prerequisites	1
2	Procedure	3





1 Introduction

This document describes how to delete a threshold monitoring job. This is to be done when the threshold monitoring job is no longer of interest because of, for example, a new network performance monitoring strategy.

1.1 Prerequisites

This section describes the prerequisites, which must be fulfilled before using the procedure.

1.1.1 Conditions

The following conditions must apply:

- The job name is known.
The job name is `VM_15min_Job` in this document.
- The *PmJob* Managed Object (MO) is stopped.
- An Ericsson Command-Line Interface (ECLI) session in Exec mode is in progress.





2 Procedure

To delete a threshold monitoring job:

1. Navigate to the *Pm* MO, for example:

```
>dn ManagedElement=NODE06ST,SystemFunctions=1,Pm=1
```

2. Enter Config mode:

```
(Pm=1) >configure
```

3. Delete the threshold monitoring job, for example:

```
(config-Pm=1) >no PmJob=VM_15min_Job
```

4. Commit the deletion:

```
(config-Pm=1) >commit
```

5. Verify the result:

```
(Pm=1) >show-table -m PmJob -p currentJobState,jobPriority,jobType,pmJobId
```

The following is an example output:

currentJobState	jobPriority	jobType	pmJobId
ACTIVE	MEDIUM	MEASUREMENTJOB	POT_15min_Job
ACTIVE	MEDIUM	MEASUREMENTJOB	PU_15min_Job