

# List Performance Management Jobs

---

## OPERATING INSTRUCTIONS

**Copyright**

© Ericsson AB 2014, 2015. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

**Disclaimer**

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

**Trademark List**

All trademarks mentioned herein are the property of their respective owners. These are shown in the document Trademark Information.



# Contents

<b>1</b>	<b>Introduction</b>	<b>1</b>
1.1	Prerequisites	1
<b>2</b>	<b>Procedure</b>	<b>3</b>





# 1 Introduction

This document describes how to list the Performance Management (PM) jobs. The list of PM jobs informs the user about what PM jobs are stopped and can be started, and what PM jobs are already running on the managed element.

## 1.1 Prerequisites

This section describes the prerequisites, which must be fulfilled before using the procedure.

### 1.1.1 Conditions

The following condition must apply:

- An Ericsson Command-Line Interface (ECLI) session in Exec mode is in progress.





## 2 Procedure

To list the PM jobs:

1. Navigate to the *Pm* managed object, for example:

```
>dn ManagedElement=NODE06ST,SystemFunctions=1,Pm=1
```

2. List the PM jobs:

```
(Pm=1) >show-table -m PmJob -p currentJobState,jobPriority,jobType,pmJobId
```

The following is an example output:

currentJobState	jobPriority	jobType	pmJobId
ACTIVE	MEDIUM	MEASUREMENTJOB	POT_15min_Job
ACTIVE	MEDIUM	MEASUREMENTJOB	PU_15min_Job
STOPPED	MEDIUM	THRESHOLDJOB	VM_15min_Job