

# Push XML Model File to Remote File Location

---

## OPERATING INSTRUCTIONS

**Copyright**

© Ericsson AB 2016. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

**Disclaimer**

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

**Trademark List**

All trademarks mentioned herein are the property of their respective owners. These are shown in the document Trademark Information.



# Contents

<b>1</b>	<b>Introduction</b>	<b>1</b>
1.1	Prerequisites	1
<b>2</b>	<b>Procedure</b>	<b>3</b>



Push XML Model File to Remote File Location



# 1 Introduction

This document describes how to push an XML model file to a remote file location with a File Transfer Protocol (FTP).

**Note:** Only the standard SSH FTP (SFTP) is supported.

## 1.1 Prerequisites

This section describes the prerequisites, which must be fulfilled before using the procedure.

### 1.1.1 Conditions

The following conditions must apply:

- The remote server Fully Qualified Domain Name (FQDN) or IP address, directory, and SFTP password are known.
- The schema ID is known.
- An Ericsson Command-Line Interface (ECLI) session in Exec mode is in progress.



Push XML Model File to Remote File Location



## 2 Procedure

To push an XML model file to a remote file location with an SFTP:

1. Navigate to the *Schema* managed object to be exported, for example:

```
>dn ManagedElement=NODE06ST,SystemFunctions=1,SysM=1  
,Schema=2
```

2. Export the XML model file using the Uniform Resource Identifier (URI) and password input options, for example:

```
(Schema=2)>export --uri sftp://user@10.64.88.91/tmp/  
--password userpwd
```

The system outputs `File transfer successful` after a successful export operation.