

# Deactivate Emergency Unlock Mode

---

## OPERATING INSTRUCTIONS

**Copyright**

© Ericsson AB 2014, 2015. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

**Disclaimer**

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

**Trademark List**

All trademarks mentioned herein are the property of their respective owners. These are shown in the document Trademark Information.



# Contents

<b>1</b>	<b>Introduction</b>	<b>1</b>
1.1	Prerequisites	1
<b>2</b>	<b>Procedure</b>	<b>3</b>



Deactivate Emergency Unlock Mode



# 1 Introduction

This document describes how to deactivate the Emergency Unlock mode. The user can deactivate the Emergency Unlock mode before it automatically ends to check that the managed element transitions to the expected License Management operation mode.

## 1.1 Prerequisites

This section describes the prerequisites, which must be fulfilled before using the procedure.

### 1.1.1 Conditions

The following conditions must apply:

- The Emergency Unlock mode is **ACTIVATED**.
- An Ericsson Command-Line Interface (ECLI) session in Exec mode is in progress.



Deactivate Emergency Unlock Mode



## 2 Procedure

To deactivate the Emergency Unlock mode:

1. Navigate to the *EmergencyUnlock* managed object, for example:

```
>dn ManagedElement=NODE06ST, SystemFunctions=1, Lm=1, EmergencyUnlock=1
```

2. Deactivate the Emergency Unlock mode:

```
(EmergencyUnlock=1) >deactivate
```

The system returns `true` if the operation is successful.

3. Verify that the Emergency Unlock mode was deactivated:

```
(EmergencyUnlock=1) >show activationState
```

The system returns `activationState=INACTIVE` if the Emergency Unlock mode now is deactivated.