

Enable Trusted Certificate

OPERATING INSTRUCTIONS

Copyright

© Ericsson AB 2014, 2016, 2017. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

Disclaimer

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

Trademark List

All trademarks mentioned herein are the property of their respective owners. These are shown in the document Trademark Information.



Contents

1	Description	1
2	Procedure	1
2.1	Enabled Trusted Certificate	1



Enable Trusted Certificate



1 Description

This instruction describes how to enable a trusted certificate.

2 Procedure

2.1 Enabled Trusted Certificate

Prerequisites

- No documents are required.
- No tools are required.
- The following conditions must apply:
 - The user has the System Security Administrator role.
 - The trusted certificate is disabled.
 - An Ericsson Command-Line Interface (ECLI) session in Exec mode is in progress.

Steps

1. Navigate to the *CertM* Managed Object (MO), for example:

```
>dn ManagedElement=NODE06ST, SystemFunctions=1, SecM=1, CertM=1
```

2. Enter Config mode:

```
(CertM=1) >configure
```

3. Select the trusted certificate, for example:

```
(config-CertM=1) >TrustedCertificate=1
```

Note: 1 denotes the value of attribute `trustedCertificateId` of the configured *TrustedCertificate* MO instance.

4. Set the managed state to enabled:



```
(config-TrustedCertificate=1) >managedState=ENABLED
```

5. Commit the change:

```
(config-TrustedCertificate=1) >commit
```

6. Verify the change:

```
(TrustedCertificate=1) >show -v managedState
```

```
managedState=ENABLED <default>
```