

Activate Emergency Unlock Mode

OPERATING INSTRUCTIONS

Copyright

© Ericsson AB 2014–2017. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

Disclaimer

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

Trademark List

All trademarks mentioned herein are the property of their respective owners. These are shown in the document Trademark Information.



Contents

1	Description	1
2	Procedure	1
2.1	Activate Emergency Unlock Mode	1



Activate Emergency Unlock Mode



1 Description

This instruction describes how to activate the Emergency Unlock mode. Emergency Unlock mode is activated by the user to restore system functionality temporarily in extraordinary situations.

Emergency Unlock mode is intended for emergency situations like:

- National emergency situation, for example natural disaster.
- Major network malfunction (extraordinary situations and extremely unusual) when the license management mechanism needs to be excluded as causes for the failure.

Note: Emergency unlock must not be used for any other purpose than above specified and must be part of a joint continuity planning between Ericsson and the customer. Emergency unlock must not be used as a capacity buffer to cater for capacity peaks.

2 Procedure

2.1 Activate Emergency Unlock Mode

Prerequisites

- No documents are required.
- No tools are required.
- The following conditions must apply:
 - The Emergency Unlock mode is INACTIVE.
 - Attribute `activationsLeft` is not equal to 0 (zero).
 - An Ericsson Command-Line Interface (ECLI) session in Exec mode is in progress.

Steps

1. Navigate to the `EmergencyUnlock` managed object, for example:

```
>dn ManagedElement=NODE06ST,SystemFunctions=1,Lm=1,EmergencyUnlock=1
```



2. Activate the Emergency Unlock mode:

```
(EmergencyUnlock=1)>activate
```

The system returns `true` if the operation is successful.

3. Verify that the Emergency Unlock mode was activated correctly:

```
(EmergencyUnlock=1)>show activationState
```

The system returns `activationState=ACTIVATED` if the system now operates in Emergency Unlock mode.

4. View the expiration date of the Emergency Unlock period:

```
(EmergencyUnlock=1)>show expiration
```

The following is an example output:

```
expiration=2014-05-25T00:00:00
```

Note: Emergency Unlock automatically ceases at the end of the seven-day emergency unlock window.