

# Change Custom Role

## OPERATING INSTRUCTIONS

**Copyright**

© Ericsson AB 2016, 2017. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

**Disclaimer**

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

**Trademark List**

All trademarks mentioned herein are the property of their respective owners. These are shown in the document Trademark Information.



# Contents

<b>1</b>	<b>Description</b>	<b>1</b>
<b>2</b>	<b>Procedure</b>	<b>1</b>
2.1	Change Custom Role	1



Change Custom Role



# 1 Description

This instruction describes how to change a custom role.

The administrator can change custom roles when the earlier defined custom roles need to be modified because of changes in the organization authorization policy.

## 2 Procedure

### 2.1 Change Custom Role

#### Prerequisites

- The instruction references the following document:
  - [Delete Custom Rule](#)
- No tools are required.
- The following conditions must apply:
  - The user has the System Security Administrator role.
  - A CustomRole Managed Object (MO) exists.
  - The Distinguished Names (DNs) to add to or delete from a CustomRule MO are known.
  - The custom rules to add, change, or delete are known and reflect the wanted authorization policy change.
  - An Ericsson Command-Line Interface (ECLI) session in Exec mode is in progress.

#### Steps

1. Navigate to the CustomRole MO, for example:

```
>dn ManagedElement=N0DE06ST,SystemFunctions=1,SecM=1,UserManagement=1,LocalAuthorizationMethod=1,CustomRole=CustomSystemOperator
```
2. View the current settings:

```
(CustomRole=CustomSystemOperator)>show -v
```



The following is an example output:

```
CustomRole=CustomSystemOperator
  roleName="CustomSystemOperator"
  rules=
    "ManagedElement=NODE06ST,SystemFunctions=1,SecM=1,⇒
UserManagement=1,LocalAuthorizationMethod=1,CustomRule=⇒
Custom_FaultManagement_1"
  userLabel="Custom System Operator Role"
```

3. Enter Config mode:

```
(CustomRole=CustomSystemOperator)>configure
```

4. Add, change, or delete the DNs for rules in the CustomRule MO, for example:

```
(config-CustomRole=CustomSystemOperator)>rules="ManagedElement=
NODE06ST,SystemFunctions=1,SecM=1,UserManagement=1,LocalAuthori
zationMethod=1,CustomRule=Custom_PerformanceManagement_1"
```

In this example, one rule is added.

5. Commit the setting:

```
(config-CustomRole=CustomSystemOperator)>commit
```

6. Verify the result:

```
(CustomRole=CustomSystemOperator)>show -v
```

The following is an example output:

```
CustomRole=CustomSystemOperator
  roleName="CustomSystemOperator"
  rules=
    "ManagedElement=NODE06ST,SystemFunctions=1,SecM=1,⇒
UserManagement=1,LocalAuthorizationMethod=1,CustomRule=⇒
Custom_FaultManagement_1"
    "ManagedElement=NODE06ST,SystemFunctions=1,SecM=1,⇒
UserManagement=1,LocalAuthorizationMethod=1,CustomRule=⇒
Custom_PerformanceManagement_1"
  userLabel="Custom System Operator Role"
```

The authorization policy of those users that possess the changed role is updated.

If the DN to a CustomRule MO was deleted and this MO is not referenced by any other CustomRole MO, then the CustomRule MO can be deleted, refer to [Delete Custom Rule](#).