

DBS, NR, Initial Synchronization Needed

OPERATIONAL INSTRUCTIONS

Copyright

© Ericsson AB 2016–2019. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

Disclaimer

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

Trademark List

All trademarks are properties of their respective owners.



Contents

1	Alarm Description	1
2	Procedure	1
2.1	Handle Alarm DBS, NR, Initial Synchronization Needed	1



DBS, NR, Initial Synchronization Needed



1 Alarm Description

The alarm is raised when the database is not synchronized after a cluster reload.

Table 1 DBS, NR, Initial Synchronization Needed

Alarm Cause	Description	Fault Reason	Fault Location	Impact
Cluster reload	The database is not yet synchronized with the peer cluster after a cluster reload.	N/A	N/A	Data is not synchronized with the peer cluster. The local database is not available for changes. Traffic handling is not yet possible on shared data.

Table 2 Alarm Attributes

Attribute Name	Attribute Value/Interpretation
Major Type	193
Minor Type	918530
MO Class	DbService
Specific Problem	DBS, NR, Initial Synchronization Needed
Event Type	QUALITYOFSERVICEALARM
Probable Cause	frequencyHoppingFailure (74)
Perceived Severity	MAJOR

2 Procedure

2.1 Handle Alarm DBS, NR, Initial Synchronization Needed

Prerequisites

- This instruction references the following documents:
 - DBS, NR, Connection Lost
- No tools are required.
- Before starting this procedure, ensure that the following condition is met:
 - The alarm is raised.



Steps

1. Is the DBS, NR, Connection Lost alarm active?

Yes: Take the necessary actions to clear that alarm.

No: Continue with the next step.

2. Is the alarm cleared automatically after the cluster synchronization finished?

Yes: Job is completed.

No: Consult the next level of maintenance support. Further actions are outside the scope of this Operating Instruction.