

Enable SNMP Target

OPERATING INSTRUCTIONS

Copyright

© Ericsson AB 2016, 2017. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

Disclaimer

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

Trademark List

All trademarks mentioned herein are the property of their respective owners. These are shown in the document Trademark Information.



Contents

1	Description	1
2	Procedure	1
2.1	Enable SNMP Target	1



Enable SNMP Target



1 Description

This instruction describes how to enable a Simple Network Management Protocol (SNMP) target. An SNMP target is enabled when the managed element can be monitored by the corresponding management system as part of the normal operations.

2 Procedure

2.1 Enable SNMP Target

Prerequisites

- No documents are required.
- No tools are required.
- The following conditions must apply:
 - The SNMP target to enable is known and its operational state is `DISABLED`.
 - An Ericsson Command-Line Interface (ECLI) session in Exec mode is in progress.

Steps

1. Navigate to the *Snmp* managed object, for example:

```
>dn ManagedElement=NODE06ST,SystemFunctions=1,SysM=1,  
Snmp=1
```

2. Navigate to the SNMP target to be enabled, for example:

```
(Snmp=1)>SnmpTargetV2C=OSS_v2C
```

3. View the attribute settings of the SNMP target:

```
(SnmpTargetV2C=OSS_v2C)>show -v
```

The following is an example output:



```
SnmptargetV2C=OSS_v2C
address="192.0.2.10"
administrativeState=LOCKED <default>
community="public"
informRetryCount=1 <default>
informTimeout=300 <default>
isMibWritable=true <default>
networkPrefixLength=[] <empty>
operationalState=DISABLED <read-only>
port=162 <default>
snmpTargetV2Cid="OSS_v2C"
transportMethod=TRAP <default>
```

Note: To enable the SNMP target, attribute `administrativeState` must be set to `UNLOCKED`. Attribute `operationalState` is then automatically set to `ENABLED`. The same is true for disabling SNMPv1 and SNMPv3 targets.

4. Enter Config mode:

```
(SnmptargetV2C=OSS_v2C) > configure
```

5. Enable the SNMP target:

```
(config-SnmptargetV2C=OSS_v2C) > administrativeState=UNLOCKED
```

6. Commit the setting:

```
(config-SnmptargetV2C=OSS_v2C) > commit
```

7. Verify that the SNMP target is enabled:

```
(SnmptargetV2C=OSS_v2C) > show -v
```

The following is an example output:

```
SnmptargetV2C=OSS_v2C
address="192.0.2.10"
administrativeState=UNLOCKED <default>
community="public"
informRetryCount=1 <default>
informTimeout=300 <default>
isMibWritable=true <default>
networkPrefixLength=[] <empty>
operationalState=ENABLED <read-only>
port=162 <default>
snmpTargetV2Cid="OSS_v2C"
transportMethod=TRAP <default>
```

The SNMP target is enabled.