

# Change Manual Backup Name

---

## OPERATING INSTRUCTIONS

**Copyright**

© Ericsson AB 2016, 2017. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

**Disclaimer**

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

**Trademark List**

All trademarks mentioned herein are the property of their respective owners. These are shown in the document Trademark Information.



# Contents

<b>1</b>	<b>Description</b>	<b>1</b>
<b>2</b>	<b>Procedure</b>	<b>1</b>
2.1	Change Manual Backup Name	1





# 1 Description

This instruction describes how to change manual backup name.

The syntax of a manual backup is as follows:

`<manualBackupName>_<creation_date>_<creation_time>`

The default value of the manual backup name is " ".

## 2 Procedure

### 2.1 Change Manual Backup Name

#### Prerequisites

- No documents are required.
- No tools are required.
- The following conditions must apply:
  - The new manual backup name is known.
  - An Ericsson Command-Line Interface (ECLI) session in Exec mode is in progress.

#### Steps

1. Navigate to the *BrmBackupManager* managed object, for example:

```
>dn ManagedElement=NODE06ST, SystemFunctions=1, BrM=1, BrmBackupManager=SYSTEM_DATA
```

2. Enter Config mode:

```
(BrmBackupManager=SYSTEM_DATA) >configure
```

3. Change the manual backup name, for example:

```
(config-BrmBackupManager=SYSTEM_DATA) >manualBackupName=PERF_BACKUP_NAME1
```



4. Commit the change:

```
(config-BrmBackupManager=SYSTEM_DATA) >commit
```

5. Verify the change:

```
(BrmBackupManager=SYSTEM_DATA) >show
```

The following is an example output:

```
BrmBackupManager=SYSTEM_DATA  
[...]  
    manualBackupName="PERF_BACKUP_NAME1 "  
[...]
```