

Deactivate Emergency Unlock Mode

OPERATING INSTRUCTIONS

Copyright

© Ericsson AB 2014–2017. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

Disclaimer

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

Trademark List

All trademarks mentioned herein are the property of their respective owners. These are shown in the document Trademark Information.



Contents

1	Description	1
2	Procedure	1
2.1	Deactivate Emergency Unlock Mode	1



Deactivate Emergency Unlock Mode



1 Description

This instruction describes how to deactivate the Emergency Unlock mode. The user can deactivate the Emergency Unlock mode before it automatically ends to check that the managed element transitions to the expected License Management operation mode.

2 Procedure

2.1 Deactivate Emergency Unlock Mode

Prerequisites

- No documents are required.
- No tools are required.
- The following conditions must apply:
 - The Emergency Unlock mode is **ACTIVATED**.
 - An Ericsson Command-Line Interface (ECLI) session in Exec mode is in progress.

Steps

1. Navigate to the *EmergencyUnlock* managed object, for example:

```
>dn ManagedElement=NODE06ST, SystemFunctions=1, Lm=1, EmergencyUnlock=1
```

2. Deactivate the Emergency Unlock mode:

```
(EmergencyUnlock=1) >deactivate
```

The system returns `true` if the operation is successful.

3. Verify that the Emergency Unlock mode was deactivated:

```
(EmergencyUnlock=1) >show activationState
```

The system returns `activationState=INACTIVE` if the Emergency Unlock mode now is deactivated.