

# Delete Backup

---

## OPERATING INSTRUCTIONS

**Copyright**

© Ericsson AB 2017, 2018. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

**Disclaimer**

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

**Trademark List**

All trademarks mentioned herein are the property of their respective owners. These are shown in the document Trademark Information.



# Contents

<b>1</b>	<b>Introduction</b>	<b>1</b>
1.1	Prerequisites	1
<b>2</b>	<b>Procedure</b>	<b>3</b>



Delete Backup



# 1 Introduction

This document describes how to delete a backup.

## 1.1 Prerequisites

This section describes the prerequisites, which must be fulfilled before using the procedure.

### 1.1.1 Conditions

The following conditions must apply:

- No other backup operation is in progress.
- The backup type is known.
- The name of the backup to delete is known.
- An Ericsson Command-Line Interface (ECLI) session in Exec mode is in progress.



Delete Backup



## 2 Procedure

To delete a backup:

1. Navigate to the *BrmBackupManager* managed object, for example:

```
>dn ManagedElement=<Node Name>,SystemFunctions=1,BrM=1,BrmBackupManager=USER_DATA
```

2. Start the delete operation, for example:

```
(BrmBackupManager=USER_DATA) >deleteBackup --name  
"testBackup_20150616"
```

The system returns output `true` or `false`.

3. Verify that the backup was successfully deleted:

```
(BrmBackupManager=USER_DATA) >show -v
```

After a backup is successfully deleted, the progress report shows the following:

```
actionName="DELETE" <read-only>  
additionalInfo  
  "Delete Backup for testBackup_20150616: Succeeded" <read-only>  
progressInfo="" <read-only>  
progressPercentage=100 <read-only>  
result=SUCCESS <read-only>  
resultInfo="testBackup_20150616 was deleted successfully." <read-only>  
state=FINISHED <read-only>
```

If an error occurs during the execution of the operation, attribute `reportProgress` shows `result=FAILURE` and `resultInfo` shows the cause of the failure.

For more information on the progress report, refer to *View Progress Report*.