

Delete Node Credential

OPERATING INSTRUCTIONS

Copyright

© Ericsson AB 2014, 2015, 2016. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

Disclaimer

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

Trademark List

All trademarks mentioned herein are the property of their respective owners. These are shown in the document Trademark Information.



Contents

1	Introduction	1
1.1	Prerequisites	1
2	Procedure	3



Delete Node Credential



1 Introduction

This document describes how to delete a node credential.

1.1 Prerequisites

This section describes the prerequisites, which must be fulfilled before using the procedure.

1.1.1 Conditions

The following conditions must apply:

- The user has the System Security Administrator role.
- All Managed Object (MO) references to the *NodeCredential* MO to be deleted are deleted.
- An Ericsson Command-Line Interface (ECLI) session in Exec mode is in progress.





2 Procedure

To delete a node credential:

1. Navigate to the *CertM* MO, for example:

```
>dn ManagedElement=NODE06ST,SystemFunctions=1,SecM=1,CertM=1
```

2. Enter Config mode:

```
(CertM=1) >configure
```

3. List the node credentials:

```
(config-CertM=1) >show
```

The following is an example output:

```
CertM=1
[...]
  NodeCredential=1
  NodeCredential=2
  NodeCredential=3
[...]
```

4. Delete the node credential, for example:

```
(config-CertM=1) >no NodeCredential=1
```

5. Commit the change:

```
(config-CertM=1) >commit
```

All resources belonging to the *NodeCredential* MO are deleted.

6. Verify the deletion by checking the *NodeCredential* MO instances:

```
(CertM=1) >show
```

The following is an example output:

```
CertM=1
[...]
  NodeCredential=2
  NodeCredential=3
[...]
```