

# Change Maximum Number of Manual Backups

## OPERATING INSTRUCTIONS

**Copyright**

© Ericsson AB 2017, 2018. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

**Disclaimer**

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

**Trademark List**

All trademarks mentioned herein are the property of their respective owners. These are shown in the document Trademark Information.



# Contents

<b>1</b>	<b>Introduction</b>	<b>1</b>
1.1	Prerequisites	1
<b>2</b>	<b>Procedure</b>	<b>3</b>



Change Maximum Number of Manual Backups



# 1 Introduction

This document describes how to change the maximum number of manual user backups that can be stored in the Managed Element (ME).

This value is defined in attribute `maxStoredManualBackups`. When this value is already reached and `autoDelete=ENABLED`, the oldest stored manual system backup is deleted before a new manual system backup can be created. When this value is already reached and `autoDelete=DISABLED`, the creation of the next manual system backup results in failure and requires manual deletion to correct the problem.

Changing the value of `maxStoredManualBackups` can have different impacts on the ME. This is summarized in Table 1.

Table 1 Impact when Setting `maxStoredManualBackups` to New Value

Value of <code>autoDelete</code>	<code>maxStoredManualBackups</code> < “Existing Number of Stored Manual Backups”	<code>maxStoredManualBackups</code> = “Existing Number of Stored Manual Backups”	<code>maxStoredManualBackups</code> > “Existing Number of Stored Manual Backups”
ENABLED	Immediate deletion of one or more stored manual user backups to match the maximum number	No backup deletion until a new backup is created	No immediate impact, for example, no backup deletion
DISABLED	Operation failure (not possible)	The next manual user backup fails	No immediate impact, for example, it is possible to trigger a new manual user backup

**Note:** Attribute `autoDelete` must be set to `ENABLED` for automatic deletion to occur, refer to [Enable Automatic Deletion of Manual Backups](#).

Default value of attribute `maxStoredManualBackups` is 100. It is recommended to change it to 5. Avoid the minimum value 1 since it can result in losing all user manual backups stored in the ME.

## 1.1 Prerequisites

This section describes the prerequisites, which must be fulfilled before using the procedure.



### 1.1.1

#### Conditions

The following conditions must apply:

- The existing value of `maxStoredManualBackups` has been checked.
- The new value of `maxStoredManualBackups` is known.
- An Ericsson Command-Line Interface (ECLI) session in Exec mode is in progress.



## 2 Procedure

To change the maximum number of manual backups:

1. Navigate to the `BrmBackupHousekeeping` managed object, for example:

```
>dn ManagedElement=<Node Name>,SystemFunctions=1,BrM=1,BrmBackupManager=USER_DATA,BrmBackupHousekeeping=USER_DATA
```

2. Enter Config mode:

```
(BrmBackupHousekeeping=USER_DATA)>configure
```

3. Show the value of attribute `maxStoredManualBackups`:

```
(BrmBackupHousekeeping=USER_DATA)>show -v
```

The following is an example output:

```
BrmBackupHousekeeping=USER_DATA
  autoDelete=ENABLED <default>
  brmBackupHousekeepingId="USER_DATA"
  maxStoredManualBackups=100 <default>
```

4. Change the value of attribute `maxStoredManualBackups`, for example:

```
(config-BrmBackupHousekeeping=USER_DATA)>maxStoredManualBackups=5
```



### Attention!

Risk of data loss or data corruption.

Depending on the chosen value, the number of stored manual user backups, and the value of `autoDelete`, commit of this change can result in immediate deletion of stored user system backups, or failure of the next user manual backup.

**Note:** The value of the `maxStoredManualBackups` attribute cannot be cleared by the `no maxStoredManualBackups` ECLI command

5. Commit the change:

```
(config-BrmBackupHousekeeping=USER_DATA)>commit
```



6. Verify the change:

```
(BrmBackupHousekeeping=USER_DATA)>show
```

The following is an example output:

```
BrmBackupHousekeeping=USER_DATA  
maxStoredManualBackups=5
```