

Export Backup

OPERATING INSTRUCTIONS

Copyright

© Ericsson AB 2017, 2018. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

Disclaimer

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

Trademark List

All trademarks mentioned herein are the property of their respective owners. These are shown in the document Trademark Information.



Contents

1	Introduction	1
1.1	Prerequisites	1
2	Procedure	3



Export Backup



1 Introduction

This document describes how to export a backup to an external storage system.

Export is used to store the important Managed Element (ME) backups in a safe place. It therefore limits the impact of unintentional local deletion of backup files on the ME. Export can indirectly be used to free up space on the ME since all exported backups are not always needed to be present locally on the ME.

A backup can be exported for System Data or User Data.

The format of the filename is one of the following:

- `<prefix_label>_<backup_name>_SYSTEM_<YYYYMMDD>_<hhmmss>.tar.gz`
- `<prefix_label>_<backup_name>_USER_<YYYYMMDD>_<hhmmss>.tar.gz`

Note: A prefix for the label that is generated for all backup export packages can be specified. For more information, refer to [Change Prefix for Exported Backup Names](#).

1.1 Prerequisites

This section describes the prerequisites, which must be fulfilled before using the procedure.

1.1.1 Conditions

The following conditions must apply:

- No other backup operation is in progress.
- The backup type is known.
- The name of the backup to export is known.
- The Uniform Resource Identifier (URI) of where the backup is to be exported is known.
- If the URI requires a password, the password is known.
- An Ericsson Command-Line Interface (ECLI) session in Exec mode is in progress.
- Ensure that the network between the external storage system and the OAM network on SC-1 and SC-2 is reachable.





2 Procedure

To export a backup:

1. Navigate to the `BrmBackupManager` Managed Object (MO), for example:

```
>dn ManagedElement=<Node Name>,SystemFunctions=1,BrM=1,BrmBackupManager=USER_DATA
```

2. List the available backups:

```
(BrmBackupManager=USER_DATA)>show
```

The following is an example output:

```
BrmBackup=NDB_Sche_Calendar_Event_2015-06-17T09-04-13
BrmBackup=testBackup_20150617
```

3. Identify the backup to export.
4. Navigate to the appropriate `BrmBackup` MO, for example:

```
(BrmBackupManager=USER_DATA)>BrmBackup=testBackup_20150617
```

5. Start the export operation.

```
(BrmBackup=userdatabackup_20181120)>export --uri
"sftp://<host_user>@<host_address>:/<path_on_host_for_backup>"
--password "<password_of_host_user>"
```

For example:

```
(BrmBackup=userdatabackup_20181120)>export --uri
"sftp://root@192.168.2.3:/tmp/" --password "root000"
```

Note: The password is optional. If a password is not required to access the URI, enter an empty string ("").

The system returns output `true` when the process starts.

6. Verify that the backup is exported:

```
(BrmBackup=testBackup_20150617)>show -v
```

Note: Since this is a long-running operation, it can be required to enter the command several times until the final operation result is shown in the progress report.

After a backup is successfully exported, the following shows an example of the progress report:



```
actionName="EXPORT"
  additionalInfo
    "Export Backup for testBackup_20150617: Succeeded"
  progressInfo=""
  progressPercentage=100
  result=SUCCESS
  resultInfo="testBackup_20150617 was exported successfully."
  state=FINISHED
  timeActionCompleted="2015-06-17T18:32:09"
  timeActionStarted="2015-06-17T18:32:02"
  timeOfLastStatusUpdate="2015-06-17T18:32:09"
```

If an error occurs during the execution of the operation, the progress report shows `result=FAILURE` and `additionalInfo` shows the cause of the failure. The cause can be an invalid URI, a password error, backup integrity issues, or communication issues.

To cancel the ongoing backup export, use action **`cancelCurrentAction`**.

For more information on the progress report, refer to [View Progress Report](#).