

Enable Trusted Certificate

OPERATING INSTRUCTIONS

Copyright

© Ericsson AB 2014, 2015, 2016. All rights reserved. No part of this document may be reproduced in any form without the written permission of the copyright owner.

Disclaimer

The contents of this document are subject to revision without notice due to continued progress in methodology, design and manufacturing. Ericsson shall have no liability for any error or damage of any kind resulting from the use of this document.

Trademark List

All trademarks mentioned herein are the property of their respective owners. These are shown in the document Trademark Information.



Contents

1	Introduction	1
1.1	Prerequisites	1
2	Procedure	3



Enable Trusted Certificate



1 Introduction

This document describes how to enable a trusted certificate.

1.1 Prerequisites

This section describes the prerequisites, which must be fulfilled before using the procedure.

1.1.1 Conditions

The following conditions must apply:

- The user has the System Security Administrator role.
- The trusted certificate is disabled.
- An Ericsson Command-Line Interface (ECLI) session in Exec mode is in progress.



Enable Trusted Certificate



2 Procedure

To enable a trusted certificate:

1. Navigate to the **CertM** Managed Object (MO), for example:

```
>dn ManagedElement=NODE06ST,SystemFunctions=1,SecM=1,CertM=1
```

2. Enter Config mode:

```
(CertM=1)>configure
```

3. Select the trusted certificate, for example:

```
(config-CertM=1)>TrustedCertificate=1
```

Note: 1 denotes the value of attribute `trustedCertificateId` of the configured **TrustedCertificate** MO instance.

4. Set the managed state to enabled:

```
(config-TrustedCertificate=1)>managedState=ENABLED
```

5. Commit the change:

```
(config-TrustedCertificate=1)>commit
```

6. Verify the change:

```
(TrustedCertificate=1)>show -v managedState
```

```
managedState=ENABLED <default>
```