


Screw (used when
replacing cleaning tape

Cleaner Surface
Type A

Latch
(opens lid)

Lever

Case Main
Body (Green)

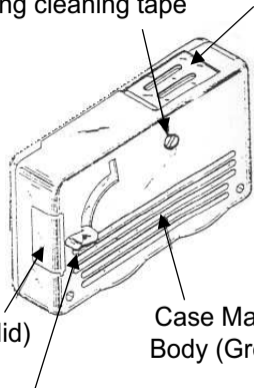

Shutter

Window (view remainder
of cloth tape)

