


Screw (used when  
replacing cleaning tape

Cleaner Surface  
Type A

Latch  
(opens lid)

Lever

Case Main  
Body (Green)

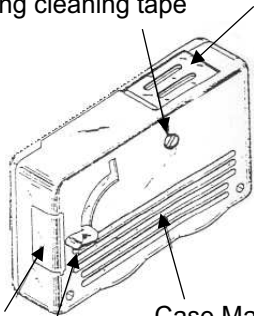

Shutter

Window (view remainder  
of cloth tape)

