

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

MoShell 22.0c User Guide

This document presents an overview of the functionality included in **MoShell**, command line syntax, revision history and other important information.

It is important that all engineers working with **MoShell** read this document before using the tool as it contains important operational information.

Contents

1	Introduction	6
1.1	Contact	6
1.2	MO concept	7
1.3	O&M services and protocols	7
1.4	MO Tree and MO Naming Conventions	8
1.4.1	LDN - Local Distinguished Name	8
1.4.2	RDN - Relative Distinguished Name	8
1.4.3	FDN - Full Distinguished Name	9
1.5	MOM - Managed Object Model	9
1.6	Moshell Functionality	9
1.6.1	Alarm Service	9
1.6.2	OSE shell	9
1.6.3	Configuration Service	10
1.6.4	Performance Management Service	10
1.6.5	Log service	10
1.6.6	File transfer	10
2	Installation and user settings	11
2.1	Installation for Unix (Solaris/Linux)	11
2.2	Installation for Windows (using Cygwin or WSL)	11
2.2.1	Installation for Cygwin	11
2.2.2	Installation for WSL	13
2.3	Moshell directory structure	13
2.4	Starting an moshell session	14
2.4.1	Starting up Moshell	14
2.4.2	Loading the MO Tree	14
2.4.3	Performing Actions on Loaded MO Stubs	15
2.5	User-specific settings	15
2.5.1	File properties	16
2.6	Settings related to telnet/ftp/ssh/sftp communication	16
2.7	CORBA settings	17
2.8	Ports used by moshell	17
2.9	Running moshell across secure tunnels (RSG)	18
2.10	LDAP roles needed for accessing COM nodes	18
3	Command syntax, including Regular Expressions	18
3.1	How MOs are Identified	18
3.1.1	RDN - Relative Distinguished Name	18
3.1.2	LDN - Local Distinguished Name	19
3.1.3	FDN - Full Distinguished Name	19
3.2	How to address the MOs in MO-related commands	19
3.3	Regular Expressions	20
3.4	How to specify attribute values in set/cr/acc commands	22
3.5	Moshell command line	23
3.6	Piping	23
4	Command descriptions	24
4.1	Basic MO commands	24
4.1.1	mom[abdcfloprtuxsi] [<moclass/struct/enum>] [<attribute/action>] [<attr-type>] [<attr-flags>] [<description>]	24
4.1.2	lt <motype-filter> root all	25
4.1.3	lt/lc <motype-filter> root all	25
4.1.4	lcc <moGroup> <moFilter> <proxy(s)>	26
4.1.5	lt/clt/ltc[1-9] <motype-filter> root all [<attribute==value> AND/OR <attribute==value>]	26
4.1.6	lc/lcc[1-9] <moGroup> <moFilter> <proxy(s)> all	27
4.1.7	ld[c] <ldn>	27

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

4.1.8	lu/llu <moGroup> <moFilter> <proxy(s)>	27
4.1.9	pr[s][m]/lpr[s][m] [<moGroup> <moFilter> <proxy(s)>] [<mimName>]	28
4.1.10	ma[i]/lma[i] <moGroup> <moGroup> <moFilter> <proxy(s)> all [<attribute-filter>] [<value-filter>]	28
4.1.11	mr[i]/lmr[i] <moGroup> <moGroup> <moFilter> <proxy(s)> all [<attribute-filter>] [<value-filter>]	29
4.1.12	mp	29
4.1.13	get[m][i]/lget[m][i] [<moGroup> <moFilter> <proxy(s)> all] [<attribute-filter> all] [<value-filter>]	29
4.1.14	hget[c][m][i]/lhget[c][m][i] <moGroup> <moFilter> <proxy(s)> [<attribute-filter>] [<value1-filter>] [<value2-filter>] [<value3-filter>] etc...	31
4.1.15	kget[m]/lkget[m] [<moGroup> <moFilter> <proxy(s)>] [<attribute-filter>] [<attribute-type>] [<attribute-flag>] [<attribute-description>]	31
4.1.16	fro/lfro[m] <moGroup> <moFilter> <proxy(s)> all [<attribute-filter> all] [<value-filter>]	32
4.1.17	sql/select <command> [<unix-cmds>]	32
4.1.18	st/lst <moGroup> <moFilter> <proxy(s)> all [<state-filter>]	32
4.1.19	prod <moGroup> <moFilter> [<productdata-filter>]	32
4.1.20	lk/lk <moGroup> <moFilter> <proxy(s)>	33
4.1.21	lko/lko <moGroup> <moFilter> <proxy(s)>	33
4.1.22	set[m][c][1][i][p][1x]/lset[m][c][1][i][p][1x] <moGroup> <moFilter> <proxy(s)> [<attribute>] [<value>]	33
4.1.23	eset[c][1]/leset[c][1] <moGroup> <moFilter> <proxy(s)> [<attribute-filter>] [<value>]	34
4.1.24	rset/lrset <moGroup> <moFilter> <proxy(s)> [<attribute>] [<value>]	34
4.1.25	bl[s][1]/lbl[s][1] <moGroup> <moFilter> <proxy(s)>	35
4.1.26	deb[1]/ldeb[1] <moGroup> <moFilter> <proxy(s)>	35
4.1.27	acl/lac <moGroup> <moFilter> <proxy(s)> all [<action-filter>]	35
4.1.28	acc[e][n][y]/lacc[e][n][y] <moGroup> <moFilter> <proxy(s)> all [<action>]	36
4.1.29	cr[e][n][1x] <ldn>	37
4.1.30	del[b][1x]/ldel[b][1x] <moGroup> <moFilter> <proxy(s)>	37
4.1.31	rdel/lrdel <moGroup> <moFilter> <proxy(s)>	38
4.1.32	gm[c][d]/lgm[c][d] <moGroup> <moFilter> <proxy(s)>	39
4.1.33	sc[g][w][d] [<parameterlist> all] [<namespacelist> all]	40
4.1.34	safe+/safe-/safe?	40
4.1.35	s+/s++/s-/s?	41
4.1.36	u+[s]/u-/u?/u/!! [<file>]	42
4.1.37	run[x][1][1p][1r] [-l <lineNr>] [<command file>] [<var1>] [<var2>] ...	43
4.1.38	trun[is1cr] <moScript> <http://ipaddress/script>	43
4.1.39	Ctrl-Z; touch /tmp/xxxx; fg (abort MO command)	46
4.1.40	pol[b][c][d][g][h][i][k][m][p][s][r][u][w][y] [-m <mo>] [<interval>] [<waitTime>] [<checkTime>]	46
4.1.41	re[i]	47
4.1.42	getmom [<momversion>]	48
4.1.43	parsemom [<momFile>]	48
4.1.44	flt/fltc <motype-filter>	48
4.1.45	fget[i]/lfget[i] <moGroup> <moFilter> <proxy(s)> all [<attribute>]	48
4.1.46	eget/leget <moGroup> <moFilter> <proxy(s)> all [<attribute>]	48
4.1.47	sget/lsgget/skget/lsgget/shget/lshget <moGroup> <moFilter> <proxy(s)> all	49
4.1.48	fset[i]/lfset[i] <moGroup> <moFilter> <proxy(s)> all [<attribute>] [<value>] [<attribute-type>]	49
4.1.49	facc/lfacc <moGroup> <moFilter> <proxy(s)> all [<action>] [<param1>] [<param2>]	49
4.1.50	fdel/lfdel <moGroup> <moFilter> <proxy(s)>	50
4.2	Other MO commands	50
4.2.1	cvls/cvmk/cvms/cvset/cvrm[u][s]/cvbrm/cvcu/cvget[f][u][d]/cvput/cvls1/cvre/cvfa/cvfd	50
4.2.2	inv[h]xbpctyrgfau [<Filter>] [<stateFilter>]	52
4.2.3	cab[adefghlmrstxc] [<unix-cmds>]	56
4.2.4	sdi[cjr]	58
4.2.5	stc[p][r] [<Filter>] [<stateFilter>]	59
4.2.6	std[ar] [<filter>]	60
4.2.7	stv[b][r] [<Filter>] [<stateFilter>]	63
4.2.8	stt[r] [<Filter>] [<stateFilter>]	64
4.2.9	ste[gr] [<Filter>] [<stateFilter>]	65
4.2.10	sti[bcfopr] [<Filter>] [<stateFilter>]	67
4.2.11	sts[c]	72
4.2.12	str	73
4.2.13	dcm[meiabsrfkx] [-m <rophours>] [-e <eventrophours>] [-d <logdays>] [-b <boards boardgroup> all] [-r <mogroup>] [-k <nrdumps>] [<esiGranularity>] [-f <moFilter>] [-t <seconds>] [<logdir>]	75
4.2.14	hc[iuzd][v] [-r]-x <numbers>] [<hcllogfile> <hcllogdir> <hcreportdir>] [<hcllogfile2> <hcllogdir2>]	76
4.2.15	trg[idfubgs] [-e <section>] [-f <faultString>] [-s <searchStrings>] [<NodeIP/path/to/dcmg.zip>]	78
4.2.16	diff[a][d][m][o][x][i]/ldiff[a][d][m][o][x][i]	79
4.2.17	diffs <scRefFile> <modumpFile>	81
4.2.18	w2f <UP>	81
4.2.19	lkr[a]	81

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

4.2.20	resub <lubLink> [<VplTp> <Subrack>] [<VplTp>]	84
4.2.21	ir[cdpsomt] [<lubLink>] [<CM>] [<period>]	84
4.2.22	rinp[c][m] </path/to/rinpm.json>	86
4.2.23	gr[acdfprsx] [<lubLink>] [<OtherRNC>]	86
4.2.24	tg[r][c][d]	89
4.2.25	uereprint/uer[d][t][i][s][p][v] [-m <mod> -i <imsi> -u <ueref> -n <maxUes> -c <utrancell> -r <iublink>] [<attribute-filter>[=<value>]]all]	91
4.2.26	ced[h][p][s][g][r] [-m <module(s)> -c <utrancell> -r <iublink> -s <rsite>] [<unix-cmds>]	94
4.2.27	al[atkgc][u] [-a -u <alarm-id>] [<unix-cmds>]	97
4.2.28	lg[abcdefghijklmnopqrstuvwxy012345678] [-l <input-directory logfile zipfile>] [-m <minustime>] [-p <plus- time>] [-s <startdate>] [-e <enddate>] [-g <boardgroup>] [-r <mogroup>] [-n <nodefilter>] [-x <XBlog- filter ESllog-filter>] [-b <xb>] [-d <nrdumps> <esiGranularity>] [-z] [-tz <hrs>] [<destination-directory>] [<unix-cmds>]	97
4.2.29	mfi[trc] [-s <startdate>] [-e <enddate>] [-p <hrs>]	104
4.2.30	mfs[hrc] [<rfports>] [<samplingstep>]	104
4.2.31	mtf[adshy] [-c <cellId>] [-u <ues>] [-t <timeout>] [-n] [-d <duration>] [-i <interval>] [-o <outputfile>] <Trace- Profile(s)> <MtdCounterProfile(s)>	105
4.2.32	orx[acglpr] [-r <radios>]	107
4.2.33	ori[shxc] [-r <radios>]	107
4.2.34	ors[vdiacp] [-r <radios>]	109
4.2.35	orf[elptb] [-r <radios>] [directory]	111
4.2.36	ort[se] -r <radio>	112
4.2.37	orp[cdeirstux]	112
4.3	Other commands	114
4.3.1	uv [<string> <var>=value]	114
4.3.2	pv [<string>]	114
4.3.3	/l <unix-command>	115
4.3.4	l+[m][m][s][o]/l-[s]/l? [<logfile>]	115
4.3.5	dbc[s][a] [<cvname> <dbdat-file> <cvzip-file> <mobatch-folder>]	115
4.3.6	dbd[p] [<cvname> <dbdat-file> <cvzip-file>] [<cvname> <dbdat-file> <cvzip-file>]	122
4.3.7	dbcv[r]	122
4.3.8	<ose/coli command> [<unix-cmds>]	122
4.3.9	coli	125
4.3.10	comcli	125
4.3.11	ecli	125
4.3.12	esci	125
4.3.13	netconf[y][g][gx] [<commandfile>]	125
4.3.14	c+/c1/c2/c-/c?/c0	125
4.3.15	<linux/rcs-coli/comcli command> [<unix-cmds>]	126
4.3.16	mcl[d] [<moClass-filter>] [<command-filter>]	127
4.3.17	mcc/lmcc <moGroup> <moFilter> <proxy(s)> <comcli commands(s)> [<unix-cmds>]	127
4.3.18	bo[ar]/ba[swdpmu]/br[wdm]/be[0-50]/bp	127
4.3.19	lh[z][x] <boardGroup> <moGroup> <OSE-command> run <commandfile> [<unix-cmds>]	129
4.3.20	mon[?][d][u][c][f][s][t][k][a][x][e][-] [<board(s)> <boardGroup(s)>] [</path/to/logfile>]	130
4.3.21	sql+/sql-/sql? [<heap>]	133
4.3.22	pgu[c][f][r] [-p <board1,board2,...>] /path/to/newLM [<cvcomment>]	133
4.3.23	procload/proctemp [<unix-cmds>]	134
4.3.24	proglis/progkill [-e] [<string>] [<unix-cmds>]	134
4.3.25	fte <te-command> [<trace-groups>all] [<string>] [<unix-cmds>]	135
4.3.26	goxb[acib] [-p <advpw>] <commands> [<unix-cmds>]	135
4.3.27	ftree[f][d][1] [<lnh>/] [<directory>] [<unix-cmds>]	136
4.3.28	ftget[1][c]/ftput[1][c]/ftdel[1][a]/ftrun [<options>] <source>[/] [<destination>]	136
4.3.29	htget <remoteFile> [<localfile/localldir>]	138
4.3.30	edit <remoteFile>	138
4.3.31	fclean[f][ff][a][d][e] [<lnh>/] [<directory>] [-f <filename-filter>]	138
4.3.32	hi [<commandFilter>], !<commandNr>	139
4.3.33	time[t] <command> <logfile>	140
4.3.34	pipe <command> <unix-command>	140
4.3.35	lmid[c][h]/upid[om] [<pattern> refresh	140
4.3.36	p/w/pw/b	141
4.3.37	prox[+]	141
4.3.38	col	141
4.3.39	ul	141
4.3.40	conf[bld][+]	141
4.3.41	gs[+]/gsg[+]	142
4.3.42	ip2d <ip-address>	142

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

4.3.43	d2ip/h2ip <number>	142
4.3.44	h2d/d2h <number>	143
4.3.45	h2b/b2h <number>	143
4.3.46	d2b/b2d <number>	143
4.3.47	rb2ip [<iublink>]	143
4.3.48	z2f [<zipfile>]	143
4.3.49	encpw[f]	144
4.3.50	mos2ro <moshell.zip> [/path/to/destinationfolder/]	144
4.3.51	gpg <file>	145
4.3.52	wait <delay> <newtime>	145
4.3.53	wf[o][a][t] <file>	146
4.3.54	return	146
4.3.55	print	146
4.3.56	alias/unalias <alias> <command>	147
4.3.57	lf[c] <file>	147
4.3.58	bg[g]/bgs/bgw [<commands> <id(s)> all] [<maxtime>]	147
4.3.59	- smd[slcr] [-m <days>] [-s <size>] [-f <filter>] [-o a s n] [-u <user> all] [-d <directory>] [-n <max>]	148
4.3.60	split [<size>] <file>	149
4.3.61	- dia[g k l s ds os pn ln dn le lv ac pc lc sa] [<ME addr ME Name> <ME addr ME name> <ME addr ME name>]	149
4.3.62	pe[c][l][k] [<polling interval> <pid>] [<trigger>] [<action script>] [<number of iterations>]	150
4.3.63	q/by/exit/quit [<exitcode>]	150
4.4	PM commands	151
4.4.1	pmom[acdp] [<moclass>] [<counter>] [<data-type>] [<flags>] [<description>]	151
4.4.2	kmom[d] [<area>] [<kpiname>] [<MOclass>] [<formula>] [<kpidescription>]	151
4.4.3	pget/lpget [<moGroup> <moFilter> <proxy(s)> all] [<attribute-filter> all] [<value-filter>]	152
4.4.4	spget/lspget [<moGroup> <moFilter> <proxy(s)> all] [<attribute-filter> all] [<value-filter>]	152
4.4.5	hpget[c][m]/lhpget[c][m] [<moGroup> <moFilter> <proxy(s)>] [<attribute-filter>] [<value1-filter>] [<value2-filter>] [<value3-filter>] etc...	152
4.4.6	pdiff/lpdiff [<moGroup> <moFilter> <proxy(s)> all] [<attribute-filter> all] [<value-filter>]	152
4.4.7	hpdiff[m]/lhpdiff[m] [<moGroup> <moFilter> <proxy(s)> all] [<attribute-filter> all] [<value1-filter>] [<value2-filter>] [<value3-filter>]	152
4.4.8	pmx[hfdnckwlb3zeity] [<mofilter> <mogroup>] [<counter-filter> <kpi(s)>] [-l <zipfile> <directory>] [-w <web-directory>] [-m <minushours>] [-p <plushours>] [-s <startdate> . <starttime>]] [-e <enddate> . <endtime>]] [-a -d -h -u] [-o <outputFormat>] [-tz <hrs>] [-f <formulafile>] [-j <precision>] [-mo <regexp>] [<unix-cmds>]	153
4.4.9	pmr[agfkwp3z] [-g <mofilter> <mogroup>] [-z <mogroup>] [-r <report(s)>] [-l <zipfile> <directory>] [-w <web-directory>] [-i <iubCellModule-file>] [-f <formulafile>] [-c <configfile>] [-m <minushours>] [-p <plushours>] [-s <startdate> . <starttime>]] [-e <enddate> . <endtime>]] [-o <outputFormat>] [-t <thresholdfile>] [-tz <hrs>] [<unix-cmds>]	155
4.4.10	pme[fd][cgurvyz] [<pm_logdir> uehexcep.zip] [-b <boardgroup>] [-f] [-m <minushours>] [-p <plushours>] [-s <startdate> . <starttime>]] [-e <enddate> . <endtime>]] [-o <uehoptions>]	158
4.4.11	pst [<scan-filter> <scan-proxy>] [<scan-state>]	159
4.4.12	pgets[m][n][r] [<scan-filter> <scan-proxy>] [<contents-filter>]	159
4.4.13	pcr[pcfpdazg]/lpcr[pcfpdazg] <ScannerName JobName> <moclass-filter> <moinstance-filter> <mo-group> <counter-file> [<counter-filter>] [<granularity>]	160
4.4.14	pcrk[f][v][d] [<kpidefinitionfile>] [<granularity>]	162
4.4.15	pbl <scan-filter> <scan-proxy>	162
4.4.16	pdeb <scan-filter> <scan-proxy>	162
4.4.17	pdel <scan-filter> <scan-proxy>	163
4.4.18	emom [uetrlgpeh ctr all] [<event-filter>]	163
4.4.19	pset[d]	163
5	Lazy	164
5.1	Software Upgrade CPP	164
5.2	Software Upgrade ECIM/COM	165
5.3	RNC lub operations	165
5.4	Common RNC lub Integration Problems	166
5.5	Common RNC lu/lur Integration Problems	167
6	Scripting	167
6.1	Preset Variables	167
6.2	Variable assignment	169
6.3	Hashtables (arrays)	173
6.4	If/Else constructs	174
6.5	For constructs	175
6.6	User-defined functions	177
6.7	Nesting for and if statements	178

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

6.8	Example scripts	179
7	Utilities	179
7.1	Network Management Tools	179
7.2	Parameter Auditing Tools	180
7.3	PM Tools	180
7.4	Miscellaneous Tools	181
8	Server Maintenance	181
8.1	Hanging Processes	181
8.2	Disk full	181
8.3	Run out of memory	181
9	Modes of operation	182
9.1	Offline Mode	182
9.2	SQL Mode	182
9.3	Multi Mode	183
9.4	Yang Mode	184
10	Revision History	185

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

1 Introduction

1.1 Contact

For bug reports, installation issues, change requests etc. please use the forum on the moshell homepage.

TR for MoShell

Put bug reports on the web page (see Section [1.1](#)) or write them in MHWEB:

To write an MoShell TR/CR in MHWEB:


1. MHO should be ENM-AMOS.
2. Product should be AMOS CNA4033129. Refer to old TR HY15328 for more product details.

In order to get the fastest resolution to your problem, please add the following information to your TR or bug report:

- `uv` and `pv` printout
- Any *complete* printout relevant to the fault
- How to recreate the fault (you can for instance include the `hi` printout showing all the commands that led to the fault)

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

1.2 MO concept

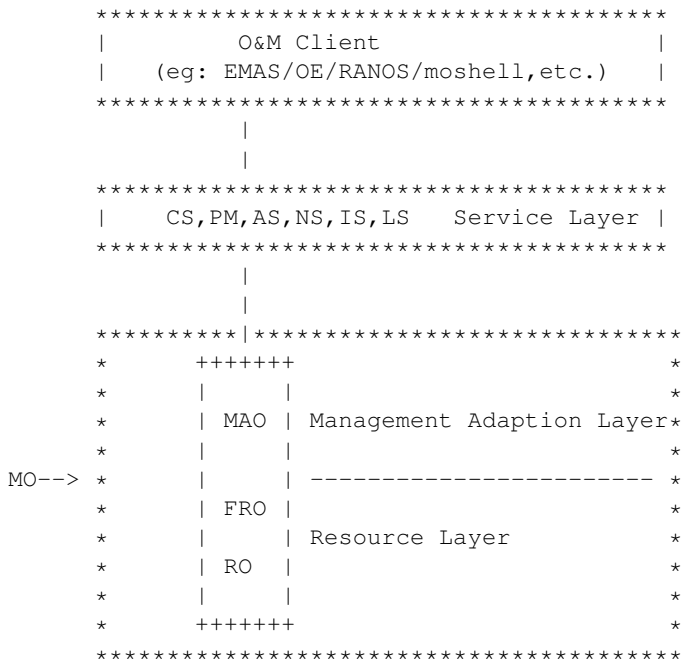

The O&M client can access the MOs through a number of services:

- *Configuration Service (CS)*: to read and change configuration data. Configuration data is stored in the MO attributes.
- *Performance Measurement (PM)*: to setup statistics scanners or event filters. The statistics counters are stored in MO pm-attributes and output to an XML file every 15 minutes. The events are output into binary files every 15 minutes.
- *Alarm Service (AS)*: to retrieve the list of alarms currently active on each MO.
- *Notification Service (NS)*: to subscribe and receive notifications from the node, informing about parameter/alarm changes in the MOs.
- *Inventory Service (IS)*: to get a list of all HW and SW defined in the node.
- *Log Service (LS)*: to save a log of certain events such as changes in the configuration, alarms raising and ceasing, node/board restarts, jvm events, O&M security events, etc

The MO is a way of modelling resources in a CPP node. It consists of:

1. A *Management Adaption Layer* which is implemented in java, in the MP running the jvm (the O&M MP).
The purpose of the MAO (Management Adaptation Object) is to interface towards the various O&M services described above.
2. A *Resource Layer* consisting of Facade Resource Object (FRO) and a Resource Object (RO) which are implemented in C and run on the various boards. The RO is the actual resource modelised by the MO. The purpose of the FRO is to act as an interface between the MAO and the RO, by handling the configuration transactions and storing configuration data for the RO.

1.3 O&M services and protocols

The MO services described above (CS, AS, PM, IS, NS) are carried by the IIOP protocol (Internet Inter-ORB Protocol), also called CORBA (Common Object Request Broker Architecture).

At startup, the node generates its IOR (Interoperable Object Reference) and stores it in a **nameroot.ior** file which can be used by the O&M client to access the node. The IOR file contains the node's IP address and some specifications as to how the clients can send requests to the node.

The OSE-shell (also called COLI) can be accessed through telnet/ssh or locally, through the serial port (RS232). It gives direct access to the operating system, the file system, and parts of the FRO/RO layer.

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

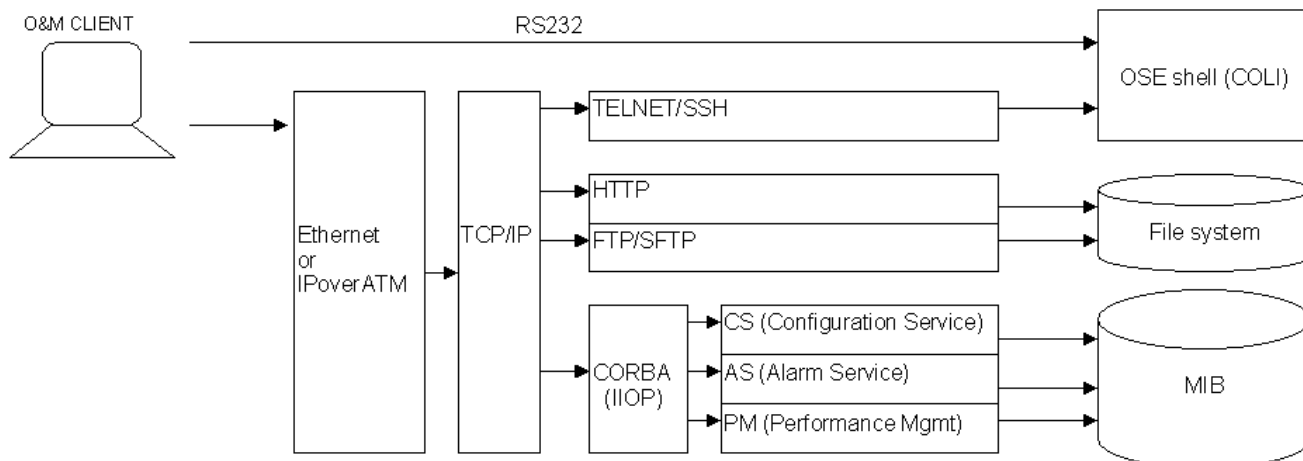


Figure 1: CPP nodes have various access methods for different services. For Managed Services like CS, CORBA is used. For the command shell, ssh or telnet is used. To collect PM XML ROP files FTP is used.

1.4 MO Tree and MO Naming Conventions

1.4.1 LDN - Local Distinguished Name

The MOs are organised in a hierarchical structure.

Each MO instance is uniquely identified in the node by its *Local Distinguished Name* (LDN).

The highest MO in a node, the so called *root MO* is the *ManagedElement*. This MO represents the whole node.

There is only one instance of the ManagedElement MO in the node and it is referenced by the LDN: **ManagedElement=1**

The string at the left of the equal sign is called the MO class (or MO type) and the string at the right of the equal sign is called the MO identity. In the case of the root MO, the *MO class* is **ManagedElement** and the *identity* is 1.

If an MO is located further down in the MO tree, the LDN must contain the MO classes and identities of all the parents of that MO, in a sequence going from the root MO down to the MO in question. See example below:

```

ManagedElement=1
ManagedElement=1,Equipment=1
ManagedElement=1,Equipment=1,Subrack=MS
ManagedElement=1,Equipment=1,Subrack=MS,Slot=19
ManagedElement=1,Equipment=1,Subrack=MS,Slot=19,PlugInUnit=1
ManagedElement=1,Equipment=1,Subrack=MS,Slot=19,PlugInUnit=1,Program=DbmFpgaLoader
  
```

From this example, we can see that the ManagedElement has a child called **Equipment=1** which has a child called **Subrack=MS** (representing the main subrack of the node), which has a child called **Slot=19** (representing the slot in position 19), which has a child called **PlugInUnit=1** (representing the board located in that slot), which has a child called **Program=DbmFpgaLoader** (representing one of the programs loaded in that board).

The LDN of the lowest MO (the one called **Program=DbmFpgaLoader**) contains the address of all successive parents of that MO all the way up to the ManagedElement.

1.4.2 RDN - Relative Distinguished Name

The string located at the far right of an LDN, just after the last comma, is called a *Relative Distinguished Name* (RDN).

It is a unique way of addressing a MO instance in relation to its closest parent.


This means that there is only one MO instance with the RDN **Program=DbmFpgaLoader** under the parent MO **ManagedElement=1,Equipment=1,Subrack=MS,Slot=19,PlugInUnit=1**. However, there could be another MO instance with the same RDN under a different parent MO. For instance, there could be an MO instance with the RDN **Program=DbmFpgaLoader** under the parent MO **ManagedElement=1,Equipment=1,Subrack=MS,Slot=23,PlugInUnit=1**.

Therefore the RDN is a relative way of addressing an MO instance.

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

1.4.3 FDN - Full Distinguished Name

When a node is connected to a Network Management System such as OSS-RC, there is a need to uniquely address each MO within the whole network. The *Full Distinguished Name* (FDN) adds a network element prefix (MIB prefix) in front of the LDN of each MO instance in order to specify which node this MO belongs to. See the figure below, summing up the FDN/LDN/RDN concept:

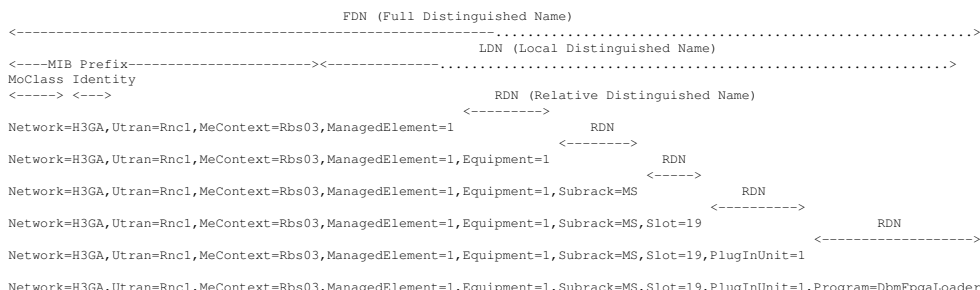

1.5 MOM - Managed Object Model

Each MO class contains a number of attributes which are used to store *configuration data* or *performance measurement data*.

Each MO class can also support a number of defined *actions*. These represent certain operations which can be performed by the MO. A typical example is the action **restart** which will cause the MO to restart the resource it is responsible for (e.g. a board, a program, etc.).

The *Managed Object Model* (MOM) is a reference document describing all the MO Classes that can exist in a node, together with their *attributes* and *actions*.

The format of the MOM can be UML, XML, HTML, or MS-Word.

The XML version of the MOM is usually stored on the web server of the node at the address:

`http://<ipaddress>/cello/oe/xml/<filename>.xml`

The MOMs for each SW release is also stored in HTML format on `http://cpistore.ericsson.se`

1.6 Moshell Functionality

MoShell is a text-based O&M client providing access to the following services:

- *Configuration service (CS)*
- *Alarm service (AS)*
- *Performance management service (PM)*
- *Log service (LS)*
- *OSE shell (COLI)*
- *File transfer (ftp/http)*

Access to all services is supported both in secure mode (secure Corba, ssh, sftp) and unsecure mode (unsecure corba, telnet, ftp).

1.6.1 Alarm Service

The list of active alarms can be retrieved with the commands `al` (to show an overview) or `ala` (the same as `al`, with more details).

1.6.2 OSE shell

Any OSE shell command can be typed at the moshell prompt and the output can be piped through external utilities (which exist in your workstate/server) if required.

Examples:

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

```
te log read
te log read | grep ERROR
```

- Only the `$` prompt is supported. For instance, it is not possible to type `lhsh 000100` and expect a prompt to that board. The workaround is to type the command on the same line as the link handler shell, eg `lhsh 000100 te log read` or put a semicolon after the `lhsh xxxx`, eg `lhsh 001400 ; te log read ; vii ; llog`. Type `h ose` at the moshell prompt for more info.
- Other commands which require a shell such as `sqlc` have their own implementation. See Section [4.3.8](#).
- Any *Loco* commands should be written as `loco ts\nloco ...`. You can achieve this automatically using aliases, see Section [4.3.56](#).

1.6.3 Configuration Service

Moshell supports the following 6 operations from the configuration service:

1. **GetChildren** to load all or parts of the MO-tree
2. **GetAttribute** to read the attributes of an MO
3. **CallAction** to perform an action on an MO
4. **SetAttribute** to set (change) the value of an MO attribute
5. **CreateMO** to create a new MO in the node
6. **DeleteMO** to delete an MO from the node

1.6.4 Performance Management Service

Moshell supports the following operations from the performance management service:

- List Scanners and Event Filters
- Create Scanner
- Stop Scanner
- Resume Scanner
- Delete Scanner
- Set Event Filter

1.6.5 Log service

Moshell supports fetching and parsing of the following logs:

- availability log
- system log
- event log
- alarm log
- command log
- O&M security event log
- COLI log
- Hardware inventory log
- JVM events log (upgrade log)

1.6.6 File transfer

Moshell can download/upload files and directories to/from the node, using `http`, `ftp` or `sftp`.

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

2 Installation and user settings

2.1 Installation for Unix (Solaris/Linux)

Copy the moshell installation package **moshellxxx.zip** to your home directory **/home/youruser** or to the temp directory **/tmp**. Very important: do not store the zip file inside the moshell folder otherwise the installation will be corrupted.

Then go to the folder containing the zipfile (`cd <folder>`) and run the following commands:

```
unzip -o moshellxxx.zip
bash moshell_install
```

When prompted to enter the directory where you want to install moshell, it is recommended to specify your HOME directory (`~`). If you have executed `moshell_install` from your home directory then you can press the enter key and the current directory is selected.

If a previous moshell installation already exists, it is recommended to install in the same directory as the old one. This way, all your custom files (jar/xml files, site files, etc.) get copied across to the new revision and the old revision gets moved to a different location so you can still access it if needed.

When prompted to enter the path to java, make sure to use Oracle Java. Other Java distributions such as OpenSDK are not supported by moshell.

Note: In the case of AMOS installation use option `-a`, ie: `bash moshell_install -a` (must be run as root on OSS masterserver).

Note: for linux 64-bit, the 32-bit libc library is required, the package name is `libc6-i386` or `glibc.i686` or `ia32-libs`.

(Other packages which may be needed for certain commands are python and expect.)

Running moshell for the first time:

If you have set the PATH variable correctly in your `~/.bashrc` file, you should be able to run moshell from any directory. E.g:

```
moshell <ipaddress>
```

If this is the first time moshell is installed in this location, then it will download a number of jar files from the node. No progress indicator will be shown so just be patient as it will take a few minutes. Progress can be seen by doing `"ls -l"` in the `moshell/jarxml` directory. For more information about user settings etc, check the user guide.

If the Moshell execution fails on linux with the following error:

```
moshell/commonjars/lib/lin64/filefuncs.so: cannot restore segment prot after reloc: Permission denied
```

Then try to run the following commands, while logged in as root:

```
chcon -t texrel_shlib_t ./commonjars/lib/lin64/libz.so.1
chcon -t texrel_shlib_t ./commonjars/lib/lin64/filefuncs.so
```

If Moshell is unable to connect to the node on port 22, try executing the program `moshell/commonjars/ssh` manually. If it fails with the following error:

```
moshell/commonjars/ssh: error while loading shared libraries: cannot restore segment prot after reloc:
```

Then try running the following command, while logged in as root:

```
chcon -t texrel_shlib_t commonjars/ssh
```

2.2 Installation for Windows (using Cygwin or WSL)

When running on Windows, Moshell uses a unix emulator known as Cygwin. From Windows 10 it is also possible to run Ubuntu or Debian directly on Windows, using the Windows Subsystem for Linux (WSL).

2.2.1 Installation for Cygwin

Go directly to step 10, *MoShell Installation*, if you have already installed and configured Cygwin previously.

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

1. Download the file <http://www.cygwin.com/setup-x86.exe> and store it under `C:\users\youruser\cygwin_setup\`, then execute it from that folder with the context menu "Run as administrator". If that does not work then try to start a DOS command window as Administrator and execute the setup-x86.exe file from the DOS window.
2. Choose "Install from internet", then click Next.
3. Root Directory **C:\cygwin** (It is not recommended to choose a different directory, especially if it contains spaces).
4. Choose a Download Site. For instance cygwin.mirror.constant.com is known to work well but probably others work fine too.
5. In the "Select Packages" View menu, choose "Category", then add the following packages:

- under *Archive* select *zip* and *unzip*
- under *Database*, select *postgresql*
- under *Graphics*, select *gnuplot*
- under *Libs*, select *libglib2.0_0* and *libssp0*
- under *Net* select *curl*, *inetutils*, *openssh*, *openssl*
- under *Perl* select *perl*, *perl-XML-Simple*, and *perl-IO-Tty*
- under *Python* select *python2* and *python3*
- under *Tcl* select *expect*

6. Click *Next*, install will start. Wait for installation to complete.
7. Copy the file `moshell/examples/cygwin_install/cygwin_install.txt` to `C:/Cygwin` (also available from http://newtran01.au.ao.ericsson.se/moshell/cygwin_install.txt).
8. Click on Start → Run.

In the "Run" window, type: `cmd`, then press <enter>.

A DOS window opens. At the DOS prompt, execute the following commands:

```
c:
cd cygwin
bin\perl.exe cygwin_install.txt
```

This will create the following files: `c:/cygwin/etc/profile`, `c:/cygwin/cygwin.bat`, `c:/cygwin/home/youruserid/.bashrc`, `c:/cygwin/home/youruserid/.minttyrc`, `c:/cygwin/home/youruserid/.inputrc`.

If those files already exist, they are automatically moved to the folder `c:/cygwin/tmp/installbackup`.

9. Open a new cygwin terminal window. The window should be black with white text and the prompt should like this: `[~]$`

If not, then go through all the steps again and make sure you haven't missed out anything.

More info about Cygwin installation issues can be found at: <http://cygwin.com/faq/faq0.html>

Uninstall instructions for cygwin can be found at http://cygwin.com/faq/faq_setup.html#faq_setup_uninstall_all

10. Moshell installation. Follows these steps if you already have a working Cygwin environment.

- Copy the moshell installation package **moshellxxx.zip** to your home directory **c:/cygwin/home/youruserid**
- Open the cygwin shell and run:

```
unzip -o moshellxxx.zip
bash moshell_install
```

When prompted to enter the directory where you want to install moshell, it is recommended to specify your HOME directory (`~`).

If you have executed `moshell_install` from your home directory then you can press the enter key and the current directory is selected.

If a previous moshell installation already exists, it is recommended to install in the same directory as the old one. This way, all your custom files (jar/xml files, site files, etc.) get copied across to the new revision and the old revision gets moved to a different location so you can still access it if needed.

When prompted to enter the path to Java, just type `java`.

11. Running moshell for the first time

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

If you have set the PATH variable correctly in your `~/.bashrc` file, you should be able to run moshell from any directory. E.g:

```
moshell <ip-address>
```

2.2.2 Installation for WSL

1. Make sure you have Windows 10 64-bit build 16215 or higher.
To check the build, open *Run* (*WindowsKey* + *R*) and type `winver`. If lower than 16215, upgrade your windows 10 version to latest.
2. Open PowerShell as administrator and execute the following command:
`Enable-WindowsOptionalFeature -Online -FeatureName Microsoft-Windows-Subsystem-Linux`
Then restart your computer when prompted.
3. Open the Microsoft Store and in the searchfield, enter *wsl* or *linux*. Select a distribution (preferably Ubuntu, or Debian), then from the distribution's page, select *Get*.
4. Launch a new instance of the distribution that was installed. The first time, you will be prompted to define a username and password.
Use for instance the Ericsson username and enter a password of your choice.
5. From the linux shell, execute the following commands:
 - `sudo apt update && sudo apt upgrade`. (If any questions appear, you can just press "Enter")
 - `sudo apt-get install unzip zip postgresql vim gnuplot libglib2.0-0 inetutils* expect binutils`
 - `sudo apt-get install openssh-server openssl python2.7 libxml-simple-perl libio-pty-perl default-jdk`
 - `sudo dpkg-reconfigure tzdata` (then select your timezone, eg "Europe" and "Stockholm")
6. Download moshellxx.zip from <http://newtran01.au.ao.ericsson.se/moshell/> and store somewhere such as your downloads folder `C:/users/xxxx/downloads`
Then copy the moshellxx.zip installation package to your WSL file system by doing the following command in the linux shell:
`cp /mnt/c/users/xxxx/downloads/moshellxx.zip ~/`
Then run the moshell installation from the linux shell, eg:

```
unzip -o moshellxx.zip
bash moshell_install
0
~/
```
7. Update the linux PATH environment variable to be able to run moshell from anywhere:
`echo export PATH="${PATH}:%HOME/moshell" >> ~/.bashrc`
INFO: Unlike CYGWIN, WSL does not support handling files of the WSL file system from the Windows file explorer. However it is possible to access files of the Windows file system from the WSL shell by putting "/mnt" in front of the path. For instance, in order to copy a dcgm.zip from `c:/users/myusername/downloads` to the WSL home folder, do the following command from a WSL shell:

```
mv /mnt/c/users/myusername/downloads/xxxx_dcgmm.zip ~/
```

2.3 Moshell directory structure

The moshell directory contains a number of files and subdirectories:

- **logfiles/** To store the logfiles generated by the various utililites (**moshell**, **mobatch**, **swstat**, etc.)
- **examples/** Example of input files required by the utilities (command files, site files, etc.)
- **cmdfiles/** Place to store your command files (to be used by **mobatch**, **monode**, **telbatch**, **telnode**, etc)
- **sitefiles/** Place to store your sitefiles (to be used by **mobatch**, **telbatch**, **swstat**, **swup**, etc.)
- **jarxml/** Place to store jar files (**oms.jar** and **vbjorb.jar**) and xml-MOM files (used by **Moshell**). Specific to certain nodes.
- **commonjars/** Place to store jar files common to all nodes
- **moshell** The file used to startup moshell. Contains some customizable variable settings.
- **mobatch** Run moshell commands on several nodes in parallel

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

- **gawk** Script interpreter used by the various utilities
- **prog.awk, funcs.awk** Main code for moshell, cannot be run on its own.
- **moshellUserGuide.pdf** Help file
- **rncaudit** Audit and consistency check of rnc data towards cell data CDR, utranrelations CDR, baseline, uerc, etc.
- **swstat** To view SW revisions, CV's and delete old upgrade packages
- **rbsaudit** Audit and consistency check of rbs data towards rbs data and baseline. Generation of mobatch corrective scripts.
- **swup** Network SW upgrades
- **cvms** create and set cv's on several nodes in parallel
- **momdoc** convert MOM from xml to html
- **mocmd** generate moshell command file from a baseline parameter file

2.4 Starting an moshell session

This section gives a brief overview of how to get started once you have installed moshell.

2.4.1 Starting up Moshell

A Moshell session is started from the Unix shell prompt using command: `moshell <node-name>|<node-address>`

If connecting with node name, an entry must exist in the ipdatabase file reference the node name against an ip or dns address.

Other ways of starting moshell are described by typing `moshell` on its own as well as in chapter Section 9 (Offline mode/multi mode Chapter) .

Upon startup, and running the command "It all", moshell will go through the following steps:

1. Download the node's IOR file and store it on the workstation. The node's IOR file is fetched from `http://nodeipaddress/cello/ior_files/nameroot.ior`
2. Check the node's MOM version The node's MOM is fetched from `http://nodeipaddress/cello/oe/xml/<filename>` where `<filename>` is one of the files listed in the user variable `xmlmomlist`. The MOM version is derived from the "mim" tag inside the MOM file, eg: `<mim name="RNC_NODE_MODEL_E" version="5" release="3">` becomes `RNC_NODE_MODEL_E_5_3`. If this MOM version does not exist on the workstation (under **moshell/jarxml** directory), then it is downloaded from the node and stored in that directory. If the MOM version could not be figured out (ie. moshell could not find any MOM on the node), the MOM specified in the moshell uservariable `default_mom` is used.
3. Parse the MOM and generate an internal table specifying all MO classes, attributes, and actions supported by the node.
4. Initiate CORBA communication with the node by using the information contained in the IOR file.
5. Read the FDN of the Root MO
6. Ready to receive commands from the user

At this stage, it is possible to access the *Alarm Service* and *OSE shell* but the *Configuration Service* is limited since Moshell doesn't have any knowledge of what MO instances are contained in the node's MO tree (apart from the root MO).

The following commands are of use at this stage:

- **h** - to show the help and list of commands. Can be used with a command name after to show help about that command.

The menus are split into two (**m** and **n**) only for readability purposes.

2.4.2 Loading the MO Tree

Once Moshell first connects to the node it has no knowledge of the MO structure on the node (except for the *ManagedElement* MO class). In order to *get attributes* or *call actions* you first need to load the MO *stubs* onto your Moshell client.

The whole MO tree can be read with command `lt all`. The LDN of each MO of the MO tree is then allocated a "proxy" number and stored in an internal table in Moshell memory. The internal proxy table can be printed via the command `pr` which will show for each MO, the LDN and the proxy number.

When performing an operation on an MO (get, set, action, etc.), either the proxy number or the LDN can be given as argument.

In fact, by using a *Regular Expression* matching part of the LDN, an operation can be performed on several MOs at a time.

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

More information about this can be found in Section 3 or by typing `h syntax` at the prompt.

To save memory on the workstation, it is possible to load only parts of the MO tree instead of the whole MO tree.

For instance, by typing `lt pluginunit`, only the LDNs of MOs whose MO class is *PluginUnit* will be read.

Instead of typing the whole MO class, it is possible to type a regular expression that will match the MO class.

In this case, `lt plu` would be the same as `lt pluginunit`, since the string `plu` matches `pluginunit`

More information about this in Section 4 or by typing `h lt` and `h lc` at the prompt.

2.4.3 Performing Actions on Loaded MO Stubs

To perform operations on one or several MOs which you loaded in the previous section, follow the command syntax shown on the menu.

1. Example: To read the MO attributes of the MO with LDN

ManagedElement=1,Equipment=1,Subrack=MS,Slot=19,PluginUnit=1 you would type the following:

```
pr plu          #then lookup the proxy identity of that MO
get <proxy>     #enter the MOS proxy identity as argument to the "get" command
```

OR

```
lget ms,slot=19,pluginunit=1$
```

2. Example: To read the MO attributes of all MOs whose MO class is *PluginUnit*

```
get plu #the get command will operate on all MOs whose RDN matches "plu"
```

More info about this in Section 3 or by typing `h syntax` at the Moshell prompt.

Help for each command can be found in Section 4 or by typing `h <command-name>` at the Moshell prompt.

!!! Important note for CDMA nodes !!! Most CDMA nodes do not keep a MOM on the node's harddisk.

To force moshell to use the correct MOM, here are some workarounds:

- store the correct MOM in your directory **moshell/jarxml**, then, after the moshell startup, use the command `parsemom <mom>` to parse the correct MOM, or specify the path to this MOM in your *default_mom* user variable (see Section 2.5 for info on user variables).
- store the correct MOM on the node at **/c/public_html/cello/oe/xml/CelloMOM.xml**
- check if the node has a MOM that is under a different file name than is specified in the moshell uservariable *xmlmomlist*. This can be done by doing `ls /c/loadmodules_norepl` or `ftree /c/loadmodules_norepl` and search for a MOM file (file extension **.xml**)

2.5 User-specific settings

There are a number of moshell configuration parameters (called *user variables*) which can be set either permanently or on a session basis. These settings have a default value which is defined in the file **moshell/moshell**. If one or more user variables need to be changed from the default value, it is recommended to store the new setting in one of the moshellrc files (**~/.moshellrc** or **moshell/jarxml/moshellrc** or **moshell/jarxml/moshellrc.\$USER**) instead of the moshell file. This way, the new setting will be kept even after an moshell upgrade.

It is also possible to define user variables on a session basis by:

1. using the command `uv [var=value]` from the moshell prompt (type `h uv` for more info)
2. or use the `-v` option from the command line when starting moshell (type `moshell` on its own for more info)

It is possible for many users to run moshell from a central location and have their logfiles, credential files, user variables and aliases stored in their own home directory. This is mainly intended for Solaris or Linux networks where many users will be able to run moshell from a common location without having to install it in their home directory. The common location can be the vobs or any user's home directory, for example the administrator's account or a common account.

The administrator can define a number of user variables and aliases and save them into the **moshell/jarxml/moshellrc** file. These user variables and aliases will apply to all users and will be kept after each moshell installation. It is also possible for the administrator to define individual moshellrc files which will be located in **moshell/jarxml/moshellrc.\$USER** (moshell or AMOS in OSS) or in **/home/shared/common/moshell/moshellrc.\$USER** (AMOS in ENM).

Each user can also define their own settings and aliases and save them into the **~/.moshellrc** file in their home directory. If this file is not present, it will be created automatically and can be modified any time.

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

All user variables that are defined in the file `moshell/moshell` can be given a new value in the `moshell/jarxml/moshellrc` and/or the `~/.moshellrc` file and/or the file `moshell/jarxml/moshellrc.$USER` or `/home/shared/common/moshell/moshellrc.$USER` (for AMOS in ENM).

The user variables defined in `moshell/jarxml/moshellrc.$USER` override those defined in `~/.moshellrc` which override those defined in `moshell/jarxml/moshellrc`, which in turn override those defined in the file `moshell/moshell`.

Here is a short list of user variables, look inside the `moshell` file for more info on each variable:

- `disk_check` - check if enough free disk space on the workstation: 0=no check, 1=warning only, 2=exit if not enough space
- `disk_limit` - the minimum free disk space required by the disk check, default 1G (1 Gigabyte).
- `java` - path to Java executable
- `ip_database` - path to the IP database file (see example of this file in `moshell/examples/mobatch_files`)
- `secure_shell`, `secure_ftp`, `username`, `ip_connection_timeout`, `ip_inactivity_timeout` - see Section 2.6 for info
- `corba_class`, `security_method`, `credential`, `sa_credential`, `sa_password`, `sls_urls`, `sls_username`, `sls_password` - see Section 2.7 for information
- `default_mom` - path to the default MOM, to use in case no MOM is found on the node
- `prompt_highlight` - to enable or disable the bold font of the prompt
- `set_window_title` - to enable or disable the display of a window title
- `http_port` - to specify the HTTP port value (e.g 80 for CPP, 8080 for simcello)
- `keepLmList` - files that shouldn't be deleted by the `fclean` command.
- `bldebsset_confirmation`, `lt_confirmation` - to specify if confirmation message shall be given in `lt/bl/deb/set` commands.
- `logdir` - path to the logfiles directory (this one can only be changed from `moshellrc` or `.moshellrc`, not `uv` or `-v`)
- a few more variables, see the `moshell` file for further details

Look in the `moshell` file for a more complete list and detailed explanation of each variable.

2.5.1 File properties

All files and subdirectories belonging to the moshell package are NON-writeable to outside users. Only the owner of the account where moshell is installed can make modifications to the installation. The only exception is the subdirectory `moshell/jarxml` which is writeable to everyone. The reason is because all users need to be able to store new xml MOM files in that directory (since the xml MOM gets frequently updated for every new node SW release).

Note: the same jar files can be used by all users, regardless of what CPP SW is running on the node. For instance, it's ok to use CPP 4 jar files towards a CPP 3 node. This also the case as CPP 5.1 moves towards JacORB.

2.6 Settings related to telnet/ftp/ssh/sftp communication

The following user variables relate to telnet/ftp communication.

All settings can be either set in `moshell` file, in `~/.moshellrc` or via the `uv` command in the moshell session. See Section 2.5 and `h uv` for more info. Also check the `moshell` file for more info on each variable.

- `username` - which username to use when logging in to the node via telnet/ftp/ssh/sftp
- `secure_shell` - whether to use telnet or ssh for access to OSE shell
- `secure_ftp` - whether to use ftp or sftp for file transfers.
- `ip_connection_timeout` - timeout for the establishment of telnet/ftp/ssh/sftp connections
- `ip_inactivity_timeout` - inactivity timeout for telnet/ftp/ssh/sftp connections
- `telnet_port/http_port/ftp_port/secure_port` - to use a different port for telnet/http/ssh/sftp. Useful for connecting to SimCello/CPPEmu or running moshell over the RSG using port forwardings.
- `node_login` - whether to login or not (no login for SimCello or backup mode)

So, in order to enable ssh/sftp instead of telnet/ftp, do one of the following:

1. Set the variables `secure_shell` and `secure_ftp` in `moshell` file to the value 1 (not recommended since the value will get reset at the next moshell install/upgrade).

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

2. OR Add the following lines in the `~/.moshellrc` or the `moshell/jarxml/moshellrc` file

```
secure_shell=1
secure_ftp=1
```

3. OR Run the following commands from the Moshell prompt (the setting will only be valid for the current session):

```
uv secure_shell=1
uv secure_ftp=1
```

4. OR start moshell with the option `-v secure_shell=1, secure_ftp=1`

See Section 2.5 to find out more about setting user variables.

Important Note regarding the `ip_connection_timeout`: By default, this timeout is set to 45 seconds in the `moshell` file. Certain OSE shell commands might not print any output for a longer period of time, eg: `format`, `rcp`, etc. To avoid having a connection timeout when running these commands, it is advised to extend the `ip_connection_timeout` prior to running the command, by doing `uv ip_connection_timeout=600` (for example).

2.7 CORBA settings

To specify which corba SW and corba security settings moshell should be using, use the following values of the user variable `corba_class`.

- `corba_class=1` : connect in secure mode with the visibroker (vbjorb) software
 - `security_method=1` (requires java \geq 1.2.2) : use a host credential `host.p12`, only supported for nodes running CPP5.0 and below. The uservariable `credential` must be set accordingly, to point to the `host.p12` file. The `host.p12` file is downloaded from the PKS server or from the node.
 - `security_method=2` (requires java \geq 1.3.1) : use a stand-alone credential `sam.pbe`. The `sam.pbe` file is downloaded from the SLS server, its path and password must be given in the uservariables `sa_credential` and `sa_password`.
- `corba_class=2` (requires java \geq 1.3.1) : connect in unsecure mode with the prismtech (jacorb) SW.
- `corba_class=3` (requires java \geq 1.4.2_05) : connect in secure mode with the jacob SW, using a stand-alone credential `sam.pbe`. The `sam.pbe` file is downloaded from the SLS server, its path and password must be given in the uservariables `sa_credential` and `sa_password`.
- `corba_class=4` (requires java \geq 1.4.2_05) : connect in secure mode with the jacob SW, using a network-mode credential `ssucredentials.xml` which is automatically downloaded from SLS server. The username and password for SLS login must be specified in the uservariables `sls_username` and `sls_password`. The address of the SLS is read from the node but can also be specified in the uservariable `sls_urls`.
- `corba_class=5` (requires java \geq 1.4.2_05) : connect in secure mode with the jacob SW, using an already downloaded network-mode credential `ssucredentials.xml`. The path to the `ssucredentials.xml` file must be given in the uservariable `nm_credential`.

For more information about how to set the user variables, see Section 2.5 and `h uv`. Also check the `moshell` file for more info on each variable.

2.8 Ports used by moshell

If there is a firewall between moshell and the nodes, then the following TCP ports need to be open in the firewall:

For CPP nodes:

1. CORBA:
 - port 56834: for unsecure corba (O&M SL1)
 - port 56836: for secure corba (O&M SL2 and SL3)
2. HTTP/HTTPS: 80/443
3. SSH/SFTP: 22
4. Telnet: 23 (optional)
5. Ftp: 21 (optional). If ftp is used, an additional port range needs to be open for the data connection (21 is for control only).
6. Target monitor: TCP ports 33077 to 33087 and UDP 33078-33079 . Needed in order to monitor the trace and error log with the "mon" command.

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

7. Optional: for subscription to Corba CS/FM notifications, using the utility `runClient.sh` (-c/-a options): callback port range 49152-65535 from the node to the client. This is not needed for moshell, only for the utility `runClient.sh` -c/-a options.

For ECIM/COM nodes:

1. RCS nodes (MSRBS):

- HTTPS: 443 (Baseband) or 3443 (vRAN)
- SSH: 830 (NETCONF), 2023 (COMCLI), 4192 (COLI), 840 (NETCONF/YANG)
- SFTP: 22 (from Node), 2024 (to Node)
- TLS: 6513 (NETCONF), 9830 (COMCLI), 9831 (COLI), 9921 (FTPES), 11880 (DIA), 844 (NETCONF/YANG)
- Trace streaming from Node: TCP 5342/5343 (CPM traces), and UDP 33079 (EMCA traces)
Note: for CPM trace streaming, more ports are needed if more than one user will be streaming traces to the same workstation. Then a wider port range can be opened such as 5342 to 5362 for instance.
- Optional: the port range 10001 to 11000 may be opened from Node to Client in case exports will be done with `export_method=0` All ports to be opened in the direction Client->Node except 5342/5343 (Bidirectionnal) and 22/33079/9921 (Node->Client)

2. Pico nodes: 22 (SFTP), 9830 (COMCLI), 830 (NETCONF)

3. Other nodes: 22 (APG43L), 2024 (BSP), 830 (PGM), ...

More info in the CPI document "Node Hardening Guidelines"

Note1:

A port scanning is done by moshell at startup in order to distinguish the type of node (CPP, RCS, EPIC, CBA, etc)

If some of the ports are unavailable at the time when moshell was started then this may lead moshell to not recognise the node type correctly.

In this case it would be necessary to close and reopen the moshell session once the relevant O&M ports have become available.

Note2:

If port 4192 is unavailable at the time when running a COLI command on a RCS node for the first time in the moshell session then it will be assumed that this node does not support COLI.

In this case it would be necessary to run the command "bor" or close and reopen the moshell session once the port 4192 becomes available.

2.9 Running moshell across secure tunnels (RSG)

Please refer to instruction in the file `moshell/examples/misc/RSG_tunnels_instruction.txt`

2.10 LDAP roles needed for accessing COM nodes

When connecting to a RCS/COM node such as MSRBS with a LDAP user, the following roles are needed by the user in order for all AMOS/moshell commands to work properly:

- SystemAdministrator: in order to access the SystemFunctions MO tree and also the SFTP server of the node (needed by AMOS commands such as `pmr/pmx/pme/inv/sdi`)
- BasebandSupportExpert: in order to executed certain COLI commands (need by AMOS commands such as `dsg/inv/sdi/mon...`)
- XXXX_ApplicationAdministrator (where XXX is ENB, GNB, etc)

3 Command syntax, including Regular Expressions

3.1 How MOs are Identified

MOs can be identified using the RDN, LDN or FDN.

3.1.1 RDN - Relative Distinguished Name

This is used to identify an MO in relation to its nearest parent in the MO tree.

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

The RDN contains MO Class (also called MO Type), the equal sign, and MO identity. Example:

```
AtmPort=MS-24-1
```

AtmPort is the *MO Class*, **MS-24-1** is the *identity*.

3.1.2 LDN - Local Distinguished Name

This is used to uniquely identify an MO within a node.

The LDN shows the hierarchy above the MO, within the Managed Element's MO tree. Example:

```
ManagedElement=1,TransportNetwork=1,AtmPort=MS-24-1
```

3.1.3 FDN - Full Distinguished Name

This is used to uniquely identify an MO within a network (used by RANOS/CNOSS/OSS-RC). Example:

```
SubNetwork=AUS,SubNetwork=H2RG_0201,MeContext=St_Leonards_Station_2065010,ManagedElement=1,TransportNetwork=1,AtmPort=MS-24-1
```

3.2 How to address the MOs in MO-related commands

The first argument in the MO-related commands is usually used to specify the MOs that should be used by the command.

There are currently six different ways to specify the MO(s):

1. all

All loaded MOs will be affected. Example:

a) `get all userlabel` to get attribute *UserLabel* on all MOs

Note: instead of `all`, it is also possible a regex wildcard such as `.` or `*`. This has the same effect.

2. Proxy ID(s)

All MO(s) with the given proxy id(s) will be operated upon.

To specify several MO proxies, there are two ways:

- Specify each Proxy ID with a space in between. Example:

a) `pr 0 2 5` to print the MO proxies 0, 2 and 5.

- Give a range of Proxy IDs. Examples:

a) `pr 4-10` prints MO proxies from 4 to 10.

b) `pr 10-4` prints all MO proxies from 10 down to 4 (reverse order, useful for deleting MOs).

c) `acc 10-20 restart` calls the action **restart** on MOs with proxy 10 up to 20.

Note: proxy ranges and individual proxy ids can be mixed on the same line.

Example: `pr 0 2 3-5 8 10-12`

3. Link handler (for PluginUnit and Spm MOs only!). Examples:

a) `acc 001400 restart` - to restart the MO **Subrack=MS,Slot=14,PlugInUnit=1**.

b) `bl 001900/sp0.lnh` - to lock the first SPM on the SPB in slot 19 with LDN:

Subrack=MS,Slot=19,PlugInUnit=1,Spu=1,Spm=1. Note that MOs start counting from 1 and the link handlers start from 0!

4. MO Group

MO Groups are user defined groups of MOs. All MO(s) belonging to the given MO group will be operated upon.

To create a MO group, see command description for `ma/lma` in Section 4.1.10. MO groups can also be created with the commands `hget/lhget`, `lk/llk`, `st/lst`, `pdiff/lpdiff`.

Note: In RNC, running the `bo` command will automatically create a number of MO groups containing the `cc/dc/pdr` device MOs for each module.

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

5. Board Group

MOs (**PlugInUnit** or **Spm**) mapped onto the boards belonging to the given board group will be operated upon.

Example 1:

- `baw sccp sccp` All boards with the swallocation matching "sccp" will go into the board group "sccp"
- `b1 sccp` All **PlugInUnit** or **Spm** MOs connected to boards of this board group will be locked

Example 2: in RNC, using the default board groups created after running the `bo` command:

- `acc mod10 restart`
- `pr dc10`
- `acc dc10 restart` the board group dc10 is mapped onto the **Spm** MOs
- `b1 dc10dev` in this case we are using the MO group containing the **Device** MOs, see above

6. MO-Filter (regular expression)

MO(s) whose LDN/RDN match the *regular expression pattern* will be affected.

If the command starts with `/` then the pattern will match against the LDN.

If the command doesn't start with `/`, then the pattern will match against the RDN.

If the command doesn't start with `/`, and the filter contains no commas, then the pattern will match against the RDN.

If the command doesn't start with `/`, and the filter contains commas, then the pattern will match against the LDN but will not include the children. (Note: this particular syntax is not supported in multimode).

Examples:

a) `pr ms-24-1`

```
TransportNetwork=1,AtmPort=MS-24-1
```

b) `lpr ms-24-1`

```
TransportNetwork=1,AtmPort=MS-24-1
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp1
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp1,VpcTp=1
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp1,VpcTp=1,VclTp=vc32
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp1,VpcTp=1,VclTp=vc33
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp1,VpcTp=1,VclTp=vc337
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp1,VpcTp=1,VclTp=vc332
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2,VpcTp=1
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2,VpcTp=1,VclTp=vc34
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2,VpcTp=1,VclTp=vc35
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2,VpcTp=1,VclTp=vc40
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2,VpcTp=1,VclTp=vc64
```

c) `pr ms,slot=5,plug`

```
Equipment=1,Subrack=MS,PlugInUnit=1
```

d) `lpr ms,slot=5,plug`

```
Equipment=1,Subrack=MS,PlugInUnit=1
Equipment=1,Subrack=MS,PlugInUnit=1,Program=basic
Equipment=1,Subrack=MS,PlugInUnit=1,Program=nss
Equipment=1,Subrack=MS,PlugInUnit=1,Programs=spas
....
```

When using the *MO-Filter*, it is a good idea to test the pattern with `pr/lpr` command before issuing a `get/set/acc/cr/del` command, in order to see which MOs will be matched by the pattern.

Sometimes, a second or third argument can be given, which is usually a string matching the *attribute* or *attribute value* that you want to display.

3.3 Regular Expressions

Note: MOSHELL pattern matching is NOT case sensitive

The search string that is used in the filters is a Unix Regular Expression (like the patterns used in the `grep -E` command). Therefore, special meta-characters such as `.` `*` `[]` `^` `$` can be used.

Short description of some meta-characters:

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

- "." - any single character
- "*" - 0 or more occurrences of the previous character
- [] - matches a character or range of characters inside the brackets
- [^] - NOT matching a character or range of characters inside the brackets
- | - OR
- ^ - beginning of string
- \$ - end of string
- ! - negation
- % - reverse order

Examples of using meta-characters:

- `a*` means a or aa or aaa, etc.
- `.*` is like a wildcard as it matches 0 or more occurrences of any character
- `[a-z]` matches all letters from a to z
- `[abe]` matches letters a,b, and e
- `[^3]` matches any character but not 3
- `3|5|6` matches 3 or 5 or 6
- `^a.*4$` matches a string beginning with a and finishing with 4, with any character in the middle

Regular expressions can also be grouped together using brackets, e.g:

- `cell(11|23|45)` matches cell11 or cell23 or cell45

Examples of using regular expressions in the filters:

1. `lpr ms-24-1.*vp2`

```
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2,VpcTp=1
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2,VpcTp=1,VclTp=vc34
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2,VpcTp=1,VclTp=vc35
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2,VpcTp=1,VclTp=vc40
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2,VpcTp=1,VclTp=vc64
```

2. `lpr %ms-24-1.*vp2`

```
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2,VpcTp=1,VclTp=vc64
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2,VpcTp=1,VclTp=vc40
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2,VpcTp=1,VclTp=vc35
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2,VpcTp=1,VclTp=vc34
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2,VpcTp=1
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2
```

3. `lpr !loadmodule|program`

- All MOs except those matching **loadmodule** or **program** will be printed

4. `lpr 20.*os`

```
Equipment=1,Subrack=1,Slot=20,PlugInUnit=1,Etm4=1,Os155PhysPathTerm=1
Equipment=1,Subrack=1,Slot=20,PlugInUnit=1,Etm4=1,Os155PhysPathTerm=2
```

5. `pr cc[1-4]`

```
TransportNetwork=1,AtmCrossConnection=AtmCC1
TransportNetwork=1,AtmCrossConnection=AtmCC2
TransportNetwork=1,AtmCrossConnection=AtmCC3
TransportNetwork=1,AtmCrossConnection=AtmCC4
```

6. `pr cc[135]`

```
TransportNetwork=1,AtmCrossConnection=AtmCC1
TransportNetwork=1,AtmCrossConnection=AtmCC3
TransportNetwork=1,AtmCrossConnection=AtmCC5
```

7. `lpr =6.*prog.*=1`

```
Equipment=1,Subrack=1,Slot=6,PlugInUnit=1,Program=15
Equipment=1,Subrack=1,Slot=6,PlugInUnit=1,Program=1
Equipment=1,Subrack=1,Slot=6,PlugInUnit=1,Program=14
Equipment=1,Subrack=1,Slot=6,PlugInUnit=1,Program=13
Equipment=1,Subrack=1,Slot=6,PlugInUnit=1,Program=12
```

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

```
Equipment=1,Subrack=1,Slot=6,PlugInUnit=1,Program=11
Equipment=1,Subrack=1,Slot=6,PlugInUnit=1,Program=10
Equipment=1,Subrack=1,Slot=6,PlugInUnit=1,Program=19
Equipment=1,Subrack=1,Slot=6,PlugInUnit=1,Program=18
Equipment=1,Subrack=1,Slot=6,PlugInUnit=1,Program=17
Equipment=1,Subrack=1,Slot=6,PlugInUnit=1,Program=16
```

8. `lpr =6.*prog.*=1$`

```
Equipment=1,Subrack=1,Slot=6,PlugInUnit=1,Program=1
```

9. `lpr ms-24-1`

```
TransportNetwork=1,AtmPort=MS-24-1
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vpl
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vpl,VpcTp=1
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vpl,VpcTp=1,VclTp=vc32
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vpl,VpcTp=1,VclTp=vc33
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vpl,VpcTp=1,VclTp=vc337
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vpl,VpcTp=1,VclTp=vc332
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2,VpcTp=1
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2,VpcTp=1,VclTp=vc34
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2,VpcTp=1,VclTp=vc35
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2,VpcTp=1,VclTp=vc40
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2,VpcTp=1,VclTp=vc64
```

10. `lpr ms-24-1.*=vc[^3]`

```
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2,VpcTp=1,VclTp=vc40
TransportNetwork=1,AtmPort=MS-24-1,VplTp=vp2,VpcTp=1,VclTp=vc64
```

3.4 How to specify attribute values in set/cr/acc commands

1. For attributes of type **Struct**, use the following syntax: `attr1=val1[,attr2=val2[,attr3=val3]]...`

Example:

```
set sid sib11 sib11repperiod=128
set mtp3bspitu sppriority prioslt=2
set mtp3bspitu sppriority prioslt=2,prioco=2
```

2. For attributes of type **MoRef**, just type the MO LDN (without **ManagedElement=1**). E.g.:

```
lset AtmPort=1221,VplTp=vpl atmTrafficDescriptor
transportnetwork=1,atmtrafficdescriptor=C1P4500
```

It is also possible to skip the first parent (eg **TransportNetwork**, **SwManagement**, etc). E.g.:

```
cr rncfunction=1,utranCell=30451,utranrelation=30451to305212
Attribute 1 of 1, utranCellref (moRef:UtranCell): utranCell=30521
```

3. For attributes of type **array of MoRefs**, separate each element of the array with spaces. Eg:

```
set jvm admclasspath loadmodule=oms loadmodule=vbjorb ...

acc aal2pathdistributionunit=1 addPath
Parameter 1 of 1, aal2PathVccTpId (sequence-moRef-Aal2PathVccTp):
aal2pathvcctp=csa aal2pathvcctp=csb
```

4. For attributes of type **array of Struct**, separate each element of the array with semicolons. Eg:

```
set rncfunction aliasPlmnIdentities
mcc=300,mnc=23,mnclength=2;mcc=345,mnc=32,mnclength=2;mcc=208,mnc=123,mnclength=3
```

5. For attributes of type array of integer/long/float/string/boolean, separate each element of the array with commas or spaces. Eg:

```
set antfeederCable=6 ulattenuation 10,10,10,10,10,10,10,10,10
set antfeederCable=6 ulattenuation 10 10 10 10 10 10 10 10 10

set jvm options -Xms65000k,-Dhttp.root=/c/public_html,
-Dse.ericsson.security.PropertyFileLocation=/c/java/SecurityManagement.prp

set cell=3041 ActiveOverlaidCDMAChannelList true,true,false,true
set cell=3041 ActiveOverlaidCDMAChannelList true true false true

acc managedelementdata addDhcpServerAddress
Parameter 1 of 1, ipAddressArray (sequence-string): 10.1.1.3,10.1.1.4
```

6. For attributes of type array of integer, it is also possible to specify ranges of values.

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

Eg, in the command below, the attribute will be set to 1,2,3,4,5,23,24,25,26

```
set IpInterface=1,DscpGroup=1 dscpValues 1-5,23-26
```

7. To input an empty value:

- in `set` command, just leave the value field blank. Eg:

```
set 0 userlabel
set reliableprogramunit admpassiveslot
```

- in `cr` command, type `null` or `d`. This is only supported for non-mandatory (restricted) attributes, because mandatory attributes must be given a value.
- in `acc` command, type `null`. This is only supported for parameters of type `MoRef` or `String`.

8. Attributes of type `EcimPassword`:

These attributes are of type `struct` and are usually entered as: `cleartext=true,password=mysecret`

To avoid entering the password in clear text it is possible to encode it first with the `encpw` command and then enter this string in the `password` field, eg: `cleartext=true,password=ENC@?xyza`

Alternatively for the `set` command it is possible to use the `p` option (`setp`) which prompts the user to enter only the password part of the `EcimPassword` struct, and no echoing is done on the screen so the password can be entered without encoding.

3.5 Moshell command line

The command line uses the Readline library from bash. Here are some of the supported function keys:

- **right arrow or Ctrl-f** - move forward one character
- **left arrow or Ctrl-b** - move backward one character
- **up arrow** - previous command in history buffer
- **down arrow** - next command in history buffer
- **backspace** - delete one character backward
- **Ctrl-d or ** - delete one character forward
- **Ctrl-a or <home>** - go to beginning of line
- **Ctrl-e or <end>** - go to end of line
- **Ctrl-u** - erase all characters backward
- **Ctrl-k** - erase all characters forward
- **Alt-f** - move forward one word
- **Alt-b** - move backward one word
- **select or select + ctrl-<insert>** - copy to clipboard
- **<insert> or shift-<insert>** - paste from clipboard

Note about command history: if you type the beginning of a command and then use the up/down arrow key, you will see all previous commands starting with this string

3.6 Piping

Some commands support piping, e.g. All OSE shell commands, `lh`, `tg`, `str`, etc.

This is usually indicated in the menu and the help for that command. Some examples are:

```
te log read | grep ERROR
lh mp te log read | grep ERROR
str | grep cell=30456
```

For other commands that don't support piping (like `MO` commands), the workaround is to save the output to a logfile then run the unix command on that logfile by using the `l` or `!` command. Example:

```
l+ #open the logfile, an arbitrary name will be given
```


Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

```
prod loadmodule      #run the command
l-                  #close the logfile
l sort $logfile      #run unix command sort on the logfile.
l grep -i basic $logfile
```

Note: `$logfile` is automatically set by MoShell to contain the name of the latest log file created.

4 Command descriptions

Here all the commands and their syntax which are possible using Moshell are supported. Each of the OSE shell commands are not mentioned specifically, but it is possible to run all of them through Moshell.

4.1 Basic MO commands

4.1.1 `mom[abcdfloprtuxsi] [<moclass/struct/enum>] [<attribute/action>] [<attr-type>] [<attr-flags>] [<description>]`

Print description of *MO Classes, CM/FM Attributes, Actions, Enumerations and Structures*.

Regular expressions can be used in the various filters. There are five levels of filtering, as shown in the command syntax.

Options:

- `a` : show only the definitions relating to application MOs
- `b` : shows the default attribute values.
- `c` : show all the MO classes specified in the filter as well as their children/grandchildren/etc classes.
- `d` : gives a shorter printout, without the description part.
- `f` : shows the attribute flags (only applies when combined with options "b", "r", "l")
- `i` : only show the EricssonOnly attributes
- `l` : shows the attribute value lengths.
- `p` : show only the definitions relating to platform MOs (CPP)
- `r` : shows the valid attribute value range.
- `x` : show unidirectional and bidirectional MO relationships
- `t` : show MO containment relationships and cardinality. The command `momt` shows three tables: first table with all valid LDNs, second table with parent MO(s), and third with children MO(s). The first argument can be used to show only MO classes matching the filter. The options `o`, `u`, `l` (`momto`/`momtu`/`momtl`) can be used to show only certain specific tables: `momtl` for the LDN table, `momto` for the parent table (MOs over), and `momtu` for the children table (MOs under). The option `s` is used to show the `systemCreated` flag in the LDN table and parent table (eg: `momts` / `momtls`).

Some of the options can be combined, see examples below.

After execution of the MOM command, two scripting variables are automatically created:

- `$moclass_filer` : contains a regular expression matching all MO classes that were printed by the command
- `$attrib_filter` : contains a regular expression matching all attributes that were printed by the command

These variables can then be used in the "get" command to read attributes matching certain MOM conditions based on the attribute name, data type, flag, or description text. In `kget` command, it is possible to specify the MOM conditions directly from the `kget` command arguments.

Examples:

1. `momt` - View the whole MO tree
2. `momt atmp` - View all possible parents and children of the **AtmPort** MO
3. `mom atmp` - View a description of the **AtmPort** MO
4. `momcd atmp` - List all MO classes under the **AtmPort** MO
5. `momc atmp` - View a description of all MO classes under the **AtmPort** MO
6. `mom vcl` - View a description of the MO class **VclTp**
7. `mom vcl .` - View a description of all attributes of MO class **VclTp**

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

8. `momdi . . . !readonly` - List all EricssonOnly attributes that are not readOnly
9. `momd . restart` - List all attributes and actions matching the word *restart*
10. `momd . . struct` - List all attributes of type struct and/or all actions containing struct parameters
11. `momd . . . restricted` - List all attributes that have the restricted flag
12. `momd utrancell . . !restricted|readonly` - List all utrancell attributes that do not have the restricted or readonly flag
13. `momd license` - List all MOs, attributes and actions whose description contains the word *license*
14. `mom license` - View the description of all MOs, attributes and actions whose description contains the word *license*
15. `momd restart .` - List all struct or enumerates matching the word *restart*
16. `mom restart .` - View the description of all struct or enumerates matching the word *restart*
17. `momd . . enumref:admst` - List all attributes of type *enumRef:AdmState*
18. `mom adminproductda .` - View a description of all struct members contained in struct *AdminProductData*
19. `momd . . sequence:moref restricted` - List all attributes of type *sequence:moRef* who have a flag *restricted*
20. `momb utrancell` - List the default values for all attributes in the MO class *UtranCell*
21. `mombf utrancell . . !restricted` - List the default values for all UtranCell attributes that do not have the flag *restricted*
22. `mombr . power|pwr` - List the default values and valid ranges for all attributes that match the word *power* or *pwr*
23. `momx` - Show the relationships between MO classes
24. `momx iublink` - Show the relationships to and from *IubLink*
25. `momx iublink.*utrancell|utrancell.*iublink` - Show the relationships between *IubLink* and *UtranCell*
26. `momx reservedby` - Show the relationships connected via *reservedBy* attribute
27. `mom . . ^moref, then get . $attrib_filter` - Print attribute values for all attributes of data type *moRef*

4.1.2 It <motype-filter>|root|all

Load MO tree and build proxy table - COM Nodes.

Arguments:

- `root`: clear the proxy table and allocate a proxy for the root MO (ManagedElement)
- `all`: clear the proxy table, then load the whole MO tree and build a proxy table with all MO instances.
- `<motype-filter>`: load MO instances of MO-type matching the filter. For instance:
 - `lt cell` : load all MOs of type matching the string "cell", this will usually be the MOs such as "EUTranCellFDD", "NodeBLocalCell", etc
 - `clt cell` : conditionally load all MOs of type matching the string "cell". Loading is only performed if no MOs of this type are already loaded.
 - `lt ^eutrancell|termpoint` : load MO instances of type matching the string "eutrancell" or "termpoint"

The pattern in `motype-filter` is a regular expression, more information can be found with command "h syntax" and "h pr". The argument `root/all` clears the proxy table, whereas `lt <motype-filter>` doesn't, so the MO LDNs get appended to the existing table.

If the same MO type is loaded several times, only the latest fetched instance is kept. Previously fetched instances of that MO type are deleted from the internal table.

4.1.3 It/lc <motype-filter>|root|all

Load MO tree and build proxy table - YANG Nodes.

Arguments:

- `root`: clear the proxy table and allocate a proxy for the root MO (ManagedElement)
- `all`: clear the proxy table, then load the whole MO tree and build a proxy table with all MO instances.

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

- `<motype-filter>`: load MO instances of MO-type matching the filter. For instance:
 - `lt cell` : load all MOs of type matching the string "cell", this will usually be the MOs such as "EUTRANCellFDD", "NodeBLocalCell", etc
 - `lt ^eutrancell|termpoint` : load MO instances of type matching the string "eutrancell" or "termpoint"
 - `ltc gnbdufunction` : load all MOs of type matching the string "gnbdufunction" and their children/grandchildren/etc

The pattern in `motype-filter` is a regular expression, more information can be found with command `h syntax` and `h pr`. The argument `root/all` clears the proxy table, whereas `lt <motype-filter>` doesn't, so the MO LDNs get appended to the existing table.

If the same MO type is loaded several times, only the latest fetched instance is kept. Previously fetched instances of that MO type are deleted from the internal table.

4.1.4 lcc <moGroup>|<moFilter>|<proxy(s)>

Load MO tree and build proxy table - COM Nodes

The "lcc" command is for loading the LDNs of the children MOs lying under one or more MO instances.

The parameters of the command are:

- `<proxy(s)>`: list children of one or several MO's given their proxy id. For instance: `lcc 5` : load all levels of children for the MO with proxy id 5
- `<moFilter>`: list children of all MO's whose RDN match the pattern. For instance: `lcc equipment=1` : load all levels of children under the MOs whose RDN match "equipment=1"

The pattern in `mo-filter` is a regular expression, more information can be found with command `h syntax` and `h pr`.

4.1.5 lt/clt/ltc[1-9] <motype-filter>|root|all [<attribute==value> AND/OR <attribute==value>]

Load MO tree (full or partial) and build proxy table - CPP Nodes.

`lt` stands for *Load MO Types*, `clt` stands for *Conditional Load mo Types*, `ltc` stands for *Load MO Types and their Children*. The numeric option in `ltc` is for specifying the number of levels of children to load. Without the option, all levels of children are loaded.

This command queries the node to find out which MOs it contains and creates a table with the MO LDNs and a proxy number.

The first argument of the `lt/clt/ltc` command can be:

- `root` clear the proxy table and allocate a proxy for the root MO (ManagedElement)
- `all` clear the proxy table, then load the whole MO tree and build a proxy table with all MO instances.
- `all!<motype-filter>` clear the proxy table, then build a proxy table with all MO's except some MO classes.
- `<motype-filter>` get a proxy for all MO types matching the specified pattern.

Examples:

1. `lt atmpor` - load all MOs of type matching the string "atmpor", this will usually be the **AtmPort** MOs
2. `clt atmpor` - conditionally load all MOs of type matching the string "atmpor". Loading only performed if no MOs of this type are already loaded.
3. `ltc equipm` - load the Equipment MO and all its children (all the way down)
4. `ltc1 equipm` - load the Equipment MO and only one level of children
5. `ltc2 transp` - load the Transport MO and two level of children
6. `lt ^utrancell|fach|rach|pch` - load all utran cells, fach, rach, pch MOs
7. `lt iub` - load all iublinks
8. `lt all!relation` - load all MOs except the utranrelation/gsmrelation MOs.

The pattern in `motype-filter` is a regular expression, more information can be found with command `h syntax` and `h pr`

The argument `root/all` clears the proxy table, whereas `lt <motype-filter>` doesn't, so the MO LDNs get appended to the existing table.

If the same MO type is loaded several times, only the latest fetched instance is kept. Previously fetched instances of that MO type are deleted from the internal table.

The second argument (optional) is a filter constraint for the attribute value. Example:

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

1. `lt utrancell operationalState==0` - load proxys for all disabled cells
2. `lt utrancell primaryCpichPower==270` - load proxys for all cells that have pichpower=270
3. `lt all operationalState==0 OR administrativeState==0` - load proxys for all MOs in the node that have opstate 0 or admstate 0.
4. `ltc rncfunction operationalState==0` - load proxys for all MOs under RncFunction that have opstate 0.

Note: This type of search is very hard for the node if it has to search through a large number of MOs (ie several thousand).

For more information about Filter constraint, refer to: MO Client Interface User Guide 1553-CXA 104 210 (internal Ericsson document).

4.1.6 `lc/lcc[1-9] <moGroup>|<moFilter>|<proxy(s)>|all`

Load MO tree (full or partial) and build proxy table - CPP Nodes.

The `lc` command is for loading the LDNs of the children MOs lying under an MO or group of MOs. `lc` on its own or combined with the numeric option "1" will only load the direct children. With the numeric options 2 to 9 it is possible to specify the number of levels of children to be loaded. The "c" option (`lcc` command) is for loading all possible levels of children under the MO.

The parameters of the command are:

- *all* clear the proxy table, then load the whole MO tree and build a proxy table with all MO instances.
- *<proxy(s)>* - load children of one or several MO's given their proxy id. For example:
 - `lc 0` load the direct children of the ManagedElement MO (only one level of children)
 - `lc2 0` load two levels of children under ManagedElement MO
 - `lcc 0` load all levels of children of the ManagedElement MO (same as `lc all` or `lt all`).
 - `lc 5 6 7` load children of proxys 5, 6, and 7.
- *<moFilter>* - loads children of all MOs whose RDN match the pattern. For example:
 - `lc3 transportnetwork=1` load three levels of children under TransportNetwork MO
 - `lc cell=3002` loads direct children for MOs whose RDN match **cell=3002**
 - `lcc ms-24-1` loads children of all MOs whose RDN match **ms-24-1**

The pattern in *mo-filter* is a regular expression, more information can be found with command `h syntax` and `h pr`.

4.1.7 `ld[c] <ldn>`

Load one MO instance and (optionally) the MO tree below it

`ld` stands for *Load LDN*. This command loads a proxy for an MO, given its LDN. The LDN doesn't need to contain *ManagedElement=1*, this is assumed.

The MO types are not case sensitive but the MO-ID is.

With the `c` option, the subtree below the MO is also loaded.

Examples:

- `ld transportnetwork=1,atmport=MS-6-1,vpltp=vp1,vpctp=1,vcltp=36` - load the MO instance that has this LDN
- `ldc equipment=1` - load the MO with LDN "Equipment=1" as well as the MO tree below it.

4.1.8 `lu/llu <moGroup>|<moFilter>|<proxy(s)>`

Unload MOs from MO tree.

The purpose is to reduce the size of the proxy table by unloading unwanted MOs. This is useful on large nodes with > 50,000 MOs. Memory usage on the workstation will be reduced and MO commands will be faster. The typical case is to unload all relation MOs in the RNC (UtranRelation and GsmRelation) which are very numerous but not used in most commands.

Example:

- `lt all`

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

- `lu relation`

4.1.9 `pr[s][m]/lpr[s][m] [<moGroup>|<moFilter>|<proxy(s)>] [<mimName>]`

Print MO LDNs and proxy ids for all or part of the MO tree currently loaded in moshell.

Options:

- `s` (silent) : to print only the total number of MOs matched in each MO class.
- `m` (mim) : to print the mimName of each MO instance. Only applicable for COM/ECIM nodes.

Examples:

- `pr` - print all MOs
- `pr 0-1000` - prints the MOs with proxy id 0 to 1000
- `lpr subrack=ms` - print all MOs whose LDN match subrack=ms. This will print the MO Subrack=MS as well as all its children.
- `pr !utranrel` - print all MOs except those with an RDN matching *utranrel*

For further information see Section 3 or `h syntax`.

Note: The `pr` command is useful to test patterns used in mo-filters. For instance, some patterns will match more MOs than expected, which will result in executing a command on some unwanted MO's. Therefore, it is good to first try the pattern on the `pr/lpr` command, then do it "for real" on a command that actually communicates with the node. The `pr/lpr` command also shows the total number of MOs matching the pattern.

4.1.10 `ma[i]/lma[i] <moGroup> <moGroup>|<moFilter>|<proxy(s)>|all [<attribute-filter>] [<value-filter>]`

Add MO(s) to an MO group.

The first argument (mandatory) indicates the name of the MO-Group.

The second argument (mandatory) indicates the Proxy Id's or MO-Filter of the MOs to match.

If no further arguments are given then the MOs whose RDN/LDN match the MO-filter (or who have the corresponding proxy) will be put in the MO-Group.

If further arguments are given then a `get` or `pget` command is performed using the second/third/(fourth) argument of the `ma/lma` command.

If option "i" was given (`mai/lmai`) then the command "geti" is used instead of "get".

The third argument will be a string to match the attribute and the fourth (if it's used) will match the value.

If the attribute is of any other type than MoRef, then the MO(s) whose attribute match the fourth argument will be put in the group.

If the attribute is of type MoRef, then the MO(s) contained in the attribute is put in the group (except if there is a fourth argument).

Refer to the following examples:

- `ma test atmport.*24-1` - all MOs whose RDN match **atmport.*24-1** are put in the group *test*
- `lma test atmport.*24-1` - all MOs whose LDN match **atmport.*24-1** are put in the group *test*
- `ma test atmport operationalst 0` - all MOs whose RDN match **atmport** and who have *operationalState* matching "0" will be put in the group *test*
- `ma test atmport physpaththerm` - all MOs who are referenced through the attribute **physpaththermId** of the MOs matching **atmport** will be put in the group *test* (since **physpaththermId** is an attribute of type MoRef)
- `lma test subrack=ms,slot=10,program loadmodule` - all loadmodule MOs connected to program MOs running on slot 10 in main subrack will be put in the group *test* (since **loadmodule** is an attribute of type MoRef)
- `ma test atmport physpaththerm slot=23` - all atmports whose physpaththerm reference matches **slot=23** will be put in the group *test*
- `ma test reliableprogram admactiveslot slot=10` - all reliableprograms that are on slot 10 will be put in the group *test*
- `ma test vcltp pmrec 0` - all vcltps with 0 pmreceivedcells are put in the group
- `ma test 34,58,42` - include MO instances with proxy id 34, 42, and 58 in the group
- `mai test sectorcarrier= noOfUsedTxAntennas ^1$` - include all sectorcarriers that have exactly one antenna

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

Two-step example: To put all unlocked-disabled MOs in a group in order to lock them:

```
ma test all operational 0
ma test1 test administ 1
bl test1
```

To put all cells belonging to module 3 in a group in order to lock them

```
ma iubmod3 iublink module =3$
ma cellmod3 iubmod3 reservedby
bl cellmod3
```

To put all vcltps that have 0 receivedcells and more than 0 transmitted cells in a group in order to find out which upper layers are affected

```
ma faultyvcltp vcltp pmrec ^0
mr faultyvcltp vcltp pmtrans ^[^0]
lk faultyvcltp
```

Note: it is also possible to create MO groups with the commands `hget/lhget`, `st/lst`, `lk/lk`, and `pdiff/lpdiff`.

4.1.11 `mr[i]/lmr[i] <moGroup> <moGroup>|<moFilter>|<proxy(s)>|all [<attribute-filter>] [<value-filter>]`

Remove an MO group or remove MOs from an MO group (MOs will NOT be deleted, only the group).

Exactly the same syntax as `ma` described in Section 4.1.10 except that the MOs matching will be removed from the MO-Group instead of added.

4.1.12 `mp`

Print all defined MO groups. See `ma` command in Section 4.1.10 for more info about MO groups.

Note: To print the contents of a group, use the `pr <mo-group>` command.

4.1.13 `get[m][i]/lget[m][i] [<moGroup>|<moFilter>|<proxy(s)>|all] [<attribute-filter>|all] [<value-filter>]`

Read CM/FM attribute(s) from MO(s).

Options:

- `m`: for reading the attributes via MibManager instead of Corba. Only applicable on CPP nodes with C15.1 or higher.
- `i`: to print internalmom attributes. Only applicable to MSRBS (DUS Gen2). Please make sure to activate the feature "Hidden Parameter Access" (CXC4012188/FAJ1214785) on the node for faster printout.

Note: to read PM attributes, use `pget/lpget` (see Section 4.4.3).

Examples:

1. Get all attributes from all MOs except those whose RDN matches *utranrel* or *iub*
 - `get !(utranrel|iub)`
2. Get all attributes from MOs whose proxies range from 10 to 30
 - `get 10-30`
3. From all MOs, get productdata containing the string 0843 (can be useful to find out which MO's are related to a certain loadmodule)
 - `get all product 0843`
4. From all Utrancells, get sintersearch attribute different from 10
 - `get utranrel sinter !10`
5. Get traffic descriptors for all VclTp(s)
 - `get vc trafficdes`
6. Get VcpTp(s) used by all cross-connections

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

- `get cross vc`

7. Get piutype for all MO's under "Equipment"

- `lget equip piutype`

8. get attenuation values for all cables (in RBS)

- `get cable atten`

9. get all attributes in nodesynch MO, belonging to site 1164 (in RNC)

- `lget 1164,nodesy`

10. get all attributes in MO's under "RadioNetwork" matching pwr or power or sir

- `lget radion p.*w.*r|sir`

11. view which cells are connected to which iub's (in RNC)

- `get cell iub`

12. get all attributes from nodebfunction MO, except those matching "overload"

- `get nodebfunc !overload`

13. get the attribute loadCtrlPrioOfMta via the internalmomread/testmomdump command

- `geti . loadCtrlPrioOfMta`

Important information:

1. when doing a `get <mo(s)>` or `get <mo(s)> all`, one CORBA request is sent for each MO, asking for all attributes of that MO.
2. when doing a `get <mo(s)> <attribute(s)>`, a CORBA request is sent for up to 100 MOs at a time, asking for the specified attributes of those MOs.

The implications of this is that it is faster but:

1. if one or more attributes cannot be read due to some exception (eg: fRO not accessible), then all attributes will return the same exception, even if they can be read.
2. if one or more MOs contain one or more attributes that cannot be read, then all MOs within that CORBA request will return the same exception even if they can be read.

The workaround for the first problem is to find out which attribute is causing the problem. The command `sget/lsgget` can be used for this. The `sget` command reads each attribute one by one. The attribute(s) that is/are causing the exception(s) will then be easy to spot.

It is then possible to use the standard "get" command with with the negative filter (!) to exclude the "faulty" attribute.

- `get nodebfunction !overload` - all attributes of the nodebfunction MO except those matching "overload" will be read.
- `pget utrancell !pmnoofrrc` - all pm attributes of the utrancell MO except those matching "pmnoofrrc" will be read.

The workaround for the second problem is to lower the speed of reading so that only one MO instead of 100 is read per CORBA request.

This is done using the `speed` command.

Example: `st all` - one MO is returning an exception which means that up to 100 MOs cannot be read. Instead do:

```
speed 1
st all
speed 100
```

The command will be slower but the exception will only affect the MO(s) that have it and not the "healthy" ones.

The `speed` command affects `get`, `pget`, `kget`, `prod`, and `st` commands.

By default, `speed` is set to 100, which means that up to 100 MOs share the same CORBA request.

By running the command `speed 1`, the exception will not affect the other MOs. However the speed will be slower. It is possible to use a value from 1 to 200 to define the speed. It is recommended to not use a speed higher than 100 since this takes more memory from the node.

Type `speed` on its own to see the current speed.

Scripting and variable assignment with get

It is possible to store the output into a variable

Prepared (also subject responsible, if other) EAB Finn Magnusson		No. 1553-CXC1328930		
Document responsible/Approved EAB Finn Magnusson	Checked	Date 2022-03-05	Rev. EA	File moshellUserGuide.tex

Example:

1. Store one value into a variable
 - `get utrancell pich > $pich`
2. Store many values into an array
 - ```
for $mo in utrancellgroup
 $mordn = rdn($mo)
 get $mo pich > $pichTable[$mordn]
done
```

Refer to the Section 6 (Scripting Chapter) for more information.

#### 4.1.14 `hget[c][m][i]/lhget[c][m][i] <moGroup>|<moFilter>|<proxy(s)> [<attribute-filter>] [<value1-filter>] [<value2-filter>] [<value3-filter>] etc...`

Read CM/FM attribute(s) from MO(s), print horizontally one line per MO (instead of one line per attribute).

##### Options:

- `c`: display the output in CSV format for easier export to excel (for instance).
- `m`: print all MOs in a single table instead of separate tables per MO class
- `i`: to print internalmom attributes, similar as "geti" but horizontally. Only applicable to MSRBS (DUS Gen2). Please make sure to activate the feature "Hidden Parameter Access" (CXC4012188/FAJ1214785) on the node for faster printout.

Example:

- `hget reliableprogramunit slot|operational` print the RPU attributes `admActiveSlot`, `admPassiveSlot` and `operationalMode`
- `hget reliableprogramunit slot|operational slot=10 . ^2` print all RPUs that are defined on slot10 (active), any slot for passive, and 2 for the operationalmode
- `hget reliableprogramunit slot|operational !slot=10 . !^1` print all RPUs that are not defined on slot10 (active), any slot for passive, and operationalmode is not equal to 1
- `hget loadmodule type|productdata` print the attributes `loaderType` and `productData` on all LoadModule MOs. Note that `productData` is a struct containing 5 members so the `productData` attribute will take up 5 columns
- `hget loadmodule type|productdata@name` only print the attribute `loaderType` and the structmember `productData:productName` passive, and `operationalmode` is not equal to 1
- `hgetm port state` print all attributes matching the word "state" on all MOs matching the word "port" and display all lines in one single table instead of a separate table per MO class.

For "slow" `hget`, use "shget/lshget": reads only one attribute at a time.

#### 4.1.15 `kget[m]/lkget[m] [<moGroup>|<moFilter>|<proxy(s)>] [<attribute-filter>] [<attribute-type>] [<attribute-flag>] [<attribute-description>]`

Display CM/FM attributes in exportable printout format.

Same as `get/lget`, but with a different output format to allow import of the dump into external tools like MCOM, CCT, ETRAN.

The `m` option is for reading the attributes via MibManager instead of Corba. Only applicable on CPP nodes with C15.1 or higher. To collect a MO dump via MibManager, set the uservariable `mibmgr_threshold` with `uv` command. Refer to info in the file `moshell/moshell`.

For "slow" `kget`, use "skget/lskget": reads one attribute at a time.

The 2nd to 5th arguments have the same meaning as the arguments used in the "mom" command.

##### Examples:

- `kget` : print all MO attributes
- `kget !relation=` : print all attributes except from MOs with RDN matching "relation="
- `kget . . moref` : print all attributes of data type matching "moref"
- `kget . . . ericsson` : print all attributes with flag matching "ericsson"
- `kget . . . . dbm` : print all attributes with description matching "dbm"



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

#### 4.1.16 fro/lfro[m] <moGroup>|<moFilter>|<proxy(s)>|all [<attribute-filter>|all] [<value-filter>]

Read MO persistent data from node database via SQL.

The `fro/lfro` command reads only the frold connecting the MAO and FRO parts of the MO.

The `from/lfrom` command reads all MAO/FRO data of the MO.

The command syntax and printout format is identical to that of the `get/lget` command.

##### Examples:

- `from upgradepackage=cxp9012014_r5a - print MAO/FRO persistent data for MO UpgradePackage=CXP9012014_R5A`
- `from 0 - print MAO/FRO persistent data for the ManagedElement MO`
- `fro plugin - print frold for all pluginunit MOs`
- `fro plugin . 5 - print the PlugInUnit MOs who have a froid matching the value 5`
- `fro plugin . ^5$ - print the PlugInUnit MOs who have a froid equal to 5`
- `lfro ms,slot=10,plugin sairesource > $sai - save the sairesourceid of a particular pluginunit into a variable $sai`

Note: If the SQL client LM (CXC1325608) is not started, the `fro[m]` command starts it automatically using the "sql+" command. After the session, the SQL client should be turned off using the "sql-" command. Type "h sql+" for more info.

#### 4.1.17 sql/select <command> [ | <unix-cmds>]

To run a SQL command while in db.dat mode. The db.dat, cv.zip, or dbdump.zip is loaded with moshell option "-d".

##### Examples:

- `select * from tables | grep pgm`
- `select * from tables where name like '%iur%'`
- `select * from cspgmresource_01 where pno='CXC 132 0784'`

#### 4.1.18 st/lst <moGroup>|<moFilter>|<proxy(s)>|all [<state-filter>]

Print state of MOs (operationalState and administrativeState when applicable).

It is similar to writing `get/lget <mo> state`, the only difference is that it presents the two states side-by-side in a more visible way.

The state filter matches towards both the Operational state and the Administrative state.

##### Examples:

- `st - view state of all MOs`
- `st all dis - view all disabled MOs`
- `lst equip dis - view all disabled MOs under "Equipment"`
- `st all 1.*0 - view all MOs which are unlocked and disabled`
- `st all ^0 - view all MOs which are locked:`
- `lst sector - view state of all MOs under "Sector" (in RBS)`
- `lst cell - view state of all channels in all 3 cells in the RBS`
- `lst cell=120 - view state of all channels in cells starting with 120 (in RNC)`

#### 4.1.19 prod <moGroup>|<moFilter> [<productdata-filter>]

Print the attribute `productData` on applicable MO(s).

It is similar to typing "`hget <mo> productdata`". This command prints *product data* of all MO(s). It is similar to typing `get all productdata`, except that the *productData* appears in one row. It is possible to filter only MOs matching a certain product identity. **Examples:**



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- `prod loadmodule cxc1320784 - print all MOs matching "loadmodule" and where the value of productData attribute matches "cxc1320784"`

MO classes that have a productdata attribute can be found via mom command:

```
mom all all struct:.*productdata
```

Typically, this includes *Slot*, *Subrack*, *PiuType* and *LoadModule*.

#### 4.1.20 lk/lk <moGroup>|<moFilter>|<proxy(s)>

View all MO(s) linked to an MO, and their states (*administrativeState* and *operationalState*).

##### Examples:

- `lk mtp3bsrs=` - View all core network interface stacks
- `lk ranap=cs` - View all MO's linked to Ranap=cs
- `lk iublink=iub-12` - View all MO's linked to iub 12
- `lk atmport=ms-24-1` - View all MO's linked to atmport MS-24-1 (and its VclTp's)
- `lk eutrancellfdd=1a` - View all MO's linked to EUTRANCellFDD=1A

#### 4.1.21 lko/lko <moGroup>|<moFilter>|<proxy(s)>

The old `lk`. Obsolete command, use `lk/lk` instead.

Output format of e.g. `lko ranap=cs`:

```
=====
MOs linked to 1316 RncFunction=1,Ranap=cs (-,E)
=====
localSccpApRef Ranap=cs --> (-,E) SccpSp=1,SccpSrc=1,SccpAp=1
sccpGlobalTitleRef Ranap=cs --> (-,-) SccpSp=1,SccpSrc=1,SccpGlobalTitle=1
remoteSccpApRef Ranap=cs --> (-,E) SccpSp=1,SccpSrc=1,SccpAp=2
reservedBy SccpSp=1,SccpSrc=1,SccpAp=1 --> (-,-) SccpSp=1,SccpSrc=1,SccpEntitySet=1
mtp3bApId SccpSp=1,SccpSrc=1,SccpAp=2 --> (-,E) Mtp3bSp=1,Mtp3bAp=1
reservedBy SccpSp=1,SccpSrc=1,SccpAp=2 --> (-,-) SccpSp=1,SccpSrc=1,SccpEntitySet=2
routeSetId Mtp3bSp=1,Mtp3bAp=1 --> (-,E) Mtp3bSp=1,Mtp3bSrs=1
reservedBy SccpSp=1,SccpSrc=1,SccpEntitySet=2 --> (-,-) SccpSp=1,SccpSrc=1,SccpGlobalTitle=2
sisReservedBy Mtp3bSp=1,Mtp3bSrs=1 --> (-,E) Mtp3bSp=1,Mtp3bSls=1
reservedBy Mtp3bSp=1,Mtp3bSls=1 --> (-,E) Mtp3bSp=1,Mtp3bSrs=1,Mtp3bSr=1
nniSaalTpId Mtp3bSp=1,Mtp3bSls=1,Mtp3bS1=2 --> (-,E) NniSaalTp=csb
nniSaalProfileId NniSaalTp=csb --> (-,-) NniSaalProfile=1
aal5TpVccTpId NniSaalTp=csb --> (-,E) Aal5TpVccTp=csb
processorId Aal5TpVccTp=csb --> (U,E) Subrack=MS,Slot=9,PlugInUnit=1
vclTpId Aal5TpVccTp=csb --> (-,E) AtmPort=MS-7-1,VplTp=vp12,VpcTp=1,VclTp=vc34
atmTrafficDescriptorId AtmPort=MS-7-1,VplTp=vp12,VpcTp=1,VclTp=vc34 --> (-,-) AtmTrafficDescriptor=U3P4500M3000
nniSaalTpId Mtp3bSp=1,Mtp3bSls=1,Mtp3bS1=1 --> (-,E) NniSaalTp=csa
nniSaalProfileId NniSaalTp=csa --> (-,-) NniSaalProfile=1
aal5TpVccTpId NniSaalTp=csa --> (-,E) Aal5TpVccTp=csa
processorId Aal5TpVccTp=csa --> (U,E) Subrack=MS,Slot=8,PlugInUnit=1
vclTpId Aal5TpVccTp=csa --> (-,E) AtmPort=MS-6-1,VplTp=vp11,VpcTp=1,VclTp=vc34
atmTrafficDescriptorId AtmPort=MS-6-1,VplTp=vp11,VpcTp=1,VclTp=vc34 --> (-,-) AtmTrafficDescriptor=U3P4500M3000
=====
```

In the middle column is the originating MO. In the far right column is the referenced MO. In the left column is the attribute containing the referenced MO. The letters in brackets show the *administrativeState* and *operationalState* of the referenced MO:

- **U** = Unlocked
- **L** = Locked
- **E** = Enabled
- **D** = Disabled
- **-** = Not Applicable

#### 4.1.22 set[m][c][1][i][p][1x]/lset[m][c][1][i][p][1x] <moGroup>|<moFilter>|<proxy(s)> <attribute> [<value>]

Set an attribute value on one or several MO's.

Only attributes that do not have the flag `readOnly` or `restricted` can be set. Use the `mom` command to check the flags of an attribute. For `restricted` attributes, it is possible to use the `rset` command.

##### Options:

- **m** : for setting several attributes simultaneously in the same MO, using a single transaction for all attributes in each MO. Needed for changing certain attributes in the RNC UtranCell (locationAreaRef, uarfcnDI, uarfcnUI).

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- **1** : for setting one attribute on many MOs simultaneously, using a single transaction for all the MOs. Needed for changing certain attributes in the eNB EUTranCell (tac, frameStartOffset, subframeAssignment, specialSubframePattern).
- **1x** : for setting several attributes on several MOs in a single transaction. Several set1x commands will be executed in order to change the attributes, then the commit command shall be issued. This is useful for setting attributes that have a dependency to other attributes. Note: set1x is currently only supported for COM nodes.
- **c** : for setting an attribute to its current value. When using this option, the attribute value shall not be specified since the existing attribute value is used.
- **i** : to set an attribute via "internalmomwrite" command. Only applicable to RCS nodes (MSRBS).
- **p** : to set the attribute value from a prompt instead of typing it on the command line. If the attribute is a password then the input will not be echoed on screen.

Note: These options cannot be combined.

#### Examples:

- `set cell primarycpichpower 250` - set primarycpichpower to 250 on all cells (in RNC)
- `lset uerc= sirmin 60` - set sirmin to 60 on all MO's under uerc (in RNC)
- `lset ms,slot=1,pluginunit=1$ userlabel` - set an empty value for the userLabel of this PluginUnit
- `set mtp3bspitu sppriority prioslt=2` - set an attribute of type struct
- `setc iublink= preferredsubbrackref` - set the preferredsubbrackref attribute to its current value on all lublinks, in order to evenly spread the sites across all modules.
- - setting three attributes simultaneously on a MO (split on several lines for readability)

```
setm utrancell=3012 locationarearef locationarea=9
 servicearearef locationarea=9,servicearea=1
 routingarearef locationarea=9,routingarea=1
```

- `set1 ^eutrancellfdd= tac 1280` - set the tac attribute simultaneously on all EUTranCellFDD in the eNB.
- `seti . loadCtrlPrioOfMta false` - set the attribute loadCtrlPrioOfMta via internalmomwrite command
- set the following attributes in one transaction:

```
>> set1x NRCellDU=1 subcarrierSpacing 15
>> set1x NRCellDU=1 ssbSubcarrierSpacing 15
>> set1x NRSectorCarrier=1 arfcnDL 460000
>> set1x NRSectorCarrier=1 arfcnUL 420000
>> commit
```

Please see Section 3 and specifically Section 3.4 for more information on how to set values for each specific attribute type (e.g. Struct, array of MoRef, array of Struct, etc).

#### 4.1.23 eset[c][1]/lset[c][1] <moGroup>|<moFilter>|<proxy(s)> <attribute-filter> [<value>]

Set one or several attributes on one or several MO's, using regexp matching on the attribute name.

Same as `set` command except that the second argument uses regular expression matching on the attribute name so all attributes whose name match the filter will be affected by the operation. Refer to the help of the set command for more information about syntax and command options `c` and `1`.

#### Examples:

- Activate all features in the RBS/ERBS. The attribute is called featureStatexxxx , where xxx is the name of the feature. All MOs that have an attribute matching the word "featurestate" will have that attribute set to 1

```
>> eset . featurestate 1
```

- Change the ENodeBFunction::eNodeBPlmnId on ERBS. The EUTranCellFDD::bPlmnList must be changed at the same time in one transaction.

```
>> eset1 ^enodebf|^eutrancellfdd plmn mcc=240,mnc=99,mnclength=2
```

#### 4.1.24 rset/lrset <moGroup>|<moFilter>|<proxy(s)> <attribute> [<value>]

Set attribute value on a restricted attribute or change the MOid of an MO.

A *restricted attribute* is an attribute that can only be set when the MO is created.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

The `rset` command works by doing `rdel/lrdel` on the MO and recreating all previously deleted MOs using the new attribute value.

Therefore the `rset` command only works on MO classes that are supported by the `rdel` command. Type `h rdel` to find out the list of supported MO classes.

To change the MOid of an MO, the attribute name should be made up of the MOclass followed by "id", eg: `atmportid`, `pluginunitid`, etc.

Example 1, change a restricted attribute:

```
rset unisaaltp=.*1004 unisaalprofileid unisaalprofile=win30a
```

Example 2, change the MOid:

```
rset utrancell=cell1123 utrancellid cell1456
```

#### 4.1.25 `bl[s][1]/lbl[s][1] <moGroup>|<moFilter>|<proxy(s)>`

Locks one or more MOs by setting its `administrativeState` to 0 (hard-lock) or 2 (soft-lock). To unlock MOs, use the command "`deb/ldeb`" which sets the `administrativeState` to 1.

##### Options:

- `s` : soft-lock. The `administrativeState` is set to 2 ("shutting down") which means that the resource will have a grace period to handover traffic to other resources, before it gets locked. The `administrativeState` will automatically go over to 0 after the grace period, which can be between a few seconds to a couple of minutes, depending on the MO type. Without the `s` option, the resource is locked immediately.
- `1` : for locking several MOs simultaneously, using a single transaction for all the MOs.

##### Examples:

- `bl aal2.*ca[246] - block aal2paths ca2, ca4, ca6`
- `lbl subrack=ms,slot=19 - block all MO(s) under subrack=ms,slot=19`
- `bl 234 256 248 - block proxys 234, 256, and 248`
- `bl 001500 - block a board. Same as lbl subrack=ms,slot=15,pluginunit=1$.`
- `bls 001500 - soft-block a board.`

Note: there is also an OSE command called `bl`. If the OSE command needs to be run instead of the moshell command, just type a "\" (backslash) in front. E.g.: `\bl`

#### 4.1.26 `deb[1]/ldeb[1] <moGroup>|<moFilter>|<proxy(s)>`

Unlocks one or more MOs by setting its `administrativeState` to 1. To lock an MO, use the command `bl/lbl`.

##### Options:

- `1` : for unlocking several MOs simultaneously, using a single transaction for all the MOs.

##### Examples:

- `ldeb subrack=ms,slot=19 - deblock all MO(s) under subrack=ms,slot=19`
- `deb 001900 - deblock a board. Same as ldeb subrack=ms,slot=19,pluginunit=1$)`

#### 4.1.27 `acl/lac1 <moGroup>|<moFilter>|<proxy(s)>|all [<action-filter>]`

Lists available MO actions.

##### Examples:

- `acl all restart - View all restart actions`
- `acl all [^(restart)(eteloopback)] - View all actions except restart and eteloopback`
- `acl sync - View all actions related to the synchronisation MO. Output:`

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

| Proxy | MO                | Action                | Nr of Params |
|-------|-------------------|-----------------------|--------------|
| 396   | Synchronization=1 | changeSyncRefPriority | 2            |
| 396   | Synchronization=1 | removeSyncRefResource | 1            |
| 396   | Synchronization=1 | resetLossOfTracking   | 1            |
| 396   | Synchronization=1 | addSyncRefResource    | 2            |

4. `acl all listrou` - Find the MO with action matching regular expression *listrou*:

| Proxy | MO                     | Action     | Nr of Params |
|-------|------------------------|------------|--------------|
| 471   | Ip=1, IpRoutingTable=1 | listRoutes | 0            |

#### 4.1.28 `acc[e][n][y]/lacc[e][n][y] <moGroup>|<moFilter>|<proxy(s)>|all <action>`

Execute an MO action.

If the action requires parameters, these will be prompted for.

If no value is entered at a prompt, the action is aborted, unless option "y" was used (accy).

In order to be avoid being prompted for the parameters, use option "n" (accn/laccn), then the parameters can be given on the same line as the command.

#### Options:

- **n** : action parameters will not be prompted for and shall be input on the command line. Eg:  
`accn 0 manualrestart 0 0 0`
- **e** : for action parameters of type struct, there will be a separate prompt for each individual struct member.
- **y** : allows to type an empty value at a parameter prompt, then the parameter is not included in the action

#### Examples:

1. Restart a board:

- `acc 001400 restart` - Same as:  
`lacc subrack=ms,slot=14,pluginunit=1$ restart`
- `acc 001900/sp0.lnh restart` - Same as:  
`lacc subrack=ms,slot=19,.*,spm=1$ restart`

2. Restart the node:

- `acc 0 manualrestart`

3. List the IP routing table:

- `acc ip listroutes`

4. Perform End-To-End loopback on VclTp MOs:

- `lacc atmport=ms-24-1 eteloopback`

5. Perform PhaseMeasurement on NodeSynchTp MOs:

- `acc nodes performPhaseMeasurement`

6. Add a new synchronization reference:

- `acc sync addSyncRefResource`

Note 1: To specify an attribute of type *Struct*, use the following syntax:

- `attr1=val1,attr2=val2,attr3=val3...`

This is the same syntax as used in `set` and `cr` commands, and is not case sensitive. Example (in the case of `routingTableEntry` in action **deleteStaticRoute**) (note: line split for readability):

```
destinationIpAddr=10.1.10.0,destinationNetworkMask=255.255.255.0,
nextHopIpAddr=10.128.15.1,routeMetric=3
```

Alternatively, the option **e** can be used, in which case each struct member is prompted on a separate line (command: `acce/lacce`).

Note2: Action `manualRestart` on `ManagedElement` MO

- This action can be restricted with the uservariable `restart_confirmation`. See description in the file `moshell/moshell`.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- Node restarts usually result in decrementing of the attribute `ConfigurationVersion::rollbackCounter` which leads to node rollback upon reaching zero. However the action `manualRestart` on `ManagedElement` is a special case which does not lead to decrement of the `rollbackCounter`, when executed from `moshell/AMOS`.

#### 4.1.29 `cr[e][n][1x] <ldn>`

Create an MO.

When run without option, the command will prompt the user to enter the values for all mandatory and restricted attributes. The order in which the attributes are prompted is the same order in which they are listed inside the XML MOM file. Restricted attributes are optional, type `d` to select default value. To abort, type `<enter>` at the prompt.

##### Options:

- `e` : to receive a separate prompt for each individual struct member, useful when inputting attribute values of type struct
- `n` : allow the user to enter any attribute name and value. Each attribute name and value shall be entered on a separate line with space between the attribute name and value. Any attribute can be specified, does not have to be a mandatory or restricted attribute. Type "end" once all attributes have been entered.
- `1x` : for creating several MOs in a single transaction. Several `cr1x/crn1x` commands will be executed in order to create the MOs, then the commit command shall be issued. This is useful for creating MOs that have a dependency to other MOs, e.g. when a MO can only be created if it has at least one child MO. Note: the "1x" option is currently only supported for COM nodes.

##### Examples:

```
cr swmanagement=1,upgradepackage=FAB102572%2_R14D.xml
cr rncfunction=1,iublink=2456
cre swmanagement=1,loadmodule=CXC123456_R9A
crn rncfunction=1,iublink=90
cr1x GNBDUFunction=1,DU5qiTable=1 ; cr1x GNBDUFunction=1,DU5qiTable=1,DU5qi=1 ; commit
```

##### Notes:

To specify an empty attribute value, type `null` or `d`.

To specify an attribute of type *Struct*, use the following syntax:

```
attr1=val1,attr2=val2,attr3=val3...
```

This is the same syntax as used in `set` command, and is not case sensitive. Example, in the case of `productdata` in `loadmodule` (note: line split for readability!):

```
productnumber=CXC1322155/2,productrevision=R3C08,productname=test,
productinfo=test,productiondate=20010229
```

Alternatively, the option `e` can be used, in that case, each struct member is prompted on a separate line (command: `cre`).

An `moshell` script for MO creation can be automatically generated by using the simulated undo mode: `u+s, del <mo>, u-`, then edit the `undocommandfile` with the required values. By default the undo script will contain `crn` commands. To use `cr` commands instead of `crn`, do `uv use_crn=0`.

By default, the mandatory/restricted attributes that are marked as `deprecated` are not prompted by the `cr` command. This behaviour can be changed by setting the uservariable `exclude_deprecated` to 0.

As in the `ld` command, the LDN doesn't need to contain `ManagedElement=1`.

The mo-types are not case sensitive but the mo-id is.

#### 4.1.30 `del[b][1x]/ldel[b][1x] <moGroup>|<moFilter>|<proxy(s)>`

Delete MO(s).

An MO can only be deleted when its `reservedBy` list is empty and when it does not have any children. If the MO does have children and/or a non-empty `reservedBy` attribute, it is possible to use the `rdel/lrdel` command instead.

The command first prints the MO(s) to be deleted, then asks for confirmation. Once the MO(s) are deleted, they are also removed from the proxy list.

To delete all MOs that have just been created by a script, just check the range of proxies that were created and delete them in the reverse order. This can be done easily by using the reverse proxy order.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

Example: proxies 22 to 46 were created by a *CREATE* script (in `run` or `trun`). To undo it:

```
del 46-22
```

To delete an MO and all its children, just use the % sign in front of the ldn/rdn filter. Example:

```
ldel %ms,slot=20,plug will delete the programs first then the piu
```

To delete an MO group in the reverse order of the proxies, put the % sign in front of the MO group name. Example:

```
del %mymogroup - will delete all MOs of the MO group "mymogroup" in the reverse order of their proxies
```

Note:

The following MOs can only be deleted while in state LOCKED: PlugInUnit, EUTranCell, TermPointToENB, GpsReceiver, IpAccessHostEt, IpAccessHostGpb, IpAccessHostSpb, IpSyncRef .

By default, the "del" command will automatically perform the locking prior to deleting, unless the "b" option has been used (`delb`).

Note: the 1x option can be used for deleting several MOs in a single transaction. Several del1x commands will be executed in order to delete the MOs, then the commit command shall be issued. The "1x" option is currently only supported for COM nodes and is also available for the "cr" and "set" commands.

#### 4.1.31 rdel/lrdel <moGroup>|<moFilter>|<proxy(s)>

Delete MO(s) together with children and reserving MOs.

For MO classes shown in the list below, the command finds out all the related MOs, then presents the list of MOs to be deleted and asks the user for confirmation. For all other MO classes, the command acts in the same way as a regular "del" operation, ie, just tries to delete the MO itself.

List of MO classes for which rdel acts recursively:

- Aal0TpVcctp
- Aal1TpVcctp
- Aal2Ap
- Aal2PathDistributionUnit
- Aal2PathVcctp
- Aal2RoutingCase
- Aal5TpVccTp
- AntennaNearUnit
- AtmCrossConnection
- AtmPort
- Cdma2000Cell
- Ds0Bundle
- EUTranCellFDD
- EUTranCellTDD
- EutranFrequency
- ExternalCdma2000Cell
- ExternalCdma20001xRttCell
- ExternalENodeBFunction
- ExternalEUTranCellFDD
- ExternalEUTranCellTDD
- ExternalGeranCell
- ExternalGsmCell
- ExternalUtranCell
- ExternalUtranCellFDD
- ExternalUtranCellTDD

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- ImaGroup
- IpEthPacketDataRouter
- IuLink
- Iub
- IubLink
- IurLink
- M3uAssociation
- Mtp2Tptlu/Ansi/Ttc/China
- Mtp3bSIltu/Ansi/Ttc/China
- Mtp3bSIs
- Mtp3bSrs
- NbapCommon
- NbapDedicated
- NniSaalTp
- NodeBLocalCell
- NodeBSectorCarrier
- NRCellIDU
- NRSectorCarrier
- NodeSynchTp
- PacketDataRouter
- Ranap
- Rnsap
- SectorCarrier
- SectorEquipmentFunction
- UniSaalTp
- UtranCell
- VclTp
- Vmgw
- VpcTp
- VplTp

#### 4.1.32 gm[c][d]/lgm[c][d] <moGroup>|<moFilter>|<proxy(s)>

Generate MO Creation/Deletion script.

##### Options:

- c : Generate MO Creation script.
- d : Generate MO Deletion script.

The output of the command is a command file containing the creation/deletion commands.

By default the create statements will use the `crn` command but it is possible to use the `cr` command by setting `uv use_crn=0`

It is possible to convert the command file to `trun` format with the `u!` command.

##### Examples:

- `lgmc equipment=1` : Generate a MO script to create all the MOs under Equipment=1 . Parent and referenced MOs will be created before children and reserving MOs.
- `gmd subrack=1,slot=2,pluginunit=1` : Generate a MO script to delete the MO Subrack=1,Slot=2,PlugInUnit=1 . Children and reserving MOs will be deleted before parent and reserved MOs.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

#### 4.1.33 `sc[g][w][d] [<parameterlist>|all] [<namespacelist>|all]`

Read/Write/Reset SystemConstants on RBS/ERBS/MSRBS.

##### Options:

- `g ("get")` : read system constants
- `w ("write")` : set system constants
- `d ("default")` : reset system constants

On RBS/ERBS the MO operations on SystemConstants are used while on MSRBS, the COLI commands `sysconXXXX` are used.

Note: on MSRBS, the command used for setting the system constants can be controlled via the uservariable `sysconwrite`

Syntax:

- `scg [<const>] [<namespace>] [ > $var]` : read one or all constants
- `scw const1:val1,const2:val2,... [<namespacelist>|all]` : write one or more constants
- `scd const1,const2,... [<namespacelist>|all]` : reset one or more constants to default
- `scd all [<namespacelist>|all]` : reset all constants to default

Note: the namespace argument is only applicable for MSRBS >= 20.Q1

Syntax examples:

- `scg` : read all system constants
- `scg 915` : read the value of system constant "915"
- `scg 915 > $var` : read the value of system constant "915" and store to a variable
- `scg RP28 NR-FR1-C1 > $var` : read the value of system constant RP28 in namespace NR-FR1-C1 and store to a variable
- `scd 915` : reset system constant 915 in the default namespace
- `scd 915,2102,2085` : reset system constant 915, 2102, 2085 in the default namespace
- `scd RP28,PP32 default,NR-FR1-C1` : reset system constants RP28 and PP32 in the default and NR-FR1-C1 namespaces
- `scd RP28,PP32 all` : reset system constants RP28 and PP32 in all namespaces
- `scd all` : reset all system constants in the default namespace
- `scd all all` : reset all system constants in all namespaces
- `scw 915:14` : set system constant 915 to value 14 in the default namespace
- `scw 915:14,2102:1,2085:1` : set system constants 915 to 14, 2102 to 1, 2085 to 1 in the default namespace
- `scw RP28:1,PP32:0 default,NR-FR1-C1` : set system constants RP28 to 1 and PP32 to 0 in the default and NR-FR1-C1 namespaces

#### 4.1.34 `safe+/safe-/safe?`

Purpose: Apply strict MO matching rules on MO WRITE commands

- `safe+` : apply safe MO syntax, no proxy id or no regular expression matching for MO WRITE commands, exact MO name(s) must be given (case insensitive is allowed)
- `safe-` : allow proxy id and regular expression matching (this is the default setting)
- `safe?` : check the current setting

List of MO WRITE commands: `bl`, `bls`, `deb`, `del`, `rdel`, `fdel`, `set`, `eset`, `rset`, `fset`, `acc`, `facc`

Examples:

- `bl utrancell=11` - will lock cell=11 only (cell=111, or cell=11a, etc. would not be affected)
- `bl utrancell=11|utrancell=12|utrancell=13` - will lock cell=11, cell=12, cell=13
- `bl utrancell=11|12|13` - same as above
- `bl utrancell=11|12|13|iublink=1` - will lock cell=11/12/13 and iublink=1



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- `bl pluginunit=1` - nothing will happen as there are several MO instances with this name
- `bl subrack=ms,slot=28,pluginunit=1` - will lock this MO as the name given is unique

The setting is off by default but can be saved to "on" by adding the line `safe_syntax=1` in the file `moshell/jarxml/moshellrc` or the file `./moshellrc`

#### 4.1.35 `s+/s++/s-/s?`

Purpose: Sort MO list in alphabetical order instead of proxy order.

- `s+` : activate alphabetical sorting of the MO list by order of LDN (`sort_proxy=1`)
- `s++` : activate alphabetical sorting of the MO list by order of MO class (`sort_proxy=2`)
- `s-` : go back to default behaviour where the MO list is sorted by proxy number (`sort_proxy=0`)
- `s?` : check if alphabetical sorting is active or not

Once the `s+/s++` command has been entered, the alphabetical sorting takes effect on all subsequent MO commands such as, `pr`, `get`, `set`, `st`, etc.

Type `s-` to revert to the default behaviour of sorting by proxy number.

To change the default behaviour, it is possible to use the uservariable `sort_proxy`, eg, adding the line `sort_proxy=1` in the file `~/./moshellrc`

Example:

Default behaviour: MOs are displayed in the order of the proxy numbering. The order of the proxy numbering depends on the order with which the MOs were created on the node.

```
RNC32> pr uerc=
=====
Proxy MO
=====
2587 RncFunction=1,UeRc=0
2591 RncFunction=1,UeRc=16
2604 RncFunction=1,UeRc=91
2620 RncFunction=1,UeRc=1
2628 RncFunction=1,UeRc=17
2643 RncFunction=1,UeRc=70
2644 RncFunction=1,UeRc=59
2670 RncFunction=1,UeRc=2
```

Activate MO list sorting and run some MO commands. MOs now appear in alphabetical order.

```
RNC32> s+
Proxy sorting: activated.
```

```
RNC32> pr uerc=
=====
Proxy MO
=====
2587 RncFunction=1,UeRc=0
2620 RncFunction=1,UeRc=1
2670 RncFunction=1,UeRc=2
2754 RncFunction=1,UeRc=3
4071 RncFunction=1,UeRc=4
....<cut>....
```

```
RNC32> hget uerc= userlabel
=====
MO userLabel
=====
UeRc=0 Idle
UeRc=1 SRB (13.6/13.6)
UeRc=2 Conv. CS speech 12.2
UeRc=3 Conv. CS unkn (64/64)
UeRc=4 Interact. PS (RACH/FACH)
```

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

UeRc=5 Interact. PS (64/64)

UeRc=6 Interact. PS (64/128)

#### 4.1.36 u+[s]/u-/u!/u!! [<file>]

Handling of undo mode (for `cr/del/rdel/set/bl/deb/acc` commands). Can be used for generation of MO scripts as well.

- `u+` : To start the *undo mode*
- `u+s` : To start the *simulated undo mode*
- `u-` : To stop the *undo mode*
- `u?` : To check if *undo mode* is active or not
- `u!` : To convert a moshell ".mos" command files to netconf ".xml" format or trun ".mo" format (and vice-versa), or undo ".log" logfiles to ".mos" command files, see description further down for more info.
- `u!!` : To convert a moshell ".mos" command file to trun ".mo" format while placing transaction tags between each 300 MO operations. This makes the file run quicker. The value of 300 can be configured in the `uv transaction_size` but it is not recommended to raise it as high value could potentially cause issues in the node's MO database.

While running in "undo mode", the MO data is saved in a special logfile for all MOs on which the following commands are run:

- `cr`
- `del/lldel/rdel/lrdel`
- `bl/lbl/deb/ldeb`
- `set/lset`
- `acc/lacc`

Upon stopping of undo mode, an undo file is generated to revert the MO configuration changes. It can also be used for deleting and recreating MOs when one needs to change a restricted attribute.

The undo file will contain the following commands:

- `del` commands to remove created MOs.
- `cr` commands to put back deleted MOs.
- `bl/deb` commands to change MOs back to their original administrative state.
- `set` commands to change MOs back to their original attribute values.
- `acc` commands to revert certain MO actions. This only works on actions that have an opposite, see note below.

When running the simulated undo mode (`u+s`), all MO operations (`cr/del/rdel/bl/deb/set`) are simulated. Two command files are generated, one for deletions and one for creation.

The files generated by undo mode and simulated undo mode are stored in the following variables:

- `$undologfile`
- `$undodelcommandfile` (simulated undo mode only)
- `$undocommandfile`

Conversion functionality (**u!**): The **u!** command takes as input one of the files generated by the undo mode. Different output will be generated depending on the input file.

- if the input file is an undologfile (.log), the output will be an undodelcommandfile and an undocommandfile
- if the input file is an undodelcommandfile or an undocommandfile (.mos), the output will be:
  - in case of CPP node: an undotruncatefile (`$undotruncatefile`) which is a command file in trun/emas format (.mo)
  - in case of COM node: an undoxmlfile (`$undoxmlfile`) which is a command file in netconf format (.xml)
- if the input file is an undotruncatefile (trun/emas format ".mo"), the output will be an undocommandfile (run format ".mos")

Note: to undo **create** commands run from a "trun" script, just run a delete on the proxy range in reverse order. See Section 4.1.30 or `h del` for more info.

Note: the undo mode currently cannot reverse a set command done on an attribute of type sequence of struct.

Note: the following actions are currently supported in the undo mode:

- `addPath/removePath`

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- addDhcpServerAddress/removeDhcpServerAddress
- setAutoActivate/setAutoDown
- activateRemoteSp/inactivateRemoteSp
- addRemoteSp/removeRemoteSp
- activate/deactivate
- localInhibit/localUninhibit
- activateLinkSet/deactivateLinkSet
- blockSignalingRoute/deBlockSignalingRoute
- addRepertoire/deleteRepertoire
- addSlot/deleteSlot
- addCicRange/removeCicRange
- addNri/removeNri
- addTdmTermGrpMos/removeTdmTermGrpMos
- addSyncrefResource/deleteSyncrefResource
- addAal2ApToRc/removeAal2ApFromRc
- writeSystConst/resetSystConst, deleteConst/writeConst
- changeFrequency, pnpChangeFrequency, setFrequencyBand
- removeIpAccessHostMos/addIpAccessHostMos
- manualMspSwitch, manualSwitch, switch

#### 4.1.37 run[x][1][1p][1r] [-l <lineNr>] <command file> [<var1>] [<var2>] ...

Run a command file in moshell format.

The command file layout is the same as for *monode* and *mobatch*. See examples in **moshell/examples/mobatch\_files**.

It shall contain all lines to be sent to the moshell prompt, including password (for ose commands), but NOT confirmations (**y**). This applies to commands such as *lt/ltc*, *lc/lcc*, *del/lde1*, *bl/lbl*, *set/lset* where confirmation is automatically entered when running a command file.

Comments can be put in the command file using the # sign. By typing **<TAB>**, the unix file system is displayed, making it easier to find the location of the command file.

If some arguments are given after the command file, the scripting variables \$1, \$2, \$3, etc. will be set to the corresponding values. The variable \$0 will be set to the whole line contents. Type "h scripting" for info.

##### Options:

- 1: to execute the file in one transaction and commit. Only applicable for COM or YANG nodes. To run a MO script in one transaction on CPP nodes, use *trun1*.
- 1p: to execute the file in one transaction and prompt for commit/rollback. Only applicable for COM or YANG nodes.
- 1r: to execute the file in one transaction and rollback. Only applicable for COM or YANG nodes.
- x: to stop execution of the file upon failure of a MO WRITE command (create, delete, set, action). The following scripting variables are set automatically when the script stops:
  - \$errorline points to the line number where the script stopped
  - \$errorcmdline points to the line number of the last command that failed
  - \$nextcmdline points to the line number of the next command to execute

##### Switches:

- -l <lineNumber>: to start file execution at a specific line number.

#### 4.1.38 trun[is1cr] <moScript>|<http://ipaddress/script>

Run a command file in EMAS/MoTester format.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

Execute a command file in EMAS/MoTester format.

By typing **<TAB>**, the unix file system is displayed, making it easier to find the location of the command file.

It is also possible to specify a file located on a web server (eg. when the script is located on the CPP node).

The following commands are supported: ECHO, CREATE, SET, SETM, SETU, DELETE, ACTION, CHECK, CHECKM, CALL, CALLREL, WAIT.

Lines can be commented out by adding **//** at the beginning of each line.

See examples below. For more info, refer to MoTester documentation in `moshell/examples/motester/runMoTester.html`.

By default, the command file halts when a command fails.

#### Options:

- **i** : ignore exceptions, the execution does not halt when a command fails.
- **s** : simulated run, the command file execution is simulated, no commands are actually executed on the node. Can be used to verify the syntax of a script prior to running it for real. The simulated mode is always used in "offline mode" or "simulated undo mode", regardless of the "trun" options.
- **1** : executes the whole script in one transaction, then prompts for confirm or rollback. This option should be used with great care and only when absolutely necessary (e.g. when changing IP address of the node, see example script in `moshell/examples/misc/ip_change.mo`). In regular usage, it is recommended to not use this option as it has been observed to cause database corruptions in certain cases, for instance when creating/deleting certain types of MOs within the same transaction. Database inconsistencies can be checked with the command `dbc`.
- **c** : used in combination with option **1** above, will avoid the prompt by automatically confirming the transaction
- **r** : used in combination with option **1** above, will avoid the prompt by automatically rolling back the transaction

Command description. See syntax examples further down.

- **ECHO**: the script will echo some text on the screen
- **CREATE**: create a new MO instance
- **DELETE**: delete a MO instance
- **ACTION**: perform a MO action
- **SET**: set one MO attribute
- **SETM**: set several MO attributes
- **SETU**: set a single struct member (whereas with SET/SETM, all struct members must be specified)
- **CHECK**: check that an attribute value is equal to a given value
- **CHECKM**: enhanced "check" - supports non-transactional get operation and multiple attributes
- **WAIT**: pause the script execution for a given number of milliseconds
- **CALL**: execute another MO script. If the path of the script is not an absolute path then the current working directory will be searched.
- **CALLREL**: execute another MO script. If the path of the script is not an absolute path the the directory of the main script will be searched.
- **TRANSACTION**: mark the beginning or end of a transaction. All operations executed between the statements "TRANSACTION BEGIN" and "TRANSACTION END" will be executed within one single transaction.
- **CORBATIMEOUT**: set a different idle timeout for the script, to override the value of the uservariable "corba\_timeout".

Script example:

```
//Echo a comment
ECHO "Start Test"

//Create a MO
CREATE
(
 parent "ManagedElement=1,SwManagement=1"
 identity "ROJ1192104_3_R4"
 moType PiuType
 exception none
 nrOfAttributes 3
 productData Struct
 nrOfElements 5
 productNumber String "ROJ1192104/3"
```

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

```
 productRevision String "R4"
 productName String "TUB"
 productInfo String "TU"
 productionDate String "20030116"
 boardWidth Integer 3
 role Integer 2
)

//Delete a MO
DELETE
(
 mo "ManagedElement=1,SwManagement=1,PiuType=ROJ1192104_3_R4"
 exception none
)

//Set an attribute
SET
(
 mo "ManagedElement=1,Equipment=1,Jvm=1"
 exception none
 admClasspath Array Reference 4
 "ManagedElement=1,SwManagement=1,LoadModule=Oms"
 "ManagedElement=1,SwManagement=1,LoadModule=Asms"
 "ManagedElement=1,SwManagement=1,LoadModule=VbjOrb"
 "ManagedElement=1,SwManagement=1,LoadModule=Cma"
)

//Set several attributes in one MO
SETM
(
 mo "ManagedElement=1,RncFunction=1,UtranCell=Iub-1-1"
 exception none
 uarfcnDl Integer 10738
 uarfcnUl Integer 9788
)
SETM
(
 mo "ManagedElement=1,RncFunction=1,Sid=1"
 exception none
 sib1 Struct nrOfElements 2
 sib1RepPeriod Integer 32
 sib1StartPos Integer 4
 sib2 Struct nrOfElements 2
 sib2RepPeriod Integer 128
 sib2StartPos Integer 118
)

//Set an incomplete struct attribute. Missing struct members will be set to their current value.
SETU
(
 mo "ManagedElement=1,RncFunction=1,Sid=1"
 exception none
 sib1 Struct nrOfElements 1
 sib1RepPeriod Integer 32
)

//Execute an MO action
ACTION
(
 actionName addRepertoire
 mo "ManagedElement=1,SwManagement=1,SwAllocation=TB_LLP"
 exception none
 nrOfParameters 1
 Ref "ManagedElement=1,SwManagement=1,Repertoire=Cello_Common_MP"
 returnValue ignore
)

//Read an attribute with transactional get and compare to a reference value
CHECK
(
 mo "ManagedElement=1,RncFunction=1,UtranCell=Iub-1-1"
 exception none
 uarfcnDl 10738
)

//Read one or more attributes with transactional get and compare to reference values
CHECKM
(
 mo "ManagedElement=1,RncFunction=1,UtranCell=Iub-1-1"
 exception none
```

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

```

 uarfcnDl 10738
 uarfcnUl 9788
)

//Read one or more attributes with null transaction and compare to reference values
CHECKM
(
 mo "ManagedElement=1,RncFunction=1,UtranCell=Iub-1-1"
 exception none
 transaction null
 uarfcnDl 10738
 uarfcnUl 9788
)

//Read one or more attributes with null transaction and print the values without comparing
CHECKM
(
 mo "ManagedElement=1,RncFunction=1,UtranCell=Iub-1-1"
 exception none
 transaction null
 compare no
 uarfcnDl
 uarfcnUl
)

//wait 2 seconds (time given in milliseconds)
WAIT 2000

//run another MO script
CALL("/home/eric/scripts/newfile.mo")

//run another MO script using a path relative to the path of the main script
CALLREL("test.mo")

//run some operations in a single transaction
TRANSACTION BEGIN
<put some commands here>
TRANSACTION END

//set a different idle timeout for the script (in seconds), to override the uv "corba_timeout"
CORBATIMEOUT 1800

```

#### 4.1.39 Ctrl-Z; touch /tmp/xxxx; fg (abort MO command)

Abort an MO command or a "for" loop.

To abort an MO command (like `get/st/set/acc...`) or a `for` loop, two steps are needed:

First type **Ctrl-Z**, to suspend moshell. Then, at the unix prompt, create an empty file `/tmp/xxxx` (where `xxxx` is the *process number* indicated in moshell menu and in the window's title bar) and resume moshell. This is done with the following command:

```
touch /tmp/xxxx ; fg
```

If the moshell prompt doesn't come back even after typing `<enter>` a number of times, try again suspending (**ctrl-z**) and resuming (`fg`).

#### 4.1.40 pol[b][c][d][g][h][i][k][m][p][s][r][u][w][y] [-m <mo>] [<interval>] [<waitTime>] [<checkTime>]

Poll the node until the MO service is up or until an operation has completed.

**Options applicable for CPP nodes:**

- `s`: poll the node until telnet/ssh server is up.
- `h`: poll the node until http server is up.
- `r`: poll the node until http server is down. Eg to find out when the node restart has begun.
- `d`: poll the node until the action `startHealthCheck` is completed.
- `g`: poll the node until the attribute `GeoRedundancy::functionState` is IDLE.
- `m`: poll the node until /c disk mirroring is completed.
- `k`: poll the node until the system clock is in locked mode.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- `c`: poll the node until the `ConfigurationVersion` has completed its ongoing operations, by monitoring the attribute `currentMainActivity`. Useful to use after action `restore/forcedRestore`.
- `u`: poll the node until the `UpgradePackage` has completed its ongoing operations, by monitoring the attribute `progressHeader`. If `progressHeader` is `awaiting_confirm`, the `confirmUpgrade` action will be sent automatically to the node.

#### Options applicable for COM nodes:

- `h`: poll the node until COM port is up.
- `r`: poll the node until COM port is down. Eg to find out when the node restart has begun.
- `u`: poll the node until the `UpgradePackage MO` has completed its ongoing operations, by monitoring the attribute `reportProgress`. If the `UpgradePackageState` is `waiting_for_commit`, the `confirm` action will be sent automatically to the node.
- `b`: poll the node until the `Brm*` MO (`BrmBackup`, `BrmBackupManager`, `BrmBackupScheduler`, `BrmFailsafeBackup`) has completed its ongoing operations.
- `i`: poll the node until the `KeyFileManagement` has completed its ongoing operations.
- `w`: poll the node until the `SwM MO` has completed its ongoing operations.
- `y`: poll the node until the `CertM/NodeCredential MO` has completed its ongoing operations.
- `p`: poll any MO that has a progress attribute, using option `-m <mo>`.

Only one option can be given at a time, ie, it is not supported to combine several options. If no options are given, then it will poll the node until the MO service is up. Note that this polling is done automatically before each MO command. If the loaded CV has changed during the polling then moshell will automatically reload the MOM and MIB (`getmom,parsemom,lt all`).

#### Arguments (optional):

- `<interval>`: to specify the time in seconds between each polling. Default value is 10 seconds.
- `<waitTime>`: to specify the time in seconds to wait before starting to poll. Default is 20 seconds (60 seconds for `polu`). The reason for this waiting time is because it can take some time before the node starts to execute an operation.
- `<checkTime>`: to specify the time in seconds to wait before checking the result of an action, when using options '`c`' or '`u`'. Default value is 60 seconds.

To abort the polling, do `ctrl-z`, then `touch <stopfile>` (the path to stopfile is printed in the window title), then `fg`. See `h ctrl-z` for more info.

**Examples:** Performing various operations on a `UpgradePackage` and polling the node in between each, to find out when it's possible to carry on.

- `acc upgradepackage=CXP9012014_R10CD nonblockinginstall`
- `polu`
- `acc upgradepackage=CXP9012014_R10CD verifyupgrade`
- `polu`
- `acc upgradepackage=CXP9012014_R10CD rebootnodeupgrade`

Note: if `polu` is executed on a node which is being upgraded from ENM or the OSSRC SMO application, then the uservariable `polu_confirmupgrade` should be set to 0 to prevent `polu` from confirming the upgrade. Otherwise this would confuse SMO. Refer to the description of this uservariable inside the file `moshell/moshell`.

#### 4.1.41 re[i]

Disconnect and reconnect to the CM service (`mobrowser`) and/or the PM service (`pmtester`).

This is useful if the security settings have changed on the node during the moshell session. The `"i"` option is to refetch the `iorfile` which is necessary if the `IORfile` has changed on the node (this happens for instance when going from `vbjorb` to `JacORB` or changing to `corba` security). Note that when moshell first starts up, it is neither connected to CM nor PM.

To connect to CM service, just use the `re` command, the `lt` command or any other MO commands (eg `pr`, `get`, etc). As soon as moshell has connected to the CM service the `userlabel/site` attribute of **ManagedElement** will be read and prompt will be set accordingly.

To connect to PM service, just type the `pst` command which will list all scanners defined on the node.

If there is a node restart with change of CORBA supplier, ie going from `Vbjorb (cpp3/4/5)` to `JacORB (cpp5.1 and above)` or vice-versa, then it is necessary to issue the `rei` command which will also refetch the `IOR` file.



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

It is NOT necessary to type `re` after a node restart/upgrade or jvm restart, as long as the corba definitions have stayed the same (corba supplier and corba security setting). Moshell stays connected all the time, though it may not be possible to perform operations while the restart is happening.

#### 4.1.42 getmom [<momversion>]

Check the MOM version currently stored on the node or download a MOM from newtran01 server.

When the command is run on its own, without argument, a check will be done to find the MOM version of the node. For CPP nodes, the check is done by reading the header of the MOM file stored under `http://<NodeIpAddress>/cello/oe/xml`. For COM nodes, the check is done by reading the identifier and version attributes in the Schema MOs. Usually this check is done automatically when moshell connects to the MO service.

When the command is run with an argument, then it will try to fetch the corresponding MOM file from the newtran01 server and store it in the jarxml folder.

Example:

```
>> getmom RNC_NODE_MODEL_K_9_115_COMPLETE
```

#### 4.1.43 parsemom [<momFile>]

Parse an xml MOM file

Without argument, the `parsemom` command just reparses the current MOM version. Can be used in conjunction with the `getmom` command to check and parse the current MOM.

With argument, the `parsemom` command will parse a different MOM to the one currently loaded in moshell. Can be useful if an incorrect MOM is stored on the node or if just wanting to browse a MOM offline. Example:

```
parsemom moshell/jarxml/RNC_NODE_MODEL_D_3.xml
```

#### 4.1.44 flt/fltc <motype-filter>

Load proxys for an MO type that is not defined in the MOM. ("Force" lt/ltc).

Can be useful in case the xml MOM isn't up to date with the node SW, or in case there is no xml MOM.

Example: `flt rncsystemparameters`

#### 4.1.45 fget[i]/lfget[i] <moGroup>|<moFilter>|<proxy(s)>|all [<attribute>]

Read attributes that are not listed in the MOM (f="Force").

With `fget/lfget`, the exact attribute name must be specified in the command.

Any attribute can be displayed as long as it is supported by the node SW.

Options:

- `i`: to read an attribute via "internalmomread" command. Only applicable to RCS nodes (MSRBS).

Examples:

- `fget ^pluginunit= resourceid`
- `fgeti ^eutrancellfdd= loadCtrlPrioOfMta`
- `fgeti ^eutrancellfdd=7 dlCyclicPrefix > $var`

#### 4.1.46 eget/leget <moGroup>|<moFilter>|<proxy(s)>|all [<attribute>]

Read attributes that are not listed in the MOM (e="Extended").

With `eget/leget`, the attribute name is optional, or an attribute filter can be used.

Only attributes listed in the file `moshell/commonjars/extendedMOM.txt` can be shown. The attributes of this file can also be shown in the commands `get/kget/sget` if the uservariable `use_extended_mom` is set to 1 (default: 0).

Example: `eget plug res`

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

#### 4.1.47 sget/lsgget/skget/lsgget/shget/lshget <moGroup>|<moFilter>|<proxy(s)>|all

Read CM/FM attributes from MO(s), one by one ("Slow" get).

Slow but useful in case the standard "get" command is not working due to some attribute returning an exception.

#### 4.1.48 fset[i]/lfset[i] <moGroup>|<moFilter>|<proxy(s)>|all <attribute> [<value>] [<attribute-type>]

Set an attribute that is not described in the MOM ("Force" set).

Can be useful in case the xml MOM isn't up to date with the node SW, or in case there is no xml MOM (e.g. MGW application part).

The syntax is similar to the "set" command except that the attribute type has to explicitly specified using the reference list below.

##### Options:

- **i**: to set an attribute via "internalmomwrite" command. Only applicable to RCS nodes (MSRBS). With "i" option, the attribute type should not be specified.

##### Examples:

- `lfset subrack=ms,slot=20,pluginunit=1$ administrativestate 0 i`
- `fseti ^eutrancellfdd= loadCtrlPrioOfMta false`

Following attribute types are supported:

- **i** integer/long/enum
- **l** longlong
- **s** string
- **b** boolean
- **r** moref
- **f** float
- **t** struct
- **ai** array of integer/long/enum
- **al** array of longlong
- **as** array of string
- **ab** array of boolean
- **ar** array of moref
- **af** array of float
- **at** array of structref

#### 4.1.49 facc/lfacc <moGroup>|<moFilter>|<proxy(s)>|all <action> [<param1>] [<param2>]

Perform actions that are not defined in the MOM ("force" action).

Can be useful in case the xml MOM isn't up to date with the node SW, or in case there is no xml MOM.

If the parameter is a an *integer* or a *string*, the parameter type does not need to be specified as in the example below.

Example:

- `lfacc Sector=1,Carrier=1,HsDschResources=1 startRDBTCellHidden 16`
- `facc CommContexts=1 readHsMusOnCCHidden 0`

Otherwise it should be explicitly specified, using the reference list below. **Examples:**

- `lfacc Equipment=1,Subrack=1,Slot=4,PlugInUnit=1,RaxDeviceGroup=1,UbchDeviceSet  
defineCqiPatternHidden 0 5 15,16,17,18,19:ai`

Following parameter types are supported:

- **i** integer/long/enum
- **l** longlong

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- s string
- b boolean
- r moref
- f float
- t struct
- ai array of integer/long/enum
- al array of longlong
- as array of string
- ab array of boolean
- ar array of moref
- af array of float
- at array of structref

#### 4.1.50 fdel/lfdel <moGroup>|<moFilter>|<proxy(s)>

Delete MO(s), including systemCreated MOs.

Works in the same way as the regular `del/lldel` command except that it also tries deleting the systemCreated MOs, whereas the `del` command skips them.

Though the systemCreated MOs cannot be deleted, this command can be useful when generating set commands in "simulated undo mode" for those systemCreated MOs.

## 4.2 Other MO commands

### 4.2.1 cvls/cvmk/cvms/cvset/cvrm[u][s]/cvrbm/cvcu/cvget[f][u][d]/cvput/cvls1/cvre/cvfa/cvfd

CV backup handling: list, make local, make remote, remove, setstartable.

A set of commands similar to the "cv" commands in OSE but operate through MO interface instead of telnet/ssh.

Command syntax and description (CPP):

- `cvcu`: display the current cv information only (equivalent of "cv cu").
- `cvls [<cv-filter>]`: display both the current cv information (equivalent of `cv cu`) and cv list (equivalent of `cv ls`). It is possible to filter the output of `cvls` to only show CVs where the CV name or CV attributes match a certain string. The proxy Id of the CVs can be used in the commands `cvrm` and `cvget`. The display of CV proxy Id can be disabled with command "safe+".
- `cvls1`: similar to the `cvls` command except that it executes via the OSE shell instead of the MO service.
- `cvmk <cvname> [<operator>] [<comment>]` : create a local cv backup. Operator name and comments (not longer than 40 characters) can be given as argument.
- `cvset <cvname>|<cv-Id>`: set a cv as startable.
- `cvms <cvname> [<operator>] [<comment>]` : create a cv and make it startable (combination of `cvmk` and `cvset`)
- `cvget[f] <cvname>|<cv-filter>|<cv-Id> [<destdir>]` : make a remote backup of a cv to the workstation. The operation is done with the MO action `putToFtpServer` unless option "f" has been specified, in which case the transfer will be done by FTP/SFTP. The second argument is optional. If not given, a default folder is chosen for the backup  
~/moshell\_logfiles/logs\_moshell/cv/<node>/<date>\_<time>/
- `cvgetu <UP>` : make a remote backup of all CVs connected to a specific UP (same as `cvget` but with the UP as argument).
- `cvgetd <cvname>|<cv-filter>|<cv-Id> [<destdir>]` : download the DB dump (dbdump.zip) for one or more CVs. This is only applicable for CPP OSE nodes that support the MO action `generateDbDump`. The DB dump is a text dump of the db.dat and can be read in SQL mode ("moshell -d /path/to/dbdump.zip") to perform DB consistency check without need for the Polyview SW.
- `cvput <zipped-cvfile>` : transfer a remote CV backup (zip file) from the workstation to the node. The operation is done with the MO action `getFromFtpServer`.
- `cvrm <cvname>|<cv-filter>|<cv-Id>` : remove one or more cv's. If the argument does not match an existing CV

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

then all CVs matching that string will be removed. A confirmation message is printed before removal. The CV(s) will automatically be removed from rollback list when necessary.

- **cvrmu <UP>** : remove all CV's connected to a specific UP (same as cvrm but with the UP as argument).
- **cvrbrm** : remove one or more cv's from the rollback list. If the argument does not match an existing CV then all CVs matching that string will be removed. A confirmation message is printed before removal.
- **cvfa** : activate robust reconfiguration (same as MO action Configuration.activateRobustReconfiguration)
- **cvfd** : deactivate robust reconfiguration (same as MO action Configuration.deactivateRobustReconfiguration)

#### Command syntax and description (COM):

- **cvcu** : display the current backup information only.
- **cvls [<cv-filter>]** : same as above plus the list of SwVersions, UpgradePackages and BrmBackups. The Id field of the BrmBackup can be used in the commands cvrm and cvget.
- **cvmk <cvname>** : create a local backup.
- **cvre <cvname>|<cv-Id>** : restore a backup (equivalent to doing a cvset followed by node restart on CPP)
- **cvrm <cvname>|<cv-filter>|<cv-Id>** : remove one or more backups from the node. If the argument does not match an existing backup then all backups matching that string will be removed. A confirmation message is printed before removal.
- **cvrmu <UP>** : remove all backups connected to a specific UP (same as cvrm but with the UP as argument).
- **cvrms**: remove all SYSCR backups and clear the RestoreEscalationList (no arguments).
- **cvget <cvname>|<cv-filter>|<cv-Id> [<destdir>]** : export a backup to the workstation. The second argument is optional. If not given, a default folder is chosen for the backup  
~/moshell\_logfiles/logs\_moshell/cv/<node>/<date>\_<time>/
- **cvgetu <UP>** : export all backups connected to a specific UP (same as cvget but with the UP as argument).
- **cvput <zipped-cvfile>** : transfer a backup (zip file) from the workstation to the node.
- **cvfa** : activate failsafe backup (same as MO action BrmFailsafeBackup.activate)
- **cvfd** : deactivate failsafe backup (same as MO action BrmFailsafeBackup.deactivate)
- **cvfda** : same as cvfd but the Post\_failsafe\_backup will be added to the RestoreEscalationList
- **cvfdc** : same as cvfda but all SYSCR backups will be deleted and removed from RestoreEscalationList

#### Examples:

- **cvls**: List all CVs
- **cvls CXP9011274\_R9A**: List all CVs using Upgradepackage CXP9011274\_R9A
- **cvms RNC11\_Final**: Create a cv and make it startable (no userid or comments given)
- **cvms RNC11\_Final eanzmagn cell power increased to 33dBm**: Create a cv and make it startable (userid and comments given)
- **cvrm Temp**: Remove all cv's whose name match the string "Temp"
- **cvrm !Final**: Remove all cv's whose name don't match the string "Final"
- **cvrm !Final|RNC**: Remove all cv's whose name don't match the string "final" or the string "RNC"
- **cvget RNC11\_Final**: Make a remote backup of a CV to the workstation where moshell is running
- **cvget RNC11.\*Fi**: Make a remote backup of all CVs whose name matches RNC11.\*Fi
- **cvput /home/eric/RNC11\_Final.zip**: Transfer a remote cv backup from the workstation to the node
- **cvrm 1-15**: Remove the oldest 15 CVs.
- **cvget 3, 5, 8**: Fetch CV number 3, 5, and 8 from the cv list.
- **cvset 23** : Set CV number 23 as startable
- **cvrmu CXP9011274\_R9A**: Remove all CVs/Backups connected to the UP CXP9011274\_R9A
- **cvgetu CXP9011274\_R9A**: Export/fetch all CVs/Backups connected to the UP CXP9011274\_R9A
- **cvfa**: Activate failsafe/robust configuration
- **cvfd**: Deactivate failsafe/robust configuration

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- `cvfdc`: Deactivate failsafe and delete all SYSCR backups (Gen2 only)

#### 4.2.2 `inv[hlxbpctyrgfau] [<Filter>] [<stateFilter>]`

Complete HW/SW inventory. Includes information about RPU, licensing, JVM, devices, XPs, ISL, etc.

This command performs a complete HW/SW inventory via the MO and COLI interface. All SW including JVM, RPU, and Device SW (spm,dsp,fpga) is shown. Licensing (features and capacity) as well as overview of the ISL links is also shown.

##### Options:

The options are used to reduce the number of tables displayed. Without options, all tables are displayed.

- `h` : HW information only.
- `x` : HW, CPRI, and RF information (TX/RX/VSWR and RU to Cell mapping)
- `xf` : same as "x" but without CPRI.
- `xu` : same as "x" but without RF (only UEs)
- `xt` : same as "x" but without RF nor temperature.
- `xtg` : same as "x" but without RF, temperature and SFP data. Combined with "g" (`invxtg`) this is the quickest way to get the CPRI and RF connections.
- `xa` : same as "x" but with RU mapping to Antenna/TMA/RET instead of Cell
- `xaf` : same as "x" but with RU mapping to both Cell and Antenna/TMA/RET
- `xtaf`: same as "xaf" but without TX/RX/VSWR/temperature (quicker)
- `l` : licensing information only (feature and capacity licenses)
- `p` : show CPU load of the PlugInUnits: obsolete, replaced by command "`lh all procload`".
- `r` : re-read the inventory data from the node.
- `c` : print the tables in CSV format
- `b` : show receiver BER values in the CPRI tables
- `g` : display graphical view of CPRI and RF connection (RBS/ERBS/MSRBS)

The first time the command is run, it takes a bit longer because the data has to be fetched from the node before parsing. The following times the command is run, the existing data is parsed again, unless the `r` switch is used ("refresh"), in which case, the data is fetched again and parsed. When no options are specified, all the information will be displayed except BER and Antenna (which can be printed with options "b" and "a" respectively).

##### Arguments:

- The first argument (general filter) allows to only show the lines matching the filter string. Negative filter is supported by putting a exclamation mark in front of the filter. See examples further down.
- The second argument (state filter) allows to only show the lines where the MO status matches the state filter.

##### Printout description:

- the first table shows the MP/BP hardware info, position, and status. The GE column (when subrack contains CMXB) shows the connection status to the 10G IP backplane (attribute `EthernetSwitchModule::backPlanePortState`), the CE column (when subrack contains SCXB) shows the connection status to the 1G IP backplane (attribute `ControlSwitch::backPlanePortState`). The column "c/p" shows the disk usage on /c or /p (depending if it is a central MP or regular MP), and the column "/d" shows the disk usage of the /d volume.
- the second table shows the AuxiliaryUnits (XP) hardware/software info, status, temperature in Celsius, and uptime in days ("UPT" column).
- the third table shows the subbracks and backplanes HW info. The `switchState` field consists of three digits: the state of the switch, the state of plane A, and the state of plane B.
- the next table shows the ISL links. The ISL links are only applicable in nodes containing several subbracks, eg RNC/MGW. All ISL links connecting the main subrack to each extension subrack are shown. The status of each link is shown: 1st digit corresponds to "operationalStateSync" and the 2nd digit corresponds "operationalStateTraffic". The ports connected to each ISL are shown, including the type of board (SCB/SXB) and the port state (active/passive).
- the next table shows the RDS/DOT inventory. Only applicable for RBS/ENB with IRU (Indoor Radio Unit). The description of the fields can be found further down in this help.
- the next table shows the CPRI links, as well as IDL and IPL links when present (Inter-DU links, Inter-PIMCU links). Only

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

applicable for RBS/ENB.

- the next table shows the RF ports of the radio units, one line per port. See description further down.
- the next two tables shows the list of features and capacity and their licensing status  
The FAJ numbers are read primarily from the License.xml file on the node and if not found there, they are read from the excel sheets on  
[https://ericsson.sharepoint.com/sites/SW\\_License\\_Handling\\_Community/SWLicenseHandling/ELIS/Wiki/License](https://ericsson.sharepoint.com/sites/SW_License_Handling_Community/SWLicenseHandling/ELIS/Wiki/License)  
The information about restricted features is read from the documents 2/22104-FGB101135 and 4/19812-FGB101135.
- the next table shows the java loadmodules that are running in the JVM.
- the next table shows the configuration and status of the ReliableProgramUniters (RPU).
- the last table shows the Programs running in each processor including devices.

Description of the "state" column:

State information is always abbreviated to one digit, in the same way as for other printouts such as stt, stv, str, etc.

- 1 = unlocked enabled
- 0 = unlocked disabled
- L = locked (opstate could be enabled or disabled)

On Router6000 there are additional states:

- L1 (Shutdown), L2 (Deactivated), L3 (Out of service diagnostic), L4 (Not configured)
- A1 (IN\_TEST), A2 (FAILED), A3(POWER\_OFF), A4(OFF\_LINE), A5(OFF\_DUTY), A6(DEGRADED), A8(LOG\_FULL), A10(DEPENDANCY)

Description of the LED columns:

- FAULT: RED
- OPER: GREEN
- MAINT: YELLOW or BLUE (old boards use YELLOW, new boards use BLUE)
- STAT: YELLOW (only applicable for EvoC)

Description of the PMTEMP column (applicable in MSRBS >= 19Q2 )

The value corresponds to the counter FieldReplaceableUnit::pmUnitTemperatureLevel and is translated as below:

- NOK-: the temperature is too low, service unavailable
- OK-: the temperature is low but still in the acceptable range
- OK: the temperature is ok
- OK+: the temperature is high but still in the acceptable range
- NOK+: the temperature is too high, service unavailable

Description of the fields in the RDS/DOT table (only applicable for RBS/ENB containing IRUs with DOTs):

- MO/FRU: the MO name of the AuxPlugInUnit/FieldReplaceableUnit representing this DOT unit
- LNH/ID: the linkhandler address and port number (1 to 8) of the IRU to which the DOT is connected
- RDS: the product name of the DOT unit
- ST: the state of the AuxPlugInUnit/FieldReplaceableUnit MO representing this DOT unit
- P: the PowerOverEthernet status. Read from the command `eqpm rdPoe status all (1=detected:true, 0=detected:false)`
- C: the Connection status. Read from the command `rdc dump all (1=RD_OPERATIONAL, 0=RD_FAILED/NOT_PRESENT)`
- T: the LTU status. Read from the command `rdsh all hal ltu lock (1=LOCKED, 0=NOT_LOCKED)`
- TX/RX: the status of the DOT's TX/RX branch A and B respectively. Read from the command `rdc dump all (1=ENABLE, 0=DISABLE)`
- TEMP: the temperature of the DOT, in Celsius. Read from the command `rdsh all temp.`
- VII: the status of the visual indicator of the DOT. Read from the command `rdsh all vind.`
- FAULT: indicates the presence of alarms on the DOT. Read from the command `eqpm rdFault dump`



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

Description of the fields in the CPRI table (only applicable for RBS/ENB):

- ID: an arbitrary reference number for the link, also used in the SFP tables.
- T: Type. E=Electrical, O=Optical, I=Internal (eg IDL or IPL). For Optical links, there are three additional tables showing the product information and diagnostics for the SFP's located at the extremities of each CPRI link (SFP= Small Form-factor Pluggable transceiver). See description further down.
- RiL: the name of the RiLink MO representing this CPRI link.
- BPBP: B=Board state, P=Port state. The state of PlugInUnit/AuxPluginUnit/FieldReplaceableUnit MO and RiPort MO on each side of the CPRI link.
- R: Role. M=Master, S=Slave. Master is always on the left hand side Slave on the right.
- LENGTH: Cable length. The cable length is obtained from the CPRI link delay value in nanoseconds which is then divided by 4.9 to obtain the cable length (assuming a delay of 4.9ns per meter of cable, or two thirds of the speed of light)
- BER: the counter value of the received Bit Error Rate. NZ=Non-Zero (=> there are Bit Errors on this port). Note: only shown with option "b".

Description of the fields in the SFP diagnostics table (only applicable for RBS/ENB containing optical CPRI links):

- ID: the unique id of the CPRI link which can be used to match against the connection and product information in the above two tables of the printout.
- LINK: indicates if the CPRI link is Up or Down according to the information from the COLI command "ricr".
- WL: the wavelength of the laser, in nm.
- TEMP: temperature of the SFP in Celsius
- TXbs: the TX bias level in percent of the low/high warning thresholds. Calculated with the formula  $100 * (\text{Bias} - \text{LowLimit}) / (\text{HighLimit} - \text{LowLimit})$ . Should not be negative or higher than 100%. Acceptable values are typically in the range of 1% to 50%, depending on SFP vendor.
- TXdBm: the transmitted power in dBm
- RXdBm: the received power in dBm
- BER: the counter value of the received Bit Error Rate. NZ=Non-Zero (=> there are Bit Errors on this port). Note: only shown with option "b".
- DILoss/UILoss: the difference in dB between the TX power of the sending port and the RX power of the remote port. Acceptable values should be between -1 dB and +3dB when using short point-to-point connections (length < 200m). When using longer connections and/or with xWDM filters/splitters then the loss values should be compared according to expected link budget, taking into account the losses filters/splitters/connectors.
- Consistency checks: three checks are performed on the content of the SFP A0 area. Check #1 is the preamble (should be 0304), check #2 is the checksumBase (bytes 2-62->63), check #3 is the checksumExtended (bytes 64-94->95). There is also the DMI checksum #4 done toward SFP A2 area (modulo 256 of bytes 0-94->95). If any of these checks fail the VENDORNAME will show CKSF<sub>FAIL</sub>#x where x represents the list of failed checksums.

If the CPRI link is down or the SFP voltage is not between 2 and 4V, then some of the diagnostics values will show "NA" ("Not Applicable").

Description of the fields in the TN ports table

- BOARD/LNH: the product name and linkhandler address of the board where the TN ports are located
- PORT: the MO name of the TnPort MO
- T: the port type. E=Electrical, O=Optical. For Optical port, the SFP information will be found in the SFP table just above the TN ports table.
- S: the state of the EthernetPort MO connected to the TnPort. 1=Unlocked&Enabled, 0=Unlocked&Disabled, L=Locked
- OpMode: the value of the attribute EthernetPort::operOperatingMode
- MacAddress: the value of the attribute EthernetPort::macAddress
- VlanIds: the list of vlanIds for all the VlanPorts connected to the EthernetPort which is associated with this TN port.
- LOS: the number of times connection was lost due to ethernet link failures during the current ROP. Corresponds to the counter EthernetPort::ifHCLossOfSignal.
- BER: the counter value for the received and transmitted packet errors for the current ROP. NZ=Non-Zero (=> there were packet errors on this port). Corresponds to the counters ifInErrors/ifOutErrors on EthernetPort MO. Note: only shown with option "b".



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

## Description of the fields in the RF ports table

- AuxPiu/FRU: the MO name of the AuxPlugInUnit/FieldReplaceableUnit MO representing this radio unit.
- LNH: the linkhandler address of the radio unit, can be used to connect to the radio with command "lhsh".
- BOARD: the product name of the radio unit
- RF: the RF port on the radio unit
- BP: B=Board state, P=Port state. The state of the AuxPlugInUnit/FieldReplaceableUnit MO and RfPort MO.
- TX (W/dBm): the currently transmitted power in Watts and dBm.
- VSWR (RL): the VSWR and Return Loss in dB
- RX (dBm): the received power in dBm
- RLs/UEs/gUEs: the number of 3G RadioLinks / 4G UE connections / 5G UE connections respectively
- Sector: the Sector MO or SectorEquipmentFunction MO connected to the RF port is represented by "SR" or "SE", respectively. SR is applicable for WRBS, and SE is applicable for ENB and MSRBS. If there is an asterisk next to the SR/SE name, then it means that this sector uses mixedModeRadio.
- Cells: for WRBS, shows the RbsLocalCells connected to that RF port and their state and localCellId values. For ENB and MSRBS LTE, it shows the EUTranCellxDD/NbIotCell MO names, and their corresponding state, cellId and PCI values. For MSRBS WCDMA, it shows the NodeBLocalCell name in the following way: NB=<localcellgroup>/<localcell>/<sectorcarrier>, followed by their respective state and localCellId values. For MSRBS GSM, it shows the GsmSector/Trx in the following way: GT=<gsmsector>/<trx>. For MSRBS NR, it shows the NRCellIDU in the following way: NRC=<name>. Regarding the cell states, the meaning is: 1: Unlocked&Enabled, 0: Unlocked&Disabled, L: Locked, B: EUTranCellxDD::cellBarred=BARRED, R: EUTranCellxDD::primaryPlmnReserved=true, S: EUTranCellxDD::CellSleepFunction::sleepState=ACTIVATED, D: EUTranCellxDD::availabilityStatus=DEGRADED
- AG: the name of the AntennaUnitGroup MO connected to this RF port.
- AS: the name of the AntennaSubunit MO connected to this RF port (AS=x/y => AntennaUnitGroup=x,AntennaUnit=y,AntennaSubunit=1)
- RET/TMA: the name of the AntennaNearUnit MO (RET or TMA) connected to this RF port (RET=x/y or TMA=x/y => AntennaUnitGroup=x,AntennaNearUnit=y)

## Description of the fields in the graphical view

- each box represents a FieldReplaceableUnit (MSRBS) or PlugInUnit/AuxPlugInUnit (RBS/ERBS). Inside each box are the MO id, the board type, and the link handler. On the side of each box are the CPRI port names. On the bottom of each RU box are the RF ports and corresponding sector/cells.
- each line represents a CPRI connection. On the CPRI connection are listed:
  - the ID number from the CPRI tables described above. Next to it is the RiLink number when applicable (MSRBS/ERBS).
  - the link type (E/O) and bit rate (eg: O25 = Optical 2.5 GB/s).
  - the length expressed in meters (considering delay of 5 ns per meter), when applicable (MSRBS/ERBS).

```

+-----+
	A O25 D1	2
	-----1/1-----	RRUS11B4
	181m	BXP_0
		+-----+
1		
DUS3201		
000100		
	B O25 D1	3
	-----2/2-----	RRUS11B13
	180m	BXP_1
		+-----+
+-----+ | | SE=2 FDD=2

```

## Examples:

- `inv CXC132055` → only rows matching CXC132055 will appear. This is convenient to lookup the name of an LM and in see which boards it is running.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- `inv :` → only RPU information will be printed.
- `inv nss` → to see which loadmodules contain the string "nss" and in which boards they are running.
- `inv . L|0` → only rows where the state of the MO is locked or disabled will appear.
- `inv roj L|0` → only rows matching "ROJ" and where the state is locked or disabled will appear.
- `inv !program` → only rows NOT matching the word "program" are displayed.

#### 4.2.3 cab[adefghlmrstxc] [ | <unix-cmds> ]

Display of miscellaneous COLI printouts relating to hw, sw, restarts, leds, cpu load, errors, disk/ram usage

This command is only applicable to CPP nodes. On RCS nodes "cab/cabx" aliases to "invx" and "cabr/caba" aliases to "lgg".

The `cab` command offers a number of options, it is possible to combine several options, eg: `cabslxrdg`, `cablx`, `cabxs`, etc.

The command `cabslxrdgm` will give the maximum amount of information.

Note: Most options are now obsolete and superceded by other commands such as "inv", "proctemp", "procload", and "fte".

##### Options:

- `h` : prints MP/BP HW info and led status, MP temperature, and coreMgr status. If no options are given then this is the default option. Superceded by "inv" and "proctemp" commands.
- `t` : same as "h" but without the temperature, nor the TX/VSWR values (in RBS/ENB)
- `x` : same as "h" plus led and hw info for the XP boards (eg: TMA, MCPA, Fans, RU, RRU, etc.). With option "c" ("cabxc") the output is in CSV format. Superceded by "inv" command.
- `s` : same as "h" plus list of programs running in all MP/BP. Superceded by "inv" command.
- `r` : prints all MP/BP restarts grouped by board. To see this info in chronological order, use the command "lgg". Abnormal restarts are highlighted in red.
- `a` : prints only abnormal MP/BP restarts.
- `d` : print disk usage. Disks that are getting over a certain limit will appear in color. The limit can be defined in cabview file.
- `f` : print disk and flash usage.
- `g` : print MP/BP HW errors (e.g. faulty disk, faulty RAM, etc).
- `m` : print MP/BP RAM memory usage.
- `e` : print MP/BP added T&E trace conditions. Superceded by `fte s` command.
- `l` : MP/BP/SP processor load. Superceded by `procload` command.

The following OSE commands are run and parsed by the various "cab" functions:

- `h` : `pboot sh par, vii, mirror s, ppctemp, boardtemp`
- `t` : `pboot sh par, vii, mirror s`
- `x` : `pboot sh par, vii, mirror s, ps port*, par get SYS_HW*, listObj subrack, getAttrObj subrack, warpA/warpB read, warp3 txpwr, fui get temp, fui get vswr`
- `s` : `pboot sh par, vii, mirror s, listloaded`
- `l` : `pboot sh par, capi prio, capi core all`
- `r` : `llog -l`
- `a` : `llog -l` Only restarts with error code not matching 0xB0AD or 1010[9-F] or containing a PMD are printed
- `d/f` : `vols, ls /d/loadmodules`
- `g` : `pboot sh par, dumpelg`
- `m` : `pboot sh par, mmu, mm -p`
- `e` : `pboot sh par, te s, te s -restart`

Note 1: Regarding the CoreManager status: If a board has got a CoreManager status, it means that the board is running the Core Manager programs (EqmMgr, Database, LoaderServer). If the node is configured with Fault Tolerant Core, there are two boards running the Core Manager functionality. One board is *Active* and the other one is *Standby*.

When the node is configured with Fault Tolerant Core, the `/c` drive is mirrored between the two Core Manager boards.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

If the status of the Standby board is *StandbyReady*, then it means that the /c drive is correctly mirrored and the standby board can take over the active role at any time, in case the active board fails or restarts.

If the status of the Standby board is *StandbyWriting*, then it means that the /c drive is performing a small update and the standby board can take over in a short while, as soon as the disks are updated.

If the status of the Standby board is *StandbySync*, then it means that the /c drive is performing a complete update and the standby board will not be able to take over until this is completed. The progress is shown as a percentage value (eg: **StandbySync-56%**).

Note 2: When many commands are to be sent, the `cab` function will put them into a command file, transfer that file (via (s)ftp) to the node and run that file from within the node, using the `shell -f` command.

This will save time instead of having to send each command one by one to the node.

There is a user variable called *fast\_cab\_threshold* which determines the number of boards in the node above which a command file will be transferred to the node.

See Section 2.5 and the **moshell** file for more info about user variables.

Note 3: Regarding PMD Ids appearing in `cabr/caba`:

A Post-Mortem Dump (PMD) may be associated with an abnormal board restart. In this case, the PMD Id is shown in `cabr/caba` commands. It is possible to show and collect the PMD files with the command `lgp`. Alternatively the commands `dump list -a,ftreef /c/pmd`, or `lg1` can also be used to show the PMD files.

Note4: Regarding TX power calculation in "cabx":

For RU PL4:

```
TXPwrA=(DL_PM_PA0_C0+DL_PM_PA0_C1+DL_PM_PA0_C2+DL_PM_PA0_C3)*16384*powerClassA/(1228800*8491396)
TXPwrB=(DL_PM_PA0_C0+DL_PM_PA0_C1+DL_PM_PA0_C2+DL_PM_PA0_C3)*16384*powerClassB/(1228800*8491396)
```

Where:

- `DL_PM_PA0_Cx` are read from RU COLI commands "warpA read" for TXA och "warpB read" for TXB
- `powerClass` is read from RU COLI command "db list \*currentPowerClass", or "txm rh all wrk dump"

For RU PL5:

- $TXPwrA = pwrClassA * 268435456 / 8491396 * (10^{(B0/10)} + 10^{(B1/10)} + \dots + 10^{(B7/10)})$
- $TXPwrB = pwrClassB * 268435456 / 8491396 * (10^{(A0/10)} + 10^{(A1/10)} + \dots + 10^{(A7/10)})$

Where:

- A0 to A7 and B0 to B7 are read from RU COLI command "warp3 txpwr" or "warp:0/warp:1 txpwr"
- `powerClass` is read from RU COLI command "db list \*currentPowerClass", or "txm rh all wrk dump"

Note5: Regarding RSSI measurement in "cabx" for WRBS:

The RSSI is value is read from the MP trace `bus_receive` on `CDCI_TR`. A asterisk in front of a TrDevice in the printout indicates that this TrDevice has reported a measurement. TrDevices without asterisk could be due to that this is a TX or that the cell is disabled.

Note6: Regarding VSWR measurements in "cabx":

For most RUs/RRUs, the main command used for printing the return loss is `fui get vswr <tx>`.

Note7: Refreshing of the cache.

The `cab` command reads most of its data from the node each time it is executed. However there is some static data such as board list and cell list which is read only once and then kept in a cache. If this information has changed during the session, it is possible to refresh the cache by running the "bor" command.

Note8: DU Temperature is read with:

- DUW10/20/30: trace4 on process SriBcThread, sensor3 (0x4B)
- DUW11/31/41: coli command readPower, sensor 1 (0x4D)
- DUL20/21: coli command boardtemp, sensor0
- DUS31/41/ODS: coli command boardtemp, sensor1

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

#### 4.2.4 sdi[cjr]

System Diagnostics CPRI.

Perform a system diagnostics test of the RBS/ENB CPRI links.

Options:

- c : print the tables in CSV format
- j : combine the first three tables into one machine-readable CSV table (useful for parsing mobatch-run)
- r : re-read the data from the node.

#### Printout format, first table

Each line in this table represents a CPRI link.

- ID: arbitrary number to identify the CPRI link
- RiL: MO name of the associated RiLink (only applicable for ENB/MSRBS, not WRBS)
- Type: E=Electrical, O=Optical, 25=2.5Gb/s, 49=4.9Gb/s, 98=9.8Gb/s, 103=10.3Gb/s
- Res: the result of the test, OK, NOK (Not OK), OKW (OK with Warning), NT (Not Tested = when a port or board on the link is locked)
- MO1-MO2: a shortened LDN of the CPRI port MO on each side of the link
- BOARD1-BOARD2: the board type on each side of the link
- AlmIDs: the list of alarms associated with the RiLink, RiPorts or FRU/PIU/AuxPius connected to the link (only applicable on ENB/MSRBS)
- Cells: the list of Cells (EUTranCell, NodeBLocalCell, RbsLocalCell, GsmTrx, etc) associated with any radios connected to the link
- States: the state of each cell. 1: Unlocked&Enabled, 0: Unlocked&Disabled, L: Locked, B: EUTranCellxDD::cellBarred=BARRED, R: EUTranCellxDD::primaryPlmnReserved=true, S: EUTranCellxDD,CellSleepFunction::sleepState=ACTIVATED
- Issue: a short description of the test result including information about which particular checks failed.

```
=====
ID ; RiL ; Type ; Res ; MO1-MO2 ; BOARD1-BOARD2 ; AlmIDs ; Cells (States) ; Issue (Failed checks)
=====
1 ; 1 ; O98 ; OK ; 1/1 (A) 1/1/RU-1-1 (D1) ; DUS4102 RRUS82B41 ; ; TDD=1 TDD=2 (1,L) ; Passed
2 ; 2 ; O98 ; NOK ; 1/1 (B) 1/1/RU-1-1 (D2) ; DUS4102 RRUS82B41 ; ; TDD=1 TDD=2 (1,L) ; Fiber Loss DL (DlLoss-UL)
3 ; 3 ; O25 ; OK ; 1/1 (C) 1/2/RU-1-2 (D1) ; DUS4102 RRUS62B41D ; ; TDD=3 (S) ; Passed
4 ; 4 ; O98 ; NOK ; 1/1 (D) 1/3/RU-1-3 (D1) ; DUS4102 RRUS62B41D ; 1,2 ; TDD=4 (B) ; Fiber BER DL (BER2=NZ)
...
15 ; 13 ; O25 ; OKW ; XMU03 (11) RRU-101 (D1) ; XMU03 RRUS12B2 ; ; FDD=9A_1 (R) ; Conditionally Passed (Unab)
=====
```

#### Printout format, second table

This table is only printed if the option "a" was given and if there are alarms affecting CPRI links.

Each line in this table represents an alarm, could be an active alarm, or a past alarm that has been toggling during the past 24 hours

- AlmID: an arbitrary number to identify the alarm, this number is found next to one or more CPRI links in the first table
- IDs: the list of CPRI link IDs that have this alarm
- RiLs: the list of RiLink MOs that correspond to the CPRI link IDs
- Status: A=Active, if the alarm is still active. T=Toggleing, if the alarm is not active but has been toggling in the past 24 hours. In case of toggling alarm, it will show how many times the alarm has toggled and how many hours/minutes ago was the last time since the alarm toggled.

```
=====
AlmID ; IDs ; RiLs ; Status ; Alarm
=====
1 ; 4 ; 4 ; T 8x 12h28m ; Link Degraded - RiLink=4 (High BER at far end of the link. Near end port:PlugInUnit=1
2 ; 4 ; 4 ; T 8x 12h30m ; Link Degraded - RiLink=4 (High BER at near end of the link. Near end port:PlugInUnit=1
=====

AlmID ; IDs ; RiLs ; Status ; Alarm
=====
```

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

```

1 ;5 ;5 ;A ;Inconsistent Configuration - FieldReplaceableUnit=6 (No hardware detected f
2 ;6 ;6 ;A ;Inconsistent Configuration - FieldReplaceableUnit=7 (No hardware detected f
3 ;5 ;5 ;A ;Link Failure - RiLink=5 (No signal detected (link start time-out). ManagedE
4 ;6 ;6 ;A 3x ;Link Failure - RiLink=6 (No signal detected (link start time-out). ManagedE
5 ;1,2,3,4,5,6 ;1,3,5,2,4,6 ;A ;Hardware Failure Imminent - Subrack=1,Slot=1,PlugInUnit=1 (HDFault, Read se

```

### Printout format, third table

This table is only printed if some CPRI links failed the test.  
Each line in this table represents a particular type of issue.

- IDs: the list of IDs for the CPRI links that had a issue of this type
- RiLs: this list of RiLink MOs corresponding to each CPRI link listed in the IDs column (only applicable for ENB/MSRBS, not WRBS)
- Issue and Recommended Action: a longer description of the problem, followed by some recommendations for corrective actions for each type of issue.

```

=====
IDs ;RiLs ;Issue and Recommended Actions.
=====

```

```

2 ;2 ;Fiber Issue - Far End Reports Excessive Optical Power Loss.

```

```

1) Troubleshoot to determine where optical power is being lost or Bit Errors are detected. Start at th
2) Refer to and follow Ericsson CPI "Handling SFP Modules and Optical Cables" for proper handling, Cle

4 ;4 ;Fiber Issue - Far End Reporting Bit errors.

```

```

1) Troubleshoot to determine where optical power is being lost or Bit Errors are detected. Start at th
2) Refer to and follow Ericsson CPI "Handling SFP Modules and Optical Cables" for proper handling, Cle

```

### Description of the fields in the graphical view

- each box represents a FieldReplaceableUnit (MSRBS) or PlugInUnit/AuxPlugInUnit (RBS/ERBS). Inside each box are the MO id, the board type, and the link handler. On the side of each box are the CPRI port names. On the bottom of each RU box are the RF ports and corresponding sector/cells.
- each line represents a CPRI connection. On the CPRI connection are listed:
  - the ID number from the CPRI tables described above. Next to it is the RiLink number when applicable (MSRBS/ERBS).
  - the link type (E/O) and bit rate (eg: O25 = Optical 2.5 GB/s).
  - the length expressed in meters (considering delay of 5 ns per meter), when applicable (MSRBS/ERBS).
  - the test result: OK (green), NOK (red), OKW (purple), NT (blue).

```

+-----+ +-----+
	A O25 D1	2
	-----1/1-----	RRUS11B4
	OK-181m	BXP_0
		+-----+
1		SE=1 FDD=1
DUS3201		
000100		+-----+
	B O25 D1	3
	-----2/2-----	RRUS11B13
	OKW-180m	BXP_1
		+-----+
+-----+ | SE=2 FDD=2

```

### 4.2.5 stc[p][r] [<Filter>] [<stateFilter>]

Display state and configuration of Atm/Tdm CrossConnections.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

The filter allows to only show the rows matching the filter string. The stateFilter allows to only shows the MOs matching the state filter.

The first time the command is run, it takes a bit longer because the data has to be fetched from the node before parsing. The following times the command is run, the existing data is parsed again, unless the `r` switch is used (*refresh*), in which case, the data is fetched again and parsed.

The first field is the MO id of the Atm/Tdm CrossConnection.

The second field is the state information, consists of five digits:

- 1st digit: *operational/State* of the Atm/Tdm CrossConnection MO (0=disabled, 1=enabled)
- 2nd and 3rd digits: *operational/State* of the VclTp MOs (A and B side).
- 4th and 5th digits: only applicable if "p" option was used. Shows the status of the **pget** on VclTp MOs (A and B side). Set to 0 if the transmittedCells counter has incremented but the receivedCells counter has not incremented within a given time period (by default 25 seconds, can be changed in the uservariable `pm_wait`): this indicates that there is no response from the remote end.

The third and fourth field are the Mold for VclTpA and VclTpB, abbreviated in the following way: AtmPortId/VpiTpId/VclTpId

The fifth and sixth fields are the actual Vpi/Vci value for VclTpA and VclTpB. Can be useful in case the Mold of the VclTp does not match the Vpi/Vci value.

The seventh and eighth fields are the Mold for the traffic descriptor of VclTpA and VclTpB.

The last field is the *userLabel* of the AtmCrossConnection MO.

Note: in the case of TdmCrossConnections, the third and fourth fields show the Timeslot in the Ds0Bundles A and B. The fifth and sixth fields show the Mold of the Ds0Bundle A and B.

#### Examples:

1. `stc 2051` - show all crossconnections where the information matches "2051" (in the case below, where the atmport is 2051)
2. `stc .* 0` - show all crossconnections that are not working properly.

Printout format, AtmCrossConnection:

```
=====
CCId CSPP VclTpA VclTpB Vp/VcA Vp/VcB TD-A TD-B UserLabel
=====
MGTS44500_MSC6_AAL2a 11110 2041.*1.*501 2071.*1.*501 1/501 1/501 C2P12000 C2P12000 MGTS44500_MSC6_AAL2a
MGTS44500_MSC6_AAL2b 11111 2041.*1.*502 2071.*1.*502 1/502 1/502 C2P12000 C2P12000 MGTS44500_MSC6_AAL2b
SOLVER44800_MSC6_AAL2a 10101 2051.*1.*136 2071.*3.*512 1/136 3/512 C2P12000 C2P12000 SOLVER44800_MSC6_AAL2a
MGTS45600_MSC9_AAL2a 11100 2052.*1.*300 2041.*1.*300 1/300 1/300 U2P3520M3520 U2P3520M3520 MGTS45600_MSC9_AAL2a
=====
```

Printout format, TdmCrossConnection:

```
=====
CCId CSS TSA TSB Ds0A Ds0B UserLabel
=====
1192_1191_ts16 101 1 1 1,Slot=27.*E1.*=1277,Ds0.*=127702 1,Slot=27.*E1.*=1276,Ds0.*=127602 TS 16 127702_port1191
=====
```

#### 4.2.6 std[ar] [<filter>]

Display state and configuration of devices (RNC and MGW only).

Argument (optional):

Only lines matching the filter will be displayed. If no argument, all lines are displayed.

Example:

- `std fax` - show fax devices (mgw)
- `std pdr` - show pdr devices (rnc)
- `std 0020` - show devices on board 0020

#### Options:

- `r`: to refresh the printout. In MGW the device data is locally cached and updated when the "r" option is given. This is the same behaviour as in commands such as `bo`, `stc`, `stt`, `stv`, `inv`, etc. In RNC, the "r" option forces moshell to re-check the device to module relationship. All other data is refreshed each time, even without the "r" option.
- `a`: to fetch some additional device usage information.

#### std on MGW

The first table (only printed with option `a`) shows the DSP SW and usage for each MSB board. The `GMD` field indicates the status of the GRA-GPB ("G"), the MSB ("M") and DSPs ("D"). The GRA-GPB and MSB status correspond to the state of the

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

corresponding PlugInUnit: L=locked, 1=enabled, 0=disabled. The DSP status is found from the command `pingdsp` on MSB3 and `mmpp pingdp` on MSB4. The DSP SW is found from the command `rev` on MSB3 and `mmpp dspc devt` on MSB4. The DeviceType and all remaining fields are found from the command `gradsl` on GRA-GPB:

- `Set = DevSetNr` : device set id
- `ResId = resourceId`
- `nRes = nrOfResources` : total nr of allocated resources for this device set
- `nIdle = nrOfIdle` : nr resources not in use
- `graCap = graRdCapacity` : available capacity expressed in PUs available for normal calls
- `dspCap = dspRdCapacity` : rdScaledCapacity (reported by DSP and used by MFD only) is available devices expressed as remaining PUs
- `totCap = rdCapacityTot` : total capacity expressed in PUs (reported by RD in attachCfm)
- `rej = nrTimeoutRej` : number of rejected requests because of 30+30ms + 1 sec DSP supervision timer timeout. At this point DSP is marked as failed
- `nRest = nrGraOrderedDspRestarts` : number of GRA ordered DSP restarts because of 30+30ms + 1+10 sec DSP supervision timer timeout
- `dupCep = nrOfDupCeps` : current number of duplicated CEPs in this RD

More info found in `gradsl` printout description in M-MGW Traffic Control Troubleshooting Guideline 25/1553-AXM 101 01/7

| Sr | Slot | Lnh    | Board | GRA  | DSP | GMD | DeviceType  | SW                 | Set | ResId | nRes | nIdle | graCap | dspCap | totCap | rej | nRest | dupCep |
|----|------|--------|-------|------|-----|-----|-------------|--------------------|-----|-------|------|-------|--------|--------|--------|-----|-------|--------|
| 3  | 7    | 730700 | MSB3  | 7304 | 1   | 111 | UMTS_MFD    | CXC1327790/8_R3L01 | 325 | 9594  | 166  | 166   | 57300  | 57300  | 57300  | 0   | 0     | 0      |
| 3  | 7    | 730700 | MSB3  | 7304 | 2   | 111 | UMTS_MFD    | CXC1327790/8_R3L01 | 325 | 9594  | 166  | 166   | 57300  | 57300  | 57300  | 0   | 0     | 0      |
| 3  | 7    | 730700 | MSB3  | 7304 | 3   | 111 | UMTS_MFD    | CXC1327790/8_R3L01 | 325 | 9594  | 166  | 166   | 57300  | 57300  | 57300  | 0   | 0     | 0      |
| 3  | 7    | 730700 | MSB3  | 7304 | 4   | 111 | UMTS_MFD    | CXC1327790/8_R3L01 | 325 | 9594  | 166  | 166   | 57300  | 57300  | 57300  | 0   | 0     | 0      |
| 3  | 7    | 730700 | MSB3  | 7304 | 5   | 111 | UMTS_MFD    | CXC1327790/8_R3L01 | 325 | 9594  | 166  | 166   | 57300  | 57300  | 57300  | 0   | 0     | 0      |
| 3  | 7    | 730700 | MSB3  | 7304 | 6   | 111 | MFC         | CXC1327801/8_R3D01 | 326 | 11088 | 24   | 24    | 55542  | 55542  | 55542  | 0   | 0     | 0      |
| 3  | 7    | 730700 | MSB3  | 7303 | 7   | 111 | IM          | CXC1327799/8_R3E01 | 327 |       | 100  | 100   |        |        |        |     |       |        |
| 3  | 7    | 730700 | MSB3  | 7304 | 8   | 111 | CSD_GSM_MFH | CXC1327794/8_R3D01 | 328 | 11112 | 36   | 36    | 55650  | 55650  | 55650  | 0   | 0     | 0      |
| 3  | 7    | 730700 | MSB3  | 7304 | 9   | 111 | UMTS_MFD    | CXC1327790/8_R3L01 | 325 | 9594  | 166  | 166   | 57300  | 57300  | 57300  | 0   | 0     | 0      |
| 3  | 7    | 730700 | MSB3  | 7304 | 10  | 111 | UMTS_MFD    | CXC1327790/8_R3L01 | 325 | 9594  | 166  | 166   | 57300  | 57300  | 57300  | 0   | 0     | 0      |
| 3  | 7    | 730700 | MSB3  | 7304 | 11  | 111 | UMTS_MFD    | CXC1327790/8_R3L01 | 325 | 9594  | 166  | 166   | 57300  | 57300  | 57300  | 0   | 0     | 0      |
| 3  | 7    | 730700 | MSB3  | 7304 | 12  | 111 | UMTS_MFD    | CXC1327790/8_R3L01 | 325 | 9594  | 166  | 166   | 57300  | 57300  | 57300  | 0   | 0     | 0      |
| 3  | 7    | 730700 | MSB3  | 7304 | 13  | 111 | CSD_DIGITAL | CXC1327791/8_R3D01 | 329 | 11148 | 16   | 16    | 55650  | 55650  | 55650  | 0   | 0     | 0      |
| 3  | 7    | 730700 | MSB3  | 7304 | 14  | 111 | CSD_DIGITAL | CXC1327791/8_R3D01 | 329 | 11148 | 16   | 16    | 55650  | 55650  | 55650  | 0   | 0     | 0      |
| 3  | 7    | 730700 | MSB3  | 7304 | 15  | 111 | CSD_MODEM   | CXC1327792/8_R3D01 | 330 | 11180 | 16   | 16    | 55650  | 55650  | 55650  | 0   | 0     | 0      |
| 3  | 7    | 730700 | MSB3  | 7304 | 16  | 111 | CSD_FAX     | CXC1720519/8_R3D02 | 331 | 11196 | 5    | 5     | 55650  | 55650  | 55650  | 0   | 0     | 0      |

The second table shows the device status and availability for each MSB board.

The MD field indicates the status of the MSB ("M") and DSPs ("D").

The MSB status corresponds to the state of the corresponding PlugInUnit: L=locked, 1=enabled, 0=disabled.

The DSP status is found from the command `pingdsp` on MSB3 and `mmpp pingdp` on MSB4. If all DSPs are ALIVE, the state is 1, otherwise it is 0.

The remaining fields are read from the action `getBoardDetails` on `MsDeviceGroup`:

- `nDev = nrOfRds` : The number of Root Devices (RD) on the board, configured with the same devices (set of services) as pointed out by the deviceType attribute.
- `%Lock = capacityDependencyLockedDev` : The fraction (
- `%Dis = capacityDisabledDev` : The fraction (
- `maxDev = maxNrOfDev` : A theoretical maximum number of configured devices on the board.

More info in MOM "mom dev getboarddetails".

| Sr | Slot | Lnh    | Board | MD | SwAllocation        | DeviceType | nDev | %Lock | %Dis | maxDev |
|----|------|--------|-------|----|---------------------|------------|------|-------|------|--------|
| 3  | 7    | 730700 | MSB3  | 11 | MGW_MSB3_Profile_16 | CSDDigital | 2    | 0     | 0    | 32     |
| 3  | 7    | 730700 | MSB3  | 11 | MGW_MSB3_Profile_16 | CSDGSMFH   | 1    | 0     | 0    | 36     |

The third table shows the device status and availability for each device pool.

In MGW R2/R3, the usage is given as a number, in MGW R4, it is given as a percentage.

| DevPool        | Total | %Idle | %Busy | %Failed | %DepLock | %DepFail |
|----------------|-------|-------|-------|---------|----------|----------|
| CSDDigitalPool | 256   | 100   | 0     | 0       | 0        | 0        |
| CSDGSMFHPool   | 288   | 100   | 0     | 0       | 0        | 0        |
| CSDModemPool   | 128   | 100   | 0     | 0       | 0        | 0        |



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

**std on RNC**

Shows the configuration, status and usage of RNC devices, CC, DC, PDR.

State information is abbreviated in the following way:

- 1 = unlocked enabled
- 0 = unlocked disabled
- L = locked (enabled or disabled)
- I = idle (the device is not handling calls)
- A = active (the device is handling calls)
- B = busy (the device is fully used and cannot handle more calls)

**Options:**

- **r**: re-read the device configuration information. Without **r**, only device state and usage is updated.
- **a**: show additional device information relating to the device usage. Note: the use of this option means the moshell will run the command `drh_dcrh_topdata all` which may cause module restart on certain RNC SW releases, see TR WRNae26272. If the RNC is running a SW release containing the correction of TR WRNae26272, then it is safe to run `stda`. Otherwise, just run `std` without the **a** option.  
The correction for this TR is included in RNC SW P6.1.4 (CXP9012842\_R3BD) and P7.0.1 (CXP9012995\_R6CF).

**Printout description for device tables:**

Note: some of the fields are only shown when running option **a** (`stda`).

**Common fields:**

- The MOD and GPB column show the module MP controlling the device.
- The SPM and DEV columns show the MO id of the Spm and Device MOs.
- The G column shows the state of the module MP (GPB).
- The D column shows the state of the Device MO.
- The S column shows the state of the Spm MO.
- The U column shows the usageState of the Device MO.

**CC device specific fields:**

| TYP | MOD | GPB    | SPB   | SPM      | DEV      | GDS | U | LNH            | CPU | UEs | Cells (DRH/CCS/max) |
|-----|-----|--------|-------|----------|----------|-----|---|----------------|-----|-----|---------------------|
| CC  | 4   | ES1-15 | SPB21 | ES1-10-1 | ES1-10-1 | 111 | A | 011000/sp0.lnh | 18% | 5   | 52 52 96            |

- CPU shows the CPU load of the Device and is read from the variable `spCpuLoad` in the `drh_ccrh_topdata` printout in module MP.
- UEs shows the number of UEs handled by the device and is read from the `uelist` printout in CC SP.
- Cells/DRH shows the number of Cells handled by the device and is read from the `drh_ccrh_topdata` printout in module MP.
- Cells/CCS also shows the number of Cells handled by the device but it is read from the `celllist` command in CC SP.
- Cells/max shows the maximum number of Cells supported by the device (shown on RNC >= P7) The two values Cells/DRH and Cells/CCS should always be the same, otherwise it indicates a discrepancy between DRH and CCS.

**DC device specific fields:**

| TYP | MOD | GPB   | SPB   | SPM     | DEV | GDS | U | LNH            | CPU | Res | HsUEs | UEsDcs | UEsDch | UEsDrh | gbrResourcePoints |
|-----|-----|-------|-------|---------|-----|-----|---|----------------|-----|-----|-------|--------|--------|--------|-------------------|
| DC  | 1   | MS-14 | SPB21 | MS-19-5 | 3   | 111 | A | 001900/sp4.lnh | 26% | 10% | 14    | 22     | 15/150 | 16/150 | 530/5100          |
| DC  | 1   | MS-14 | SPB21 | MS-20-3 | 4   | 111 | A | 002000/sp2.lnh | 34% | 11% | 23    | 22     | 21/150 | 23/150 | 540/5100          |

- CPU is read from the variable `cpuLoad` in the `drh_dcrh_topdata` printout in module MP.
- Res is the percentage of resourcePoints used out of maxResourcePoints (read from `drh_dcrh_topdata all`)
- UEsDcs is read from the `uelist` printout in DC SP.
- the following columns are read from the `drh_dcrh_topdata all` printout in module MP: `HsUEs->noOfHsCapableUes`, `UEsDch->noOfUesOnDch/maxNoOfUesOnDch`, `UEsDrh->noOfUesOnDch/maxNoOfUesOnDch`, `gbrResourcePoints->gbrResourcePoints/maxResourcePoints`.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

**PDR device specific fields:**

| TYP | MOD | GPB   | SPB   | SPM     | DEV     | GDS | U | LNH            | CPU  | UEs | RABs | aal5 | usedCapacity |
|-----|-----|-------|-------|---------|---------|-----|---|----------------|------|-----|------|------|--------------|
| PDR | 1   | MS-14 | SPB21 | MS-19-1 | MS-19-1 | 111 | A | 001900/sp0.lnh | 3.7% | 55  | 406  | 95   | 3796/215000  |

- CPU is read from the command `spp -p xxxx00/spx.lnh sp procload 1` on central MP or `capi prio` and `capi core 0` on PDR devices (depending on RNC SW release)
- UEs is read from the `uelist` printout in PDR SP.
- RABs and aal5 correspond to the variables `noOfRabs` and `noOfAal5Conns` in the `drh_pdrh` printout in module MP.
- usedCapacity is read from `usedCapacity/maxCapacity` in `drh_pdrh` in module MP.

**Module summary table:**

These table show the device usage on module basis.

The fields are the same as in the tables above except for the DC summary table which contains some additional fields, read from the printout `lh mod drh_trbr_data:`

- ATM: `noOfAtmTrBr`
- IP: `noOfAtmTolpTrBr`
- BEE: `noOfBeesTrBr`

Also in the CC summary table, the field "max" is replaced by the field "GPB" which indicates the number of cells that are handled by the GPB of that RncModule. The field "GPB" is read via the attributes `lubLink::rncModuleRef` and `lubLink::reservedBy`

**SPB summary table:**

In this table we get an overview of all the SPB boards, their device states, usage, and module allocation.

The State column shows first the state of the SPB PlugInUnit, then the state and usage of its devices.

The Module column shows which module is handling each device.

| Sr | Slot | LnH    | Board | SwAlloc    | Type  | State   | Usage | Module     |
|----|------|--------|-------|------------|-------|---------|-------|------------|
| MS | 19   | 001900 | SPB21 | SPB_TYPE_A | PCDDD | 1-11111 | AAAAA | 1 1 13 8 8 |

**4.2.7 stv[b][r] [<Filter>] [<stateFilter>]**

Display state, user, and bandwidth usage for ATM ports and channels.

**Options:**

- `b`: to get the bandwidth usage for AtmPorts. Requires running some COLI commands.
- `r`: to refresh the data (ie. re-read from node).

**Arguments:**

- the first argument matches on the whole line
- the second argument matches only the state field ("VU")

**Examples:**

- `stvb ms-6-1` print ATM data for AtmPort=MS-6-1 and all VPs/VCs underneath it
- `stv p4500` print ATM data for all VPs/VCs using a traffic descriptor with peak cell rate 4500
- `stv . 0|L` print all Ports/VPs/VCs with state disabled or locked

Printout format:

- The field `ResrvBw/TraffDesc` shows:
  - the AtmTrafficDescriptor for VclTp MOs. For VC's used by Aal2Path, the Aal2 QoS is shown in brackets.
  - the reserved bandwidth (in cells/s) for AtmPort and VplTp MOs. E.g. 353000/353207 means 353000 cells/s reserved out of 353207 available. The available bandwidth for AtmPort is obtained from the COLI command `aet_atmmp etatmportfro <fro>` and is only shown when option `b` is specified. The reserved bandwidth for VplTp is obtained from the traffic descriptor of VplTp (total bandwidth) and the sum of the traffic descriptors of VclTp

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

(used bandwidth). The cellrate used by a traffic descriptor is the PeakCellRate in case of CBR and the MinimumCellRate for UBR/UBR+.

- The field `User` shows the MO using the `VclTp`. For `Aal2PathVccTp` MOs, the information in brackets shows the `aal2PathId` and reserving `Aal2Ap`. For `PacketDataRouter` MOs, the information in brackets shows the `PdrDevice` position, the `Aal5TpVccTp` MOid, the `rnclpAddress`, and the `cnluLinklpAddress`. For `Mtp3bSI` MOs, the information in brackets shows the `SignallingLinkCode` (SLC), the `linkState`, the `proceduralState`, and the `usageState`, same as in `stt` printout. Refer to `stt` help for more info about the `Mtp3bSI` information.
- The field `M` shows the `RncModule` handling the `User`.
- The field `VU` shows the state of the VP/VC followed by the state of the `User`. L=locked, 0=disabled, 1=enabled. E.g. `VU=10` means that the `VclTp` is enabled but the `User` MO is disabled. For `Aal2PathVccTp` MOs, there is an extra digit which represents the `remoteBlockingState` (0=remotely\_blocked, 1=remotely\_unblocked, ?=undefined). Note that the `remoteBlockingState` is not shown when the `Aal2PathVccTp` is locked. For `PacketDataRouter` MOs, there is an extra digit which represents the state of the `PdrDevice` MO.

Example printout:

```
=====
VclTp VPI/VCID ReservBw/TrafficDesc VU M User
=====
AtmPort=MS-6-1 /
AtmPort=MS-6-1,VplTp=1 2 224000/353000 1
AtmPort=MS-6-1,VplTp=1,.*VclTp=vc34 2/34 U3P4500M3000 11 Mtp3bSpItu=Iul,Mtp3bSlS=Iuc-1-2300-3,Mtp3bSlItu=1
AtmPort=MS-6-1,VplTp=1,.*VclTp=vc50 2/50 U3P4500M3000 11 Mtp3bSpItu=Iul,Mtp3bSlS=Iup-2-2810-3,Mtp3bSlItu=1
AtmPort=MS-6-1,VplTp=1,.*VclTp=vc90 2/90 C2P12000 (AB) 111 1 Aal2PathVccTp=Iul-1-1 (1, Aal2Ap=Iul)
AtmPort=MS-6-1,VplTp=1,.*VclTp=vc91 2/91 C2P12000 (AB) 111 1 Aal2PathVccTp=Iul-1-2 (2, Aal2Ap=Iul)
...<cut>...
AtmPort=MS-6-1,VplTp=1,.*VclTp=Pdr1Gtpu1 2/230 U3P66600M5000 11 RncModule=1,PacketDataRouter=Pdr1Gtpu1
AtmPort=MS-6-1,VplTp=1,.*VclTp=Pdr1Gtpu2 2/231 U3P66600M5000 11 RncModule=1,PacketDataRouter=Pdr1Gtpu2
AtmPort=MS-26-1 /
AtmPort=MS-26-1,VplTp=1 1 13804/14650 1
AtmPort=MS-26-1,VplTp=1,.*VclTp=vc34 1/34 C1P5 11 1 IubLink=1,NodeSynchTp=1
AtmPort=MS-26-1,VplTp=1,.*VclTp=vc35 1/35 C1P5 11 1 IubLink=1,NodeSynchTp=2
AtmPort=MS-26-1,VplTp=1,.*VclTp=vc36 1/36 U3P1000M80 11 1 IubLink=1,NbapCommon=1
AtmPort=MS-26-1,VplTp=1,.*VclTp=vc37 1/37 U3P1000M80 11 1 IubLink=1,NbapDedicated=1
AtmPort=MS-26-1,VplTp=1,.*VclTp=vc38 1/38 U3P1000M80 11 1 Aal2Sp=1,Aal2Ap=Iub1
AtmPort=MS-26-1,VplTp=1,.*VclTp=vc39 1/39 C2P6657 (AB) 111 1 Aal2PathVccTp=Iub1-1 (101, Aal2Ap=Iub1)
AtmPort=MS-26-1,VplTp=1,.*VclTp=vc40 1/40 C2P6657 (AB) 110 1 Aal2PathVccTp=Iub1-2 (102, Aal2Ap=Iub1)
AtmPort=MS-26-1,VplTp=1,.*VclTp=vc43 1/43 U3P1000M80 11 1 IubLink=1,NbapCommon=1
AtmPort=MS-26-1,VplTp=1,.*VclTp=vc44 1/44 U3P1000M80 11 1 IubLink=1,NbapDedicated=1
AtmPort=MS-26-1,VplTp=1,.*VclTp=vc45 1/45 U3P1000M80 11 1 Aal2Sp=1,Aal2Ap=Iub1
...<cut>...
```

#### 4.2.8 stt[r] [<Filter>] [<stateFilter>]

Purpose: Display state and user of Physical Ports and Ds0Bundles.

##### Options:

- `r` : to refresh the data (ie. re-read from node).

##### Arguments:

- the first argument matches on the whole line
- the second argument matches only the state field ("PUI")

##### Examples:

- `stt ms-26-1` print all ports and their users matching ms-26-1
- `stt . 0|L` print all ports and their users who have state disabled or locked
- `stt mtp3 busy` print all mtp3 links that are in usage state busy
- `stt mtp3 deact` print all mtp3 links that are in linkstate deactivated

Printout format:

- `PUI` : the first digit represents the state of the PhysicalPort/Ds0Bundle. The second digit (if present) represents the state of the `User`. The third digit (if present) represents the state of the intermediate layer which can be IMA (when user is `AtmPort`) or MTP2 (when user is `Mtp3bSI`). L=locked, 1=enabled, 0=disabled.
- `CG/KLM`: circuit group and K.L.M (for channelised STM-1)
- `SLC/PCM`: SignallingLinkCode for `Mtp3bSI` or `pcmSystemNr` for `TdmTermGrp`
- `User` : the layer that is using the physical port. Usually an `AtmPort` in Utran nodes. Can also be a `TdmTermGrp` or an `Mtp3bSI` in MGW. In case of `Mtp3bSI`, the `linkState`, `proceduralState`, and `usageState` are also shown.

Example printout RXI:

```
=====
Port CG/KLM PUI USER
=====
Subrack=MS,Slot=7,...,Os155Sp1Ttp=pp1,Vc4Ttp=1 11 AtmPort=MS-7-1
```

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

```

...
Subrack=MS,Slot=24,.*,Os155SpiTtp=pp1,Sts1SpeTtp=1,Vt15Ttp=1,T1Ttp=1 1/1.1.1 11 AtmPort=MS-24-1-1-1
Subrack=MS,Slot=24,.*,Os155SpiTtp=pp1,Sts1SpeTtp=1,Vt15Ttp=2,T1Ttp=1 1/1.1.2 111 AtmPort=MS-24-ima1
Subrack=MS,Slot=24,.*,Os155SpiTtp=pp1,Sts1SpeTtp=1,Vt15Ttp=3,T1Ttp=1 1/1.1.3 111 AtmPort=MS-24-ima1

```

Example printout MGW:

```

=====
Port CG/KLM SLC/PCM PUI USER
=====
2,Slot=25,.*,ElPhysPathTerm=2251,Ds0.*=22511 1 LL TdmTermGrp=El_MSC3_Slot25_Port1_Ts1-29_31
2,Slot=25,.*,ElPhysPathTerm=2252,Ds0.*=22521 2 LL TdmTermGrp=El_MSC3_Slot25_Port2_Ts1-29_31
2,Slot=25,.*,ElPhysPathTerm=2253,Ds0.*=22531 3 11 TdmTermGrp=El_MSC3_Slot25_Port3_Ts1-29_31
2,Slot=25,.*,ElPhysPathTerm=2253,Ds0.*=22532 0 111 Mtp3bSpitu=2.*Sls=mac3.*Slitu=msc3_0 (available,initialized,active)
2,Slot=25,.*,ElPhysPathTerm=2254,Ds0.*=22541 4 11 TdmTermGrp=El_MSC3_Slot25_Port4_Ts1-29_31

```

#### 4.2.9 ste[gr] [<Filter>] [<stateFilter>]

Purpose: Display state and configuration of Ethernet Ports.

##### Options:

- `r`: to refresh the data (clear cache and re-read from node).
- `g`: to print the RSTP tree in graphical format.

##### Arguments:

- the first argument matches on the whole line.
- the second argument matches only the state field ("S12" or "STL")

Command examples:

- `ste !nolink` : show all lines except those containing the word "nolink"
- `ste . 0|L` : show all lines containing a resource whose state is disabled or locked
- `ste forwarding` : show all lines containing the word "forwarding"

**Printout format, first table:** This table shows the properties for ethernet ports where IP distribution is performed, ie, where IpInterfaces are defined. Each line corresponds to a GigabitEthernet MO (ETIPG/ETMFG) or a InternalEthernetPort MO (ETMFx). Each column corresponds to an attribute of these MOs. Refer to the MOM for more detail on each attribute.

- Position: the subrack, slot, and port number - GigabitEthernet::portNo or 0 for InternalEthernetPort
- Speed: GigabitEthernet::actualSpeedDuplex
- Conf: GigabitEthernet::configuredSpeedDuplex
- AutoNg: GigabitEthernet::autoNegotiation
- Mastr: GigabitEthernet::masterMode
- Prot: GigabitEthernet::protectiveMode
- DfRSw: GigabitEthernet::defRoutersLinkSwitch
- S: GigabitEthernet::administrativeState&operationalState (0=unlocked&disabled, 1=unlocked&enabled, L=locked)
- 1: GigabitEthernet::link1State
- 2: GigabitEthernet::link2State. Note: this attribute is not applicable on EPB and will be shown as -.
- ActiveLink: GigabitEthernet::activeLink
- Link: GigabitEthernet::linkType
- Frame: GigabitEthernet::frameFormat or InternalEthernetPort::frameFormat
- Vlans: the list of vlan ids for all IpInterfaces defined on that port (read from attribute vid or vlanRef on the children IpInterface MOs). A vlan id value of -1 means that vlan is not used on that port ("vlan=false")
- DscpPbitMap: GigabitEthernet::dscpPbitMap or InternalEthernetPort::dscpPbitMap (only the pbit values are listed)

Example:

```

=====
Board Position Speed Conf AutNg Mastr Prot DfRSw S12 ActiveLink Link Frame Vlans DscpPbitMap
=====
MFG MS-06-1 1G_F 1G_F true true true false 111 1 (PRIMARY) FRONT 2DIX 20 00000000001010100030303000404040005050500000006000000000000000
MFG MS-07-1 1G_F 1G_F true true true false 111 1 (PRIMARY) FRONT 2DIX 20 00000000001010100030303000404040005050500000006000000000000000
MFX12 MS-24-0 2DIX 19 00000000001010100030303000404040005050500000006000000000000000
MFX12 MS-25-0 2DIX 19 00000000001010100030303000404040005050500000006000000000000000
=====

```

**Printout format, second table:** Each line corresponds to a EthernetSwitch or EthernetSwitchPort MO (ETMFx), or a EthernetSwitchModule or EthernetSwitchModulePort MO (CMXB), or a EthernetBridgePort (CMXB/CCIB in CAX subrack), as

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

well as the corresponding children MOs SwitchStp/SwitchPortStp. Each column corresponds to an attribute of these MOs. Refer to the MOM for more detail on each attribute.

- Position: the subrack, slot, and port number:
  - 0: EthernetSwitch(Module)
  - 1-7: EthernetSwitchPort::portNo
  - 1-8: EthernetSwitchModulePort::portNo
- Lag: The position of the port specified in masterPort of the connected Lag MO, when applicable.
- lagSp: Lag::aggregatedPortSpeed, the speed of the Lag
- Remote: SwitchStp::rootBridgeld or SwitchPortStp::remoteBridgeld -> if the Bridge Id is pointing to a switch inside the node, the MAC address of the remoteBridge/rootBridge will be translated into the position of the switch. If the MAC address is not found within the node but pointing to an outside switch, then the MAC address given in the remoteBridgeld will be printed.
- Speed: EthernetSwitch(Module)Port/EthernetPort::actualSpeedDuplex
- Conf: EthernetSwitch(Module)Port/EthernetPort::operatingMode:configuredSpeedDuplex
- AutoNg: EthernetSwitch(Module)Port/EthernetPort::operatingMode:autoNegotiation
- Sys/Ext: EthernetSwitchPort::systemPort or EthernetSwitchModulePort::externalPort or EthernetBridgePort::externalPort
- S: EthernetSwitch(Module)Port/EthernetPort::administrativeState&operationalState (0=unlocked&disabled, 1=unlocked&enabled, L=locked)
- T: EthernetSwitch(Module)Port/EthernetPort::trafficState
- L: Lag:administrativeState&operationalState. Only applicable when the Port(s) are part of a Lag MO.
- Prio: SwitchStp::bridgePriority or SwitchPortStp::priority
- Cost: SwitchPortStp::actualPathCost
- RtCost: SwitchPortStp::rootPathCost
- Role-State: SwitchPortStp::stpRole and SwitchPortStp::stpState
- Edge: SwitchPortStp::edgePortMode
- PbitQMap: EthernetSwitch(Module)(Port)::pbitQueueMap
- UnIng: EthernetSwitchPort::untaggedIngressVid&untaggedIngressPriority or EthernetSwitchModulePort::untaggedIngressVlanRef&untaggedIngressPriority. Shows the vid and priority that will be assigned to untagged ingress frames.
- Vlans: EthernetSwitchPort::vlanMembership or EthernetSwitchModulePort::vlanRef&egressUntagVlanRef. Shows the list of vlan ids supported by the port. Vlans on which egress frames will be untagged will be marked with a "U", eg "23U" means that vlan id 23 will be untagged on egress.

Example, ETMFX:

| Board | Position | Remote | Speed  | Conf | AutNg | Sys   | STL | Prio | Cost       | RtCost | Role-State            | Edge     | PbitQMap | UnIng | Vlans  |
|-------|----------|--------|--------|------|-------|-------|-----|------|------------|--------|-----------------------|----------|----------|-------|--------|
| MFx12 | MS-24-0  | ES4-26 |        |      |       |       |     |      |            |        |                       |          |          |       |        |
| MFx12 | MS-24-1  | MS-25  | 1G_F   | 1G_F | true  | false | L   | 128  | 20000      | 100000 | BRIDGE                | EDGE_OFF | 10112233 | 1:0   | 0, 101 |
| MFx12 | MS-24-2  |        | NOLINK | 1G_F | true  | false | L   | 128  | 2000000000 | 0      | ROOT-FORWARDING       | EDGE_OFF | 10112233 | 1:0   | 0, 101 |
| MFx12 | MS-24-3  |        | NOLINK | 1G_F | true  | false | L   | 128  | 2000000000 | 0      | UNKNOWN-DISCARDING    | EDGE_OFF | 10112233 | 1:0   | 0      |
| MFx12 | MS-24-4  |        | NOLINK | 1G_F | true  | false | L   | 128  | 2000000000 | 0      | UNKNOWN-DISCARDING    | EDGE_OFF | 10112233 | 1:0   | 0      |
| MFx12 | MS-24-5  | ES1-03 | 1G_F   | 1G_F | true  | false | L   | 128  | 20000      | 100000 | ALTERNATE-DISCARDING  | EDGE_OFF | 10112233 | 1:0   | 0, 101 |
| MFx12 | MS-24-6  | MS-24  | 1G_F   | 1G_F | true  | true  | L   | 128  | 20000      | 100000 | DESIGNATED-FORWARDING | EDGE_OFF | 10112233 | 1:0   | 0, 101 |
| MFx12 | MS-24-7  |        | NOLINK | 1G_F | true  | false | L   | 128  | 2000000000 | 0      | UNKNOWN-DISCARDING    | EDGE_OFF | 10112233 | 1:0   | 0      |
| ..... |          |        |        |      |       |       |     |      |            |        |                       |          |          |       |        |

Example, CMXB:

| Board | Position | Remote | Speed  | Conf | AutNg | Ext   | STL | Prio | Cost  | RtCost | Role-State            | Edge        | PbitQMap | UnIng | Vlans                  |
|-------|----------|--------|--------|------|-------|-------|-----|------|-------|--------|-----------------------|-------------|----------|-------|------------------------|
| CMXB  | MS-03-0  | MS-03  |        |      |       |       |     |      |       |        |                       |             |          |       |                        |
| CMXB  | MS-03-1  | MS-03  | 1G_F   | 1G_F | false | false | L   | 128  | 20000 | 0      | BRIDGE                |             |          |       |                        |
| CMXB  | MS-03-2  | MS-03  | 1G_F   | 1G_F | false | false | L   | 128  | 2000  | 0      | DESIGNATED-FORWARDING | BPDU_FILTER | 10234567 | 1:0   | 3005                   |
| CMXB  | MS-03-3  | MS-03  | 1G_F   | 1G_F | false | false | L   | 128  | 2000  | 0      | DESIGNATED-FORWARDING | EDGE_OFF    | 10234567 | 1:0   | 1480, 1481, 2001, 3005 |
| CMXB  | MS-03-4  | MS-03  | 1G_F   | 1G_F | false | false | L   | 128  | 2000  | 0      | DESIGNATED-FORWARDING | EDGE_OFF    | 10234567 | 1:0   | 1480, 2001, 3005       |
| CMXB  | MS-03-5  | MS-03  | 1G_F   | 1G_F | false | true  | L   | 128  | 20000 | 0      | DESIGNATED-FORWARDING | BPDU_FILTER | 10234567 | 1:0   | 1480, 1481             |
| CMXB  | MS-03-6  |        | NOLINK | 1G_F | false | false | L   | 128  | 2000  | 0      | UNKNOWN-DISCARDING    | EDGE_OFF    | 10234567 | 1:0   |                        |
| CMXB  | MS-03-7  |        | NOLINK | 1G_F | false | false | L   | 128  | 2000  | 0      | UNKNOWN-DISCARDING    | EDGE_OFF    | 10234567 | 1:0   |                        |
| CMXB  | MS-03-8  |        | NOLINK | 1G_F | false | true  | L   | 128  | 2000  | 0      | UNKNOWN-DISCARDING    | EDGE_OFF    | 10234567 | 1:0   |                        |
| ..... |          |        |        |      |       |       |     |      |       |        |                       |             |          |       |                        |

Printout format, option g:

- Box with double-line border is the identified root bridge in the RSTP domain

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- stpState is marked in the middle of a line with "S" (DIS=DISABLED, BLO=BLOCKING, LIS=LISTENING, DSC=DISCARDING, LEA=LEARNING, FWD=FORWARDING, UNK=UNKNOWN)
- stpRole is marked in the middle of a line with "R" (R=ROOT, D=DESIGNATED, A=ALTERNATE, B=BACKUP, U=UNKNOWN)
- The arrow head (< or >) in the end of a line is the side where it is actually possible to determine which port that has the relationship to the board where the line originates
- The x is drawn on the side of the port where it is discarding
- Only one link per LAG will be drawn (thicker), label will include port numbers of all links in the group
- Bridge priority (P) is shown inside of a bridge
- rootPathCost (PC) is shown for each link

Example, RNC3820:

```

 0~~~~~0
 S NETWORK S
 +----->S S<-----+
 | |
 0~~~~~0
 | |
 | |
 | Port 1, PC=0 Port 1, PC=2000 |
 | R=D, S=FWD R=D, S=FWD |
 | |
 #=====#
+---->H MS-03 H Port 2, PC=2000, R=R, S=FWD | MS-26 |<----+
+-->H P=8192 H<-----+ P=16384	<--+	
	#=====# +-----+	
	Port 1, PC=2000 Port 1, PC=4000	
	R=R, S=FWD R=R, S=FWD	
	+-----+ +-----+	
+---	ES1-03	Port 2, PC=4000, R=A, S=DSC
	P=32768	<-----x
	+-----+ +-----+	
	Port 1, PC=2000 Port 1, PC=4000	
	R=R, S=FWD R=R, S=FWD	
	+-----+ +-----+	
+-----	ES2-03	Port 2, PC=4000, R=A, S=DSC
	P=32768	<-----x
	+-----+ +-----+	

```

#### 4.2.10 sti[bcfopr] [<Filter>] [<stateFilter>]

Purpose: Display state and configuration of IP interfaces.

The printout consists of up to 7 tables:

- the IpInterfaces table, one line per IpInterface MO.
- the IpAccessHostEt table, one line per IpAccessHostEt MO.
- the IpAccessHostGpb/Spb table, one line per IpAccessHostGpb or IpAccessHostSpb MO.
- the IpAccessHostPool table, one line per IpAccessHostEt MO part of an IpAccessHostPool (applicable to RNC and MGW only).
- the IpEthPacketDataRouter table, one line per IpEthPacketDataRouter MO (applicable to RNC38xx only).
- the M3uA table, one line per M3uAssociation MO (applicable to RNC and MGW only).
- the lub/S1/X2 table, one line per MO of type lubLink,lub,TemPointToMMe,TemPointToENB (applicable to RNC/RBS/ERBS only).

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

**Options:**

- **p**: ping the remote destinations (printout will take more time to complete)
- **r**: to refresh the data (clear cache and re-read from node).
- **f**: only show the IpInterface/IpAccessHost overview table. Without this option, all tables are shown.
- **o**: show the IpAccessHost folds in the above tables.
- **b**: only show the lub/S1/X2 signalling interfaces (in RNC/RBS/ERBS). Without this option, all tables are shown.
- **c**: only show the Core signalling interfaces (in RNC/MGW: SIGTRAN). Without this option, all tables are shown.

**Arguments:**

- the first argument matches on the whole line
- the second argument matches only the state field ("GS12MUP" or "GS12ISP" or "IRP")

**Printout format, IpInterfaces table:**

Each line corresponds to a IpInterface MO. Each column corresponds to an attribute of these MOs. Refer to the MOM for more detail on each attribute.

- **Board**: The type of ET board on which the IpInterface is located (ETIPG, ETMFG, ETMFx)
- **Interface**: the subrack and slot of the ET board, followed by a sequential number to distinguish between numerous IpInterfaces defined on the same board.
- **Vid**: the vlan ID, read from the attribute IpInterface::vid or IpInterface::vlanRef
- **Subnet**: the value of the attributes IpInterface::subnet and IpInterface::networkPrefixLength
- **DefaultRouter**: the number in brackets shows which is the active defaultRouter according to the attribute IpInterface::defaultRouterTraffic. Also shown is the ip address of the active default router, read from the attribute IpInterface::defaultRouterX (where X is 0, 1, or 2)
- **rps**: the value of IpInterface::rps
- **I**: the value of IpInterface::operationalState (0=disabled, 1=enabled)
- **R**: the value of IpInterface::defaultRouterXState (where X is 0, 1, or 2). Only applicable when rps=true, otherwise a "-" is shown.
- **P**: the ping status to the active defaultRouter (0=unreachable, 1=alive)
- **H**: the state of each IpAccessHost connected to this IpInterface.
- **IpHosts**: the list of IP hosts connected to this IpInterface. G=IpAccessHostGpb, Et=IpAccessHostEt, S=IpAccessHostSpb. For each IpAccessHost, the location of the host is shown, not the MO name. To see the mapping of the host location vs MO name, check the following two tables. In brackets next to IpAccessHostEt is shown the IpAccessHostPool using this host, when applicable.

| Board | Interface | Vid  | Subnet            | DefaultRouter      | Rps   | IRP | HHH | IpHosts                      |
|-------|-----------|------|-------------------|--------------------|-------|-----|-----|------------------------------|
| IPG   | MS-04-1   | 632  | 10.164.233.64/29  | (0) 10.164.233.70  | false | 1-1 | 1   | G=MS-5-1                     |
| IPG   | MS-04-2   | 652  | 10.164.233.0/26   | (0) 10.164.233.61  | true  | 111 | 111 | S=MS-10-2 S=MS-23-1 S=MS-9-1 |
| IPG   | MS-04-3   | 662  | 10.164.233.128/26 | (0) 10.164.233.188 | false | 1-1 | 1   | Et=MS-04-3 (TuB)             |
| IPG   | MS-04-4   | 682  | 10.164.233.96/27  | (0) 10.164.233.125 | true  | 111 | 1   | Et=MS-04-4 (TuR)             |
| IPG   | MS-04-5   | 2001 | 192.168.101.0/24  | (0) 192.168.101.1  | false | 1-1 | 1   | Et=MS-04-5 (intraNode)       |

**Printout format, IpAccessHostEt table:**

Each line corresponds to a IpAccessHostEt MO. Description of the columns:

- **ET**: The type of ET board on which the IpAccessHostEt is located (ETIPG, ETMFG, ETMFx)
- **Host**: the subrack and slot of the ET board, followed by a sequential number to distinguish between numerous IpAccessHostEt defined on the same board.
- **MOName**: the name of the IpAccessHostEt MO.
- **Lnh**: the linkhandler address of the ET board. Needed in order to run the EtHostMo\_startPing/EtHostMo\_startTraceRoute command.
- **Ntp**: the value of attribute ntpDscp. Only shown when ntpServerMode is enabled on this host. If ntpServerMode is disabled then a dash is shown instead.
- **Fro**: the fold of the IpAccessHostEt. Needed in order to run the EtHostMo\_startPing/EtHostMo\_startTraceRoute command. Only shown with option **o**.
- **HostIp**: the IP address of the IpAccessHostEt.



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- Vid: the vlan ID of the IpInterface connected to this IpAccessHostEt.
- H: the state of the IpAccessHostEt (L=locked, 1=enabled, 0=disabled).
- IRP: the state of the IpInterface MO connected to this IpAccessHostEt. See description in table above.
- IpAccessHostPool/IpAccessSctp: the list of MOs using this host, first the Pools are listed, then the IpAccessSctp. For the IpAccessSctp, it shows the position of the GPB on which the SCTP is located, not the MO name.

| ET  | Host       | MOName  | Lnh    | Ntp | Fro | HostIp         | Vid  | HIRP | IpAccessHostPool/IpAccessSctp |
|-----|------------|---------|--------|-----|-----|----------------|------|------|-------------------------------|
| IPG | Et=MS-04-2 | MS-4-1  | 000400 | -   | 1   | 192.168.101.4  | 2001 | 11-1 | intraNode                     |
| IPG | Et=MS-04-3 | MS-4-3  | 000400 | 49  | 2   | 10.212.48.5    | 700  | 11-1 | Iub MS-06,MS-08,MS-12,MS-16   |
| IPG | Et=MS-04-4 | MS-4-2  | 000400 | -   | 3   | 10.202.212.3   | 812  | 1111 | Iu_Iur                        |
| IPG | Et=MS-25-2 | MS-25-1 | 002500 | -   | 4   | 192.168.101.25 | 2001 | 11-1 | intraNode                     |
| IPG | Et=MS-25-3 | MS-25-3 | 002500 | 49  | 5   | 10.212.48.6    | 700  | 11-1 | Iub MS-06,MS-08,MS-12,MS-16   |

### Printout format, IpAccessHostGpb/Spb table:

Each line corresponds to a IpAccessHostGpb/Spb MO. Description of the columns:

- Host: the subrack and slot of the GPB/SPB where the IP host is located.
- Board: the type of board where the IP host is located.
- MOName: the name of the IpAccessHostGpb/Spb MO.
- HostIp1/2: the IP addresses of the IP Host.
- Interface1/2: the position of the IpInterfaces connected to the IP Host.
- Vid1/Vid2: the vlan ID of the IpInterfaces connected to the IP Host.
- H: the state of the IP Host (L=locked, 1=enabled, 0=disabled).
- IRP1/2: the state of the IpInterfaces connected to the IP Host (see detailed description of the IRP state in first table).

| Host     | Board | MOName  | HostIp1      | HostIp2      | Interface1 | Interface2 | Vid1 | Vid2 | H | IRP1 | IRP2 |
|----------|-------|---------|--------------|--------------|------------|------------|------|------|---|------|------|
| G=MS-08  | GPB53 | MS-8    | 10.159.22.2  | 10.159.22.18 | MS-26-2    | MS-27-2    | 929  | 929  | 1 | 1-1  | 1-1  |
| G=ES1-12 | GPB53 | ES-1-12 | 10.212.0.27  | 10.212.0.28  | ES1-03-1   | ES1-26-1   | 100  | 100  | 1 | 1-1  | 1-1  |
| G=ES1-13 | GPB53 | ES-1-13 | 10.212.0.29  | 10.212.0.30  | ES1-03-1   | ES1-26-1   | 100  | 100  | 1 | 1-1  | 1-1  |
| S=MS-19  | SPB3  | MS-19   | 10.159.18.7  | 10.159.18.8  | MS-26-3    | MS-27-3    | 945  | 945  | 1 | 111  | 111  |
| S=MS-20  | SPB3  | MS-20   | 10.159.18.9  | 10.159.18.10 | MS-26-3    | MS-27-3    | 945  | 945  | 1 | 111  | 111  |
| S=MS-21  | SPB3  | MS-21   | 10.159.18.11 | 10.159.18.12 | MS-26-3    | MS-27-3    | 945  | 945  | 1 | 111  | 111  |

### Printout format, IpAccessHostPool table (RNC/MGW):

Each line corresponds to a IpAccessHostEt MO used by an IpAccessHostPool. Each column corresponds to an attribute of these MOs.

- Pool: the name of the IpAccessHostPool
- HostEt: the position (Subrack-Slot) of the IpAccessHostEt MO, followed by a sequential number to distinguish between numerous IpAccessHostEt defined on the same board.
- HostIp: the attribute IpAccessHostEt::ipAddress
- ET: the board type (ETIPG, ETMFG, or ETMFX)
- Vid: the vlan ID of the IpInterface connected to this IpAccessHostEt.
- P: the state of the IpAccessHostPool MO (L=locked, 1=unlocked&enabled, 0=unlocked&disabled)
- H: the state of the IpAccessHostEt MO
- I: the state of the IpInterface MO connected to this IpAccessHostEt, same as shown in the first table
- R: the state of the active defaultRouter, same as shown in the first table
- P: the ping status to the active defaultRouter, same as shown in the first table
- Users: read from the attribute IpAccessHostPool::reservedBy. Shows "Rnc" if the pool is used by the RncFunction MO (applicable to intraNode/BEES pool), else shows the number of lubLinks/lurLinks/luLinks using this pool.

| Pool      | HostEt  | HostIp         | ET  | Vid  | PH | IRP | Users: | Iuc | Iur | Iub |
|-----------|---------|----------------|-----|------|----|-----|--------|-----|-----|-----|
| IUB       | MS-04-3 | 10.164.233.129 | IPG | 662  | 11 | 1-1 |        | 0   | 0   | 34  |
| IUB       | MS-25-3 | 10.164.233.130 | IPG | 662  | 11 | 1-1 |        | 0   | 0   | 34  |
| IUR       | MS-04-4 | 10.164.233.97  | IPG | 682  | 11 | 111 |        | 0   | 24  | 0   |
| IUR       | MS-25-4 | 10.164.233.98  | IPG | 682  | 11 | 111 |        | 0   | 24  | 0   |
| intraNode | MS-04-5 | 192.168.101.4  | IPG | 2001 | 11 | 1-1 | Rnc    | 0   | 0   | 0   |
| intraNode | MS-25-5 | 192.168.101.25 | IPG | 2001 | 11 | 1-1 | Rnc    | 0   | 0   | 0   |

MGW:

| Pool | Type | HostEt | HostIp | ET | Vid | PH | IRP |
|------|------|--------|--------|----|-----|----|-----|
|------|------|--------|--------|----|-----|----|-----|

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

```
=====
A A MAIN-06-2 10.52.211.10 IPG 1180 11 1-
A A MAIN-14-1 10.52.211.11 IPG 1180 11 1-
A A MAIN-17-1 10.52.211.12 IPG 1180 11 1-
A A MSE1-14-2 10.52.211.13 IPG 1180 11 1-
Iu IU MAIN-06-2 10.52.211.10 IPG 1180 11 1-
Iu IU MAIN-14-1 10.52.211.11 IPG 1180 11 1-
Iu IU MAIN-17-1 10.52.211.12 IPG 1180 11 1-
Iu IU MSE1-14-2 10.52.211.13 IPG 1180 11 1-
```

### Printout format, IpEthPacketDataRouter table (RNC):

Each line corresponds to a IpEthPacketDataRouter MO. Each column corresponds to an attribute of these MOs.

- IpEthPdr: the position (Subrack-Slot) of the PdrDevice, followed by the attribute IpEthPacketDataRouter::ipAddressSelection. Value 1 means IP\_ADDRESS\_1, value 2 means IP\_ADDRESS\_2. Value 11 means that both IpEthPacketDataRouter of that PdrDevice are using IP\_ADDRESS\_1 while 22 means that both are using IP\_ADDRESS\_2 (which would mean that all traffic of the PdrDevice is routed to the same IpInterface instead of being load-shared on both IpInterfaces)
- SPB: the board type of the SPB hosting the PdrDevice
- HostSpb: the position of the IpAccessHostSpb connected to this IpEthPacketDataRouter, followed by the number 1 or 2, depending on the value of IpEthPacketDataRouter::ipAddressSelection
- HostIp: the ip address of the IpAccessHostSpb, could be ipaddress 1 or 2, depending on the value of IpEthPacketDataRouter::ipAddressSelection
- ET: the board type of the IpInterface connected to this IpAccessHostSpb (ETIPG, ETMFG, or ETMFX)
- Vid: the vlan ID of the IpInterface connected to this IpAccessHostSpb
- E: the state of the IpEthPacketDataRouter MO (L=locked, 0=unlocked&disabled, 1=unlocked&enabled)
- H: the state of the IpAccessHostSpb MO
- U: the value of the usageState of the PdrDevice hosting this IpEthPacketDataRouter (I=Idle, A=Active, B=busy)
- I: the state of the IpInterface MO connected to this IpAccessHostEt, same as shown in the first table
- R: the state of the active defaultRouter, same as shown in the first table
- P: the ping status to the active defaultRouter, same as shown in the first table
- Iup: the value of IpEthPacketDataRouter::reservedBy. Shows which IP-based luPS links can use this IpEthPacketDataRouter for userplane connections. When empty, means that it can be used by all IP-based luPS links.

```
=====
IpEthPdr SPB HostSpb HostIp ET Interface Vid EH U IRP Iup
=====
MS-19-1 SPB21 MS-19-1 114.126.135.176 MFG MS-07-1 2000 11 A 1-1 any
MS-19-2 SPB21 MS-19-2 114.126.135.181 MFG MS-26-1 2000 11 A 1-1 any
MS-20-1 SPB21 MS-20-1 114.126.135.177 MFG MS-07-1 2000 11 A 1-1 any
MS-20-2 SPB21 MS-20-2 114.126.135.182 MFG MS-26-1 2000 11 A 1-1 any
```

### Printout format, M3uAssociation table (RNC/MGW):

Each line corresponds to a M3uAssociation MO. Each column corresponds to an attribute of these MOs.

- the HostGpb column identifies the IpAccessHostGpb MO.
- the Sctp column identifies the Sctp MO
- the M3uA column identifies the M3uAssociation MO. At the beginning of the string is the identity of the parent Mtp3bSp MO, then comes the identity of the M3uAssociation MO. A wildcard (\*) separates the two identities.
- the Assoc column identifies the sctp association, given by the the gpb position and the association number. The association number can be used in the printout `sctphost_info -assoc <assocnumber>`.
- the GS12MUP column shows the various states, where: G=IpAccessHostGpb, S=Sctp, 1=IpInterface1, 2=IpInterface2, M=M3uAssociation, U=User, P=ipac\_ping (1=alive, 0=notalive). The ping is done only when "sti" is run with the option "p".
- the A column shows the associationState of the M3uAssociation, where: I=inactive, A=active, E=established, D=down.
- the LocalInterface column shows the local interface, can be a IpInterface MO or a FastEthernet MO. In the case of FastEthernet, the letter "f" is appended to the identity as shown in the third line of the printout below. In brackets is indicated whether the chosen interface is interface 1 or interface 2. The association tries to setup on interface 1 but if that fails then it uses interface 2.
- the RemoteInterface column shows which interface is used on the remote side, 1 or 2.
- the LocalIp:Port and RemIp:Port columns show the ipaddress and sctp port of the association, for each side.
- the User column shows which application part is using this association. Could be GCP (Vmgw), Q.AAL2 (Aal2Ap), RANAP, RNSAP.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

## Example MGW:

```
=====
HostGpb Sctp M3uA Assoc GS12 MUP A LocalInterface,Ip:Port RemInterface,Ip:Port User
=====
IPACGPB_2_6 Sctp_2_6 2.*msc2qa 0006:148 1111 111 A (1) 2-19 10.201.0.31:2905 (2) 10.202.10.20:2905 Vmgw=VMGW92
IPACGPB_2_6 Sctp_2_6 2.*nwp141a 0006:60 1111 111 D (2) 2-20 10.201.10.31:2905 (1) 10.201.12.141:2905 Aal2Sp=1,Aal2Ap=nwp141
SIG12_13 SIG12_13 2.*nwp206a 0012:5 1111 111 A (1) 1-12f 10.202.0.30:2905 (1) 10.202.2.206:2905 Aal2Sp=1,Aal2Ap=nwp206
=====
```

## Example RNC:

```
=====
HostGpb Sctp M3uA Assoc GS12 MUP A LocalInterface,Ip:Port RemInterface,Ip:Port User
=====
MS-8-1 MS-8 Iu.*mgw7-2521-1720 0008:21 1111 111 A (1) MS-7 10.207.2.121:2905 (1) 10.207.2.245:2905 Aal2Ap=Aal2routing-mgw7-2521-1720
MS-8-1 MS-8 Iu.*mgw71-2521-1730 0008:4 1111 111 A (1) MS-7 10.207.2.121:2905 (1) 10.207.2.246:2905 Aal2Ap=Aal2routing-mgw71-2521-1730
MS-8-1 MS-8 Iu.*Iuc-2521-1700 0008:18 1111 111 A (1) MS-7 10.207.2.121:2905 (2) 10.207.12.240:2905 Cn.*=23591,Iu.*=Iuc-1700,Ranap=Iuc-1700
MS-8-1 MS-8 Iu.*Iuc-2521-1710 0008:2 1111 111 A (1) MS-7 10.207.2.121:2905 (1) 10.207.2.242:2905 Cn.*=23591,Iu.*=Iuc-1710,Ranap=Iuc-1710
MS-8-1 MS-8 Iu.*Iup-2521-2207 0008:33 1111 111 A (1) MS-7 10.207.2.121:2905 (2) 10.207.4.1:2905 Cn.*=23591,Iu.*=Iup-2207,Ranap=Iup-2207
MS-8-1 MS-8 Iu.*Iup-2521-2271 0008:34 1111 111 A (1) MS-7 10.207.2.121:2905 (2) 10.207.4.17:2905 Cn.*=23591,Iu.*=Iup-2271,Ranap=Iup-2271
MS-8-1 MS-8 Iu.*Iur-2521-2522 0008:22 1111 111 A (1) MS-7 10.207.2.121:2905 (2) 10.207.12.122:2905 Iur.*=Iur-2521-2522,Rnsap=Iur-2521-2522
=====
```

**Printout format, lubLink table (RNC):** This table shows the configuration and status of control plane connections for IP-based lubLinks (for lub user plane connections refer to the IpAccessHostPool table). Each line corresponds to a lubLink MO in RNC. Each column corresponds to an attribute of these MOs.

- Sctp: the value of lubLink::sctpRef. The position of the GPB hosting this Sctp is shown.
- Mod: the value of lubLink::rncModuleRef.
- Host: the value of Sctp::ipAccessHostGpbId or Sctp::ipAccessSctpRef. Shows "Gpb" if IpAccessHostGpb is used or "Et" if IpAccessSctp is used.
- Interf1/Interf2: the position of the IpInterfaces used by the IpAccessHost(s).
- LocalIp1/LocalIp2: the ip addresses of the IpAccessHost(s) used by the Sctp.
- Remotelp: the value of lubLink::remoteCplAddress1
- lubLink: the name of the lubLink MO.
- G: the state of the IpAccessHostGpb or IpAccessSctp used by the Sctp MO (0=locked, 1=unlocked&enabled, 0=unlocked&disabled)
- S: the state of the Sctp MO
- 1: the state of IpInterface 1
- 2: the state of IpInterface 2
- I: the state of the lubLink MO
- S: the state of the NodeSynch MO
- PP: the ping status from each IpInterface to the Remotelp (0=unreachable, 1=alive). The first "P" corresponds to the ping status from IpInterface 1, the second "P" corresponds to the ping status from IpInterface 2.
- the NbpC\_Assoc and NbpD\_Assoc fields identify the sctp associations for NbpCommon and NbpDedicated. First number is the local port number, then the remote port number, then the SCTP association reference number according to the printout of `sctphost_info -assoc -all`. The number in brackets identifies the active IpInterface used for this association.

```
=====
Sctp Mod Host Interf1 Interf2 LocalIp1 LocalIp2 RemoteIp IubLink GS12 ISPP NbpC_Assoc NbpD_Assoc
=====
MS-14 1 Gpb MS-25-1 MS-26-1 10.100.0.140 10.100.1.140 10.100.2.150 Iub-1 1111 1111 1:5101:30 (1) 2:5102:23 (1)
MS-14 1 Gpb MS-25-1 MS-26-1 10.100.0.140 10.100.1.140 10.100.2.150 Iub-10 1111 1111 1:5119:33 (1) 2:5120:26 (1)
=====
```

**Printout format, lub table (RBS):**

- LocalIp: ipaddress of the IpAccessHostGpb or IpAccessHostEt used for lub control plane
- Remotelp1/Remotelp2: ip addresses used on the remote side (RNC) according to the printout of `sctphost_info -assoc -all`
- G: state of IpAccessHostGpb or IpAccessSctp MO
- S: state of Sctp MO
- I: state of IpInterface MO
- C: state of NbpCommon MO
- D: state of NbpDedicated MO
- P: ping status, one ping for each remotelp (0=unreachable, 1=alive)

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- the NbpC\_Assoc and NbpD\_Assoc fields identify the sctp associations for NbpCommon and NbpDedicated. First number is the local port number, then the remote port number, then the SCTP association reference number according to the printout of `sctphost_info -assoc -all`. The number in brackets identifies the active IpInterface used for this association.

| LocalIp     | RemoteIp1  | RemoteIp2  | IubLink | GSI | CDPP | NbpC_Assoc | NbpD_Assoc |
|-------------|------------|------------|---------|-----|------|------------|------------|
| 10.2.35.143 | 10.2.35.16 | 10.2.35.17 | Iub=1   | 111 | 1111 | 5113:1 (2) | 5114:2 (1) |

#### Printout format, S1/X2 interfaces in ERBS:

- T: state of the TermPoint MO
- S: state of the Sctp MO
- H: state of the IpAccessHostEt MO
- P: ping status to the active remote IP address (0=unreachable, 1=alive)
- Assoc: the reference number of the SCTP association according to the printout of `sctphost_info -assoc -all`
- TermPoint: "ENB" refer to TermPointToENB MO (X2), "Mme" refer TermPointToMME MO (S1).

| LocalIp:Port      | RemoteIp:Port      | StandbyRemoteIp | TSHP | Assoc | TermPoint           |
|-------------------|--------------------|-----------------|------|-------|---------------------|
| 10.62.11.34:36422 | 10.62.11.33:36422  | 10.62.11.34     | 1111 | 71    | ENB=104023          |
| 10.62.11.34:36422 | 10.64.193.81:36412 | 10.62.11.82     | 1111 | 68    | Mme=MME010064193081 |
| 10.62.11.34:36422 | 10.64.193.91:36412 | 10.62.11.92     | 1111 | 70    | Mme=MME010064193091 |

#### 4.2.11 sts[c]

Purpose: Display state and configuration of Network Synchronization.

The printout is read from the Synchronization MO on CPP nodes and all children MOs of Synchronization/Ntp/Ptp on COM nodes.

The `c` option is to print the output in CSV format.

#### Printout format CPP

The first line corresponds to the value of the attribute `nodeSystemClock`. If the node is part of a Node Group Synchronization cluster then the next line will indicate the node group role (provider or receiver). The remaining lines correspond to the values of the attributes `syncReference`, `syncRefPriority`, `syncRefActivity`, `syncRefStatus`.

#### Examples:

```
RNC01> sts
```

```
SystemClock: LOCKED_MODE
```

| Prio | Activity | RefState | AdmState | OpState | SyncReference                                              |
|------|----------|----------|----------|---------|------------------------------------------------------------|
| 1    | ACTIVE   | OK       | UNLOCKED | ENABLED | Subrack=MS,Slot=4,PlugInUnit=1,TimingUnit=1,TuSyncRef=1    |
| 2    | INACTIVE | OK       | UNLOCKED | ENABLED | Subrack=ES-2,Slot=2,PlugInUnit=1,ExchangeTerminal=1,Os155  |
| 3    | INACTIVE | OK       | UNLOCKED | ENABLED | Subrack=ES-2,Slot=27,PlugInUnit=1,ExchangeTerminal=1,Os155 |
| 4    | INACTIVE | OK       | UNLOCKED | ENABLED | Subrack=ES-3,Slot=2,PlugInUnit=1,ExchangeTerminal=1,Os155  |
| 5    | INACTIVE | OK       | UNLOCKED | ENABLED | Subrack=ES-3,Slot=27,PlugInUnit=1,ExchangeTerminal=1,Os155 |

```
RBS14> sts
```

```
SystemClock: HOLD_OVER_MODE
```

| Prio | Activity | RefState | AdmState | OpState  | SyncReference                 |
|------|----------|----------|----------|----------|-------------------------------|
| 1    | INACTIVE | FAILED   | UNLOCKED | DISABLED | IpAccessHostEt=1, IpSyncRef=1 |
| 2    | INACTIVE | FAILED   | UNLOCKED | DISABLED | IpAccessHostEt=1, IpSyncRef=2 |

#### Printout format MSRB

The first line indicates the clock state in RadioEquipmentClock MO. If the node is part of a Node Group Synchronization cluster then the next line will indicate the node group role (provider or receiver). The table shows the attributes of each

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

RadioEquipmentClockReference MO. The priority is marked with an asterisk to indicated the active Reference. The MO referred by the "encapsulation" attribute is shown on the right together with some of its attributes, in brackets.

#### Examples:

```
MSRBS1> sts
```

```
radioClockState : FREQUENCY_LOCKED
```

```

Prio ST syncRefType refStatus opQualLevel SyncReference

 *1 1 SYNC_E NO_FAULT PRC Synchronization=1, SyncEthInput=TN_B (SFP_OPTICAL Eth
 2 1 FREQUENCY_PORT NO_FAULT PRC Synchronization=1, FrequencySyncIO=1 (FREQUENCY_1PPS F
```

```
MSRBS2> sts
```

```
radioClockState : FREQUENCY_LOCKED
```

```

Prio ST syncRefType refStatus opQualLevel SyncReference

 2 0 NTP_FREQUENCY NTP_FAULT QL_UNKNOWN Ntp=1, NtpFrequencySync=1 (192.168.250.101:32751 Router
 *3 1 PTP_FREQUENCY NO_FAULT PRC Ptp=1, BoundaryOrdinaryClock=PTP_FREQUENCY (G_8265_1 Ro
 4 1 PTP_FREQUENCY NO_FAULT PRC Ptp=1, BoundaryOrdinaryClock=PTP_FREQUENCY_IPV6 (G_8265
 5 1 GNSS_RECEIVER NO_FAULT GNSS Synchronization=1, TimeSyncIO=GPS (FieldReplaceableUnit
 7 1 PTP_TIME PTP_FAULT QL_UNKNOWN Ptp=1, BoundaryOrdinaryClock=PTP_TIME (IEEE_1588_J3 Eth
```

#### 4.2.12 str

Print status of the lubLinks/AbisLinks and their associated Cells and Channels (RNC/BSC only).

The command has two syntaxes, depending on the type of node.

#### **CDMA BSC:** str [ | <unix-cmds>]

```

SITE C1 C2 C3 ABIS BACKHAUL ATMPORTS

96 11 11 11 11 RBS1_Backhaul BHRBS1_Backhaul_BHSBackhaulSpan_1

```

The states of the channels are shown for each cell, as well as the states of the **AbisCommon** and **AbisDedicated**.

The MO-id of the **BackHaul** and the **AtmPorts** are also shown for each site.

State abbreviation: L means Locked, 0 means Disabled, and 1 means Enabled.

#### **UTRAN RNC:** str[123ft] [<csvfile>] [<filter-options>] [ | <unix-cmds>]

To see the state of all or part of the cells/iubs/channels in the node, one line per site.

The filter options (-m, -s, -i, -c, -g, -t, -r) allow to get states on only part of the sites/cells, in order to speed up the output. For example:

- str -m 7, 8, 9 - print states only for modules 7, 8, and 9
- str -s ms, es-1 - print states only for subracks ms and es-1
- str -i 9012 - print states only for the MO lublink=9012 and its connected cells
- str -c 90121, 90131 - print states only for the lublink MOs connected to the MO UtranCell=90121 and UtranCell=90131
- str -g clusterNorth - print states only for the lublinks defined in the MO group "clusterNorth"
- str -t a - print states only for ATM-based iublins
- str -t i - print states only for IP-based iublins
- str -t ai - print states for dual stack iublins
- str -r 9345 - print states for lubLinks connected to RSite=9345

There are five possible output formats:

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

The `str` printout uses an abbreviated naming of the cells where it is assumed that the last digit is identifying the sector. For networks where the sector is not identified by the last digit, it can be handy to use `str1` or `str2` since the whole cell name will then be shown for each sector.

The `strt` command shows the `AtmPorts` used by each site.

The `str3` command shows cell status in a compressed format in order to fit 12 cells per line, see further down for details.

- `str`

| MOD | IUBLINK  | CELLNAME   | CFRPHEU1 | CFRPHEU2 | CFRPHEU3 | ICDS | TN | R |
|-----|----------|------------|----------|----------|----------|------|----|---|
| 1   | Iub_3011 | 3011-1/2/3 | 1111111  | L000000  | 1000000  | 1111 | I  | P |

- `strt`

| MOD | IUBLINK  | CELLNAME   | CFRPHEU1 | CFRPHEU2 | CFRPHEU3 | ICDS | TN | TNPORTS         |
|-----|----------|------------|----------|----------|----------|------|----|-----------------|
| 1   | Iub_3011 | 3011-1/2/3 | 1111111  | L000000  | 1000000  | 1111 | AI | MS-25-1 MS-26-1 |
| 8   | Iub_3012 | 3012-1/2/3 | 1111111  | 1111111  | 1111111  | 1111 | I  | MS-23 MS-24     |

- `str1`

| MOD | IUBLINK  | CELLNAMES         | CFRPHEU1 | CFRPHEU2 | CFRPHEU3 | ICDS |
|-----|----------|-------------------|----------|----------|----------|------|
| 1   | Iub_3011 | 30111 30112 30113 | 1111111  | L000000  | 1000000  | 1111 |

- `str2`

| MOD | IUBLINK  | ICDS | CELL1 | CFRPHEU | CELL2 | CFRPHEU | CELL3 | CFRPHEU |
|-----|----------|------|-------|---------|-------|---------|-------|---------|
| 1   | Iub_3011 | 1111 | 30111 | 1111111 | 30112 | 1111111 | 30113 | 1111111 |

- `str3`

| IUBLINK  | MOD  | TN | R | ICDS | C01 | C02 | C03 | C04 | C05 | C06 | C07 | C08 | C09 | C10 | C11 | C12 |
|----------|------|----|---|------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| Iub-1523 | 1111 | I  | P | 1111 | 111 | 111 | 111 | 11  | 11  | 111 |     |     |     |     |     |     |
| Iub-1526 | 1161 | A  | N | 1111 | 111 | 1   | 111 | 111 | 111 | 111 |     |     |     |     |     |     |

- **MOD:** The RNC module that is handling the control plane for this lub, corresponds to the attribute `IubLink::rncModuleRef`
- **IUBLINK:** The MO name of the `IubLink`
- **CELLNAME:** The name of the cells that are connected to that `IubLink`. The cell names correspond to the respective sectors. Eg: 6306-1/2/3 means that: cell 63061 is connected to sector 1, cell 63062 is connected to sector 2, cell 63063 is connected to sector 3.
- **CFRPHEU:** The first digit is the state of the `UtranCell` MO. The following three digits are the state of the common channels (Fach/Rach/Pch). The fifth digit (if present) represents the state of the `hsdpa` channel (Hsdsc). The sixth digit (if present) represents the state of the enhanced uplink channel (Eul). The seventh digit (if present) represents the state of the `EulFach` channel (EulFach).
- **ICDS:** The first digit is the state of the `IubLink`. The second digit is the state of `NbapCommon` MO or `SctpAssociation` MO handling `Nbap Common`. The third digit is the state of `NbapDedicated` MO or `SctpAssociation` MO handling `Nbap Dedicated`. The fourth digit is the state of `NodeSynch` MO.
- **TN:** The type of transport network used by the `IubLink`. A=ATM, I=IP, AI=DualStack
- **R:** The lub/Geo redundancy configuration of the `IubLink`, read from the attribute `IubLink::poolRedundancy`.
  - N=No Redundancy
  - lub Redundancy feature: P=Primary, S=Secondary
  - Geo Redundancy feature: G=Primary, A=SecondaryActive, I=SecondaryInactive
- **TNPORTS:** The Subrack and Slot of the ETIP (in case of IP lub) or `ATMPort` (in case ATM or DualStack lub)
- **CXX:** A compressed cell status consisting of up to 3 digits per cell (XX is a number from 01 to 12):

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- 1st digit is the combined state of UtranCell+Fach+Rach+Pch: if all four are up then it shows 1. If one or more are locked it will show "L", "T", "S", or "U" depending on the type of lock (see below). If one or more are disabled then it shows 0.
- 2nd digit is the state of HsDsch.
- 3rd digit is the combined state of Eul+EulFach (same rule applied as for 1st digit).

States values:

- **L** = Locked
- **S** = ShuttingDown
- **T** = TPS power Locked (corresponds to the attribute tpsPowerLockState)
- **U** = TPS power ShuttingDown
- **0** = Unlocked & Disabled
- **1** = Unlocked & Enabled

The output can be piped in external unix commands such as grep.

If a filename is given as argument, the output will be saved into this file in csv format (as well as being printed on the screen).

The *f* option (*fast*) is for printing without fetching the data. I.e. the data can be fetched once, then displayed in many different ways without having to fetch it again each time.

#### Examples:

```
strf | grep 3011
strlf | sort -k 2 (sort on the second field)
```

#### 4.2.13 **dcg[meiabsrfkx] [-m <rophours>] [-e <eventrophours>] [-d <logdays>] [-b <boards|boardgroup>|all] [-r <mogroup>] [-k <nrdumps>|<esiGranularity>] [-f <mofilter>] [-t <seconds>] [<logdir>]**

Fetch data for TRs/CSRs, according to the Data Collection Guidelines.

The dcg command offers a number of options, it is possible to combine several options, eg: "dcgmsr"

#### Options for CPP nodes:

- **m**: mandatory data. Includes modump, logfiles, pm ropfiles, CV's, coli printouts.
- **e**: emergency data. Subset of the mandatory data which can be taken in case of emergency, before doing board/node restart. This option will usually be run on its own.
- **i**: IP printouts
- **a**: ATM/AAL2 printouts. By default only the AAL2 printouts are collected. To collect ATM printouts, use option "-b", see below.
- **s**: SS7 printouts
- **x**: SPAS printouts
- **r**: RNC specific printouts.
- **f**: fetch logfiles, ropfiles, and CV. Three zipfiles are produced which can be used in offline mode in pmr, pmx, lg, and dbc. Refer to the chapter "Offline mode" for more info.
- **k**: take a MO dump (kget format). A zipfile is produced containing the MO dump and MOM of the node, it can be used in offline mode by running "moshell <zipfile>". Refer to the chapter "Offline mode" for more info.

#### Options for COM nodes:

- **m**: mandatory data. Includes modump, logfiles, pm ropfiles, coli printouts, and large ESI (RCS nodes). By default dcgm collects a large ESI.  
To get a small ESI, use *dcge* or the option *-k 0*, eg *dcgm -k 0*.  
To get a static ESI, use the option *-k -1* (static=small without callbacks, useful in case small ESI failed).
- **e**: emergency data. Same as *m* but with small ESI instead of large.
- **f**: fetch logfiles and ropfiles. Two zipfiles are produced which can be used in offline mode in pmr, pmx, and lg. Refer to the chapter "Offline mode" for more info.
- **k**: take a MO dump (kget format). A zipfile is produced containing the MO dump and MOM of the node, it can be used in offline mode by running "moshell <zipfile>". Refer to the chapter "Offline mode" for more info.



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- b: collect all Backups and store in a zipfile.

**Switches:**

- -m <rophours>: the number of hours of ROP files to collect with pmrf, eg "-m 2". Default is 8 hours in dcge and 48 hours in dcgm/dcgf.
- -e <eventrophours>: the number of hours of Event ROP files to collect with pmef, eg "-e 2". Default is 2 hours in dcge and 12 hours in dcgm/dcgf.
- -d <logdays> : the number of days of logfiles to collect with lgf, eg "-d 30". Default is 60 days in dcgm/dcgf. Note: to specify hours or minutes, use "h" or "m", eg "-d 2h" to collect the last 2 hours.
- -b <boards|boardgroup>|all : the ET boards on which dcgi/dcga will be run. When this option is not specified, dcga collects no ET board data, while dcgi collects all ET boards data. Example: `dcgi -b 000600,000700`
- -k <nrdumps> : the number of ENB DSP dumps to collect on CPP nodes, or the ESI granularity on RCS nodes: 1=large, 0=small, -1=static, -2=refresh, -101=sp1. Corresponds to the option -d in lg command. Default: 1 in dcgm, 0 in dcge. If option -k -1 is specified on CPP nodes then the DCG proxy collection will be skipped (action DataCollection.runDcg()). If option -k -2 is specified on RNC nodes then the COLI printouts will not be collected via SSH, only via the DCG proxy.
- -f <mofilter>: the MO filter for MO dump collection. Eg "-f lrelation=" to skip MOs such as UtranRelation/GsmRelation in the MO dump.
- -t <seconds> : the maximum time (in seconds) allowed for the dcgm to complete. Default is 1800 seconds for RBS/ENB, 3600 seconds for RNC, and 2700 seconds for MSRBS.
- -r <mogroup> : the mogroup (created by "ma" command) containing a list of Cells/SectorCarriers/FieldReplaceableUnit MOs whose logs shall be included in the ESI and the RU/XMU COLI printouts. Only applicable for MSRBS.

**Argument:**

- the directory where the collected data will be stored. If no directory is given, the directory `~/moshell_logfiles/logs_moshell/dcg/<node>/<date>_<time>` is used.

**Notes:**

- A zipfile is produced, containing all the data collected by the dcg command. For dcgm/dcge, the name of the zipfile indicates the UP of the node as well as the timestamp when the dcg was collected. By default the timestamp is written in the local time of the workstation unless the uservariable `dcg_name_utc` is set to 1, in which case the timestamp will be in UTC.
- Please refer to the command file in `moshell/commonjars/scripts/dcg_datacollection.mos` to view the various commands that are run for each option. More info about each command can be found by typing `h <command>`
- For CPP nodes, if the MO layer is unavailable, it is possible to run dcg anyway by typing `uv nocorba=1` before executing dcg. Using `nocorba=1` means that moshell will not attempt to connect to the MO service and will only run commands via telnet/ftp/ssh/sftp.

**4.2.14 hc[iuzd][v] [-r|-x <numbers>] [<hcllogfile>|<hcllogdir>|<hcreportdir>] [<hcllogfile2>|<hcllogdir2>]**

Run a healthcheck report or compare healthcheck logs.

**Options:**

- i: only perform checks applicable to pre-install phase (1-6, as well as 9,13 on RNC)
- u: only perform checks applicable to pre-upgrade phase (5-8,10-12,14-17)
- z: only perform checks applicable to post-upgrade phase (5-8,10-12,14-17, as well as 9 on RNC)
- d: perform a diff between two HC log files or two HC log directories
- v: verbose printout

**Switches:**

- -r <numbers>: list of checks to perform. Eg: -r 1-3,5,7-10
- -x <numbers>: list of checks to skip. Eg: -x 5,12-14

**List of checks:**

| Check numbers                  | Applicability |
|--------------------------------|---------------|
| - 1: Disk space                | All           |
| - 2: Number of UpgradePackages | All           |
| - 3: Number of CVs             | All           |

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

|                                  |               |
|----------------------------------|---------------|
| - 4: Security settings           | RNC           |
| - 5: Alarm list                  | All           |
| - 6: License status              | All           |
| - 7: HW status                   | All           |
| - 8: HW supported by release     | RNC           |
| - 9: DB consistency              | RNC, RBS, ENB |
| - 10: Synchronization status     | All           |
| - 11: NTP status                 | RNC, RBS, ENB |
| - 12: Fault Tolerant Core status | RNC           |
| - 13: File System consistency    | RNC, RBS, ENB |
| - 14: Crash history              | All           |
| - 15: Connectivity status        | All           |
| - 16: Cell status                | All           |
| - 17: Device status              | RNC           |

**Arguments for hc[iuz][v]:**

- no argument: only applicable when connected to the node. Will generate a hclogfile, then parse it to generate a hcreportfile.
- <hclogfile>: parse an existing hclogfile to generate a hcreportfile.
- <hclogdir> : parse existing hclogfiles stored in a common folder to generate a set of hcreportfiles that will be stored in a new folder.
- <hcreportdir>: parse existing hcreportfiles stored in a common folder to generate a common report showing the check results (OK, NOT OK, OK with Warning) for all the nodes whose logs are stored in that folder.

**Output files produced by hc[iuz][v]:**

- HcLogFile: a file containing a set of moshell printouts taken from the node (eg: invl, dbc, etc). FileName format:  
\$logdir/hc/logs/.../HcLog\_<NodeType>\_<NodeName>-<NodeIp>\_<HcVersion>.log.gz
- ReportFile: a file generated by parsing a hclogfile according to a number of checks resulting in OK, OK with Warning, or NOT OK. FileName format:  
\$logdir/hc/reports/.../HcReport\_<NodeType>\_<NodeName>-<NodeIp>\_<HcVersion>.txt

**Arguments for hcd[v]:**

- <hclogfile> : only applicable when connected to the node. Will generate a hclogfile, then compare it toward a hclogfile previously collected from the same node.
- <hclogfile> <hclogfile2>: compare two hclogfiles previously connected from a node to show differences such as active alarms, scanner states, MO states, operable features, HW state, etc
- <hclogdir> <hclogdir2> : compare a set of hclogfiles stored in two separate folders to show differences as listed above. Only pairs of hclogfiles coming from the same node will be compared.

**Output files produced by hcd[v]:**

- DiffFile: a file generated by parsing two hclogfiles (eg pre and post upgrade log) according to a number of checks resulting in OK, OK with Warning, or NOT OK. FileName format:  
\$logdir/hc/reports/.../HcDiff\_<NodeType>\_<NodeName>-<NodeIp>\_<HcVersion>.txt

**Filter file:**

This is a text file containing configuration settings to tailor the behaviour of the health checks. The default filter file is stored under moshell/commonjars/scripts/hc/filterfile.txt and should not be modified as it contains the default settings. To modify certain settings please create a separate filter file containing the settings to be modified and specify its path in the uservariable `hc_filter_file` which can be specified in the `/.moshellrc` or `moshell/jarxml/moshellrc`.

**Batch reports:**

- 1) Collect a set of HcLogFiles and HcReportFiles from a batch of nodes by running:  
mobatch <sitefile> 'hc[iuz] [-x <nrs>] [-r <nrs>]'  
Note that the options [iuz], -x/-r are optional and only needed in case the user does not need to perform all checks, then these options allow to save time by skipping collection of certain printouts from the node.  
The mobatch job will save all HcLogFiles and HcReportFiles in a folder common for all nodes specified in the sitefile. The path of this folder will be located under  
moshell\_logfiles/logs\_moshell/hc/(logs|reports)/<date>/<sitefile>/<time>  
The exact path can be found by looking inside one of the mobatch logfiles.
- 2) After the mobatch job is completed, open a moshell offline session not connected to any node (eg just type "moshell" on its own) and run hc[iuz][v] or hcd[v] against the relevant hc/logs folder(s), according to arguments described further up in this help. hc[iuz] typically should run toward the hc/reports folder while hcd should run toward a pair of hc/logs folders.  
Eg: hc \$logdir/hc/reports/<date>/<sitefile>/<time>

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

or: `hcd $logdir/hc/logs/<date>/<sitefile>/<time1> $logdir/hc/logs/<date>/<sitefile>/<time2>`

#### Description of the checks (criteria for OK):

- 1) Disk space: the amount of free disk space is at least 10% above the limit specified in the filterfile.txt (disk\_space\*). If less than 10% above limit, the result will be OK with warning.
- 2) Number of UpgradePackages: the number of UpgradePackages is less than the limit specified in the filterfile.txt (nr\_ups).
- 3) Number of CVs: the number of CVs/Backups is less than the limit specified in the filterfile.txt (nr\_cvs).
- 4) Security settings: corba security and ftp client are configured as unsecure
- 5) Alarm list: there are no active alarms with the severities listed in the filter file (alarm\_severities)
- 6) License status: the license is installed and not in emergency state, the number of days remaining is above the limit specified in filterfile.txt (license\_days), there are no licenses with inconsistent states (eg ACTIVE&ENABLED&INOPERABLE), the RNC HWAC codes and limits are valid.
- 7) HW status: no HW is in state unlocked&disabled, and the fault LEDs are OFF and the oper LEDs are ON.
- 8) HW supported by release: the HW product number/revision is same or higher as specified in the file HW\_RNC.csv
- 9) DB consistency: the result of dbc command is OK
- 10) Synchronization status: the system clock is in state LOCKED mode.
- 11) NTP status: there are valid NTP servers
- 12) Fault Tolerant Core status: the passive core MP is in state StandbyReady.
- 13) File System consistency: the action ManagedElement.startHealthCheck() returned OK
- 14) Crash history: there have not been any Crash/PMDs in the past 14 days
- 15) Connectivity status: there are no unlocked&disabled MO instances of MO class listed in filterfile.txt (connectivity\_mocs)
- 16) Cell status: there are no unlocked&disabled MO instances of MO class listed in filterfile.txt (cell\_mocs)
- 17) Device status: there are no unlocked&disabled MO instances of MO class listed in filterfile.txt (device\_mocs)

#### 4.2.15 `trg[idfubgs] [-e <section>] [-f <faultString>] [-s <searchString>] [<NodeIP/path/to/dcgm.zip>]`

Generate RBS TR observation template

Argument:

- without argument: generate from the node or dcgm to which the moshell session is currently connected.
- node IP: generate from a node with the specified IP address
- /path/to/dcgm.zip: generate from a dcgm.zip located at the specified path

Options:

- `i`: interactive (user will be prompted with various questions)
- `d`: save debug values to /tmp/TR/TRToolValues.json. Do NOT use, only for development
- `f`: force a new connection to ERIS (only applicable when run from Ericsson network). Do NOT use, only for development
- `u`: unpack latest PMDs and BB dumps. E-mail will be sent when BB dump unpack is completed.
- `s`: same as option "u" above but without sending E-mail.
- `b`: bbi dump unpack. Do NOT use, only for development
- `g`: login to external equipment and fetch versions/logs.

Switches

- `-e <no|all|1|2|3|1,2,3>` : exclude comments for all or specific sections of the template. Default is `-e 2`. Use `-e no` to not exclude comments from any sections.
- `-f <faultString>` : search for specific fault, eg `trg -f <name_of_pmd>` extracts information about matching pmd.
- `-s <searchString>` : search for a known fault in MHWEB, eg `trg -s ulmacce_drupdate`. By default up

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

to 10 search results will be produced. The upper limit can however be changed in the uservariable `trg_search_count`.

#### 4.2.16 `diff[a][d][m][o][x][i]/ldiff[a][d][m][o][x][i]`

Parameter auditing or MO dump comparisons.

##### Syntax 1:

Compare two or three MOs side by side. All attribute values that are different between the MOs will be printed.

Example:

```
dif 4 32 17
```

Where 4, 32, 17 are the proxy identities of the MOs that should be compared.

##### Syntax 2:

```
diff[a][d][m][o][x][i]/ldiff[a][d][m][o][x][i] <moGroup>|<moFilter>|<proxy>|<modumpFile>|<modumpDir>
[<baselineFile>|<modumpFile2>|default] [<outputDir>]
```

Purpose: To compare an MO dump with a parameter baseline file or with another MO dump.

##### Options:

- `a`: show the list of MOs and attributes that are in the reference but not in the node or dump.
- `d`: compare against the default values in MOM (read from command "momb")
- `m`: when comparing against parameter baseline, any parameter not found in the baseline will be compared against the MOM default values instead.
- `o`: when comparing two MO dumps, only the differences in configuration parameters will be shown (= attributes that are not readOnly)
- `ox`: same as diffo but with an additional table showing attribute name differences.
- `i`: to audit the EricssonOnly ("internalmom") parameters of a Gen2 node, using "geti" command. Only applicable to MSRBS (DUS Gen2).
- `im`: same as "i" but where the EricssonOnly parameters are compared to their default value.

Note: It is currently not supported to combine several options together (apart from "o" and "x")

When no option is specified, the attributes are compared against the recommended values in baseline (files moshell/commonjars/pm/PARAM\*)

User variables:

- `diffo_exclude_attributes` : to exclude certain attributes from the MO dump comparison (diffo <dump1> <dump2>)
- `diffm_exclude_moclasses` : to exclude certain MO classes from the MOM default value comparison (diffd and diffm)
- `diffm_exclude_attributes` : to exclude certain attributes from the MOM default value comparison (diffd and diffm)
- `diffm_exclude_structs` : to exclude certain structs from the MOM default value comparison (diffd and diffm)

Note: Any MO classes/attributes included in these lists will be skipped only in regard to the default value comparison. If there is a recommended value in the PARAM file or reference file then this check will not be excluded.

First Argument:

- `<moGroup>|<moFilter>|<proxy>`: to specify the MOs in the current node which should be used for the comparison.
- `<modumpFile>`: to specify an modump, taken from this node or another node. The modump file should be a zipfile taken by the command `dcgk`. Alternatively it can be a text or gzipped file containing the printout from the `get` or `kget` command.
- `<modumpDir>`: to specify a directory containing modump logfiles. Only files with the extension ".log" will be used in the comparison.

Second Argument (optional):

- empty or "default": a baseline parameter file from moshell/commonjars/pm/PARAM\* will be chosen according to the MOM type and version of the current node or of the modump specified in the first argument. Note: typing "default" is only necessary if one wants to specify a third argument (the outputDir).  
If the uservariable `custom_param_file` is set then the file(s) specified in `custom_param_file` are read after the PARAM\* file, meaning that their values will override those of the PARAM\* file. The default parameter baseline files in

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

moshell/commonjars/pm/PARAM\* are extracted from the following documents: RNC: 3/19059-HSD10102. RBS: 4/19059-HSD10102. ENB/MSRBS: 19706-CXP102051/\*

- **<baselineFile>**: a specific baseline file is used as reference, instead of the default one.  
In this case the file(s) specified in the uservariable `custom_param_file` are not read.  
The format of a baseline file must consist of three words on each line: `<mo> <attribute> <value>`  
The `<mo>` field can be either an MO class (e.g. `PlugInUnit`) or an MO LDN (e.g. `Subrack=MS, Slot=1, PlugInUnit=1`)  
It is also possible to write a tilde sign ( `~` ) in front of the MO LDN, in which case it is treated as a regular expression.  
For instance: `~UniSaalTp=.*q[ab]$ maxSduSize 128` means that the reference value only applies to the MOs whose LDN matches that string.  
The recommended value can be a single value or several values separated by commas. For instance `-1,2,25,300` : means any of these values is accepted as recommended value. If the recommended value is a sequence of Structs or sequence of moRefs, then it shall be written on one single line. In case of sequence of Structs, the struct members must be alphabetically sorted (in order of struct member name) and the struct member names shall not be specified, only the struct member values. Example:

```
EthernetSwitch pbitQueueMap [8] = 0,1;1,0;2,1;3,1;4,2;5,2;6,3;7,3
```

```
EUtranFreqRelation eutranFreqToQciProfileRelation [9] = 0,0,0,0,0 (ALLOWED),0 (ALLOWED),0,0,0,1 (E
```

If the reference file contains several entries with the same MO / attribute, the following priority rules apply:

1. Lines with a fixed value take precedence over lines containing lu/lur/lub, regardless of the order. Eg:

```
Sctp pathMaxRtx Iu, Iur: 4 Iub: 12
Sctp pathMaxRtx 13
```

-> The line with value 13 will be used, regardless if it is before or after the lu/lur/lub line.

2. Lines containing a tilde: the first entry takes precedence. Eg:

```
~Sctp pathMaxRtx 13
~Sctp pathMaxRtx 14
```

-> The line with the value 13 will be used as reference.

3. Lines containing no tilde: the last entry takes precedence. Eg:

```
Sctp pathMaxRtx 13
Sctp pathMaxRtx 14
```

-> The line with the value 14 will be used as reference

More information about the reference file format can be found in the document

moshell/examples/audit\_files/EAB\_FJW-08\_0071.doc

- **<modumpFile>**: the two modump logfiles are compared and the following differences will be highlighted: differences in attribute values, MOs found in one dump but not the other, attribute names found in one dump but not the other.

Third Argument:

- **<outputDir>**: to specify the directory where to store the result files (csv comparison file and correction command file). If not specified, a default directory and file names are chosen.

Result:

The result is shown on screen with space-separated fields and also saved in the result directory with comma-separated fields (CSV). Also, in the result directory is a command file to align the current values to the baseline values. The path to the CSV result file is saved in the moshell variable `$diffcsvfile` and the path to the command file is saved in the moshell variable `$diffcmdfile`.

Please refer to the document `moshell/examples/audit_files/EAB_FJW-08_0071.doc` for more information.

Note about parameter baseline files:

Parameter baseline files are taken from the Winnow database and stored in CDM in excel format:

- RNC: 3/19059-HSD10102
- RBS: 4/19059-HSD10102
- RXI: 5/19059-HSD10102
- ENB: 19706-CXP102051/\*

To use these files as reference for comparison, they need to be converted to text. This can be done by copy pasting the excel sheet to a text file. Moshell keeps a text copy of the latest version of each of these files in the folder `moshell/commonjars/pm`. By not specifying the baseline parameter file in the "diff" command will make moshell choose the best suited file for the node type

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

and mom version of the current node or modump file.

#### Examples:

- `diff .` - Compare all MOs with the relevant baseline parameter file stored in `moshell/commonjars/pm`.
- `diffa .` - Same as above but showing MO/attributes found in reference but not in node
- `diff . default ~/audit\_070110` - Same as above but store the results in the directory `/audit_070110`
- `diff ~/moshell_logfiles/logs_mobatch/2007-01-10/mysites/11-21` - Compare all modumps under that directory against the relevant baseline parameter file stored in `moshell/commonjars/pm`
- `ldiff msplatform=1 mgw\_parameters\_r4.txt` - Compare all MOs under `msplatform=1` in the current node with the baseline file `"mgw_parameters_r4.txt"`
- `diff . rnc10\_before\_upgrade.txt` - Compare all MOs in the current node with the MO dump `"rnc10_before_upgrade.txt"`
- `diff rnc10\_before\_upgrade.txt rnc10\_after\_upgrade.txt` - Compare the MO dumps `"rnc10_before_upgrade.txt"` and `"rnc10_after_upgrade.txt"`
- `diffo rnc10_before_upgrade.txt rnc10_after_upgrade.txt` - Same as above but only the configuration parameters are compared
- `diffd utrancell` - compare all utrancell parameters against MOM default values.

#### 4.2.17 diffs <scRefFile>|<modumpFile>

Auditing or comparison of System Constants. Applicable to MSRBS only.

##### Argument:

- `<scRefFile>` : the path to a reference file containing default and recommended SystemConstant values for a given UP. This file is generated by the command `"w2f"`.
- `<modumpFile>`: the path to a modump.zip (dcgk) or a dcgm.zip (dcgm)

##### Output:

The command compares the current system constant settings (read via `"scg"` command) against the system constant values stored in:

- a SystemConstant reference file produced by `"w2f"` command for the current UP
- or the SystemConstants stored in a offline dump (dcgk or dcgm)

#### 4.2.18 w2f <UP>

Generate MO parameter reference file and System Constant reference file for a given MSRBS UP. Applicable for Ericsson PDU personnel only.

##### Argument:

- `<UP>` : the product number and revision of the MSRBS UP , eg: `CXP9024418/12_R81C57`

##### Output:

The command produces two files:

- a reference file containing recommended MOM parameter values for LTE and NR, to be used in the `"diff"` command. This is the same kind of file as found in `moshell/commonjars/pm/PARAM_MSRBS_<release>.txt` but can be produced for any UP and not only the major releases. The path of this file is output to the variable `$refmomfile`
- a reference file containing recommended System Constant settings for LTE and NR, to be used in the `"diffs"` command. The path of this file is output to the variable `$refscfile`

#### 4.2.19 lkr[a]

Print RNC lub resources allocation.

##### Purpose:

- display the repartition of lubLinks and UtranCells across `rncModules` and Subracks, to identify any uneven resource allocations, for instance: `rncModules` that are handling more lub/Cells than others, or CC devices that are handling different Cells than their controlling module MP.



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- uneven allocation of lubLinks across RncModules can be corrected by the command `resub iublink`
- uneven allocation of UtranCells across CC devices can be corrected by locking/unlocking the cells using command `b1` and `deb` on the UtranCell MOs.
- with the option `a`, an additional table shows the lubLinks whose AtmPort(s) are located in a different Subrack than the lub module resources. lubLinks can be moved to a different AtmPort or Subrack with the command `resub <iublink> <subrack>` or `resub <iublink> <atmport/vp>`. Type `h resub` for info.

#### Printout example and description:

The first table, only printed with option `a` (`lkra`), shows the list of lubLinks whose AtmPort(s) are in a different Subrack than the lub module resources. The `Sr` column shows the Subrack containing the module resources, the `Mod` column shows the module number, the `IubLink` column shows the lub, and the `AtmPort(s)` column shows the port(s) used by the lub. Example:

| Sr | Mod | IubLink | AtmPort(s)  |
|----|-----|---------|-------------|
| MS | 1   | Iub-198 | ES-1-27-2-1 |
| MS | 13  | Iub-203 | ES-1-27-2-1 |
| MS | 8   | Iub-208 | ES-1-27-2-1 |
| MS | 1   | Iub-213 | ES-1-27-2-1 |
| MS | 13  | Iub-214 | ES-1-27-2-1 |
| MS | 1   | Iub-87  | ES-1-3-1-1  |
| MS | 8   | Iub-88  | ES-1-3-1-1  |
| MS | 1   | Iub-89  | ES-1-3-1-1  |
| MS | 13  | Iub-90  | ES-1-3-1-1  |
| MS | 8   | Iub-91  | ES-1-3-1-1  |
| MS | 1   | Iub-92  | ES-1-3-1-1  |
| MS | 13  | Iub-93  | ES-1-3-1-1  |
| MS | 8   | Iub-94  | ES-1-3-1-1  |
| MS | 1   | Iub-95  | ES-1-3-1-1  |
| MS | 13  | Iub-96  | ES-1-3-1-1  |

The second table (which is the first table when option "a" is not used) shows the resources allocation, module by module.

- `Sr` : the subrack containing the module resources
- `Mod` : the module number
- `S` : the state of the module MP: L=locked, 1=enabled, 0=disabled
- `GPB` : the board type of the module MP
- `nIub` : the number of lubLinks handled by the module MP. Having an equal number of lubLinks/Cells on each module gives a better spreading of the load.
- `CellGPB`: the number of UtranCells handled by the module MP
- `CellCC` : the number of UtranCells handled by the CC devices controlled by that module MP.
- `nCC` : the number of CC devices allocated to this RncModule.

Note: if the cell to CC device allocation has changed since the moshell session was started, the command "bor" needs to be run in order to refresh the moshell cache, otherwise the values in "CellCC" field could be wrong.

Cell repartition by rncModule:

| Sr  | Mod  | S | GPB   | nIub | CellGPB | CellCC | nCC |
|-----|------|---|-------|------|---------|--------|-----|
| MS  | 60   | 1 | GPB65 | 14   | 90      | 117    | 1   |
| MS  | 80   | 1 | GPB65 | 13   | 81      | 114    | 1   |
| MS  | 110  | 1 | GPB65 | 14   | 90      | 119    | 1   |
| MS  | 140  | 1 | GPB65 | 14   | 93      | 117    | 1   |
| ES1 | 21   | 1 | GPB65 | 14   | 99      | 118    | 1   |
| ES1 | 81   | 1 | GPB65 | 14   | 99      | 114    | 1   |
| ES1 | 151  | 1 | GPB65 | 14   | 111     | 119    | 1   |
| ES1 | 181  | 1 | GPB65 | 14   | 96      | 106    | 1   |
| ES1 | 211  | 1 | GPB65 | 14   | 105     | 103    | 1   |
| ES1 | 2121 | 1 | GPB75 | 13   | 102     | 114    | 1   |
| ES1 | 2122 | 1 | GPB75 | 13   | 87      | 114    | 1   |



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

|     |      |   |       |    |     |     |   |
|-----|------|---|-------|----|-----|-----|---|
| ES2 | 3021 | 1 | GPB75 | 14 | 93  | 140 | 1 |
| ES2 | 3022 | 1 | GPB75 | 14 | 99  | 0   | 0 |
| ES2 | 3081 | 1 | GPB75 | 14 | 90  | 140 | 1 |
| ES2 | 3082 | 1 | GPB75 | 14 | 93  | 0   | 0 |
| ES2 | 3121 | 1 | GPB75 | 15 | 99  | 140 | 1 |
| ES2 | 3122 | 1 | GPB75 | 14 | 96  | 0   | 0 |
| ES2 | 3151 | 1 | GPB75 | 14 | 99  | 114 | 1 |
| ES2 | 3152 | 1 | GPB75 | 14 | 96  | 113 | 1 |
| ES2 | 3181 | 1 | GPB75 | 14 | 102 | 120 | 1 |
| ES2 | 3182 | 1 | GPB75 | 14 | 102 | 99  | 1 |
| ES2 | 3211 | 1 | GPB75 | 14 | 93  | 87  | 1 |
| ES2 | 3212 | 1 | GPB75 | 14 | 93  | 0   | 0 |

The third table (which is the second table when option "a" is not used) is identical to the previous one but aggregated on Module Board level. In the case of GPB5/GPB6 it will give the same figures as the previous table but in the case of multicore boards (GPB75/EPB) it gives aggregated values for all RncModules of that board.

Cell repartition by Board:

| Sr  | Slot | S | GPB   | nIub | CellGPB | CellCC | nCC |
|-----|------|---|-------|------|---------|--------|-----|
| MS  | 06   | 1 | GPB65 | 14   | 90      | 117    | 1   |
| MS  | 08   | 1 | GPB65 | 13   | 81      | 114    | 1   |
| MS  | 11   | 1 | GPB65 | 14   | 90      | 119    | 1   |
| MS  | 14   | 1 | GPB65 | 14   | 93      | 117    | 1   |
| ES1 | 02   | 1 | GPB65 | 14   | 99      | 118    | 1   |
| ES1 | 08   | 1 | GPB65 | 14   | 99      | 114    | 1   |
| ES1 | 12   | 1 | GPB75 | 26   | 189     | 228    | 2   |
| ES1 | 15   | 1 | GPB65 | 14   | 111     | 119    | 1   |
| ES1 | 18   | 1 | GPB65 | 14   | 96      | 106    | 1   |
| ES1 | 21   | 1 | GPB65 | 14   | 105     | 103    | 1   |
| ES2 | 02   | 1 | GPB75 | 28   | 192     | 140    | 1   |
| ES2 | 08   | 1 | GPB75 | 28   | 183     | 140    | 1   |
| ES2 | 12   | 1 | GPB75 | 29   | 195     | 140    | 1   |
| ES2 | 15   | 1 | GPB75 | 28   | 195     | 227    | 2   |
| ES2 | 18   | 1 | GPB75 | 28   | 204     | 219    | 2   |
| ES2 | 21   | 1 | GPB75 | 28   | 186     | 87     | 1   |

The fourth table (which is the third table when option "a" is not used) shows an aggregated view of the previous table, on Subrack level. This is interesting to see if any Subracks are more loaded than others.

- **Sr** : the Subrack identity
- **nMod** : the number of rncModules contained in the Subrack
- **nCC** : the number of CC devices contained in the Subrack
- **nIub** : the number of lubLinks handled by all module MPs of the Subrack
- **CellGPB** : the number of UtranCells handled by all module MPs of the Subrack
- **CellCC** : the number of UtranCells handled by all CC devices of the Subrack
- **avIub** : the average number of lubLinks per module MP in that subrack
- **avCell** : the average number of UtranCells per module MP in that subrack
- **avCellCC** : the average number of UtranCells per CC device in that subrack

Cell repartition by Subrack:

| Sr  | nMod | nCC | nIub | CellGPB | CellCC | avIub | avCell | avCellCC |
|-----|------|-----|------|---------|--------|-------|--------|----------|
| MS  | 4    | 4   | 55   | 354     | 467    | 14    | 88     | 117      |
| ES1 | 7    | 7   | 96   | 699     | 788    | 14    | 100    | 113      |

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

|       |    |    |     |      |      |    |    |     |
|-------|----|----|-----|------|------|----|----|-----|
| ES2   | 12 | 8  | 169 | 1155 | 953  | 14 | 96 | 119 |
| ----- |    |    |     |      |      |    |    |     |
| Tot:  | 23 | 19 | 320 | 2208 | 2208 |    |    |     |

#### 4.2.20 resub <lubLink> [<VpITp>|<Subrack>] [<VpITp>]

Moving lub resources within or across Subracks (RNC >= P5).

There are three ways to run the command:

##### a) Respreading of lub resources within a subrack: resub <iublink(s)>

The `lkr` command shows the repartition of Cells/lubLinks across `rnModules`, Cc devices and Subracks. The performance is affected when the resources allocation is uneven. The Cells/lubLinks resources can be evenly reallocated by using the command `resub <iublink(s)>`. Example:

- `resub iublink=` - Reallocate all iublink resources evenly in the node
- `ma iub_es1 iublink subrackref subrack=es-1 ; resub iub_es1` - Reallocate all iublink resources evenly in subrack ES-1

##### b) Moving lub resources to a different subrack: resub <iublink(s)> <subrack>

The `lkra` command shows the list of lubLinks whose `AtmPort(s)` are located in a different Subrack than the lubLink. This causes higher ISL load. The lubLink can then be moved to a different Subrack with the command `resub <iublink(s)> <subrack>`. Example:

- `resub iublink=iub-10 subrack=es-1` - Move lubLink iub-10 to subrack ES-1

##### c) Moving lub resources to different AtmPort/Vp: resub <iublink> <vp> [<vp>]

When there is a need for more Atm bandwidth it may be necessary to move an lub to a different Atm port. This can be done with the command `resub <iublink> <vp> [<vp>]`. The second vp is optional and only needed for lubLinks that use two AtmPorts for redundancy.

- `resub iublink=3040 atmport=ms-27-2,vpltp=vp2` - Move the lubLink 3040 to AtmPort=MS-27-2,VpITp=vp2
- `resub iublink=3040 atmport=ms-27-2,vpltp=vp2 atmport=ms-26-2,vpltp=vp8` - Move the lubLink 3040 to AtmPort=MS-27-2,VpITp=vp2 and AtmPort=MS-26-2,VpITp=vp8

#### Result:

- **a) and b)** In these cases, the command sets the attribute `preferredSubrackRef` (P5/P6) or `atmUserPlaneTermSubrackRef` (P7) to the required subrack. In the case of a), this is the current subrack, equivalent to running `setc <iublink(s)> preferredsubrackref`. In the case of b), this is the given subrack, equivalent to running `set <iublink(s)> preferredsubrackref <subrack>`
- **c)** In the case where one or two VpITp(s) have been specified, a command file is generated containing all the commands necessary for moving the lubLink to the new VpITp(s). The command can be executed with the `run` command or can be converted to EMAS/MoTester format using the `u!` command. In that case, it can be executed with the `trun` command.

#### 4.2.21 ir[cdpsomt] [<lubLink>] [<CM>] [<period>]

lub Redundancy operations for RNC in pool. Only applicable for RNC <= 21.Q1.

Arguments (all optional):

- the first argument is for specifying the lubLink(s) on which the command will apply. It can be a MO filter, a proxy ID, or a MO group. If no lubLink is specified then the command will apply to all. lubLinks using ATM transport will be silently ignored. Note: the `c` option will always ignore this argument.
- the second argument is for specifying the address of the other Cluster Member, which can be an ip address or the path to an MO dump. The other Cluster member can also be specified in the uservariable `cluster_members` in which case it is not necessary to specify this argument. The uservariable `cluster_members` shall contain the list of ip addresses or MO dump paths for all nodes of the cluster. It can be specified from the command line with `uv` command or saved in the `ipdatabase` file.
- the third argument is only applicable to option "t" and is for specifying the report period, using same syntax as in `pmx/pmr` command (eg: `-m <hrs>`, `-s <startdate>`, etc)

#### Options:

- `o`: Overview of the lub Redundancy configuration and status. Will generate a printout listing all lubLinks and Cell states, both redundant and non-redundant, in a format similar to the `str3` command. In this option, the first argument is ignored.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

See printout description further down.

- c:** Consistency check of the lub Redundancy configuration. Will generate a printout listing all the checks and their result. In this option, the first argument is ignored. See printout description further down.
- p:** Protect one or more lubLinks. Only lubLinks with poolRedundancy PRIMARY or NON-REDUNDANT will be considered by the command. The poolRedundancy attribute will be set to PRIMARY and a command file will be generated to define the secondary lubLink(s) and associated cell data in the other Cluster Member. The command file shall be executed in the other Cluster Member and the file path can be accessed from the variable `$irpcommandfile`.
- s:** Synchronise the configuration data of one or more secondary lubLinks. Only lubLinks with poolRedundancy SECONDARY and operationalState DISABLED will be considered by the command. A command file will be generated to align the secondary lub/Cell data to its counterpart in primary side. The command file shall be executed in the same Cluster Member where the `irs` command was run, and the file path can be accessed from the variable `$irscommandfile`. Any secondary lubLinks without a primary counterpart will be saved in the variable `$irs_orphan_iubs` and can be removed with the command `ird $irs_orphan_iubs`.
- d:** Delete one or more secondary lubLinks. Only lubLinks with poolRedundancy SECONDARY and operationalState DISABLED will be considered by the command. A command file will be generated to remove the secondary lubLink(s) and associated cell data. The command file shall be executed in the same Cluster Member where the `ird` command was run, and the file path can be accessed from the variable `$irdcommandfile`. The corresponding primary lubLinks can be set to non-redundant with the command `set $ird_iubs poolRedundancy 0`, to be run in the other Cluster Member.
- m:** Move one or more non-redundant lubLink(s) from a Cluster Member to another. Two command files are generated: one for creating the lubLink(s) on the other CM, and one for deleting them on the current CM.
- t:** Traffic Reports. Currently shows the Paging Success Rates at Pool level. Example: to print the report for the last 2 hrs, do: `irt . . -m 2`

#### Notes:

- when a secondary UtranCell is created by `irp` or `irs`, the previously existing RemoteUtranCell with that cId will be removed, and any cell relations terminating to the RemoteUtranCell will be redirected towards the newly secondary UtranCell.
- when a secondary UtranCell is deleted by `ird` or `irs`, a RemoteUtranCell will be created in its place in order to terminate any cell relations that were pointing to the newly deleted UtranCell.
- secondary UtranCells created by `irp` or `irs` will use a dedicated Ura common for all cells of that secondary lubLink. The Ura MO used by the primary UtranCells will not be used as it is currently not supported by RNC to use the same UraIdentity in several members of the same cluster.
- any attributes that shall not be copied over from primary to secondary lub/Cells can be specified in the uservariable `ir_nosync`.
- the secondary lubLink created by `irp` will be created in administrativeState=LOCKED if redundancySwitchoverWaitTime=-1 on the s-CM.

Example printout from `irc` command:

```
=====
Iub Redundancy Consistency Check for nodes: RNC01 (CM1) and RNC02 (CM2)
=====
1) Same SW level in all CMs: NOT OK
CurrentUpgradePackage: CXP9021776_R4FC40 (CM1) CXP9021776_R4FC39 (CM2)

2) Same features operational in all CMs: NOT OK
RncFeature=RabCombination009 serviceState: 0 (CM1) 1 (CM2)

3) All primary/non-redundant IubLinks/UtranCells have unique rbsId/cId within the cluster: NOT OK
cId=2205 UtranCell=cell11106-Iub-1523-6 (CM1) UtranCell=cell2205-Iub-1525-5 (CM2)

4) All secondary IubLinks/UtranCells have unique rbsId/cId within the cluster: NOT OK
cId=2202 UtranCell=cell2202-Iub-1525-2 (CM1) UtranCell=cell2201-Iub-1525-1 (CM1)

5) No Utran/Coverage Relations between two cells with same cId: NOT OK
cId=1201 UtranCell=cell2204-Iub-1525-4,UtranRelation=Rem-Inter-Iub-1526-1 (CM1)
cId=1201 UtranCell=cell1201-Iub-1526-1,UtranRelation=Rem-Intra-Iub-1525-4 (CM1)
cId=2202 UtranCell=cell2201-Iub-1525-1,UtranRelation=Intra-Softer-cell2202-Iub-1525-2 (CM1)
cId=2202 UtranCell=cell2202-Iub-1525-2,UtranRelation=Intra-Softer-cell2201-Iub-1525-1 (CM1)

6) No RemoteUtranCells with same cId as a local UtranCell or another RemoteUtranCell within each CM:
```

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

```
cId=2202 UtranCell=cell2202-Iub-1525-2 UtranCell=cell2201-Iub-1525-1 (CM1)
cId=2205 UtranCell=cell11106-Iub-1523-6 UtranCell=cell2205-Iub-1525-5 (CM1)
cId=1201 UtranCell=cell11201-Iub-1526-1 UtranCell=cell2204-Iub-1525-4 (CM1)
```

```
7) No unlocked disabled secondary IubLinks when redundancySwitchoverWaitTime=-1: NOT OK
IubLink=Iub-1523 (CM1)
IubLink=Iub-1525 (CM2)
```

Example printout from `iro` command:

The `iro` printout consists of 3 tables.

- The first two tables show the status of lubLinks and associated UtranCells, one line per lubLink unless it has more than 12 cells in which case the lubLink will take two lines. Redundant-Primary and Non-Redundant lubLinks are shown on the left, Redundant-Secondary are shown on the right. For description about how to interpret the different columns, refer to the help of the `str3` command.

| IUBLINK | RNC | MOD  | TN | R | ICDS | C01 | C02 | C03 | C04 | C05 | C06 | C07 | C08 | C09 | C10 | C11 | C12 | RNC | MOD  | TN | R | ICDS | C01 | C02 | C03 | C04 | C05 |
|---------|-----|------|----|---|------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|------|----|---|------|-----|-----|-----|-----|-----|
| Iub-1   | CM1 | 1062 | I  | P | 1111 | 1   | 1   | 1   |     |     |     |     |     |     |     |     |     | CM2 | 1162 | I  | S | 0000 | 0   | 0   | 0   |     |     |
| Iub-10  | CM1 | 1061 | I  | P | 1111 | 111 | 111 | 111 | 111 | 111 | 111 | 111 |     |     |     |     |     | CM2 | 1163 | I  | S | 0000 | 000 | 000 | 000 | 000 | 000 |
| Iub-44  | CM1 | 2221 | I  | N | 1111 | 111 | 111 | 111 | 111 | 111 | 111 | 111 | 111 | 111 |     |     |     |     |      |    |   |      |     |     |     |     |     |
| Iub-569 | CM2 | 3081 | I  | P | 0000 | 000 | 000 | 000 | 000 | 000 | 000 | 000 | 000 | 000 | 000 | 000 | 000 | CM1 | 3071 | I  | S | 1111 | 111 | 111 | 111 | 111 | 111 |

- The third table summarizes the total availability for all lubLinks and UtranCells in the RNC pool. In each column, the first number is the number of MOs up, and the second value is the total number of MOs, then the line "lubLinks" is the availability of lubLink MOs, "UtranCells" is for UtranCell MOs, "HS channels" is for Hsdsc MOs, and "EUL channels" is Eul MOs. The column "Total" indicates the total availability, with and without iub redundancy, and should always be equal to the sum of the next two columns "Non-Redundant" and "Redundant". The column "Redundant-Normal" indicates the total availability of redundant sites which are not switched, while "Redundant-Switched" gives the availability of sites that are switched. The sum of the values in the last two columns should always be equal to the values in the column "Redundant".

| Availability | Total            | Non-Redundant    | Redundant        | Redundant-Normal | Redundant-Switched |
|--------------|------------------|------------------|------------------|------------------|--------------------|
| IubLinks     | 818/818 (100%)   | 273/273 (100%)   | 545/545 (100%)   | 108/108 (100%)   | 437/437 (100%)     |
| Cells        | 6357/6357 (100%) | 2121/2121 (100%) | 4236/4236 (100%) | 840/840 (100%)   | 3396/3396 (100%)   |
| HS channels  | 6135/6135 (100%) | 2043/2043 (100%) | 4092/4092 (100%) | 807/807 (100%)   | 3285/3285 (100%)   |
| EUL channels | 5691/5691 (100%) | 1884/1884 (100%) | 3807/3807 (100%) | 747/747 (100%)   | 3060/3060 (100%)   |

#### 4.2.22 rinpc[c][m] </path/to/rinpm.json>

Live Node Migration to RNC in Pool. Only applicable for RNC <= 21.Q1.

##### Options:

- `c`: perform a precheck to make sure both nodes are in correct state prior to the migration.
- `m`: perform the live node migration.

##### Arguments:

- `rinpc`: no arguments are necessary if the other cluster member has been specified in the uservariable `cluster_members`. If the uservariable `cluster_members` is empty, then the IP address of the other cluster member can be specified in the second argument, eg: `rinpc . <ip_of_other_RNC>` (same syntax as `irc` command)
- `rinpm`: mandatory argument is the path of a .json file where all parameters shall be listed. Example of json file can be found under `moshell/commonjars/rinpm/rinpm.json`

#### 4.2.23 gr[acdfprsx] [<lubLink>] [<OtherRNC>]

Geo-Redundancy operations for RNC.

For more details regarding feature configuration for multiple RNCs, refer to RNC CPI document "Configure Geo-Redundancy". Note: in the CPI, the terms "set redundancy" and "delete redundancy" are referred in this help as "protect" and "remove protection".

##### Arguments:

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- **<IubLink>**: MO filter specifying the lub links which should be affected. Mandatory argument for all options except **c** and **r**. usage examples: 'lubLink=', 'lubLink=lub-123', 'lubLink=(lub-123|lub-456)'
- **<OtherRNC>**: the address of the other RNC, which can be an IP address or the full path to an MO dump (relative path is not supported).

Command argument **<OtherRNC>** must be an IP address or MO dump of the other RNC from the RNC pair.

If command is executed with argument **<OtherRNC>** of a wrong RNC, returned results are invalid and unexpected errors could be returned.

In non-interactive mode uses variables `$grr_external_cells_file`, `$grxcommandfile` and `$grr_variant`. See **r** option description for details.

#### Options:

- **a**: Minimize WCDMA cell relations reconfiguration during lub switchover (option **x**), so ANR feature can handle it. Can be used only together with option **x**. ANR feature must be active on the RNC.
- **c**: Consistency check of the Geo-Redundancy feature.  
Generates a printout listing all the checks and their result.  
**IubLink** argument is not supported.  
If redundant lub links are detected without corresponding primary lub links in the other RNC, they will be saved in the variable `$grc_orphan_iublinks` and can be removed with the command `grd $grc_orphan_iublinks`.  
If missing redundant lub links are detected for primary lub links configured in the other RNC, they will be saved in the variable `$grc_new_iublinks` and can be protected with the command `grp $grc_new_iublinks <OtherRNC>`.
- **d**: Generate a command file to delete protection for redundant lub links.  
Only lub links with `poolRedundancy` set to `SECOND_GEO_INACTIVE(5)` are affected. Use option **f** to also delete protection for lub links with `poolRedundancy` set to `SECOND_GEO_ACTIVE(4)`.  
A command file will be generated to delete the redundant lub links and all associated configuration.  
The command file shall be executed in the same RNC where the command was run and the file path can be accessed from the variable `$grdcommandfile`.
- **f**: Force deleting protection of active redundant lub links - `poolRedundancy` set to `SECOND_GEO_ACTIVE(4)`.  
Can be only used together with option **d**.
- **p**: Generate a command file to protect lub links.  
**OtherRNC** argument is mandatory.  
Only lub links with `poolRedundancy` set to `PRIMARY_GEO(3)` in the other RNC are considered by the command.  
Command file will be generated to create redundant lub links and all associated configuration.  
The command file shall be executed in the same RNC where the command was run and the file path can be accessed from the variable `$grpcommandfile`. Command execution with option **p** is aborted if used towards more than one primary RNCs.
- **r**: Generate the lub rollback command file for the current RNC.  
The **<IubLink>** argument is not supported.  
The **<OtherRNC>** argument is mandatory for variant 2 (see the description below).  
A command file will be generated to deactivate redundant lub links and reconfigure affected cell relations.  
The command file shall be executed in the same RNC where the command was run and the file path can be accessed from the variable `$grrcommandfile`.  
The command uses input file generated by `grx` command to restore external cell relations (stored by `grx` command in `$grr_external_cells_file` location).  
The command has two variants - if ANR is active on the RNC, only variant 2 is supported.  
Variant 1. Based only on specified input files generated on the same RNC by `grx` command. Generates undo command file for input files selected from the list or specified by the path. Variant 1 omits **IubLink** parameter.  
Variant 2. Based only on current RNC configuration in state after lub switchover action and input file generated by `grx` command. Generates a command file that updates all cell relations for the specified lub links. Variant 2 is only supported in state after lub switchover action execution.  
The variant and input files are chosen by the user in interactive mode. In non-interactive mode variant is selected by the variable `$grr_variant` (default 2) and input files are specified by the variables `$grxcommandfile` (variant 1 only) and `$grr_external_cells_file` (optional).
- **s**: Generate a command file to synchronize the configuration of redundant lub links.  
**OtherRNC** argument is mandatory.  
Only lub links with `poolRedundancy` set to `SECOND_GEO_INACTIVE(5)` will be considered by the command.  
A command file will be generated to update the configuration of redundant lub links with the one from other RNC, where those lub links have `poolRedundancy` set to `PRIMARY_GEO(3)`.  
The command file shall be executed in the same RNC where the command was run and the file path can be accessed from the variable `$grscommandfile`.  
If redundant lub links are detected without corresponding primary lub links in the other RNC, they will be saved in the variable `$grs_orphan_iublinks` and can be removed with the command `grd[f] $grs_orphan_iublinks`.  
If missing redundant lub links are detected for primary lub links configured in the other RNC, they will be saved in the

- Configuration check with other RNC (IP address 127.0.0.1):  
grc 127.0.0.1
- Configuration check with other RNC (MO dump path /home/user/OTHER\_RNC\_MO\_dump.zip):  
grc /home/user/OTHER\_RNC\_MO\_dump.zip
- Generate a command file to protect all lub links with poolRedundancy set to PRIMARY\_GEO in other RNC (IP address 127.0.0.1):  
grp IubLink= 127.0.0.1
- Generate a command file to protect selected lub links lub-1523 and lub-1524 with poolRedundancy set to PRIMARY\_GEO in other RNC (IP address 127.0.0.1):  
grp IubLink=(Iub-1523|Iub-1524) 127.0.0.1
- Generate a command file to protect selected lub links stored in variable \$grs\_new\_iublinks with poolRedundancy set to PRIMARY\_GEO in other RNC (IP address 127.0.0.1):  
grp \$grs\_new\_iublinks 127.0.0.1
- Generate a command file to perform lub switchover for all lub links with poolRedundancy set to SECOND\_GEO\_INACTIVE:  
grx IubLink= 127.0.0.1
- Generate a command file to perform lub switchover for all lub links with poolRedundancy set to SECOND\_GEO\_INACTIVE, minimize WCDMA cell relations reconfiguration , so ANR feature can handle it  
grxa IubLink= 127.0.0.1
- Generate a command file to perform lub rollback for all redundant lub links, lub switchover not performed - variant 1 of gr command:  
grr  
In interactive mode choose proper command files generated by the grx command.
- Generate a command file to perform lub rollback for all redundant lub links, lub switchover already performed - variant 2 of gr command (IP address of other RNC 127.0.0.1):  
grr 127.0.0.1  
In interactive mode choose proper command file generated by the grx command.
- Generate a command file to perform lub rollback in non-interactive mode for all redundant lub links, lub switchover not performed - variant 1 of gr command:  
  
\$grr\_variant = 1  
\$grxcommandfile = <path to the command file generated by grx command>  
\$grr\_external\_cells\_file = <path to the additional command file generated by grx command,  
optionally used to restore external cell relations>  
  
grr
- Generate a command file to perform lub rollback in non-interactive mode for all redundant lub links, lub switchover already performed - variant 2 of gr command (IP address of other RNC 127.0.0.1):  
  
\$grr\_variant = 2  
\$grr\_external\_cells\_file = <path to the additional command file generated by grx command,  
optionally used to restore external cell relations>



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

```
grr 127.0.0.1
```

- Generate a command file to remove protection for all redundant lub links (IP address of other RNC 127.0.0.1):  
`grd IubLink= 127.0.0.1`
- Generate a command file to remove protection for all redundant lub links, including active redundant lub links (IP address of other RNC 127.0.0.1):  
`grdf IubLink= 127.0.0.1`
- Generate a command file to synchronize configuration of all redundant lub links (IP address of other RNC 127.0.0.1):  
`grs IubLink= 127.0.0.1`

#### 4.2.24 tg[r][c][d]

Print Resource Object information for all MOs in LmCell (RNC only).

Command Syntax:

```
tg[c][r] [<mofilter>|<mogroup>|<fro>][:<actorChildren>] [<rtr-cmd>] [|<unix-cmds>]
tg d [<mofilter>|<mogroup>|<fro>][:<actorChildren>] [<cell-parameter(s)>]
```

Purpose:

- To print the relation MO $\longleftrightarrow$ FRO $\longleftrightarrow$ ACTOR $\longleftrightarrow$ CCDEVICE for **IubLink** and **UtranCell** MOs.
- To send RRT commands to Cell/lub actors or their children in the actor tree.

**Arguments:** By specifying the first argument, it is possible to filter the Cell/lubs matching a specific FroId or MOId.

By specifying a second argument consisting of an RRT command or a list of cell parameters, it is possible to run an RRT-command or display certain cell parameters on all the actors that are matched by the first argument.

The list of available RRT commands can be seen by typing:

- `lhsh 001400 ? rrt`

The list of available cell parameters can be seen by typing:

- `lhsh 001400 rrt-CXC132xxxx_Ryyyy 1/1/1/1/2/1.1 info` (for cell parameters)
- `lhsh 001400 rrt-CXC132xxxx_Ryyyy 1/1/1/1/7/1.1/4/1 info` (for nbap common parameters)

The printout can be piped into unix commands, like `grep` and `sort`.

**Options:**

- **r** : to refresh the MO/FRO/ACTOR data. Otherwise this data is reused within the moshell session and from session to session, using a cache on the workstation disk. A `tg refresh` (`tgr`) needs to be done after a node upgrade or if some **IubLinks** or **UtranCells** have been added/removed/remoduled. Otherwise you may get error messages such as `unknown command rrt-CXC1328831_Rxxx` (eg, the rrt LM has changed after an upgrade).
- **c** : print the following extra extra fields:
  - Common Channel Device (**ccDevice**): shows which SPM is used to handle the common channels of this cell
  - ccDevice Module (**ccMod**): shows if a ccDevice is running on an SPM that doesn't belong to the same module as the Cell/lub. This can be fixed by locking/unlocking the cell. It is always best to make sure that all cells are using a ccDevice located in their own module so that the load will be spread equitably on all ccDevices.

Note that ccDevice data is not kept in the cache, only MO/fro/Actor relation is kept in the cache.

- **d** : to print certain cell-parameters for all cells matching the first argument.

**Examples:**

1. `tg` - to view the fro/Actor data for each **UtranCell** and **IubLink**
2. `tg cell=302` - to view the fro/actor data for all UtranCell MOs matching regex `cell=302`
3. `tg cellmod1` - to view the fro/actor data for all MOs belonging to the MO group `cellmod1` (use **ma** command to make a MO group)
4. `tg 67` - to view the mo/actor data for the MOs that have `fro=67`
5. `tgr` - to refresh the fro/actor data
6. `tg c` - to view all cells/iubs and their respective fro/actor and ccDevice (Note: ccDevice data is not cached so if it is not necessary to do `tgr` to refresh ccDevice data)
7. `tg iublink=3.*1$ info` - to run the `rrt info` command on all actors whose MO matches `iublink=3.*1\`



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

8. `tgc | grep 0019` to see all cells that are on ccdevice of board 001900
9. `tg cell getattr cellData` - to send the rrt command `getattr cellData` on all actors whose MO matches `cell`
10. `tg iubmod3 state` - to run the rrt command `state` on all MOs belonging to the MO group `iubmod3` (use `ma` command to make a MO group)
11. `tg cell ulinterference celldata:errorstatus cellRoState` - to view the cell parameters `ulinterference, celldata:errorstatus, etc.` on all cells (P3/P4)
12. `tg cell:/8/3 cellLoadMonitor:totAseDl`  
`cellLoadMonitor:totAseUl cellLoadMonitor:currDlCode`  
 - to view the admission tree usage on all cells (P5 and after)
13. `tg cell ulinterference celldata:errorstatus`  
`celldata:spconfigflag cellRoState`  
 - to view the cell parameters `ulinterference, celldata:errorstatus, etc.` on all cells.
14. `tg cell cellLoadMonitor:totAseDl`  
`cellLoadMonitor:totAseUl cellLoadMonitor:currDlCode`  
 - to view the admission tree usage on all cells.
15. `tg cell ulinterference celldata:spblocked`  
`celldata:spconfigflag cellRoState celldeleted`  
`cellTraceActivated celldata:errorstatus`
16. `tg iub:/4/1 activeStatus standbyStatus currentCause`  
`currentAvailabilityStatus rncRbsLinkLossOfRedundancy`  
`rncRbsLinkDown rncRbsDeactivated`  
 - to view those attributes on all the NbpCommon actors

## Output examples:

- `tgc`

| MOD | MFRO | ModMP  | UtranCellId | IubLinkId | CfRO | IfRO | CellActor     | IubActor        | CcDev   |
|-----|------|--------|-------------|-----------|------|------|---------------|-----------------|---------|
| 1   | 0    | 001400 | 90121       | 9012      | 5    | 1    | 1/1/1/1/2/1.3 | 1/1/1/1/7/1.1/4 | 0019SP2 |
| 1   | 0    | 001400 | 90122       | 9012      | 4    | 1    | 1/1/1/1/2/1.2 | 1/1/1/1/7/1.1/4 | 0020SP0 |
| 1   | 0    | 001400 | 90123       | 9012      | 3    | 1    | 1/1/1/1/2/1.1 | 1/1/1/1/7/1.1/4 | 0020SP0 |

- `tg cell=9012 ulinterference celldata:spblocked celldata:spconfigflag cellRoState`  
`celldeleted cellTraceActivated celldata:errorstatus`

| MO              | ulinterference | spblocked | spconfigflag | cellrostate | celldeleted | errorstat                | celltraceactivated |
|-----------------|----------------|-----------|--------------|-------------|-------------|--------------------------|--------------------|
| UtranCell=90121 | -106           | 0         | 0            | 2           | 0           | 0                        | 0                  |
| UtranCell=90122 | -100           | 0         | 0            | 1           | 0           | 16002:CellNoDrhResources | 0                  |
| UtranCell=90123 | -100           | 0         | 0            | 1           | 0           | 16002:CellNoDrhResources | 0                  |

## Description:

- `spblocked=1` means that the CCdevice has crashed and Rnh got the signal `clearResourceReq`.
- `spconfigflag` says if the cell has allocated SP resources or not. Should be 0 if `spblocked=1`.
- `cellrostate` is defined in the header file `rliBncConst.h`: `roStateNOK=1`, `roStateOK=2`, `roStateDepNOK=3`
- `celldeleted` means that the cell has been deleted by the operator, i.e. FRO has sent a `deleteInd`.
- `celltraceactivated` says if the feature "Selective Cell Tracing" is active or not. See CR WRNac20241
- `errorstatus` is different to 0 if there is a fault in the cell unlock procedure. Range 16000-16014 is specified in the file `rliBEventNr.h`. `Cellrostate` shall be equal to 1 if the `errorstatus` is different to 0.
- `tg iub:/4/1 activeStatus standbyStatus currentCause`  
`currentAvailabilityStatus rncRbsLinkLossOfRedundancy`  
`rncRbsLinkDown rncRbsDeactivated`

to view those attributes on all the NbpCommon actors

| MO           | activestatus | standbystatus | currentcause | currentavailabilitystatus | rncrbslinkdown | rncrbsdeactivated |
|--------------|--------------|---------------|--------------|---------------------------|----------------|-------------------|
| IubLink=1001 | 1            | 1             | 2            | 2                         | 0              | 0                 |
| IubLink=1002 | 1            | 1             | 2            | 2                         | 0              | 0                 |

## Description:

- `activeStatus` and `standbyStatus` are boolean (0 or 1). It's the FRO's way to say if it's ok or not to attach to USAAL. `UserPlaneCepId` for active and standby shall be different to -1 if active/standby status equals 1.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- `currentCause` is sent by FRO in the signals `opStateChdInd` and `setAttribInd` and is defined by the dataclass `CpxUsaalEfi_OpStateChangeCauseD`. Valid values are:
  - `CELLO_USAALEFI_SERVER_RESTARTED == 1`
  - `CELLO_USAALEFI_OTHER == 2`
  - `CELLO_USAALEFI_SERVER_MOVED == 3` (introduced in the feature Moveable CEP in P5MD)
- `currentAvailabilityStatus` comes together with `opStateChdInd` and is about "regular" state propagation, i.e. if bit 5 is set to NBAP RO Dependency Failed.
- `rnRbsLinkLossOfRedundancy` & `rnRbsLinkDown` are internal flags that say if the events `linkDown` and `linkLossOfRedundancy` are active or not. If `rnRbsLinkDown=1` then `currentAvailabilityStatus` will be "Dependency Failed" and `linkUsedForTraffic` will be equal to -1.
- `linkUsedForTraffic` says which `iublink` we are using at the moment. Active == 0, Standby == 1. If `linkUsedForTraffic` equals 1 (standby) then `rnRbsLinkLossOfRedundancy` is also equal to 1.
- `rnRbsDeactivated` says if the event `linkDeactivated` is active or not. All 3 events are defined in header file `rlibEventNr.h`.
- `tgdcell:/8/3 cellLoadMonitor:totAseDl cellLoadMonitor:totAseUl cellLoadMonitor:currDlCode`  
to view those attributes on all the `NbapCommon` actors

| MO              | totasedl | totaseul | currdlcode |
|-----------------|----------|----------|------------|
| UtranCell=30101 | 320      | 160      | 3750       |
| UtranCell=30102 | 0        | 0        | 3593       |
| UtranCell=30103 | 0        | 0        | 3593       |
| UtranCell=30104 | 1940     | 969      | 4218       |
| UtranCell=30105 | 2064     | 1568     | 4375       |
| UtranCell=30106 | 991      | 911      | 3984       |

## Description:

- `totAseDl` is the total amount of DL ASE that is currently in use in the cell. The value is scaled by a factor 100 to get a resolution of 0.01 ASE, i.e. `totalAseDl = 1280` means 12.80 ASE DL load in the cell.
- `totAseUl` is the same as `totAseDl` but for UL ASE. DL and UL ASE values are controlled by UEH (by signals `admissionRequest`, `admissionDecreaseLoadInd`, `admissionAseUlIncreaseInd` and `admissionAseUlDecreaseInd`).
- `currDlCode` reflects the last reported value of DL code tree load utilization in the cell (reported from the `RnhCode` block by signal `codeTreeLoadInd`). The value is scaled by factor 100 to get a resolution of 0.01

#### 4.2.25 ueregprint/uer[d][t][i][s][p][v] [-m <mod>|-i <imsi>|-u <ueref>|-n <maxUes>|-c <utrancell>|-r <iublink>] [<attribute-filter>[=<value>]]all]

Print UE registry or UE context data (serving or drifting) for all active calls (RNC only).

The command `ueregprint` is a moshell alias that runs the `coli` command "ueregprint" on all RNC RANAP boards. It allows all the same arguments as the regular `ueregprint` command but does not require to specify the board on which it should run. This is especially useful for EvoC node where the UE registry is running in all the blades.

Example:

- `ueregprint sum`
- `ueregprint all`

The command `uer` is a moshell command that prints the UE contexts in each module MP in order to show the details of call.

The following COLI commands are used: `ueregprint` (on C2/Ranap MP), `drh_trbr rab` (on PDR module MPs), and `printUeCtxt` (on module MP). No RRT commands are used.

## Options:

- `s`: for showing the traffic summary tables at the end of the printout.  
When no filtering options are used (e.g. `uers` command is run on its own) then only the summary tables are shown, not the individual calls.  
When filtering options are used but the `s` switch is not given (e.g. `uer [-option <filter>]`), then the summary tables are not shown, only the individual calls.
- `d`: for printing drift UEs.
- `i`: for printing UEs that have a IMSI only.
- `t`: for printing UEs that have a TMSI or IMEI only.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- `p`: for skipping the PDR device check, faster.
- `v`: for printing UE context attributes vertically, only applies when used with the `attribute-filter`

#### Filtering Options:

- `-m <mod>`: to show calls belonging to certain module(s) only. Eg: `-m 1,8` ==> calls in modules 1 and 8 are printed.
- `-i <imsi>`: to show calls whose IMSI match a specific filter only. Eg: `-i 3014235`.
- `-u <ueref>`: to show the calls related to a specific UE ref. Eg: `-u 4728`.
- `-n <maxUes>`: to show a maximum number of calls only. Eg: `-n 50` ==> a maximum of 50 calls are printed.
- `-c <utrancell>`: to show the calls that have a radio link or common channel in certain utrancells.
- `-r <iublink>` : to show the calls that have a radio link or common channel in certain iublinks.

#### Note regarding the options `-c/-r`:

- on RNC `>= P6`, a regular expression filter can be used, e.g. `uer -c 30.*a`
- on RNC `=< P5`, the exact utrancell or iublink must be given, e.g. `uer -r iub_10`

#### The attribute-filter can be:

- empty. Some default tables will be printed, see below.
- "all". All UeContext data for the UEs matching the first argument will be printed
- a regular expression matching one or more UeContext attributes. Only the attributes matching the string will be printed.
- an attribute name followed by "=" and a value (e.g. `scdpConnId=6`). Only the UEs that have an attribute matching that value will be printed.

#### If the attribute-filter is empty, then three tables are printed:

- The first table contains for each UeContext:
  - MOD: the module handling the call
  - IMSI: the IMSI of the UE
  - CTEXT: the UeContext (UeRef) id of the UE
  - SRNC: the Serving RNC. Read from the variable `sRncId`.
  - CommCh: the rbsid and cell id (cid) of the serving cell providing the Common Channels for this UE. Read from the variable `commonResData.cId`
  - RL1-4: the rbsid and cell id (cid) of the serving cells providing the radio links for this UE (up to 4 radio links per UE). Read from the variables `radioLink[0-3].cId`
  - DCdev: the DC device handling the call. Read from the variable `drhRcSpId`.
  - PDRdev: the PDR device and PacketDataRouter fold handling the call. Read from the command `lh mod drh_trbr rab`.
  - CoreNetId: the Type of Core Network connecting the call: CS or PS. Read from the variables `isCNConnected.*Circuit` and `isCNConnected.*Packet`. Also shows the Id of the Core Network used for the call (`mcc/mnc/cnId`). Read from the variables `globalCnIdPs` and `globalCnIdCs`.
  - AGE: the duration of the call. Read from `lh ranapmp ueregprint all`
  - UERC: the UeRc used by the call. Read from the variable `connType`.
- the second table shows the current number of Ue Contexts associated to each UeRc type in each module.
- the third table shows the same as the second table but for the whole node.

#### Examples (with empty attribute-filter):

- `uer - print UeContext data for all UEs in the node`
- `uer -n 25 - print UeContext data for 25 UEs only (randomly selected across the node and proportionately spread across all the modules)`
- `uer -i 0001 - print UeContext data for all UEs whose IMSI match 0001.`
- `uer -m 8 - print UeContext data for all UEs in module 8.`
- `uer -m 8,9,10 - print UeContext data for all UEs in modules 8, 9 and 10.`
- `uer -r iub-17 - print UeContext data for all UEs that have a radio link or common channel in a cell of lubLink "lub-17"`

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- `uer -c iub-17-1` - print UeContext data for all UEs that have a radio link or common channel in the UtranCell "lub-17-1"
- `uer -r iub.*1$` - print UeContext data for all UEs that have a radio link or common channel in the lubLinks whose name matches `iub.*1$` (works only on RNC P6 and above)

See output example below:

```
=====
MOD IMSI/TMSI CTXT CommCh RL1 RL2 RL3 DCdev PDRdev CoreNetId AGE UERC + ESTAB_CAUSE
=====
1 301020430130001 1826 746:2907 20:1174 0923sp3 P 24099 5 Interact. PS (64/64) (2:origInteractive)
1 301001920070001 287 68:1178 0022sp2 0019sp0:1 P 24099 00:00:52 5 Interact. PS (64/64) (2:origInteractive)
1 301000310030000 309 298:1875 0021sp3 0019sp0:0 CP 24099 00:01:28 9 Conv. CS speech 12.2 + Interact. PS (0/0) (2:origInteractive)
1 301010330100000 5778 680:2951 0923sp3 0019sp0:0 P 24099 00:01:59 4 Interact. PS (RACH/FACH) (2:origInteractive)
1 301001630000000 5565 582:2848 71:1205 0023sp2 C 24099 00:00:14 2 Conv. CS speech 12.2 (0:origConversational)
...<cut>...

=====
UeRc M1 M8 M13 userLabel
=====
1 14 13 4 Standalone RRC on DCH
2 75 55 55 Speech
3 18 30 22 64kbps CS data, fixed rate
4 13 9 17 Packet RACH/FACH
5 5 1 2 PACKET 64/64
7 1 0 0 Packet 64/384
9 0 0 1 Speech + Packet 0kbps
14 0 0 1 CS data 64kbps + Packet 8/8
16 1 0 0 PS Interactive 384/HS - HS-DSCH
18 1 0 0 Packet 128/128
=====
Tot: 128 108 102

=====
Cause M1 M8 M13 EstablishmentCause
=====
0 65 46 57 origConversational
2 22 13 22 origInteractive
5 30 40 19 termConversational
12 11 9 4 registration
=====
Tot: 128 108 102

=====
UeRc Total % userLabel
=====
1 31 9.2 Standalone RRC on DCH
2 185 54.7 Speech
3 70 20.7 64kbps CS data, fixed rate
4 39 11.5 Packet RACH/FACH
5 8 2.4 PACKET 64/64
7 1 0.3 Packet 64/384
9 1 0.3 Speech + Packet 0kbps
14 1 0.3 CS data 64kbps + Packet 8/8
16 1 0.3 PS Interactive 384/HS - HS-DSCH
18 1 0.3 Packet 128/128
=====
Tot: 338 100

=====
Cause Total % EstablishmentCause
=====
0 168 49.7 origConversational
2 57 16.9 origInteractive
5 89 26.3 termConversational
12 24 7.1 registration
=====
Tot: 338 100
```

Examples (with attribute-filter not empty):

- `uer -i 301001800040001 all` - print all UeContext data for the UE with IMSI 301001800040001

```
=====
MOD IMSI ATTRIBUTES
=====
8 301001800040001 $ UehUexCtxtD[1022]=0x4FE0D058
8 301001800040001 [1022].isActive() = 1
8 301001800040001 [1022].isCNConnected(uehCNidCircuit) = 0
8 301001800040001 [1022].isCNConnected(uehCNidPacket) = 1
8 301001800040001 [1022].sRncId = 301
8 301001800040001 [1022].softHoDone = 1
8 301001800040001 [1022].isPmRecordingActive = 0
8 301001800040001 [1022].recordingProt = 1
8 301001800040001 [1022].dIPcMethod = 3
8 301001800040001 [1022].dIPRefPwrVal = -165
8 301001800040001 [1022].supportOfGsm = 1
8 301001800040001 [1022].tmpRanapConnId = -1
8 301001800040001 [1022].recordingMeas = 0
8 301001800040001 [1022].measBERrequested = 0
8 301001800040001 [1022].measBLERrequested = 0
etc....
```

- `uer . aal2.*cepid$|softho|\rcindex$` - for all UEs, print UeContext attributes that match the regexp "aal2.\*cepid\$|softho|rcindex\$"

```
=====
MOD IMSI ATTRIBUTES
=====
1 301001800060003 softHoDone=1 rcIndex=4
1 301001701000000 softHoDone=0 rcIndex=2 aal2Arr[0].cepid=477 aal2Arr[1].cepid=494
1 301001810040000 softHoDone=1 rcIndex=4
1 301001700000001 softHoDone=1 rcIndex=2 aal2Arr[0].cepid=76 aal2Arr[1].cepid=77 aal2Arr[2].cepid=141 aal2Arr[3].cepid=142
1 301001720000003 softHoDone=1 rcIndex=2 aal2Arr[0].cepid=507 aal2Arr[1].cepid=508 aal2Arr[2].cepid=332 aal2Arr[3].cepid=333
1 301001720110001 softHoDone=1 rcIndex=2 aal2Arr[0].cepid=424 aal2Arr[1].cepid=425
1 301001810000003 softHoDone=1 rcIndex=2 aal2Arr[0].cepid=476 aal2Arr[1].cepid=482 aal2Arr[2].cepid=166 aal2Arr[3].cepid=167
1 301001711000002 softHoDone=1 rcIndex=2 aal2Arr[0].cepid=52 aal2Arr[1].cepid=57 aal2Arr[2].cepid=170 aal2Arr[3].cepid=171
```

- `uer -i 001 sccpConnId=6` - for all UEs whose IMSI match "001", print the UeContact attributes that match `sccpConnId=6`

Note: to abort the printout, do Ctrl-z, then: `touch <stopfile> ; fg`

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

The path to the *stopfile* can be found in the window title.

#### 4.2.26 ced[h][p][s][g][r] [-m <module(s)>|-c <utrancell>|-r <iublink>|-s <rsite>] [ | <unix-cmds>]

Print consumption of cell resources and rbs hw, cell supported features, cell coordinates (RNC only).

##### Options:

- **ced** : consumption of air interface resources for each UtranCell. Read from the coli command "celldata" on module MPs.
- **cedh** : CE consumption (Channel Element) and number of RadioLinks/UEs for each lubLink. Read from the coli command "hwm" on module MPs.
- **cedhp**: same as above but the CE usage is expressed in percentage.
- **cedg** : state and geographical coordinates of each UtranCell. Read from MO data on UtranCell and children.
- **ceds** : state and supported features of each UtranCell. Read from MO data on UtranCell and children.

The **r** option can be used together with any of the above, in order to clear the moshell cache and fetch latest values from the node.

##### Filters:

- **-m <module(s)>**: only fetch/parse the data for certain RncModules, e.g. **-m 8** or **-m 1,2,3**
- **-c <utrancell>**: only fetch/parse the data for specific UtranCells, e.g. **-c cell1304A** (not case sensitive)
- **-r <iublink>** : only fetch/parse the data for specific lubLinks, eg. **-r iub\_304** (not case sensitive)
- **-s <rsite>** : only fetch/parse the data for specific RSites, eg. **-s iub-304-305-306** (not case sensitive)

The output can be filtered by piping through some unix commands, eg. **grep** or **sort**.

##### Examples:

- **ced | grep 0019sp0** : print all cells configured on CC device 001900/sp0
- **ced | sort -k 5** : print cell data sorted on the fifth field
- **cedh -m 8,9,10** : print CE usage for all sites in modules 8, 9, 10.
- **ced -r iub\_304** : print cell data for all cells belonging to IubLink=Iub\_304
- **cedh -c cell1304a** : print CE usage for the site connected to UtranCell=cell1304A
- **cedg -c cell140** : print state and geographical coordinates for all cells matching "cell140"
- **ceds -r iub\_56** : show state and supported features for all cells connected to lubs matching "iub\_56"

##### Printout format:

```
> ced

MOD CELL cid fro ro PwrDI/Adm dlCode ulInt sf8d sf8u sf16d sf16u sf32d sf4u dlASE ulASE CPMent HSent EULs EULns Eul2 Spch Fdcph Crn Hrn Ern CC_SP

1 Iub-1-1 1031 0 0 7.0% 75% 6.2% -111.8 0/8 0/8 0/16 0/16 0/32 0/4 0/500 0/500 0/15 0/10 1/32 0/100 0/4 0 0/0 0 0 0 1:0019sp1
1 Iub-1-2 1032 1 2 7.0% 75% 6.2% -111.8 0/8 0/8 0/16 0/16 0/32 0/4 0/500 0/500 0/15 0/10 4/32 0/100 0/4 0 0/0 0 0 0 1:0021sp1
1 Iub-1-3 1033 2 3 7.0% 75% 22.9% -111.8 1/8 0/8 0/16 1/16 0/32 0/4 39/500 8/500 0/15 0/10 3/32 0/100 0/4 0 0/0 0 0 0 1:0019sp1
1 Iub-2-1 1037 6 1 7.0% 75% 24.6% -111.8 1/8 0/8 0/16 2/16 1/32 0/4 53/500 20/500 0/15 0/10 0/32 0/100 0/4 0 0/0 0 0 0 1:0019sp1
1 Iub-2-2 1038 7 4 7.0% 75% 10.8% -111.8 0/8 0/8 0/16 2/16 1/32 0/4 12/500 19/500 0/15 1/10 0/32 0/100 0/4 0 0/0 0 0 0 8:0023sp1(!)
```

The fields in the "ced" printout correspond to the following variables in the "celldata" printout on Module MP:

- **MOD**: RNC Module
- **cid**: cld
- **fro**: cellFrold (facade resource object, a unique id in the node)
- **ro**: cell RO (resource object, a unique id in the module. Same as capsule index.)
- **PwrDI/PwrAdm**: Filtered DL Power / pwrAdm
- **dlCode**: DL Code Allocation Level
- **ulInt**: UL Interference
- **sf8dl**: SF8 RL DL Count / sf8Adm
- **sf8ul**: SF8 RL UL Count / sf8AdmUI
- **sf16dl**: SF16 RL DL Count / sf16Adm

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- sf16ul: SF16 RL UL Count / sf16AdmUI
- sf32dl: SF32 RL DL Count / sf32Adm
- sf4ul: SF4 RL UL Count / sf4AdmUI
- dlASE: Total ASE DL / aseDIAdm
- ulASE: Total ASE UL / aseUIAdm
- HScnt: HSDPA UE Count / hsdpaUsersAdm
- EULs: EUL UE Count serving / eulServingCellUsersAdm
- EULns: EUL UE Count non-serving / eulNonServingCellUsersAdm
- EUL2ms: EUL2ms UE Count serving / eulServingCellUsersAdmTti2
- Spch: Speech Only UE Count
- SpchG: Speech General UE Count
- CPMcnt: CPM RL Count / compModeAdm
- Crn: Crnti allocation count
- Hrn: Hrnti allocation count
- Ern: Ernti allocation count
- Fdcph: This columns is read from the command "admtimeposdata". The first number corresponds to the number of opened codes and the second number is the number of time positions.
- CC\_SP: The RncModule and SPM of the CC device handling the Cell. If the RncModule controlling the CC device is different from the one controlling the cell, an exclamation mark (!) is printed. This used to be an issue in older RNC SW (PLM info 510), but is now fixed with TR HN89801, refer to PLM info 749.

&gt; cedh

| MOD | GRP | IUBLINK  | fro | ro | nCell | usedCEdl | usedCEul | gHoCEdl | gHoCEul | OtherCEdl | OtherCEul | dIRL | uIRL | nrUE | leakingCellFroIds |
|-----|-----|----------|-----|----|-------|----------|----------|---------|---------|-----------|-----------|------|------|------|-------------------|
| 1   | 0   | b0157MDN | 0   | 0  | 3     | 34/64    | 98/256   | 30/64   | 158/256 | 29/63     | 155/253   | 46   | 46   | 46   |                   |
| 1   | 4   | b0423MDN | 5   | 2  | 2     | 2/64     | 6/128    | 62/64   | 122/128 | 61/63     | 120/126   | 3    | 3    | 3    |                   |
| 1   | 8   | b0407MDN | 8   | 4  | 1     | 8/64     | 42/256   | 56/64   | 214/256 | 55/63     | 211/253   | 15   | 15   | 15   |                   |
| 1   | 10  | b0106MDN | 9   | 5  | 3     | 40/96    | 125/256  | 56/96   | 131/256 | 55/95     | 128/253   | 48   | 48   | 49   | 147               |

&gt; cedhp

| MOD | GRP | IUBLINK  | fro | ro | nCell | usedCEdl | usedCEul | gHoCEdl | gHoCEul | OtherCEdl | OtherCEul | dIRL | uIRL | nrUE | leakingCellFroIds |
|-----|-----|----------|-----|----|-------|----------|----------|---------|---------|-----------|-----------|------|------|------|-------------------|
| 1   | 0   | b0157MDN | 0   | 0  | 3     | 53.1%    | 38.3%    | 46.9%   | 61.7%   | 46.0%     | 61.3%     | 46   | 46   | 46   |                   |
| 1   | 4   | b0423MDN | 5   | 2  | 2     | 3.1%     | 4.7%     | 96.9%   | 95.3%   | 96.8%     | 95.2%     | 3    | 3    | 3    |                   |
| 1   | 8   | b0407MDN | 8   | 4  | 1     | 12.5%    | 16.4%    | 87.5%   | 83.6%   | 87.3%     | 83.4%     | 15   | 15   | 15   |                   |
| 1   | 10  | b0106MDN | 9   | 5  | 3     | 41.7%    | 48.8%    | 58.3%   | 51.2%   | 57.9%     | 50.6%     | 48   | 48   | 49   | 147               |

The fields in the "cedh/cedhp" printout correspond to the following variables in the "hwm print grp" printout on Module MP:

- MOD: RNC Module
- GRP: Cell Group (one to four per lubLink)
- IUBLINK: the MO id of the lubLink
- fro: the frold of the lubLink (facade resource object id, a unique id in the node)
- ro: the RO Id of the lubLink (resource object id, unique in the module. Same as capsule index).
- nCell: the number of UtranCells in the Cell Group
- usedCEdl/usedCEul: Consumed Credit / Capacity Credit . The number of used CE out of the total amount of available CE. The total amount of available CE is calculated in each RBS, based on the HW capability and the licensed capacity.
- gHoCEdl/gHoCEul: Guaranteed, HO (Channel Elements availability for Guaranteed, Handover traffic)
- OthrCEdl/OthrCEul: Other (Channel Elements availability for Guaranteed, Other traffic)
- dIRL, uIRL: number of Radio Links used in the RBS. The two values (downlink and uplink) should always be equal.
- nrUE: number of UEs in the RBS. This should be equal to the number of Radio Links.
- leakingCellFroIds: the frold of Cells where dIRL, uIRL, nrUE are not equal. This indicates that some resource has not been released properly in the cell. To release the resources in a leaking Cell, the corresponding lubLink MO must be locked and unlocked.
- leakingCellFroIds: the frold of Cells where the following condition is not met:
  - until W10: dIRL=uIRL=nrUE
  - from W11: nrUE=nrDIRL and and nrUIRL >= nrDIRL and nrDIRL >= nrDchUIRL and nrUIRL not more than double

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

## nrDIRL

This indicates that some resource has not been released properly in the cell. To release the resources in a leaking Cell, the corresponding lubLink MO must be locked and unlocked.

&gt; cedg

| Mod | UtranCell | CFRPHEMU | Antenna and Cell Coordinates, feed into <a href="http://maps.google.com/maps?q=">http://maps.google.com/maps?q=</a> |                    |                    |                    |                    |                    |                    |                    |                    |                    |                    |                    |
|-----|-----------|----------|---------------------------------------------------------------------------------------------------------------------|--------------------|--------------------|--------------------|--------------------|--------------------|--------------------|--------------------|--------------------|--------------------|--------------------|--------------------|
| 21  | CTU20847  | 111111-- | 41.2383,-73.1937                                                                                                    | 41.2383,-73.193665 | 41.2424,-73.140621 | 41.2157,-73.149569 | 41.1996,-73.179159 | 41.2016,-73.215508 | 41.2208,-73.241665 | 41.2482,-73.245378 | 41.2710,-73.224885 | 41.2710,-73.224885 | 41.2710,-73.224885 | 41.2710,-73.224885 |
| 21  | CTU20848  | 111111-- | 41.2383,-73.1937                                                                                                    | 41.2383,-73.193665 | 41.2016,-73.215508 | 41.2208,-73.241665 | 41.2482,-73.245378 | 41.2710,-73.224885 | 41.2710,-73.224885 | 41.2710,-73.224885 | 41.2710,-73.224885 | 41.2710,-73.224885 | 41.2710,-73.224885 | 41.2710,-73.224885 |
| 21  | CTU20849  | 111111-- | 41.2383,-73.1937                                                                                                    | 41.2383,-73.193665 | 41.2710,-73.224885 | 41.2785,-73.189759 | 41.2672,-73.156478 | 41.2424,-73.140621 | 41.2424,-73.140621 | 41.2424,-73.140621 | 41.2424,-73.140621 | 41.2424,-73.140621 | 41.2424,-73.140621 | 41.2424,-73.140621 |
| 21  | CTV20841  | 111111-- | 41.2383,-73.1937                                                                                                    | 41.2383,-73.193665 | 41.2424,-73.140621 | 41.2157,-73.149569 | 41.1996,-73.179159 | 41.2016,-73.215508 | 41.2208,-73.241665 | 41.2482,-73.245378 | 41.2710,-73.224885 | 41.2710,-73.224885 | 41.2710,-73.224885 | 41.2710,-73.224885 |

The fields in "cedg" printout correspond to:

- MOD: RNC Module
- CFRPHEMU: status of UtranCell, Fach, Rach, Pch, Hsdsc, Eul, MbmsCch, EulFach (L=locked, S=ShuttingDown, T=tpsPowerLocked, U=tpsPowerShuttingDown, 1=unlocked&enabled, 0=unlocked&disabled)
- first coordinates: value of attribute UtranCell::antennaPosition
- all following coordinates: value of attribute UtranCell::utranCellPosition

The coordinates are expressed in degree of latitude and longitude and can be fed in google maps to see the location of the cell, eg: <http://maps.google.com/maps?q=41.2383,-73.1937>

&gt; ceds

| Mod  | UtranCell  | CFRPHEMU | ABCDEFGHIJKLMNQRST    | cpc | dBMC | edchT2 | enhDrx | enhL2 | eulDch | eulTd | fdpch | hsAqm | hsFach | impL2 | lBHo | mC | mCMimo | q64 | q64Mimo | eulMC | hsThp | hs3MC | db3MC |
|------|------------|----------|-----------------------|-----|------|--------|--------|-------|--------|-------|-------|-------|--------|-------|------|----|--------|-----|---------|-------|-------|-------|-------|
| 1111 | cell117711 | 111111-L | 001000000001100000100 | 0   | 0    | 1      | 0      | 0     | 0      | 0     | 0     | 0     | 0      | 1     | 1    | 0  | 0      | 0   | 0       | 0     | 1     | 0     | 0     |
| 1111 | cell117712 | 111111-- | 001000000001100010100 | 0   | 0    | 1      | 0      | 0     | 0      | 0     | 0     | 0     | 0      | 1     | 1    | 0  | 0      | 0   | 0       | 1     | 0     | 1     | 0     |
| 1111 | cell117713 | 111111-- | 001000000001100010100 | 0   | 0    | 1      | 0      | 0     | 0      | 0     | 0     | 0     | 0      | 1     | 1    | 0  | 0      | 0   | 0       | 1     | 0     | 1     | 0     |
| 1111 | cell117714 | T00000-- | 001000000001100000100 | 0   | 0    | 1      | 0      | 0     | 0      | 0     | 0     | 0     | 0      | 1     | 1    | 0  | 0      | 0   | 0       | 0     | 1     | 0     | 0     |
| 1111 | cell117715 | T00000-- | 001000000001100010100 | 0   | 0    | 1      | 0      | 0     | 0      | 0     | 0     | 0     | 0      | 1     | 1    | 0  | 0      | 0   | 0       | 1     | 0     | 1     | 0     |

The fields in "ceds" printout correspond to the following attributes:

- MOD: RNC Module
- CFRPHEMU: status of UtranCell, Fach, Rach, Pch, Hsdsc, Eul, MbmsCch, EulFach (L=locked, S=ShuttingDown, T=tpsPowerLocked, U=tpsPowerShuttingDown, 1=unlocked&enabled, 0=unlocked&disabled)
- A=cpc: UtranCell::cpcSupport
- B=dBMC: MultiCarrier::dualBandMultiCarrierSupport
- C=edchT2: Eul::edchTti2Support
- D=enhDrx: Hsdsc::enhUeDrxSupport
- E=enhL2: Hsdsc::enhancedL2Support
- F=eulDch: Eul::eulDchBalancingSupport
- G=eulTd: Eul::eulTdSchedulingSupport
- H=fdpch: UtranCell::fdpchSupport
- I=hsAqm: Hsdsc::hsAqmCongCtrlSupport
- J=hsFach: Hsdsc::hsFachSupport
- K=impL2: Eul::improvedL2Support
- L=lBHo: UtranCell::loadBasedHoSupport
- M=mC: MultiCarrier::multiCarrierSupport
- N=mCMimo: MultiCarrier::multiCarrierMimoSupport
- O=q64: Hsdsc::qam64Support
- P=q64Mimo: Hsdsc::qam64MimoSupport
- Q=eulMC: MultiCarrier::eulMultiCarrierSupport
- R=hsThp: UtranCell::ueHsThpMeasSupport
- S=hs3MC: MultiCarrier::hsdpa3McSupport
- T=db3MC: MultiCarrier::hsdpaDb3McSupport



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

#### 4.2.27 `al[atkcg][u] [-a|-u <alarm-id>] [ | <unix-cmds>]`

Print the list of active alarms. Acknowledge/Unacknowledge an alarm.

Output can be piped through external unix utilities like "sort", "grep", "less", "more", etc.

On CPP nodes, the timestamps are printed by default in local timezone. For UTC time, use option "u", eg `altu`. On COM nodes, the timestamps are only printed in UTC time.

It is possible to combine several options, eg: `al`, `ala`, `altk`, `alatk`, `altkc`, etc. These options are as follows:

- `al` : active alarm list is printed in overview format, only four fields are shown per alarm.
- `ala` : same as `al`, but the full detailed list is added underneath the overview table.
- `alt` : same as `al`, but the time field is added to the table and the alarms are sorted chronologically.
- `alk` : same as `al`, but the list is separated in two parts, one for the unacknowledged alarms, and one for the acknowledged alarms.
- `alc` : same as `al`, but each alarm is displayed in CSV format and all fields are shown for each alarm.
- `alg` : same as `al`, but the MO instances with alarms are saved to a MO group called `al_group`

Note: options `k` and `g` are currently only applicable for CPP nodes, not COM nodes.

On CPP nodes, the options `-a/-u` can be used for acknowledging/unacknowledging an alarm. The alarm is identified by its alarm id which can be printed with `ala` or `alc`. Only the number after the underscore is needed. If the alarm id contains the `mibPrefix`, the `mibPrefix` shall not be included. Example: if the alarm id is shown as `SubNetwork=OSS38_ROOT_MO,MeContext=MGW1_21`, then the alarm id is 21.

#### Examples:

- `altk` : sort active alarm list by timestamp and show alarms in two separate tables depending on acknowledgment state
- `altkc` : same as above but alarms are displayed in CSV format and more fields are shown
- `al | grep -i atmport` : only print the alarms that match "atmport" (case insensitive)
- `al -a 18` : acknowledge alarm number 18 (the alarm id is shown in "alc" or "ala"). Only applicable for CPP nodes.

Note: in `alt` and `alk`, the severity field is shortened to one character:

- **C** for Critical
- **M** for Major
- **m** for minor
- **w** for warning

#### Moshell generated alarms:

On CPP nodes, the alarm list is read from the Alarm Client Interface (ALCI), however, some additional alarms are generated from moshell in the case where some CPP features are activated and disabled or if TimDevice MOs are missing on RNC, since these MOs would not generate an alarm otherwise. This moshell feature is controlled by the uservariable "mosalarm" and is turned on by default which means that the "al" command takes about 1 or 2 seconds more to execute due to reading the status of those CPP features from the MO Client Interface.

#### Correlated alarm info:

In RCS nodes, alarms have a special "CI" field ("Correlation Info") to identify primary and their correlated secondary alarms. This field is shown in a simplified way in "al", with the indication "P" for primary alarms, "S" for secondary alarms, and a unique number for the alarm ID. For instance: "P:11->17,18" means alarm 11 is primary and related to secondary alarms 17 and 18. "S:17->11" means alarm 17 is secondary and related to primary alarm 11. This correlated alarm information is always shown by default but can be turned off via the `uv show_related_alarms`.

It is also possible to display the full correlation info field in json format. This field is hidden by default but can be turned on via the `uv show_correlation_info`.

#### 4.2.28 `lg[abcdefghijklmnopqrstuvwxyz012345678] [-l <input-directory|logfile|zipfile>] [-m <minustime>] [-p <plustime>] [-s <startdate>] [-e <enddate>] [-g <boardgroup>] [-r <mogroup>] [-n <nodefilter>] [-x <XBlog-filter|ESlog-filter>] [-b <xb>] [-d <nrdumps>|<esiGranularity>] [-z] [-tz <hrs>] [<destination-directory>] [|<unix-cmds>]`

Fetching and processing of node logs

All options can be combined together, except options `d`, `w`, `x`, `f` which can only be combined with options `r` and `c`.

#### CPP Log Options:

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- 1 : Print the list of logs from the node.
- 2 : T&E disk and ramdisk logs (/d/usr/cello/telogs and /r000x00/telogs on CPP OSE nodes; /tsRamdisk/Snapshots on Evo8300 ). See examples at the end for usage.
- 3 : RNC SON log (/c/logfiles/SON/ANR\_EVENTLOG.xml and /c/logfiles/SON/TPS\_EVENTLOG.xml)
- 4 : MGW BGF log (/c/logfiles/BGF)
- 5 : MGW IPCS log (/c/logfiles/ipcs\_logs)
- 6 : WebServer log (/c/logfiles/webserver/CELLO\_WEBSERVER\_LOG.xml)
- 7 : SwErrorAlarm log (/c/logfiles/SwErrorAlarmLog)
- 8 : RNC GeoRedundancy log (/c/logfiles/Roam/ROAM\_GEO\_LOG.xml)
- a : Alarm log (ALARM\_LOG.xml). History of alarms raising and ceasing. Note: Updated alarms are hidden by default but this can be changed with the `uv show_updated_alarms`.
- j : Alarm durations (ALARM\_LOG.xml). Same as option a except that raising and ceasing are combined into one entry, together with the total duration of the alarm.
- x : Active alarms (ALARM\_LOG.xml). Snapshot of alarms active on a specific date/time given in -m/-s option.
- e : Event log (EVENT\_LOG.xml). History of MO events.
- v : Availability log (CELLO\_AVAILABILITY2\_LOG.xml). History of node/board/program restarts.
- s : System log (/c/logfiles/systemlog). History of node/board/program restarts.
- p : Post Mortem Dumps (/c/pmd) and LTE ENodeB error files (/c/logfiles/troubleshooting/error). History of board/program crashes. PMD files are saved permanently in `moshell_logfiles/logs_moshell/pmdfiles/<nodeaddress>/pmd`.
- u : Upgrade log (Trace.log/Trace.txt). History of system upgrades.
- d : Downtime log. History of node outages and partial outages.
- o : MO command log (CORBA\_AUDITTRAIL\_LOG.xml and PNP\_LOG.xml). History of MO write commands (set/action/create/delete).
- q : MO command log in "trun" format (CORBA\_AUDITTRAIL\_LOG.xml). Useful for recovering configuration data which was not saved to CV before node restart.
- l : COLI command log (SHELL\_AUDITTRAIL\_LOG.xml). History of COLI commands.
- y : SecurityEvent log (CELLO\_SECURITYEVENT\_LOG.xml). History of O&M connection setups.
- w : Active O&M connections (CELLO\_SECURITYEVENT\_LOG.xml). Snapshot of O&M connections on a specific date/time given in -m/-s option.
- z : IP Transport log (CELLO\_IPTRAN\_LOG.xml).
- t : Trace and Error log (lh all te log read. to specify a different boardgroup than all, use the -g option).
- g : Board Restart error log (lh allpd llog -l ; lh ru llog -l -n 5).
- h : HW Inventory log (CELLO\_HWINVENTORY\_LOG.xml). This file must first be generated with the command `hili mk` on O&M MP.
- k : XB log. Fetches CMXB logs (HCS and Evo nodes) and SCXB logs (Evo nodes). Use `-b <xb>` to limit log fetching from a single board. Use `-x <xblogfilter>` to determine which logs are processed (see below).
- b : RLIB log (/c/logfiles/Rlib/RLIB\_PM\_LOG.xml), applicable to RNC only.
- f : collect all logs except XB logs and ENB DSP dumps, and save to a zipfile. To specify number of ENB DSP dumps to collect, use option `-d <n>`, eg `lgf -d 2` to collect the last 2 ENB DSP dumps.
- f1: collect all logs and last ENB DSP dump, and save to a zipfile.
- f2: collect only XB logs, and save to a zipfile. To only collect XB logs from a specific board, use option `-b`, eg `lgf2 -b 000100`

#### Pico Log Options:

- a: Alarm log (/var/volatile/log/permanent/oss/alarmlog.log). Note: Updated alarms are hidden by default but this can be changed with the `uv show_updated_alarms`.
- e: FmEvent log (/var/volatile/log/permanent/oss/fmevents.log)
- g: Runtime log (/var/volatile/log/runtime)

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- h: AutoIntegration log (/var/volatile/log/permanent/oss/AutointegrationLog.txt)
- o: Audit Trail logs (/var/volatile/log/runtime\* and /var/volatile/log/permanent/oss/runtime\*)
- s: SystemEvent log (/var/volatile/log/permanent/oss/sysevent)
- u: Upgrade log (/var/volatile/log/permanent/oss/SWUpgradeLog.txt)
- y: SecurityEvent log (/var/volatile/log/security)
- f: collect all logs and save to a zipfile

**vBGF/vSBG/vMRF/vMTAS/vCSCF Log options:**

- a: Alarm log (FaultManagementCfgLogAlarmStream)
- e: Alert log (FaultManagementCfgLogAlertStream)
- s: System log (saLogSystem)
- y: Security log (ComSecLogStream)
- 6: LM SA log (LmSaCfgLogStream)
- 7: COM SA log (ComSaCfgLogStream)
- f: collect all logs and save to a zipfile

**RCS Log Options (MSRBS):**

- a: Alarm log (AlarmLog). History of alarms raising and ceasing. Note: Updated alarms are hidden by default but this can be changed with the `uv show_updated_alarms`. Correlation information is hidden by default but this can be changed with the `uv show_correlation_info`.
- e: Alert log (AlertLog). History of alerts.
- j: Alarm durations. Same as option "a" except that raising and ceasing are combined into one entry, together with the total duration of the alarm.
- x: Active alarms. Snapshot of alarms active on a specific date/time given in -m/-s option.
- b: TN Application log (TnApplicationLog)
- d: Downtime log. History of node outages and partial outages.
- g: Board Restart log ("llog -l" on DU/RU/XMU).
- h: AutoIntegration log (AiLog) and HwInventoryHistory log (HwInventoryHistoryLog)
- k: Ericsson Support Information log (EsiLog) - parsed
- k1: Ericsson Support Information log (EsiLog) - not parsed (transparent display: useful for "lgk -x hw", "lgk -x ricm", "lgk -x fru", "lgk -x nc", "lgk -x ic", ...)
- k2: Applicable for offline mode, to load the "dcg run" and "te log read" printouts from ESI in case the dcgm does not contain them (eg if `dcg_no_telog=1` and/or `dcg_no_coli=1`)
- l: COLI command log (AuditTrailLog)
- o: MO command log (AuditTrailLog)
- p: Post Mortem Dumps (from /rcs/dumps/pmd). History of CPM crashes. PMD files are saved permanently in `moshell_logfiles/logs_moshell/pmdfiles/<nodeaddress>/pmd`.
- q: Health Check Log (HealthCheckLog)
- v: Availability log (RBS\_CS\_AVAILABILITY\_LOG)
- t: T&E log (lh all te log read. to specify a different boardgroup than "all", use the "-g" option). Trace and Error Log.
- u: Upgrade log (SwmLog)
- y: Security log (SecurityLog)
- z: TN Network log (TnNetworkLog)
- 3: VES log (VesLog)
- 4: APC Logs (BatteryLog, ClimateLog, PowerDistributionLog, PowerSupplyLog)
- 5: OOT log (OotLog)
- 6: Consul log (Consul)
- 7: SwErrorAlarm log (SwErrorAlarmLog)

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- 8: License log (LicenseLog)
- f: collect all logs with small ESI and save to a zipfile. If small ESI fails, try `lgf -d -1` to collect a static ESI (= small without callbacks)
- f0: collect all logs except the ESI and save to a zipfile
- f1: collect all logs with large ESI and save to a zipfile
- f2: collect only export logs and ESI and save to a zipfile (no llog/telog/pmd)
- f3: collect only export logs and save to a zipfile (no ESI/llog/telog/pmd)
- f4: collect only ESI and save to a zipfile (no exportlogs/llog/telog/pmd)

**ESI options:**

1. When collecting ESI with `lgf/lgf1`, the "`-r <mogroup>`" option can be used to specify Cells/SectorCarrier/FieldReplaceableUnit whose logs shall be included in the ESI. Without this option then all FRU logs are collected in the ESI. The "`<mogroup>`" must be first made with the command "`ma`".
2. The option "`-d <n>`" can be used to specify the ESI granularity:
  - -d 1: large - means that all Logs will be part of ESI.
  - -d 0: small - means that only Logs with a size of up to 20 MB will be part of ESI.
  - -d -1: static - same as small but with an addition that no callback modules will be invoked. This alternative is to be used if the callbacks cause the ESI generation to fail. Note: the ESI will of course not contain the accurate log files normally generated by the callbacks; such logs may be missing or containing files generated in an older ESI.
  - -d -2: refresh - means that only possible crash log files will be part of ESI. It is typically used for automatic log collection.
  - -d -101: sp1 - sp[n] generates a filtered ESI with less data, used for a special purpose (sp) where [n] is an integer, currently only sp1 is supported.

**Note:**

If the `lg` command fails on the RCS node (possibly due to firewall restrictions), try setting the following uservariables in the file `./moshellrc`:

- `export_method`: use value 1 (SFTP export to the current workstation) or value 2 (SFTP export to a different workstation).
- `export_username`: the username for the SFTP server to which the logs will be exported
- `export_password`: the password for the SFTP server. Can be encrypted with the command `encpw`. If the password is not set, then it will be prompted at the command line.
- `export_server`: the IP address of the SFTP server. Only applicable if `export_method=2`.

More information about export uservariables can be found in the file `moshell/moshell`.

**Common Options (CPP/Pico/RCS):**

- `m`: merge the different logs together (eg: `lgaevm` will merge alarm/event/availability logs).
- `i`: inverse chronological order.
- `r`: refetch the logs from the node. Logs are only fetched once and kept in cache. This option is used to refresh the session cache.
- `c`: print the output in csv format (semicolon separation).
- `n`: Moshell command log. To specify different or all nodes, use the `-n <node-filter>` option. If `-m` or `-s` option are not specified, the default is to show command history of the last 30 days.

**Time filtering (CPP/Pico/RCS):**

- The `-s` and `-e` options are used for specifying an absolute timespan: `-s` gives the starting date and `-e` gives the ending date. The format is `yyyymmdd[.hhmm]`, for instance `20071230`, or `20071230.0800`.
- The `-m` and `-p` options are used for specifying a timespan relative to today's date: `-m` gives how long time backward and `-p` gives how long time forward. The format is in days, hours, or minutes, eg. `10d` (10 days), `2h` (2 hours), `30m` (30 minutes).

Note: the switch `-s/-m` can sometimes be omitted. E.g. `lgo 14` can be used instead of `lgo -m 14`, and `lgo 20080701.1200` can be used instead of `lgo -s 20080701.1200`. This works only when the options `-e/-p` are not used.

**Time conversion (CPP/Pico/RCS):**

- `-z`: to print the timestamps in the timezone of the workstation where moshell is executing.  
Eg: `lga -z` will show the alarm log timestamps in the workstation's timezone

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- `-tz <hrs>` : for printing the timestamps a specific timezone.  
Eg: `lga -tz +10` will show the alarm log timestamps in UTC+10 timezone  
Note: this setting can be saved in the moshellrc uservariable `tz_option`.

### Offline usage:

The `-l` option allows to process the logfiles in offline mode, when not connected to the node. The argument of the `-l` option specifies the location where the logfile(s) are locally stored on the workstation. It can be:

- a single logfile
- a directory containing several logfiles.
- a zipped archive containing one or more logfiles.

By running the command `lgf` while connected to the node, it is possible to download all the logfiles to a local directory for later offline processing. The local directory can be specified as argument. If not specified, a default location is chosen (`~/moshell_logfiles/logs_moshell/lg/nodeaddress/date_time`). The local directory is then automatically compressed and saved in a zipped archive.

### XB log filters (CPP):

The XB log filter is specified with `-x <filter>` in the command `lgk` on nodes containing CMXB/SCXB boards, to specify the type of logs that will be displayed. The XB log filter shall be given as a combination of one or more of the following letters:

- `o`: OS log (default)
- `s`: SNMP log
- `c`: COLI command log
- `b`: Board manager log
- `w`: Switching event log
- `m`: Software management log
- `e`: Security log
- `f`: Firewall log
- `h`: Shelf manager log
- `a`: Application log
- `t`: Timing unit manager log
- `p`: Power and fan log
- `x`: All of the above listed logs

Example:

- `lgk -x oscb` - show the XB log entries from OS log, SNMP log, COLI command log and Board manager log

### ESI log filters (RCS):

The ESI (Ericsson Support Information) log filter is specified with `-x <filter>` in the command `lgk` on RCS nodes (MSRBS), to specify the type of logs that will be displayed. The ESI log filter shall be given as a combination of one or more of the following strings, separated by commas:

- 1) `ai` : `rsc/log/AiLog/AiLog.*`
- 2) `al` : `rsc/saf_log/saLogAlarm/saLogAlarm_*.log`
- 3) `a_t` : `rsc/log/AuditTrailLog/AuditTrailLog.*` (MO part)
- 4) `atr` : `rsc/log/AuditTrailLog/AuditTrailLog.*` (COLI part)
- 5) `capi` : `cpu_load.log` (generated after running COLI command "capistart" and "capistop" on the DUS)
- 6) `com` : `rsc/comte/com.log.*`
- 7) `coma` : `rsc/comte/com_alarm.log.*`
- 8) `comi` : `rsc/log/ComInterfaceLog/ComInterfaceLog.*`
- 9) `erl` : `rsc/bootlogs/erlang.log.1` AND `rsc/erlang/erlang.log.*`
- 10) `ev` : `rsc/log/NotificationLog/NotificationLog.*`
- 11) `lic` : `rsc/log/LicensingLog/LicensingLog.*`
- 12) `ltn` : `rsc/log/IttnLog/IttnLog.*`

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- 13) mmi : rcs/log/MMILog/MMILog.\*
- 14) nl : rcs/bootlogs/nl\_log.\* and rcs/networkloader/nl\_log.\*
- 15) notif : rcs/saf\_log/saLogNotification/saLogNotification\_\*.log
- 16) pnp : rcs/saf\_log/PnpApplicationLog/PnpApplicationLog\_\*.log
- 17) sys : rcs/saf\_log/saLogSystem/saLogSystem\_\*.log
- 18) sec : rcs/log/SecurityLog/SecurityLog.\*
- 19) swmi : rcs/log/SwmInternal/SwmInternal.\*
- 20) tnapp : rcs/saf\_log/TnApplicationLog/TnApplicationLog\_\*.log
- 21) tnnet : rcs/saf\_log/TnNetworkLog/TnNetworkLog\_\*.log
- 22) tri : rcs/log/TriLog/TriLog.\*
- 23) swm : rcs/log/SwmLog/SwmLog.\*
- 24) upg : rcs/saf\_log/saLogUpgrade/upgrade\_\*.log
- 25) pmc : rcs/log/RcsPmCounters/RcsPmCounters.\*
- 26) pmev : rcs/log/RcsPmEvents/RcsPmEvents.1
- 27) syslog: var/log/syslog
- 28) llog : var/log/llog/llog
- 29) hw : tmp/ee\_esi/ee\_esi.log
- 30) sync : applicationlogs/SyncDusg2\_\*/sync-dcg.log
- 31) nc : applicationlogs/RBSNC\_CXP2020082\_1/esiNC/esiNC.log
- 32) ic : applicationlogs/RBSIC\_\*/esiIC/esiIC.log
- 33) ricm : applicationlogs/RICM\_\*/ricm\_esi.log
- 34) fru : applicationlogs/RBSNC\_\*/esiFRUs/BXP\_xxx.log or fru\_xxx.log
- 35) lratcaps: applicationlogs/LRAT-RACOAM-ARM\_\*/lrat\_esi\_capsule\_info.log
- 36) vesi : rcs/log/VesInternalLog/VesInternalLog.\*
- 37) hci : rcs/log/HealthCheckInternalLog/HealthCheckInternalLog.\*
- 38) loglog: rcs/log/LogLog/LogLog.\*
- 39) ugtri : rcs/log/TriLog/UgTriLog.\*
- 40) comsa : rcs/log/ComSALog/ComSALog\*
- 41) llpm : rcs/saf\_log/PlmLog/llpm\*

**Example:**

- lgk -x coma,erl,tri -> show the log entries from com\_alarm.log, erlang.log and TriLog in the ESI
- lgk -x 7,9,22 -> same as above
- lgkm -x 2-4,7 -> show the log entries from saLogAlarm, com\_alarm, and AuditTrail (both MO and COLI parts), and merge them chronologically

**Notes:**

- The output of the lg command can be filtered by piping to a unix command such as grep, sort, less, etc.
- In options a and x, the alarm severity field is shortened to one character: C=Critical, M=Major, m=minor, w=warning, \*=cleared.
- In option j, the alarm severity field consists of one letter if the alarm is still active. If the alarm is ceased then we see a character followed by a star, eg: M\* means Alarm was raised with severity Major, then ceased.
- In lgd, the reason code for manual restarts can be translated with the command mom restartreason
- In lgd on CPP nodes, the downtime values correspond to the following stages:
  - CPP downtime is the time elapsed between the row CRIT Node down and the row Node operational. in syslog or the row NODE IN Operational in avlog (whichever row comes first).
  - Application downtime is the time elapsed between the row CRIT Node down in syslog and the row



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

RNC Node Restart Completed (RNC), Cell .\* enabled (WRBS), VMGWs Unlocked/First VMGW Enabled (MGW), or NODE IN Operational RestartCompleted (ERBS) in avlog.

- Jvm downtime is the time elapsed between the row CRIT Node down in syslog and the row JVM Load Module is now operational in avlog or the row The Configuration Service is up and running in upgradelog.
  - JvmRestart: For individual Jvm restarts, the Jvm downtime is the time elapsed between the row Program CXCxxxx started in syslog (or the row Current properties in upgradelog) and the row The Configuration Service is up and running in upgradelog. Though the Jvm downtime is shown in the CPP downtime column, it is nevertheless only a Jvm downtime.
  - The node downtime figures in the summary table at the end of the printout represent the highest value between CPP downtime and Application downtime. The partial downtime figures are weighted against percentage of availability (when applicable).
- In lgd on RCS nodes, the downtime values correspond to the following stages:
- The start of the downtime is counted from the line NODE OUT UnOperational, using the timestamp at the end of the line
  - The RCS downtime is counted until the line NODE IN Operational or NODE IN Operational ExtUpgradeRequest
  - The Application downtime is counted until the first occurrence of a RAT RestartCompleted line (Grat, Wratt, Lrat, or NR). So this is the time until the first RAT is up.
  - The TN downtime is counted until the line Tn RestartCompleted
  - The RATs downtime indicates the individual downtime for each RAT

#### Examples:

- lga -s 20050705 -e 20050710 - show alarm log entries between the dates 20050705 and 20070710
- lgaemc | grep -i atmport - show all entries from the alarm/event logs matching the word atmport (case insensitive), display in CSV format (semicolon separated), and pipe to grep
- lgx -m 14 - show alarms that were active 14 days ago
- lgxc 20080704.1330 - show alarms that were active on the 2008-07-04 at 13:30 and print output in CSV format
- lgvsm -s 20050705.1000 - show all entries from system log and availability log since the 20070705 at 10:00, merged in chronological order
- lgar -m 10d -p 30m - refetch the alarm log and show all its entries starting from 10 days ago and until 30 minutes from then.
- lgf - fetch all logs from the node and put them in the default location  
~/moshell\_logfiles/logs\_moshell/lg/nodeaddress/date\_time/node\_logfiles.zip
- lgf /home/user/logs/rnc10 - fetch all logs from the node and put them in the zipped file  
/home/user/logs/rnc10/<node>\_logfiles.zip
- lgaemic -m 10h -l ~/moshell\_logfiles/logs\_moshell/lg/rnc10/20071122\_1425 - parse the last 10 hours of the alarm and event logs stored in the folder ~/moshell\_logfiles/logs\_moshell/lg/rnc10/20071122\_1425, merge them and display them in CSV format and reverse chronological order
- lgd -m 30d - show all node restarts and related downtime from the past 30 days
- lgt -g mp - show the T&E logs of the boards of the board group "mp", sorted in chronological order
- lgtaom -m 12h - show the T&E logs of all boards merged with the alarm log and audit trail, for the past 12 hours
- lgn -m 5 -n 137.58 - show the moshell command log for the past 5 days for all nodes whose address matches 137.58
- lgk -m 5d -b 000100 - show OS status on SCXB in 000100 for past 5 days
- lgk -m 10d -x ce - show security events and COLI command history on XBs for past 10 days
- lgk -x coma,erl,swmi -m 30 - shown ESI log entries from com\_alarm.log, erlang.log, and swminternal log for the last 30 days
- lgf2 - collect all XB logs



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- `lgf2 -b 000100` - collect XB logs only from board 000100
- `lg2` - collect all CPP T&E disk/ramdisk logs
- `lg2 -b mp -m 3h` - collect all CPP T&E disk/ramdisk logs of the last 3 hours from board group "mp"

#### 4.2.29 mfi[trc] [-s <startdate>] [-e <enddate>] [-p <hrs>]

Miscellaneous Functions - display RSSI per branch on LTE cells

Prerequisite: the feature "CXC4011820" must be operational, PmUInterferenceReport MOs must be defined on the node and corresponding counters included in a PM profile. Refer to RAN CPI description of "Uplink Interference Reporting" for more info.

##### Options

- `t`: use real-time counter values read via pget. Without this option the counter values from the last ROP file are used.
- `r`: refresh the data locally cached in the moshell session.
- `c`: display the printout in CSV format

##### Time options

- `-s <startdate>`: to specify the starting date for the time period to check. The format is `yyyymmdd[.hhmm]`, for instance 20071230, or 20071230.0800
- `-e <enddate>`: to specify the end date for the time period to check. The format is same as above.
- `-p <hrs>`: to specify the number of hours to check from the starting date.

The `-e` and `-p` options are mutually exclusive. The length of the period to check is defined either by the end date or the number of hours to check.

##### Command example

- `mfi`: check the RSSI for the latest ROP
- `mfit`: check the RSSI for the ongoing ROP in real-time
- `mfi -s 20210310.0900 -p 3`: check the RSSI since 20210310.0900 and for 3 hours onward

##### Printout example

- CELL: EUTranCellxDD or NblotCell
- SC: SectorCarrier
- FRU: the FieldReplaceableUnit or AuxPlugInUnit MO representing the RU/RRU on which the Cell is served
- BOARD: the board type of the RU/RRU
- PUSCH/PUCCH: the uplink interference level on the Pusch/Pucch channels in the cell
- A-H: RSSI in dBm on each applicable RF port (A to H)
- DELTA: the difference between the highest and lowest RSSI value on each of the RF ports.

```
=====
CELL ; SC; FRU ; BOARD ; PUSCH ; PUCCH ; A; B; C; D; DELTA
=====
FDD=168272_1 ; 1 ; 1/2/RU-1-2; RUL01B13 ; -119.3; -119.0; -121.0; -121.3; -118.0; -117.9; 3.4
FDD=168272_1_2; 4 ; RRU-2 ; AIR21B41, 3M; -120.3; -119.6; -119.9; -119.9; -120.3; -119.8; 0.5
FDD=168272_2 ; 2 ; 1/4/RU-1-4; RUL01B13 ; -119.7; -120.4; -121.6; -121.3; -118.3; -119.0; 3.3
FDD=168272_2_2; 5 ; RRU-4 ; AIR21B41, 3M; -120.4; -120.1; -120.3; -119.7; -120.1; -119.8; 0.6
FDD=168272_3 ; 3 ; 1/6/RU-1-6; RUL01B13 ; -119.6; -120.3; -121.0; -121.3; -118.3; -118.7; 3
FDD=168272_3_2; 6 ; RRU-6 ; AIR21B41, 3M; -120.7; -120.3; -120.8; -120.5; -121.0; -120.6; 0.5
=====
```

#### 4.2.30 mfs[hrc] [<rports>] [<samplingstep>]

Miscellaneous Functions - returnloss (vswr) frequency Sweep

##### Options

- `h`: simplified printout
- `r`: refresh the data locally cached in the moshell session

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- c: display the printout in CSV format

### Arguments (both optional)

- first argument: the rport MOs on which to run the sweep , eg "rport=a" or "rru-1.\*rport=a". Without argument all RF ports are swept.
- second argument: the sampling step in kHz. eg 5000. Default is 1000 (1 MHz)

### Printout format

- FRU: the MO name of the FRU or AuxPiu
- RF: the RfPort
- glId: the globalId of the carrier as specified in the tag "globalId" of the measurementInfo for the CarrierBranch in the parsed log
- RAT: the ratType tag of the CarrierBranch in the parsed log
- Freq: the frequency tag of the CarrierBranch in the parsed log (in MHz)
- BW: the bandwidth tag of the CarrierBranch in the parsed log (in MHz)
- RL (Freq): the list of ReturnLoss values for each sample (in dB), followed by each corresponding frequency (in MHz)

## Printout examples

- mfs:

[illegible]

- mfsh:

[illegible]

4.2.31 mft[adshy] [-c <cellId>] [-u <ues>] [-t <timeout>] [-n] [-d <duration>] [-i <interval>] [-o <outputfile>]  
<TraceProfile(s)>|<MtdCounterProfile(s)>

## Miscellaneous Functions - Trace profile handling

**Options:**

- without option: reset all traces to default and activate trace profile(s) - or: run a MTD counter profile
- d: disable trace profile(s) - or: Reset MTD counters
- a: append trace profile(s) to existing trace conditions
- s: save trace conditions to survive board restart
- h: show trace profile(s) help text
- y: dont prompt for confirmation

### TraceProfile Parameters (currently only applicable for LTE):

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- `-c <cellId>` : the value of the parameter "-cellid" in the "/lr/ue" command. Optional. If not specified, the parameter "-allCell" will be sent
- `-u <ues>` : the value of the parameter "<maxUeInCell>" in the "/lr/ue" command (must be a number between 1 and 8). Optional. If not specified, the parameter "-allUe" will be sent
- `-t <timeout>`: the value of the parameter "-timeout" in the "/lr/ue" command. Optional. If not specified, then default timeout of 120 minutes will be used.
- `-n` : will add the parameter "-traceNewUes" in the "/lr/ue" command. Optional. If specified then only newly setup UEs will be traced on.

#### **MtdCounterProfiles Parameters:**

- `-d <duration>`: total duration (default: 60 seconds)
- `-i <interval>`: wait interval between each loop (default: 10 seconds)
- `-o <outputfile>`: the output file where the printouts will be stored (default: `$tempdir/mtdcounters.log`)

#### **TraceProfiles**

- 0 : reset all traces to default
- 1 : LTE\_VOLTE\_RET\_BASIC
- 2 : LTE\_VOLTE\_RET\_OPT
- 3 : Common\_CAT\_NC\_MemoryCrash
- 4 : Common\_CAT\_CRA\_MemoryCrash
- 5 : Common\_CAT\_IC\_MemoryCrash
- 6 : Common\_FM\_ServiceDegraded\_Alarm
- 7 : Common\_FM\_NoConnection\_APCAlarm
- 8 : Common\_FM\_NoConnection\_FRUAlarm
- 9 : Common\_FM\_InconsistentConfiguration\_Alarm
- 12 : LTE\_L3\_Basic\_Traces
- 13 : EN-DC\_Setup\_Traces
- 14 : LTE+NR Packet\_Loss\_Traces
- 15 : LTE+NR\_CA\_Band\_Selection\_Traces
- 16 : LTE+NR\_CA\_Throughput\_DL\_Traces
- 17 : LTE+NR\_CA\_Throughput\_UL\_Traces
- 18 : NR\_BLER\_DL\_Traces
- 19 : NR\_BLER\_UL\_Traces
- 20 : ESS Alarm\_Traces
- 21 : Intra-Frequency gNB HO\_Traces

#### **PmCounterProfiles:**

- 10 : LTE\_Random\_Access\_Counters

#### **MtdCounterProfiles:**

- 11 : reset/read LTE/NR MTD counters (use `-d/-i` options to specify loop parameters)

#### **Examples**

- `mft 0 ==>` reset traces to default
- `mft 1 ==>` reset traces and activate profile 1
- `mfts 3-5 ==>` reset traces, activate and save profiles 3,4,5
- `mfta 1, 6-8 ==>` activate profiles 1,6,7,8 (traces will be appended to existing trace conditions without first resetting the existing traces to default)
- `mftds 1, 3-5, 9 ==>` disable profiles 1,3,4,5,9 and save trace conditions
- `mft 1 -c 3 -u 8 -t 60 ==>` activate trace profile 1 with parameters "cellId 1", "maxUeInCell 8", "timeout 60 minutes"

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- `mftth 1-2 ==>` show help text for profiles 1 and 2
- `mftdy 11 ==>` reset MTD counters
- `mfty 11 ==>` collect MTD counters for the default duration of 60 seconds with 10 seconds interval between each loop and save to the default logfile in `$tempdir`
- `mfty 11 -d 300 -i 30 -o $logdir/mtd.log ==>` collect MTD counters for 300 seconds with 30 second interval between each loop and save output to the file `mtd.log` in the `$logdir` folder

#### 4.2.32 `orx[acglpr] [-r <radios>]`

Open-Radio miscellaneous commands (list, get, alarm, restart).

Running `orx` with no option will list all ORadios and their ID. New option `l` will read the YANG schemas from the ORadio. This is done implicitly in Moshell, but if the RU is not restarted via Moshell after a software activation or is swapped, this command will have to be run.

##### Options

- `a`: active alarm list
- `r`: restart ORadio.
- `g`: perform a netconf "get" operation
- `gg`: perform a netconf "get-config" operation
- `c`: print the active alarm list in csv format
- `l`: reload YANG schemas
- `p`: poll until the ORadio becomes ENABLED after restart.

##### Flags

- `-r <radios>`: the list of all radio ids on which the command shall run.

Eg: `"-r 1-3"` will run on radios 1,2,3. `"-r 1,2"` will run on radios 1 and 2.

Without `"-r <radios>"` the command will run on all radios.

##### Examples

- `orx` → list all ORadios. Example printout:

```
=====
Id MO LDN
=====
1 ManagedElement=1,Equipment=1,FieldReplaceableUnit=2,ORadio=1
2 ManagedElement=1,Equipment=1,FieldReplaceableUnit=3,ORadio=1
=====
```

- `orxa` → print active alarms for all ORadios. Example printout:

```
=====
Id Fault-Id Date & Time (+00:00) Severity Source Affected objects Text
=====
1 1 2019-07-24T14:56:33 MINOR module/slot0 module/slot0; Unit temper
=====
```

- `orxg -r 1` → perform netconf "get" on ORadio with Id 1
- `orxgg` → perform netconf "get-config" on all ORadios
- `orxr -r 1,3` → restart ORadio 1 and 3

#### 4.2.33 `ori[shxc] [-r <radios>]`

Open-Radio HW/SW inventory.

The software inventory table is used to determine the build and version of specific ORadio Software. This can be used to manually verify which software is running and also to validate new upgrade packages. An automated validation (though manually triggered) can be done on demand (see `orsv`).

##### Options

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- s (oris): Show software inventory only.
- h (orih): Show hardware inventory only.
- c : Print tables as csv.
- x (orix): Show execution data.

### **SW Inventory tables columns**

First table(listing software slot info):

- Id - Id of the ORadio (see orx)
- SWSlot - Name of the Software Slot.
- ProdCode - Product code for the ORadio hardware component.
- VendorCode - Two Symbol code for the product vendor.
- BuildId - Identifier for the particular software build.
- Version - Software build version.
- Status - Status of the current software slot. If a valid UP is installed on the slot, the status should be VALID.
- AR - Active-Running states, 00 means not-active/not-running, 10 means active/not-running, 11 means active/running, 01 means not-active/running. This state should never occur and if you get this, it is likely a SW bug.
- Access - Access identifier for the software slot. READ\_WRITE normally means the slot is available for doing upgrade, while a READ\_ONLY slot is used for factory reset.

### **Hardware inventory columns**

First table (listing hardware components):

- Id - Id of the ORadio (see orx).
- Component - Type of the hardware component.
- Name - Name of the component.
- S - State of the component. Values may be L-locked; 0-unlocked,disabled; I-unlocked-enabled.
- U - Usage state of the component. Values are A-active; I-idle; B-busy.
- ProdCode - Product code for the hardware component.
- Rev - Revision of the hardware component.
- Serial - Hardware component serial number.
- ProdDate - Product date of the Hardware component.
- Mfg - Name of the company manufacturing the hardware component.

Second table (listing interfaces):

- Id - Id of the ORadio (see orx).
- Interface - Name of the interface.
- Port - port number of the interface.
- S - state of the interface. The states may be 1-Up, or 0-Down.
- Speed - The nominal speed of the interface.
- Type - Interface type.
- ComponentRef - Reference to physical port.

### **Orix columns**

First table:

- FRU - FRU MO ID.
- Name - RU component name.
- Board - Board type
- FB - FRU-Board state, 1 for DISABLED L for locked 0 for DISABLED. F will list the FRU state and B will list the state red from the RU.
- FAULT - Currently not applicable.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- OPER - Currently not applicable.
- MAINT - Currently not applicable.
- ProductNumber - RU product number.
- Rev - RU product revision.
- Serial - RU product serial number.
- Date - RU production date.
- UPT - Time since the last RU restart. Not applicable for xRAN.
- Cells - Cells connected to the RU.

Second table (RU SFP operational information):

- RiL - RiLink ID.
- T - Link type, O-optical, E-electrical.
- Rate - Maximum link bitrate.
- FRU - FRU MO ID.
- BOARD - Board type.
- IF - RU interface, which the link is connected to.
- Port - RU port number.
- FP - FRU state and port state.
- Vendor - SFP vendor.
- VendorProd - SFP product ID.
- Rev - SFP product revision.
- Serial - SFP serial number.
- EricssonProd - Ericsson product ID if any.
- WL - Currently not applicable.
- Temp - SFP operating temperature.
- Txbs - TX-bias current in mA.
- TXdBm - TX-power in dBm.
- RXdBm - RX-power in dBm.
- BER - Currently not applicable.

### Example

```
>>oris -r 1-2
```

| Id | SWSlot       | ProdCode   | VendorCode | BuildId | Version | Status | AR | Access     |
|----|--------------|------------|------------|---------|---------|--------|----|------------|
| 1  | slot1        | ABC123-10A | SS         | 1       | 1.0     | VALID  | 00 | READ_WRITE |
| 1  | default_slot | ABC123-10A | SS         | 1       | 1.0     | VALID  | 11 | READ_ONLY  |
| 2  | slot1        | ABC123-10A | SS         | 1       | 1.0     | VALID  | 00 | READ_WRITE |
| 2  | default_slot | ABC123-10A | SS         | 1       | 1.0     | VALID  | 11 | READ_ONLY  |

#### 4.2.34 ors[vdiacp] [-r <radios>]

Open-Radio SW upgrade.

### Options

- v: Validate software package.
- d: Download software package
- i: Install software package.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- a: Activate software package.
- p: Poll until O-RU ENABLED after activation.
- c: Show tables in CSV format.

### Flags

- r: Which ORadio where PM objects are created. Eg. -r 1-3 for ORadio with Id 1,2 and 3 (see orx), -r 1,3 for ORadio with Id 1 and 3. Default is for all ORadios

Detailed description of the options with examples:

#### orsv [-r <radios>] <manifest file>

Validate the software package by comparing the manifest.xml with the software inventory. The call passes silently if no Errors. Otherwise fails with possible Errors:

If not possible to read the manifest file. Recommended action: Verify path to manifest.xml

```
> Error! Manifest file does not exist.
```

If the product cannot be verified. Recommended action: Run oris to troubleshoot parameters.

```
> Error! SW validation failed on RU_1! Product, vendor or build-id does not match
```

Version number is not higher than current version. New software cannot be installed. Recommended action: Run invs to verify current software version.

```
> Error! SW validation failed on RU_1! Software version must be newer than the current version.
```

In case the -r flag is used, it will run for specific radios (see orx) otherwise it will run for all radios. Examples:

- orsv -r 1-3 /home/user/manifest.xml → Run software validation for ORadio 1 to 3.
- orsv -r 2,5 /home/user/manifest.xml → Run software validation for ORadio 2 and 5.

#### orsd [-r <radios>] user@host/path [<password>]

Download ORadio software. Password is optional, prompts for password if no password is given.

If the password will be entered on the command line, it is recommended to encrypt it, using the "encpw" command.

If a COMPLETED notification is received. >Download completed.

If the RU returns a FAILED RPC reply on download request. Recommended action: see detailed error message from RU.

```
>Failed to start download.
```

If a notification is received and status is not completed. Recommended action: See detailed error message from RU.

```
>Software operation failed with status "status"
```

```
>Failed to complete download.
```

If another error occurs. This will normally be followed by an error message. Recommended action: Read detailed error message.

```
>Error occurred during software download.
```

When the download process is completed, the result is listed in a table.

Columns:

- Id - Id for the RU given from orx.
- Status - Final Status of the installation.
- Filename - Name of the downloaded file.
- ErrorMessage - Error message from the RU if any.

In case the -r flag is used, it will run for specific radios (see orx) otherwise it will run for all radios. Examples:

- orsd -r 1-3 sftp://user@host.domain:/home/user/up.sw → Run software install for ORadio 1 to 3.
- orsd -r 2,5 sftp://user@host.domain:/home/user/up.sw → Run software install for ORadio 2 and 5.

#### orsi [-r <radios>] <filename> [<slot>]

Install software on ORadio. Slot is optional. If not given, the first available slot will be selected.

If a COMPLETED notification is received. >Installation completed.

If the RU returns a FAILED RPC reply on install request. Recommended action: see detailed error message from RU.

```
>Failed to start installation.
```

If a notification is received and status is not completed. Recommended action: See detailed error message from RU.



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

```
>Software operation failed with status "status"
>Failed to complete installation.
```

If another error occurs. This will normally be followed by an error message. Recommended action: Read detailed error message.  
>Error occurred during software installation.

When the install operation is completed the result is listed in a table:

Columns:

- Id - Id for the RU given from orx.
- Status - Final Status of the installation.
- Slot - Slot where the installation was performed.
- SwVersion - SwVersion of the installed SW.
- ErrorMessage - Error message from the RU if any.

In case the -r flag is used, it will run for specific radios (see orx) otherwise it will run for all radios. Examples:

- `orsi -r 1-3 up.sw` → Run software install for ORadio 1 to 3 to the first available slot.
- `orsi -r 2,5 up.sw slot1` → Run software install for ORadio 2 and 5 in slot1.

#### **orsa [-r <radios>] [<slot>]**

Activate ORadio software. If activation is completed, the RU will be restarted. Slot is optional. If not given, the first available slot will be selected.

If a COMPLETED notification is received. >Activation completed.

If the RU returns a FAILED RPC reply on activation request. Recommended action: see detailed error message from RU.  
>Failed to start activation.

If a notification is received and status is not completed. Recommended action: See detailed error message from RU.

```
>Software operation failed with status "status"
>Failed to complete activation.
```

If another error occurs. This will normally be followed by an error message. Recommended action: Read detailed error message.  
>Error occurred during software activation.

Restart failed or node does not come back up after restart. >Restart failed after Activation.

When the activation operation is completed the result is listed in a table:

Columns:

- Id - Id for the RU given from orx.
- Status - Final Status of the activation.
- Slot - Slot which was activated.
- SwVersion - SwVersion of the activated SW.
- RunningSw - Software running on the O-RU after restart. This will only show if the p option is used.
- ErrorMessage - Error message from the RU if any.

#### **4.2.35 orf[elptb] [-r <radios>] [directory]**

Open-Radio File Management.

It is possible to list all files in the standardized xRAN/O-RAN directories with the flags [lptb], or use the directory option to list files in non-standardized directories. With the e option it is possible to request the RU to upload files. This can be done according to normal procedures.

##### **Options**

- e: Export files.
- l: Select the xRAN/log directory.
- p: Select the xRAN/PM directory.
- t: Select the xRAN/transceiver directory.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- b: Select the xRAN/beamforming directory.

Note: when run from AMOS toward Samsung radios the orfet command works only if AMOS was started with the option  
-v amos\_enm\_accountlookup=0

The export option may give the following error messages.

If receiving a FAILURE RPC reply >Error: unable to start upload due to cause "errcause"

If receiving a FAILURE notification >Error: unable to finish upload due to cause "errcause"

If an unexpected Error occur the call will fail with relevant error message.

Example: export single file from ORadio with Id 1 (see orx)

```
>> ore -r 1 xRAN/PM/C201805181300+0900_201805181330+0900_ABC0123456.csv
```

```
=====
Id Result Files
=====
1 OK xRAN/PM/C201805181300+0900_201805181330+0900_ABC0123456.csv
=====
```

Example: List PM files for radio with Id 1 (see orx)

```
>> orfp -r 1
Id Files
1 xRAN/PM/C201805181300+0900_201805181330+0900_ABC0123456.csv
```

#### 4.2.36 ort[se] -r <radio>

Open-Radio troubleshooting

Options:

- s: Start troubleshooting.
- e: End troubleshooting.

Troubleshooting can be run on single ORadio. When the troubleshooting is start it will pass or fail with the following messages:

If RPC reply is SUCCESS >Troubleshooting started...

If RPC reply is FAILURE >Error: Unable to start troubleshooting due to "errcause"

Fails with proper error message for unexpected errors.

When troubleshooting is stopped it will hold wait until all troubleshooting logs are generated and list them in a table. If troubleshooting fails it will fail with the message 'Error: Unable to stop troubleshooting due to "errcause"

Example: stop troubleshooting on radio with Id 1 (see orx)

```
> ort e -r 1}
```

```
Troubleshooting stopped. Wait for troubleshooting logs to generate.
```

```
=====
Troubleshooting logs generated
=====
```

```
log1_name
log2_name
=====
```

#### 4.2.37 orp[cdeirstux]

Open-Radio Performance Monitoring.

The ORadio variant of the Ericsson counters are called measurement-objects. Compared to the Ericsson counter structure, where each MO Object have a set of counters, the ORadio will have a set of measurement-objects tied to specific object-units. An object-unit then determines where the measurement-objects will do measurements. These will then have a set of parameters which they will measure.

Available measurement-objects on the tranceiver are:

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- RX\_POWER
- TX\_POWER
- TX\_BIAS\_COUNT
- VOLTAGE
- TEMPERATURE

With report options: MAXIMUM, MINIMUM, FIRST, LAST, FREQUENCY TABLE.

Available measurement-objects for rx-window measurements are:

- RX\_ON\_TIME
- RX\_EARLY
- RX\_LATE
- RX\_CORRUPT
- RX\_DUPL
- RX\_TOTAL

The objects which may be measured on are RU, TRANSPORT, EAXC\_ID. The rx-window PM measurement-objects will count the number of events.

According to xRAN and O-RAN 1.0 measurement-objects need to be activated and automatic upload must be configured before PM data will be generated.

Options:

- i: Set PM intervals (only for orpu).
- c: create measurement-object, or csv format. The measurement-object argument is mandatory, unless switches t,x are used. If used with orpl, orpc will show the list in csv format.
- d: delete measurement-object. The measurement-object argument is mandatory, unless switches t,x are used. If used with the u, option (orpu) it will instead delete an upload server.
- s: Start/activate measurement-object. The measurement-object argument is optional. If used after u, it will instead start/enable automatic upload. Also possible to use with orpc.
- e: End/deactivate measurement-object. The measurement-object argument is optional. If used after u, it will instead stop/disable automatic upload
- u: PM file upload.
- r: Enable random file upload. Only works if used after u.
- l: List measurement-objects.
- x: Create or delete all rx-window measurement-objects.
- t: Create or delete all transceiver measurement-objects.

Flags:

- -r <Radios> : Which ORadio to operate. Eg. -r 1-3 for ORadio with Id 1,2 and 3 (see orx), -r 1,3 for ORadio with Id 1 and 3. Default is for all ORadios
- -x <rx-window-measurement-interval>: set transceiver-measurement-interval (only for orpi)
- -t <transceiver-measurement-interval>: set rx-window-measurement-interval (only for orpi)
- -o <object-unit>: Set object-unit when creating measurement-objects. Default is PORT\_NUMBER for transceiver-measurement-objects and RU for rx-window-measurement-objects.
- -f <bin:min\_bin:max\_bin>: Set bin data for enabling FREQUENCY\_TABLE ReportInfo, when creating measurement-objects. The format is as this 4,0.2,3.6 (nbr-of-bins,min-bin,max-bin).
- -i <file-upload-interval>: set PM file upload interval for automatic upload. Only works if used with the u option.

Example:

```
>> orpl -r 1
```

```
=====
Id Type MeasObj ObjUnit Active FreqTableData ReportInfo
=====
1 Transceiver RX_POWER PORT_NUMBER true 4:0.2:3.0 FREQUENCY_TABLE,MINIMUM,FIRST,LATEST,MA
```

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

When creating a new measurement-object, the old measurement-object with the same name will be deleted prior to creating a new one. By default all ReportInfo data will be available except for FREQUENCY\_TABLE. It is only possible to measure on one object-unit at the time.

Example:

- `orpc -o PORT_NUMBER -f 5,0.2,3.6 RX_POWER` → Create a new transceiver-measurement-object with all ReportInfo, including FREQUENCY\_TABLE
- `orpi -x 300 -t 300` → Set transceiver-measurement-interval and rx-window-measurement-interval for all ORadios to 300 seconds.
- `orpd -r 1 RX_POWER` → Delete RX\_POWER measurement-object on ORadio with id 1.
- `orps -t 300 -x 300` → Start all measurement-objects on all ORadios and set measurement intervals to 300 seconds.
- `orpe` → End all measurement-objects on all Radios.
- `orpus sftp://user@host:/upload/path secret` → Configure upload SFTP server and enable automatic upload of PM data.
- `orpus sftp://user@host:/upload/path` → Configure upload SFTP server with prompt for password and enable automatic upload of PM data.
- `orpu sftp://user@host:/upload/path` → Delete SFTP server
- `orpcts` → Create all supported transceiver measurement-objects and start them.
- `orpctxs` → Create all supported measurement-objects and start them.

## 4.3 Other commands

### 4.3.1 `uv [<string>|<var>=value]`

Display or change moshell configuration settings (also called "user variables").

The `uv` command used without any argument displays the values of all user variables that are usually specified in the **moshell** file and/or the `~/.moshellrc`. See Section 2.5 and **moshell** file for more info about the functionality of these variables.

If a string is given as argument, then only the variables matching the string will be displayed.

The `uv` command also allows to change a variable's value from within the moshell session.

For instance, if the variable `secure_shell` is set to 0 in the `~/.moshellrc`, it will be possible to run an moshell session in secure shell mode by just typing `uv secure_shell=1` at the moshell prompt. From that point on, all node connections that would have been performed using telnet will be performed using ssh.

Example:

1. `uv` - to print all variables
2. `uv sec` - to print all variables matching the string "sec"
3. `uv secure_shell=1` - to change a variable

Similar to the `get` command, it is possible to store the output of this command into a variable

Example:

```
uv ^credential > $credential
```

### 4.3.2 `pv [<string>]`

To print all scripting variables or just those matching the `<string>`.

For example:

- `pv` print all scripting variables and their current value
- `pv ver` just print the scripting variables whose name match `ver`

The number of variables printed is saved to the variable `$nr_of_vars`. Please refer to the "scripting" chapter for how to set a variable.

Note: To print a variable it is also possible to do: `l echo $variable`

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

#### 4.3.3 !/ <unix-command>

Execute a unix command on the PC/workstation

Either the `!` or `l` can be used.

##### Examples:

1. `l pwd` (or the alias `lpwd`) - to know the current unix working directory
2. `l cd scripts/rbs3` (or the alias `lcd`) - to change the current working directory
3. `! less define_sectors.mo` - to view the command file that is about to run
4. `! vi define_sectors.mo` - to make a modification in the command file

##### Note:

- unix commands that are called with `!` are never logged
- unix commands that are called with `l` are logged if the user has started the logging with `l+`

#### 4.3.4 l+[m][m][s][o]/l-[s]/l? [<logfile>]

Open/close moshell logfiles.

- `l+` is to *open a logfile*. If no logfile is given, then a default unique logfile is chosen.

The path of the default logfile is:

`~/moshell_logfiles/logs_moshell/sessionlog/<DATE>_<NODE>.log`

The `m` option is for *mute*, i.e.: no output will be displayed on the screen until the log is closed. All output will go to the logfile.

(the `mm` option is for extra mute, even less will be displayed on screen than with `l+m`).

The `s` option is for not printing the header "log open". Can also be set with the `loginfo_print` user variable.

The `o` option is for overwriting the logfile, otherwise it is appended.

- `l-` is for closing the logfile.

The `s` option is for not printing the header "log close". Can also be set with the `loginfo_print` user variable.

- `l?` is for checking if a logfile is currently open.

It is possible to open several logfiles but only one at a time will be active. When one logfile is closed, logging will resume in the previous one. Examples:

```
l+ logfile1 #starts logging to logfile1, $logfile set to "logfile1"
get
pr
l+ logfile2 #stops logging to logfile1 and starts logging to logfile2
 #$logfile is set to "logfile2"
vii
l- #stops logging to logfile2 and resumes logging to logfile1
 #$logfile set to "logfile1"
vols
l- #stops logging to logfile1, $logfile stays set to "logfile1"
```

In this example, **logfile1** will contain the printouts from `get`, `pr` and `vols`, while **logfile2** will contain the printout from `vii`.

#### 4.3.5 dbc[s][a] [<cvname>|<dbdat-file>|<cvzip-file>|<mobatch-folder>]

Database consistency check

##### Purpose

When there are inconsistencies in the SQL database, it can lead to problems such as traffic performance degradation, upgrade failures, or cyclic restarts. Often the symptoms appear only after the next node restart or upgrade so it is not easy to know since how long the data has been corrupted and how far back we should rollback to find a non-corrupted CV. Therefore it is a useful preventative measure to regularly perform a database consistency check.

Please refer to RAN PLM info 662, 664, 808, 914, 941, for more details on the different types of corruptions and possible remedies.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

### Command argument

When the command is run on its own without option nor argument, it will make a CV (cvmk), fetch the db.dat file (ftget), remove the cv (cvrm), then analyse the db.dat on the workstation and look for corruptions.

The argument (optional) can either be:

- the name of the CV to fetch and process.
- the path to a db.dat file, cv.zip, or dbdump.zip that has been fetched previously and is located on the workstation.
- the path of a folder containing logs of the dbc printout run from mobatch ("a" option).

### Command options

- s (dbcs): to fetch and check the startable CV. Only applicable in online mode.
- a (dbca): to analyse existing dbc logs, taken with mobatch from many nodes or db.dat files. The dbca command combines the multiple dbc printouts into one single dbc printout showing all exceptions found in the different nodes or db.dat files.

### Running a consistency check on the whole network

- If the db.dat, cv.zip, or dbdump.zip files have already been collected, it is possible to audit them all in parallel with mobatch. The syntax is:

```
mobatch [-r] -d /path/to/folder dbc
```

In this case mobatch will run the moshell sessions in sql mode against the files instead of against the nodes.

The first argument must specify the path to the folder containing the db.dat, cv.zip, or dbdump.zip files.

The `-r` option is for recursive search in the folder, otherwise only the files directly under the folder are examined.

- If the dbdat/cvzip files have not previously been collected, it is possible to run : `mobatch /path/to/sitefile dbc`  
In this case mobatch will run the moshell sessions in online mode against each node specified in the sitefile and audit the current CV.

### Background info

The configuration data of the node is kept in a SQL database in RAM memory on the central MP and can be backed up on disk (/d/configuration/cv) for permanent storage. The main purpose of the database is to store the persistent data of the MOs. An MO is made of up to three layers:

- the MAO layer (Management Adaption Object)
- the FRO layer (Facade Resource Object)
- the RO layer (Resource Object)

An MO always consists of one MAO. There is a one to one relation between the MO and its MAO.

Underneath the MAO there can be one or more FROs, or in some cases no FRO. Examples: The SwAllocation MO consists only of a MAO without FRO/RO. The Mtp3bSpltu MO consists of one MAO and one FRO/RO. The Aal2PathVccTp MO consists of one MAO and two FROs/ROs. The FROs are used for controlling the actual resources, the ROs.

The MAOs and FROs use separate SQL tables for data storage. The ROs do not store any persistent data as this is handled by FRO.

The MAOs keep their persistent data in the SQL table `modata_r2` or `modata_r3`. For the FROs, there is a separate table for each MO class. For instance the FROs of PlugInUnit MOs use the table `cspiuresource`, the FROs of Program MOs use the table `cspgmresource`, etc.

### Printout example and comments

Important to keep in mind: the same fault can have appear in several of the checks below. For instance, an MO which has not been correctly deleted from the node could result in corruption shown in checks 8, 12, 13. A UtranRelation with incorrect frequencyRelationType will result in corruption shown in checks 17 and 18. Usually when the same fault appears in several checks, the fault that is higher up in the list is the one that should be fixed first.

-----

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

1) MAOs with non-recommended characters in the MAO name  
(recommended range: -\_/.A-Za-z0-9!%:\*): YES  
2039 TransportNetwork=1,AtmTrafficDescriptor=UBR+\_230\_QoS3 MAO name: UBR+\_230\_QoS3  
5642 RncFunction=1,IubLink=iub 45 MAO name: iub 45

\*\*\*\*\* Comment \*\*\*\*\*

The MOs above contain a "+" and space sign in their MO id. These characters are not known to have a system impact on the node but it is not recommended to use them as they may not be handled properly by the O&M client (moshell/AMOS/OSSRC). Having MOs in this list will give the result "OK with warnings". MOs can be renamed by using the "rset" command.

-----  
2) MAOs with dangerous characters in the MAO name \,=^"|'Â (HL11572/UABtr75948): YES  
5631 TransportNetwork=1,Aal2PathVccTp=TransportNetwork=1,Aal2PathVccTp=88  
MAO name: TransportNetwork=1,Aal2PathVccTp=88

\*\*\*\*\* Comment \*\*\*\*\*

The MO above contains strictly forbidden characters in the MO id: "," and "=". Using these characters can cause cyclic node restarts, see TR HL11572/UABtr75948.

-----  
3) MAOs without FROs: YES  
3321 Aal2PathVccTp=Iuc-2300-2351-7-95 : aal2pathepfroid=5  
not found in table aal2pathepfrotable\_6  
5644 IubLink=503 : theclientsuniqueid=33  
not found in table roamfroIublinkdbtable\_09

\*\*\*\*\* Comment \*\*\*\*\*

Here we have some MOs where the MAO is pointing to a non-existing FRO. Start moshell in sql mode towards the db.dat file (moshell -d /path/to/db.dat) and run the "get" command on these MOs. For instance, the "get" command will show that the IubLink MO has frold value 33 but when looking in the corresponding FRO table roamfroIublinkdbtable\_09 with "sql select" command, we will see that there is no entry with this id.

-----  
4) FROs without MAOs: YES  
theclientsuniqueid=198 in roamfroexternalgsmcelldbtable\_06 (ExternalGsmCell)

\*\*\*\*\* Comment \*\*\*\*\*

Here we have the reverse situation than above. There is no entry in the MAO table which has a frold pointing to this FRO. We can run the command "fro externalgsmcell" to print the frold value of all MAO instances and we will see that none has the frold 198.

-----  
5) MAOs with duplicate LDN: YES  
13 SystemFunctions=1,Licensing=1 (known issue: TR UABtr63243 - no impact)  
65 SystemFunctions=1,Licensing=1 (known issue: TR UABtr63243 - no impact)  
85 SystemFunctions=1,Licensing=1 (known issue: TR UABtr63243 - no impact)

\*\*\*\*\* Comment \*\*\*\*\*

This indicates that there are several entries in the table modata\_r2 which refer to the same MAO. Sometimes this can be a problem, especially if the MAO is connected to a FRO. In this case, Licensing MO is made only of a MAO layer so no FRO are affected. This particular problem is known in CPP5/PP6 and fixed in CPP7. It has no system impact.

-----  
6) MAOs with duplicate frold: YES  
3440 IubLink=Iub-11 frold=30  
3443 IubLink=Iub-22 frold=30

\*\*\*\*\* Comment \*\*\*\*\*

Here we have two different MAOs that point to the same FRO, this is not allowed since a FRO can only be connected to one MAO. We could check this by starting moshell in sql mode and running the "get" or "fro" command on these MOs to print the frold.

-----  
7) Mismatch between number of MAO and FRO instances: YES  
Aal2PathVccTp : 21 MAOs, 41 FROs  
(For Aal2PathVccTp, there should be 2 FROs per MAO).  
ExternalGsmCell : 1133 MAOs, 1134 FROs  
IubLink : 33 MAOs, 32 FROs

\*\*\*\*\* Comment \*\*\*\*\*

This check is a summary of issues found in points 3,4,5,6. We count the number of MAO and FRO instances for each MO class and show those where there is a mismatch. The faulty MO instances can be found in one of the previous four checks.

-----  
8) MAOs referring to non-existent MAOs: YES  
429 Subrack=MS reservedBy RncFunction=1,IubLink=80  
1709 RncModule=1 reservedBy RncFunction=1,IubLink=80



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

## \*\*\*\*\* Comment \*\*\*\*\*

This indicates that some MOs have a reference to an MO that does not exist on the node. This can happen when a MO is deleted from the node, sometimes the system fails to remove it from reference attributes pointing to it. In example above, the reservedBy attribute of some MOs did not get updated properly when the MO lubLink=80 was deleted from the node.

```

 9) MAOs defined under a different parent than FRO: YES
3441 IubLink=Iub-11,NodeSynch=1 maoParent: IubLink=Iub-11 (30)
 froParent: 30 (IubLink=Iub-11 IubLink=Iub-22)
3444 IubLink=Iub-22,NodeSynch=1 maoParent: IubLink=Iub-22 (30)
 froParent: 31 ()
3568 UtranCell=Iub-54-1,UtranRelation=9875a maoParent: UtranCell=Iub-54-1 (145)
 froParent: 223 (UtranCell=Iub-57-2)
```

## \*\*\*\*\* Comment \*\*\*\*\*

The MAO knows its parent from the LDN. In some cases, the parent address is also stored in FRO by an attribute giving the froid of the parent MO in the MO tree. This check shows if the parent reference stored in MAO is different to the parent reference stored in FRO.

In the first example, the discrepancy is due to the fact that two MAOs have the same froid (problem highlighted in check 6), this issue has a repercussion here since the children of this MO do not know which of the two MOs with froid 30 are the parent. In the second example, we see the froid of the parent points to a FRO that either does not exist or is not connected to any MAO. In the third example, we see that the froid of the parent points to a different MO than the one given in the LDN by MAO. Note: the number in brackets next to the LDN is the froid of that MAO.

```

10) Inconsistent MO references between MAO and FRO: YES
3443 IubLink=Iub-22 sctpRef: Sctp=MS-15 (3) sctpfroid: 2 (Sctp=MS-14)
4135 UtranCell=Iub-11-1 iubLinkRef: IubLink=Iub-11 (30)
 iublinkfroid: 30 (IubLink=Iub-11 IubLink=Iub-22)
5789 UtranCell=U30717,UtranRelation=U05938
 utranCellRef: IurLink=rncka62,ExternalUtranCell=U05938 (1743)
 nutrancellfroid: 1999 ()
2406 IpAccessHostPool=Iub
 ipAccessHostRef: IpAccessHostEt=ES1-27 IpAccessHostEt=MS-26 IpAccessHostEt=MS-7
 ipaccesshostfroid: IpAccessHostEt=ES1-02 IpAccessHostEt=ES1-27 IpAccessHostEt=MS-26
```

## \*\*\*\*\* Comment \*\*\*\*\*

MO references are sometimes kept in MAO or FRO only, but sometimes they are kept in both parts. It is important that an MO reference kept both in MAO and FRO should be the same in both.

In the first example, the MO has a reference stored in MAO which is different to the one stored in FRO. In the second example, the reference stored in FRO points to two different MAOs, this is due to the problem highlighted in check 6 with duplicated froid.

In the third example, the FRO reference points to a FRO that either does not exist or does not have a MAO. In the fourth example, the list of MO references is different in the MAO attribute ipAccessHostRef compared to the FRO attribute ipaccesshostfroid Note: the number in brackets next to the LDN is the froid of that MAO.

```

11) MAOs missing from reservedBy list: YES
2401 IubLink=Iub-1226 sctpRef Sctp=MS-15 reservedBy
```

## \*\*\*\*\* Comment \*\*\*\*\*

This check indicates that the MO on the left has a reference to the MO on the right (via the attribute stated in the middle) but does not appear in the reservedBy list of the MO on the right. To check this we start moshell in sql mode (moshell -d dbdat/cvzip) and perform the get command on the MO on the right and we see that the MO on the left cannot be found in the reservedBy list even though it has a reference to that MO. This is a one-way relation between the MOs and is a fault.

```

12) MAOs found only in reservedBy list: YES
 858 RncModule=11 reservedBy IubLink=Iub-198
```

## \*\*\*\*\* Comment \*\*\*\*\*

This is the opposite problem than the previous check. It indicates that the MO on the right (in this case the lubLink) appears in the reservedBy list of the MO on the left, even though it has no reference to that MO. To check this we start moshell in sql mode (moshell -d dbdat/cvzip) and perform the get command on the MO on the right. We will see no attribute containing any reference to the MO on the left. When we do the get command on the MO on the left we see that the MO on the right appears in the reservedBy list anyway. This is a one-way relation between the MOs and is a fault.

```

13) Inconsistent sequence of moRefs in MAO: YES
1003 SectorAntenna=1,AuxPlugInUnit=RRU-1 persistentReservers: 5, actual: 7
```

## \*\*\*\*\* Comment \*\*\*\*\*

This check applies to MAO attributes of type sequence:moRef. It indicates if there is a discrepancy between the announced number of MO references in the attribute (shown at the beginning of the attribute value, in square brackets, eg: [5]), and the actual number of MOs listed in the attribute. In the example above, the attribute is supposed to be a sequence of 5 MOs but in fact it contains 7 MOs. To check, start moshell in sql mode and perform the "get" command on the MO.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

```

14) FROs referring to non-existent FROs (CSR1473974): YES
6513 SpDevicePool=DcDevice,DcDevice=1 subrackfroid 9 ()
6494 RncModule=13 piufroid 45 ()
```

\*\*\*\*\* Comment \*\*\*\*\*

This check shows the FROs that have a reference to a FRO that does not exist on the node. Only MOs which have not already been displayed in check number 10 will be displayed here. To find out the faulty FRO table and row, start moshell in sql mode and perform the "get" command on the MO.

```

15) Remaining old FRO table versions (HL93894/WRNae89948/HM76376/HS48645/HR63086): YES
cspgmresource_03 (current): cspgmresource_02 (old)
csxpresource_01 (current): csxpresource (old)
ecnprsectordata_4 (current): ecnprsectordata_3, ecnprsectordata_2, ecnprsectordata_1 (old)
```

\*\*\*\*\* Comment \*\*\*\*\*

This check shows the FRO tables which exist in multiple versions: the latest table version is shown on the left-hand side, and the list of old table versions is shown on the right-hand side. The old table versions should normally be removed at system upgrade.

```

16) Corrupted MAO entries in modata table: YES
3280 Aal2QosProfile=adoffbdooff reservedBy incorrect nrOfElements:
qF3||rF1=1,5=1,141=aal2pathvcctp=99||rF1=1,5=1,141=TransportNetwork=1,141=88|rF1=1,5=1,141=TransportNetwork=1,169=8
```

\*\*\*\*\* Comment \*\*\*\*\* This check looks at the syntax of the attribute data of the MAOs listed in the modata\_r2/modata\_r3 table. Any corrupted attribute data will be shown as an exception in the get printout for that MO. The correct syntax of each entry should be: MoType^Revision^LDN^PrimaryKey^attributeName^attributeData^ And the syntax of the attribute data should be: dataType AVCflag Data . With:

```
dataType: s=String, r=Reference, t=Struct, f=Float, q=Sequence,
 i=Integer, l=Long, b=Boolean
AVCflag: T=isAVCNotifier , F=notAVCNotifier
Sequence: dataType AVCflag noOfElements|attributeName|attributeData|....
Struct: dataType AVCflag noOfElements attributeName attributeData
```

```

17) MAOs without parent: YES
14498 AtmPort=ES-1-2-1-ima55,VplTp=vpl,VpcTp=1 missingParent: AtmPort=ES-1-2-1-ima55,VplTp=vpl
```

\*\*\*\*\* Comment \*\*\*\*\*

This check reports the list of MAOs whose parent does not have an entry in the modata\_r2/modata\_r3 table.

```

18) MAOs with invalid froId: YES
22458 Subrack=ES-2,Slot=21,PlugInUnit=1,GeneralProcessorUnit=1,LoadControl=1 froId=
22485 Subrack=ES-2,Slot=20,PlugInUnit=1,GeneralProcessorUnit=1,LoadControl=1 froId=
```

\*\*\*\*\* Comment \*\*\*\*\*

This check reports the list of MAOs that have a invalid FRO id, e.g. empty value instead of integer.

```

19) Instance-based PM Scanners containing missing MO instances (HR95951/CSR2375943/CSR2375969/ER690205): YES
533 USERDEF.RNC_CNHH_RNC71_3.Profile=982.Continuous=Y.STATS missing MO instances:
 UtranCell=BU317L,UtranRelation=BU980L
536 USERDEF.RNC_CNHH_RNC71_4.Profile=983.Continuous=Y.STATS missing MO instances:
 UtranCell=BU530L,UtranRelation=BU279L
 UtranCell=BU530L2,UtranRelation=BU279L2
624 USERDEF.RNC_CNHH_RNC71_2.Profile=981.Continuous=Y.STATS missing MO instances:
 UtranCell=BU279M,UtranRelation=BU279N
 UtranCell=BU279K,UtranRelation=BU279N
 UtranCell=BU279L,UtranRelation=BU279N
 UtranCell=BU279L,UtranRelation=BU530L
 UtranCell=BU279M2,UtranRelation=BU279N
 UtranCell=BU279L2,UtranRelation=BU279N
 UtranCell=BU279L2,UtranRelation=BU530L2
```

\*\*\*\*\* Comment \*\*\*\*\*

This check reports the list of Instance-based PM scanners that contain MO instances which don't exist anymore in the node. Any such scanners should be deleted and replaced with Class-based scanners or Instance-based scanners containing existing MO instances. The scanners can be printed in dbdat mode with pst/pgets. Refer to TR HR95951 or PLM info 914 for more info.

```

20) Instance-based PM Scanners containing more than 1000 MO instances (HR95951/CSR2375943/CSR2375969/ER690205): YES
533 USERDEF.RNC_CNHH_RNC71_3.Profile=982.Continuous=Y.STATS number of MO instances: 10118
536 USERDEF.RNC_CNHH_RNC71_4.Profile=983.Continuous=Y.STATS number of MO instances: 10271
624 USERDEF.RNC_CNHH_RNC71_2.Profile=981.Continuous=Y.STATS number of MO instances: 10602
627 USERDEF.RNC_CNHH_RNC71_1.Profile=881.Continuous=Y.STATS number of MO instances: 10892
```

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

## \*\*\*\*\* Comment \*\*\*\*\*

This check reports the list of instance-based PM scanners that contain more than 1000 MO instances. It is recommended to replace these scanners with Class-based scanners due to impact on the node JVM performance. The scanners can be printed in dbdat mode with pst/pgets. Refer to TR HR95951 or PLM info 914 for more info.

-----  
21) Jvm admClassPath containing LoadModules not part of the current UpgradePackage (CSR2447811): YES

7 Jvm=1 incorrect LMs in admClassPath: CXC1720482\_R73D61 CXC1727628/2\_R5X02 CXC1726723\_R73D03 CXC1725907\_R73D62

## \*\*\*\*\* Comment \*\*\*\*\*

This check reports if the Jvm admClassPath contains any LMs that are not listed in the current UpgradePackage (attribute: ConfigurationVersion::currentUpgradePackage::loadModuleList)

-----  
22) Missing FRO tables: YES

dnsclient (IpOam)  
httpsdb (WebServer)

## \*\*\*\*\* Comment \*\*\*\*\*

This check reports if there are MAO instances where the corresponding FRO table is missing. The output shows the name of the missing FRO table and the corresponding MO class. This is a complement to check 3 which detects MAO instances where the FRO entry is missing from the FRO table but does not detect cases where the whole FRO table is missing.

-----  
101) FRO attributes containing the froId field but not the ldn field (HR88263): YES

1867 EUltraNetwork=1,ExternalENodeBFunction=5051-530675,ExternalEUTranCellFDD=5051-530675-2 parentref,eutranfrequenc  
1868 EUTranCellFDD=SHBDEM2,EUTranFreqRelation=1275,EUTranCellRelation=5051-530675-2 parentref,neighborcellref

## \*\*\*\*\* Comment \*\*\*\*\*

This check is specific for RBS/ERBS only and does not appear in other node types (RNC/MGW). This check shows if there are any attributes containing the text "<attr name='frold'" but not the text "<attr name='ldn'".

-----  
101) MTP3 pointCode collision (WRNae82362, SCS695737): YES

Point code 13749348 used by Mtp3bSpAnsi=1 and Mtp3bSpAnsi=1,Mtp3bSrs=r821s

## \*\*\*\*\* Comment \*\*\*\*\*

This check is specific for RNC/MGW nodes only and does not appear in other node types (RXI/RBS).

This check shows if there are any MTP3 routes that use the same destinationPointCode as the node's own point code. To check this, start moshell in sql mode and run the "get" command on both MOs listed to crosscheck that the pointcode is the same. The fault is described in TR WRNae82362.

-----  
102) Number of Fans mismatch (CSR 2101402/HQ64197): YES

23 Equipment=1,Subrack=MS nrOfFans: 4 nr\_denib: 2

## \*\*\*\*\* Comment \*\*\*\*\*

This check is specific for RNC/MGW nodes only and does not appear in other node types (RXI/RBS).

In addition, it only applies to the nodes that use Subracks with fanConfiguration BFD528, eg. RNC3820, MGW GMPv4.

The purpose is to check if the number of Fan MOs defined under each Subrack is the same as the number of fans specified in the attribute numberOfDenibDevices (if >0) or in the attribute Subrack::subrackProdType::fanConfiguration (if numberofDenibDevices <0).

-----  
103) Inconsistency in UtranRelation nodeRelationType or frequencyRelationType  
(HP94489/WRNae68940/WRNae72810): YES

5596 UtranCell=Iub-10-1,UtranRelation=Softer-Iub-10-3 nodeRelationType: 1,  
actual: 0 (cellRef:UtranCell=Iub-10-3)

22205 UtranCell=U31618,UtranRelation=U31477 frequencyRelationType: 1,  
actual: 0 (f1=f2=1007)

37068 UtranCell=85276B,UtranRelation=1 frequencyRelationType: 0,  
actual: 1 (f1=10737, f2=10713)

## \*\*\*\*\* Comment \*\*\*\*\*

This check is specific for RNC only and does not appear in other node types. It is only for MO instances of type "UtranRelation" and cross-checks the value of the attributes nodeRelationType and frequencyRelationType against the real setting.

The first UtranRelation in the example has nodeRelationType set to 1 (Inter-RNC, meaning it is supposed to be a relation to an ExternalUtranCell) but the cellReference to which it is pointing to is an internal UtranCell, so it should actually have the nodeRelationType 0 instead of 1.

The second UtranRelation MOs in the example has a discrepancy in the frequencyRelationType which is set to 1 (Inter-frequency) whereas the originating Cell and destination Cell have the same frequency, so it should actually be 0 (Intra-frequency). The third UtranRelation is the opposite scenario where the frequency of the originating Cell and destination Cell are different but the frequencyRelationType is set to 0 (Intra-frequency).

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

```

104) Inconsistency in UtranCell interFreqRelCntr or intraFreqRelCntr
 (HP94489/WRNae68940/WRNae72810): YES
 364 UtranCell=85162B intraFreqRelCntr: 27, actual: 28 (by frequencyRelationType and uarfcnDl)
 364 UtranCell=85162B interFreqRelCntr: 1, actual: 0 (by frequencyRelationType and uarfcnDl)
 680 UtranCell=85276B intraFreqRelCntr: 25, actual: 24 (by uarfcnDl)
 680 UtranCell=85276B interFreqRelCntr: 0, actual: 1 (by uarfcnDl)
```

\*\*\*\*\* Comment \*\*\*\*\*

This check is specific for RNC only and does not appear in other node types. It is only for MO instances of type "UtranCell" and cross-checks the value of the attributes intraFreqRelCntr and interFreqRelCntr against the real setting. The real setting is checked by checking the frequencyRelationType of the UtranRelations defined underneath the UtranCell. Both the frequencyRelationType attribute and the real frequencyRelationType (found out by looking at the uarfcn of originating and destination cell) are checked.

To check this manually, start moshell in sql mode (moshell -d cvzip/dbdat) and run the command "lget utrancell=xxx cntr/freq.\*type". It will show the value of the cell's freqRelCntr and frequencyRelationType of underlying relations. If they mismatch, the cell is shown as mismatching "by frequencyRelationType and uarfcnDl". If they match but some of the frequencyRelationType settings are incorrect (see previous check 17) then the mismatch will be shown "by uarfcnDl". In the first two lines we can see that the UtranCell 85162B has 27 intra-frequency relations and 1 inter-frequency relations. When we check the frequencyRelationType attribute and the uarfcn of the originating and destination cells, both indicate that this is not correct. It appears that there is actually 28 intra-frequency relations and 0 inter-frequency relations. In the next two lines we can see that the UtranCell 85276B has 26 intra-frequency relations and 0 inter-frequency relations, but in reality there are 24 intra-frequency and 1 inter-frequency. In this case the frequencyRelationType setting of the UtranRelation is misleading and has been flagged in check 15.

```

105) Inconsistency in RncFunction cellRelCntr (HT37388): YES
RncFunction=1 cellRelCntr=21743, nrOfRelations=21410 (1304 CoverageRelation, 6 EutranFreqRelation, 12 GsmRelation, 2
```

\*\*\*\*\* Comment \*\*\*\*\*

This check is specific for RNC only and does not appear in other node types. It checks that the value of the attribute cellRelCntr in the RncFunction MO should be equal to the total number of MO instances of type CoverageRelation+EutranFreqRelation+GsmRelation+UtranRelation. It can be checked manually with the command:

```
prs relation=
```

Note: from W15B onward, this inconsistency can be fixed by running the command

```
facc rncfunction=1 recalculateInternalCounters
```

```

106) Inconsistency in UtranCell gsmRelHoAndCellReselCntr: YES
 5289 UtranCell=U32194C gsmRelHoAndCellReselCntr: 21, actual: 22
 17389 UtranCell=G32105C gsmRelHoAndCellReselCntr: 25, actual: 22
```

\*\*\*\*\* Comment \*\*\*\*\*

This check is specific for RNC only and does not appear in other node types. It checks that the value of the attribute gsmRelHoAndCellReselCntr in each UtranCell MO should be equal to the actual number of children GsmRelation MOs with mobilityRelationType=0. It can be checked manually with the command:

```
get utrancell=xxx,gsmrelation mobilityRelationType ^0
```

Note: from W15B onward, this inconsistency can be fixed by running the command

```
facc utrancell=xxx recalculateInternalCounters
```

```

107) Inconsistency in UtranCell cellReselectionCntr: YES
 2749 UtranCell=32S1C1 cellReselectionCntr: 1, actual: 6
 2753 UtranCell=32S1C2 cellReselectionCntr: 12, actual: 9
```

\*\*\*\*\* Comment \*\*\*\*\*

This check is specific for RNC only (>= W15B) and does not appear in other node types or older SW releases. It checks that the value of the attribute cellReselectionCntr in each UtranCell MO should be equal to the actual number of children UtranRelation MOs with frequencyRelationType=1 and mobilityRelationType=0 or 2. It can be checked manually with the command:

```
hget utrancell=xxx,utranrelation frequencyRelationType|mobilityRelationType 1 ^[02]
```

Note: from W15B onward, this inconsistency can be fixed by running the command

```
facc utrancell=xxx recalculateInternalCounters
```

```

108) Inconsistency in UtranCell handoverOnlyCntr: YES
 2749 UtranCell=32S1C1 handoverOnlyCntr: 12, actual: 9
 2753 UtranCell=32S1C2 handoverOnlyCntr: -4, actual: 2
```

\*\*\*\*\* Comment \*\*\*\*\*

This check is specific for RNC only (>= W15B) and does not appear in other node types or older SW releases. It checks that the value of the attribute handoverOnlyCntr in each UtranCell MO should be equal to the actual number of children UtranRelation MOs with frequencyRelationType=1 and mobilityRelationType=0 or 1. It can be checked manually with the command:

```
hget utrancell=xxx,utranrelation frequencyRelationType|mobilityRelationType 1 ^[01]
```

Note: from W15B onward, this inconsistency can be fixed by running the command

```
facc utrancell=xxx recalculateInternalCounters
```

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

#### 4.3.6 dbd[p] [<cvname>|<dbdat-file>|<cvzip-file>] [<cvname>|<dbdat-file>|<cvzip-file>]

Purpose: To compare the data of two CVs or db.dat files

##### Options:

- **p**: to compare only the Program MOs. For instance, can be used to find out if some Program MOs were accidentally deleted in the executing CV compared to the loaded CV.

##### Arguments:

- the name of the CV to fetch and process.

or:

- the path to a db.dat, cv.zip or dbdump.zip that has been fetched previously and is located on the workstation.

Uservariables:

- **dbd\_exclude\_moclasses** : to exclude certain MO classes from the comparison
- **dbd\_exclude\_attributes** : to exclude certain attributes from the comparison

##### Examples:

- `dbd Rb_CXP9021775_R1BF04_121217_2155 Fi_CXP9021775_R1BF04_121217_2201` - comparing the CV before upgrade and the CV after upgrade
- `dbd /home/userid/rnc1.db.dat /home/userid/rnc2.db.dat` - comparing a db.dat from one node against the db.dat of another node

#### 4.3.7 dbcv[r]

Perform a DB consistency check (dbc) on the db.dat files of the CVs stored on the node.

The result of the `dbcv` execution is stored on the node at `/c/public_html/dbcv.txt` and is read by the `cvls` and `al` commands, if the uservariable `use_dbcv` is set to 1. The `dbcv` command only checks CVs with unknown DBC status, unless option `r` is given (`dbcvr`) in which case all CVs are checked again.

When `use_dbcv=1` (and `mosalarm=1`), a Moshell generated alarm with severity `Warning` will appear in the `al` printout indicating the number of CVs where DBC status is NOK.

##### Example:

```
Warn DBC NOT OK on 7 CVs ConfigurationVersion=1 (Moshell generated alarm)
```

When `use_dbcv=1`, the `cvls` printout will contain an additional column `DBC`, showing the DB consistency status of each CV.

##### Example:

```
=====
```

| Id | CV Name         | Creation Date    | UpgradePackage      | Release    | Type  | Operator | DBC | Comment |
|----|-----------------|------------------|---------------------|------------|-------|----------|-----|---------|
| 1  | RNC11_W12.0     | 2013-07-24 12:23 | CXP9014711/4_R4LB   | W12.0.2.10 | other | eanzmagn | NOK | none    |
| 2  | RNC11_W14.0_OK  | 2014-02-16 11:23 | CXP9021776/1_R3AA03 | W14.0.1.0  | other | eanzmagn | OK  | none    |
| 3  | RNC11_W14.1.2.2 | 2014-12-22 06:58 | CXP9021776/2_R4CA06 | W14.1.2.2  | other | eanzmagn | OK  | none    |

```
=====
```

The DBC column can show four different results:

- **OK** : the DBC command did not detect any inconsistencies in the db.dat file of this CV
- **NOK (NOT OK)**: the DBC command detected one or more inconsistencies with negative impact in the db.dat file of this CV
- **OKW (OK with Warnings)**: some inconsistencies were found in the db.dat file of this CV, but there is no negative impact
- **?** (unknown): the DBC check has not yet been done for this CV, please run the "dbcv" command to populate the missing status

#### 4.3.8 <ose/coli command> [|<unix-cmds>]

Send a COLI command to the CPP node's OSE shell. Type "h ose" for syntax help and "?" to view available commands.

The command are sent to the node using either telnet or ssh, depending on the value of the moshell setting `secure_shell` (See Section 2.6)

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

The password is not required if it is defined in the ipdatabase or the `$password` variable (otherwise, the user will be prompted to enter the password).

To find out all available COLI commands, type `? or lhsh <lnh> ?`

It is possible to pipe the command to any external utility the machine which moshell is running on has installed (such as **grep**). Example:

- `ls -l /d/loadmodules | sort -nk 3` : to sort LMs by size
- `te log read | /home/eric/tools/decoder.pl | /home/eric/tools/flow.pl`
- `lhsh 001400 te log read | grep -i error` : to show errors in TE log

Several commands can be run on the same line by separating each command with a semicolon.

If more than 5 commands are specified on the line, then these will be sent via a command file on the node (quicker).

The user variable `fast_coli_threshold` controls the number of commands above which a command file will be transferred to the node.

By default it is 5 but it is possible to reduce or increase this setting with the `uv` command (see chap 2.5 for more info on `uservariables`).

For instance by setting `fast_coli_threshold` to 0, COLI commands will always run via command file, this can help to avoid printout corruptions (certain commands producing large printouts can sometimes get corrupted by spurious echo characters when run directly without command file).

#### Examples:

- `vii ; pwd ; cd /d/loadmodules ; pwd ; llog`
- `lhsh 001100 ; vii ; te e trace1 NBAP*`
- `lhsh 001400 ; te filter set "([1]<8)OR([1]>=9)AND(LEN<>33)" NBAP*`
- `lhsh 001400 ; te filter set "([1]<>8)AND([1]<>$12)AND([1]<>$14)AND([1]<>$11)" NBAP*`
- `lhsh 001400 ; te log freeze -grp state_change  
"WaitForActivation -> WaitForCapacity" 100`
- `lhsh 012000 ; MsbHostMo_StartPing -d 10.173.137.130 -z 10.173.137.1`
- `lhsh 000200 ; EtHostMo_startPing -d 10.164.41.132 -h 1 -c 20 -s 54`

Note that it is safer to do `lhsh <lnh> <command>` instead of `lhsh <lnh> ; command` in case the board is not reachable.

Example: if you want to format /d on board 001400: if you do `lhsh 001400 ; formathd /d` and the board 001400 is not reachable then the command is sent to the Hub MP whereas with the command `lhsh 001400 formathd /d`, if the board 001400 is not reachable then the command is not sent at all. But for certain commands like "te filter set", "te log freeze", "EtHostMo\_startPing" or "MsbHostMo\_StartPing", the semicolon has to be entered after the "lhsh" in order to force moshell to actually log into the board.

#### Running SQL commands

##### Examples:

- `sql+` (start the sqlc client on the node)
- `sql select name from tables`
- `sql select * from tables where name like '%iur%'`
- `sql select * from cspgmresource_01 where pno='CXC 132 0784'`
- `sql update cspgmresource_01 set poolsize=20000000  
where pno='CXC 132 0784'; commit;`

Note: If the `osa_coli` program is running on a different board than the hub MP, semicolons must be put around `sqlc`:

- `lhsh 001100 ; sqlc ; select * from tables`

#### Running 3GSIM/CORBEN/LOCO commands

##### Examples:

1. `crb st`
2. `crb rf -f /c/corben/uefile.cmd;crb rf -f /c/corben/cellfile.cmd`
3. `3gsim lb`
4. `3gsim lss`
5. `loco ls`
6. `corben ; ts ; statistics`



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

7. corben ts ; corben statistics

### Running NCLI commands

Note: ncli command completion not supported when run from moshell

#### Examples:

- `ncli alarms` - Active alarm list
- `ncli help ; man search` - List ncli commands. Print help of the ncli command "search"
- `ncli search . ""` - List all MOs
- `ncli search . "" operationalState==0` - List all disabled MOs
- `ncli search . "" operationalState==0 AND administrativeState==1` - List all MOs unlocked and disabled
- `ncli group -a -e ( . "" operationalState==0 ) ; get -group userLabel` - Put all disabled MOs in a group, then read the userLabel attribute of these MOs
- `ncli ; get . userLabel ; set . userLabel=(String)RNC11 ; get . userLabel` - Read and change userLabel attribute on ManagedElement MO

Adding/Removing a static route:

- `ncli action IpOam=1,lp=1,lpRoutingTable=1 addStaticRoute (String)"0.0.0.0" (String)"0.0.0.0" (String)"137.58.152.1" (int)110 (boolean>false`
- `ncli action IpOam=1,lp=1,lpRoutingTable=1 deleteStaticRoute { destinationIpAddr=(String)"0.0.0.0" destinationNetworkMask=(String)"0.0.0.0" nextHopIpAddr=(String)"137.58.152.1" routeMetric=(int)110 }`

Other examples:

- `ncli ; cd TransportNetwork=1 ; search . AtmPort ; search . AtmPort operationalState==0`
- `ncli group -a -e(. UpgradePackage);group -l;get -group state; action SwManagement=1,UpgradePackage="CXP9013831_R9YC/6" verifyUpgrade`

### Running CMXB commands on HCS node (RNC3820/MGW GMPv4).

#### Examples:

- `lhsh 000100 cmxbsh ; help ; ls /bin ; ls /usr/bin ; iss ; help`
- `lhsh 000000 cmxbsh ; iss ; show interfaces status; show mac-address-table`
- `lh scb cmxbsh ; iss ; show interfaces status; show mac-address-table`

### Running CMXB/SCXB commands on EvoC (RNC8200).

#### Examples:

- `xbsh 000200 ; help ; ls /bin ; ls /usr/bin ; iss ; help`
- `lh cmxb help ; ls /bin ; ls /usr/bin ; iss ; help`
- `lh scxb help ; ls /bin ; ls /usr/bin ; iss ; help`
- `lh xb help ; ls /bin ; ls /usr/bin ; iss ; help`

### Running telnet commands in MSB4 (MGW)

The telnet username (and password if applicable) must be entered after the telnet command, separated by semicolons and the exit command must be given at the end.

#### Examples:

- `lhsh 000700 telnet 10.7.0.5 ; root ; shroot ; pwd ; ls -l /var ; exit`

### Changing shell password

#### Examples:

- `passwd ; <old password> ; <new password>`
- `secmode -l 2 ; <new password>`

### Running commands towards an AXE node (prerequisite: uservariable "lincli" must be set to 3).

#### Examples:

- `allip`



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- `rxmsp:mo=rxotg-17,subord`
- `rxbli:mo=rxotrx-17-1` (command will be auto-confirmed)

Limitations: it is not possible to release the terminal in order to view "ordered" printouts.

#### 4.3.9 coli

Open an interactive COLI or RCS-COLI session to the node.

#### 4.3.10 comcli

Open an interactive COMCLI/ECLI session to the node. Only applicable for COM nodes.

#### 4.3.11 ecli

Open an interactive ECLI session to the node. Only applicable for COM nodes.

#### 4.3.12 esci

Start Ericsson Support Command Interface mode. Only applicable for EMCLI (RCS nodes).

#### 4.3.13 netconf[y][g][gx] [<commandfile>]

Open an interactive NETCONF session to the node or execute a NETCONF command file. Only applicable for COM nodes.

##### Options:

- `y`: to execute a netconf/yang command file.
- `g`: no processing of the output. More suitable for doing a netconf "get".
- `gx`: same as "g" but only with the "<data>" part and without xmlns tags.

Without option, the output is processed showing each command and reply on a individual line. More suitable for netconf "write" operations.

Note: The idle timeout of the netconf session can be configured in the uservariable `netconf_timeout`. Default 300 seconds.

Examples of netconf files can be found under `moshell/commonjars/scripts/netconf`.

#### 4.3.14 c+/c1/c2/c-/c0

Switch between the COM node's linux shell, rcs-coli shell or comcli shell.

To switch between the linux/rcs-coli shell and the comcli shell, use the command `c+/c1/c2` :

- `c+` sets the uservariable `comcli` to 2, giving access to the comcli shell
- `c1` sets the uservariable `comcli` to 1 and `coli_shell` to 1, giving access to the rcs-coli shell
- `c2` sets the uservariable `comcli` to 1 and `coli_shell` to 2, giving access to the linux shell

If the node does not have a rcs-coli shell then the commands `c1` and `c2` will be equivalent, and it is also possible to use the command `c-`.

The `c?` command is for checking what is the current shell.

By default, moshell will automatically send comcli/coli/linux commands to the appropriate shell.

This feature can be deactivated by setting the uservariable `smart_shell` to 0 (1 is default).

It is also possible to force a command to be sent to a specific shell by typing `c+`, `c1`, or `c2`.

To return to automatic shell detection, it is possible to use the command `c0`.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

#### 4.3.15 <linux/rcs-coli/comcli command> [**<unix-cmds>**]

Send CLI commands to the COM node's linux shell, rcs-coli shell or comcli shell.

The commands are sent to the node over ssh. The password is not required if it is defined in the ipdatabase or the `$password` variable (otherwise, the user will be prompted to enter the password).

To print the list of linux commands, type "ls" on the list of directories shown in the `$PATH` environment variable (`echo $PATH`). To print the list of rcs-coli commands, type "help". To print the list comcli commands, type "?" in comcli mode.

To switch between the linux/rcs-coli shell and the comcli shell, use the command `c+/c1/c2` :

- `c+` sets the uservariable comcli to 2, giving access to the comcli shell
- `c1` sets the uservariable comcli to 1 and coli\_shell to 1, giving access to the rcs-coli shell
- `c2` sets the uservariable comcli to 1 and coli\_shell to 2, giving access to the linux shell

If the node does not have a rcs-coli shell then the commands `c1` and `c2` will be equivalent, and it is also possible to use the command `c-`.

To switch between linux shell and rcs-coli shell, the uservariable `linux_shell` can be used:

- `linux_shell=0 -> rcs-coli shell`
- `linux_shell=1 -> linux shell`

Within the comcli shell, there are two modes: exec mode and config mode. Exec mode is the default. To switch to config mode type "configure". The comcli allows to perform MO commands (get, set, create, delete, action, etc). More information about the comcli shell can be found in the document 1/1553-FAE 151 01 ("CLI Style"). All MO commands can also be performed using moshell's own MO commands.

It is possible to pipe a shell command to any external unix utility, eg "grep", "sort", etc. The pipe sign must be surrounded by a blank space on each side. It is also possible to use the built-in COMCLI command "filter", in that case no spaces shall be around the pipe sign. See examples below.

Each command line is sent in a separate ssh session, so in order to send several commands within the same ssh session, they need to be run on the same line by separating each command with a semicolon.

#### Examples:

- `ls -l /d/loadmodules | sort -nk 3 -` to sort files by size
- `ps -ef | grep com-` to see the list of com processes
- `find /bin -ls` - recursive list all files and directories in /bin
- `bash && for file in /bin/*; do echo $file ; done ; exit` - open a bash shell and do a for loop on all files inside the /bin directory
- `c+ -` to switch to comcli shell
- `show ManagedElement=1,Equipment=1,RbsUnit=1 ; configure ; ManagedElement=1,Equipment=1,RbsUnit=1,userLabel="test" ; end`
- `show all | grep Schema`
- `show all|filter Schema`
- `c2` to switch back to linux shell

Refer to the moshell file for more information about the uservariables for COM nodes:

- `comcli`
- `linux_shell`
- `cliss`
- `comcli_columns`
- `comcli_timeout`
- `comcli_cfg`
- `comcli_model`
- `comcli_retry_maxtime`
- `comcli_retry_interval`
- `comcli_port`

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- comcli\_mom

#### 4.3.16 mcl[d] [<moClass-filter>] [<command-filter>]

List the available MO-Context COMCLI commands.

##### Examples:

- mcl - List all MO-Context COMCLI commands
- mcl bridg - List all MO-Context COMCLI commands available on MO class "Bridge"
- mcl . clear - List all MO-Context COMCLI commands matching the word "clear"
- mcl d - List only the MO-Context COMCLI commands without parameter description

#### 4.3.17 mcc/lmcc <moGroup>|<moFilter>|<proxy(s)> <comcli commands(s)> [|<unix-cmds>]

Execute MO-Context COMCLI commands.

Execute a COMCLI command from within a specific MO.

##### Examples:

List all COMCLI commands applicable to all Router MOs and their children (the command ? or can be used to list COMCLI commands)

- lmcc router= ?
- lmcc router= \t

Print more help on the ping command in the MO InterfaceIPv4=TNA

- mcc interfaceipv4=tna ping ?

Run the ping command from all AddressIPv4 MOs and pipe the output through grep

- mcc addressip ping --count 3 10.18.30.2 | grep transmitted

#### 4.3.18 bo[ar]/ba[swdpmu]/br[wdm]/be[0-50]/bp

Manage board groups that can be used for running COLI commands on multiple boards.

Syntax:

- bo[a] [r]
- ba[s]/br/bp <boardGroup> <boardLNH>|<boardGroup>|<boardType>
- baw[s]/brw <boardGroup> <swa> [<rncMod>]
- bam[s]/brm <boardGroup> <MO Group>
- bad/brd <boardGroup> <devType> [<rncMod>]
- bap <boardGroup> <pgm>
- bau <boardGroup> <rpuLabel>
- be[0-50] <boardGroup> <boardGroup>

The following board groups are always created by default after running any of the board commands (bo/ba/br/lh, etc) the first time:

- all contains all boards (MP/BP) as well as PiuDevices (d0000x) and SPMs (spx.lnh).
- allp contains all boards (MP/BP) but not PiuDevices and SPMs.
- allpd contains all boards (MP/BP) and PiuDevices but not SPMs.
- alld contains all PiuDevices and SPMs.
- mp contains all MP boards.
- bp contains all BP boards.
- coremp contains the core MP(s), one or two depending on the configuration.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- `ommp` contains the O&M MP(s), one or two depending on the configuration.
- `sccpmp` contains the SCCP MP(s) (RNC/MGW only).
- `tu` contains TU boards.
- `scx` contains SCB and SXB boards.
- `et` contains ET boards.
- `aal2ap`, `aal2nccadm`, `aal2cpsrc`, `aal2rh` contain MP boards running the corresponding aal2 programs.

In RNC, the following board groups are also created by default, containing MPs/SPMs connected to the various RNC modules:

- `mod[x]`
- `cc[x]`
- `dc[x]`
- `pdr[x]`

In RBS, the following board groups are created by default: `rax`, `tx`, `ru`, `asc`.

In MGW the following board groups are created by default: `mesc`, `licdb`, `ch`, `stc`, `gra`, `imra`, `raa`, `msb`.

It is recommended to start by running the `bo` command (*board overview*) to view the available boards in the node.

The very first time `bo` is run on a node, it will take more time because it has to fetch data from the node. The following times, the existing data is shown again unless the `r` switch is used (command `bor`), in which case the data is fetched again from the node.

By default the `bo` command only shows slots that contain boards defined in the configuration (i.e. boards which are associated with a PlugInUnit MO) but by using option `a` it is possible to view all slots, even those which do not contain a PlugInUnit.

The `ba` command is used for adding boards into a group. The boards shall be identified by their position or a string matching the board type. The `s` switch adds any related SPMs to the board group.

#### Examples:

- `ba group1 1 2 4-8 114-119` - boards 000100, 000200, 000400 to 000800, 011400 to 011900 are added to *group1*
- `bas group1 223-226` - boards 022300 to 022600 are added to *group1*, together with their related SPs (if these boards are SPBs).
- `ba group1 spb scb 3 4` - all boards of type matching **spb** and **scb** are added to *group1* as well as boards 000300 and 000400
- `ba group1 coremp mod scb` - all boards belonging to the groups **coremp** and **mod** are added to *group1* as well as boards with type matching **scb**.
- `ba gpb gpb` - all boards of type matching **gpb** are added to the group called *gpb*.
- `ba ru28 rus02b28` - all boards of HW type matching **rus02b28** are added to the group called **ru28**.

The `baw` command is similar to the `ba` command except that the boards are identified by their SwAllocation and/or RncModule. Examples:

- `baw moduleMPs module` - all boards belonging to the SwAllocation matching **module** will be added in the group called *moduleMPs*
- `baw module1 .* 1` - all boards belonging to rncModule 1 will be added to the group called *module1*

The `bad` command is for adding SPMs into a board group based on their device type. This is applicable to RNC only. Examples:

- `bad dc dc` - add all SPMs handling a DC device to the group called *dc*.
- `bad dc1 dc 1` - add all SPMs handling a DC device on module 1 to the group called *dc1*.

The `bap` command is for adding boards into a board group based on what program(s) they are running. The string is matched against the name of the Program MOs. All PlugInUnit MOs which contain a Program MO whose name matches the string are added to the group. Examples:

- `bap mesc cxc1324881|upcf_*mesc` - add all boards containing a Program MO whose name matches `cxc1324881` or `upcf_*mesc` into the board group `mesc`

The `bau` command is for adding boards into a board group based on what RPU(s) they are running. The string is matched against the reliableProgramLabel of the RPU MOs. All PlugInUnit MOs that have a RPU MO whose reliableProgramLabel matches the string are added to the group. **Examples:**

- `bau ranap rnc_ranap` - add all boards that have a RPU whose reliableProgramLabel match the word `rnc_ranap` into the board group `ranap`

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

The `bam/brm` command is for adding/removing boards corresponding the `PlugInUnit/Spm/PiuDevice` MOs of an existing MO group. When specifying the "s" option ("bams") the children `Spm/PiuDevice` of the `PlugInUnit` will be included in the board group.

#### Examples:

- `st plug dis` - makes a MO group called `st_group` containing the disabled `PlugInUnit` MOs
- `bam boardsdown st_group` - makes a board group containing the boards corresponding the disabled `PlugInUnits` found above

The `br` command is for removing a whole group or certain boards out of a group.

Negative filter (!) is supported in order to remove all boards except those matching the filter.

#### Examples:

- `br group1 1 3 gpb` - boards 000100, 000300 and all boards of type matching **gpb** are removed from *group1*
- `br group2 - group2` - *group2* is removed
- `br group1 !gpb` - all boards are removed from the group *group1* except those of type matching **gpb**

The `brw` command is similar to the `br` command except that the boards are identified by their `SwAllocation` and/or `RncModule`.

#### Examples:

- `brw group3 dc` - all boards whose `SwAllocation` matches **dc** will be removed from *group3*

The `bp` command is for printing existing groups or the contents of a particular group. Examples:

- `bp` - all existing groups are shown, eg: *group1* and *all*
- `bp all` - the contents of the group *all* is shown.

The `be` command is for extracting a number of boards from a group. To be used in conjunction with "mon" to handle board groups that contain more than 50 boards (the current limit on target monitor). Examples:

- `be10 partial_mod mod`
- `be20 partial_dc dc`
- `partial_mod_dc partial_mod partial_dc`
- `mon partial_mod_dc`

Once the group is created, the `lh` command is used to run an OSE command on all boards of the group. See help of the "lh" command in next chapter for more info.

It is also possible to run MO commands on board groups. In this case, the MO command will execute against the MOs connected to these boards, ie the **PlugInUnit** or `Spm` MOs.

#### Examples:

- `acc mod1 restart` - restart the MP found in board group "mod1"
- `st mp view state` of all MP `PlugInUnits`
- `acc cc1 restart` restart the SPMs found in board group "cc1"

Note: in RNC, the `bo` command also creates a number of default MO groups `ccXdev`, `dcXdev`, `pdrXdev`, where X is the module number.

So, in order to lock/unlock some devices, use the MO group instead of the board group since the board group connects to the SPMs which don't have an administrative state.

For example, `bl cc1dev`.

More info in `h syntax`.

### 4.3.19 `lh[z][x] <boardGroup>|<moGroup> <OSE-command>|run <commandfile> [ | <unix-cmds>]`

Run COLI commands on all boards of a board group or MO group.

The first argument of the "lh" command is the board group or MO group.

- Board groups are made by default after running the commands `lh`, `bo`, or `bp`. Type "bp" to see the list of board groups and "`bp <boardgroup>`" to see what boards are inside a group. The user can also define their own board groups with the command "ba". Type "`h ba`" for info.
- MO groups are made with the commands "ma", "st", or "hget", type "`h ma`" and "`h syntax`" for info. If the MO group contains MOs of type `PlugInUnit/Spm/PiuDevice` then it can be used with the "lh" command.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

The second argument is the COLI command or list of COLI commands. If several COLI commands will be run on the boards they can either be separated by semicolons or run from a commandfile stored on the workstation.

Option:

- **z**: transfers the printout in gzipped format. Can save time on very large printouts. Only applies when the number of commands to send is greater than `fast_lh_threshold`. See more information further down.
- **x**: run commands in reverse order of the boards' hunt path. This means that Radio Units which are further away from the DU in the cascaded links will be run first. This is useful for instance when restarting boards, so the ones further away on the cascade will restart first, eg `lh x ru restart`.

#### Examples:

- `lh group1 te log read`
- `lh group1 te log read | grep ERROR:`
- `lh all vii OR: all vii`
- `lh all te log read | grep ERROR: OR: all err` (special shortcut)
- `lh z all ps -w`
- `lh x xp restart`

It is possible to send multiple commands to each board of the board group by separating them with semicolons. Examples:

- `lh mp te log read ; llog -l ; te log clear ; llog -c`
- `lh dc te e trace1 SP_HIST ; te log read`

It is also possible to send a command file to each board of the group. Example:

- `lh spb run sp_traces.txt`
- `lh z all ps -w; rld -a`

When many commands are to be sent, the `lh` function will put them into a command file, transfer that file to the node (using (s)ftp) and run that file from within the node, using the `shell -f` command. This will save a lot of time instead of having to send each command one by one to the node.

There is a user variable called `fast_lh_threshold` which decides the number of commands above which a command file will be transferred to the node. See Section 2.5 and **moshell** file for more info about user variables.

#### 4.3.20 `mon[?][d][u][c][f][s][t][k][a][x][e][-] [-<board(s)>|<boardGroup(s)>] [-<path/to/logfile>]`

Start/stop/check CPP target monitor or Linux monitor session in TCP mode, UDP mode, or disk mode.

The `mon` command issues a set of COLI commands (`tm`, or `ts`) in order to open TCP or UDP ports from the boards on the node to the client. The boards address and/or board groups are given as argument to specify which boards the client will connect to.

#### Arguments:

- `board(s) / boardgroup(s)`: the list of board or board groups to monitor. See examples below.
- `path to logfile`: only applicable with option "u" (`monu`). The logfile must have the extension `.pcap` or `.log`. If the logfile has extension `.pcap`, then `moshell/capture` will be used as trace client. If the logfile has extension `.log`, then `ltng-decoder` will be used as trace client. Note that the path of `ltng-decoder` shall be specified in the user variable `ltdecoder`.

#### Cleanup:

- `monc`: to clean the files and folders used for MSRBS trace streaming. The command first lists the affected files and folders and space occupied, then asks if it is ok to proceed with deletion.

#### Single Board Monitor (`monx`)

Syntax: `monx <linkhandler>`

Example: `monx BXP_2048`

This monitor works by doing repeated "te log read" on a board. It does not use any trace streaming functionality and therefore can work even when streaming ports are blocked in firewall.

It also works on RU/XMU/PIMCU connected to DUS Gen2 (which are currently not supported by the trace streaming monitors listed below).

#### TCP Monitor for Linux nodes (EvoC8300, MSRBS):

T&E Trace Streaming for Linux nodes is performed by using `ltng-relayd` (as server) and `babeltrace/babelwrap` (as client). By default, the `mon` command will use a `ltng-relayd` process on the current workstation unless a different workstation ip is specified

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

in the uservariable `lttng_dest`. More info in the file `moshell/moshell` regarding this uservariable. The TCP ports 5342 (control) and 5343 (data) are used by default for transfer of traces from the node to the `lttng` server on the workstation. If those ports are occupied, then other consecutive ports will be automatically selected in the range up until 6342. The `moshell` uservariables `lttng_port` and `lttng_range` can be modified in order to change the starting TCP port and port range used for `lttng` trace streaming. The traces are flushed every 1 second for `EvoC8300`, and every 2 seconds for `MSRBS`. This can be changed via the uservariables `lttng_flush_cpp` / `lttng_flush_rcs` (value is in microseconds). The default buffer size is 4x4 MB for `EvoC8300` and 4x1 MB for `MSRBS`. This can be changed via the uservariables `lttng_buff_cpp` or `lttng_buff_rcs` (value is in MB).

The tracefiles stored on the `lttng-relayd` server are rotated according to the settings in `lttng_tracefilesize_rcs/cpp` and `lttng_tracefilecount_rcs/cpp`.

The `babeltrace` client will by default connect to the IP address of the server where `lttng-relayd` is running. However if a firewall is blocking TCP connections to the workstation's own IP then it is possible to set the uservariable `lttng_localhost` to 1 so that the `babeltrace` will connect to localhost instead.

Applicable options:

- `mon?` : to print the list of trace streaming sessions defined on the node
- `mon[s] [<boards>|<boardgroup>]` : to start a trace streaming session. If boards or board groups are not specified then the monitor is started on the core MPs only. Option "s" is for saving the streaming session so it will survive a board restart. With option "s", `babelwrap` is used as client instead of `babeltrace` as it has reconnect capability.
- `mont[s] [<boards>|<boardgroup>]` : to start a monitor session in tunnel mode, can be used in case the firewall is blocking the TCP ports for `lttng`. For option "s", see above. Note that this option is only supported if TCP port 22 is accessible to the node, this is not the case on commercial `MSRBS` nodes.
- `monk` : to kill all `lttng-relayd` and `ssh` port forwarding processes on the workstation (only those processes belonging to the current user and which were started by `mon` command will be affected).
- `mon[s]-` : to kill all active `lttng` sessions on the node. Option "s" is to also disable any saved streaming sessions.
- `mon[s]k-` : same as `monk` and `mon[s]-` combined
- `mona[s]` : to start trace streaming toward the ramdisk logs. Only applicable for `Evo8300`. Option "s" is for saving the session so it will survive restart.

### UDP Monitor for MSRBS (HiCap):

On `MSRBS`, the TCP monitor can only be used for trace streaming of MP traces. Baseband traces are monitored via the UDP HiCap monitor which uses router (as server) and viewer/capture/ltng-decoder (as client). By default:

- `moshell` tries to start the trace router on the current workstation. It is possible to specify a different workstation by specifying its ip address in the uservariable `bbte_router`. But in that case the router process must be started manually on that workstation as it cannot be started remotely by `moshell`.
- buffered mode is used with bitrate of 200000 kb/s but this can be changed in the uservariable `bbte_buffer_rate`. In order to not use buffered mode, then set the uservariable `bbte_buffer_rate` to 0.
- the UDP port used for transferring the baseband traces from the node the router process is by default 33079. To use a different port, set the uservariable `bbte_port`.
- the `dscp` value is 0 and the mode is "normal" but these can be changed in the uservariables `bbte_dscp` and `bbte_mode` respectively. Type `bbte log setdest` for more details on those values.

Applicable options:

- `monu[c]` : start a HiCap trace monitor session on the O&M interface. With option `c` a client-server connectivity test is done prior to printing the monitor client command.
- `monut` : start a HiCap trace monitor session on the Traffic interface.
- `monu[k] [f]-` : stop a HiCap trace monitor session. Option "k" can be used to kill the user's router process on the workstation. Option "kf" to kill the router process on the workstation even if it belongs to a different user.
- `monu?` : check whether the trace monitor is using buffered mode or not.
- `monus/monue` : start a HiCap trace streaming in silent mode (`monus`). start the export (`monue`) .
- `monuz` : to gzip the pcap trace files

Trace streaming client:

- if the path to a `.pcap` file has been specified as argument, then capture is used as client and the output will be saved to a `.pcap` file
- if the path to a `.log` file has been specified as argument, then `ltng-decoder` will be used as client and the output will be saved to a `.log` file



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- otherwise the viewer or capture client will be used: `$moncommand` for the viewer client and `$capcommand` for the capture client.

Special settings for the capture client:

- `bbte_dir`: the path of the folder where the `.pcap/.stats` files will be stored by the capture client. Default: `$logdir/sessionlog`
- `bbte_capture_duration`: the value for the parameter `--duration <time>`, e.g. "10s". Default: empty.
- `bbte_capture_size`: the value for the parameter `--size <size>`, e.g. "260M". Default: empty.
- `bbte_capture_rotate`: the value for the parameter `--rotate <count>`, e.g. "2". Default: empty.

### Options for CPP (OSE) nodes:

- `mon?`: print the target monitor status (TCP or UDP) and list of monitored boards.
- `mon[s]`: start the OSE target monitor in TCP mode. In TCP mode, only one session can be connected to a specific board and the "mon" command must be run before each time a new monitor client will be started. The TCP monitor client is "nc6" but it is possible to use "monitor6054" instead by setting the uservariable `use_monitor6054` to 1. Option "s" is to save the target monitor configuration so the monitoring session will survive a board restart. Note: If the target monitor is already running on the node in UDP or DISK mode, then the existing mode is kept and the respective monitor client command will be shown.
- `monu[s]`: start the monitor in UDP mode with router/viewer or router/capture. By default router/viewer will be used, unless the path to `.pcap` logfile has been specified, in which case router/capture will be used instead, and the output will be saved in a `pcap` logfile instead of displayed on screen. In UDP mode, unlimited number of sessions can be connected to the same board(s). The "monu" command does not have to be run again if a handle is already open to the board(s) that will be monitored. Option "s" is to save the target monitor configuration so the monitoring session will survive a board restart. The uservariable `udp_router` allows to setup the monitoring session toward a trace router running in a different workstation rather than using one in the own workstation.
- `monuk[f]`: to kill the trace router process running on the own workstation. Only works if the router process is owned by the same user, unless option "f" ("force") is specified, in which case it can kill a router process owned by a different user.
- `mond`: start the monitor in UDP mode with dispatcher/monitor. Currently assumes the dispatcher is already running and starts only the monitor. Currently only supported with dispatcher/monitor installed in AFS (`/app/monitor/0/bin`).
- `monf[s]`: start the monitor in DISK mode. The output will be saved locally on the hard disk of the node, the path will be shown in the monf printout. Option "s" is to save the target monitor configuration so the monitoring session will survive a board restart.
- `mona[s]`: start the monitor in RAMDISK mode. The output will be saved locally on the ram disk of the node, the path will be shown in the mona printout. Option "s" is to save the target monitor configuration so the monitoring session will survive a board restart. Note: RAMDISK monitor is only applicable for CBM3 based LTE targets (DUS, mRBS, ODS41)
- `mont[s]`: start the monitoring session in TLS mode
- `mon[s]-`: close all monitoring handles on the node. Option "s" is to also disable any saved monitoring sessions.

### Examples:

- `mon 000800 000900` : open a monitoring session in TCP mode to the boards 000800 and 000900
- `mons coremp` : open, and save, a monitoring session in TCP mode to the boards in board group "coremp"
- `monu mod tu` : open a monitoring session in UDP mode with router/viewer to the boards belonging to board groups "mod" and "tu"
- `monu 000100 $logdir/board01.pcap` : open a monitoring session in UDP mode with router/capture to the board 000100 and save to a file called board01.pcap
- `mond mod tu` : open a monitoring session in UDP mode with dispatcher/monitor to the boards belonging to board groups "mod" and "tu"
- `monf mp et` : open a monitoring session in DISK mode for all boards in the groups "mp" and "et"
- `monas mp` : open, and save, a monitoring session in RAMDISK mode on all boards in the group "mp".
- `monts mp` : start and save a monitoring session in TLS encrypted mode on all boards of the group "mp".
- `mon-` : close all active monitoring sessions
- `mons-` : close all active monitoring sessions and also remove any saved sessions.
- `mon?` : print monitor sessions

The command to start the monitor client is printed on the screen and also it is stored in the scripting variable `$moncommand`.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

It is usually better to run the monitor client in a separate window than the moshell window but if this is not possible then it is also possible to run it from the moshell prompt, either in foreground or in background, eg:

- `l $moncommand`
- `l $moncommand > $logdir/mylogfile &`

The second method is especially useful when running moshell scripts. Then it is possible to put a `wait` statement while monitor is storing the traces in the logfile, then kill the monitor process using the command `l kill -9 $background_pid`, since the PID of the background process has been automatically stored in the variable `$background_pid`.

Notes:

- more information about the OSE target monitor: type "tm" from moshell prompt, or refer to the document 6/15518-CRX10201/1
- more information about the Linux trace monitor: type "ts" from moshell prompt.

#### 4.3.21 sql+/sql-/sql? [<heap>]

Start/stop/check the SQL client on the node (CXC1325608).

This command checks if the SQL client LM is already loaded or started. If not, it finds the latest version stored on disk, loads it and starts it. The argument can be used to specify a different heap size than the one that is pre-compiled in the LM. The heap size given will be in MB, should be an integer between 1 and 300. If no heap is given, the LM is loaded without specifying any heap value which means that it will use the default heap size that is specified in the LM.

Warning: This command should be used for trouble-shooting purposes only. SQL commands must be entered with great care since they can cause a crash on the node when printing SQL tables that are very large.

#### 4.3.22 pgu[c][f][r] [-p <board1,board2,...>] /path/to/newLM [<cvcomment>]

Program Upgrade. For lab use only, eg, to load black LMs.

##### Arguments

- the first argument specifies the location of the loadmodule on the workstation.
- the second argument (optional) is a text string that will be given as comment when making the PGU CV.

##### Options

- `c`: causes pgu to skip the CV and restart part. This is useful when many LMs need to be upgraded, avoids having heaps of CVs and restart.
- `f`: causes pgu to skip the confirmation questions.
- `r`: uses the same method as in system upgrade. A temp CV is made and old programs are removed after restart. Useful for core programs such as `basic_OS`.

##### Switches

- `-p <boardlist>`: Restrict the program upgrade to the specified boards

##### Examples

- `pgu /home/userid/CXC132456_R1A02` - will update an LM that has a Program MO
- `pgu /home/userid/CXC132789_R1B03.jar` - will update an LM that is in the JVM classpath
- `pgu /home/eric/blackLMs/CXP9010472%1-R4C98` - will update a RBS DSP container LM
- `pgu /vobs/mmgw/r5/mgwr5_tc_mesc/build/mesc.ppc@@/main/11v21_corr/58` - the CXC number of this LM will be found automatically by pgu through the `bswhat` command
- `pgu /home/userid/CXC12345678%2_R99A01 Black LM for HL12345` - will upgrade the program CXC12345678
- `pgu -p 001200,001300 /home/userid/CXC1320787_P90A01 Black system manager` - Will upgrade the program CXC1320787 only on boards 001200 and 001300, and include a CV comment.

The programs that are connected to an LM with the same product number will be identified and shown to the user. If the user confirms to go ahead, a loadmodule connected to the new LM will be created (if there isn't already one on the node) and the programs using the old LM will be deleted and recreated towards the new LM. Then a cv is made and the user is prompted to restart the node so that the change will take effect.

##### Options

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- `c`: causes `pgu` to skip the CV and restart part. This is useful when many LMs need to be upgraded, avoids having heaps of CVs and restart.
- `f`: causes `pgu` to skip the confirmation questions.
- `r`: uses the same method as in system upgrade. A temp CV is made and old programs are removed after restart. Useful for core programs such as `basic_OS`.

This procedure is "cleaner" than hacking the sql tables since it uses the MO interface.

This command is implemented as an moshell script, the script can be seen in **moshell/commonjars/scripts/pgu.mos**.

This shows that the user can define any new commands they need by adding an alias in the `.moshellrc` which will point to a script file. The parameters to the command will be sent to the script file via the positional parameters `$1`, `$2`, `$3`, etc. The variable `$0` will be set to the whole line contents. See Section 4.1.37 for info.

#### 4.3.23 `procload/proctemp` [`<unix-cmds>`]

Print processor load or temperature.

The `procload` command is a wrapper for the COLI command `capi` (`capi tot` and `capi core all`) The `proctemp` command is a wrapper for the COLI command `boardtemp all` or `temprt` It can be run on individual boards or board groups.

##### Examples:

- `procload`: Check processor load on the current board
- `lhsh 001900 procload`: Check processor load on another board
- `lh mp procload`: Check processor load on all boards of a board group
- `lh all procload`: Check processor load on all boards of the node
- `lh allp proctemp`: Check temperature on all boards of the node

The output of `procload` shows the total processor load of each processor in the board, followed by the processor load of the individual cores of each processor.

- Example output on a GPB75: `72.3 (76.8 68.1)` The first number is the total load of the Main Processor, the next two numbers in brackets are the individual load of the two cores.
- Example output on a EPB1:  
`12.2 ( 6.2 11.9 7.1 17.0 5.5 28.0 9.4) 25.5 ( 3.3 29.3 36.6 24.7 26.9 28.1 29.6)` The first number is the total load of the primary Processor, then the individual load of the cores of that processor, then the total load of the secondary processor, then the individual load of the cores of that processor. Note: on EPB1, the load of the second core (ip bare metal) cannot be shown (it is usually 100)

The output of `proctemp` shows the temperature displayed by each sensor of the board as well as the alarm limit for each sensor. The alarm limit for each sensor is displayed in brackets next to each sensor's temperature. All temperature values are in Celcius.

#### 4.3.24 `proglis/progkill` [`-e`] [`<string>`] [`<unix-cmds>`]

List or restart programs on boards or board groups.

These two commands are wrappers for the COLI commands `pglist/pm_pginfo` and `pgkill/pm_kill`.

The `proglis` command lists the OSE programs running on MP, BP, or SP processor. The program handle, state, program number and name are shown. With option `-e`, the heap and pool size are also shown. It is also possible to add a filter after the `-e` option in order to show other program settings apart from the heap and pool. Eg: `proglis -e stack` shows all program settings matching the word `stack`. A list of all available program settings is shown at the end of the printout (when option `-e` is used).

The `progkill` command is used for restarting an individual program on a MP. If this command is used on a BP or SP then the whole processor restarts. A string which matches the program number or program name must be given as argument to the command. Eg: `progkill java`, or `progkill 2844`

##### Examples:

- `proglis`: List programs on central MP:
- `lhsh 001400 proglis | grep 0787`: List programs on board 001400, whose product number match "0787"
- `lh all proglis -e`: List programs on all MP/BP/SP processors together with heap and pool info
- `lh ommp proglis -e stack_size$`: Show the stack size for all programs running in the O&M MPs
- `lh mp proglis | grep system`: List programs on all boards of the boardgroup "mp", whose name match "system"

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- `lhsh 001400 progkill 2417` : Restart the program whose product number matches "2417" on board 001400
- `lh mp progkill aal2ap` : Restart the programs whose name matches "aal2ap" on all boards of the boardgroup "mp"

#### 4.3.25 `fte <te-command> [<trace-groups>|all] [<string>] [!<unix-cmds>]`

Filtered `te` (trace and error) command.

This command is a wrapper for the COLI commands `te` or `bbte` and works in two ways:

- `fte s [all]` : to print trace status.  
Without the option `all`, only the trace objects and processes that have additional trace conditions are shown.  
With option `all`, all traces objects and processes are shown, even those whose trace conditions are default. To filter this printout, pipe it to `grep`.
- `fte <subcommand> [<trace-groups>|all] [<string>]`  
Any `te` subcommand can be specified, e.g. `e` (enable), `save`, `config`, `default`, `preset`, etc.  
The string is matched against all processes and trace objects in that board and a list of `te` commands are run against every matching process.  
The pattern matching follows regular expression syntax and is non-case sensitive.

Note: In the case of DUS Gen2, the `fte s` printout may highlight certain trace conditions with asterisks in front (\*\*\*\*). This is to indicate the trace conditions which have been enabled in `te` but not in `ts`, meaning that the corresponding traces will then only be visible in `te log read` but not in a trace streaming session (`mon`). In order for those traces to appear in the trace streaming, they would need to be enabled with the command `ts e 1 <categories> <traceobject>`.

#### Examples:

- `lh all fte s` : List all non-default trace conditions in all boards of the node
- `lh mp fte s all | grep -i ose` : List all trace conditions in boards that belong to the board-group `mp` and pipe the output to `grep` lines matching the word `ose`
- `lhsh 000800 fte e all dsp.*meas` : Enable all traces on processes and trace objects that match the string `dsp.*meas` on board 000800
- `lh mod fte config -run bus_send bus_receive rrc|nbap|ranap` : Enable and save `bus_send` and `bus_receive` on trace objects and processes matching the string `nbap|rrc|ranap` on all boards of board group `mod`
- `lh gcpu fte e all hspa` : Enable all traces on MSRBS BB processors for trace objects whose name matches "hspa"

#### 4.3.26 `goxb[acib] [-p <advpw>] <commands> [!<unix-cmds>]`

Run shell commands in XB boards (CMXB/SCXB/SMXB)

One or more XB commands can be run, each command to be separated by semicolons.

Syntax:

- `lhsh <board> goxb[acib] [-p <advpw>] <command>[;<command>;...] [!<unix-cmds>] or:`
- `lh <bdgroup> goxb[acib] [-p <advpw>] <command>[;<command>;...] [!<unix-cmds>]`

#### Options:

- `a` : to run a command in the advanced user's shell, eg "lh cmxb goxba listsw current"
- `b` : to run a command in the BCM shell, eg: "lh cmxb goxbb show counters"
- `i` : to run a command in the ISS/IMISH shell, eg "lh cmxb goxbi show interface status"
- `c` : to run a command in the C2 shell, eg "lh smxb goxhc help" (only applicable for SMXB)
- `cb`: to run a command in the C2 BCM shell, eg "lh smxb goxcbc show counters" (only applicable for SMXB)
- `ci`: to run a command in the C2 IMISH shell, eg: "lh smxb goxbci show interface status" (only applicable for SMXB)
- `-p <password>`: to specify the advanced user's password. Not needed if the board uses default password.
- without option: to run a command in the basic user's shell, eg "lh cmxb goxb ls /tmp" (also works without `goxb`)

#### Examples:

- `lhsh 000300 goxba listsw current`
- `lhsh 002600 goxbi show interfaces status; show mac-address-table`

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- `lhsh 002800 goxbi sh version`
- `lhsh 002600 goxbb show counters`
- `lh xb goxba listsw current; find /bin -ls | grep CX`
- `lh cmxb goxbi show interface status; show mac-address-table`
- `lh smxb goxbci show apbf-access-list`

#### Dependencies:

- `goxb` is a perl script requiring access to the perl module `IO::Tty`. The path to perl can be specified in the uservariable "perl". If the specified perl installation does not have `IO::Tty` then `goxb` will try to use the perl located in the decoder package (`decoder/mini_local_perl`). Make sure that the correct decoder path is given in the uservariable "decoder".
- if the perl module `IO::Tty` is not found in the specified perl installation, nor a correct path to decoder is found, then `goxb` will revert to using `expect` instead of perl. The path to the `expect` installation can be specified in the uservariable "expect".

#### 4.3.27 `ftree[f][d][1] [<lnh>][<directory>] [<unix-cmds>]`

Recursive listing of a directory on the file system of the node or the workstation.

This command first checks if the directory exists on the workstation and if yes, its contents is printed from the workstation. Otherwise the command logs into the OSE shell of the node, checks if the directory exists on the node and prints its contents.

The directory can be entered either as a relative path or an absolute path.

To list a directory on a different board, enter the linkhandler of the board followed by the absolute path.

If no directory is entered then the current working directory will be listed.

The option `d` is for printing the subdirectories only.

The option `f` is for printing files only. Mainly useful on `/c/pmd` for increased speed and sorting by timestamp.

The option `1` is for non-recursive listing of a folder, same as `ls -l`.

It is possible to pipe the output to a unix command for filtering/sorting purposes.

#### Examples:

1. `ftree /home/myuserid/moshell` - list all files and directories from the local folder `/home/myuserid/moshell` on the workstation.
2. `ftree /c/loadmodules_norepl` - list all files and directories from the folder `/c/loadmodules_norepl` on the node.
3. `ftree /c/loadmodules_norepl | grep xml` - all files/directories matching `xml` are listed
4. `ftree 001900/f` - all files and directories on the `/f` drive on board 001900 are listed
5. `ftreef /c/pmd` - list all PMD files, sorted by date and time
6. `ftreed /var` - list all the subdirectories under `/var` in the PRBS node

It is possible to run `ftree` on several boards by using the `lh` command.

Example:

```
ba bp 0-9999 # put all boards in a group called "bp"
br bp gpb # remove all gpb boards from the "bp" group
lh bp ftree /f # recursive listing of the /f drive on all bp boards
```

#### 4.3.28 `ftget[1][c]/ftput[1][c]/ftdel[1][a]/ftrun [<options>] <source>[/*] [<destination>]`

Transfer files or directories to/from the node, using `ftp` or `sftp`.

#### Syntax:

- `ftput[1][c] [<options>] localfile/localdir[/*] [remotefile/remotedir]`
- `ftget[1][c] [<options>] remotefile/remotedir[/*] [localfile/localdir]`
- `ftdel[1][a] [<options>] remotefile/remotedir`
- `ftrun <commandfile>`

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

Where "local" refers to the workstation and "remote" refers to the CPP node.

It is possible to transfer a whole directory to/from the node by specifying a source directory instead of a source file.

A subdirectory with the same name as the source directory will then be created under the destination folder, unless a asterisk is specified at the end of the source folder, eg:

```
ftget /d/usr/*
```

To fetch the contents of a folder located on a local volume of the node, the path must be preceded by the board address following by exclamation mark.

Eg: `ftget 000900!/d/systemfiles`

Note that in this case, only the files directly located under the folder will be collected and not the contents of the subfolders.

The `ftdel` command removes an individual file or a set of files/directories inside a directory. With "a" option, also the directory itself will be removed.

The `ftrun` command allows to execute a command file containing a list of `ftget`/`ftput`/`ftdel` commands. This is quicker than executing the commands via "run" as all commands will be run within the same `ftp`/`sftp` session.

#### Options:

- The `c` option in `ftget`/`ftput` stands for conditional and means that if the file(s) already exists on the workstation/node, they will not be overwritten.
- The `a` option in `ftdel` means that also the remote directory itself will be deleted. Otherwise only its contents will be deleted.
- The `1` option stands for non-recursive, meaning that only the files directly under the source folder will be transferred and not the files in any of the subfolders

The options can be placed anywhere on the comand line but the source must be given before the destination.

If the destination is omitted then the current working directory is chosen.

#### Filtering option:

The `-f` option allows to specify a regular expression to only transfer the files matching that expression. See examples below.

Exclamation mark `!` can be used as negative filter, meaning that any files that do NOT match the filter will be transferred, eg.

```
ftget -f !tmp /c/usr
```

#### Time options:

The `-s` and `-e` options are used for specifying an absolute timespan: `-s` gives the starting date and `-e` gives the ending date.

The format is `yyyymmdd[.hhmm]`, for instance 20071230, or 20071230.0800.

The `-m` and `-p` options are used for specifying a timespan relative to today's date: `-m` gives how long time backward and `-p` gives how long time forward. The format is in days, hours, or minutes, eg. 10d (10 days), 2h (2 hours), 30m (30 minutes).

#### Examples:

- `ftget /c/logfiles` - fetch the folder `/c/logfiles` and all of its contents and store it in the current working directory on the workstation
- `ftget /c/logfiles /home/eric` - fetch the folder `/c/logfiles` and all of its contents and store it in the folder `/home/eric` on the workstation
- `ftputc /home/eric/rnc10/configuration/cv/cv-10 /d/configuration/cv` - put the folder `cv-10` from the workstation to the node, files that already exist on the node will not be overwritten (conditional transfer)
- `ftget -f A.*xml.gz -m 3h /c/pm_data /home/eric/rnc10` - download files from the folder `/c/pm_data` whose path matches the string `A.*xml.gz` and whose timestamp is from the last 3 hours.
- `ftget -f !(.xml.gz|.bin)$ /c /home/eric/backup` - download all files from the folder `/c` except those whose path match `.xml.gz` or `.bin`
- `ftget /c/loadmodules_norepl /home/eric/rnc10 -f (xml|jar)$` - fetch all files matching who have the extension `xml` or `jar` from the folder `/c/loadmodules_norepl` and any of its subfolders.
- `ftdel /c/pm_data -f .tmp$ -m 900 -p 870` - delete files with the extension `.tmp` in the folder `/c/pm_data`, with timestamp older than 30 days.
- `ftput /home/eric/backup/* /d/loadmodules` - transfer all the files and folders under `/home/eric/backup` to `/d/loadmodules` without making the folder called "backup"
- `ftget 000900!/d/systemfiles /home/eric/rnc10` - transfer the contents of the local volume `/d/systemfiles` from board 000900 to `/home/eric/rnc10`

#### Notes:



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- By running `ftput/ftget` from **mobatch**, it is possible to get/put files to/from many nodes in parallel.
- Only active mode is supported for unsecure ftp. If active mode is not allowed by the firewall, then use *secure\_ftp* instead (see Section 2.6 for info about *secure\_shell/secure\_ftp*).
- By default, the original file timestamps and permissions are NOT preserved after transfer. In order to preserve them, it is necessary to set `uv ftp_preserveprops` to 1 (get), 2 (put), or 3 (get and put).

#### 4.3.29 htget <remotefile> [<localfile/localldir>]

Download files using http or https.

This command allows to download a file to the workstation using http or https. Whether http or https will be used is decided from the uservariable `secure_http` (0=http, 1=https).

The *remotefile* can be specified with or without ipaddress.

If no ipaddress is specified then the file is fetched from the current node. If an ipaddress is specified the file can be fetched from a different server. It is also possible to specify the tcp port after the ip address eg `<ipaddress>:<port>`

The prefix `http://` or `https://` is optional.

##### Examples:

- `htget /cello/oe/xml/rnc_node_mim.xml` - file will be transfered to `./rnc_node_mim.xml`
- `htget 10.1.128.17/cello/oe/xml/rnc_node_mim.xml ~/rnc_mom.xml` - file will be transfered to `/rnc_mom.xml`
- `htget http://10.1.128.17/cello/oe/xml/rnc_node_mim.xml /home/eratoto-` file will be transfered to `/home/eratoto/rnc_node_mim.xml`
- `htget http://10.68.110.44:8080/em/index.html`
- `htget https://10.68.110.44:443/em/index.html`

#### 4.3.30 edit <remotefile>

Edit a file on the node.

Moshell will download the file, spawn the text editor allowing to edit it and then upload it once the text editor is closed. If the file does not exist on the node it will be created.

The editor is specified in the `editor` user variable. By default, `editor` is set to the bash environment variable `$EDITOR`. If `$EDITOR` is not set, then `vi` will be used. To use another editor, add the following line in the `~/ .moshellrc` file:  
`editor=/path/to/your/favorite/editor`

#### 4.3.31 fclean[f|ff|a|d|e] [<lnh>][<directory>] [-f <filename-filter>]

Removal of obsolete loadmodules OR recursive removal of a directory on the node.

1. Remove a directory (equivalent to "rm -Rf" in unix). Syntax:

- `fclean <directory>` to remove all contents in the directory but not the directory itself
- `fclean <directory> -f <filename-filter>` to remove part of the directory, ie, only files whose name matches the filter
- `fcleana <directory>` to remove all contents in the directory as well as the directory itself
- `fcleand <directory>` to remove all empty folders in the directory. Useful to clean up the `/c/pmd` and `/c/loadmodules_norepl` which often contain a number of empty directories.
- `fcleane <directory>` to empty all files in the directory (files are replaced with an empty file). This is mainly intended to clear the logfiles in `/c/logfiles`. For STP use only !

Note: The "d" and "e" options cannot be used together !

2. Examples (all files in that directory will get removed (after confirmation from the user):

- `fclean /c/pmd`
- `fclean /c/pmd -f 0x00`
- `fclean /p001200/pm`



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- `fclean 001900/f`

3. All empty folders in those directories will get removed (after confirmation from the user).

- `fcleand /c/loadmodules_norepl`
- `fcleand /c/pmd`

4. All files in that directory are removed and replaced with empty files.

- `fcleane /c/logfiles`

5. Deleting loadmodules that are not in use by the system. Examples:

- `fclean`
- `fcleanf`
- `fcleanff`

This means any loadmodules that are present on the disk but are not defined in the current cv (*ARMAMENT* file and database) nor are listed in any of the existing upgrade packages on the node.

The directories which are "cleaned up" are:

- on the central MP:
  1. `/c/loadmodules`
  2. `/c/loadmodules_norepl`
  3. `/c/java`
  4. `/c/dsp_load_files`
  5. `/c/fpga_load_files`,
- on all MPs: `/d/loadmodules`
- on all BPs:
  1. `/f/loadmodules`
  2. `/f/satloadmodules`
  3. `/f/dsp_load_files`
  4. `/f/fpga_load_files`
  5. `/f/dp_loadmodules`

It is possible to specify a list of loadmodules that are not to be cleaned up in the variable *keepLmList* in the **moshell** file. When the command has completed, a command file containing all remove commands is generated and the user is prompted with the choice to run it at once or at a later time.

#### Options:

- `f` : to clean the `/f` drives. Only files that are in use by the current cv will be left on the `/f` drives.
- `ff` : to remove all loadmodules from the `/f` drives, including those that are in use by the current cv. This will force the device boards to refetch their software from the `/c/loadmodules` directory.

Note: the `fclean` command will also clean up the `/f` drives but will leave all loadmodules that are specified in other upgrade packages as well as the current one. So the cleanup is not as drastic with **fclean** as with **fcleanf** or **fcleanff**.

#### 4.3.32 `hi [<commandFilter>], !<commandNr>`

Print history of moshell commands entered during the current session.

By using the filter, it will only show those command matching that pattern. Example:

```
moshell> hi
1 lt e1
2 st all dis
3 get 4 oper
```

To rerun e.g. command number 2, do:

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

#### 4.3.33 time[t] <command>|<logfile>

Measure time taken by an moshell command or by each command in a moshell command file.

##### Arguments:

- **<command>** : the command is executed and its duration, in seconds, is shown on the last line of the printout. The duration is also saved in a moshell scripting variable called `$duration`. If the "t" option was specified ("timet" command), the duration is also saved in a hashtable called `$durationtable`, where the index is the command executed.
- **<logfile>** : the logfile is parsed by the time function and the duration of each command contained in this log is displayed as output. The logfile can be in gzipped format.

##### Example:

- `time get all` - Measure the time taken by the "get all" command
- `timet lh all te log read` - Measure the time taken by the "lh all te log read" command and save it in a hashtable
- `time /path/to/NODE_dcg_m.log.gz` - Show the duration of each command contained in the logfile of the "dcg" command:

#### 4.3.34 pipe <command> | <unix-command>

Execute a moshell command and pipe the output to a unix command.

This is useful for commands that don't natively support direct piping, such as "mom", "h", "inv", etc. It is not needed for commands that natively support direct piping, such as "lg", "pmx", "lh", etc.

##### Example:

- `pipe mom . . | less` : Run the "mom" command on all MO/attributes and pipe to "less"
- `pipe h lg | less` : Read the help of "lg" and pipe to "less"
- `pipe get ^eutrancellfdd= ^cellid$ | sort -nk 3` : Read the cellid attribute on all cells and sort by order of ascending cellid

#### 4.3.35 lmid[c][h]/upid[om] <pattern>|refresh

Print translation of loadmodule/upgradepackage product number or T&E error codes.

##### Examples:

- `lmid 2517` - to lookup the name of any LM whose product number matches 2517
- `upid 2014` - to lookup the release and cpp version of the UP whose product number matches 2014
- `lmid aal2` - to lookup the product number(s) of any LM(s) whose name matches aal2

In addition, the LM name is printed beside the product number when using certain OSE shell commands:

- `ls`, `pglist` and `ps` for uservariable `print_lmid=1`
- same as above, plus `te log read` for uservariable `print_lmid=2`

For instance, when printing the contents of a directory such as `/d/loadmodules` or `/c/loadmodules_norepl`, the LM name will appear next to the product number. This functionality can be disabled by setting the user variable `print_lmid` to 0.

See Section 2.5 and Section 2.6 for more info about user variables.

If some names are missing from the printout, just run `lmid refresh` or `bo` and it will update the moshell LM reference file with all missing LM names. The refresh also happens automatically if no LM name is found for the pattern given.

The "c" option in `lmid` is to print the error codes list (aal2/mtp3/sccp/utrancell) which is used to decode error codes from the "te log read".

The "h" option in `lmid` is to print the HW translation table.

The "m" option in `upid` is to print the CXP to MOM version table.

The "o" option in `upid` is to print an overview, mapping of major SW releases only.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

#### 4.3.36 p/w/pw/b

Change moshell prompt and/or window title.

##### Examples:

- `p <newPrompt>` - to change the prompt. Can also be changed before startup with the uservariable `prompt`, eg `moshell -v prompt=xxx <node>`. The prompt can contain a carriage return, use the `\n` sign, eg `moshell -v prompt='moshell\nNode' , or p moshell\nNode`
- `w <newWindowTitle>` - to change the window title
- `pw <newText>` - to change the prompt and window title
- `b` - to make the prompt bold or unbold. When the prompt is in bold, command lines that are longer than the screen width do not wrap correctly.

#### 4.3.37 prox[+-]

Toggle display of proxy identities in printout of `get <mo> <attribute>` command.

To print the proxy identities, type `prox` and the proxys will be printed for the remaining of the session. By typing `prox` one more time, the proxys will not be printed anymore.

##### Options:

- `+` : activate the feature, proxy identities will be printed at the beginning of the line (`get_format=1`)
- `-` : return the feature to its original value, proxy identities will not be printed (`get_format=0`)

The default behaviour is to not show the proxy identities (`get_format=0`) To change the default behaviour, it is possible to use the uservariable `get_format`, eg, adding the line `get_format=1` in the file `./moshellrc`.

#### 4.3.38 col

Toggle display of colors.

By default, some lines will appear in different color in the `te log read` and `cabrd` printouts.

To disable the coloring, type `col` once; to reenale it, type `col` again.

This setting can be saved permanently in the uservariable `show_colors`.

#### 4.3.39 ul

Toggle display of *userLabel* in `st/1st` and `pget/lpget` printouts.

By default, the *userLabel* is not shown.

Type `ul` to display this information for the remaining of the session. Type `ul` again to hide it.

This setting can be saved permanently in the uservariable `show_userlabel`.

#### 4.3.40 conf[bld][+-]

Toggle confirmation on various MO commands.

- `confb - bl/deb.set/acc` commands
- `conf1 - lt/lc` commands
- `confbl` - both type of commands
- `confd - del/rdel` commands

By default, these commands require confirmation (y/n). Type one of these commands to disable confirmation. Type the command again and confirmation is re-enabled.

These settings can be saved permanently in the uservariables `bldebset_confirmation`, `lt_confirmation`, `del_confirmation`.

##### Options:

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- + : disable confirmation, instead of toggling it (sets the uservariable to 0)
- - : return confirmation to its previous value.

#### 4.3.41 gs[+]/gsg[+]

Toggle display of old/new attribute value in `setbldeb` commands.

Purpose:

- `gs` - old value is displayed before setting the attribute. I.e, a `get` is performed before the `set`.
- `gsg` - old value is displayed before setting the attribute, then new value is displayed after setting the attribute. I.e, a `get` is performed before and after the `set`.

Notes:

- The set will not take place if the new value is the same as the old value. The result **-No Change-** is printed.
- If the set is accepted (no exception given) but the final value is still the same as the old value, then the result **» Fail** is printed.
- These toggles don't affect setting attributes whose value take up several lines such as *Array of MoRef* and *Struct*.

Options:

- + : activate the feature, instead of toggling it.
- - : return the feature to its previous value.

These settings can be saved permanently in the uservariable `gs_gsg`:

- `gs_gsg=0` : `gs` and `gsg` both disabled
- `gs_gsg=1` : `gs` enabled and `gsg` disabled
- `gs_gsg=2` : `gs` disabled and `gsg` enabled

#### 4.3.42 ip2d <ip-address>

Convert an IP address to a decimal number.

This can be used for instance when editing an entry in the `ip fro` table in the `sql` database, where ip addresses are stored in decimal format.

Example:

- `ip2d 10.1.2.3` —> would print: 10.1.2.3: -4127129085

Similar to the `get` command, it is possible to store the output of this command into a variable. Example:

- `ip2d 10.1.2.3 > $ip_db` —> stores -4127129085 into variable `$ip_db`

#### 4.3.43 d2ip/h2ip <number>

Convert a decimal or hexadecimal number to an IP address.

This can be used for instance when decoding T&E traces or COLI printouts where ip addresses are written in decimal or hexadecimal format.

Examples:

```
$ lhsh 001400 drh_trbr_data iphost
ipHostFroId admState opState availStatus piuId smn apn ern atmPortId ipAddress linkHandlerName msgBoard
7 1 1 0 7 0 7 0 29 0xa641002 000700 hostReady applSciRunning

$ lhsh 000200 te log read
[06:52:40.228] Ipet_app3dr_proc(IPET_APP3DR_SH_OBJ) app3dr_sh.c:5692 REC SIG:signo:190071 sender :100dc Rec: IPET_IPPSI_UDPSESSIONSETUP_IND. Ipet_remoteIpAddress = 174329861
```

- `h2ip 0xa641002` —> will print: 0xa641002: 10.100.16.2
- `d2ip 174329861` —> will print: 174329861: 10.100.16.5

Similar to the `get` command, it is possible to store the output of this command into a variable. Example:

- `d2ip 174329861 > $ip` —> stores 10.100.16.5 into variable `$ip`
- `h2ip 0xa641002 > $ip` —> stores 10.100.16.2 into variable `$ip`

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

#### 4.3.44 h2d/d2h <number>

Convert an integer to hexadecimal or viceversa.

Example:

- `d2h 10` would return `0xA`
- `h2d a` would return `10`
- `h2d 0xa` would also return `10`

Similar to the `get` command, it is possible to store the output of this command into a variable. Example:

- `d2h 10 > $var` - stores `0xA` into variable `$var`
- `h2d a > $var` - stores `10` into variable `$var`

#### 4.3.45 h2b/b2h <number>

Convert a binary to hexadecimal or viceversa.

Example:

- `b2h 101011` would return `2B`
- `h2b a` would return `1010`
- `h2d 0xa` would also return `1010`

Similar to the `get` command, it is possible to store the output of this command into a variable. Example:

- `b2h 10100011 > $var` stores the value `"A3"` into variable `$var`
- `h2b a > $var` stores `1010` into variable `$var`

#### 4.3.46 d2b/b2d <number>

Convert a binary to decimal or viceversa.

Example:

- `b2d 101011` - would return `43`
- `d2b 45` - would return `00101101`

Similar to the `get` command, it is possible to store the output of this command into a variable Example:

- `b2d 10100011 > $var` - stores the value `"163"` into variable `$var`
- `d2b 10 > $var` - stores `1010` into variable `$var`

#### 4.3.47 rb2ip [<iublink>]

Print the mapping of RNC lubLink MOs to RBS O&M IP addresses. Only supported in OSSRC.

Example:

- `rb2ip` print the RBS O&M IP addresses for all lubLinks in the RNC
- `rb2ip Iub-14` print the RBS O&M IP address for lubLink=lub-14

Similar to the `get` command, it is possible to store the output of this command into a variable Example:

- `rb2ip Iub-14 > $var` stores the RBS O&M IP address of lubLink=lub-14 to the variable `$var`

#### 4.3.48 z2f [<zipfile>]

Convert a Evo8300 T&E ramdisk zipfile to a text file.

The Evo8300 T&E ramdisk logs (located on the node at `/tsRamdisk/Snapshots`) shall first be collected with the command `lg2`. See examples below and check also the help of the command `h lg`.

- `lg2` - collect all CPP T&E disk/ramdisk logs

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- `lg2 -b mp -m 3h` - collect all CPP T&E disk/ramdisk logs of the last 3 hours from board group "mp"

The lg2 command produces a zipfile whose path will be shown at the end of the lg2 execution.

To convert this zipfile into a readable T&E text file, run the command: `z2f /path/to/zipfile`

#### 4.3.49 encpw[f]

Create an encoded password or encrypt a .mos command file.

**Syntax 1:** `encpw [<password>]`

To create an encoded password.

The command can be run on its own, without argument, in which case it will prompt for the password to encode.

Or the password can be specified on the command line as argument.

The command will return an encoded string that can be used as password for input into moshell uservariables or commands.

Encoded passwords can be used in moshellrc, ipdatabase files, scripts, on the command line and as input to MO operations.

Example:

- `encpw SecretSLSPassword Prints: ENC@:U2FsdGVkX1+r/ult+DVXg5vLcc34ZSv5uKKfFXUovE7j9A==`

Similar to the get command, it is possible to store the output of this command into a variable Example:

```
encpw mypassword > $pw
```

Encoding prefix:

- if the uservariable `encpw_type` is set to 1 (default, supported from moshell 21J), then the encoded passwords will be prefixed by "ENC@:"
- if the uservariable `encpw_type` is set to 0 (legacy), then the encoded passwords will be prefixed by "ENC?:"

Make sure to keep this prefix when using the encoded password.

**Syntax 2:** `encpwf <file> [<password>]`

To encrypt a .mos command file.

The path of the .mos command file to encrypt shall be given in the first argument.

If the second argument is not specified then the password to be used for encrypting the file will be prompted on the next line.

The encrypted command file can be executed as usual from the `run` command. The only difference is that the file password will be prompted in order to be able to decrypt the file.

It is also possible to store the file password in the uservariable `file_password` in moshellrc to avoid having to enter it at the prompt. This is useful for running an encrypted command file via mobatch for instance.

Example:

- `encpwf /path/to/file.mos` - creates a encrypted file file.mos.enc
- `run /path/to/file.mos.enc` - execute the encrypted command file

#### 4.3.50 mos2ro <moshell.zip> [/path/to/destinationfolder/]

Generate an installation package for moshell read-only version.

Example:

- `mos2ro /home/userid/moshell10.0v.zip` - generate a file called moshellreadonly10.0v.zip which can be used to install a read-only version of moshell

The following operations are blocked in the read-only version: MO and Scanner create/delete/set/action. Also certain commands such as mon, fro, sql, pgu.

Arguments:

- `/path/to/moshellxxx.zip` : the path to the moshell installation package from which the moshellreadonly installation package will be generated.
- `/path/to/destinationfolder` : the path of the folder where the moshellreadonly package will be stored. If this argument is not specified, the readonly package will be stored in the moshell session's temporary folder.

Example:

- `mos2ro /home/userid/moshell20.0c.zip /home/userid/` : generate a file called moshellreadonly20.0c.zip

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

and store it under /home/userid

#### 4.3.51 gpg <file>

Decrypt a gpg-encrypted ESI or PMD file, standalone or contained in a zip/tgz archive.

Example:

- `gpg ~/ENB34_170516_012256_AEST_MSRBS-L_CXP9024418-6_R12A164_dcgmm.zip` - the ESI file inside the `dcgmm.zip` will be decrypted and the `dcgmm.zip` containing the decrypted ESI will be renamed to `xxx_esidec_dcgmm.zip`
- `gpg ~/ENB34_logfiles.zip` - the ESI file inside the `logfiles.zip` will be decrypted and the `logfiles.zip` containing the decrypted ESI will be renamed to `xxx_esidec_logfiles.zip`
- `gpg ~/esi.du1.20170515T152801+0000.tar.gz.gpg` - the gpg-encrypted ESI file will be decrypted and stored in the same folder as the encrypted ESI file
- `gpg ~/pmd-cliss-28849-20161117-062032.tgz.gpg_with_llog.tgz` - the gpg-encrypted PMD file will be extracted from the `tgz` file and stored in the same folder as the `tgz` file

Note:

This command is for Ericsson personnel only. The gpg-encrypted file is decrypted on a remote CSDP server, accessible only from Ericsson Corporate Network with a Ericsson Corporate login. The Ericsson Corporate login for the CSDP server can be saved in the uservariables `csdp_username` and `csdp_password`.

If the CSDP server is not reachable directly but only via a https proxy then it is possible to set the environment variable `https_proxy` in the unix shell to allow successful https transfer by the gpg command. Example in the `.bashrc` file, add a line like: `export https_proxy=http-proxy.sero.gic.ericsson.se:8080`

Note: The gpg command will retry decryption up to 5 times in case of failure. The number of retries can be configured in the uservariable `gpg_retry`.

#### 4.3.52 wait <delay>|<newtime>

Wait for a specific duration in hrs, mins, secs, rops, or until specified time.

Default duration is in seconds. Use "u" for microseconds, "m" for minutes, "h" for hours and "r" for ROPs. Default ROP duration is 15 minutes but can be changed with the uv `rop_period` (eg: to change rop duration to 5 minutes, type `uv rop_period=5`)

Examples:

- `wait 2` - wait 2 seconds
- `wait 90` - wait 90 seconds
- `wait 500000u` - wait 500,000 microseconds
- `wait 3m` - wait 3 minutes
- `wait 4h` - wait 4 hours
- `wait 5r` - wait 5 ROP periods
- `wait 5r-60` - wait 5 ROP periods minus 60 seconds (the prompt will return 60 seconds before the end of the five ROPs)
- `wait 16:30` - wait until 16:30
- `wait 9:45:30` - wait until 9:45:30
- `wait 20130728.094530` - wait until 2013-07-28 at 09:45:30
- `wait 2013-07-28.09:45:30` - same as above

If a ROP period is already started, it will wait until it finishes, then wait additionally the number of ROP periods specified.

To wait only until the current ROP is finished, use the command "wait 0r"

If the new time is before the current time (e.g. if current time is 9:30 and new time is 8:00), then the waiting will continue to the next day at that time.

Note: the new time shall be given in same time zone as the workstation where moshell is running.

To abort a wait statement, just type `CTRL-C`



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

#### 4.3.53 wf[o][a][t] <file>

Write lines to a file.

Argument: the path to the file to be written to

##### Options:

- `o` : if file already exists it will be overwritten
- `a` : if file already exists, the line will be appended to the end of the file
- `t` : translate scripting variables before writing to the file

Without options, the command will abort if the file already exists.

Example:

- the file `$tempdir/myfile.txt` will be created and all the subsequent lines will be written to that file until the line "eof" or "EOF" (as in "End Of File") is reached

```
wf $tempdir/myfile.txt
EUtranCellFDD administrativeState 0
EUtranCellTDD operationalState 1
EOF
```

#### 4.3.54 return

To exit from a command file without exiting from MoShell (scripting).

Typically, the `return` command would be executed upon validation of a specific condition in the command file.

Note that the `return` cannot be put in a for loop, only in a if(/else) that is not contained in a for loop.

In order to use it in for loop, the `break` command has to be used in order to get out of the for loop, first.

In this example, we run a restart followed by running a trun script, 60 times.

If the trun script fails then we set the `$return` variable to 1 and break from the loop (note: the `$command_result` is a default variable which gets automatically set after running `trun`, see Section 6)

After the loop, there is a check to see if `$return` is 1, if yes, then "test failed" is printed, the commandfile is aborted and we are returned to the moshell prompt.

If `$return` was not set to 1, then it means we have completed all 60 iterations successfully and the final part of the script will be executed.

```
for 60
$return = 0
facc 0 manualrestart 0 0 0
trun $moshelldir/cmdfiles/rnc_commands.mos
if $command_result = 1
$return = 1
break
fi
done
if $return = 1
l echo "TEST FAILED"
return
fi
l echo "TEST OK"
```

Another example of using the `return` command can be found in Section 6.5

#### 4.3.55 print

To print a line or variable (scripting).

Handy when doing scripting to see what values will be substituted to a variable.

Examples:

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

```
print $var
print $table[$var]
```

#### 4.3.56 alias/unalias <alias> <command>

Print or define command aliases.

Example:

- `alias ter te log read` - to create an alias with the name "ter" which runs the command "te log read"

Type `alias` on its own to list all defined aliases.

Use command "unalias" to undefine aliases. Example:

- `unalias ter` - to undefine the alias called "ter"
- `unalias all` - to undefine all aliases

Aliases can be stored permanently in the `~/.moshellrc` file, using the same syntax as above.

Note: moshell commands take precedence over aliases. This means that if an alias has the same name as an moshell command, the moshell command will be executed instead of the alias.

#### 4.3.57 lf[c] <file>

Load a moshellrc file or a offline COLI file.

Examples:

- `lf /home/eraaldr/tools/moshell/jarxml/moshellrc` - Load a moshellrc file
- `lfc /home/moshell/moshell_logfiles/logs_moshell/dcg/RNC12/140101_1453/RNC12_dcg_m.log.gz` - Load a offline COLI file (only applicable in offline mode)

Note: The `lf` command can be run from the moshell prompt or called from within a moshellrc file in order to source additional moshellrc files.

#### 4.3.58 bg[g]/bgs/bgw [<commands>|<id(s)>|all] [<maxtime>]

Run some moshell commands in background or check status of background jobs.

Syntax:

- `bg[g] <commands>` : to execute some moshell commands in background. The "g" option is to gzip the log upon completion.
- `bgs` : check the status of all background jobs.
- `bgw [<id(s)>|all] [<maxtime>]` : wait for one, several, or all jobs to complete. Specifying `maxtime` (in seconds) will lead to stop waiting after a job has been running for longer than that amount of time.

The following variables and arrays keep track of the list of background jobs and their properties:

- `$bg_id` : the job id
- `$bg_pid[id]` : the PID of the moshell process corresponding to each background job
- `$bg_status[id]` : the status of each background job, RUNNING or FINISHED
- `$bg_log[id]` : the path of the logfile containing the printout of each background job
- `$bg_runtime[id]` : the current duration in seconds of each job

Examples:

- `bg dcgm` - Run some moshell commands in background
- `bgg cabx;al;str` - Run some moshell commands in background and gzip the logfile upon completion
- `bg l+ $logdir/$ipaddress_kget.log ; lt all ; kget ; l-` - Run some moshell commands in background using a user defined logfile
- `bgs` - Check status of background jobs
- `bgw 2` - Wait for job number 2 to complete

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- bgw 2,3,5 - Wait for jobs number 2, 3, and 5 to complete
- bgw - Wait for all jobs to complete
- bgw all 1800 - Wait for all jobs to complete but stop waiting if the running time of a job exceeds 1800 seconds (30 mins)

#### 4.3.59 - smd[slcr] [-m <days>] [-s <size>] [-f <filter>] [-o a|s|n] [-u <user>|all] [-d <directory>] [-n <max>]

Server Maintenance - disk usage

##### Options:

- l: list files
- r: remove files
- c: compress files (using gzip)

##### Switches:

- -d <directory>: the directory to process. Default: \$logdir.
- -u <user>|all : the user who owns the file. Default: if running as root, all users - otherwise, the current user.
- -n <max> : max number of files to list (eg: -n 30). Default=20.
- -m <days> : minimum age of the files in days (eg: -m 10 ==> all files which were modified 10 days ago or more). Default=1.
- -s <size> : minimum file size in B/K/M/T/G (eg: -s 100B ==> all files of size at least 100 Bytes). Default=0.
- -f <name> : file name filter (eg: -f A.\*.xml.gz ==> all files whose name file path A.\*.xml.gz).
- -o [a|s|n] : printout order (eg: -o a ==> sort files/processes by age, -o s ==> sort by size, -o n ==> sort by name). Default=s

Examples - diagnostics with smd:

- smds -n 15 : show disk usage summary of the log folder, max 15 largest files/directories displayed (default: 20)
- smds -d /home/user/moshell : show disk usage of the folder /home/user/moshell (default: the folder /home/user/moshell\_logfiles)
- smd -d /var/opt/ericsson : show disk usage of the folder /var/opt/ericsson (default in amos: the folder /var/opt/ericsson/amos/moshell\_logfiles)
- smdl -m 30 -s 1M -f /logs\_mobatch/\*.log\$ -o a : show files of size at least 1M, aged at least 30 days, files located in logs\_mobatch folder and file name ends with .log, sort printout by file age.
- smdl -d /home/user/moshell\_logfiles/logs\_mobatch -m 10 -s 1M -o s : show files in /home/user/moshell\_logfiles/logs\_mobatch, aged at least 10 days, size at least 1M, sort printout by file size

Examples - cleanup with smd:

- smdr -m 30 -f /A.\*.xml.gz\$ : remove files in moshell\_logfiles, aged at least 30 days, with file name matching A.\*.xml.gz
- smdr -m 30 -n \_ropfiles.zip\$ : remove files in moshell\_logfiles, aged at least 30 days, with file name matching \_ropfiles.zip
- smdc -m 30 -o n : compress logfiles aged at least 30 days, show file list sorted by filename (note: files already in compressed format will not be affected)
- smdr -m 7 -f logs\_moshell/(tempfiles|cache) / : remove all the moshell tempfiles older than 7 days

Examples - cleanup with cronjobs:

Example of some cronjobs to remove ropfiles older than 30 days and compress logfiles older than 30 days (contents of "crontab -e" is shown). In this example the jobs are performed every saturday at 1:00 am.

```
minute (0-59),
| hour (0-23),
| | day of the month (1-31),
| | | month of the year (1-12),
| | | | day of the week (0-6 with 0=Sunday).
| | | | | command(s)
| | | | |
00 01 * * * 6 find /home/user/moshell_logfiles -type f -name 'A*.l.xml.gz' -mtime +30 -exec rm -f {} \;
00 01 * * * 6 find /home/user/moshell_logfiles -type f -name '*_ropfiles.zip' -mtime +30 -exec rm -f {} \;
00 01 * * * 6 find /home/user/moshell_logfiles -type f -name '*.log' -mtime +30 -exec gzip -f {} \;
00 03 * * * * find /home/user/moshell_logfiles/logs_moshell/lttng-traces -type f -mtime +3 -exec rm -f {} \;
```

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

#### 4.3.60 split [<size>] <file>

Split a file into smaller files for upload to MHWeb or SMSWeb.

##### Arguments:

- <size>: the maximum size of the chunks into which the file will be split. Optional (default: 250M , needed for CSRs in SMS).
- <file>: the path of the file to split. Example: path to a dcgm.zip .

The file will be split into several files named as <filename>.<x[00-99]> , i.e. same filename but with extension "x" followed by numbers from 00 to 99.

To recombine the split files into one file, do: `cat filename.x?? > filename`

Eg: `cat enb101_191016_123959_dcgms.zip.x?? > enb101_191016_123959_dcgms.zip`

#### 4.3.61 - dia[g|k|ls|ds|os|pn|ln|dn|le|lv|ac|pc|lc|sa] [<ME addr|ME Name> <ME addr|ME name> <ME addr|ME name>]

To create a DIA user session with connections to primary ME(s) and neighbor ME(s). When several MEs are specified with the dia command they shall be of same type, RN or vPP.

##### Options:

- g : Start the dia gateway binary on the host and create session with ME ip addresses provided. If no input is given with this option, it only starts dia gateway process. Input to option can be ip addresses or a yaml file with ME ipaddresses. Example yaml file for option g can be found under moshell/examples/misc/yaml.txt.
- k : Terminate dia gateway running on the host
- ls : List session details based on input parameter <sessionid|userid>. If no value is provided all the session details will be printed
- ds : Delete a session based on the sessionid
- os : override Dia-Agents connected to other user(s) and/or Gateways in DIA Gateway
- pn : Stores the entities from a load file for a specific sessionid into DIA Gateway.
- ln : Lists the entities of a specific sessionid in DIA Gateway.
- dn : Deletes the entities for a specific sessionid in DIA Gateway.
- le : List enabled events of ME from DIA-Agent.
- lv : List available events of ME from DIA-Agent.
- ac : Activate the configuration for a specific sessionid.
- pc : Passivate the configuration for a specific sessionid.
- lc : List the configuration for a specific sessionid.
- sa : Get agent status for specific instance name.

##### Examples:

- diag : start dia gateway and lttnng-relayd process on host
- diag 127.0.0.1 127.0.0.2 : start dia gateway and lttnng-relayd processes on host and create a session with ME ipaddresses 127.0.0.1 and 127.0.0.2
- diag 127.0.0.1:127.0.0.2 : start dia gateway and lttnng-relayd processes on host and create a session with ME ipaddress 127.0.0.1 and neighbour address 127.0.0.2
- diag /home/ephanch/setup.yaml : start dia gateway and lttnng-relayd processes on host and create a session with ME ipaddresses given in setup.yaml file
- dials : will list all the sessions in dia gateway
- dials 1 : will list the session details of session id 1
- diads 1 : will delete session with sessionid 1
- diaos 1 : will steal/override Dia-Agents connected to other user(s) and/or Gateways in DIA Gateway
- diapn 1 xyz.yaml : will store the entities from a load file for a sessionid 1
- diapn 1 xyz.yaml 3 : will store entities from a load file for session id 1 and set reactivated parameter to 3
- dialn 1 : will list the entities of a sessionid 1

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- `diadn 1` : will delete the entities for a sessionid 1
- `diale 1 12121212` : will list enabled events of ME for sessionid 1 and instanceid 12121212
- `dialv 1 12121212` : will list available events of ME for sessionid 1 and instanceid 12121212
- `diaac 1` : will activate the configuration for sessionid 1
- `diaac 1 3` : will activate the configuration for sessionid 1 and set reactivated parameter to 3
- `diapc 1` : will passivate the configuration for sessionid 1
- `dialc 1` : will list the configuration for sessionid 1
- `diasa dia_agent-12121212` : will get DIA-Agent specific status information for one unique agent

#### 4.3.62 `pe[c][l][k] [<polling interval>|<pid>] [<trigger>] [<action script>] [<number of iterations>]`

CPP post event functions

##### Options:

- `c`: create moshell hook. The hook is waiting for the event(restart, alarm/event or any other trigger) and then execute the user script.
- `l`: show all the hooks on the node with their states.
- `k`: stop the running hook.

Arguments of the "pec" command (first three are mandatory):

- `polling interval`: the time between every check of the event occurrence.
- `trigger`: the interaction trigger. It can be:
  - `attribute`: hook will be triggered after MO attribute change
  - `restart`: hook will be triggered after restart of specified board
  - `alarm`: hook will be triggered after specific alarm raise
  - `pm`: hook will be triggered after specific pm counter stepped
  - `coli`: hook will be triggered after counter (printed by coli command) stepped
  - `telog`: hook will be triggered after specific trace in T&E log appeared in concrete board
  - `nodelog`: hook will be triggered after specific log appeared in concrete node log (look at "lg" moshell command description to get more information about node log)
  - `kpi`: hook will be triggered after increase/decrease specific kpi metric
  - `<another>`: hook will be triggered once the custom trigger script is done
- `action script`: the MO script to run once the hook is triggered
- `number of iterations`: the number of the same events after which action script will be executed

Argument of the "pek" command (mandatory):

- `pid`: the pid of the hook. The pid can be taken from the "pel" output.

##### Examples:

- `pec 2 attribute /home/<user>/script.mos 6` : Create hook for MO attribute. The action script will be executed after 6th change of the specified attribute. The trigger will be checked every 2 seconds.
- `pek 12345`: Stop hook with pid "12345".
- `pel`: Show list of hooks.

#### 4.3.63 `q/by/exit/quit [<exitcode>]`

Exit moshell.

Any of the following commands can be used to exit moshell: `q`, `by`, `exit`, `quit`

The exit command supports specifying an exit code, eg: `exit 1`

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

## 4.4 PM commands

### 4.4.1 pmom[acdpo] [<moclass>] [<counter>] [<data-type>] [<flags>] [<description>]

Print description of PM counters.

#### Options:

- a: shows what regular attributes can be included in scanners.
- c: show all the MO classes specified in the filter as well as their children/grandchildren/etc classes.
- d: gives a shorter printout, without the description part.
- p: show only the definitions relating to platform MOs (CPP)
- o: show only the definitions relating to application MOs

The `type` field refers to the data type of the counter value, e.g. an integer (long), or a sequence of integers.

The `flags` field refers to the properties of the counter, eg:

- deprecated: means that the counter is obsolete and will never be stepped.
- notInMOM: means that the counter is implemented in RNC SW but not specified in the MOM. Should only happen on pre-GA SW.
- notImplemented: means that the counter is specified in the MOM but not implemented in RNC SW. Should only happen on pre-GA SW.
- ropReset: indicates that the counter value is reset to 0 before each ROP period.
- noReset: indicates that the counter value is not reset to 0 at the ROP period and will only be reset at node restart or when the value reaches 2<sup>31</sup>
- PEG, GAUGE, PDF, CC, DER, etc: this is the counter type, whose description can be found in CPI for CPP nodes, or from the command `mom \.(collectionme|aggre) .` for COM nodes.
- a number in square brackets: shown on PDF counters to indicate the number of elements in the array.

#### Examples:

1. `pmom atmp` - List all PM counters for the **AtmPort** MO
2. `pmom atmp cell` - View description of all **AtmPort** counters that match the word "cell"
3. `pmom atmp .` - View description of all **AtmPort** counters
4. `pmomd . reject` - List all counters matching the word "reject"
5. `pmomd . . . . reject` - List all counters whose description contain the word "reject"
6. `pmomd . . sequence:long` - List all counters of type sequence:long
7. `pmomd . . . peg` - List all counters of type PEG
8. `pmomd . . . noreset` - List all counters which do not reset at the ROP period boundary

### 4.4.2 kmom[d] [<area>] [<kpname>] [<MOclass>] [<formula>] [<kpidescription>]

Print description and formulas of KPIs.

#### Options:

- d: gives a shorter printout, without the description and formula part.

#### Examples:

- `kmomd access` - List all accessibility KPIs
- `kmomd . sp` - List all KPIs whose name matches the word "sp"
- `kmomd . . utrancell` - List all KPIs reported on MO class UtranCell
- `kmomd . . . pmTotNoRrcConnectReqCsSucc` - List all KPIs containing the counter `pmTotNoRrcConnectReqCsSucc` in the formula
- `kmomd . . . . multi` - List all KPIs containing the word "multi" in the description text
- `kmom . sp_a` - Show the description and formula for the KPI `Sp_A`

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

#### 4.4.3 pget/lpget [<moGroup>|<moFilter>|<proxy(s)>|all] [<attribute-filter>|all] [<value-filter>]

Read PM attribute(s) from MO(s).

Does not work on RNC MOs (UtranCell, lubLink, etc).

Note: A counter value -2 indicates that this counter instance is suspected faulty.

#### 4.4.4 spget/lspget [<moGroup>|<moFilter>|<proxy(s)>|all] [<attribute-filter>|all] [<value-filter>]

Read PM attribute(s) one by one ("slow pget").

Slow but useful in case the standard "pget" command is not working due to some attribute returning an exception.

Note: Does not work on RNC MOs (lubLink, UtranCell, etc).

#### 4.4.5 hpget[c][m]/lhpgget[c][m] [<moGroup>|<moFilter>|<proxy(s)> [<attribute-filter>] [<value1-filter>] [<value2-filter>] [<value3-filter>] etc...

Read PM attribute(s) from MO(s), print horizontally one line per MO (instead of one line per attribute).

##### Options:

- c: display the output in CSV format for easier export to excel (for instance).
- m: print all MOs in a single table instead of separate tables per MO class

Example:

- hpget vcltp print the counter values for vclTp MOs (pmreceivedcells, pmtransmittedcells)
- hpget vcltp . ^0\$ !^0\$ print all vcltps that have 0 receivedCells and more than 0 transmittedCells

Note: A counter value -2 indicates that this counter instance is suspected faulty.

#### 4.4.6 pdiff/lpdiff [<moGroup>|<moFilter>|<proxy(s)>|all] [<attribute-filter>|all] [<value-filter>]

Print incrementation of PM attributes.

Runs two consecutive pget commands separated by a time interval equal to the value of the uservariable pm\_wait (default 25 seconds). Displays the value by which the counter(s) incremented in the interval pm\_wait. The list of MOs displayed are stored in an MO group called pdiff\_group. Example1: check all VclTp MOs whose transmittedcells have incremented but whose receivedcells have not incremented (could point towards a transmission problem)

```
>> pdiff vcltp= transmit !^0
>> pdiff pdiff_group receive ^0
>> acc pdiff_group etelookback (we can now perform a loopback test on those VclTp to check if they re
```

Example2: check all Os155SpiTtp MOs whose errored seconds have incremented.

```
>> pdiff os155 es !^0
```

#### 4.4.7 hpdiff[m]/lhpdiff[m] [<moGroup>|<moFilter>|<proxy(s)>|all] [<attribute-filter>|all] [<value1-filter>] [<value2-filter>] [<value3-filter>]

Print incrementation of PM attributes, horizontally one line per MO (instead of one line per attribute)

This is the same functionality as "pdiff" except that the counters are printed side by side, one line per MO. For more information, refer to the help of the "pdiff" command.

##### Options:

- m : print all MOs in a single table instead of separate tables per MO class

Example:

- hpdiff vcltp transmit|receiv pmtransmittedcells —> print the counter values for vclTp MOs (pmreceivedcells, pmtransmittedcells)
- hpdiff vcltp transmit|receiv ^0\$ !^0\$ transmittedCells —> print all vcltps that have 0 receivedCells and more than 0 transmittedCells



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

**4.4.8** `pmx[hfdnsckwlb3zeity] [<mofilter>|<mogroup>] [<counter-filter>|<kpi(s)>] [-l <zipfile>|<directory>] [-w <webdirectory>] [-m <minushours>] [-p <plushours>] [-s <startdate>.<starttime>]] [-e <enddate>.<endtime>]] [-a|-d|-h|-u] [-o <outputFormat>] [-tz <hrs>] [-f <formulafile>] [-j <precision>] [-mo <regex>] [! <unix-cmds>]`

Display counter or KPI values, extracted from the statistics ROP files, or from the MOs in real-time.

### Arguments

- The first argument (`mofilter/mogroup`) is to specify the MO instances whose counters shall be printed: can be identified by an MO group or by a regular expression matching the LDN of the MOs. It is also possible to use the exclamation mark (!) to print all MOs except those matching the filter.
- The second argument can be either:
  - a regular expression matching the name(s) of the counter(s) that shall be printed, eg `rrc.*success`
  - a regular expression matching the name(s) of the KPIs(s) that shall be printed, eg `rrc.*success`. The KPI formulas are read from the default formula file in `moshell/commonjars/pm` or from the formula file specified in the "-f" option.

If the first and second arguments are omitted, the XML ROP files are parsed and the result is stored on file instead of being displayed to screen. The result files will be stored in the same location on the workstation as where the XML ROP files are stored, ie: `~/moshell_logfiles/logs_moshell/pmfiles/nodeipaddress`. This location can be changed with the user variable `pm_logdir`.

### Options

- `e` : to display KPI values instead of counter values. The KPI name argument is a non case sensitive regular expression. The KPI formulas are taken from the default formula file or from the formula file specified with the `-f` option.
- `t` : to print real-time counter/KPI values from "pget". See examples further down. Not applicable for RNC radio network KPIs
- `td` : to print real-time counter/KPI values from "pdiff". See examples further down. Not applicable for RNC radio network KPIs.
- `y` : to print KPI values from the ropfiles in the `kpiDataPath (/c/kpi_data)`. Only applicable to CPP nodes that support PmKpi definitions.
- `h` : to display the counters side-by-side (`h` as in *horizontal*). Otherwise, there is one line for each MO instance and counter.
- `f` : to prevent `pmx` from rechecking if there are any newer xml files (`f` as in *fast*).
- `d` : needed for parsing PEG counters which are not reset at the end of each ROP period. In `pmom` command, these counters are marked with the tag `PEG,noReset`. The command `pmomd . . . peg,noreset` will show all such counters.
- `dd`: same as `d` but allows negative delta values.
- `n` : to aggregate all counters on MO level.
- `k` : to keep the counters marked with the suspected faulty tag `<sf>TRUE</sf>`, without this option they are discarded.
- `s` : to flag the counters with negative or empty value, or those marked with the suspected faulty tag `<sf>TRUE</sf>`. The counters are then displayed with a label showing `SuspectedFaulty`, `NegativeCounter`, or, `EmptyCounter`.
- `c` : to display the number of counter instances in the ROP file. Should be identical to the number of active counter instances shown in `pgetsn`.
- `3` : to print 3GSIM instantaneous counters from `/c/3gsim/stats`
- `i` : to print ETIPG counters from `CELLO_IPTRAN_DEBUG_LOG`
- `w` : to generate a web report in table and graph format. The `-w` switch can be used to specify the location of the webpage. Currently works best with Firefox, avoid IE.
- `z` : to print the timestamps in the timezone of the workstation where moshell is executing
- `l` : to generate an excel graph. Can be combined with `b` option (`pmxlb`) for treating buckets in PDF counters as separate counters. To generate a graph comparing two different periods, specify the periods with the options:  
`-s1 <startperiod1> -e1 <endperiod1> -s2 <startperiod2> -e2 <endperiod2>`. See examples in the examples section below.

### Switches

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- `-m, -p, -s, -e` : for specifying a time span, see `h pmr` (Section 4.4.9) for more information. By default, the time span will only cover the latest ROP file (equivalent to `-m 0.25`).
- `-a, -d, -h, -u` : for specifying if any time aggregation should be used. Time aggregation can be done on hour basis ("-h"), day basis ("-d") or on the whole timespan ("-a"). If the switch is not included, then no time aggregation will occur but the timestamps will be shown to the minute. If timestamps should be shown per second (e.g. in case of ROP shorter than a minute) then the "-u" option can be used.
- `-l <file>|<dir>` : for specifying a directory containing ROP files. In this case, `pmx` will parse the ROP files stored in that directory instead of from the node. Can also be used in offline mode.
- `-o <fmt>` : for specifying the output format. By default, the output is text but it is possible to specify: `csv`, `html`, or `htmltab`
- `-w <dir>` : for specifying the path where the web report will be stored. Only applicable with option `w (pmxw)`. When `-w` is not given, a default location will be chosen for the web report.
- `-tz <hrs>` : for printing the timestamps a specific timezone. Eg: `-tz +10` will show the timestamps in UTC+10 timezone. Note: this setting can be saved in the `moshellrc` uservariable `tz_option`.
- `-j <precision>` : to specify the number of digits after the decimal point (eg: `-j 2` => 2 digits after the decimal point). Only applicable with "pmxe"
- `-mo <regexp>` : to specify a regular expression for aggregation at MO level. Eg: `-mo ManagedElement=([^\,]+)` => aggregate at ManagedElement level. The field specified in the "-mo" option will correspond to the field specified in the "-m" option in `pmXtab`. More info on this field can be found in the help of `pmXtab` (`moshell/pmXtab -help`).
- `-f <formulafile>` : to specify a different formula file than the default one (when using "pmxe").

It is possible to pipe the command into a unix command (eg: **grep**, **sort**, etc).

#### Examples:

- `pmx utrancell downtime` - all counters matching "downtime" on all MOs matching "utrancell" will be displayed for the last ROP period
- `pmxz utrancell downtime` - same as above but timestamps will be displayed in the workstation local time instead of utc time
- `pmx utrancell downtime -tz -5` - same as above but timestamps will be displayed in the timezone UTC-5
- `pmxh utrancell downtime` - same as above but the counters will be displayed side-by-side
- `pmxh utrancell downtime -m 3 -a` same as above but the last 3 hours (12 ROP periods) will be read and aggregated into one value
- `pmxhf utrancell downtime -m 3 -a | sort -k 2` print same as above without rechecking for new ROP files ("f" option), then sort on the second field ("| sort -k 2")
- `pmx -m 2 -fetch` and parse all ROP files from the last two hours, result to be stored on disk
- `pmxf -s 19000101` - parse all ROP files that currently exist in the `pmlog` directory in the workstation
- `pmxs -m 0.25` - show the counters marked as suspected faulty for the last 15 minute ROP period.
- `pmxn !utrancell=iub-10 pmTotNoRrcConnectReq$` - show the counter `pmTotNoRrcConnectReq` aggregated on all cells except cell `iub-10`.
- `pmxw utrancell=iub-10-1 pmTotNoRrcConnectReq$ -m 24` - show the evolution in graphical format (web) over the past 24 hours of the `pmTotNoRrcConnectReq` counter on the MO `utrancell=iub-10-1`
- `pmxl utrancell=iub-10-1 pmTotNoRrcConnectReq$ -m 24` - show the evolution in graphical format (excel) over the past 24 hours of the `pmTotNoRrcConnectReq` counter on the MO `utrancell=iub-10-1`
- `pmxlb utrancell=iub-10-1 pmTotNoRrcConnectReq$ -s1 20140101.0900 -e1 20140101.1000 -s2 20140101.1100 -e2 20140101.1200`  
- Compare the evolution of the counter `pmTotNoRrcConnectReq` in the period 20140101 from 9:00 to 10:00 , with the period from 11:00 to 12:00 , and use bucket option.
- `pmxi slot=24 reject` - print the ETIPG counters from slot 24 whose name match the word reject
- `pmxel utrancell drop -m 24` - print the utrancell KPIs whose name match the word "drop" for the last 24 hours and output in excel format
- `pmxen utrancell drop` - print the utrancell KPI whose name match the word "drop" and aggregate at node level for the last 15 minutes
- `pmxet fdd interferencepwr$` - print the KPI `Int_RadioRecInterferencePwr` on all `EUtranCellFDD`

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- `pmxetd fdd interferencepwrprb[0-9]$` - print the KPI `Int_RadioRecInterferencePwrPrb` on all `EUTranCellFDD`
- `pmxetd giga giga` - print the KPIs matching "giga" on all MOs matching "giga" (eg "gigabit" MOs)
- `pmxetd eth eth` - print the KPIs matching "eth" on all MOs matching "eth" (eg "ethernetport" MOs)
- `pmxetd atm atm` - print the KPIs matching "atm" on all MOs matching "atm" (eg "atmport" MOs)
- `pmxet fdd acc_` - print all accessibility KPIs on all `EUTranCellFDD` MOs

Note: only counters that are included in an **active** performance scanner will be displayed.

Performance scanners can be read with the `pgets` command and created with the `pcr` command or from OSS/ENM.

In the case of RAN nodes (RNC, RXI, RBS, eNodeB), the OSSRC/ENM does not allow external tools (such as moshell) to create/delete/modify a PM scanner. Any attempt to do this will result in OSSRC/ENM reverting the change. This is a feature of OSS/ENM and applies only to RAN nodes, not MGW.

Note: Handling of duplicated counter instances

Counter instances that are defined in several PM scanners will be reported by CPP as duplicated entries in the ROP files.

This can lead to unexpected results, such as counters with doubled values.

Usually the `pmr`/`pmx` commands can successfully ignore the duplicated counter entries but only when all the processed ROP files have the same type of counter duplication.

Unexpected values will occur when some of the processed ROP files have a duplication while other don't.

Therefore it is highly recommended to make sure that none of the counters are defined in several scanners at the same time.

The commands `pgets` and `pmxs` will show if there are any duplicated counter instances in the PM scanners.

**4.4.9 `pmr[agfkwp3z]` [-g <mofilter>|<mogroup>] [-z <mogroup>] [-r <report(s)>] [-l <zipfile>|<directory>] [-w <webdirectory>] [-i <iubCellModule-file>] [-f <formulafile>] [-c <configfile>] [-m <minushours>] [-p <plushours>] [-s <startdate>[.<starttime>]] [-e <enddate>[.<endtime>]] [-o <outputFormat>] [-t <thresholdfile>] [-tz <hrs>] [ <unix-cmds>]**

Produce PM KPI reports, based on counter values in statistics ROP files and formulas in CPI documentation.

#### Report choice

- if the command `pmrg` is used then all available reports are printed.
- if the option `-r` is used then it is possible to specify which reports to print. Eg: `pmr -r 1,3,5-10,12` → reports 1,3,5,6,7,8,9,10,12 are printed
- if the option `f` is used then the ropfiles are simply fetched and stored in a zipfile. The zipfile is called `<node>_ropfile.zip` and its location is `<logdir>/pmfiles/<nodeaddress>/<date_time>`. A different location can be specified by running: `pmrf <directory>`. The zipfile can then be used for offline processing with the `-l` option.
- otherwise, a menu is printed, prompting the user to enter a report number, or `x` to exit the `pmr` menu.

#### Options

- `a` : for fetching all available ROP files from the node.
- `f` : for fetching and saving the ROP files to a zipfile, which will be called `<node>_ropfiles.zip`. No reports are printed. In case of CPP nodes, a file containing MO data needed for certain reports is included.
- `ff`: same as `f` but the MO data file is not included which makes the collection quicker. This option is used when collecting a DCG since MO data will already be available in the MO dump.
- `g` : for printing all available reports, the menu will not be shown.
- `k` : for keeping the counters marked with the suspected faulty tag `<sf>TRUE</sf>`, without this option they are discarded.
- `w` : for generating a web report in table and graph format. The `-w` switch can be used to specify the location of the webpage. Currently works best with Firefox, avoid IE.
- `o` : for printing official KPI reports, using the KPI names of the CPI. Currently available for RNC only.
- `p` : for generating PNG files, using GnuPlot.
- `3` : for printing 3GSIM instantaneous counters from `/c/3gsim/stats`
- `z` : for printing the timestamps in the timezone of the workstation where moshell is executing

#### MO filtering

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- The option `-z <mogroup>` can be used to save the MOs printed by a report into a MO group.  
Example: to save the MOs printed by the RNC report `Worst 20 cells for RRC`, run `pmr -r <report> -z <mogroup>`.
- The option `-g` can be used to calculate KPIs for a smaller group of MOs instead of all. The processing time will be quicker and it is then possible to filter results on smaller groups of resources.  
Example:
  - `pmr -g tdmterm` will show KPIs based on TdmTermGrp counters only
  - `pmr -g cellmod8` will show KPIs based on counters of cells belonging to module 8 only (where `cellmod8` is a MO group created with the commands `ma iubmod8 iublink module =8$` and `ma cellmod8 iubmod8 reserved`)
- The option `-g` can also be used to exclude certain MOs from the reports, by using the exclamation mark (!) as a negative filter.  
Example: to exclude the MOs printed in the report `Worst 20 cells for RRC`, run `pmr -r <report> -z worstcellsgroup`, then `pmr -g !worstcellsgroup`.

### Threshold file

To check that the KPIs are within certain criteria, a threshold file can be specified with the option `-t`.

Example of threshold file and syntax explanation can be found at `moshell/examples/pm_files/thresholds.txt`.

Any KPI that are outside the the criteria specified in the threshold file will be marked in red or purple, depending on the severity.

### Generate Web report

Example:

- `pmrwg` : all reports will be saved to a web page in a default chosen location which is printed at the end of the `pmr` printout
- `pmrw -r 1-10,14 -w /home/user/public_html/RNC14` : reports 1-10 and 14 are saved to a web page located under `/home/user/public_html/RNC14`

Each `pmr` report in the web page shows up as a table and in some cases a graph is also generated. Currently works best with Firefox, avoid IE.

### Generate PNG files

The option "p" can be used to generate PNG files, using GnuPlot.

(\*\* Note : you may have to do a new re-install of cygwin to get gnuplot working)

The GnuPlot package can be installed from cygwin "select packages" window: Graphics > gnuplot

Example:

- `pmrp -m 24`

For RNC, it is recommended to run the plot on selected cell by using MO group. Example:

- `ma myrbs iublink=1234 reservedby`
- `pmrp -m 24 -g myrbs`

### Suspected faulty counters

If some ROP files contain counters marked with the "suspected faulty" tag (`<sf>TRUE</sf>`) then they are silently discarded unless the user has given the option `k` (e.g. `pmrk`) in which case the suspected faulty counter values will be kept. To identify which counter values are marked with the suspected faulty tag, the command `pmxs` can be used.

### Online/Offline

#### 1. Online:

To use `pmr` online (ie when connected to a node) just skip the `-l` option.

The function will check if there are any new XML files on the node, download any new XML files to the workstation as long as their timestamp is within the timespan specified by the `-m/-p/-s/-e` options, get some MO configuration data and print the menu.

#### 2. Offline:

To run `pmr` offline, specify the location of the ROP files with the `-l` option. The location can be a folder or a zipfile produced by the `pmrf` command. Refer to the "Offline mode" chapter for more info.

### Time options

If the command `pmra` is used then all ROP files are fetched. Otherwise, the ROP files of the last hour are fetched.

The `-m` and `-p` options are used for specifying the timespan that the reports should cover, in hours or parts of hours.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

The timespan is relative to the node's current date/time if online, and relative to the most recent file timestamp if offline.

Example:

- `pmr -m 5` - will show statistics for the last 5 hours.
- `pmr -m 5 -p 3` - will show statistics starting 5 hours ago and 3 hours from then on (ie: up to 2 hours ago).
- `pmr -m 0.25` - will show statistics for the last 15 minutes
- `pmr -m 0.5` - will show statistics for the last 30 minutes
- `pmrf -m 18 /path/to/ropfiles` - fetch the ropfiles of the last 18 hours and put them in a zipfile called `<node>_ropfiles.zip` in the folder `/path/to/ropfiles`

By default the timespan is for the last 1 hour.

The `-s` and `-e` options are used for specifying an absolute timespan. The timestamp should be in the format `yyyymmdd[.hhmm]`

Example:

- `pmr -s 20050705 -e 20050710`
- `pmr -s 20050705.1000`
- `pmr -s 20050705.1000 -e 20050705.1915`

The `-tz <hrs>` switch is for printing the timestamps a specific timezone. Eg: `-tz +10` will show the timestamps in UTC+10 timezone. Note: this setting can be saved in the `moshellrc` uservariable `tz_option`.

### Piping

It is possible to pipe each report into some unix commands. The pipe is done at the "Your Choice" prompt, after the menu listing all the reports. Example:

- `4 | sort -k3 -n` - to view report 4 and sort it numerically on the third column
- `5 | grep 205` to view report 5 and grep for lines matching "205"
- `3 | sort -k4 -n -r` to view report 3 and reverse sort it numerically on the fourth column

### Output format

The output format can be specified with the `-o` option.

By default, the output is text but it is also possible to specify the following formats:

- `csv` Comma separated
- `html` HTML
- `htmltab` HTML tables only (use for embedding into a web page)

Note: HTML reports are best generated with the option "w", e.g. "pmrw". See description further up.

### lubCellModule file

This file is only needed when offline, when printing reports aggregated on lub/Module/AtmPort/Subrack level.

If ROP files have been collected with "pmrf" then the file is automatically included with the ROP files and will be used when parsing the ROP files offline. Otherwise, the path of the file can also be specified with the option "-i".

This file contains the following printouts:

```
get ^aal5tpvcctp= vcltpid
get ^unisaaltp= aal5tpvcctp
get ^nbapcommon= unisaaltpref
get ^iublink= rncmoduleref
get ^utrancell= iublinkref
get device= spmreference
get ^ipaccesshostet= ipInterfaceMoRef
get ^sctp= rpuid
pr ^(|ipinterface|pluginunit|atmport|vpltp|vcltp|ethernetswitchport|ethernetswitchmoduleport|internaleth
```

Note: Handling of duplicated counter instances

Counter instances that are defined in several PM scanners will be reported by CPP as duplicated entries in the ROP files.

This can lead to unexpected results, such as counters with doubled values.

Usually the `pmr/pmx` commands can successfully ignore the duplicated counter entries but only when all the processed ROP files have the same type of counter duplication.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

Unexpected values will occur when some of the processed ROP files have a duplication while other dont.

Therefore it is highly recommended to make sure that none of the counters are defined in several scanners at the same time.

The commands pgets and pmxs will show if there are any duplicated counter instances in the PM scanners.

#### 4.4.10 pme[fd][cgurvxyz] [<pm\_logdir[uehexcep.zip>] [-b <boardgroup>] [-f] [-m <minushours>] [-p <plushours>] [-s <startdate>[.<starttime>]] [-e <enddate>[.<endtime>]] [-o <uehoptions>]

Fetch/decode event ROP files (RNC/RBS/ERBS/MSRBS).

##### Main options:

- `f` for fetching the ROP files
- `d` for decoding/parsing the ROP files

##### Secondary options:

- `c` for CTR/CellTrace
- `u` for UETR/UeTrace
- `g` for GPEH. Make sure the attribute `RncFunction::gpehDataLevel` is set to 1 (`ALL_DATA`). Otherwise the GPEH ROP files will only contain header data.
- `r` for RNC\_Exception (`/pxxy00/RNC_Exceptions`) or ENB Exceptions (`/c/logfiles/troubleshooting/exception`) or MSRBS Exceptions (`/lrat/exception`)
- `v` for ENB LocalEvents (`/r00xx00/localevent`)
- `x` for RNC UEH Exception basic files (add option "z" to store them in a zipfile)
- `y` for RNC UEH Exception detailed files (add option "z" to store them in a zipfile)

Note: If none of these options are specified then all applicable ROP files are fetched/decoded.

##### Argument

The argument is optional and can either be:

- the storage folder for the ROP files (applicable for all types of ROP files)
- or the path of a uehExceptions.zip file , previously collected by the command `pmefxyz -m 28d`

The default location is `/path/to/moshell_logfiles/logs_moshell/pmfiles/<nodeip>`.

It is also possible to change the default location in the uservariable `pm_logdir`.

##### Other options:

- `-b <boardgroup>` : to fetch GPEH files on certain modules only, eg: `pmefdg -b mod1`
- `-f` : to run the wcdma decoder with option "--force".
- `-o <ueh-options>` : to specify various options for the parsing of RNC UEH exceptions. See below.

##### Time options:

The "-m" and "-p" options are used for specifying the timespan that the reports should cover, in hours or parts of hours.

Note: To specify in days, add the letter "d".

The timespan is relative to the node's current date/time if online, and relative to the most recent file timestamp if offline.

By default the timespan is for the last 0.25 hour (15 minutes).

Examples:

- `pmefgd -m 5` : fetch and decode gpeh rop files for the last 5 hours.
- `pmefd -m 5 -p 3` : fetch and decode all event rop files, starting 5 hours ago and 3 hours from then on (ie: up to 2 hours ago).
- `pmedu -m 0.25` : decode uetr rop files for the last 15 minutes
- `pmef -m 0.5` : fetch all event rop files for the last 30 minutes
- `pmefxz -m 28d` : fetch all basic UEH exception files for the last 28 days
- `pmesd -s 20050705 -e 20050710` : decode all event rop files between the dates 20050705 and 20050710
- `pmefc -s 20050705.1000` : fetch all ctr rop files from the 20050705 at 10:00 to now
- `pmefdu -s 20050705.1000 -e 20050705.1915` : fetch and decode uetr rop files between the 20050705 at 10:00 to the 20050705 at 19:15



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

**RNC UEH exceptions:**

There are two kind of reports: basic and detailed.

- basic reports ("x") contain 4 fields: EC (Exception Code), CC (Cause Code), Effect (eg: call drop), and Nr (Number of Exceptions of this type that occurred in the node).
- detailed reports ("y") contain 4 more fields in addition to the above 4: Cell (the Cell Id where the exception occurred), sUeRc/tUeRc (the source and target bearer of the UE), procedure (the procedure during which the exception occurred).

The options below are specified with the "-o" option.

- `time=a/d/h` : to aggregate on the whole period (a) , or on daily basis (d), or on hourly basis (h). If unspecified then "a" is the default. More than one value can be given, eg "time=adh" will print all three reports (whole period, daily, and hourly). Basic reports are not applicable on hourly basis.
- `fmt=c` : to print the output in csv format. Unspecified will print tab-separated.
- `min=<value>` : to filter out UEH exceptions that occurred less than a certain number of times, eg "min=100" will only show UEH exceptions that occurred 100 times or more. Unspecified will print all UEH exceptions.
- `sort=<field>` : to specify the field (1,2,3,4...) on which to sort the output. Eg: "sort=4" means to sort on the 4th column.
- `sum=<list of fields>` : to specify the list of fields (1, 2, 3, 4...) to be included in the report. Eg: "sum=12347" means to include fields 1,2,3,4, and 7 in the report.

Examples:

- `pmefxy -m 10d` : fetch all basic and detailed files for the last 10 days
- `pmedx -m 10d -o time=d,fmt=c,sort=3` : print the basic report for the last 10 days printed on daily basis , in csv format, and sorted on the 3rd column
- `pmedy -m 10d -o time=adh,sum=12347` : print only the columns 1,2,3,4,7 for the detailed reports on daily, hourly, and full period basis
- `pmedy -s 20200604.0000 -e 20200604.1200 -o time=h,fmt=c,sum=123` : print detailed report in csv format on hourly basis for the first 12 hours on 20200604, aggregate on the first 3 columns.
- `pmedxy -m 10d -o time=a,min=100,sum=123,sort=4` : print both basic and detailed reports for last 10 days aggregated on the whole period, including only the first 3 fields and sorting on the 4th column

**4.4.11 pst [<scan-filter>|<scan-proxy>] [<scan-state>]**

List all PM scanners and their state. Examples:

- `pst`
- `pst . act` - list all active scanners
- `pst gpeh susp` - list all gpeh scanners that are suspended

**4.4.12 pgets[m][n][r] [<scan-filter>|<scan-proxy>] [<contents-filter>]**

Print the counters defined in the scanner(s).

Without argument, all scanners/jobs are printed.

For a STATS/PM scanner, we see the following:

- a header showing the proxy number, the scanner name, the state, the granularity period in seconds and the total number of counters activated (CPP) or the number of MeasurementReaders defined (ECIM/COM).
- the list and number of counters grouped by MoClass
- with the option `n` we see the number of counter instances for each scanner (only applicable when the contents-filter is empty).
- for each counter, some optional tags may be shown:
  - deprecated: means that the counter is obsolete and will never be stepped.
  - a number in square brackets: shown on PDF counters to indicate the number of elements in the array.
  - notInMOM: means that the counter is implemented in RNC SW but not specified in the MOM. Should only happen on pre-GA SW.



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

For an EVENT scanner (GPEH/UETR/CTR), we see the following:

- a header showing the proxy number, the scanner name, the state, and the total number of events activated in the filter
- a list of filters such as IMSI, ACCESS\_CELL, CELL, etc
- the list and number of event filters grouped by event category

It is possible to use a *contents-filter*. If used, then only the scanners containing a string matching the filter (not case sensitive) will be displayed.

#### Options:

- `m` : groups the printout by MO and counter instead of by scanner. It shows for each counter in how many scanners they are defined and which ones.
- `n` : shows the number of counter instances defined in each scanner. The number of counter instances for each scanner are kept in a cache which stays for the duration of the moshell session. To refresh the cache, run `pgetsn` with the option `r`, ie `pgetsnr`.

#### Examples:

- `pgets` - show contents of all scanners/jobs
- `pgets stats|pmjob` - show contents of all statistics scanners or pmjobs
- `pgets . receive` - list all scanners whose contents matches "receive"
- `pgets . atmpport.*receive` - list all scanners whose contents matches "atmpport.\*receive"
- `pgets . cell=12345` - list all whose contents match the string "cell=12345"
- `pgetsn .` - show the number of counter instances defined in each statistics scanner
- `pgetsm . load` - for all counters matching the word load, show if they are defined in a scanner and if yes, in how many scanners and which ones
- `pgetsm . utrancell` - same as above but for all counters belonging to utrancell
- `pgetsm . 2` - show all counters which are defined in two scanners

#### 4.4.13 `pcr[pcfpdazg]/lpcr[pcfpdazg] <ScannerName|JobName> <moclass-filter>|<moinstance-filter>|<mo-group>|<counter-file> [<counter-filter>] [<granularity>]`

Create a Statistics Scanner or PmJob.

Note: EVENT scanners are already created by default and shall be set with the "pset" command.

The granularity field is optional.

- On CPP nodes, it can be set to 300, 900, or 3600 seconds.
- On COM nodes, it can be set to 10, 30, 60, 300, 900, 1800, 3600, 43200, or 86400 seconds.

By default it will be set to 900 (15 minutes).

Note: In RCS commercial nodes, only 900 seconds is supported. In RCS lab nodes (unsecure DUS) it may be necessary to run the following command (followed by node restart) before being able to select other granularity values: `/pms/rp ecim`

#### Options:

- `c`: for activating counters on all MO classes matching the filter as well as all their children/grandchildren, etc.
- `f`: for adding counters even if they are already included in another scanner.
- `g`: for creating PmJob with MeasurementReaders on PmGroup only (all counters in each MO class will be included). Applicable for COM nodes only.
- `p`: for creating a PREDEF scanner. By default a USERDEF scanner is created.
- `z`: for specifying a custom name without prefix or suffix and/or with spaces in the name (which will be represented by "@" sign).
- `d[a]`: for debug. The syntax of "pcrd" is: `pcrd/pcrda <counter-file>` where the format of the counter-file shall be as per below. The purpose of "pcrd" is to test a counter file and identify any pm counters that are not supported by the node SW. With option "a" (pcrda), it is also possible to test which regular attributes can be included in a scanner.

A negative filter (!) can be used on the moclass or counter filter in order to exclude certain MOs or counters. See more info about regular expressions used in the filters in Section 3.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

Note: for certain MO classes, the configuration attributes can be included in the scanner. The user variable `include_nonpm` must be set to 1.

#### Examples:

- `pcr atmpport_vcltp atmpport|vcltp` - A new user defined scanner is created for all MOs of class `AtmPort` and `VclTp`
- `pcr atmpport_vcltp atmpport=ms-6-1 received 300` - Only the MO instances whose RDN match "atmpport=ms-6" are included. Only counters matching "received" will be activated. The granularity period will 5 minutes (300 seconds).
- `lpcr vc_scanner atmpport=ms-6-1,vptlp=1,.*vcltp=100` -> only the MO instances whose LDN match "atmpport=ms-6-1,vptlp=1,.\*vcltp=100" are included.
- `pcr atmpport atmpportgroup` - All counters for MO group `atmpportgroup` are added to a new scanner called `atmpport`.
- `pcr atmpport_utranCell ~/mycounters.txt` - All counters stored in the file `/mycounters.txt` are added to the scanner `atmpport_utranCell`. See format of the counter file below.
- `pcrc all_transport transportnetwork` - All counters for all MO classes lying under the `TransportNetwork` MO are added to the scanner `all_transport`
- `pcrc all_transport_notMtp transportnetwork!mtp3` - All counters for all MO classes lying under the `TransportNetwork` except `Mtp3` MOs are added to the scanner `all_transport_notMtp`
- `pcrc all_rnc_without_utranrel rncfunction!utranrelation|utranCell !rej` - All counters for all MOs lying under `RncFunction` except `UtranRelation` and `UtranCell` MOs and not counters matching "rej"
- `pcrp myscanner atmpport` - all counters in MO classes matching "atmpport" are included in the scanner `PREDEF.myscanner.STATS (CPP)` or `PREDEF_myscanner.NOOSSCONTROL (COM)`
- `pcrp PRIMARY ~/primarycounters.txt` - all counters stored in the file `/primarycounters.txt` are included in the scanner `PREDEF.PRIMARY.STATS (CPP)` or `PREDEF_PRIMARY.NOOSSCONTROL (COM)`
- `pcrz my@scanner plug|ipint` - create a scanner with name "my scanner"

#### Notes:

- If certain counters are already defined in another scanner of that node, they will be automatically excluded from the new scanner in order not to have duplicate lines in the XML file. This can be bypassed by using the `f` option, eg:  
`pcrf atmpport_vcltp atmpport|vcltp` (not recommended)
- By default, the counters that are marked as `deprecated` or `notInMOM` are not included by the `pcr` command. This behaviour can be changed by setting the uservariable `exclude_deprecated` to 0.

#### Interaction with OSSRC/ENM:

Scanners/Jobs created from moshell/AMOS on a node controlled by OSS/ENM will be automatically deleted by OSS/ENM after a few minutes. It is possible to avoid this by:

- creating the PM scanner with the command "pcrp", since `PREDEF` scanners are not touched by OSS/ENM. To delete predefined scanner, use "pdelp"
- or, in the case of OSSRC, setting the OSSRC setting `scannerConfigMaster` to OFF

**Format of the counter file:** The spaces at the beginning of the line are not necessary, they are just shown for readability purposes. To comment out some lines, just precede the line with a hash sign (#). Any words after the first word are ignored.

#### Example:

```
AtmPort
 pmReceivedAtmCells
 pmSecondsWithUnexp
UtranCell
 pmCellDowntimeAuto
 pmCellDowntimeMan
 pmChSwitchDch128Fach
 pmChSwitchDch384Fach
 pmChSwitchDch64Fach
```

It is also possible to take the printout from `pmom` as is. This will work as well and saves having to do any editing.

```
#####
MO Class Pm Counters
#####
UtranCell 296
 pmCellDowntimeAuto
```

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

```
pmCellDowntimeMan
pmChSwitchDch128Fach
pmChSwitchDch384Fach
pmChSwitchDch64Fach
pmChSwitchFachDch
pmChSwitchFachIdle
```

It is also possible to use the following format for the counter file (for creating counters on MO instances where each MO instance will use a different set of counters).

Example:

```
ManagedElement=1,RncFunction=1,UtranCell=30124
pmRes1
pmRes2
ManagedElement=1,RncFunction=1,UtranCell=30125
pmRes3
ManagedElement=1,RncFunction=1,UtranCell=30126
pmRes2
pmRes4
```

It is also possible to take the printout of pgets as is. This is useful to clone an existing scanner, eg with a different rop period.

Example:

```
l+
pgets <oldscanner>
l-
pbl <oldscanner>
pcrf <newscanner> $logfile . 300
```

#### 4.4.14 pcrk[f][v][d] [<kpidefinitionfile>] [<granularity>]

Create PmKpi definitions on the node.

The command first generates a copy of the existing PmKpi definitions, this can then be used to restore the current PmKpi MOs if needed. Then the kpidefinition file specified in the argument is used to generate a new set of PmKpi MOs which are then activated on the specified granularity.

##### Arguments:

- if no argument is specified then the command will only display the current PmKpi definitions with number of KPI counter instances that are currently in use and generate a kpidefinition file based on the existing PmKpi MOs.
- the first argument is the path of the kpidefinition file on the workstation, which will be used to generate a new set of PmKpi MOs.
- the second argument is the granularity in seconds: 300, 900, or 3600. In case this argument is omitted, 900 will be used as default.

##### Options:

- f: to force activate all PmKpi MOs on the specified granularity. Without this option, any already enabled PmKpi MOs will remain on their current granularity which may be different than the specified granularity.
- v: to validate a kpidefinitionfile
- d: to delete existing kpi definitions (no argument needed)

#### 4.4.15 pbl <scan-filter>|<scan-proxy>

Suspend a scanner. This means that counters defined in this scanner will not be recorded in XML files each granularity period.

#### 4.4.16 pdeb <scan-filter>|<scan-proxy>

Resume a scanner.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

#### 4.4.17 pdel <scan-filter>|<scan-proxy>

Delete a scanner.

Note: only statistics scanners can be deleted or created. Event scanners (GPEH/UETR/CTR) are fixed and can only be set.

#### 4.4.18 emom [uetr|gpeh|ctr|all] [<event-filter>]

Display list of events available for each kind of event-based scanner (RNC/RBS only).

The event reference files are stored in **moshell/commonjars/eventfiles** and are SW dependent.

MoShell automatically chooses the appropriate version of the event files so the user does not have to worry about this.

##### Examples:

- `emom u ranap` - display all ranap related events for uetr
- `emom all audit` - display all events containing the word "audit" for all kind of event based scanners

#### 4.4.19 pset[d]

Set the contents of an event-based scanner (RNC/RBS/LTE/ENB/MSRBS).

Following syntaxes apply:

- set filters for UETR/UTETRACE:

```
pset[d] [-s/-f <ip>:<port>] <scan-filter>|<scan-proxy> <event-filter>|<event-file>|all
<imsi>
```

- set filters for GPEH/CELLTRACE:

```
pset[d] [-s/-f <ip>:<port>] <scan-filter>|<scan-proxy> <event-filter>|<event-file>|all
[<moGroup>|<moFilter>|all] [<ue-fraction>] [<filter>=<value>]
```

- set filters for CTR:

```
pset[d] [-s/-f <ip>:<port>] <scan-filter>|<scan-proxy> <event-filter>|<event-file>|all
<moGroup>|<moFilter> [<trigger-event>]
```

Use the `emom` command to view the list of events that apply for each measurement type.

Event scanners UETR/CTR are applicable for RNC only; UETRACE/CELLTRACE are applicable to LTE eNB; GPEH scanners are applicable to RNC and WRBS only.

The first argument is the scanner name or scanner proxy.

The second argument indicates the list of events to include, either using regular expression matching or from a file containing one event on each line. It is possible to use negative filter (!) to exclude certain events.

The following fields are optional, if no value is entered (or `all` in the case of GPEH/CELLTRACE *utrancell-filter*), no filter will be sent to the node who will then use a default setting:

- *trigger-event* default=RRR\_RRR\_CONNECTION\_SETUP
- *ue-fraction* default=200
- *utrancell-filter* in GPEH/CELLTRACE default= all cells
- *filter* additional filters, see the list below.

List of additional filters that can be specified at the end of the command line with the syntax `<filter>=<value>`:

- **ASN1**: true/false (CPP) or Include/Exclude (ECIM/COM). Only applicable for ENB.
- **GUMMEI**: list of gummei values separated by comma. Only applicable for ENB.
- **PERIODICITY**: one of 2,3,4,6,8,12,16,20,24,28,32,64 (value in seconds). If invalid value is given, then default will be 8 seconds. Only applicable for RNC RDT filters PREDEF.600XX.GPEH
- **UE\_POS\_MEAS\_VALIDITY**: one of 0 (cellDch) or 2 (allStates). If invalid value is given, default will be 0. Only applicable for RNC RDT filters PREDEF.600XX.GPEH
- **UERC**: a list of UeRc numbers, eg 1-200. Any invalid or unsupported UeRc numbers will be automatically excluded from the filter. Only applicable for RNC RDT filters PREDEF.600XX.GPEH

For LTE eNB, the options `-s/-f` can be used to specify the output mode of the scanner:

- **s**: output mode `STREAM`

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- f: output mode `FILE_AND_STREAM`

If these options are used then the ip address and port for the stream must be given as argument to the option, example:  
`-f 10.12.45.38:3402`. If these options are not specified the the output of the scanner will be to `FILE` only.

#### Examples:

- `pset 10000 S1 cell=2A 300` - set a LTE CELLTRACE scanner for S1 events on cell=2A, UE fraction=300
- `pset 4 X2 all ASN1=true GUMMEI=0x214365ABCD00,0x214365ABCD01` - set a LTE CELLTRACE scanner for X2 events on all cells with filter ASN1 and GUMMEI filters
- `pset 20001 ranap cell=30456` - set a CTR scanner for ranap events on cell=30456 using the default triggering event
- `pset 30006 all` - set a GPEH scanner for all events using no cell filter and no ue-fraction filter. All cells will be selected and the default ue-fraction will be used (200).
- `pset 30006 all all 1000` - set a GPEH scanner for all events on all cells using the ue-fraction 1000
- `pset 30004 handover 304[0-6] 1000` - set a GPEH scanner for all events matching "handover" on cells 3040 to 3046 with ue-fraction=1000
- `pset 30004 nbap mycellgroup` - set a GPEH scanner for all nbap events on all cells of the MO-group *mycellgroup*
- `pset 10002 rrc|nbap!connection 123456789012345` - set a UETR scanner on imsi 123456789012345, for all events matching "rrc" or "ranap" but not "connection".
- `pset 30005 .!rrc_paging_type_1` - set a GPEH scanner for all events except RRC\_PAGING\_TYPE\_1
- `pset 30005 ~/myevents.txt` - set a GPEH scanner for all events listed in `/myevents.txt`, no filter to be used for the cells nor the ue-fraction.
- `pset 10004 -s 10.34.75.12:5443 . all 1000` - set a LTE CELLTRACE scanner for all events, without a cell filter and with UE fraction=1000, output stream to ip 10.34.75.12 and port 5443
- `pset 60000 ^measurement cell=iub-10 1000 PERIODICITY=4 UE_POS_MEAS_VALIDITY=2 UERC=22,24-25,100-200` - set a RNC RDT scanner for all measurement events, on cell iub-10 with UE fraction 1000, periodicity 4 seconds

Note: The `d` option ("debug") can only be used on its own. The syntax of `psetd` is: `psetd <scanner> <event-file>` where the format of the event-file shall be as per above. The purpose of `psetd` is to test an event file and identify any events that are not supported by the node SW. The functionality of `psetd` is implemented as an moshell script, the script can be seen in `moshell/commonjars/scripts/psetd.mos`. The `psetd` command is called via an alias listed in the moshell file. Type `alias` to see the list of aliases. This shows that the user can define any new commands they need by adding an alias in the `.moshellrc` which will point to a script file. The parameters to the command will be sent to the script file via the positional parameters `$1`, `$2`, `$3`, etc. The variable `$0` will be set to the whole line contents. See `h run` for info.

Note: For RBS GPEH, the *utrancell* and *ue-fraction* fields are not applicable. If the event-filter does not match any events, the RBS GPEH scanner will be set to empty.

## 5 Lazy

### 5.1 Software Upgrade CPP

Delete some old UpgradePackage if necessary to free up some disk space:

```
del upgradepackage=<oldpackage>
```

Create the UpgradePackage MO:

```
cr swmanagement=1,upgradepackage=<name>
```

At the prompt, enter *FTP Server Address* where the UP is stored and the path to the *UCF (Upgrade Control File)*. At the next prompts, enter *FTP Server UserID* and *Password*, or just `d` for default value (will be **anonymous**)

Perform the SW installation:

```
acc upgradepackage=<name>$ nonblockinginstall
```

Monitor installation progress:

```
polu
```

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

Perform the SW upgrade:

```
acc upgradepackage=<name>$ rebootnodeupgrade
```

Monitor upgrade progress (confirmUpgrade will be done automatically):

```
polu
```

Check that the new cv is using the new upgrade package

```
cvls
```

Note: if `polu` was not run after performing `rebootnodeupgrade`, the upgrade will have to be manually confirmed:

- `get upgradepackage=<name>$ state —> wait until state "awaitingconfirmation"`
- `acc upgradepackage=<name>$ confirmupgrade`

## 5.2 Software Upgrade ECIM/COM

Delete some old UpgradePackage if necessary to free up some disk space:

```
del upgradepackage=<oldpackage>
```

Create the UpgradePackage MO:

```
acc swm=1 createupgradepackage
```

At the first prompt, enter the URI from where to fetch the package, eg `sftp://<username>@<ipaddress>/<path>`

At the next prompt, enter the server password

Perform the SW installation:

```
acc upgradepackage=<name>$ prepare
```

Monitor installation progress:

```
polu
```

Perform the SW upgrade:

```
acc upgradepackage=<name>$ activate
```

Monitor upgrade progress (confirmUpgrade will be done automatically):

```
polu
```

Check that the new cv is using the new upgrade package

```
cvls
```

Note: if `polu` was not run after performing `rebootnodeupgrade`, the upgrade will have to be manually confirmed:

- `get upgradepackage=<name>$ state —> wait until state "awaitingconfirmation"`
- `acc upgradepackage=<name>$ confirm`

## 5.3 RNC lub operations

- `str - view state` of all lub/Cells/Channels/Nbap/Nodesynch in a table format (type `h str` for more info)
- `bl/deb iublink=<iubname>$ - block/deblock an iublink`
- `bl/deb cell=<cellname> - block/deblock a cell`
- `str -i <iubname> - view states for sites related to a particular iub filter only`

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

## 5.4 Common RNC lub Integration Problems

When trying to integrate a new RBS, some data mismatch might cause the *lub*, *Cell*, or *Channels* not to come up. Things to check are the values of:

- Transmission
- AAL2 Addresses
- VCI values
- localCellId

Take a print of all MOs related to the lub and check that the vci values match on both sides, check if any related MOs are down:

```
lk iublink=<iub> #in RNC
lk iub=<iub> #in RBS
```

Find out the Aal2Ap used by that lublink in RNC:

```
lk iublink=<iub>
```

Check that the AAL2 addresses match on all sides:

```
get aal2routingcase=<rbsroutingcase> (in RNC and RXI)
get aal2sp=1 (in RBS and RXI)
```

Check that the AAL2 path id's match on both sides:

```
get aal2pathvcctp=<pathname> pathid (in RNC, RBS, and RXI if applicable)
```

Check that the aal2 continuitycheck match on both sides:

```
get aal2pathvcctp=<pathname> continu (in RNC, RBS, and RXI if applicable)
```

Check that localcellid match on both sides:

```
get cell=<cell> local (in RBS and RNC)
```

Perform a loopback test on all VCIs of that iub, to see if transmission is ok

```
lacc atmpport=<port>,vpltp=<vp>,vpctp=1,vcl eteloopback
```

Check RNC/RBS alarms

```
al
```

Check RNC devices are ok

```
std
```

Check Cell error code, cellbarred, actor info, etc.

```
ced
tgc/tgd (type "h tg" for info)
```

Check RNC/RBS general state, look for potential HW/SW faults

```
dcm
```

Check all cross-connects are ok

```
stc (mainly in RXI/MGW)
```

Find out the module MP that is handling the site and check if there are some errors:

```
get iublink= module
lh modXX te log read
```

(to restart the module MP, you can use the command "acc modXX restart")



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

## 5.5 Common RNC lu/lur Integration Problems

Take a print of all MOs related to the lu and check that the VCI values match on both sides. Also check if any related MOs are down:

```
lk mtp3bsrs=<name>
```

Perform a loopback test on all VCs of that interface, to see if transmission is OK:

```
lacc atmpport=<port>, vpltp=<vp>, eteloopback
```

Check that the pointcodes matches on both sides

```
get mtp code
```

Activate/deactivate a C7 link

```
lacc mtp3bsls=<name>, deactivate/activate
```

Block/deblock an Aal2Path, check that the *pathlds* and *a2ea* addresses match on both sides:

```
bl/deb aal2pathvcctp=<pathname>
get aal2pathvcctp=<pathname> pathid
get routingcase=<name>
```

## 6 Scripting

Moshell supports the use of variables and logical constructs. These can be used directly from the command line or within MoShell command files.

### 6.1 Preset Variables

The following variables are set immediately after MoShell startup:

- `$logdir` - path to the **moshell\_logfiles/logs\_moshell** directory
- `$moshelldir` - path to the moshell directory
- `$gawk` - path to gawk
- `$ipaddress` - IP address of the node that MoShell is connected to
- `$moshell_version` - the MoShell version
- `$tempdir` - path to the directory containing all temporary files for this moshell session. Gets deleted at the end of the session.
- `$uname` - output from the "uname -a" command, showing the operating system of the workstation running moshell.

The following variables are set after the MOM has been parsed:

- `$momversion` - the MOM version of the node (eg: RNC\_NODE\_MODEL\_E\_5\_3, MGW\_NODE\_MODEL\_R3\_9\_0)
- `$cellmomversion` - the CPP MOM version (3.3, 4.3, 5.1, etc) of the node
- `$momdocnumber` and `$momdocrevision` - the document number and revision of the MOM (eg: 15554-AXD10503/1 , rev: Z1)
- `$background_pid` - the process id of a process started into background from moshell command line, eg:  
`l $moncommand > $logfile &`
- `$rats` - the list of RATs supported by the node, eg G, L, W, N. Looks for presence of MOs such as `BtsFunction=1`, `ENodeBFunction=1`, etc. Set after running `lt all`.
- `$gnbfunctions` - the list of NR functions supported by the node, eg C (CUCP), U (CUUP), D (DU) . Set after running `lt all`.
- `$ratsconfig` - the LTE/NR deployment scenario (eg: TDD/FDD, LB/HB/MB). Set after running "cvls" .

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

These variables can be handy to have when a script needs to know what SW revision is running in the node or what kind of node it is.

The following variables are set after running certain MO commands:

- `$mibprefix` the MibPrefix of the FDN. Eg: SubNetwork=OSS,SubNetwork=RNC1,MeContext=RBS3
- `$cppversion` the CPP version of the node, according to the information in the current UpgradePackage.
- `$nr_of_mos` the number of MOs that were printed on screen by the last run of the `pr/st/get/prod/fro/set/del/acc` commands.
- `$nr_of_mos_ok` the number of MOs that were successfully operated upon by the last run of the `set/del/acc` commands.
- `$command_result` set after running the `cr/pcr/pset/trun` commands. Possible values: 0 for success, 1 for failure.
- `$returncode` set after running any moshell command. Possible values: 0 for success, 1 for failure.
- `$action_result` set after running the `acc` command. Contains the return value of the action.
- `$nr_of_alarms` the number of active alarms on the node. Set after the last run of the `al` command.
- `$nr_of_cvs` the number of CV:s that exist on the node, is set after the last run of the `cvls` command.
- `$nr_of_scanners` the number of scanners printed by the last run of the `pst/pgets/pdel/pbl/pdeb` commands.
- `$nr_of_counter_instances` the number of counter instances printed by the last run of the `pgetsn` command.
- `$moncommand` the command to start the monitor client after having run the "mon" command.

The following variables are set after running the commands `bp/bo`:

- `$coremp_pos` the positions of the core MPs, eg: 001000:001100
- `$coremp_type` the board types of the core MPs, eg: GPB53:GPB53
- `$coremp_hw` the HW platform of MSRBS Baseband board, eg G2 or G3
- `$nr_of_boards` the number of boards belonging to a board group

The following variables are set after running the `cvls` command:

- `$nr_of_cvs` the number of CV's that exist on the node.
- `$currentUP` the product number and revision of the UpgradePackage shown in the field "Current UpgradePkg"
- `$currentSW` the release name (eg L17A.3) of the UpgradePackage shown in the field "Current UpgradePkg"
- `$swName` the product name of the active SwVersion (eg MSRBS, vRC, vPP, etc). Usually corresponds to the node type. Only applicable to COM nodes.

The following variables are set after running one of the `l+/u+/u-/u!/diff` commands:

- `$logfile` the logfile that is currently open. Set immediately after executing the `l+` command, stays set even after `l-` and will only be reset the next time a new logfile is open with `l+`
- `$undologfile` the logfile used by the undo command. Set immediately after executing the `u+/u+s` command, stays set even after `u-` and will only be reset the next time a new undo mode is started with `u+/u+s`.
- `$undocommandfile` the command file that can be used to undo the commands that were run between `u+/u+s` and `u-`. Set immediately after executing the `u-` command.
- `$undodelcommandfile` - the file containing the delete commands. Only applicable to simulated undo mode `u+s`
- `$undotruncatefile` / `$undoxmlfile` - the path of the file generated by the `u!` command
- `$diffcsvfile` / `$diffcmdfile` - the path of the result file and command file generated by the `diff` command

The following variable is set after having logged on to the node via telnet/SSH or FTP/SFTP.

- `$password`

The contents of the variable can not be printed, it will only show if it's empty or not. By setting this variable to empty (by doing: `$password =` ), this will force MoShell to check the password again. Useful in case the password has changed on the node during the MoShell session.

The `$nr_of_vars` variable is set after running the `pv` command.

This variable indicates the number of scripting variables that were printed in the last `pv` printout. By using `pv` together with a filtering pattern (eg: `pv $table`), it is possible to find out the number of variables that had matched the pattern, for instance the number of elements in a hashtable.

The `$nr_of_lines` variable is set after using the functions "readfile" or "testfile".

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

After using the function "testfile", this variable is set to 0 if the file does not exist and to 1 if the file exists.

After using the function "readfile", this variable is set to 0 if the file does not exist and to the number of lines in the file if the file exists. The difference between testfile and readfile is that testfile won't actually read the file, it will just check if the file exists whereas readfile will test the file, then read it.

Example1:

```
$lineContent = testfile(/path/to/myfile)
if $nr_of_lines = 0
 l echo "File not found!"
 return
fi
```

Example2:

```
$lineContent = readfile(/path/to/myfile)
if $nr_of_lines = 0
 l echo "File not found!"
 return
fi
for $lineNumber = 1 to $nr_of_lines
 if $lineContent[$lineNumber] ~ thispattern
 print We found it! The line is $lineNumber.
 return
 fi
done
```

Example (list all scripting variables currently set via pv):

- \$logdir = /home/eanzmagn/moshell\_logfiles/logs\_moshell
- \$momversion = RNC\_NODE\_MODEL\_E\_5\_3
- \$moshellldir = /home/eanzmagn/tools/moshell
- \$cellomomversion = 4.3.1
- \$gawk = /home/eanzmagn/tools/moshell/gawk
- \$ipdaddress = 10.1.128.17
- \$moshell\_version = 6.1
- \$nr\_of\_mos = 1
- \$password = \*\*\*\*\*

## 6.2 Variable assignment

A variable value can be assigned in six ways, see below.

A variable can also be unassigned, using the `unset` command.

By using the command `unset small`, all variables are unset, except:

- the "system" variables (\$gawk, \$ipaddress, \$password, \$moshell\_version, \$moshellldir, \$logdir, \$momversion, \$cellomomversion)
- the "global" variable(s) (ie: assigned with the ":-" sign, instead of "=").

By using the command `unset all`, all variables are unset except the "system" variables.

NOTE: It is always good practice to unset a variable as soon as it is not needed anymore since having too many variables defined slows down the processing of the command line. It is also good to do `unset all` at the beginning and end of a command file (and before doing the `return` command) in order to avoid interference from un-needed variables. See the script examples in **moshell/commonjars/scripts**

To print all currently assigned variables, use the command `printvar`. To just print one variable, type:

```
pv <pattern> (where the pattern matches the variable(s) to print)
```

```
print "$variable"
```

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

The variable value can be assigned in six ways:

1. From the command line.

The variable to be assigned is on the left side of the equal sign and the value is on the right side. Each element must be separated by spaces. Example:

```
$i = 3
$node = RNC
$password =
```

By running `password =` this sets the password to an empty value and will force MoShell to ask for the password again.

2. At moshell startup, using the `-v` option. In this case, the "\$" sign should be omitted. (otherwise it gets interpreted by the Unix shell)

Example:

```
moshell -v upmo=CXP9011008_R1A03,ftpserv=10.1.0.16,secure_shell=1,secure_ftp=1 rnc34}
```

In this case, we can see that scripting variables (`$upmo` and `$ftpserv`) and user variables (`secure_shell` and `secure_ftp`) have been mixed in the same statement. This is OK because any variable that is not recognised as a user variable will be treated as a scripting variable.

3. From the following commands: `get`, `pget`, `fro`, `ip2d/d2ip`, `h2d/d2h`, `uv`

The mo-filter and attribute-filter must be specified, then comes the redirection sign (`>`), then the variable name. If several attributes are printed, only the last attribute value gets assigned into the variable. Examples:

- a) `get 0 productName > $nodeType` (result: `$nodeType = RBS3202`)
- b) `get ethernetlink ipaddress > $ipaddress` (result: `$ipaddress = 10.1.128.17`)
- c) `get configurationversion currentupgrade > $currentUp` (result: `$currentUp = UpgradePackage=CXP9011123_R12F`)
- d) `get $currentUp administrativedata > $swRev` (result: `$swRev = Struct{5} >>> 1.productNumber = CXP9011123 >>> 2.productRevision = R12F etc.`)
- e) `pget EUtranCellFDD=1 pmRaSuccCbrr > $pmra` (result: `$pmra = 157`)
- f) `lfro subrack=ms,slot=1,pluginunit=1$ ^r > $froid` (result: `$froid = 0`)
- g) `d2ip -4127129085 > $ip_addr` (result: `$ip_addr = 10.1.2.3`)
- h) `h2d 0xa > $res` (result: `$res = 10`)
- i) `uv ^credential > $credential` (result: `/home/ericsson/moshell/commonjars/host.p12`)

4. Using an arithmetic operation

The following numeric operations are supported:

- **+** addition
- **-** subtraction
- **\*** multiplication
- **/** division
- **% modulo** (returns the remainder of an integer division operation)

Examples:

- a) `$i = 1` (result: `$i=1`)
- b) `$i = $i + 1` (result: `$i=2`)
- c) `$j = $i * 3` (result: `$j=6`)
- d) `$k = $i * $j` (result: `$k=12`)
- e) `$l = $i / $j` (result: `$l=0.333`)
- f) `$m = $k % 5` (result: `$m=2`)

Note: Only one operation per line is allowed. A space must exist between each element of the operation. There cannot be more than two members in the operation (ie: `$i = $j + $k ==> OK`. But `$i = $j + $k + $l ==> NOTOK`)

5. Using the output from a Unix command:

The Unix command must be surrounded by back-quotes (```). Variables can be used within the Unix command. Examples:

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- Example

```
$date = `date +%y%m%d-%H%M`
(result: $date = 040930-1745)
get ethernetlink ipaddress > $ipaddress
(result: $ipaddress = 10.1.128.17)
$logfile = $ipaddress_$date.log
(result: $logfile = 10.1.128.17_040930-1745.log)
l+m $logfile
(open a logfile, don't display anything on the screen)
te log read
l-
(close logfile)
$errors = `grep -c ERROR $logfile`
(result: $errors = the number of ERRORS found in the logfile)
l rm $logfile
(remove the logfile)
```

- Example: Making a cv that has the same name as the current startable cv but the last digit is incremented by 1

```
lt configurationversion
get configuration startable > $startable
(result: $startable = RBS3045_P2.1.5_CU3_A_01)
$cvname = `$gawk -v cvname=$startable 'BEGIN {
 print gensub(/.\/$/, "", 1, cvname) sprintf("%02s", substr(cvname, length(cvname)-1)+1) }`'
cvms $cvname
(result: $cvname = RBS3045_P2.1.5_CU3_A_02)
```

## 6. Using result from a unix command

If the built-in function `system` is used instead of the back-quotes ( ``` ) then the exit code of the unix command is saved to the variable (instead of its output).

Example:

```
$result = system(cp $file1 $file2)
(result: 0 if the copy was successful, or some other number if the copy failed)
```

## 7. Using String manipulation

The following string operations are supported: *concatenation* and *substitution / replacement*.

The concatenation is performed by juxtaposing the strings. Syntax for concatenation: `$var = string1string2string3` (the strings are concatenated without space in between) or `$var = string1 string2 string3` (the strings are concatenated with spaces in between)

Syntax for concatenation:

- a) `$var = string1string2string3` (the strings are concatenated without space in between)
- b) `$var = string1 string2 string3` (the strings are concatenated with spaces in between)

The substitution/replacement is performed using the `-s` switch to specify the string to substitute and the `-r` switch to specify the string it should be replaced with. If the `-r` switch is not used, then the string will be replaced by nothing. If the `-g` switch is specified, then all instances of the string to substituted, otherwise, only the first instance.

Syntax for substitution/replacement:

- a) `$var = origString -s strToSubstitute [-r strToReplaceItWith [-g]]`

Regular expressions can be used in the string manipulations. Examples:

```
$var = abc_defabc ghi
$var1 = $var -s abc
```

Result: `$var1 = _defabc ghi`, only first instance of **abc** was replaced

```
$var2 = $var -s \x20
```

Result: `$var2 = abc_defabcghi`, the space sign was removed

```
$var3 = $var -s abc -g
```

Result: `$var3 = _def ghi`, all instances of **abc** were replaced

```
$var4 = $var -s abc -r xyz
```

(result: `$var4 = xyz_defabc ghi`, first instance of **abc** was replaced)

```
$var5 = $var -s abc -r xyz -g
```

(result: `$var5 = xyz_defxyz ghi`, all instances of **abc** were replaced with **xyz**)

```
$var6 = $var -s a.*c -r xyz
```

(result: `$var6 = xyz ghi`, the regular expression **a.\*c** was replaced with **xyz**)

```
$var7 = $varABC$var6
```

(result: `$var7 = abc_defabc ghiABCxyz ghi`, the three strings **\$var**, **ABC** and **\$var6** have been concatenated)

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

```
$var8 = $var ABC $var6
```

(result: \$var8 = abc\_defabc ghi ABCxyz ghi, there are spaces in between the three strings)

Note: if more advanced string manipulation is needed, it is always possible to use an external program such as gawk to do the string manipulation. See the example above about using Unix programs.

#### 8. Using output from a predefined function

Currently, the following functions exist:

- `fdn(proxy)` input is the proxy id, output is the FDN
- `ldn(proxy)` input is the proxy id, output is the LDN
- `rdn(proxy)` input is the proxy id, output is the RDN
- `motype(proxy)` input is the proxy id, output is the MO type
- `proxy(string)` input is the LDN or FDN (NOT RDN!), output is the proxy id
- `readinput(string)` input is a prompt that should appear on the screen, so that the user can input an answer which will then be assigned to the variable.
- `readinputsilent(string)` same as `readinput()` but without echoing the user input. useful for entering passwords.
- `readfile(file)` input is a filename. Each line of the file is assigned into an element of the hashtable into which we have assigned the result of the function. If the file is not found, the variable `$nr_of_lines` is set to 0, otherwise it is set to the number of lines in the file. Note, this should not be used on large files as it will slow down things very much.
- `testfile(file)` input is a filename. If the file is not found, the variable `$nr_of_lines` is set to 0, otherwise it is set to 1.
- `testzip(zipfile)` input is a filename. If the file is a valid zipfile, the function returns 1. If the file is tarfile (but with .zip at the end, eg a CV.zip generated from EvoC8300), then the function returns 2. Else (file not found or zipfile corrupted), the function returns 0.
- `split(string)` The string is split into the array specified on the left side of the equal sign (see example below). The separator used to split the string can be specified in the variable `"$split_separator"`. By default it is a space. If the `$split_separator` has been changed and needs to be reset to the default value, just run the command `"unset $split_separator"`. The number of elements in the array is stored in the variable `$split_last`
- `mod2nr(string)` Convert a RncModule name into a module number. Eg: `mod2nr(MS-6-1)` returns 1061 , `mod2nr(ES-1-24-0)` returns 241 .
- `check_ip_contact(ipaddress,port)` Check connectivity to a given ip address and tcp port. Returns 0 if ok, or 1 if not ok.
- `asort($table,$sortedtable)` Creates a new table `$sortedtable` containing the values of an existing table `$table`, sorted in ascending alphanumerical order. The function returns the number of elements in `$sortedtable`. Usage: `$n = asort($table,$sortedtable)` . See example 5 below.

#### Example 1:

```
lt iublink
ma iub iub
for $mo in iub
 $mordn = rdn($mo)
 if $mordn ~ 1023
 lcc $mordn
 lbl $mordn,
 fi
done
```

#### Example 2:

```
$var = readinput(Please confirm [y/n]:)
if $var !~ ^y
 return
fi
```

#### Example 3:

```
$table = readfile(/path/to/myfile)
for $lineNumber = 1 to $nr_of_lines
 print $table[$lineNumber]
```

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

```
$word = split($table[$lineNumber])
if $word[1] ~ ^#
 $nr_of_comments = $nr_of_comments + 1
fi
unset $word
unset $table[$lineNumber]
done
```

(Note: by unsetting the entry we've just read - provided we don't need it anymore - will make things faster)

Example 4:

Logging in to an unknown node with moshell `-n` option (no ip connectivity check) and checking the type of node

The loop is intended to keep checking if the node happens to be down at the time of the check.

```
for 10
 $var80 = check_ip_contact($ipaddress,80)
 $var9830 = check_ip_contact($ipaddress,9830)
 $var4912 = check_ip_contact($ipaddress,4192)
 if $var4192 = ok
 uv comcli=21
 uv username=expert
 $password = expert
 break
 else if $var9830 = ok
 uv comcli=11
 uv username=root
 $password = root
 break
 else if $var80 = ok
 uv comcli=0
 break
 else
 wait 30
 $i = $i + 1
 fi
done
```

Example 5:

A table `$t` is defined with following values: `$t[0]=2 ; $t[1]=bye ; $t[a]=3 ; $t[b]=hello`

Execute the command: `$n = asort($t,$s)`

This will return `$n=3` and define a table `$s` with values: `$s[1]=2 ; $s[2]=3 ; $s[3]=bye ; $s[4]=hello`

Example: The purpose of the little moshell script below is to make a customized CV name like: `date_nodeType_swRev`

```
cvls
$date = `date +%y%m%d` (result: $date = 040930)
get 0 productName > $nodeType (result: $nodeType = RBS3202)
$nodeType = $nodeType -s RBS (result: $nodeType = 3202)
get configurationversion currentupgrade > $currentUp
(result: $currentUp = UpgradePackage=CXP901913%2_R12N)
get $currentUp administrativedata > $swRev
(result: $swRev = Struct{5} >>> 1.productNumber = CXP901913/2 >>>
2.productRevision = R12N >>> 3.productName = CXP901913%2_R12N)
$swRev=`gawk -v currentsw="$swRev" 'BEGIN{ swrev=gensub(/\r|\n/, "", "g", currentsw);
print gensub(/^.Revision = | >>> 3.product.*$/, "", "g", swrev) }'`
(result: $swRev = R12N)
cvms $date_$nodeType_$swRev (result: cvms 040930_3202_R12N)
```

## 6.3 Hashtables (arrays)

The index and the value of the hashtable can be a variable, a constant, or a mix of both.

All variable assignment methods described in Section 6.2 apply for assigning values into hashtables as well.

To print a hashtable, do: `pv <table>`

### Examples:

Assigning constants into a hashtable



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

```
>> $table[1] = hello
>> $table[2] = hej
>> $table[hoho] = 5
>> pv tab (result printout:)
$table[hoho] = 5
$table[1] = hello
$table[2] = hej
```

Assigning variables into a hashtable:

```
>> $mo = AtmPort=MS-6-1
>> $proxy = proxy($mo)
>> $proxylist[$mo] = $proxy
>> $mo = AtmPort=MS-6-2
>> $proxy = proxy($mo)
>> $proxylist[$mo] = $proxy
>> pv proxylist (result printout:)
$proxylist[AtmPort=MS-6-1] = 103
$proxylist[AtmPort=MS-6-2] = 112
```

More examples on how to use hashtables are described in Section 6.5.

## 6.4 If/Else constructs

The `if` statement must be followed by a *condition*. The comparison operator of the condition must be surrounded by spaces. Zero or more `else if` statements can be used after the `if` statement. Zero or one `else` statements can be after the `if` or `else if` statements.

The end of the `if/else` structure must be specified with a `fi` statement. Each statement must be on its own line and can be followed by one or more commands. Several conditions can be combined, using the logical AND (`&&`), or the logical OR (`||`). Any number of AND/OR can be put on a line but NOT BOTH on the same line.

Grouping conditions with brackets is NOT supported.

The `return` command can be used to exit from the command file in case a certain condition is met. Type `h return` for more information on how to use this command.

Syntax examples:

1. `if <condition>`  
    `command1`  
    `command2`  
`fi`
2. `if <condition1> || <condition2>`  
    `command1`  
    `command2`  
`else`  
    `command3`  
`fi`
3. `if <condition> && <condition2> && <condition3>`  
    `command1`  
`else if <condition4>`  
    `command2`  
`else`  
    `command3`  
`fi`

A condition can use the following comparison operators:

- `=` equals
- `~` matches (as in pattern match)
- `!=` is not equal to
- `!~` does not match
- `>` greater than
- `<` less than

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- `>=` greater than or equal to
- `<=` less than or equal to

The words around the operator can be either a variable or a single word but NOT a string containing spaces or a concatenation of a variable and string. Following conditions are syntactically correct:

```
if $var1 = $var2
if mystring ~ $var
if 10 > 3
if $i < 2
```

Following conditions are NOT syntactically correct and will return unexpected results:

```
if mystring_$var1 ~ $var2
if mystring is this ~ your string
```

A condition can also just contain one variable, in which case it will check if the variable exists. The words around the operator can be either a variable or a single word but NOT a string containing spaces or a concatenation of a variable and string. Following conditions are syntactically correct:

```
if $var1 = $var2
if mystring ~ $var
if 10 > 3
if $i < 2
```

Following conditions are NOT syntactically correct and will return unexpected results:

```
if mystring_$var1 ~ $var2
if mystring is this ~ your string
```

A condition can also just contain one variable, in which case it will check if the variable exists.

Example to check if a variable `$var` exists. If `$` exists (i.e. has any value set) then it will do something..

```
if $var
 ...do something
fi
```

Example to check for node type and see attenuation accordingly:

```
get 0 productname > $nodeType

if $nodeType ~ 3202 || $nodeType ~ 3104
 get feeder attenuation
 set feeder attenuation 4
else if $nodeType ~ 3101
 get feeder attenuation
 set feeder attenuation 16
else
 get feeder attenuation
fi
```

## 6.5 For constructs

The parameter to the `for` construct can be:

1. `ever` - to repeat the loop an infinite number of times
2. `<numberOfIterations>` - to repeat the loop a specific number of times
3. `$mo in <moGroup>` - to run the body of the loop on each MO of the specified moGroup. MO groups are created using `ma/lma`. See `h ma` (Section 4.1.10) for more info.
4. `$board in <boardGroup>` - to run the body of the loop on each board of the specified board group. Board groups are created using `ba/ba`. See `h bo` (Section 4.3.18) for more info.
5. `$var in $table` for each iteration of the loop, `$var` will cycle through the index values of the hashtable `$table`

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

6. `$var = $start to $stop` `$var` is assigned every integer value between `$start` and `$stop`. `$start` and `$stop` can be variables or constants but must be an integer. If `$start` is smaller than `$stop` than the order will be ascending, otherwise it will be descending.

The end of the `for` structure must be specified with a `done` statement.

The `wait` command can be used in the body of the loop to specify a delay to wait in between each iteration. The delay can be in seconds, minutes, hours, or even ROP periods. (Type `h wait`, Section [4.3.52](#) for info.)

Do not use the `sleep` command as this will result in hanging if the loop is aborted.

The loop can be aborted any time by typing `ctrl-z`, then `touch <stopfile>`, then `fg`. The `<stopfile>` path is shown in the window title bar. Type `h ctrl-z` for more info about aborting.

The `break` command can be used within the loop to exit from the loop.

Note: Regardless of where the `break` is located in the loop, the current loop iteration will be completed before breaking out of the loop.

Syntax examples:

- ```
1. for ever
    command1
    command2
done
```
- ```
2. for <numberOfTimes>
 command1
 wait <numberOfSeconds>
done
```
- ```
3. for $mo in <moGroup>
    get $mo <attribute> > $variable
    $variable1 = ....
    set $mo <attribute> $variable1
    etc...
done
```
- ```
4. for $board in <boardGroup>
 bl $board
 facc $board restart 0 1
 wait 10
 deb $board
 lhsh $board vii
done
```
- ```
5. for $proxy in $proxytable
    bl $proxy
    st $proxy
    deb $proxy
    st $proxy
    get $proxy operational > $opstate
    if $opstate != 1
        break
    fi
done
```
- ```
6. for $var = $maxproxy to $minproxy
 del $var
done
for $var = 1 to 6
 te e trace$min process
done
```

Practical examples:

- Checking the progress of a UP installation, every 10 seconds. Break from the loop if the result is 1 (`INSTALL_COMPLETED`), and continue with upgrade action. Abort the command file if the result is 6 (`INSTALL_NOT_COMPLETED`)  

```
lt upgrade
acc upgradepackage=xxx nonblockinginstall
for ever
 $return = 0
```

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

```
wait 10
get upgradepackage=xxx state > $upstate
if $upstate ~ ^1
 break
else if $upstate ~ ^6
 $return = 1
 break
fi
done
if $return = 1
 return
fi
acc upgradepackage=xxx upgrade
```

#### 2. Run a testcase 50 times

```
for 50
 run testcase_3.1.1.cmd
 wait 2m
done
```

#### 3. Increase the primaryCpichPower by 0.1 dBm on each UtranCell

```
lt ^utrancell
ma cell ^utrancell
for $mo in cell
 get $mo primarycpichpower $pich
 $pich = $pich + 1
 set $mo primarycpichpower $pich
done
```

#### 4. restart all boards in a board group

```
ba spb spb
for $board in spb
 facc $board restart 0 1
done
```

#### 5. Save the fRO values of all programs into a table and then restart every program

```
lma programs_on_slot_19 subrack=ms,slot=19,.*program
for $prog in programs_on_slot_19
 $i = $i + 1
 fro $prog ^res > $frolist[$i]
done
for $fro in $frolist
 restartObj pgm $fro
done
```

#### 6. Restart some boards in a specific order

```
for $var = 20 to 14
 $board = 00$var00
 facc $board restart 0 1
done
```

## 6.6 User-defined functions

Users can define their own functions, using the `func/endfunc` construct.

If the function is called with arguments, these are assigned to the variables \$1, \$2, \$3, etc The variable \$0 is set to the whole line contents.

Example:

##### 1. Define the function (the function definitions can be run in a different command file)

Here we are defining a function which checks the state of the mirrored disks and returns once the disks are in sync

```
func check_disk_state
 #if $1 is undefined or different to an integer value
 #then we set it to 10 seconds
```

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

```
if $1 ~ ^[0-9]+$
 $wait_interval = $1
else
 $wait_interval = 10
fi
for ever
 wait $wait_interval
 l+om $tempdir/diskstate
 lh coremp mirror s
 l-
 $res = `grep -c "Peer Disk Status: *Valid" $tempdir/diskstate
 if $res > 0
 break
 fi
done
endfunc

func waitforuser
 $date = `date "+%Y-%m-%d %H:%M:%S"`
 for ever
 $reply = readinput(Waiting from [$date]. Type "y" when ready:)
 if $reply ~ ^[yY]
 break
 fi
 done
 $date = `date "+%Y-%m-%d %H:%M:%S"`
 print "Finished waiting at [$date]"
endfunc
endfunc
```

2. Call the function Here we have made a small script which makes use of our user-defined function.

First we are running a file containing all the definitions for our user-defined functions.

(Note that the functions can also be defined within the same script, but by keeping all functions in a separate file means that several command files can use the same functions)

We have called the function `check_disk_state` with an argument "5" which in this case will be used as the "\$wait\_interval" parameter in the function

```
run ~/myfunctions_define.mos
for ever
 check_disk_state 5
 waitforuser
 facc 0 manualrestart 0 0 0
 pol
done
```

## 6.7 Nesting for and if statements

It is possible to nest one or more if/else statement within a loop statement and vice-versa. But it is currently not possible to nest an if/else statement within an if/else statement and a loop statement within another loop statement.

The current workaround is to put the for/if constructs into functions. See Section 6.6 for more info on functions.

Example:

The following script starts the install, then checks the state of the install every 10 seconds. Once the upgradepackage is installed, it starts the upgrade. Then it checks the state again and once the upgrade is in state **awaitingconfirm**, it confirms the upgrade.

```
$UP = upgradepackage=CXP9011123_R12F
acc $UP nonblockinginstall
for ever
 wait 10
 get $UP state > $state
 if $state ~ ^1
 break
 fi
done
get $UP state > $state
if $state ~ ^1
```

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

```
 acc $UP upgrade
fi
wait 120
for ever
 wait 10
 get $UP state > $state
 if $state ~ ^3
 break
 fi
done
if $state ~ ^3
 acc $UP confirmupgrade
fi
```

Some more examples:

1. Example to check the `mirror stat` status of the node (i.e. to check whether the passive FTC MP is ready to take over or not)

```
for ever
 board_status -d 00 10 -c "mirror stat" | tee tmpfile.tmp
 board_status -d 00 11 -c "mirror stat" | tee -a tmpfile.tmp
 $tmp = `grep -c "Peer Disk Status: Valid" tmpfile.tmp`
 if $tmp > 0
 break
 else
 wait 60
 fi
done
```

2. Example to check if an upgrade is complete (i.e. the `upgradepackage` is in state 3)

```
wait 300 #give it some time to run first
for ever
 pol 1 1
 get upgradepackage=mypkg state > $state
 if $state ~ ^1
 break #upgrade failed
 else if $state ~ ^3
 break #upgrade complete
 fi
 wait 60
done
```

## 6.8 Example scripts

Example scripts can be found under **moshell/commonjars/scripts** and **moshell/examples/scripting/**

Note two types of comments can be used in scripts:

- *visible comments* start with the `"#"` sign. These comments are printed on the screen while the script is executing.
- *invisible comments* start with the `"//"` sign. These comments are not printed on the screen.

## 7 Utilities

The moshell package includes a number of utilities that complement the moshell functionality. They are stored in the same directory as moshell but are executed as separate, stand-alone scripts.

Detailed information about each utility can be found by executing the utility without any arguments. (Except for the PM tools where the help is shown by using the **-help** option, eg: `pmExtract -help`).

### 7.1 Network Management Tools

The network management utilities are for performing operations on many nodes in parallel. The list of nodes on which to perform the operations shall be stored in a file called the **sitefile**. The ip-addresses/DNS-names and passwords of all nodes of the network must be stored in a reference file called the **ipdatabase**.

The ipdatabase uses the following syntax:

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

<nodeName> <nodeIpAddress> <nodePassword>

OR:

<nodeName> <nodeDNSaddress> <nodePassword>

(It is recommended to use the DNS-address instead of the IP-address).

It is also possible to specify user variables and/or scripting variables in the fourth column of the ipdatabase.

An example of a **sitefile** and an **ipdatabase** can be found in the directories **moshell/examples/mobatch\_files**.

The following Network Management tools are currently included in Moshell:

1. **mobatch** to run moshell commands or command files towards many nodes in parallel.
2. **restartcollector** - to collect restart data (manual and spontaneous restarts), system downtime and upgrade data from many nodes in parallel. Data is presented in a report together with statistics and TR mapping and can be imported in other tools (such as OpenOffice Spreadsheet or Excel or Perl::CSV).
3. **swstat** - It has the following 2 functions:
  - a) to collect SW level and CV from many nodes in parallel.
  - b) to delete UP's from many nodes in parallel.
4. **swup** - to SW upgrade many nodes in parallel.
5. **cvms** - to create CV's on many nodes in parallel.

## 7.2 Parameter Auditing Tools

The auditing tools are for offline postprocessing of Node logs (*MO Dumps*) and reference files in order to check parameter validity or health-checks.

Note! Most of these tools are now obsolete, please use the moshell built-in command `diff` instead. Type `h diff` for info.

The following tools are included with Moshell:

1. **rncaudit** - to compare rnc moshell dumps against a number of reference files (CDR, winnow baseline, Uerc data, etc.). Certain consistency checks can be performed (scrambling code collisions, cell relations consistency). Rncaudit `-b` option can be used on other nodes as well such as MGW, RXI.
2. **rbssaudit** to compare rbs moshell dumps against a number of reference files (CDR, winnow baseline).
3. **netcheck** - Has the following two functions:
  - a) to parse moshell health-check logs and check for obsolete HW, HW faults, errors, etc.
  - b) to compare pre-check and post-check (eg health check logs before and after an upgrade or a testcase)
4. **mocmd** - Has the following to functions:
  - a) to convert a file from winnow baseline format to moshell command file
  - b) to convert a change\_all script to moshell command file

## 7.3 PM Tools

The PM tools are for offline postprocessing of Performance Management XML files. They consist of a number of command-line tools, designed to be linked together in a pipeline (ie the output of one tool feeds into the next). The following PM tools are included in Moshell:

1. **pmExtract** - to extract counter values from the XML files. The counter values to be extracted are selected based on the managed object and counter name. The counters are output to the standard output, one line per counter value.
2. **pmXtab** - to aggregate counters according to time, Managed Object hierarchy or arbitrary relations
3. **pmDiff** - to output the difference between counter values in successive XML files. This is useful for counters that are not automatically reset after each period (eg. CPP counters).
4. **pmList** - to list all counters defined in a XML ROP file.

For more information, run the utility with the `-help` option (eg `pmExtract -help`) or have a look in the **pmTools** documentation. This document (which may not be the latest can also be found in **moshell/examples/pm\_files/pmTools.doc**)



|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

## 7.4 Miscellaneous Tools

Some other tools included with Moshell are:

1. **ps**tool - to display process usage or kill a process tree.
2. **momdoc** - to convert a MOM from xml format to html format
3. **swcomp** - to compare SW between two nodes containing similar HW.

Note: There are other files in the moshell directory but they are moshell components and not meant to be executed as stand-alone scripts.

## 8 Server Maintenance

When running moshell on a server in a multi-user environment, there needs to be regular maintenance in order to clean up the disk and any hanging processes.

### 8.1 Hanging Processes

A known bug of moshell is that it doesn't always shut down all of its spawned processes upon exiting which leads to CPU overload and run out of RAM memory. This problem should now be fixed thanks to the use of various timeouts but if this does not help, then it is recommended to regularly check the rogue processes using the unix command `top`.

Once the `top` command is running, you can type the following commands in the `top` screen:

- `n` followed by the number of processes to display (e.g `n 40`) -> to show more than the default number of 15 processes
- `o` to change the order of the sorting. E.g:
  - `o time` (to see the processes that have been running for the longest time)
  - `o size` (to see the processes that are using up the most memory)
  - `o cpu` (to see the processes that are using up the most cpu. this is the default).
- `k` followed by the process to kill. E.g `k 2742`

### 8.2 Disk full

For disk usage diagnostics and cleanup, please refer to the help of the `smd` command.

### 8.3 Run out of memory

If you get the following error when trying to start moshell:

```
gawk: fatal: cannot create child process for '/tmp/readlineXXXX_hhmmss'
(fork: Not enough space)".
```

It means that you do not have enough memory (i.e. RAM + swap space) on the machine.

Try running the command `top` on the Solaris box (it might not exist on the box though).

If you can run it, you'll see a line like this:

```
Memory: 512M real, 107M free, 333M swap in use, 2.0G swap free
```

A fundamental rule of Operating System management is that your swap space should also be > 2x the memory, so in this box we have 512Mb of RAM so we should have at least 1Gb of RAM (it started with just 256Mb of RAM - and we had this problem after opening a few sessions of MoShell). As a rule - if you are running MoShell on a Solaris box you should give it at least 512Mb of RAM and ideally 2Gb of swap space.

Luckily - there is an easy way to add new swap space - this is to make a new "swap file" on the disk (then you don't need to repartition everything). You can do this in Solaris by following these steps:

1. `mkfile -v 2000m /usr/swapfile`

This will make a 2Gb file **/usr/swapfile** to be used as our extra swap space. But it's not enabled as swap space yet.. To add it as swap space.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

## 2. swap -a /usr/swapfile

This adds it in as swap space. But this is not permanent, next time you reboot the machine it'll disappear. You can make it permanent by adding the following line to (the end of) **/etc/vfstab**

## 3. /usr/swapfile - - swap - no -

See `man vfstab` for more details on **/etc/vfstab**

## 9 Modes of operation

### 9.1 Offline Mode

The offline mode allows to run an moshell session against a set of logfiles of a node. When running moshell commands in offline mode, all information will be read from the logfiles, no communication taking place with the node.

The offline mode can be useful in several cases. For instance:

- when the node is not accessible directly, e.g. the 3rd line support need to examine the configuration and do not have remote access to the customer network.
- to save a snapshot of a node before an upgrade or configuration change, to use as reference information for comparison purposes.

The following logfiles are used in offline mode:

- the MO dump of the node. The MO dump consists of a printout showing all the attribute values of all the MOs of the node. It is taken with the command `dcgk`, `dcge`, `dcgm`, or `lt all;kget`. It can be in text format, gzipped format, or zip format. This file is used when running MO commands in offline mode (e.g. `get`, `set`, `st`, `inv`, `str`, etc). If MO dumps need to be taken from many nodes, then `mobatch` can be used instead, using the command: `mobatch <sitefile> 'lt all;kget'`. To run moshell against an MO dump, execute the following command from the unix prompt: `moshell /path/to/modump`
- the CPP logs of the node. These files are located under `/c/logfiles` and can be fetched with the moshell command `lgf`, `dcgkf`, or `dcgm`. These files are used when running the `lg` command in offline mode. E.g. `lgaevm -l /path/to/node_logfiles.zip`
- the ROP files of the node. These files are located in the `pm_data` folder of the node and can be fetched with the moshell command `pmrf`, `dcgkf`, or `dcgm`. These files are used when running the commands `pmr` or `pmx` in offline mode. E.g. `pmx atmport -l /path/to/node_ropfiles.zip`
- the CV or db.dat of the node, taken with `dcgm`, `cvget` or `ftget` command. This allows to use the `dbc` and `fro` commands in offline mode.
- the COLI printouts of the node, eg files called `<nodename>_dcg_<option>.log.gz` and taken with `dcg` command. This allows to use the COLI commands in offline mode.

It is possible to start moshell in offline mode by typing any of the following:

- moshell without arguments: MO commands will then not be available, only `lg/pmr/pmx` and a few others (`lmid`, `ip2d`, `h2d`, etc)
- moshell `<modump>`: MO commands will then be available and if the folder containing the MO-dump also contains the `ropfiles.zip/logfiles.zip` then it is not necessary to use the option `"-l"` when running `lg/pmr/pmx`.
- moshell `<offline.zip>`: the file `<nodename>_offline.zip` is generated by `dcgm` and contains the MO dump, CV, ropfiles, and logfiles. If the logfile `<nodename>_dcg_<option>.log.gz` is placed in the same folder as the `offline.zip` then also the COLI commands will be available.
- moshell `<dcgzipfile>`: in this case the `<dcgzipfile>` is the zipped directory containing all the files produced by the `dcg` command, ie, `modump.zip/logfiles.zip/ropfiles.zip/dcg_<option>.log.gz`.

The list of commands that are supported in offline mode can then be printed with the `h` command.

Type `h <command>` for information on a specific command.

### 9.2 SQL Mode

The SQL mode allows to run an offline moshell session against the configuration database of a node (db.dat or zipped CV).

- The db.dat file can be fetched using the `ftget` command, eg: `ftget /d/configuration/cv/<cvname>/db.dat`
- The CV can be fetched using the `cvget` command, eg: `cvget <cvname>`

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

To start moshell in SQL mode, use option `-d`, eg: `moshell -d <cv.zip>`, `moshell -d <db.dat>`, or `moshell -d <dbdump.zip>`

Moshell then opens an SQL client session to the file and loads all the MO data into memory.

To prevent loading MO data (for faster startup time), use the option `-v nomo=1`. Only sql commands will then be available.

Note that the MO data when read from a CV/db.dat only contains the MO configuration attributes, not the MO state attributes.

During startup, moshell also performs a consistency check on the various SQL tables of the database, to detect if there are any inconsistencies or corruptions.

Currently not all moshell commands are supported in SQL mode, type `h` at the moshell prompt to see the list of supported moshell commands.

It is also possible to run sql commands directly, e.g. `sql select * from tables`.

The Polyhedra database viewer which is used to load the CV/db.dat is currently delivered in two versions:

- version 6.0, supported on solaris and linux, allows read and write to the db.dat, might not work on newest CPP releases (CPP9 and above)
- version 8.3, supported on solaris, linux, and cygwin, read-only (cannot write to db.dat). Supports all CPP releases.

By default, moshell uses the newest version but it is possible to use the old version by starting moshell with option `-v polyversion=0`.

### 9.3 Multi Mode

The multi mode allows an moshell session to be connect to several nodes at the same time.

The command syntax for starting moshell in multi mode is: `moshell -m <sitelist>|<sitefile>`

The sitelist consists of a comma separated list containing all the node names or ip/dns addresses.

The sitefile is a text file containing the list of nodes names or ipaddresses, on node per line.

Example:

- `moshell -m rnc2,10.1.128.17,rbs34,rxi2.ericsson.se,mgw3`
- `moshell -m /path/to/sitefile`

If node names are used, they must be defined in the ipdatabase. For more information about ipdatabase and sitefile, see the help of the mobatch utility by typing "mobatch" from the unix prompt.

To print the list of commands which are supported in multi-mode, type `h` at the moshell prompt.

More information about a specific command can be obtained by typing `h <command>`.

The multi mode is primarily geared towards commands that use the corba services CS/FM/PM.

Moshell commands that access the node via telnet/ssh/ftp/sftp are currently not supported in multi mode.

When moshell is running in multi mode, a prefix is appended in front of certain objects in order to distinguish between different nodes and MOM versions:

- the RDN/LDN in MO commands are prefixed with the string "Me=<nodename>".
- the scanner names in PM commands are prefixed with the node name.
- the MO class in mom/pmom command are prefixed with the MOM version.

MOM handling in multimode:

- at startup, the MOM version of each node is checked, so it is supported to connect to nodes running different MOM versions.
- it is also possible to skip the MOM check by parsing a MOM file with the parsemom command. Then all nodes will use the same MOM, which may have unexpected effects.

#### Known limitations in multi mode (to be fixed in a later release)

- `u+`, `emom`, `pset`: currently only work when all nodes have the same MOM version.
- `ul`: conversion of `.mos` to `.mo` script does not work correctly yet. Avoid using the `ul` command in multimode.
- `pol`: options (`c/h/s/u`) not yet supported in multimode. Syntax is: `pol <node>`. E.g: `pol rnc2`
- `pcr`: not yet supported in multi-mode. The future syntax will be: `pcr <node> <scannername>` etc...
- `getmom`: not yet supported in multimode.
- `re`: the "i" option is not yet supported in multimode.

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

- diff: syntax2 (parameter audit and dump comparison) is not supported yet. Only diff between individual MOs is currently supported (syntax1).
- pgets: the "n" and "m" options are not yet supported.
- lko: not yet supported in multimode.

## 9.4 Yang Mode

Yang mode is similar to multi-mode but connects to the node via NETCONF/YANG over SSH/TLS instead of CORBA.

The option used for connecting in YANG mode is "-z" or "-v yangcli=1".

The argument is the list of nodes, and optionally the NETCONF TCP port.

For ADP nodes (Cloud) the port can be omitted as it uses the default value (830 over SSH or 6513 over TLS).

For RCS nodes (MSRBS) the port can be either specified on the command line next to the node name/ip after the @ sign or in the ipdatabase file in the uservariable `netconfyang_port` (for SSH) or `s_netconfyang_port` (for TLS).

### Examples:

- `moshell -z rbs530@840,enb36@840` : connect to RCS nodes rbs530 and enb36 over the yang port 840
- `moshell -z vcucp,vcuup,vdu` : connect to ADP nodes vcucp, vcuup, and vdu on default port 830

Note: connecting simultaneously to two separate nodes using same IP address (but different ports) is currently not supported but will be supported soon.

### Connection methods:

The uservariable `use_tls` indicates whether SSH or TLS is used. Default is `use_tls=0` (SSH). For TLS, the value is `use_tls=21`.

- SSH: The username/password can be saved in the uservariables `yang_username/yang_password` on node basis in the ipdatabase file or for all nodes in the `moshellrc` file.
- TLS: The path of the credential files can be saved in the uservariables `clientpem` (.cert file), `capem` (CA file), `keypem` (.key file). Optionnally if the .key file has a passphrase then the passphrase can be specified in the uservariable `keypass`.

### Example of an entry in the ipdatabase file:

- SSH method: `vcu01 10.49.20.147 x yang_username=expert,yang_password=expert01,netconfyang_port=830`
- TLS method: `vcu02 10.49.20.148 x use_tls=21,clientpem=$HOME/keys/tlsnetconf.cert, capem=$HOME/keys/tlsnetconfCA.pem,keypem=$HOME/keys/tlsnetconf.key,keypass=secret`

If `use_tls=0` and the uservariables `yang_username/yang_password` are unspecified then the username/password will be prompted in the terminal.

### Supported functionality:

- The list of supported commands can be found in the "h" menu.
- To load the MOs, the following commands can be used:
  - "lt all" or "ltc all" to load all the MOs. Usually these commands are equivalent but in the case of YANG nodes, they use a slightly different method. Try the one that loads the quickest for your particular node.
  - "lt <motype>" : to load all MO instances of a particular class. Eg: `lt nrcelldu ->` loads all MO instances of class "NRCelIDU"
  - "ltc <motype>": to load all MO instances of a particular class and all the underlying children MOs. Eg: `ltc gnbdufunction ->` loads the GNBDFunction MO and all underlying children MOs.
- MO LDNs are prefixed with the string "Me=<nodename>" in order to distinguish MO instances from different nodes in the same session. This prefix is always used, even in single-node sessions.
- All MO read/write commands are supported: `mom`, `momt`, `pmom`, `pr`, `get`, `kget`, `hget`, `st`, `ma`, `mr`, `mp`, `cr`, `set`, `del`, `acc`, `u+/u-`, `gm`, etc.
- It is supported to run `.mos` command files with `run` or `run1`
- It is possible to run NETCONF scripts via the command `netconfy`. Type "h netconf" for info.
- Offline mode is supported toward a `modump.zip`, collected with `dcgk` command. The `dcgk` command can be run while connected to multiple nodes, thus the `modump` will contain a combined dump from several nodes and the offline session will act as a multi-node session.
- Basic PM: `pmx/pmxe/pmr` are supported while connected to a single node

|                                                                     |         |                        |            |                              |
|---------------------------------------------------------------------|---------|------------------------|------------|------------------------------|
| Prepared (also subject responsible, if other)<br>EAB Finn Magnusson |         | No.<br>1553-CXC1328930 |            |                              |
| Document responsible/Approved<br>EAB Finn Magnusson                 | Checked | Date<br>2022-03-05     | Rev.<br>EA | File<br>moshellUserGuide.tex |

**Planned to be supported in a future release:**

- polling of progress-report for asynchronous actions
- pmx/pmx/pmr in multi-node (currently only to single node)
- pst, pgets, pcr, pbl, pdeb, pdel, pset
- al
- support for COLI commands
- dcgm (ropfiles, ddb/ddc/esi, coli...)
- cvls, cvmk, cvrm, etc
- inv/sdi
- ...

**10 Revision History**

The revision history has been moved into a file called **README** in the moshell directory.