PROFESSIONAL DIGITAL TWO-WAY RADIO

MOTOTRBOTM XIRTM M8660/XIRTM M8668 COLOUR DISPLAY MOBILE USER GUIDE





Switching Between Conventional Analog and Digital Mode
Identifying Status Indicators11
Display Icons
Call Icons
Advanced Menu Icons14
Mini Notice Icons
Sent Item Icons15
Bluetooth Device Icons
LED Indicators16
Indicator Tones
Audio Tones
Receiving and Making Calls18
Selecting a Zone
Selecting a Channel19
Receiving and Responding to a Radio Call19
Receiving and Responding to a Group Call 20
Receiving and Responding to a Private Call20
Receiving an All Call21
Receiving and Responding to a Selective Call 21
Making a Radio Call22

Making a Group Call
Making a Private Call
Making an All Call
Making a Selective Call
Stopping a Radio Call
Talkaround
Permanent Monitor
Advanced Features
Radio Check
Sending a Radio Check
Remote Monitor
Initiating Remote Monitor 28
Stopping Remote Monitor
Scan Lists
Viewing an Entry in the Scan List
Editing the Scan List
Adding a New Entry to the Scan List 30
Deleting an Entry from the Scan List 31
Setting and Editing Priority for an Entry in the Scan
List 31
Scan
Starting and Stopping Scan
Responding to a Transmission During a Scan 33
Deleting a Nuisance Channel
Restoring a Nuisance Channel
recording a redocation of all the first series

Vote Scan
Contacts Settings
Making a Group Call from Contacts
Making a Private Call from Contacts 35
Assigning an Entry to a Programmable
Number Key
Removing the Association between Entry and
Programmable Number Key
Setting Default Contact
Call Indicator Settings
Activating or Deactivating Call Ringers for Call Alerts
Activating or Deactivating Call Ringers for Private
Calls 38
Activating or Deactivating Call Ringers for Selective
Call
Activating or Deactivating Call Ringers for Text
Message
Activating or Deactivating Call Ringers for Telemetry
Status with Text
Assigning Ring Styles
Escalating Alarm Tone Volume
Call Log Features
Viewing Recent Calls
Deleting a Call from a Call List
Call Alert Operation 42

Receiving and Responding to a Call Alert 42	Deleting All Sent Text Messages from Sent Items
Making a Call Alert from the Contacts List 43	
Making a Call Alert with the One Touch Access Button	Receiving a Text Message54
	Reading a Text Message
Emergency Operation	Managing Received Text Messages58
Receiving an Emergency Alarm44	Viewing a Text Message from the Inbox55
Responding to an Emergency Alarm 45	Viewing a Telemetry Status Text Message from th
Sending an Emergency Alarm	Inbox
Sending an Emergency Alarm with Call46	Replying to a Text Message with Quick Text 56
Sending an Emergency Alarm with Voice to Follow	Deleting a Text Message from the Inbox57
47	Deleting All Text Messages from the Inbox57
Reinitiating an Emergency Mode 48	Analog Message Encode58
Exiting Emergency Mode	Sending MDC Message Encode to Dispatcher 58
Text Messaging Features49	Sending 5-Tone Message Encode to Contact 58
Sending a Quick Text Message	Analog Status Update
Sending a Quick Text Message with the One Touch	Sending Status Update to Predefined Contact 59
Access Button50	Viewing 5-Tone Status Details
Managing Text Messages in the Drafts Folder 50	Privacy60
Viewing a Saved Text Message50	IP Site Connect6
Deleting a Saved Text Message from Drafts51	Multi-Site Controls62
Managing Fail-to-Send Text Messages 51	Starting an Automatic Site Search 62
Resending a Text Message51	Stopping an Automatic Site Search 62
Forwarding a Text Message51	Starting a Manual Site Search 63
Managing Sent Text Messages52	Security64
Viewing a Sent Text Message52	Radio Disable64
Sending a Sent Text Message 52	Radio Enable 65

Lone Worker	66
Third Party Peripherals Connection Modes	66
Bluetooth	67
Turning Bluetooth On or Off	68
Finding and Connecting to a Bluetooth Device	68
Disconnecting from a Bluetooth Device	69
Switching Audio Route	69
Viewing Device Details	
Notification List	70
Accessing the Notification List	70
Utilities	70
Turning the Radio Tones/Alerts On or Off	70
Setting the Tone Alert Volume Offset Level	71
Turning the Talk Permit Tone On or Off	71
Turning the Power Up Alert Tone On or Off	72
Setting the Text Message Alert Tone	
Setting the Power Level	72
Changing the Display Mode	73
Adjusting the Display Brightness	73
Turning Horns/Lights On or Off	
Turning the Public Address System On or Off	74
Turning the External Public Address System On	
or Off	
Setting the Squelch Level	
Turning the Introduction Screen On or Off	75

Turning the LED Indicators On or Off	75
Setting Dual Knob Operation Preference	76
Language	76
Turning the Voice Operating Transmission (VOX)	
Feature On or Off	76
Turning the Option Board Feature(s) On or Off .	77
Identifying Cable Type	77
Voice Announcement	77
Call Forwarding	78
Menu Timer	78
Analog Mic AGC	78
Digital Mic AGC	79
Intelligent Audio	79
GPS	80
Accessing General Radio Information	
Checking the Radio Alias and ID	80
Checking the Firmware Version and Codeplug	
Version	
Checking the GPS Information	81
Keypad Microphone Features	82
Using the Keypad	83
Turning Keypad Tones On or Off	84
Additional Advanced Features	84
Selecting a Zone by Alias Search	84
Initiating a Radio Check by Manual Dial	85

Initiating Remote Monitor by Manual Dial85
Making a Private Call by Manual Dial86
Making a Group, Private or All Call with the
Programmable Number Key86
Making a Group, Private, Phone or All Call by Alias
Search87
Viewing an Entry in the Scan List by Alias Search 88
Editing the Scan List by Alias Search88
Adding a New Entry to the Scan List88
Deleting an Entry from the Scan List89
Setting and Editing Priority for an Entry in the Scan
List
Storing an Alias or ID from a Call List
Making a Call Alert by Manual Dial91
Text Messaging91
Writing and Sending a Text Message91
Replying to Text Messages from the Inbox 92
Editing a Quick Reply Message
Accessing the Drafts Folder
Editing and Sending a Saved Text Message 94
Managing Fail-to-Send Text Messages 94
Forwarding a Text Message by Manual Dial 94
Editing a Text Message
Dual Tone Multi Frequency (DTMF)
Radio Disable via Manual Dial 96

Radio Enable via Manual Dial96
Password Lock Features97
Accessing the Radio from Password 97
Unlocking the Radio from Locked State98
Turning the Password Lock On or Off98
Changing the Password
Front Panel Programming (FPP)99
Entering FPP Mode99
Editing FPP Mode Parameters99
Notes100
Accessories101
Antennas
Audio
Cables
Desktop Accessories103
Mounting Kits103
Speakers
Miscellaneous Accessories
Notes

Notes

Important Safety Information

Product Safety and RF Exposure Compliance



Before using this product, read the operating instructions for safe usage contained in the Product Safety and RF Exposure booklet enclosed with your radio.

ATTENTION!

This radio is restricted to occupational use only to satisfy FCC RF energy exposure requirements.

Before using this product, read the RF energy awareness information and operating instructions in the Product Safety and RF Exposure booklet enclosed with your radio (Motorola Publication part number 6804112J96) to ensure compliance with RF energy exposure limits.

For a list of Motorola-approved antennas and other accessories, visit the following website:

http://www.motorolasolutions.com/governmentandenterprise

For Models that are available in Thailand:

อุปกรณ์โทรคมนาคมนี้ได้ปฏิบัติตามข้อกำหนดของคณะกรรมการกิจการ โทรคมนาคมแห่งชาติ

This telecommunication equipment conforms to the requirements of the National Telecommunications Commission.

Software Version

All the features described in the following sections are supported by the radio's software version **R02.04.00**.

See *Checking the Firmware Version and Codeplug Version* on page 78 to determine your radio's software version.

Please check with your dealer or system administrator for more details of all the features supported.

Computer Software Copyrights

The Motorola products described in this manual may include copyrighted Motorola computer programs stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted computer programs including, but not limited to, the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Motorola computer programs contained in the Motorola products described in this manual may not be copied, reproduced, modified, reverse-engineered, or distributed in any manner without the express written permission of Motorola. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Motorola, except for the normal non-exclusive license to use that arises by operation of law in the sale of a product.

The AMBE+2TM voice coding Technology embodied in this product is protected by intellectual property rights including patent rights, copyrights and trade secrets of Digital Voice Systems, Inc.

This voice coding Technology is licensed solely for use within this Communications Equipment. The user of this Technology is explicitly prohibited from attempting to decompile, reverse engineer, or disassemble the Object Code, or in any other way convert the Object Code into a human-readable form.

U.S. Pat. Nos. #5,870,405, #5,826,222, #5,754,974, #5,701,390, #5,715,365, #5,649,050, #5,630,011, #5,581,656, #5,517,511, #5,491,772, #5,247,579, #5,226,084 and #5,195,166.

Getting Started

How to Use This User Guide

This User Guide covers the basic operation of the MOTOTRBO Mobiles.

However, your dealer or system administrator may have customized your radio for your specific needs. Check with your dealer or system administrator for more information.

Throughout this publication, the icons below are used to indicate features supported in either the conventional Analog mode or conventional Digital mode:



Indicates a conventional **Analog Mode-Only** feature.



Indicates a conventional Digital Mode-Only feature.

For features that are available in **both** Analog and Digital modes, **no** icon is shown.

For features that are available in a conventional multi-site mode, see *IP Site Connect* on page 9 for more information.

Selected features are available in the single-site trunking mode, Capacity Plus. See *Capacity Plus* on page 10 for more information.

Selected features are **also** available in the multi-site trunking mode, Linked Capacity Plus. See *Linked Capacity Plus* on page 10 for more information.

What Your Dealer/System Administrator Can Tell You

You can consult your dealer or system administrator about the following:

- Is your radio programmed with any preset conventional channels?
- Which buttons have been programmed to access other features?
- · What optional accessories may suit your needs?
- What are the best radio usage practices for effective communication?
- What maintenance procedures will help promote longer radio life?

Englis

Notes


NOTE: Specifications may vary for different radio models. Check with your dealer or system administrator for more information.

Powering Up the Radio

Press the **On/Off Button** briefly. You see
MOTOTRBO (TM) on the
radio's display
momentarily, followed
by a welcome message
or welcome image.

The green LED lights up and the Home screen lights up.

A brief tone sounds, indicating that the power up test is successful.

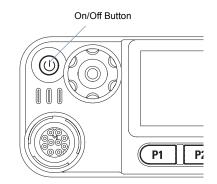

NOTE: There is no power up tone if the radio tones/alerts function is disabled (see *Turning the Radio Tones/Alerts On or Off* on page 70).


If your radio does not power up, contact your dealer.

To turn off the radio, press and hold the On/Off Button until you see Powering Down on the radio's display.

NOTE: Your radio may take up to 7 seconds to completely turn off

Adjusting the Volume

To increase the volume, turn the **Volume/Channel Knob** clockwise.

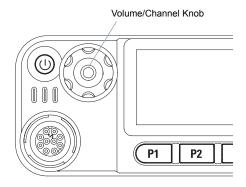

To decrease the volume, turn this knob counterclockwise.

NOTE: Your radio can be programmed to have a minimum volume offset where the volume level cannot be turned past the programmed minimum volume. Check with your dealer or system administrator for more information.

Englis


4

Identifying Radio Controls

Take a moment to review the following:
Radio Controls page
Programmable Buttons page
Accessing the Programmed Functions page
Push-To-Talk (PTT) Button page
Using the Volume/Channel Knob page
Switching Between Conventional Analog and
Digital Mode page
IP Site Connect page
Capacity Plus page 1
Linked Canacity Plus nage 1

Radio Controls

- On/Off Button
- Volume/Channel Knob
- 3 Display
- OK/Menu Button
- 5 Scroll Up/Down

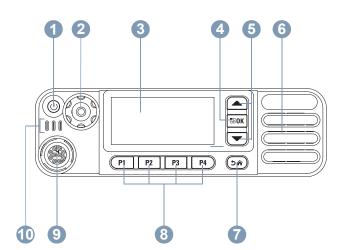

- 6 Speaker
- Return/Home Button
- 8 Front Programmable Buttons
- Accessory Connector
- 10 LED Indicators

Engliel

Programmable Buttons

Your dealer can program the programmable buttons as shortcuts to **radio functions** or up to a maximum of six (6) **preset channels/groups** depending on the duration of a button press:

- Short press Pressing and releasing rapidly.
- Long press Pressing and holding for the programmed duration.
- Hold down Keeping the button pressed.

NOTE: The programmed duration of a button press is applicable for all assignable radio/utility functions or settings. See *Emergency Operation* on page 44 for more information on the programmed duration of the *Emergency* button.

Assignable Radio Functions

 $\textbf{Bluetooth}^{\text{TM}}$ **Audio Switch** - Toggles audio routing between internal radio speaker and external Bluetooth-enabled accessory.

Contacts - Provides direct access to the contacts list.

Call Alert – Provides direct access to the contacts list for you to select a contact to whom a Call Alert can be sent.

Call Forwarding – Toggles Call Forwarding on or off.

Call Log – Selects the call log list.

Voice Announcement for Channel – Plays zone and channel announcement voice messages for the current channel. This function is unavailable when Voice Announcement is disabled.

Emergency – Depending on the programming, initiates or cancels an Emergency alarm or call.

Ext PA On/Off – Toggles the audio routing between the connected public address (PA) loudspeaker amplifier and the radio's internal public address (PA) system.

Intelligent Audio On/Off – Toggles Intelligent Audio on or off.

Manual Dial — Initiates a call by keying in any subscriber ID.

Manual Site Roam*[‡] ⋒ – Starts the manual site search.

Mic AGC On/Off – Toggles the internal microphone automatic gain control (AGC) on or off. Not applicable during a Bluetooth session.

Monitor – Monitors a selected channel for activity.

Nuisance Channel Delete*† – Temporarily removes an unwanted channel, except for the Selected Channel, from the scan list. The Selected Channel refers to the user's selected zone/channel combination from which scan is initiated.

* Not applicable in Capacity Plus [‡] Not applicable in Linked Capacity Plus

Englis

Option Board Feature – Toggles option board feature(s) on or off for option board-enabled channels.

PA On/Off – Toggles the radio's internal public address (PA) system on or off.

Permanent Monitor* – Monitors a selected channel for all radio traffic until function is disabled.

Privacy — Toggles privacy on or off.

Radio Alias and ID - Provides radio alias and ID.

Radio Check 📵 – Determines if a radio is active in a system.

Radio Enable — Allows a target radio to be remotely enabled.

Radio Disable — Allows a target radio to be remotely disabled.

Remote Monitor — Turns on the microphone of a target radio without it giving any indicators.

 $\label{eq:continuity} \textbf{Repeater/Talkaround}^{*\ddagger} - \textbf{Toggles between using a repeater} \\ \text{and communicating directly with another radio.}$

Scan*‡ - Toggles scan on or off.

Site Lock On/Off* — Toggles the automatic site roam on or off.

Status – Selects the status list menu.

Telemetry Control — Controls the Output Pin on a local or remote radio.

Transmit Interrupt Remote Dekey — Stops the transmission of a remote monitored radio without giving any indicators, or an ongoing interruptible call to free the channel.

Voice Announcement On/Off – Toggles Voice Announcement on or off.

Voice Operating Transmission (VOX) – Toggles VOX on or off.

Zone Toggle – Allows radio to switch between zones.

* Not applicable in Capacity Plus [‡] Not applicable in Linked Capacity Plus

English

Assignable Settings or Utility Functions

All Tones/Alerts - Toggles all tones and alerts on or off.

Backlight – Adjusts the brightness level.

Channel Up/Down – Depending on the programming, changes channel to previous or next channel.

Display Mode – Toggles the day/night display mode on or off.

 $\label{eq:power_level} \textbf{Power Level} - \textbf{Toggles transmit power level between high and low.}$

Squelch — Toggles squelch level between tight and normal.

Accessing the Programmed Functions

You can access various radio functions through one of the following ways:

A short or long press of the relevant programmable buttons.

OR

- Use the Menu Navigation Buttons as follows:
- 1 To access the menu, press the solution. Press the appropriate **Scroll Up/Down** button (♠ or ♥) to access the menu functions.
- 2 To select a function or enter a sub-menu, press the button.
- 3 To go back one menu level, or to return to the previous screen, press the hotton. Long press the button to return to the Home screen.

The Menu Navigation Buttons are also available on a keypad microphone (see **Using the Keypad** on page 83).

NOTE: Your radio automatically exits the menu after a period of inactivity and returns to your Home screen.

Push-To-Talk (PTT) Button

The **PTT** button on the side of the microphone serves two basic purposes:

 While a call is in progress, the PTT button allows the radio to transmit to other radios in the call.

Press and hold down **PTT** button to talk. Release the **PTT** button to listen.



The microphone is activated when the PTT button is pressed.

 While a call is not in progress, the PTT button is used to make a new call (see Making a Radio Call on page 22).

 
If the Talk Permit Tone (see Turning the Talk Permit Tone On or Off on page 71) or the PTT Sidetone (m) is enabled, wait until the short alert tone ends before talking.

- During a call, if the Channel Free Indication feature is enabled on your radio (programmed by your dealer), you hear a short alert tone the moment the target radio (the radio that is receiving your call) releases the **PTT** button, indicating the channel is free for you to respond.
- You will also hear a continuous talk prohibit tone, if your call is interrupted, indicating that you should release the

PTT button, for example when the radio receives an Emergency Call.

Switching Between Conventional Analog and Digital Mode

Each channel in your radio can be configured as a conventional analog or conventional digital channel.

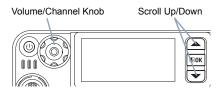

To switch between an analog or a digital channel, use the

- · Scroll Up/Down buttons, or
- · Volume/Channel Knob, or
- programmed Channel Up or Channel Down buttons

When switching from digital to analog mode, certain features are unavailable. Icons for the digital features (such as Messages) reflect this change by appearing 'grayed out'. Disabled features are hidden in the menu.

Your radio also has features available in both analog and digital mode. However, the minor differences in the way each feature works does **NOT** affect the performance of your radio.

NOTE: Your radio also switches between digital and analog modes during a dual mode scan (see *Scan* on page 32).

English

To use the Scroll Up/Down buttons, while in the Home Screen of the required Zone, press
or
to select the required channel.

To use the programmed Channel Up or Channel Down buttons, while in the Home Screen of the required Zone, press Channel Up or Channel Down to select the required channel.

Using the Volume/Channel Knob

The Volume/Channel Knob can be programmed as dual purpose for both volume and channel or as a volume-only control.

To adjust volume, see Adjusting the Volume on page 3.

To change channels, push and hold the knob until channel selection screen is displayed, then turn the knob to the required

To exit channel selection state, do any of the following.

- Push the Volume/Channel Knob again
- Press ^{■ ok}
- Press کم
- Wait for the menu timer to expire

IP Site Connect 60



This feature allows your radio to extend conventional communication beyond the reach of a single site, by connecting to different available sites which are connected via an Internet Protocol (IP) network.

When the radio moves out of range from one site and into the range of another, it connects to the new site's repeater to send or receive calls/data transmissions. Depending on your settings, this is done automatically or manually.

If the radio is set to do this automatically, it scans through all available sites when the signal from the current site is weak or when the radio is unable to detect any signal from the current site. It then locks on to the repeater with the strongest Received Signal Strength Indicator (RSSI) value.

In a manual site search, the radio searches for the next site in the roam list that is currently in range (but which may not have the strongest signal) and locks on to it.

NOTE: Each channel can only have either Scan or Roam enabled, not both at the same time.

Channels with this feature enabled can be added to a particular roam list. The radio searches the channel(s) in the roam list during the automatic roam operation to locate the best site.

A roam list supports a maximum of 16 channels (including the Selected Channel).

NOTE: You cannot manually add or delete an entry to the roam list. Check with your dealer or system administrator for more information.

Capacity Plus 60



Capacity Plus is a single-site trunking configuration of the MOTOTRBO radio system, which uses a pool of channels to support hundreds of users and up to 254 Groups. This feature allows your radio to efficiently utilize the available number of programmed channels while in Repeater Mode.

Icons of features not applicable to Capacity Plus are not available in the menu. You hear a negative indicator tone if you try to access a feature not applicable to Capacity Plus via a programmable button press.

Your radio also has features that are available in conventional digital mode, IP Site Connect, Capacity Plus and Linked Capacity Plus. However, the minor differences in the way each feature works does **NOT** affect the performance of your radio.

Check with your dealer or system administrator for more information on this configuration.

Linked Capacity Plus <a>(



Linked Capacity Plus is a multi-site multi-channel trunking configuration of the MOTOTRBO radio system, combining the best of both Capacity Plus and IP Site Connect configurations.

Linked Capacity Plus allows your radio to extend trunking communication beyond the reach of a single site, by connecting to different available sites which are connected via an Internet Protocol (IP) network. It also provides an increase in capacity by efficiently utilizing the combined available number of programmed channels supported by each of the available sites.

When the radio moves out of range from one site and into the range of another, it connects to the new site's repeater to send or receive calls/data transmissions. Depending on your settings, this is done automatically or manually.

If the radio is set to do this automatically, it scans through all available sites when the signal from the current site is weak or when the radio is unable to detect any signal from the current site. It then locks on to the repeater with the strongest Received Signal Strength Indicator (RSSI) value.

In a manual site search, the radio searches for the next site in the roam list that is currently in range (but which may not have the strongest signal) and locks on to it.

Any channel with Linked Capacity Plus enabled can be added to a particular roam list. The radio searches these channels during the automatic roam operation to locate the best site.

NOTE: You cannot manually add or delete an entry to the roam list. Check with your dealer or system administrator for more information.

Similar to Capacity Plus, icons of features not applicable to Linked Capacity Plus are not available in the menu. You hear a negative indicator tone if you try to access a feature not applicable to Linked Capacity Plus via a programmable button press.

Check with your dealer or system administrator for more information on this configuration.

Identifying Status Indicators

Your radio indicates its operational status through the following:
Display Icons page 12
Call Icons
Sent Item Icons page 15
LED Indicators page 16
Audio Tones
Indicator Tonespage 17

Englisi

The liquid crystal display (LCD) of your radio shows the radio status, text entries, and menu entries.

The following are icons that appear on the status bar at the top of the radio's display. Icons are displayed on the status bar, arranged left-to-right, in order of appearance/usage and are channel specific.



Received Signal Strength Indicator (RSSI)

The number of bars displayed represents the radio signal strength. Four bars indicate the strongest signal. This icon is only displayed while receiving.



Bluetooth

The Bluetooth feature is enabled but there is no remote Bluetooth device connected.



Bluetooth Connected

The Bluetooth feature is enabled. The icon stays lit when one or more remote Bluetooth devices are connected.



Emergency

Radio is in Emergency mode.



Notification

Notification List has one or more missed events.



Scan*‡

Scan feature is enabled.



Scan - Priority 1*‡

Radio detects activity on channel/group designated as Priority 1).



Scan - Priority 2**

Radio detects activity on channel/group designated as Priority 2.



Vote Scan

Vote scan feature is enabled.



Monitor

Selected channel is being monitored.



Talkaround*[‡]

In the absence of a repeater, radio is currently configured for direct radio to radio communication.



Site Roaming*

The site roaming feature is enabled.



Secure

The Privacy feature is enabled.



Unsecure

The Privacy feature is disabled.



GPS Available

The GPS feature is enabled. The icon stays lit when a position fix is available.

* Not applicable in Capacity Plus [‡] Not applicable in Linked Capacity Plus

Enalish



GPS Not Available/Out of Range

The GPS feature is enabled but is not receiving data from the satellite.



Option Board

The Option Board is enabled.



Option Board Non-Function

The Option Board is disabled.



Tones Disable

Tones are turned off.



Power Level

Radio is set at Low power.



Radio is set at High power.

* Not applicable in Capacity Plus [‡] Not applicable in Linked Capacity Plus

Call Icons

The following icons appear on the radio's display during a call. These icons also appear in the Contacts list to indicate alias or ID type.



Private Call

Indicates a Private Call in progress.

In the Contacts list, it indicates a subscriber alias (name) or ID (number).



Group Call/All Call

Indicates a Group Call or All Call in progress. In the Contacts list, it indicates a group alias (name) or ID (number).

Advanced Menu Icons

The following icons appear beside menu items on the radio's display that offer a choice between two options or as an indication that there is a sub-menu offering two options.

Checkbox (Empty)

Indicates the option is not selected.

Checkbox (Checked)

Indicates the option is selected.

Solid Black Box

Indicates the option selected for the menu item with a sub-menu.

Mini Notice Icons

The following icons appear momentarily on the radio's display after an action to perform task is taken.



Successful Transmission (Positive)

Successful action taken.



Failed Transmission (Negative)

Failed action taken.



Transmission in Progress (Transitional)

Transmitting. This dynamic icon is seen before indication for Successful Transmission or Failed Transmission.

Sent Item Icons <a>®



The following icons appear in the Sent Items folder.



Sent Successfully

The text message is sent successfully.



Send Failed

The text message cannot be sent.



In-Progress



• The text message to a subscriber alias or ID is pending transmission, followed by waiting for acknowledgement.

The text message to a group alias or ID is pending transmission.

Bluetooth Device Icons

The following icons also appear next to items in the list of Bluetooth-enabled devices available to indicate the device type.



Bluetooth Data Device

Bluetooth-enabled data device, such as a scanner.




Bluetooth Audio Device

Bluetooth-enabled audio device, such as a headset.



Bluetooth PTT Device

Bluetooth-enabled PTT device, such as a PTT-Only Device (POD).

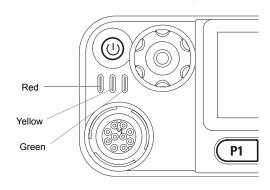

Blinking red – Radio is receiving an emergency transmission or has failed the self-test upon powering up.

Solid green – Radio is powering up, or transmitting.

Blinking green – Radio is receiving a non-privacy-enabled call or data, or detecting activity over the air.

 $\label{eq:Double blinking green} \textbf{-} \ \mathsf{Radio} \ \mathsf{is} \ \mathsf{receiving} \ \mathsf{a} \ \mathsf{privacy-enabled} \\ \mathsf{call} \ \mathsf{or} \ \mathsf{data}.$

Solid yellow – Radio is monitoring a conventional channel.

Blinking yellow – Radio is scanning for activity or receiving a Call Alert, or all local Linked Capacity Plus channels are busy.

Double blinking yellow — Radio is no longer connected to the repeater while in Capacity Plus or Linked Capacity Plus, all Capacity Plus channels or Linked Capacity Plus channels are currently busy, Auto Roaming is enabled, radio is actively searching for a new site. Also indicates radio has yet to respond to a group call alert, or radio is locked.

NOTE: While in conventional mode, when the green LED blinks, it indicates the radio detects activity over the air. Due to the nature of the digital protocol, this activity may or may not affect the radio's programmed channel.

For Capacity Plus and Linked Capacity Plus, there is no LED indication when the radio is detecting activity over the air.

16

Indicator Tones

High pitched tone Low pitched tone Positive Indicator Tone

Negative Indicator Tone

Audio Tones

Alert tones provide you with audible indications of the radio's status or the radio's response to data received.

A monotone sound. Sounds continuously until termination.

Periodic Tone Sounds periodically depending on the duration set by the radio. Tone starts, stops, and repeats itself.

Repetitive Tone A single tone that repeats itself until it is terminated by the user.

Momentary Tone Sounds only once for a short period of time defined by the radio.

Keceiv

Receiving and Making Calls

Once you understand how your MOTOTRBO Mobile is configured, you are ready to use your radio.

Use this navigation guide to familiarize yourself with the basic Call features:

Selecting a Zone	page 18
Selecting a Radio Channel, Subscriber Alias or ID,	
or Group Alias or ID	page 19
Receiving and Responding to a Radio Call	page 19
Making a Radio Call	page 22
Stopping a Radio Call	page 25
Talkaround	page 26
Permanent Monitor	page 26

Selecting a Zone

A zone is a group of channels. Your radio supports up to 99 channels and 2 zones, with a maximum of 99 channels per zone.

Use the following procedure to select a zone.

Procedure:

Press the programmed Zone button and proceed to Step 3. OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 ♠ or to Zone and press to select.
- 3 The current zone is displayed and indicated by a ✓.
- 5 The display shows (Zone) Selected momentarily and returns to the selected zone screen.

Selecting a Channel

Transmissions are sent and received on a channel. Depending on your radio's configuration, each channel may have been programmed differently to support different groups of users or supplied with different features. After selecting the required zone, select the channel you require to transmit or receive on.

Procedure:

Select a channel by using:

- Scroll Up/Down buttons, OR
- Volume/Channel Knob, OR
- The programmed Channel Up or Channel Down buttons

See Selecting a Zone on page 18 for more information on selecting your required zone.

See Switching Between Conventional Analog and Digital **Mode** on page 8 for information about **Scroll Up/Down** buttons.


See Using the Volume/Channel Knob on page 9 for information about using the Volume/Channel Knob.

See Programmable Buttons on page 5 for information about the Channel Up or Channel Down buttons.

Receiving and Responding to a Radio Call

Once the channel, subscriber alias or ID, or group alias or ID is displayed, you can proceed to receive and respond to calls.

The green LED lights up while the radio is transmitting and blinks when the radio is receiving.

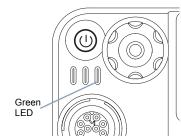

NOTE: The green LED lights up while the radio is transmitting and double blinks when the radio is receiving a privacyenabled call.

> To unscramble a privacy-enabled call, your radio must have the same Privacy Key, or the same Key Value and Key ID (programmed by your dealer) as the transmitting radio (the radio you are receiving the call from).

See *Privacy* on page 60 for more information.



Receiving and Responding to a Group Call

To receive a call made to a group of users, your radio must be configured as part of that group.

Procedure:

When you receive a Group Call (while on the Home screen):

- The green LED blinks.
- The Group Call icon appears in the top right corner. The first text line shows the caller alias. The second text line displays the group call alias. Your radio unmutes and the incoming call sounds through the radio's speaker.
- If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the PTT button, indicating the channel is free for you to respond.

Press the PTT button to respond to the call.

OR

If the Voice Interrupt feature is enabled, press the PTT button to stop the current call from the transmitting radio and free the channel for you to talk/respond.

- The green LED lights up.
- Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.

OR

Mait for the PTT Sidetone to finish (if enabled) and speak clearly into the microphone.

- Release the PTT button to listen.
- If there is no voice activity for a predetermined period of time, the call ends.

See Making a Group Call on page 23 for details on making a Group Call.

Receiving and Responding to a Private Call <a>h



A Private Call is a call from an individual radio to another individual radio.

Procedure:

When you receive a Private Call:

- The green LED blinks.
- The Private Call icon appears in the top right corner. The first text line shows the caller alias. Your radio unmutes and the incoming call sounds through the radio's speaker.
- 3 If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the PTT button, indicating the channel is free for you to respond.

Press the PTT button to respond to the call.

If the Voice Interrupt feature is enabled, press the PTT

20

button to stop the current call from the transmitting radio and free the channel for you to talk/respond.

- The green LED lights up.
- Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
- Release the PTT button to listen.
- If there is no voice activity for a predetermined period of time, the call ends.
- You hear a short tone. The display shows Call Ended.

See Making a Private Call on page 23 for details on making a Private Call.

Receiving an All Call

An All Call is a call from an individual radio to every radio on the channel. It is used to make important announcements requiring the user's full attention.

Procedure:

When you receive an All Call:

- A tone sounds and the green LED blinks.
- The Group Call icon appears in the top right corner. The first text line shows the caller alias. The second text line displays All Call. Your radio unmutes and the incoming call sounds through the radio's speaker.

3 Once the All Call ends, the radio returns to the previous screen before receiving the call. An All Call does not wait for a predetermined period of time before ending.

If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the PTT button, indicating the channel is now available for use.

You cannot respond to an All Call.

See Making an All Call on page 24 for details on making an All

NOTE: The radio stops receiving the All Call if you switch to a different channel while receiving the call. During an All Call, you are not able to continue with any menu navigation or editing until the call ends.

Receiving and Responding to a Selective Call



A Selective Call is a call from an individual radio to another individual radio. It is a Private Call on an analog system.

Procedure:

When you receive a Selective Call:

- The green LED blinks.
- The Private Call icon appears in the top right corner. The first text line shows the caller alias or Selective Call or

- If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the PTT button, indicating the channel is free for you to respond.
 - Press the PTT button to respond to the call.
- The LED lights up solid green.
- Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
- Release the PTT button to listen.
- If there is no voice activity for a predetermined period of time, the call ends.
- You hear a short tone. The display shows Call Ended.

NOTE: See Making a Selective Call on page 25 for details on making a Selective Call.

Making a Radio Call

After selecting your channel, you can select a subscriber alias or ID, or group alias or ID by using:

- The Contacts list (see Contacts Settings on page 34)
- A programmed One Touch Access button



- The programmed number keys This method is for Group, Private and All Calls only and is used with the keypad microphone (see Making a Group, Private or All Call with the Programmable Number Key on page 86).
- Manual Dial (via Contacts) This method is for Private Calls only and is dialed using a keypad microphone (see Making a Private Call by Manual Dial on page 86)

NOTE: Your radio must have the Privacy feature enabled on the channel to send a privacy-enabled transmission. Only target radios with the same Privacy Key as your radio are able to unscramble the transmission.

See **Privacy** on page 60 for more information.



The One Touch Access feature allows you to make a Group or Private Call to a predefined ID easily. This feature can be assigned to a short or long programmable button press. You can ONLY have one ID assigned to a One Touch Access button. Your

radio can have multiple One Touch Access buttons programmed.

Making a Group Call

To make a call to a group of users, your radio must be configured as part of that group.

Procedure:

Select the channel with the active group alias or ID. See Selecting a Channel on page 19.

Press the programmed One Touch Access button.

- Press the PTT button to make the call. The green LED lights up. The Group Call icon appears in the top right corner. The first text line shows the group call alias.
- Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.

- Mait for the PTT Sidetone to finish (if enabled) and speak clearly into the microphone.
- Release the PTT button to listen. When the target radio responds, the green LED blinks. You see the Group Call icon, the group alias or ID, and transmitting radio alias or ID on your display.
- If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the target radio releases

the PTT button, indicating the channel is free for you to respond. Press the PTT button to respond.

If there is no voice activity for a predetermined period of time, the call ends.

Radio returns to the screen you were on prior to initiating the

You can also make a Group Call via Contacts (see Making a Group Call from Contacts on page 35).

Making a Private Call <a>



While you can receive and/or respond to a Private Call initiated by an authorized individual radio, your radio must be programmed for you to initiate a Private Call.

There are two types of Private Calls. The first type, where a radio presence check is performed prior to setting up the call, while the other sets up the call immediately.

Only one of these call types can be programmed to your radio by your dealer.

You hear a negative indicator tone, when you make a Private Call via the Menu, Call Log, Contacts list, One Touch Access button, the programmed number keys, Scroll Up/Down buttons, or the Volume/Channel Knob if this feature is not enabled.

Use the Text Message or Call Alert features to contact an individual radio. See *Text Messaging Features* on *page 49* or *Call Alert Operation* on *page 42* for more information.

Procedure:

 Select the channel with the active group alias or ID. See Selecting a Channel on page 19.
 OR

Press the programmed **One Touch Access** button.

- Press the PTT button to make the call. The green LED lights up. The Private Call icon appears in the top right corner. The first text line shows the subscriber alias. The second text line displays the call status.
- Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
- 4 Release the PTT button to listen. When the target radio responds, the green LED blinks.
- 5 If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the target radio releases the PTT button, indicating the channel is free for you to respond. Press the PTT button to respond.

OR

If there is no voice activity for a predetermined period of time, the call ends.

You hear a short tone. The display shows Call Ended.

You can also make a Private Call via Contacts (see Making a Private Call from Contacts on page 35), manually dial a Private Call (see Making a Private Call by Manual Dial on page 86) or perform a quick alphanumeric search for the required target alias via a keypad entry (see Making a Group, Private, Phone or All Call by Alias Search on page 87).

Making an All Call

This feature allows you to transmit to all users on the channel. Your radio must be programmed to allow you to use this feature.

Procedure:

- Select the channel with the active group alias or ID. See Selecting a Channel on page 19.
- Press the PTT button to make the call. The green LED lights up. The Group Call icon appears in the top right corner. The first text line shows All Call.
- Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
 OR

Wait for the **PTT** Sidetone to finish (if enabled) and speak clearly into the microphone.

Users on the channel cannot respond to an All Call.

24

Just like a Private Call, while you can receive and/or respond to a Selective Call initiated by an authorized individual radio, your radio must be programmed for you to initiate a Selective Call.

Procedure:

- Select the channel with the active group alias or ID. See Selecting a Channel on page 19.
- Press the PTT button to make the call. The green LED lights up. The Private Call icon appears in the top right corner. The first text line shows the subscriber alias. The second text line displays the call status.
- 3 Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
- Release the PTT button to listen. When the target radio responds, the green LED blinks.
- If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the target radio releases the PTT button, indicating the channel is free for you to respond. Press the PTT button to respond.

If there is no voice activity for a predetermined period of time, the call ends.

You hear a short tone. The display shows Call Ended.

Stopping a Radio Call (n)



This feature allows you to stop an ongoing Group or Private Call to free the channel for transmission. For example, when a radio experiences a "stuck microphone" condition where the PTT button is inadvertently pressed by the user.

Your radio must be programmed to allow you to use this feature.

Procedure:

While on the required channel:

- Press the programmed Transmit Interrupt Remote Dekey button.
- The display shows Remote Dekey.
- Wait for acknowledgment.
- The radio sounds a positive indicator tone and the display shows Remote Dekey Success, indicating that the channel is now free.

OR

The radio sounds a negative indicator tone and the display shows Remote Dekey Failed.

On the interrupted radio, the display shows Call Interrupted, and the radio sounds a negative indicator tone until you release the PTT button, if it is transmitting an interruptible call that is stopped via this feature.

Talkaround

You can continue to communicate when your repeater is not operating, or when your radio is out of the repeater's range but within talking range of other radios. This is called "talkaround".

NOTE: This feature is not applicable in Capacity Plus and Linked Capacity Plus.

Procedure:

Press the programmed **Repeater/Talkaround** button to toggle between talkaround and repeater modes.

OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 or to Utilities and press ok to select.
- 3 ♠ or ▼ to Radio Settings and press ® to select.
- 4 or ▼ to Talkaround and press ® to select.
- 5 Press ^{■ ok} to enable Talkaround. The display shows ✓ beside Enabled.

OR

Press $^{\frac{16000}{1000}}$ to disable Talkaround. The \checkmark disappears from beside Enabled.

6 The screen automatically returns to the previous menu.

The Talkaround setting is retained even after powering down.

Permanent Monitor

Use the Permanent Monitor feature to continuously monitor a selected channel for activity.

NOTE: This feature is not applicable in Capacity Plus and Linked Capacity Plus.

Procedure:

- 1 Press the programmed **Permanent Monitor** button.
- 2 Radio sounds an alert tone, the yellow LED lights up, and the display shows Permanent Monitor On. The monitor icon appears on the status bar.
- 3 Press the programmed Permanent Monitor button to exit Permanent Monitor mode.
- 4 Radio sounds an alert tone, the yellow LED turns off, and display shows Permanent Monitor Off.

26

Advanced Features

Use this navigation guide to learn more about advanced features available with your radio:

Radio Check
Remote Monitorpage 28
Scan Lists page 30
Scan page 32
Vote Scan page 34
Contacts Settings
Call Indicator Settings page 38
Call Log Features
Call Alert Operation
Emergency Operation
Text Messaging Features page 49
Analog Message Encode
Analog Status Update
Privacy page 60
Multi-Site Controls
Security page 64
Lone Worker page 66
Bluetooth page 67
Notification Listpage 70
Utilitiespage 70

Radio Check line



If enabled, this feature allows you to determine if another radio is active in a system without disturbing the user of that radio. No audible or visual notification is shown on the target radio.

This feature is only applicable for subscriber aliases or IDs.

Sending a Radio Check

Procedure:

Use the programmed Radio Check button.

- Press the programmed Radio Check button.
- or to the required subscriber alias or ID and press to select.
- The display shows transitional mini notice, indicating the request is in progress. The LED lights up solid green.
- 4 Wait for acknowledgement.
- 5 If successful, a positive indicator tone sounds and the display shows positive mini notice.

OR

If unsuccessful, a negative indicator tone sounds and the display shows negative mini notice.

Radio returns to the subscriber alias or ID screen.

OR

Procedure:

Use the menu.

- to access the menu.
- or to Contacts and press sok to select.
- or to the required subscriber alias or ID and press to select.
- or to Radio Check and press to select.
- The display shows transitional mini notice, indicating the request is in progress. The green LED lights up.
- Wait for acknowledgement.
- If successful, a positive indicator tone sounds and the display shows positive mini notice.

OR

If unsuccessful, a negative indicator tone sounds and the display shows negative mini notice.

Radio returns to the subscriber alias or ID screen.

If the (5 *) button is pressed when the radio is waiting for acknowledgement, a tone sounds, and the radio terminates all retries and exits Radio Check mode.

You can also initiate Radio Check via manual dial (see Initiating a Radio Check by Manual Dial on page 85).

Remote Monitor <a>6



Use the Remote Monitor feature to turn on the microphone of a target radio (subscriber IDs only). No audible or visual indication is given to the target radio. You can use this feature to monitor, remotely, any audible activity surrounding the target radio.

Your radio must be programmed to allow you to use this feature.

Initiating Remote Monitor

Procedure:

Use the programmed Remote Monitor button.

- Press the programmed **Remote Monitor** button.
- or to the required subscriber alias or ID and press **™** to select.
- The display shows transitional mini notice, indicating the request is in progress. The green LED lights up.
- Wait for acknowledgment.
- If successful, a positive indicator tone sounds and the display shows positive mini notice. Your radio starts playing audio from the monitored radio for a programmed duration and display shows Rem. Monitor.
 - Once the timer expires, the radio sounds an alert tone and the LED turns off.

OR

28

If unsuccessful, a negative indicator tone sounds and the display shows negative mini notice.

OR

Procedure:

Use the menu.

- 1 sok to access the menu.
- 2 or to Contacts and press ok to select.
- 3 ♠ or ▼ to the required subscriber alias or ID and press solve to select.
- 4 ♠ or ▼ to Remote Mon. and press ® ok to select.
- 5 The display shows transitional mini notice, indicating the request is in progress. The green LED lights up.
- 6 Wait for acknowledgment.
- 7 If successful, a positive indicator tone sounds and the display shows positive mini notice. Your radio starts playing audio from the monitored radio for a programmed duration and display shows Rem. Monitor.

Once the timer expires, the radio sounds an alert tone and the LED turns off.

OR

If unsuccessful, the radio sounds a negative indicator tone the display shows negative mini notice.

You can also manually select a target radio address (see **Initiating Remote Monitor by Manual Dial** on page 85).

☐ Stopping Remote Monitor

Remote Monitor automatically stops after a programmed duration or when there is any user operation on the target radio.

Procedure:

- 1 Press the programmed **Transmit Interrupt Remote Dekey** button.
- The display shows transitional mini notice, indicating the request is in progress. The green LED lights up.
- 3 Wait for acknowledgment.
- 4 If successful, a positive indicator tone sounds and the display shows positive mini notice.

OR

If unsuccessful, a negative indicator tone sounds and the display shows negative mini notice.

30

Scan Lists

Scan lists are created and assigned to individual channels/ groups. Your radio scans for voice activity by cycling through the channel/group sequence specified in the scan list for the current channel/group.

Your radio can support up to 250 scan lists, with a maximum of 16 members in a list. Each scan list supports a mixture of both analog and digital entries.

You can add, delete, or prioritize channels by editing a scan list.

You can attach a new scan list to your radio via Front Panel Programming.

NOTE: This feature is not applicable in Capacity Plus and Linked Capacity Plus.

Viewing an Entry in the Scan List

Procedure:

- 1 sok to access the menu.
- 2 or to Scan and press to select.
- 3 ♠ or ▼ to Scan List and press ® ok to select.
- 4 Use or to view each member on the list.

The priority icon appears left of the member's alias, if set, to indicate whether the member is on a Priority 1 or Priority 2

channel list. You **cannot** have multiple Priority 1 or Priority 2 channels in a scan list.

There is no priority icon if priority is set to None.

- ☐ Editing the Scan List
- Adding a New Entry to the Scan List

Procedure:

- 1 sok to access the menu.
- 2 or to Scan and press of to select.
- 3 ♠ or ▼ to Scan List and press ® ok to select.
- 4 or ▼ to Add Member and press ® oK to select.
- 5 or to the required alias or ID and press to select.
- 6 ♠ or ▼ to the required priority level and press ^{★ OK} to select.
- 7 The display shows positive mini notice, followed immediately by field fine them?.

OR

or to № and press to select to save the current list.

Deleting an Entry from the Scan List

Procedure:

- 1 sok to access the menu.
- 2 ♠ or ▼ to Scan and press ® ok to select.
- 3 ♠ or ▼ to Scan List and press ® ok to select.

- 6 At Delete Entry?, ♠ or ▼ to Yes and press ^{■ ox} to select, to delete the entry. The display shows positive mini notice.

OR

- or to No and press to select to return to the previous screen.
- 7 Repeat Steps 4 to 6 to delete other entries.

After deleting all required aliases or IDs, long press to return to the Home screen.

Setting and Editing Priority for an Entry in the Scan List

Procedure:

- 1 sok to access the menu.
- 2 or to Scan and press to select.
- 3 ♠ or ▼ to Scan List and press ® ok to select.
- 5 or to Edit Priority and press of to select.
- 6 ♠ or ▼ to the required priority level and press ^{so ok} to select.
- 7 The display shows positive mini notice before returning to the previous screen.
- 8 The priority icon appears left of the member's name.

There is no priority icon if priority is set to None.

Scan

When you start a scan, your radio cycles through the programmed scan list for the current channel looking for voice activity.

The yellow LED blinks and the scan icon appears on the status bar

During a dual mode scan, if you are on a digital channel, and your radio locks onto an analog channel, it automatically switches from digital mode to analog mode for the duration of the call. This is also true for the reverse.

There are two ways of initiating scan:

- Main Channel Scan (Manual): Your radio scans all the channels/groups in your scan list. On entering scan, your radio may – depending on the settings – automatically start on the last scanned "active" channel/group or on the channel where scan was initiated.
- Auto Scan (Automatic): Your radio automatically starts scanning when you select a channel/group that has Auto Scan enabled.

NOTE: This feature is not applicable in Capacity Plus and Linked Capacity Plus.

Starting and Stopping Scan

Procedure:

Press the programmed **Scan** button to start or stop Scan. **OR** Follow the procedure below.

- 1 Use the **Scroll Up/Down** buttons to select a channel programmed with a scan list.
- 2 sok to access the menu.
- 3 ♠ or ▼ to Scan and press ® ok to select.
- 4 ♠ or ▼ to Scan State and press ® ok to select.
- The display shows Scan On when scan is enabled. The yellow LED blinks and the scan icon appears. OR

The display shows $Scan\ Off\ if\ scan\ is\ disabled.$ The LED turns off and the scan icon disappears.

While scanning, the radio can only accept data (e.g. text message, location, telemetry, or PC data) if received on its Selected Channel.

Responding to a Transmission During a Scan

During scanning, your radio stops on a channel/group where activity is detected. The radio stays on that channel for a programmed time period known as "hang time".

Procedure:

- Press the PTT button during hang time. The green LED lights up.
- Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.

OR

Mait for the PTT Sidetone to finish (if enabled) and speak clearly into the microphone.

- 4 Release the PTT button to listen.
- 5 If you do not respond within the hang time, the radio returns to scanning other channels/groups.

Deleting a Nuisance Channel

If a channel continually generates unwanted calls or noise (termed a "nuisance" channel), you can temporarily remove the unwanted channel from the scan list.

This capability does not apply to the channel designated as the Selected Channel.

Procedure:

- 1 When your radio "locks on to" an unwanted or nuisance channel, press the programmed Nuisance Channel Delete button until you hear a tone.
- 2 Release the Nuisance Channel Delete button. The nuisance channel is deleted.

Deleting a "nuisance" channel is **only** possible through the programmed **Nuisance Channel Delete** button. This feature is **not** accessible through the menu.

Restoring a Nuisance Channel

Procedure:

To restore the deleted nuisance channel, do **one** of the following:

- Turn the radio off and then power it on again, OR
- Stop and restart a scan via the programmed Scan button or menu, OR
- Change the channel via the **Scroll Up/Down** buttons.

Englis

Vote Scan 📵

Vote Scan provides you with wide area coverage in areas where there are multiple base stations transmitting identical information on different analog channels.

Your radio scans analog channels of multiple base stations and performs a voting process to select the strongest received signal. Once that is established, your radio unmutes to transmissions from that base station.

The yellow LED blinks and the vote scan icon appears on the status bar.

To respond to a transmission during a Vote Scan, follow the same procedures as Responding to a Transmission During a Scan on page 33.

Contacts Settings

Contacts provides "address-book" capabilities on your radio. Each entry corresponds to an alias or ID that you use to initiate a call.

Each entry, depending on context, associates with one of five types of calls: Group Call, Private Call, All Call, PC Call or Dispatch Call.

PC Call and Dispatch Call are data-related. They are only available with the applications. Refer to the data applications documentation for further details.

NOTE: If the Privacy feature is enabled on a channel, you can make privacy-enabled Group Call, Private Call, and All Call on that channel. Only target radios with the same Privacy Key OR the same Key Value and Key ID as your radio are able to unscramble the transmission.

See **Privacy** on page 60 for more information.



Additionally, Contacts menu allows you to assign each entry to a programmable number key or more on a keypad microphone. If an entry is assigned to a number key, your radio can perform a quick dial on the entry.

Your radio supports two Contacts lists, one for Analog contacts and one for Digital contacts, with a a maximum of 500 members for each Contacts list.

Each entry within Contacts displays the following information:

- Call Type
- Call Alias
- Call ID

NOTE: You can add, or edit subscriber IDs for the Digital Contacts list. Deleting subscriber IDs can only be performed by your dealer.

> For the Analog Contacts list, you can only view the subscriber IDs, edit the subscriber IDs, and initiate a Call Alert. Adding and deleting capabilities can only be performed by your dealer.

Making a Group Call from Contacts

Procedure:

- **™** ok to access the menu.
- 2 or to Contacts and press on to select. The entries are alphabetically sorted.
- or to the required group alias or ID.

- 4 Press the PTT button to make the call. The green LED lights
- Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.

- Mait for the PTT Sidetone to finish (if enabled) and speak clearly into the microphone.
- Release the PTT button to listen. When any user in the group responds, the green LED blinks. You see the Group Call icon, the group alias or ID, and that user's alias or ID on your display.
- If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the target radio releases the PTT button, indicating the channel is free for you to respond. Press the PTT button to respond.

If there is no voice activity for a programmed period of time, the call ends.

🧻 Making a Private Call from Contacts 📵



Procedure:

- 1 sok to access the menu.
- 2 ♠ or ▼ to Contacts and press ® ok to select. The entries are alphabetically sorted.

Advanced F

- 3 or to the required subscriber alias or ID.
- 4 Press the PTT button to make the call. The green LED lights up. The display shows the destination alias.
- Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
- 6 Release the PTT button to listen. When the target radio responds, the green LED blinks and the display shows the transmitting user's alias or ID.
- 7 If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the target radio releases the PTT button, indicating the channel is free for you to respond. Press the PTT button to respond.

OR

If there is no voice activity for a programmed period of time, the call ends.

You hear a short tone. The display shows Call Ended.

NOTE: If you release the **PTT** button while the radio is setting up the call, it exits without any indication and returns to the previous screen.

Your radio may be programmed to perform a radio presence check prior to setting up the Private Call. If the target radio is not available, you hear a short tone and see negative mini notice on the display.

The radio returns to the menu prior to initiating the radio presence check.

Assigning an Entry to a Programmable Number Key <a> A

Procedure:

- 1 sok to access the menu.
- 2 or to Contacts and press to select. The entries are alphabetically sorted.
- 4 ▲ or ▼ to Program Key and press ®ok to select.

OR

If the number key is currently assigned to another entry, the display shows The Key is Already Used and then, the first line of the display shows Overwrite?.

- or to Yes and press to select.
- 6 The radio sounds a positive indicator tone and the display shows positive mini notice.
- 7 The screen automatically returns to the previous menu.

NOTE: Each entry can be associated to different number keys. You see a checkmark before each number key that is assigned to an entry. If the checkmark is before Empty, you have not assign a number key to the entry.

If a number key is assigned to an entry in a particular mode, this feature is not supported when you long press the number key in another mode.

See Making a Group, Private or All Call with the Programmable Number Key on page 86 for details on making a Group, Private or All Call with the programmed number keys.

Removing the Association between Entry and Programmable Number Key

Procedure:

Long press the programmed number key to the required alias or ID, press for to select, and proceed to Step 4.

OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 or to Contacts and press to select. The entries are alphabetically sorted.
- 4 ♠ or ▼ to Program Key and press ® ok to select.

- 6 The first line of the display shows Clear from all keys?.
- 7 or to Yes and press to select.
- 8 The radio sounds a positive indicator tone and the display shows positive mini notice.
- 9 The screen automatically returns to the previous menu.

NOTE: When an entry is deleted, the association between the entry and its programmed number key(s) is removed.

Setting Default Contact

Procedure:

Follow the procedure below.

- 1 sok to access the menu.
- 2 or to Contacts and press sok to select.
- 4 ♠ or ▼ to Set as Default and press ® ok to select.
- 5 The radio sounds a positive indicator tone and the display shows positive mini notice.
- 6 A ✓ appears beside the selected default alias or ID.

Englis

Call Indicator Settings

Activating or Deactivating Call Ringers for Call Alerts

You can select, or turn on or off ringing tones for a received Call Alert.

Procedure:

- 1 sok to access the menu.
- 2 ♠ or ▼ to Utilities and press ® ok to select.
- 3 ♠ or ▼ to Radio Settings and press ® to select.
- 5 or to Call Ringers and press ok to select.
- or ▼ to Call Alert and press to select. The current tone is indicated by a ✓.

You can turn on or off the ringing tones for a received Private Call.

Procedure:

- 1 sok to access the menu.
- 2 or to Utilities and press or to select.
- 3 ♠ or ▼ to Radio Settings and press ® oK to select.
- 4 ♠ or ▼ to Tones/Alents and press ® ok to select.
- 5 or to Call Ringers and press ok to select.
- 6 ▲ or ▼ to Private Call.
- 7 Press ^{■ ok} to enable Private Call ringing tones. The display shows ✓ beside Enabled.

OR

Press ^{□ ok} to disable Private Call ringing tones. The ✓ disappears from beside Enabled.

☐ Activating or Deactivating Call Ringers for Selective Call ()

You can select, or turn on or off ringing tones for a received Selective Call.

Procedure:

- 1 sok to access the menu.
- 2 or to Utilities and press to select.
- 3 ♠ or ▼ to Radio Settings and press oK to select.

38

- 5 ♠ or to Call Ringers and press ■ ok to select.
- 6 ♠ or ▼ to Selective Call and press ® ok to select. The current tone is indicated by a ✓.

You can turn on or off the ringing tones for a received Text Message.

Procedure:

- 1 sok to access the menu.
- 2 or ▼ to Utilities and press ™ to select.
- 3 ♠ or ▼ to Radio Settings and press ® oK to select.

Activating or Deactivating Call Ringers for Telemetry Status with Text

You can turn on or off the alert tones for a received Telemetry Status with Text.

Procedure:

- 1 sok to access the menu.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 5 ♠ or ▼ to Call Ringers and press ® ok to select.
- 6 or ▼ to Telemetry and press to select. The current tone is indicated by a ✓.
- 7 or to the required tone and press to select. ✓ appears beside selected tone.

Assigning Ring Styles 📵

You can program your radio to sound one of ten predefined ringing tones when receiving a Call Alert or a Text Message from a particular contact.

Procedure:

- 1 sok to access the menu.
- 2 or to Contacts and press to select. The entries are alphabetically sorted.

- 5 Press 🖽 until display shows Edit Ringtone menu.
- 6 A ✓ indicates the current selected tone.
- 8 The display shows a positive mini notice.

The radio sounds out each ring style as you navigate through the list.

Escalating Alarm Tone Volume

You can program your radio to continually alert you when a radio call remains unanswered. This is done by automatically increasing the alarm tone volume over time. This feature is known as Escalert.

Procedure:

- 1 sok to access the menu.
- 2 ♠ or ▼ to Utilities and press ^{■ oK} to select.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 5 or to Escalert.
- 6 Press ^{⊞ ok} to enable Escalert. The display shows ✓ beside Enabled.

OR

Press ^{■ ok} to disable Escalert. The ✓ disappears from beside Enabled.

Your radio keeps track of all recent outgoing, answered, and missed Private Calls. Use the call log feature to view and manage recent calls.

You can perform the following tasks in each of your call lists:

- Store alias or ID to Contacts
- Delete
- View Details

Viewing Recent Calls

The lists are Missed, Answered, and Outgoing.

Procedure:

- 1 sok to access the menu.
- 2 or to Call Log and press to select.
- 4 The display shows the most recent entry at the top of the list
- 5 or to view the list.

Press the **PTT** button to start a Private Call with the current selected alias or ID.

Deleting a Call from a Call List

Procedure:

- 1 to access the menu.
- 2 or to Call Log and press ok to select.
- 4 ♠ or ▼ to the required alias or ID and press ^{■ ok} to select
- 5 or to Delete and press to select.
- 6 Press to select Yes to delete the entry. The display shows positive mini notice.

OR

or to No to return to the previous screen.

When you select a call list and it contains no entries, the display shows List Empty and sounds a low tone if Keypad Tones are turned on (see **Turning Keypad Tones On or Off** on page 84).

Viewing Details from a Call List

Procedure:

- 1 sok to access the menu.

- 4 or ▼ to the required alias or ID and press ^{■ ok} to select
- 5 ♠ or ▼ to View Details and press ® ok to select. Display shows details.

Call Alert Operation

Call Alert paging enables you to alert a specific radio user to call you back when they are able to do so.

This feature is applicable for subscriber aliases or IDs only and is accessible through the menu via Contacts or manual dial.

Receiving and Responding to a Call Alert

When you receive a Call Alert page, you see the notification list listing a Call Alert with the alias or ID of the calling radio on the display.

Procedure:

- 1 You hear a repetitive tone. The yellow LED blinks.
- Press the PTT button while the display still shows the Call Alert in the Notification List to respond with a Private Call. OR

Press (SO) to exit the Notification List. The alert is moved to the Missed Call Log.

See Notification List on page 70 for details about the Notification List.

See Call Log Features on page 41 for details about the Missed Call List.

Making a Call Alert from the Contacts List

Procedure:

- 1 sok to access the menu.
- or to the required subscriber alias or ID and press out to select.
- 4 ♠ or ▼ to Call Alert and press ®oK to select.
- 5 The display shows Call Alert and the subscriber alias or ID, indicating that the Call Alert has been sent.
- 6 The green LED lights up when your radio is sending the Call Alert.
- 7 If the Call Alert acknowledgement is received, the display shows positive mini notice.

ΛR

If the Call Alert acknowledgement is not received, the display shows negative mini notice.

You can also send a Call Alert by manually dialing the subscriber ID (see **Making a Call Alert by Manual Dial** on page 91).

Making a Call Alert with the One Touch Access Button

Procedure:

- 1 Press the programmed **One Touch Access** button to make a Call Alert to the predefined alias or ID.
- The display shows Call Alert and the subscriber alias or ID, indicating that the Call Alert has been sent.
- 3 The green LED lights up when your radio is sending the Call Alert
- 4 If the Call Alert acknowledgement is received, the display shows positive mini notice.

OR

If the Call Alert acknowledgement is not received, the display shows negative mini notice.

Liigiisi

Emergency Operation

An Emergency Alarm is used to indicate a critical situation. You are able to initiate an Emergency at any time on any screen display even when there is activity on the current channel.

Your dealer can set the duration of a button press for the programmed Emergency button, except for long press, which is similar with all other buttons:

- Short press Between 0.05 seconds and 0.75 seconds
- Long press Between 1.00 second and 3.75 seconds

The Emergency button is assigned with the Emergency On/ Off feature. Check with your dealer for the assigned operation of the Emergency button.

If short press the **Emergency** button is assigned to turn on the Emergency mode, then long press the Emergency button is assigned to exit the Emergency mode.

If long press the **Emergency** button is assigned to turn on the Emergency mode, then short press the **Emergency** button is assigned to exit the Emergency mode.

Your radio supports three Emergency Alarms:

- Emergency Alarm
- Emergency Alarm with Call
- Emergency Alarm with Voice to Follow



In addition, each alarm has the following types:

- Regular Radio transmits an alarm signal and shows audio and/or visual indicators.
- Silent Radio transmits an alarm signal without any audio or visual indicators. Radio receives calls without any sound through the radio's speaker, until you press the PTT button to initiate the call.
- **Silent with Voice** Radio transmits an alarm signal without any audio or visual indicators, but allow incoming calls to sound through the radio's speaker.

Only one of the Emergency Alarms above can be assigned to the programmed Emergency button or the Emergency footswitch.

Receiving an Emergency Alarm

Procedure:

The emergency icon appears, a tone sounds, the red LED blinks, and the radio displays the Alarm List if there is more than one alarm listed. The emergency caller aliases are listed.
or to the required alias and press or to view more details. Press again to view your action options.

The emergency icon appears, a tone sounds, the red LED blinks, and the radio displays the emergency caller alias Press ok to view more details. Press ok again to view your action options.

- 2 Press and select Yes to exit the Alarm List.

 To revisit the Alarm List, press to access the menu and select Alarm List.
- Responding to an Emergency Alarm

Procedure:

When receiving an Emergency Alarm:

- 1 In the Alarm List,
 or
 to the required alias.
- If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the PTT button, indicating the channel is free for you to respond.
- 3 Press PTT button to transmit non-emergency voice to the same group that the Emergency Alarm was targeted to. The green LED lights up. Your radio remains in the Emergency mode.
- 4 Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.

OR

- Mait for the PTT Sidetone to finish (if enabled) and speak clearly into the microphone.
- 5 Release the **PTT** button to listen. When the emergency initiating radio responds, the green LED blinks. You see the

- Group Call icon, the group alias or ID, and transmitting radio alias or ID on your display.
- 6 Your radio displays the Alarm List.

Emergency voice can only be transmitted by the emergency initiating radio. All other radios (including the emergency receiving radio) transmit non-emergency voice.

Sending an Emergency Alarm

This feature allows you to send an Emergency Alarm, a non-voice signal, which triggers an alert indication on a group of radios.

Procedure:

- 1 Press the programmed **Emergency On** button or the **Emergency** footswitch.
- The display shows Tx filarm and the destination alias. The green LED lights up and the Emergency icon appears.
 OR
 - The display shows Tx Telegram and the destination alias. The LED lights up solid green and the Emergency icon appears
- When an Emergency Alarm acknowledgment is received, the Emergency tone sounds and the green LED blinks. The display shows Alarm Sent.

OR

If your radio does not receive an Emergency Alarm

Englisr

- acknowledgement, and after all retries have been exhausted, a tone sounds and the display shows Alarm Failed.
- 4 Radio exits the Emergency Alarm mode and returns to the Home screen.

If your radio is set to Silent, it does not display any audio or visual indicators during Emergency mode.

Sending an Emergency Alarm with Call

This feature allows you to send an Emergency Alarm to a group of radios. Upon acknowledgement by a radio within the group, the group of radios can communicate over a programmed Emergency channel.

Procedure:

- 1 Press the programmed **Emergency On** button or the **Emergency** footswitch.
- The display shows Tx filarm and the destination alias. The green LED lights up and the Emergency icon appears.
 OR
 - The display shows Tx Telegram and the destination alias. The LED lights up solid green and the Emergency icon appears.
- When an Emergency Alarm acknowledgment is received, the Emergency tone sounds and the green LED blinks. The display shows Alarm Sent.

- 4 Your radio enters the emergency call mode when the display shows Emergency and the destination group alias.
- 5 Press **PTT** button to make the call. The green LED lights up and the group icon appears on the display.
- 6 Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.

OR

Mait for the PTT Sidetone to finish (if enabled) and speak clearly into the microphone.

- 7 Release the PTT button to listen. When you receive a group call, the display shows the caller alias and group alias.
- 8 When the channel is free for you to respond, a short alert tone sounds (if the Channel Free Indication feature is enabled). Press the PTT button to respond. OR

Once your call ends, press **Emergency Off** button to exit the Emergency mode.

The radio returns to the Home screen.

If your radio is set to Silent, it does not display any audio or visual indicators during Emergency mode, or allow any received calls to sound through the radio's speaker, until you press the **PTT** button to initiate the call.

If your radio is set to Silent with Voice, it does not display any audio or visual indicators during Emergency mode, but allow incoming calls to sound through the radio's speaker. The indicators only appear once you press the **PTT** button to initiate, or respond to, the call.

☐ Sending an Emergency Alarm with Voice to Follow ♠

This feature allows you to send an Emergency Alarm to a group of radios. Your radio's microphone is automatically activated, allowing you to communicate with the group of radios without pressing the **PTT** button.

This activated microphone state is also known as "hot mic".

If your radio has Emergency Cycle Mode enabled, repetitions of hot mic and receiving period are made for a programmed duration.

NOTE: During Emergency Cycle Mode, received calls sound through the radio's speaker.

If you press the **PTT** button during the programmed receiving period, you will hear a prohibit tone, indicating that you should release the **PTT** button. The radio ignores the **PTT** press and remains in Emergency mode.

NOTE: If you press the **PTT** button during hot mic, and continue to press it after the hot mic duration expires,

the radio continues to transmit until you release the **PTT** button.

Procedure:

- Press the programmed Emergency On button or the Emergency footswitch.
- The display shows Tx filarm and the destination alias. The green LED lights up and the Emergency icon appears.
 OR
 - The display shows Tx Telegram and the destination alias. The LED lights up solid green and the Emergency icon appears.
- 3 Once the display shows Flarm Sent, speak clearly into the microphone. When hot mic has been enabled, the radio automatically transmits without a PTT press until the hot mic duration expires.
 - While transmitting, the green LED lights up and the Emergency icon appears.
- 4 The radio automatically stops transmitting when: Once the cycling duration between hot mic and receiving calls expires, if Emergency Cycle Mode is enabled. OR

Once the hot mic duration expires, if Emergency Cycle Mode is disabled.

5 To transmit again, press the PTT button.
OR

Englis

Press the programmed Emergency Off button to exit the Emergency mode.

The radio returns to the Home screen.

If your radio is set to Silent, it does not display any audio or visual indicators during Emergency mode, or allow any received calls to sound through the radio's speaker, until the programmed hot mic transmission period is over, and you press the PTT button.

If your radio is set to Silent with Voice, it does not display any audio or visual indicators during Emergency mode when you are making the call with hot mic, but allow sound through the radio's speaker when the target radio responds after the programmed hot mic transmission period is over. The indicators only appear when you press the PTT button.

NOTE: If the Emergency Alarm request fails, the radio does not retry to send the request, and enters the hot mic state directly.

Reinitiating an Emergency Mode

NOTE: This feature is only applicable to the radio sending the Emergency Alarm.

There are two instances where this can happen:

- You change the channel while the radio is in Emergency mode. This exits the Emergency mode. If Emergency Alarm is enabled on this new channel, the radio reinitiates Emergency.
- You press the programmed Emergency On button during an Emergency initiation/transmission state. This causes the radio to exit this state, and to reinitiate Emergency.

Exiting Emergency Mode

NOTE: This feature is only applicable to the radio sending the Emergency Alarm.

Your radio exits Emergency mode when one of the following occurs:

- Emergency Alarm acknowledgement is received (for Emergency Alarm only), OR
- An Emergency Exit Telegram is received, OR
- All retries to send the alarm have been exhausted, OR
- The Emergency Off button is pressed.

NOTE: If your radio is powered off, it exits the Emergency mode. The radio does not reinitiate the Emergency mode automatically when it is turned on again.

> If you change channels when your radio is in Emergency mode to a channel that has no emergency system configured, No Emergency is shown on your display.

Text Messaging Features <a>(



Your radio is able to receive data, for example a text message, from another radio or an e-mail application.

Sending a Quick Text Message

Your radio supports a maximum of 50 Quick Text messages as programmed by your dealer.

NOTE: While Quick Text messages are programmed, you can edit each message before sending it. Only available with a keypad microphone (see Editing a Quick Reply Message on page 93).

Procedure:

Press the programmed Text Message button and proceed to Step 3.

OR

Follow the procedure below.

- **ok** to access the menu.
- or to Messages and press to select.
- or to Quick Text and press sok to select.
- select.
- or to the required alias or ID and press or to select.

- 6 The display shows transitional mini notice, confirming your message is being sent.
- 7 If the message is sent, a tone sounds and the display shows positive mini notice.

OR

If the message is not sent, a low tone sounds and the display shows negative mini notice.

If the text message fails to send, the radio returns you to the Resend option screen (see Managing Fail-to-Send Text Messages on page 51).

Sending a Quick Text Message with the One Touch Access Button

- Press the programmed One Touch Access button to send a predefined Quick Text message to a predefined alias or ID.
- The display shows transitional mini notice, confirming your message is being sent.
- If the message is sent, a tone sounds and the display shows positive mini notice.

OR

If the message is not sent, a low tone sounds and the display shows negative mini notice.

If the text message fails to send, the radio returns you to the Resend option screen (see Managing Fail-to-Send Text Messages on page 51).

Managing Text Messages in the Drafts Folder

The Drafts folder stores a maximum of ten (10) last saved messages. When the folder is full, the next saved text message automatically replaces the oldest text message in the folder. See *Accessing the Drafts Folder* on page 93 for more information.

NOTE: You can edit a saved text message before sending it.
Only available with a keypad microphone (see *Editing*and Sending a Saved Text Message on page 94).

Long press (5) at any time to return to the Home screen.

Viewing a Saved Text Message

Procedure:

Press the programmed **Text Message** button and proceed to Step 3.

OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 or to Messages and press to select.

50

Deleting a Saved Text Message from Drafts

Procedure:

Press the programmed **Text Message** button and proceed to Step 3.

OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 or to Messages and press to select.
- 3 ▲ or ▼ to Drafts and press ® ok to select.
- 5 Press again while viewing the message.
- 6 ♠ or ▼ to Delete and press (SOK) to delete the text message.

Managing Fail-to-Send Text Messages

You can select one of the following options while at the ${\tt Resend}$ option screen:

- Resend
- Forward

 Edit (Only available with a keypad microphone – see Editing a Text Message on page 95 for more information)

NOTE: If the channel type (i.e. conventional digital or Capacity Plus or Linked Capacity Plus) is not a match, you can only edit and forward a Fail-to-Send message.

Resending a Text Message

Procedure:

OR

- 1 Press to resend the same message to the same subscriber/group alias or ID.
- If the message is sent successfully, a tone sounds and the display shows positive mini notice.

If the message cannot be sent, the display shows negative mini notice.

Forwarding a Text Message

Select Forward to send the message to another subscriber/group alias or ID.

Procedure:

- 1 or to Forward and press to select.

Englisi

- 3 The display shows transitional mini notice, confirming your message is being sent.
- 4 If the message is sent, a tone sounds and the display shows positive mini notice.

OR

If the message is not sent, a low tone sounds and the display shows negative mini notice.

You can also manually select a target radio address (see Forwarding a Text Message by Manual Dial on page 94).

Managing Sent Text Messages

Once a message is sent to another radio, it is saved in Sent Items. The most recent sent text message is always added to the top of the Sent Items list.

The Sent Items folder is capable of storing a maximum of thirty (30) last sent messages. When the folder is full, the next sent text message automatically replaces the oldest text message in the folder.

NOTE: Long press (5) at any time to return to the Home screen.

Viewing a Sent Text Message

Procedure

Press the programmed **Text Message** button and proceed to Step 3.

OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 or to Messages and press to select.
- 3 ♠ or ▼ to Sent Items and press ® ok to select.
- 4 or to the required message and press to select.

 A subject line may be shown if the message is from an e-mail application.

The icon beside each message indicates the status of the message (see **Sent Item Icons** on page 15).

Sending a Sent Text Message

You can select one of the following options while viewing a sent text message:

- Resend
- Forward
- Edit
- Delete

NOTE: If the channel type (i.e. conventional digital or Capacity Plus or Linked Capacity Plus) is not a match, you can only edit, forward, or delete a Sent message.

52

Procedure:

- 1 Press again while viewing the message.
- 3 The display shows transitional mini notice, confirming that the same message is being sent to the same target radio.
- 4 If the message is sent, a tone sounds and the display shows positive mini notice.

OR

If the message is not sent, a low tone sounds and the display shows negative mini notice.

If the text message fails to send, the radio returns you to the Resend option screen. Press to resend the message to the same subscriber/group alias or ID.

NOTE: Changing the volume, and pressing any button, except for ♠ok, ♠, or , returns you to the message.

The radio exits the Resend option screen if you press the **PTT** button to initiate a Private or Group Call, or to respond to a Group Call. It also exits the screen when the radio receives a text or telemetry message, an emergency call or alarm, or a call alert.

The display returns to the Resend option screen if you press the **PTT** button to respond to a Private Call (except if the radio is displaying the Missed Call screen), and at the end of an All Call.

Press or to access the Forward, Edit, or Delete option screen:

- Select Forward to send the selected text message to another target radio (see Forwarding a Text Message on page 51).
 You can also manually select a target radio address using a keypad microphone (see Forwarding a Text Message by Manual Dial on page 94).
- Select Edit to edit the selected text message before sending it (see Editing a Text Message on page 95). Only available with a keypad microphone.
- Select Delete to delete the text message.

NOTE: If you exit the message sending screen while the message is being sent, the radio updates the status of the message in the Sent Items folder without providing any indication in the display or via sound.

If the radio changes mode or powers down before the status of the message in Sent Items is updated, the radio cannot complete any In-Progress messages and automatically marks it with a Send Failed icon.

The radio supports a maximum of five (5) In-Progress messages at one time. During this period, the radio cannot send any new message and automatically marks it with a Send Failed icon.

Englis

54

Deleting All Sent Text Messages from Sent Items

Procedure:

Press the programmed **Text Message** button and proceed to Step 3.

OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 or to Messages and press ok to select.
- 3 ♠ or ▼ to Sent I tems and press ® ok to select.
- 4 or to Delete fill and press ok to select.

OR

or to No and press to return to the previous screen.

When you select Sent Items and it contains no text messages, the display shows List Empty and sounds a low tone if Keypad Tones are turned on (see Turning Keypad Tones On or Off on page 84).

Receiving a Text Message

When your radio receives a message, the display shows the Notification List with the alias or ID of the sender and the message icon.

You can select one of the following options when receiving a text message:

- Read
- Read Later
- Delete

NOTE: The radio exits the Text Message alert screen and sets up a Private or Group Call to the sender of the message if the **PTT** button is pressed when the radio is displaying the alert screen.

Reading a Text Message

Procedure:

- 1 or to Read and press or to select.
- 2 Selected message in the Inbox opens. A subject line may be shown if the message is from an e-mail application.
- 3 Press (5) to return to the Inbox.

OR

Press to reply, forward, or delete the text message.

Press or to access the Read Later or Delete option screen:

- Select Read Later to return to the screen you were on prior to receiving the text message.
- Select Delete to delete the text message.

Managing Received Text Messages

Use the Inbox to manage your text messages. The Inbox is capable of storing a maximum of 30 messages.

Your radio supports the following options for text messages:

- Reply (via Quick Text)
- Forward
- Delete
- Delete All

NOTE: If the channel type (i.e. conventional digital or Capacity Plus or Linked Capacity Plus) is not a match, you can only forward, delete, or delete all Received messages.

Text messages in the Inbox are sorted according to the most recently received.

NOTE: Long press (5) at any time to return to the Home screen.

☐ Viewing a Text Message from the Inbox

Procedure:

- 1 to access the menu.

- Press to select the current message, and press again to reply, forward, or delete that message.
 OR
 - Long press to return to the Home screen.
- Viewing a Telemetry Status Text Message from the Inbox

Procedure:

- 1 sok to access the menu.
- 2 or to Messages and press to select.
- 3 or to Inbox and press or to select.
- 5 The display shows Telemetry: (Status Text Message).

Englist

Long press (5) to return to the Home screen.

You cannot reply to a Telemetry Status text message.

Replying to a Text Message with Quick Text

Procedure:

Press the programmed Text Message button and proceed to Step 3.

OR

Follow the procedure below.

- **™** ok to access the menu.
- or to Messages and press on to select.
- or to Inbox and press to select.
- or to the required message and press ok to select. A subject line may be shown if the message is from an e-mail application.
- Press once more to access the sub-menu.
- or to Reply and press or to select.
- or to Quick Reply and press on to select.
- or to the required message and press to select.
- The display shows transitional mini notice, confirming your message is being sent.

10 If the message is sent successfully, a tone sounds and the display shows positive mini notice.

OR

If the message cannot be sent, the display shows negative mini notice.

If the text message fails to send, the radio returns you to the Resend option screen (see Managing Fail-to-Send Text Messages on page 51).

NOTE: If you are using a keypad microphone, you can also write and send a new message (see Writing and Sending a Text Message on page 91) or modify a Quick Text message before sending it (see Editing a Quick Reply Message on page 93).

Deleting a Text Message from the Inbox

Procedure:

Press the programmed **Text Message** button and proceed to Step 3.

OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 or to Messages and press ok to select.
- 4 or to the required message and press to select. A subject line may be shown if the message is from an e-mail application.
- 5 Press once more to access the sub-menu.
- 6 ▲ or ▼ to Delete and press 🖽 ok to select.
- 8 The display shows positive mini notice.
- 9 The screen returns to the Inbox.

Deleting All Text Messages from the Inbox

Procedure:

Press the programmed **Text Message** button and proceed to Step 3.

OR

Follow the procedure below.

- 1 sok to access the menu.

- 4 ♠ or ▼ to Delete All and press ® ok to select.
- 6 The display shows positive mini notice.

When you select the Inbox and it contains no text messages, the display shows $List\ Empt_{\mathcal{L}}$ and sounds a low tone if Keypad Tones are turned on (see **Turning Keypad Tones On or Off** on page 84).

NOTE: Additional text messaging features are available with a keypad-enabled microphone. Refer to *Text Messaging* on page 91 for more details.

58

Analog Message Encode ®

Your radio is able to send preprogrammed messages from the Message list to a radio alias or to the dispatcher.

☐ Sending MDC Message Encode to Dispatcher

Procedure:

- 1 sok to access the menu.
- 2 or to Message and press ok to select.
- 3 ♠ or ▼ to Quick Text and press ® oK to select.
- The display shows transitional mini notice, confirming your message is being sent.
- 6 If the message is sent, a tone sounds and the display shows positive mini notice.

OR

If the message is not sent, a low tone sounds and the display shows negative mini notice.

Sending 5-Tone Message Encode to Contact

Procedure:

- 1 to access the menu.
- 2 or to Message and press sok to select.
- 3 or ▼ to Quick Text and press ® ok to select.
- 5 or ▼ to the required contact. Press ^{■ 0K} to select.
- 6 The display shows transitional mini notice, confirming your message is being sent.
- 7 If the message is sent, a tone sounds and the display shows positive mini notice.

OR

If the message is not sent, a low tone sounds and the display shows negative mini notice.

Analog Status Update 69

Your radio is able to send preprogrammed messages from the Status List indicating your current activity to a radio contact (for 5-Tone systems) or to the dispatcher (for MDC systems).

The last acknowledged message is kept at the top of the Status List. The other messages are arranged in alphanumeric order.

Sending Status Update to Predefined Contact

Procedure:

- 1 sok to access the menu.
- 2 ♠ or ▼ to Status and press ® ok to select.
- 4 ♠ or ▼ to Set as Default. Press ® ok to send the status update.
- 5 The display shows transitional mini notice, confirming your status update is being sent.
- 6 If the status update is acknowledged, a tone sounds and the display shows positive mini notice. A ✓ appears beside the acknowledged status.

OR

If the status update is not acknowledged, a low tone sounds and the display shows negative mini notice. A \checkmark remains beside the previous status.

For 5-Tone systems, see **Setting Default Contact** on page 37 for details on setting the default contact.

For 5-Tone systems, a **PTT** button press while in the status list sends the selected status update and returns to the Home screen to initiate a voice call.

∇iewing 5-Tone Status Details

Procedure:

- 1 sok to access the menu.
- 2 or to Status and press ok to select.
- 4 ♠ or ▼ to View Details. Press ®oK to select.
- 5 The display shows details of the selected status.

NOTE: If you are using a keypad microphone, you can modify the status details before sending it (see *Editing a Quick Reply Message* on page 93).

■ Privacy

If enabled, this feature helps to prevent eavesdropping by unauthorized users on a channel by the use of a software-based scrambling solution. The signaling and user identification portions of a transmission are not scrambled.

Your radio must have privacy enabled on the channel to send a privacy-enabled transmission, although this is not a necessary requirement for receiving a transmission. While on a privacy-enabled channel, the radio is still able to receive clear (unscrambled) transmissions.

Your radio supports Enhanced Privacy. To unscramble a privacy-enabled call or data transmission, your radio must be programmed to have the same Key Value and Key ID as the transmitting radio.

If your radio receives a scrambled call that is of a different Key Value and Key ID, you will hear nothing at all.

The green LED lights up while the radio is transmitting and double blinks when the radio is receiving an ongoing privacy-enabled transmission.

NOTE: Some radio models/locations may not offer this Privacy feature. Check with your dealer or system administrator for more information.

Procedure:

Press the programmed **Privacy** button to toggle privacy on or off.

OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 or to Utilities and press sok to select.
- 3 ♠ or ▼ to Radio Settings and press ® or to select.
- 4 or to Privacy.
- 5 Press ^{■ oK} to enable Privacy. The display shows ✓ beside Enabled.

OR

Press ^{№ 0K} to disable Privacy. The ✓ disappears from beside Enabled.

If the radio has a privacy type assigned, the secure or unsecure icon appears on the status bar, except when the radio is sending or receiving an Emergency call or alarm.

Multi-Site Controls <a>6

These features are applicable when your current radio channel is part of an IP Site Connect or Linked Capacity Plus configuration.

See **IP Site Connect** on page 9 and **Linked Capacity Plus** on page 10 for more details about these configurations.

Starting an Automatic Site Search

NOTE: The radio **only** scans for a new site if the current signal is weak or when the radio is unable to detect any signal from the current site. If the RSSI value is strong, the radio remains on the current site.

Procedure:

Press the programmed Site Lock On/Off button.

- 1 A tone sounds and the display shows Site Unlocked.
- 2 The yellow LED blinks rapidly when the radio is actively searching for a new site, and turns off once the radio locks on to a site.
- 3 The display shows the channel alias and the site roaming icon appears.

OR

Procedure:

Use the menu.

- 1 sok to access the menu.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 4 ♠ or ▼ to Site Roaming and press ® ok to select.
- 6 The radio returns to the Home screen. The display shows the channel alias and the site roaming icon appears.
- 7 The yellow LED blinks rapidly when the radio is actively searching for a new site, and turns off once the radio locks on to a site.

The radio also performs an automatic site search (site is unlocked) during a **PTT** button press or data transmission if the current channel, a multi-site channel with an attached roam list, is out of range.

Stopping an Automatic Site Search

When the radio is actively searching for a new site:

Englis

Procedure:

Press the programmed Site Lock On/Off button.

- 1 A tone sounds and the display shows Site Locked.
- 2 The LED turns off and the display shows the channel alias.

OR

Procedure:

Use the menu.

- 1 sok to access the menu.
- 2 or to Utilities and press of to select.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 4 ♠ or ▼ to Site Roaming and press ® ok to select.
- 5 📤 or 💌 to Lock Site State.
- 6 Press [™] to lock site. The display shows ✓ beside Enabled. OR

Press ¹⁵⁰ or unlock site. The ✓ disappears from beside Enabled.

- 7 The LED turns off and the radio returns to the Home screen. The display shows the channel alias.
- Starting a Manual Site Search

Procedure:

62 Press the programmed Manual Site Roam button and proceed

to Step 6.

OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 or to Utilities and press to select.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 4 ♠ or ▼ to Site Roaming and press ® to select.
- 5 or to Active Search and press to select.
- 6 A tone sounds and the display shows Finding Site. The green LED blinks.
- 7 If a new site is found, a tone sounds and the LED turns off. The display shows Site (Alias) Found.

OR

If there is no available site within range, a tone sounds and the LED turns off. The display shows \mathtt{Out} of Range.

ΩR

If a new site is within range, but the radio is unable to connect to it, a tone sounds and the LED turns off. The display shows Channel Busy.

3 The radio returns to the Home screen.

English

You can enable or disable any radio in the system. For example, you might want to disable a stolen radio, to prevent the thief from using it, and enable that radio, when it is recovered.

NOTE: Performing Radio Disable and Enable is limited to radios with these functions enabled.

Radio Disable

Procedure:

Use the programmed Radio Disable button.

- Press the programmed Radio Disable button.
- or to the required subscriber alias or ID and press to select.
- The display shows transitional mini notice, indicating the request is in progress. The green LED blinks.
- Wait for acknowledgment.
- If successful, a positive indicator tone sounds and the display shows positive mini notice.

If unsuccessful, a negative indicator tone sounds and the display shows negative mini notice.

OR

Procedure:

Use the menu.

- **ok** to access the menu.
- or to Contacts and press ok to select. The entries are alphabetically sorted.
- or to the required subscriber alias or ID and press **™** to select.
- 4 ♠ or ▼ to Radio Disable and press ® ok to select.
- The display shows transitional mini notice, indicating the request is in progress. The green LED blinks.
- Wait for acknowledgment.
- If successful, a positive indicator tone sounds and the display shows positive mini notice.

OR

If unsuccessful, a negative indicator tone sounds and the display shows negative mini notice.

Do not press (5 A) during the Radio Disable operation as you will not get an acknowledgement message.

You can also access this feature using manual dial (see Radio Disable via Manual Dial on page 96).

Radio Enable

Procedure:

Use the programmed Radio Enable button.

- 1 Press the programmed Radio Enable button.
- 2 or to the required subscriber alias or ID and press solve to select
- 3 The display shows Radio Enable and the subscriber alias or ID. The green LED lights up.
- 4 Wait for acknowledgment.
- If successful, the radio sounds a positive indicator tone and the display shows positive mini notice.

OR

If unsuccessful, the radio sounds a negative indicator tone and the display shows negative mini notice.

OR

Procedure:

Use the menu.

- 1 sok to access the menu.
- 2 or to Contacts and press to select. The entries are alphabetically sorted.

- 3 ♠ or ▼ to the required subscriber alias or ID and press solve to select.
- 4 ♠ or ▼ to Radio Enable and press to select. The green LED blinks.
- 5 The display shows Radio Enable and the subscriber alias or ID. The green LED lights up.
- 6 Wait for acknowledgment.
- 7 If successful, a tone sounds and the display shows Radio Enable Successful.

OR

If not successful, a tone sounds and the display shows Radio Enable Failed.

Do not press (5 ft) during the Radio Enable operation as you will not get an acknowledgement message.

You can also access this feature using manual dial (see **Radio Enable via Manual Dial** on page 96).

Lone Worker

This feature prompts an emergency to be raised if there is no user activity, such as any radio button press or activation of the channel selector, for a predefined time.

Following no user activity for a programmed duration, the radio pre-warns the user via an audio indicator once the inactivity timer expires.

If there is still no acknowledgment by the user before the predefined reminder timer expires, the radio initiates an Emergency Alarm.

Only one of the following Emergency Alarms is assigned to this feature:

- Emergency Alarm
- Emergency Alarm with Call
- Emergency Alarm with Voice to Follow 📵



The radio remains in the emergency state allowing voice messages to proceed until action is taken. See Emergency Operation on page 44 on ways to exit Emergency.

NOTE: This feature is limited to radios with this function enabled. Check with your dealer or system administrator for more information.

NOTE:

Bluetooth

This feature allows you to use your radio with a Bluetoothenabled device (accessory) via a Bluetooth connection. Your radio supports both Motorola and COTS (Commercially available Off-The-Shelf) Bluetooth-enabled devices.

Bluetooth operates within a range of 10 meters line of sight. This is an unobstructed path between your radio and your Bluetooth-enabled device.

It is not recommended that you leave your radio behind and expect your Bluetooth-enabled device to work with a high degree of reliability when they are separated.

At the fringe areas of reception, both voice and tone quality will start to sound "garbled" or "broken". To correct this problem, simply position your radio and Bluetooth-enabled device closer to each other (within the 10-meter defined range) to re-establish clear audio reception. Your radio's Bluetooth function has a maximum power of 2.5 mW (4 dBm) at the 10-meter range.

Your radio can support up to 3 simultaneous Bluetooth connections with Bluetooth-enabled devices of unique types. For example, a headset, a scanner, and a PTT-Only Device (POD). Multiple connections with Bluetooth-enabled devices of the same type are not supported.

Refer to your respective Bluetooth-enabled device's user manual for more details on your Bluetooth-enabled device's full capabilities.

Í	Turning	Bluetooth	On	or	Off
---	----------------	-----------	----	----	-----

Procedure:

- 1 sok to access the menu.

- The display shows 0n and 0 ff. or to 0n and press to enable Bluetooth. ✓ appears beside 0n. The Bluetooth icon appears on the status bar.

The display shows 0n and 0 ff. ♠ or ▼ to 0 ff and press to disable Bluetooth. ✓ appears beside 0 ff.

Finding and Connecting to a Bluetooth Device Procedure:

- 1 Turn on your Bluetooth-enabled device and place it in pairing mode. Refer to respective Bluetooth-enabled device's user manual.
- 2 On your radio, press 50 to access the menu.
- 3 or ▼ to Blue tooth and press ™ to select.
- 4 ♠ or ▼ to Devices and press ® ok to select.
- or to the required device and press to select.

- or to Find Devices to locate available devices.

 or to the required device and press sol to select.
- or to Connect and press to select. Display shows Connecting to <device>.

 Your Bluetooth-enabled device may require additional steps to complete the pairing. Refer to respective Bluetoothenabled device's user manual.
- 7 If successful, the radio display shows ⟨Device⟩ Connected. A tone sounds and ✓ appears beside the connected device. The Bluetooth Connected icon appears on the status bar.

OR

If unsuccessful, the radio display shows Connecting Failed.

Do not turn off your Bluetooth-enabled device or press during the finding and connecting operation as this cancels the operation.

NOTE: If pin code is required, use the same entry method as Step 2 in Accessing the Radio from Password on page 97.

Disconnecting from a Bluetooth Device

Procedure:

- 1 On your radio, press sok to access the menu.
- 2 or to Blue tooth and press of to select.
- 3 ♠ or ▼to Devices and press ® ok to select.
- or to Disconnect and press to select. Display shows Disconnecting from <device>.

 Your Bluetooth-enabled device may require additional steps to disconnect. Refer to respective Bluetooth-enabled device's user manual.
- 6 The radio display shows ⟨Device⟩ Disonnected. A positive indicator tone sounds and ✓ disappears beside the connected device. The Bluetooth Connected icon disappears on the status bar.

Switching Audio Route

You can toggle audio routing between internal radio speaker and external Bluetooth-enabled accessory.

Procedure:

- 1 Press the programmed Bluetooth Audio Switch button .
- 2 A tone sounds and display shows Route Audio to Radio.
 OR

A tone sounds and display shows Route Audio to Bluetooth.

Viewing Device Details

Procedure:

- 1 to access the menu.
- 2 or to Blue tooth and press to select.
- 3 or ▼ to Devices and press ® ok to select.
- 5 or ▼ to View Details and press ® ok to select.

Notification List

Your radio has a Notification List that collects all your "unread" events on the channel, such as unread text messages, telegrams, telemetry messages, missed calls, and call alerts.

The Notification icon appears on the status bar when the Notification List has one or more events.

The list supports a maximum of forty (40) unread events. When it is full, the next event automatically replaces the oldest event.

After the events are read, they are removed from the Notification List.

NOTE: Your radio suspends Scan when the Notification List is displayed. Scanning resumes when your radio exits the Notification List. Press (5 %) to exit the Notification List or wait for the menu timer to expire.

Accessing the Notification List

Procedure:

- 1 sok to access the menu.
- 2 or ▼ to Notification and press ® oK to select.

Long press (5 *) to return to the Home screen.

Utilities

Turning the Radio Tones/Alerts On or Off

You can enable and disable all radio tones and alerts (except for the incoming Emergency alert tone) if needed.

Procedure:

Press the programmed **All Tones/Alerts** button to toggle all tones on or off.

OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 or to Utilities and press to select.
- 3 ♠ or ▼ to Radio Settings and press ® oK to select.
- 4 or ▼ to Tones/Alents and press ® ok to select.
- 5 or to All Tones and press to select.
- 6 Press ^{■ ok} to enable all tones. The display shows ✓ beside Enabled.

OR

Press ^{⊞ ok} to disable all tones. The ✓ disappears from beside Enabled.



You can adjust the Tone Alert Volume Offset level if needed. This feature adjusts the volume of the tones/alerts, allowing it to be higher or lower than the voice volume.

Procedure:

- to access the menu.
- or to Utilities and press ok to select.
- or to Radio Settings and press sok to select.
- or to Tones/Alerts and press ok to select.
- or to Vol. Offset and press or to select.
- or to the required volume value. The radio sounds a feedback tone with each corresponding volume value.
- 7 Press sok to keep the required displayed volume value.

Repeat Step 6 to select another volume value.

(5 क) to exit without changing the current volume offset settings.

Turning the Talk Permit Tone On or Off



You can enable and disable the Talk Permit Tone if needed.

Procedure:

- to access the menu.
- 2 or to Utilities and press sok to select.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- or to Talk Permit and press to select.
- 6 Press ^{■ ok} to enable Talk Permit Tone. The display shows ✓ beside Enabled.

Press ^{■ ok} to disable Talk Permit Tone. The ✓ disappears from beside Enabled.

Setting the Power Level

You can customize your radio's power setting to high or low for each channel.

Settings: High enables communication with radios located at a considerable distance from you. Low enables communication with radios in closer proximity.

Press the programmed Power Level button to toggle transmit power level between high and low.

OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 ♠ or ▼ to Utilities and press ® ok to select.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.

- 6 Screen returns to the previous menu.

Long press (5 ft) to return to the Home screen. The power level icon is visible.

Changing the Display Mode

You can change radio's display mode between Day or Night, as needed. This affects the colour palette of the display.

Procedure:

Press the programmed **Display Mode** button to toggle the display mode settings.

OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 ♠ or ▼ to Utilities and press ® ok to select.

- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 5 The display shows Day Mode and Night Mode. ♠ or ▼ to the required setting and press ★ to enable. ✓ appears beside selected setting.

Adjusting the Display Brightness

You can adjust radio's display brightness as needed.

Procedure:

Press the programmed **Brightness** button and proceed to Step 5.

OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 or to Utilities and press on to select.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 4 ♠ or ▼ to Brightness and press ® ok to select.
- 5 The display shows a progress bar. Decrease display brightness by pressing or increase the display brightness by pressing . Press to confirm your entry.

Turning Horns/Lights On or Off

Your radio is able to notify you of an incoming call via the horns and lights feature. When activated, an incoming call sounds your vehicle's horn and turns on its lights.

This feature needs to be installed through your radio's rear accessory connector by your dealer.

Procedure:

Press the programmed **Horns/Lights** button to toggle horns and lights feature on or off.

OR

Follow the procedure below.

- 1 sok to access the menu.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 5 Press ^{■ ok} to enable Horns/Lights. The display shows ✓ beside Enabled.

OR

Press ^{155 OK} to disable Horns/Lights. The ✓ disappears from beside Enabled

☐ Turning the Public Address System On or Off

You can enable and disable the radio's internal public address (PA) system.

Procedure:

Press the programmed **PA On/Off** button to toggle the feature on or off

☐ Turning the External Public Address System On or Off

You can enable or disable the audio routing between the connected public address (PA) loudspeaker amplifier and the radio's internal public address (PA) system.

Procedure:

Press the programmed **Ext PA On/Off** button to toggle the feature on or off.

Setting the Squelch Level

You can adjust your radio's squelch level to filter out unwanted calls with low signal strength or channels that have a higher than normal background noise.

Settings: Normal is the default. Tight filters out (unwanted) calls and/or background noise. However, calls from remote locations may also be filtered out.

Procedure:

Press the programmed Squelch button to toggle squelch level

Englis

between normal and tight.

OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 ♠ or ▼ to Utilities and press ^{■ oK} to select.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 4 ♠ or to Squelch and press to select.
- 5 The display shows Tight and Normal. ♠ or ▼ to the required setting and press ★ to enable. ✓ appears besides selected setting.
- 6 Screen returns to the previous menu.

Turning the Introduction Screen On or Off

You can enable and disable the Introduction Screen if needed.

Procedure:

- 1 sok to access the menu.
- 2 or to Utilities and press of to select.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 4 ♠ or ▼ to Intro Screen and press ™ to select.
- Press ^{™ oK} to enable Introduction Screen. The display shows ✓ beside Enabled.

OR

Press ¹⁵⁵ ook to disable Introduction Screen. The ✓ disappears from beside Enabled.

Turning the LED Indicators On or Off

You can enable and disable the LED Indicators if needed.

Procedure:

- 1 sok to access the menu.
- 2 or to Utilities and press to select.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 4 ♠ or ▼ to LED Indicator and press ok to select.
- 5 Press ^{■ ok} to enable LED indicator. The display shows ✓ beside Enabled.

OR

Press ^{⊞ ox} to disable LED indicator. The ✓ disappears from beside Enabled.

Setting Dual Knob Operation Preference

Your radio has a dual-purpose **Volume/Channel Knob**. Disabling the dual-purpose option sets the knob to work as a Volume Knob only.

- 1 sok to access the menu.
- 2 ▲ or ▼ to Utilities and press ® ok to select.
- 3 ♠ or ▼ to Radio Settings and press ®ok to select.
- 4 ♠ or ▼ to Dual Knob and press ® ok to select.
- 6 Screen returns to the previous menu.

Language

You can set your radio display to be in your required language.

Procedure:

- 1 sok to access the menu.

☐ Turning the Voice Operating Transmission (VOX) Feature On or Off

This feature allows you to initiate a hands-free voice activated call on a programmed channel. The radio automatically transmits, for a programmed period, whenever the microphone on the VOX-capable accessory detects voice.

NOTE: You may need to turn off the radio and power it up again after detaching the VOX-capable microphone from it to allow the radio to switch to another valid accessory.

Pressing the **PTT** button during radio operation disables VOX. To re-enable VOX, do **one** of the following:

- Turn the radio off and power it on again, OR
- · Change the channel via the Scroll Up/Down buttons, OR
- Change the channel via the Volume/Channel Knob, OR
- Follow the procedure below.

NOTE: Turning this feature on or off is limited to radios with this function enabled. Check with your dealer or system administrator for more information.

Procedure:

Press the programmed **VOX** button to toggle the feature on or off.

OR

Follow the procedure below.

- 1 sok to access the menu.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 5 Press ^{■ ok} to enable VOX. The display shows ✓ beside Enabled.

OR

Press ^{55 OK} to disable VOX. The ✓ disappears from beside Enabled.

If the Talk Permit Tone feature is enabled (see Turning the Talk Permit Tone On or Off on page 71), use a trigger word to initiate the call. Wait for the Talk Permit Tone to finish before speaking clearly into the microphone.

Turning the Option Board Feature(s) On or Off

Option board capabilities within each channel and can be assigned to programmable buttons. Refer to your dealer or system administrator for more information.

Procedure:

Press the programmed **Option Board Feature** button to toggle the feature on or off.

Identifying Cable Type

You can select the type of cable your radio uses.

Procedure:

- 1 sok to access the menu.
- 2 or to Utilities and press to select.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 5 The current cable type is indicated by a ✓.

Voice Announcement

This feature enables the radio to audibly indicate the current Zone or Channel the user has just assigned, or programmable button press. This audio indicator can be customized per customer requirements. This is typically useful when the user is in a difficult condition to read the content shown on the display.

Use the following features to toggle Voice Announcement on or off.

Procedure:

74

Press the programmed **Voice Announcement** button.

OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 or to Utilities and press to select.
- 3 or to Voice Announcement.
- 4 Press ^{™ ok} to enable Voice Announcement. The display shows ✓ beside Enabled.

OR

Press solve to disable Voice Announcement. The ✓ disappears from beside Enabled.

Call Forwarding

You can enable your radio to automatically forward voice calls to another radio.

Procedure:

- 1 sok to access the menu.
- 2 ♠ or ▼ to Utilities and press ^{■ oK} to select.
- 3 ♠ or ▼ to Call Forward.
- 4 Press ^{■ of} to enable Call Forwarding. The display shows ✓ beside Enabled.

OR

Press ^{⊞ oK} to disable Call Forwarding. The ✓ disappears from beside Enabled.

Menu Timer

Set the period of time your radio stays in the menu before it automatically switches to the Home screen.

Procedure:

- 1 sok to access the menu.
- 2 ♠ or ▼ to Utilities and press ® ok to select.
- 3 ♠ or ▼ to Radio Settings and press 🖼 or to select.
- 4 ▲ or ▼ to Menu Timer and press ® ok to select.

Analog Mic AGC

This feature controls the your radio's microphone gain automatically while transmitting on an analog system. It suppresses loud audio or boosts soft audio to a preset value in order to provide a consistent level of audio.

Procedure:

- 1 sok to access the menu.
- 2 or to Utilities and press ok to select.

Englis

- 3 ♠ or ▼ to Radio Settings and press ® to select.
- 4 ♠ or ▼ to Analog Mic AGC.
- 5 Press ^{■ ok} to enable Analog Mic AGC. The display shows ✓ beside Enabled.

OR

Press ^{55 OK} to disable Analog Mic AGC. The ✓ disappears from beside Enabled.

Digital Mic AGC

This feature controls the your radio's microphone gain automatically while transmitting on an digital system. It suppresses loud audio or boosts soft audio to a preset value in order to provide a consistent level of audio.

Procedure:

- 1 sok to access the menu.
- 2 or to Utilities and press of to select.
- 3 lacktriangle or lacktriangle to Radio Settings and press lacktriangle to select.
- 4 ▲ or 🕏 to Digital Mic AGC.
- 5 Press ^{™ ok} to enable Digital Mic AGC. The display shows ✓ beside Enabled.

OR

Press solution of the disable Digital Mic AGC. The ✓ disappears from beside Enabled.

Intelligent Audio

Your radio automatically adjusts its audio volume to overcome current background noise in the environment, inclusive of both stationary and non-stationary noise sources. This feature is a Receive-only feature and does not affect Transmit audio.

NOTE: This feature is not applicable during a Bluetooth session.

Use the following features to toggle Intelligent Audio on or off.

Procedure:

Press the programmed **Intelligent Audio** button to toggle the feature on or off.

OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 or to Utilities and press or to select.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 4 or to Intelligent Audio.
- 5 Press [™] to enable Intelligent Audio. The display shows ✓ beside Enabled.

OR

Press ^{soll} to disable Intelligent Audio. The ✓ disappears from beside Enabled.

See Accessories on page 101 for recommended Bluetooth-enabled audio accessories with in-built Automatic Volume Control for similar performance.

GPS

Global Positioning System (GPS) is a satellite navigation system that determines the radio's precise location.

Procedure:

Press the programmed GPS button to toggle the feature on or

OR

- **™** to access the menu. 1
- or to Utilities and press to select.
- or to Radio Settings and press sok to select.
- or to GPS.
- Press ^{■ ok} to enable GPS. The display shows ✓ beside Enabled.

Press ^{■ oK} to disable GPS. The ✓ disappears from beside Enabled.

See Checking the GPS Information on page 81 for details on retrieving GPS information.

Accessing General Radio Information

Your radio contains information on the following:

- Radio Alias and ID
- Firmware and Codeplug Versions
- GPS Information

NOTE: Press (3) at any time to return to the previous screen or long press (5 a) to return to the Home screen. The radio exits the current screen once the inactivity timer expires.

Checking the Radio Alias and ID



Displays the ID of your radio.

Procedure:

Press the programmed Radio Alias and ID button to check your radio alias and ID. You hear a positive indicator tone.

Follow the procedure below.

- to access the menu.
- or to Utilities and press sok to select.
- or to Radio Info and press to select.
- or to My Number and press or to select.

5 The first line of the display shows the radio alias. The second line of the display shows the radio ID.

You can also press the programmed **Radio Alias and ID** button to return to the previous screen.

Checking the Firmware Version and Codeplug Version

Displays the firmware and codeplug versions on your radio.

Procedure:

- 1 sok to access the menu.
- 3 ▲ or 🕶 to Radio Info and press 🕬 to select.
- 4 ▲ or ▼ to Versions and press ®ok to select.

The display shows the current firmware and codeplug versions.

Checking the GPS Information

Displays the GPS information on your radio, such as values of:

- Latitude
- Longitude
- Altitude
- Direction
- Velocity
- Horizontal Dilution of Precision (HDOP)
- Satellites
- Version

Procedure:

- 1 sok to access the menu.
- 2 ♠ or ▼ to Utilities and press ^{■ oK} to select.
- 4 ♠ or ▼ to GPS Info and press ® ok to select.
- 5 or to the required item and press on to select.
- 6 The display shows the requested GPS information.

See GPS on page 80 for details on GPS.

The following additional features for your radio are available with a keypad-enabled microphone:

Keypad Microphone Features

Using the Keypad	page 83
Additional Advanced Features	page 84
Text Messaging	page 91
Dual Tone Multi Frequency (DTMF)	page 95
Security	page 96
Password Lock Features	page 97
Front Panel Programming (FPP)	page 99

Using the Keypad

You can use the 3 x 4 alphanumeric keypad on the 4-Way Navigation Keypad Microphone (Motorola part number RMN5127_) to access your radio's features. You can use the keypad to enter subscriber aliases or IDs, and text messages. Many characters require that you press a key multiple times. The table below shows the number of times a key needs to be pressed to generate the required character.

		Number of Times Key is Pressed											
Key	1	2	3	4	5	6	7	8	9	10	11	12	13
1,.2	1		,	?	!	@	&	í	%	-	:	*	#
2 ABC	Α	В	С	2									
DEF 3	D	E	F	3									
4 GHI	G	Н	1	4									
(5 JKL)	J	K	L	5									
MN0 6	M	N	0	6									
(7 _{PQRS})	Р	Q	R	S	7								
8 TUV	Т	U	V	8									
wxyz 9	W	Х	Y	Z	9								
0 �	0	NOTE: Press to enter "0" and long press to activate the CAPS lock. Another long press to turn off the CAPS lock.											
**	* or del	NOTE: F	NOTE: Press during text entry to delete the character. Press during numeric entry to enter a "*".										
<u>*</u> #	# or space	NOTE: Press during text entry to insert a space. Press during numeric entry to enter a "#".											

You can enable and disable Keypad Tones if needed.

Procedure:

- 1 sok to access the menu.
- 2 ♠ or ▼ to Utilities and press ® ok to select.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 5 or to Keypad Tones and press ok to select.
- 6 Press ^{∰ ox} to enable keypad tones. The display shows ✓ beside Enabled.

OR

Press ^{sol} to disable keypad tones. The ✓ disappears from beside Enabled.

Additional Advanced Features

Selecting a Zone by Alias Search

Procedure:

- 1 sok to access the menu.
- 2 or to Zone and press to select.
- 3 The current zone is displayed and indicated by a ✓.
- 4 or to the required zone and proceed to Step 7.

Key in the first character of the required zone.

5 A blinking cursor appears.

Use the keypad to type the required zone.

Press ◀ to move one space to the left.

Press to move one space to the right.

Press the *DEL key to delete any unwanted characters.

The first line of the display shows the characters you keyed in. The next lines of the display show the shortlisted search results.

The alias search is case-insensitive. If there are two or more zones with the same name, the radio displays the zone that is listed first in the zone list.

7 Press ^{■ ok} to select.

84

8 The display shows <Zone> Selected momentarily and returns to the selected zone screen.

🗍 Initiating a Radio Check by Manual Dial 🐽



Procedure:

- to access the menu.
- or to Contacts and press ® oK to select.
- or to Manual Dial and press sok to select.
- If there was previously dialed ID, the ID appears along with a blinking cursor. Use the keypad to edit the ID. Press sol to select.

OR

Key in the subscriber alias or ID and press ^{⊞ OK}.

- 5 or to Radio Check and press on to select.
- The display shows transitional mini notice, indicating the request is in progress. The green LED lights up.
- Wait for acknowledgement.
- If successful, a positive indicator tone sounds and the display shows positive mini notice.

OR

If unsuccessful, a negative indicator tone sounds and the display shows negative mini notice.

Radio returns to the subscriber alias or ID screen.

If the (5) button is pressed when the radio is waiting for acknowledgement, a tone sounds, and the radio terminates all retries and exits Radio Check mode.

🗍 Initiating Remote Monitor by Manual Dial 📵



Procedure:

- **™** ok to access the menu.
- or to Contacts and press ® ok to select.
- or to Manual Dial and press sok to select.
- 4 If there was previously dialed ID, the ID appears along with a blinking cursor. Use the keypad to edit the ID. Press sol to select.

Key in the subscriber alias or ID and press ^{⊞ oK}.

- 5 or to Remote Mon. and press to select.
- 6 The display shows transitional mini notice, indicating the request is in progress. The green LED lights up.
- Wait for acknowledgment.
- If successful, a positive indicator tone sounds and the display shows positive mini notice. Your radio starts playing audio from the monitored radio for a programmed duration and display shows Rem. Monitor.

Once the timer expires, the radio sounds an alert tone and the LED turns off.

OR

If unsuccessful, the radio sounds a negative indicator tone the display shows negative mini notice.

Making a Private Call by Manual Dial <a>h



Procedure:

- to access the menu.
- or to Contacts and press sor to select. The entries are alphabetically sorted.
- or to Manual Dial and press to select.
- If there is a previously dialed subscriber ID, the ID appears along with a blinking cursor.

Use the keypad to edit the subscriber ID.

OR

Use the keypad to enter a new subscriber ID.

- Press the PTT button to make the call. The green LED lights up. The display shows the destination alias.
- Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
- Release the PTT button to listen. When the target radio responds, the green LED blinks.

If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the target radio releases the PTT button, indicating the channel is free for you to respond. Press the **PTT** button to respond.

If there is no voice activity for a programmed period of time, the call ends.

- You hear a short tone. The display shows Call Ended.
- Making a Group, Private or All Call with the Programmable Number Key 🙉

The Programmable Number Key feature allows you to make a Group, Private or All Call to a predefined alias or ID easily. This feature can be assigned to all the available number keys on a keypad microphone.

You can **ONLY** have one alias or ID assigned to a number key, but you can have more than one number key associated to an alias or ID.

Procedure:

When you are on the Home screen:

Long press the programmed number key to make a Group, Private or All Call to the predefined alias or ID. If the number key is not associated to an entry, a negative indicator tone sounds.

86

- Press the PTT button to make the call. The green LED lights up. The Group/Private Call icon appears in the top right corner. The first text line shows the caller alias. The second text line displays either the call status for a Private Call or All Call for All Call.
- 3 Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.

OR

- For Group Call only: Wait for the PTT Sidetone to finish (if enabled) and speak clearly into the microphone.
- 4 Release the PTT button to listen. When the target radio responds, the green LED blinks. The display shows the destination alias.
- 5 If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the target radio releases the PTT button, indicating the channel is free for you to respond. Press the PTT button to respond.

OR

If there is no voice activity for a predetermined period of time, the call ends.

6 Radio returns to the screen you were on prior to initiating the call.

For a Private Call, you hear a short tone when the call ends.

See **Assigning an Entry to a Programmable Number Key** on page 36 for details on assigning an entry to a number key on the keypad.

Making a Group, Private, Phone or All Call by Alias Search

You can also use alias or alphanumeric search to retrieve the required subscriber alias.

This feature is only applicable while in Contacts.

Procedure:

- 1 sok to access the menu.
- 2 or to Contacts and press to select. The entries are alphabetically sorted.
- 3 Key in the first character of the required alias.
- 4 A blinking cursor appears.
 Use the keypad to type the required alias.
 - Press ◀ to move one space to the left.
 - Press ▶ to move one space to the right.

Press the *DEL key to delete any unwanted characters.

5 The first line of the display shows the characters you keyed in. The next lines of the display show the shortlisted search results.

The alias search is case-insensitive. If there are two or more aliases with the same name, the radio displays the alias that is listed first in the Contacts list.

Englisi

- 6 Press the **PTT** button to make the call. The green LED lights up. The first line displays the target radio's ID.
- 7 Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone
- 8 Release the PTT button to listen. When the target radio responds, the green LED blinks. The display shows the destination alias.
- 9 If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the target radio releases the PTT button, indicating the channel is free for you to respond. Press the PTT button to respond.

ΩR

If there is no voice activity for a programmed period of time, the call ends.

10 You hear a short tone. The display shows Call Ended.

NOTE: Press button or to exit alias search.

- ☐ Viewing an Entry in the Scan List by Alias Search Procedure:
- 1 sok to access the menu.
- 3 ♠ or ▼ to Scan List and press ® oK to select.
- 4 Key in the first character of the required alias.

5 A blinking cursor appears.

Use the keypad to type the required alias.

Press

to move one space to the left.

Press > to move one space to the right.

Press the *DEL key to delete any unwanted characters.

6 The first line of the display shows the characters you keyed in. The next lines of the display show the shortlisted search results.

The alias search is case-insensitive. If there are two or more entries with the same name, the radio displays the entry that is listed first in the scan list.

- Editing the Scan List by Alias Search
- Adding a New Entry to the Scan List

Procedure:

- 1 sok to access the menu.
- 2 or to Scan and press sok to select.
- 3 ♠ or ▼ to Scan List and press ® ok to select.
- 4 or to Add Member and press ok to select.
- 5 Key in the first character of the required alias.
- A blinking cursor appears.
 Use the keypad to type the required alias.

Englisr

	Press ◀ to move one space to the left.	2	or to Scan and press to select.
	Press to move one space to the right.	3	or to Scan List and press to select.
	Press the *DEL key to delete any unwanted characters.	4	Key in the first character of the required alias.
7	The first line of the display shows the characters you keyed in. The next lines of the display show the shortlisted search results. The alias search is case-insensitive. If there are two or more	5	A blinking cursor appears. Use the keypad to type the required alias. Press to move one space to the left.
	aliases with the same name, the radio displays the alias that is listed first in the list.		Press to move one space to the right. Press the *DEL key to delete any unwanted characters.
8	Press sok to select.	6	The first line of the display shows the characters you keyed
9	or to the required priority level and press to select.		in. The next lines of the display show the shortlisted search results.
10	The display shows positive mini notice, followed immediately by Add Another?.		The alias search is case-insensitive. If there are two or more entries with the same name, the radio displays the entry that is listed first in the scan list.
11	or to Yes and press to select, to add another	7	Press to select.
	entry, and repeat Steps 5 to 9. OR	8	or to Delete and press to select.
	or ▼ to № and press ® to select to save the current list.	9	At Delete Entry?, • or • to Yes and press • to select, to delete the entry. The display shows positive mini
<u>—</u>	Deleting on Entry from the Soon Liet		notice. OR
	Deleting an Entry from the Scan List		or to No and press to select to return to the
Pr	rocedure:		previous screen.
1	to access the menu.	10	Repeat Steps 4 to 9 to delete other entries.
			_

Ó
P
1
2
3
4
5

After deleting all required aliases or IDs, long press to return to the Home screen.

Setting and Editing Priority for an Entry in the Scan List

Procedure:

- 1 solution to access the menu.
- 2 ♠ or ▼ to Scan and press ® ok to select.
- 3 ♠ or ▼ to Scan List and press ® ok to select.
- 4 Key in the first character of the required alias.
- 5 A blinking cursor appears.

Use the keypad to type the required alias.

Press

to move one space to the left.

Press ▶ to move one space to the right.

Press the *DEL key to delete any unwanted characters.

The first line of the display shows the characters you keyed in. The next lines of the display show the shortlisted search results.

The alias search is case-insensitive. If there are two or more entries with the same name, the radio displays the entry that is listed first in the scan list.

- 7 Press work to select.
- 8 or to Edit Priority and press of to select.

- 9 or to the required priority level and press ok to select.
- **10** The display shows positive mini notice before returning to the previous screen.
- 11 The priority icon appears left of the member's name.

There is no priority icon if priority is set to None.

Storing an Alias or ID from a Call List

Procedure:

- 1 sok to access the menu.
- 2 or to Call Log and press ok to select.
- 4 ♠ or ▼ to the required alias or ID and press ^{® ok} to select.
- 6 A blinking cursor appears. If needed, key in the alias for that ID and press [50].
- 7 The display shows positive mini notice.

You can also store an ID without an alias.

English

Making a Call Alert by Manual Dial



 
Procedure:

- to access the menu.
- or to Contacts and press or to select.
- or to Manual Dial and press to select.
- 4 A blinking cursor appears. Enter the subscriber ID you want to send the Call Alert to and press **GON**.
- or ▼ to Call Alert and press ® oK to select.
- 6 The display shows Call Alert and the subscriber alias or ID, indicating that the Call Alert has been sent.
- The green LED lights up when your radio is sending the Call Alert.
- If the Call Alert acknowledgement is received, the display shows positive mini notice.

If the Call Alert acknowledgement is not received, the display shows negative mini notice.

Text Messaging <a>6

maximum of 280 characters.

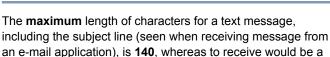

The radio exits the current screen once the inactivity timer expires. Any text message in the writing/editing screen is automatically saved to the Drafts folder.

NOTE: Long press (5) at any time to return to the Home screen.

Writing and Sending a Text Message

Procedure:

Press the programmed **Text Message** button and proceed to Step 3.

OR

Follow the procedure below.

- 1 sok to access the menu.
- or to Messages and press ok to select.
- or to Compose and press or to select.
- 4 Use the keypad to type your message. Press ◀ to move one space to the left.

Press ▶ or the # key to move one space to the right
Press the * key to delete any unwanted characters.

- 5 Press ^{⊞ oK} once message is composed.

OR

or to Manual Dial and press on to select. Key in the subscriber ID and press on.

OR

- to edit the message.
- again to discard the message or save it to the Drafts folder.
- 7 The display shows transitional mini notice, confirming your message is being sent.
- If the message is sent, a tone sounds and the display shows positive mini notice.

OR

If the message is not sent, a low tone sounds and the display shows negative mini notice.

If the text message fails to send, the radio returns you to the Resend option screen (see **Managing Fail-to-Send Text Messages** on page 51 and page 94).

Replying to Text Messages from the Inbox

Procedure

Press the programmed **Text Message** button and proceed to Step 3.

OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 or to Messages and press ok to select.

- 5 Press ^{■ ok} once more to access additional options.

Press ◀ to move one space to the left.

Press ▶ or the # key to move one space to the right. Press the * key to delete any unwanted characters.

- 7 Press once message is composed.
- 8 The display shows transitional mini notice, confirming your message is being sent.

If the message is sent, a tone sounds and the display shows positive mini notice.

OR

If the message is not sent, a low tone sounds and the display shows negative mini notice.

If the text message fails to send, the radio returns you to the Resend option screen (see **Managing Fail-to-Send Text Messages** on page 51 and page 94).

NOTE: If a subject line is present (for messages received from an e-mail application), you cannot edit it.

Editing a Quick Reply Message

Procedure:

Press the programmed **Text Message** button and proceed to Step 3.

OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 or to Messages and press to select.
- 3 or ▼ to Quick Reply and press ® or to select.
- 5 A blinking cursor appears. Use the keypad to edit the message.

Press

to move one space to the left.

Press or the # key to move one space to the right.

Press the * key to delete any unwanted characters.

- 6 Press once message is composed.
- 7 The display shows transitional mini notice, confirming your message is being sent.
- 8 If the message is sent, a tone sounds and the display shows positive mini notice.

OR

If the message is not sent, a low tone sounds and the display shows negative mini notice.

If the text message fails to send, the radio returns you to the Resend option screen (see **Managing Fail-to-Send Text Messages** on page 51 and page 94).

Accessing the Drafts Folder

You can save a text message to send it at a later time.

If a **PTT** button press or a mode change causes the radio to exit the text message writing/editing screen while you are in the process of writing or editing a text message, your current text message is automatically saved to the Drafts folder.

The most recent saved text message is always added to the top of the Drafts list. See *Managing Text Messages in the Drafts Folder* on page 50 for more information.

NOTE: Long press (5) at any time to return to the Home screen.

Editing and Sending a Saved Text Message

Procedure:

- 1 Press ox again while viewing the message.

Use the keypad to edit your message.

Press ◀ to move one space to the left.

Press ▶ or the # key to move one space to the right.

Press the *DEL key to delete any unwanted characters.

Press ★ once message is composed.

3 ♠ or ▼ to the required alias or ID and press ^{■ ok} to select.

OR

or to Manual Dial and press to select. Key in the subscriber alias or ID and press or.

- 4 The display shows transitional mini notice, confirming your message is being sent.
- If the message is sent, a tone sounds and the display shows positive mini notice.

OR

If the message is not sent, a low tone sounds and the display shows negative mini notice.

If the text message fails to send, it is moved to the Sent Items folder and marked with a Send Failed icon.

Managing Fail-to-Send Text Messages

if the message fails to send, the radio returns you to the Resend option screen.

Text Message by Manual Dial

Select Forward to send the message to another subscriber/group alias or ID.

Procedure:

- 1 or to Forward and press on to select.
- 2 or to Manual Dial and press to select. Key in the subscriber ID and press ok.
- 3 The display shows transitional mini notice, confirming your message is being sent.
- 4 If the message is sent, a tone sounds and the display shows positive mini notice.

OR

If the message is not sent, a low tone sounds and the display shows negative mini notice.

English

Editing a Text Message

Select Edit to edit the message before sending it.

NOTE: If a subject line is present (for messages received from an e-mail application), you cannot edit it.

Procedure:

- A blinking cursor appears beside the message. Use the keypad to edit your message.
 - Press ◀ to move one space to the left.
 - Press ▶ or the # key to move one space to the right.

 Press the *DEL key to delete any unwanted characters.
- 3 Press once message is composed.

OR

- or to Manual Dial and press to select. Key in the subscriber ID and press ok.
- 5 The display shows transitional mini notice, confirming your message is being sent.

6 If the message is sent, a tone sounds and the display shows positive mini notice.

OR

If the message is not sent, a low tone sounds and the display shows negative mini notice.

Dual Tone Multi Frequency (DTMF)

The Dual Tone Multi Frequency (DTMF) feature allows the radio to operate in a radio system with an interface to telephone systems.

Procedure:

To initiate a DTMF call.

- 1 Press and hold the **PTT** button.
- 2 Enter the desired number, * or #.

You can turn off the DTMF tone by disabling all radio tones and alerts (see **Turning the Radio Tones/Alerts On or Off** on page 70).

Security <a>6

Radio Disable via Manual Dial

Procedure:

- 1 sok to access the menu.
- 2 or to Contacts and press to select. The entries are alphabetically sorted.
- or to Manual Dial and press to select. Key in the subscriber ID and press or.
- 4 ♠ or ▼ to Radio Disable and press ok to select.
- The display shows transitional mini notice, indicating the request is in progress. The green LED blinks.
- 6 Wait for acknowledgment.
- 7 If successful, a positive indicator tone sounds and the display shows positive mini notice.

OR

If unsuccessful, a negative indicator tone sounds and the display shows negative mini notice.

Do not press sale during the Radio Disable operation as you will not get an acknowledgement message.

Radio Enable via Manual Dial

Procedure:

- 1 sok to access the menu.
- 2 or to Contacts and press to select. The entries are alphabetically sorted.
- 3 ♠ or ▼ to Manual Dial and press ® ok to select. Key in the subscriber ID and press ® ok.
- 4 or ▼ to Radio Enable and press ok to select.
- 5 The display shows Radio Enable and the subscriber alias or ID. The LED lights up solid green.
- 6 Wait for acknowledgment.
- 7 If successful, the radio sounds a positive indicator tone and the display shows positive mini notice.

OR

If unsuccessful, the radio sounds a negative indicator tone and the display shows negative mini notice.

Do not press (5 *) during the Radio Enable operation as you will not get an acknowledgement message.

Password Lock Features

If enabled, this feature allows you to access your radio via password upon powering up. You can use a keypad microphone or **Scroll Up/Down** buttons to enter password.

Accessing the Radio from Password

Procedure:

Power up the radio.

- 1 You hear a continuous tone.
- 2 Enter your current four-digit password via keypad microphone.

The display shows ●●●. Press ^{■ ok} to proceed.

Enter your current four-digit password. Press ♠ or ▼ to edit each digit's numeric value and ⓑ ok to enter the selected digit and move to the next digit. Each digit changes to ●. Press ⓑ ok to confirm your selection.

You hear a positive indicator tone for every digit pressed. Press ◀ to remove the each ● on the display. You hear a negative indicator tone, if you press ◀ when the line is empty, or if you press more than four digits.

3 If the password is correct:

Your radio proceeds to power up. See *Powering Up the Radio* on page 3.

OR

If the password is incorrect:

The display shows Wrong Password. Repeat Step 2.

OR

After the third incorrect password, the display shows Wrong Password and then, shows Radio Locked. A tone sounds and the yellow LED double blinks.

Your radio enters into locked state for 15 minutes, and responds to inputs from **On/Off** button and programmed **Backlight Auto** button only.

NOTE: The radio is unable to receive any call, including emergency calls, in locked state.

The use of **Emergency** footswitch cancels out password input to access the radio.

Unlocking the Radio from Locked State

Procedure:

Wait for 15 minutes. Repeat Steps 1 to 3 in *Accessing the Radio from Password* on page 97.

ΛR

Power up the radio, if you have powered down the radio during locked state:

- 1 A tone sounds and the yellow LED double blinks. The display shows Radio Locked.
- Wait for 15 minutes. Repeat Accessing the Radio from Password on page 97.

Your radio restarts the 15 minutes timer for locked state when you power up.

Turning the Password Lock On or Off

Procedure:

- 1 sok to access the menu.
- 3 or ▼ to Radio Settings and press ® ok to select.
- 4 ♠ or ▼ to Passwd Lock and press ® oK to select.
- Enter a four-digit password.

 See Step 2 in *Accessing the Radio from Password* on page 97.

6 If the password is correct:

Press ^{⊞ ok} to enable Password Lock. The display shows ✓ beside Enabled.

OR

Press ^{□ ox} to disable Password Lock. The ✓ disappears from beside Enabled.

OR

If the password is incorrect:

The display shows Wrong Password and automatically returns to the previous menu.

Changing the Password

Procedure:

- 1 sok to access the menu.
- 2 or to Utilities and press of to select.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 4 or to Passwd Lock and press ok to select.
- 5 Enter your current four-digit password via keypad microphone.

See Step 2 in *Accessing the Radio from Password* on page 97.

6 If the password is correct:

or to Change Pwd and press to select.

OR

If the password is incorrect:

The display shows Wrong Password and automatically returns to the previous menu.

- 7 Enter a new four-digit password via keypad microphone. See Step 2 in *Accessing the Radio from Password* on page 97.
- Re-enter the new four-digit password. See Step 2 in Accessing the Radio from Password on page 97.
- 9 If both of the new password inputs match: The display shows Password Changed. OR

If both of the new password inputs do not match: The display shows Passwords Do Not Match.

10 The screen automatically returns to the previous menu.

■ Front Panel Programming (FPP)

Your radio is able to customize certain feature parameters to enhance the use of your radio.

Entering FPP Mode

Procedure:

- 1 sok to access the menu.
- 2 or ▼ to Utilities and press ™ to select.
- 3 ♠ or ▼ to Program Radio and press ® ok to select.

NOTE: Long press (5 *) at any time to return to the Home screen.

Editing FPP Mode Parameters

Use the following buttons as required while navigating through the feature parameters.

 \triangle , \bigcirc , \bigcirc , \bigcirc – Scroll through options, increase/decrease values, or navigate vertically

Select some option or enter a sub-menu

Short-press to return to previous menu or to exit the selection screen. Long-press to return to Home screen.

Englis

English

Notes

UHF, 403 – 527 MHz, 2dB Gain, Through-Hole Mount, BNC

- UHF, 450 470 MHz, 5dB Gain , Through-Hole Mount, BNC (RAE4154_)
- UHF, 406 420 MHz, 3.5dB Gain , Through-Hole Mount, BNC (RAE4158)
- Combination GPS/VHF 136 144 MHz, 1/4 Wave, Through-Hole Mount, BNC (RAD4219_)
- Combination GPS/VHF 146 150.8 MHz, 1/4 Wave, Through-Hole Mount, BNC (RAD4220_)
- Combination GPS/VHF 150.8 162 MHz, 1/4 Wave, Through-Hole Mount, BNC (RAD4221_)
- Combination GPS/VHF 162 174 MHz, 1/4 Wave, Through-Hole Mount, BNC (RAD4222)
- Combination GPS/UHF 403 527 MHz, 2dB Gain, Through-Hole Mount, BNC (HAE6017_)
- Combination GPS/UHF 403 430 MHz, 1/4 Wave, Through-Hole Mount, BNC (PMAE4035_)
- Combination GPS/UHF 406 420 MHz, 3.5dB Gain , Through-Hole Mount, BNC (PMAE4036_)

Accessories

Your radio is compatible with the accessories listed in this chapter. Contact your dealer for details.

Antennas page 101
Audio page 102
Cables page 102
Desktop Accessories page 103
Mounting Kitspage 103
Speakers
Miscellaneous Accessories page 103

∣ Antennas

- VHF, 136 144 MHz, 1/4 Wave, Through-Hole Mount, BNC (RAD4198_)
- VHF, 146 150.8 MHz, 1/4 Wave, Through-Hole Mount, BNC (RAD4199_)
- VHF, 150.8 162 MHz, 1/4 Wave, Through-Hole Mount, BNC (RAD4200_)
- VHF, 162 174 MHz, 1/4 Wave, Through-Hole Mount, BNC (RAD4201_)

10

102

- Combination GPS/UHF 450 470 MHz, 1/4 Wave, Through-Hole Mount, BNC (PMAE4037_)
- Combination GPS/UHF 450 470 MHz, 5dB Gain , Through-Hole Mount, BNC (PMAE4038_)
- Fixed Mount GPS Active Antenna (PMAN4000)
- Window Mount GPS Active Antenna (PMAN4001)
- Magnetic Mount GPS Active Antenna (PMAN4002)

Audio

- Telephone Style Handset (HMN4098_)
- Desktop Microphone (RMN5050)
- Compact Microphone (RMN5052)
- IMPRES 4-Way Navigation Keypad Microphone (RMN5127)
- Heavy Duty Microphone with Enhanced Audio (RMN5053_)
- Visor Microphone with Enhanced Audio (RMN5054)
- Operations Critical Wireless earpiece, 12" Cable (NNTN8125_)
- Operations Critical Wireless earpiece, 9.5" Cable (NNTN8126)
- Operations Critical Wireless Push-to-Talk POD (NNTN8127_)
- HK200 Bluetooth Headset with US Plug (89409N)

- HK200 Bluetooth Headset with UK Plug (ASMHK200VP-GB2A)
- HK200 Bluetooth Headset with Euro Plug (ASMHK200-GB3A)
- HK200 Bluetooth Headset with Korea Plug (ASMHK200-KR2A)
- HK200 Bluetooth Headset with China Plug (ASMHK200-CN2A)
- HK200 Bluetooth Headset with Australia Plug (ASMHK200-AU2A)

Cables

- Power Cable to Battery, 10-foot (3-meter) Cable, 15 amp (1 – 25 Watt) (HKN4137_)
- Power Cable to Battery, 10-foot (3-meter) Cable, 20 amp (1 – 45 Watt) (HKN4191)
- Power Cable to Battery, 20-foot (6-meter) Cable, 20 amp (1 – 45 Watt) (HKN4192_)
- Mobile and Repeater Rear Accessory Connector Universal Cable (PMKN4018_)
- Ignition Sense Cable (RKN4136)
- Mobile Mic Extension Cable, 10 feet (PMKN4033_)
- Mobile Mic Extension Cable, 20 feet (PMKN4034_)

English

Desktop Accessories

- Desktop Tray without Speaker (GLN7318_)
- Desktop Tray with Speaker (RSN4005_)
- Mobile Mini-U Antenna Adapter, 8-foot (2.4-meter) Cable (HKN9088_)
- US Line Cord (3060665A04)
- Switchmode Power Supply 1–25 Watt Models (GPN6145)
- Radio Power Cable for GPN6145_ (GKN6266_)
- Power Supply and Cable (HPN4007_)
- Hardware Kit for Rear Accessory Connector (PMLN5072_)

Mounting Kits

- In Dash (DIN) Mounting Kit (RLN6465_)
- Low Profile Trunnion Kit (RLN6466_)
- High Profile Trunnion Kit (RLN6467_)
- Key Lock Trunnion Kit (RLN6468_)

Speakers

- 13-Watt External Speaker (RSN4002_)
- 7.5-Watt External Speaker (RSN4003_)
- 5-Watt External Speaker (RSN4004_)

Miscellaneous Accessories

- PL259/Mini-U Antenna Adapter, 8-foot (2.4-meter) Cable (HKN9557_)
- Microphone Hang Up Clip (All Microphones) (HLN9073_)
- Universal Microphone Hang Up Clip (All Microphones) (HLN9414_)
- Push Button PTT (RLN5926_)
- Emergency Footswitch (RLN5929_)



Motorola Solutions Malaysia Sdn Bhd (Co. No. 455657-H) Plot 2 Bayan Lepas Technoplex Industrial Park Mukim 12 S.W.D 11900 Penang, Malaysia

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners. © 2011, 2012 Motorola Solutions, Inc. All rights reserved. March 2012.

www.motorolasolutions.com/mototrbo





68012003089-B