



# MOTOTRBOTM XPRTM 5550 COLOR DISPLAY MOBILE USER GUIDE



# **Declaration of Conformity**

This declaration is applicable to your radio only if your radio is labeled with the FCC logo shown below.

#### **DECLARATION OF CONFORMITY**

Per FCC CFR 47 Part 2 Section 2.1077(a)



Responsible Party Name: Motorola Solutions, Inc.

Address: 1303 East Algonquin Road, Schaumburg, IL 60196-1078, U.S.A. Phone Number: 1-800-927-2744

Hereby declares that the product: Model Name: XPR 5550

conforms to the following regulations:

FCC Part 15, subpart B, section 15.107(a), 15.107(d) and section 15.109(a)

#### Class B Digital Device

As a personal computer peripheral, this device complies with Part 15 of the FCC Rules. This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# **Contents**

This User Guide contains all the information you need to use the MOTOTRBO XPR Series Digital Mobile Radios.

Declaration of Conformity	. i
Important Safety Information	
Software Version	ix
Computer Software Copyrights	. x
Getting Started	1
Identifying Radio Controls  Radio Controls  Programmable Buttons  Assignable Radio Functions  Assignable Settings or Utility Functions  Accessing the Programmed Functions  Push-To-Talk (PTT) Button	.4

Switching Between Conventional Analog and Digita Mode Using the Volume/Channel Knob IP Site Connect Capacity Plus Linked Capacity Plus	. 6
Identifying Status Indicators  Display Icons Call Icons Advanced Menu Icons Mini Notice Icons Sent Item Icons Bluetooth Device Icons LED Indicators Indicator Tones Audio Tones	1; 1; 1; 1; 1; 1; 1;
Receiving and Making Calls  Selecting a Zone Selecting a Channel Receiving and Responding to a Radio Call Receiving and Responding to a Group Call Receiving and Responding to a Private Call Receiving an All Call Receiving and Responding to a Selective Call Making a Radio Call	1: 1: 1: 1: 1: 2: 2:

Making a Group Call	Vote Scan	34
Making a Private Call	Contacts Settings	34
Making an All Call	Making a Group Call from Contacts	35
Making a Selective Call	Making a Private Call from Contacts	36
Stopping a Radio Call	Assigning an Entry to a Programmable	
Talkaround	Number Key	
Permanent Monitor	Removing the Association between Entry and	
Advanced Features       27         Radio Check       27         Sending a Radio Check       27	Programmable Number Key Setting Default Contact Call Indicator Settings	38 38
Remote Monitor	Activating or Deactivating Call Ringers for Ca	
Initiating Remote Monitor    28      Stopping Remote Monitor    29	Activating or Deactivating Call Ringers for Pri	ivate
Scan Lists	Activating or Deactivating Call Ringers for Se Call	elective 39 ext
Deleting an Entry from the Scan List 31 Setting and Editing Priority for an Entry in the Scan List	Activating or Deactivating Call Ringers for Te Status with Text	elemetry
Scan	Assigning Ring Styles	
Starting and Stopping Scan	Escalating Alarm Tone Volume	
	Call Log Features	
Responding to a Transmission During a Scan 33	Viewing Recent Calls	
Deleting a Nuisance Channel	Deleting a Call from a Call List	42
Restoring a Nuisance Channel	Call Alert Operation	43

Receiving and Responding to a Call Alert 43	Deleting All Sent Text Messages from Sent Items
Making a Call Alert from the Contacts List 43	
Making a Call Alert with the One Touch Access Button	Receiving a Text Message55
	Reading a Text Message
Emergency Operation	Managing Received Text Messages55
Receiving an Emergency Alarm45	Viewing a Text Message from the Inbox56
Responding to an Emergency Alarm 45	Viewing a Telemetry Status Text Message from the
Sending an Emergency Alarm46	Inbox
Sending an Emergency Alarm with Call46	Replying to a Text Message with Quick Text 56
Sending an Emergency Alarm with Voice to Follow	Deleting a Text Message from the Inbox57
47	Deleting All Text Messages from the Inbox58
Reinitiating an Emergency Mode	Analog Message Encode
Exiting Emergency Mode	Sending MDC Message Encode to Dispatcher 58
Text Messaging Features	Analog Status Update
Sending a Quick Text Message 50	Sending Status Update to Predefined Contact 59
Sending a Quick Text Message with the One Touch	Privacy59
Access Button	conventional Multi-Site Controls60
Managing Text Messages in the Drafts Folder 51	Starting an Automatic Site Search 60
Viewing a Saved Text Message	Stopping an Automatic Site Search 61
Deleting a Saved Text Message from Drafts 51	Starting a Manual Site Search 61
Managing Fail-to-Send Text Messages 51	Security62
Resending a Text Message	Radio Disable62
Forwarding a Text Message52	Radio Enable63
Managing Sent Text Messages52	Lone Worker
Viewing a Sent Text Message52	Bluetooth
Sending a Sent Text Message53	Turning Bluetooth On or Off 65

Finding and Connecting to a Bluetooth Device 65	Voice Announcement
Disconnecting from a Bluetooth Device 66	Call Forwarding
Switching Audio Route	Menu Timer
Viewing Device Details 67	Analog Mic AGC
Notification List 67	Digital Mic AGC
Accessing the Notification List 67	Intelligent Audio
Utilities	GPS
Turning the Radio Tones/Alerts On or Off 68	Accessing General Radio Information 77
Setting the Tone Alert Volume Offset Level 68	Checking the Radio Alias and ID
Turning the Talk Permit Tone On or Off 68	Checking the Firmware Version and Codeplug
Setting the Power Level	Version
Changing the Display Mode69	Checking the GPS Information 78
Adjusting the Display Brightness 70	Keypad Microphone Features
Turning Horns/Lights On or Off 70	Using the Keypad
Turning the Public Address System On or Off 71	Turning Keypad Tones On or Off
Turning the External Public Address System On	Additional Advanced Features 81
or Off	Selecting a Zone by Alias Search 81
Setting the Squelch Level	Initiating a Radio Check by Manual Dial 82
Turning the Introduction Screen On or Off 71	Initiating Remote Monitor by Manual Dial 82
Turning the LED Indicators On or Off 72	Making a Private Call by Manual Dial 83
Setting Dual Knob Operation Preference 72	Making a Group, Private or All Call with the
Language 72	Programmable Number Key 83
Turning the Voice Operating Transmission (VOX)	Making a Group, Private, Phone or All Call by Alias
Feature On or Off	Search 84
Turning the Option Board Feature(s) On or Off . 73	Viewing an Entry in the Scan List by Alias Search 85
Identifying Cable Type	

Editing the Scan List by Alias Search85
Adding a New Entry to the Scan List85
Deleting an Entry from the Scan List86
Setting and Editing Priority for an Entry in the Scan
List
Storing an Alias or ID from a Call List87
Making a Call Alert by Manual Dial88
Text Messaging88
Writing and Sending a Text Message88
Replying to Text Messages from the Inbox89
Editing a Quick Reply Message 90
Accessing the Drafts Folder
Editing and Sending a Saved Text Message91
Managing Fail-to-Send Text Messages 91
Forwarding a Text Message by Manual Dial91
Editing a Text Message92
Dual Tone Multi Frequency (DTMF)92
Security93
Radio Disable via Manual Dial
Radio Enable via Manual Dial93
Password Lock Features94
Accessing the Radio from Password 94
Unlocking the Radio from Locked State95
Turning the Password Lock On or Off 95
Changing the Password
Front Panel Configuration (FPC)96

Entering FPC Mode
Editing FPC Mode Parameters96
Accessories97
Antennas
Audio
Cables
Desktop Accessories99
Mounting Kits99
Speakers
Miscellaneous Accessories
Appendix: Maritime Radio Use in the VHF Frequency
Appendix: Maritime Radio Use in the VHF Frequency Range100
• • • • • • • • • • • • • • • • • • • •
Range100
Range
Range
Range100Special Channel Assignments100Emergency Channel100Non-Commercial Call Channel100
Range100Special Channel Assignments100Emergency Channel100Non-Commercial Call Channel100Operating Frequency Requirements101

**Notes** 

viii

# **Important Safety Information**

# **Product Safety and RF Exposure Compliance**



Before using this product, read the operating instructions for safe usage contained in the Product Safety and RF Exposure booklet enclosed with your radio.

#### ATTENTION!

This radio is restricted to occupational use only to satisfy FCC RF energy exposure requirements.

Before using this product, read the RF energy awareness information and operating instructions in the Regulatory Compliance and Product Safety section of your Quick Reference Guide enclosed with your radio (Motorola Publication part number 68009508001) to ensure compliance with RF energy exposure limits.

For a list of Motorola-approved antennas and other accessories, visit the following website:

http://www.motorolasolutions.com/governmentandenterprise

Any modification to this device, not expressly authorized by Motorola, may void the user's authority to operate this device. Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

# **Software Version**

All the features described in the following sections are supported by the radio's software version **R02.04.00**.

See *Checking the Firmware Version and Codeplug Version* on page 76 to determine your radio's software version.

Please check with your dealer or system administrator for more details of all the features supported.

# **Computer Software Copyrights**

The Motorola products described in this manual may include copyrighted Motorola computer programs stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted computer programs including, but not limited to, the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Motorola computer programs contained in the Motorola products described in this manual may not be copied, reproduced, modified, reverse-engineered, or distributed in any manner without the express written permission of Motorola. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Motorola, except for the normal non-exclusive license to use that arises by operation of law in the sale of a product.

The AMBE+2<sup>TM</sup> voice coding Technology embodied in this product is protected by intellectual property rights including patent rights, copyrights and trade secrets of Digital Voice Systems, Inc.

This voice coding Technology is licensed solely for use within this Communications Equipment. The user of this Technology is explicitly prohibited from attempting to decompile, reverse engineer, or disassemble the Object Code, or in any other way convert the Object Code into a human-readable form.

U.S. Pat. Nos. #5,870,405, #5,826,222, #5,754,974, #5,701,390, #5,715,365, #5,649,050, #5,630,011, #5,581,656, #5,517,511, #5,491,772, #5,247,579, #5,226,084 and #5,195,166.

# **Getting Started**

Take a moment to review the following:	
How to Use This User Guide	page 1
What Your Dealer/System Administrator	
Can Tell You	page 1
Powering Up the Radio	page 2
Adjusting the Volume	nage 2

# How to Use This User Guide

This User Guide covers the basic operation of the MOTOTRBO Mobiles.

However, your dealer or system administrator may have customized your radio for your specific needs. Check with your dealer or system administrator for more information.

Throughout this publication, the icons below are used to indicate features supported in either the conventional Analog mode or conventional Digital mode:



Indicates a conventional **Analog Mode-Only** feature.



Indicates a conventional **Digital Mode-Only** feature.

For features that are available in **both** Analog and Digital modes, **no** icon is shown.

For features that are available in a conventional multi-site mode, see *IP Site Connect* on page 8 for more information.

Selected features are available in the single-site trunking mode, Capacity Plus. See *Capacity Plus* on page 9 for more information.

Selected features are **also** available in the multi-site trunking mode, Linked Capacity Plus. See *Linked Capacity Plus* on page 9 for more information.

# What Your Dealer/System Administrator Can Tell You

You can consult your dealer or system administrator about the following:


- Is your radio programmed with any preset conventional channels?
- Which buttons have been programmed to access other features?
- What optional accessories may suit your needs?
- What are the best radio usage practices for effective communication?
- What maintenance procedures will help promote longer radio life?

# Powering Up the Radio

Press the **On/Off Button** briefly. You see
MOTOTRBO (TM) on the
radio's display
momentarily, followed
by a welcome message
or welcome image.

The green LED lights up and the Home screen lights up.

A brief tone sounds, indicating that the power up test is successful.

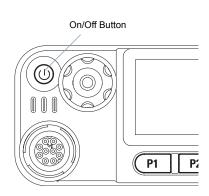

**NOTE:** There is no power up tone if the radio tones/alerts function is disabled (see *Turning the Radio Tones/Alerts On or Off* on page 68).


If your radio does not power up, contact your dealer.

To turn off the radio, press and hold the On/Off Button until you see Powering Down on the radio's display.

**NOTE:** Your radio may take up to 7 seconds to completely turn off.

# Adjusting the Volume

To increase the volume, turn the **Volume/Channel Knob** clockwise.

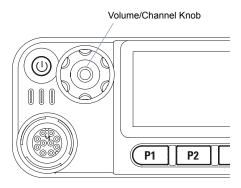

To decrease the volume, turn this knob counterclockwise.

**NOTE:** Your radio can be programmed to have a minimum volume offset where the volume level cannot be turned past the programmed minimum volume. Check with your dealer or system administrator for more information.


# **Identifying Radio Controls**

Take a moment to review the following:

9	
Radio Controlspage	: 3
Programmable Buttons page	: 4
Accessing the Programmed Functions page	: 6
Push-To-Talk (PTT) Button page	: 7
Using the Volume/Channel Knob page	8
Switching Between Conventional Analog and	
Digital Modepage	7
IP Site Connect page	: 8
Capacity Plus page	9
Linked Capacity Pluspage	9

#### Radio Controls

- On/Off Button
- Volume/Channel Knob
- 3 Display
- OK/Menu Button
- Scroll Up/Down

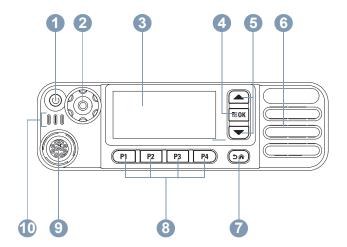

- Speaker
- Return/Home Button
- 8 Front Programmable Buttons
- 9 Accessory Connector
- 1 LED Indicators

# Programmable Buttons

Your dealer can program the programmable buttons as shortcuts to **radio functions** or up to a maximum of six (6) **preset channels/groups** depending on the duration of a button press:

- Short press Pressing and releasing rapidly.
- Long press Pressing and holding for the programmed duration.
- Hold down Keeping the button pressed.

NOTE: The programmed duration of a button press is applicable for all assignable radio/utility functions or settings. See *Emergency Operation* on page 44 for more information on the programmed duration of the *Emergency* button.

# Assignable Radio Functions

**Bluetooth® Audio Switch** – Toggles audio routing between internal radio speaker and external Bluetooth-enabled accessory.

Contacts - Provides direct access to the contacts list.

**Call Alert** – Provides direct access to the contacts list for you to select a contact to whom a Call Alert can be sent

**Call Forwarding** – Toggles Call Forwarding on or off.

Call Log - Selects the call log list.

**Voice Announcement for Channel** – Plays zone and channel announcement voice messages for the current channel. This function is unavailable when Voice Announcement is disabled.

**Emergency** – Depending on the programming, initiates or cancels an Emergency alarm or call.

**Ext PA On/Off** – Toggles the audio routing between the connected public address (PA) loudspeaker amplifier and the radio's internal public address (PA) system.

Intelligent Audio On/Off – Toggles Intelligent Audio on or off.

**Manual Dial** — Initiates a call by keying in any subscriber ID.

**Manual Site Roam**\*‡ **6** – Starts the manual site search.

**Mic AGC On/Off** – Toggles the internal microphone automatic gain control (AGC) on or off. Not applicable during a Bluetooth session.

**Monitor** – Monitors a selected channel for activity.

**Nuisance Channel Delete\*** Temporarily removes an unwanted channel, except for the Selected Channel, from the scan list. The Selected Channel refers to the user's selected zone/channel combination from which scan is initiated.

\* Not applicable in Capacity Plus <sup>‡</sup> Not applicable in Linked Capacity Plus One Touch Access — Directly initiates a predefined Private or Group Call, a Call Alert or a Quick Text message.

**Option Board Feature** – Toggles option board feature(s) on or off for option board-enabled channels.

**PA** On/Off – Toggles the radio's internal public address (PA) system on or off.

**Permanent Monitor**\*<sup>‡</sup> – Monitors a selected channel for all radio traffic until function is disabled.

**Privacy** — Toggles privacy on or off.

Radio Alias and ID - Provides radio alias and ID.

Radio Check 📵 – Determines if a radio is active in a system.

**Radio Enable** — Allows a target radio to be remotely enabled.

Radio Disable . — Allows a target radio to be remotely disabled.

**Remote Monitor** \_\_\_\_\_ - Turns on the microphone of a target radio without it giving any indicators.

**Repeater/Talkaround\*** – Toggles between using a repeater and communicating directly with another radio.

Scan\*‡ - Toggles scan on or off.

**Site Lock On/Off\*** — Toggles the automatic site roam on or off.

**Status** – Selects the status list menu.

**Telemetry Control** — Controls the Output Pin on a local or remote radio.

**Text Message** 📵 – Selects the text message menu.

**Transmit Interrupt Remote Dekey** — Stops the transmission of a remote monitored radio without giving any indicators, or an ongoing interruptible call to free the channel.

**Voice Announcement On/Off** – Toggles Voice Announcement on or off.

**Voice Operating Transmission (VOX)** – Toggles VOX on or off.

**Zone Toggle** – Allows radio to switch between zones.

# Assignable Settings or Utility Functions

All Tones/Alerts – Toggles all tones and alerts on or off.

**Backlight** – Adjusts the brightness level.

**Channel Up/Down** – Depending on the programming, changes channel to previous or next channel.

**Display Mode** – Toggles the day/night display mode on or off.

**Power Level** – Toggles transmit power level between high and low.

**Squelch** — Toggles squelch level between tight and normal.

# Accessing the Programmed Functions

You can access various radio functions through one of the following ways:

A short or long press of the relevant programmable buttons.

#### OR

- Use the Menu Navigation Buttons as follows:
- 1 To access the menu, press the solution. Press the appropriate **Scroll Up/Down** button (♠ or ♥) to access the menu functions.
- 2 To select a function or enter a sub-menu, press the button.
- 3 To go back one menu level, or to return to the previous screen, press the (5.8) button. Long press the (5.8) button to return to the Home screen.

The Menu Navigation Buttons are also available on a keypad microphone (see **Using the Keypad** on page 80).

**NOTE:** Your radio automatically exits the menu after a period of inactivity and returns to your Home screen.

# Push-To-Talk (PTT) Button

The **PTT** button on the side of the microphone serves two basic purposes:

 While a call is in progress, the PTT button allows the radio to transmit to other radios in the call.

Press and hold down **PTT** button to talk. Release the **PTT** button to listen.



The microphone is activated when the PTT button is pressed.

 While a call is not in progress, the PTT button is used to make a new call (see Making a Radio Call on page 22).

 
If the Talk Permit Tone (see Turning the Talk Permit Tone On or Off on page 68) or the PTT Sidetone (in) is enabled, wait until the short alert tone ends before talking.

- During a call, if the Channel Free Indication feature is enabled on your radio (programmed by your dealer), you hear a short alert tone the moment the target radio (the radio that is receiving your call) releases the **PTT** button, indicating the channel is free for you to respond.
- You will also hear a continuous talk prohibit tone, if your call is interrupted, indicating that you should release the

PTT button, for example when the radio receives an Emergency Call.

# Switching Between Conventional Analog and Digital Mode

Each channel in your radio can be configured as a conventional analog or conventional digital channel



To switch between an analog or a digital channel, use the

- Scroll Up/Down buttons, or
- Volume/Channel Knob. or
- programmed Channel Up or Channel Down buttons

When switching from digital to analog mode, certain features are unavailable. Icons for the digital features (such as Messages) reflect this change by appearing 'grayed out'. Disabled features are hidden in the menu.

Your radio also has features available in both analog and digital mode. However, the minor differences in the way each feature works does **NOT** affect the performance of your radio.

**NOTE:** Your radio also switches between digital and analog modes during a dual mode scan (see *Scan* on page 32).

To use the **Scroll Up/Down** buttons, while in the Home Screen of the required Zone, press or to select the required channel.

To use the programmed Channel Up or Channel Down buttons, while in the Home Screen of the required Zone, press Channel Up or Channel Down to select the required channel.

# **Using the Volume/Channel Knob**

The Volume/Channel Knob can be programmed as dual purpose for both volume and channel or as a volume-only control.

To adjust volume, see **Adjusting the Volume** on page 2.

To change channels, push and hold the knob until channel selection screen is displayed, then turn the knob to the required channel.

To exit channel selection state, do any of the following.

- Push the Volume/Channel Knob again
- Press <sup>⊞ ok</sup>
- Press (5)
- Wait for the menu timer to expire

# IP Site Connect (a)



This feature allows your radio to extend conventional communication beyond the reach of a single site, by connecting to different available sites which are connected via an Internet Protocol (IP) network.

When the radio moves out of range from one site and into the range of another, it connects to the new site's repeater to send or receive calls/data transmissions. Depending on your settings. this is done automatically or manually.

If the radio is set to do this automatically, it scans through all available sites when the signal from the current site is weak or when the radio is unable to detect any signal from the current site. It then locks on to the repeater with the strongest Received Signal Strength Indicator (RSSI) value.

In a manual site search, the radio searches for the next site in the roam list that is currently in range (but which may not have the strongest signal) and locks on to it.

NOTE: Each channel can only have either Scan or Roam enabled, not both at the same time.

Channels with this feature enabled can be added to a particular roam list. The radio searches the channel(s) in the roam list during the automatic roam operation to locate the best site.

A roam list supports a maximum of 16 channels (including the Selected Channel).

NOTE: You cannot manually add or delete an entry to the roam list. Check with your dealer or system administrator for more information.

# Capacity Plus (n)



Capacity Plus is a single-site trunking configuration of the MOTOTRBO radio system, which uses a pool of channels to support hundreds of users and up to 254 Groups. This feature allows your radio to efficiently utilize the available number of programmed channels while in Repeater Mode.

Icons of features not applicable to Capacity Plus are not available in the menu. You hear a negative indicator tone if you try to access a feature not applicable to Capacity Plus via a programmable button press.

Your radio also has features that are available in conventional digital mode, IP Site Connect, Capacity Plus and Linked Capacity Plus. However, the minor differences in the way each feature works does **NOT** affect the performance of your radio.

Check with your dealer or system administrator for more information on this configuration.

# Linked Capacity Plus (n)



Linked Capacity Plus is a multi-site multi-channel trunking configuration of the MOTOTRBO radio system, combining the best of both Capacity Plus and IP Site Connect configurations.

Linked Capacity Plus allows your radio to extend trunking communication beyond the reach of a single site, by connecting to different available sites which are connected via an Internet Protocol (IP) network. It also provides an increase in capacity by efficiently utilizing the combined available number of programmed channels supported by each of the available sites.

When the radio moves out of range from one site and into the range of another, it connects to the new site's repeater to send or receive calls/data transmissions. Depending on your settings, this is done automatically or manually.

If the radio is set to do this automatically, it scans through all available sites when the signal from the current site is weak or when the radio is unable to detect any signal from the current site. It then locks on to the repeater with the strongest Received Signal Strength Indicator (RSSI) value.

In a manual site search, the radio searches for the next site in the roam list that is currently in range (but which may not have the strongest signal) and locks on to it.

Any channel with Linked Capacity Plus enabled can be added to a particular roam list. The radio searches these channels during the automatic roam operation to locate the best site.

**NOTE:** You cannot manually add or delete an entry to the roam list. Check with your dealer or system administrator for more information.

Similar to Capacity Plus, icons of features not applicable to Linked Capacity Plus are not available in the menu. You hear a negative indicator tone if you try to access a feature not applicable to Linked Capacity Plus via a programmable button press.

Check with your dealer or system administrator for more information on this configuration.

# **Identifying Status Indicators**

Your radio indicates its operational status through the following
Display Icons page 1 <sup>2</sup>
Call Icons page 12
Sent Item Icons page 14
_ED Indicators
Audio Tonespage 16
ndicator Tones

# Display Icons

The liquid crystal display (LCD) of your radio shows the radio status, text entries, and menu entries.

The following are icons that appear on the status bar at the top of the radio's display. Icons are displayed on the status bar, arranged left-to-right, in order of appearance/usage and are channel specific.



#### Received Signal Strength Indicator (RSSI)

The number of bars displayed represents the radio signal strength. Four bars indicate the strongest signal. This icon is only displayed while receiving.



#### Bluetooth

The Bluetooth feature is enabled but there is no remote Bluetooth device connected.



#### **Bluetooth Connected**

The Bluetooth feature is enabled. The icon stays lit when one or more remote Bluetooth devices are connected.



#### **Emergency**

Radio is in Emergency mode.



#### **Notification**

Notification list is not empty.



#### Scan\*‡

Scan feature is enabled.



#### Scan - Priority 1\*\*

Radio detects activity on channel/group designated as Priority 1).



#### Scan - Priority 2\*\*

Radio detects activity on channel/group designated as Priority 2.



#### **Vote Scan**

Vote scan feature is enabled.



#### **Monitor**

Selected channel is being monitored.



#### Talkaround\*<sup>‡</sup>

In the absence of a repeater, radio is currently configured for direct radio to radio communication.



#### Site Roaming\*

The site roaming feature is enabled.



#### Secure

The Privacy feature is enabled.



#### Unsecure

The Privacy feature is disabled.



#### **GPS Available**

The GPS feature is enabled. The icon stays lit when a position fix is available.

\* Not applicable in Capacity Plus

† Not applicable in Linked Capacity Plus



#### **GPS Not Available/Out of Range**

The GPS feature is enabled but is not receiving data from the satellite.



# **Option Board**

The Option Board is enabled.



#### **Option Board Non-Function**

The Option Board is disabled.



#### **Tones Disable**

Tones are turned off.



# **Power Level**

Radio is set at Low power.



Radio is set at High power.

\* Not applicable in Capacity Plus <sup>‡</sup> Not applicable in Linked Capacity Plus

# Call Icons

The following icons appear on the radio's display during a call. These icons also appear in the Contacts list to indicate alias or ID type.



#### **Private Call**

Indicates a Private Call in progress.

In the Contacts list, it indicates a subscriber alias (name) or ID (number).



#### **Group Call/All Call**

Indicates a Group Call or All Call in progress. In the Contacts list, it indicates a group alias (name) or ID (number).

#### Advanced Menu Icons

The following icons appear beside menu items on the radio's display that offer a choice between two options or as an indication that there is a sub-menu offering two options.

Checkbox (Empty)

Indicates the option is not selected.

Checkbox (Checked)

Indicates the option is selected.

Solid Black Box

Indicates the option selected for the menu item with a sub-menu.

# Mini Notice Icons

The following icons appear momentarily on the radio's display after an action to perform task is taken.



Successful Transmission (Positive)

Successful action taken.



Failed Transmission (Negative)

Failed action taken.



**Transmission in Progress (Transitional)** 

Transmitting. This dynamic icon is seen before indication for Successful Transmission or Failed Transmission.

 
# Sent Item Icons 📵



The following icons appear in the Sent Items folder.



#### **Sent Successfully**






# Send Failed


The text message cannot be sent.



#### **In-Progress**

  OR





#### **Bluetooth Device Icons**

The following icons also appear next to items in the list of Bluetooth-enabled devices available to indicate the device type.



#### **Bluetooth Data Device**

Bluetooth-enabled data device, such as a scanner.



#### **Bluetooth Audio Device**

Bluetooth-enabled audio device, such as a headset.




#### **Bluetooth PTT Device**

Bluetooth-enabled PTT device, such as a PTT-Only Device (POD).

#### LED Indicators

LED indicators show the operational status of your radio.

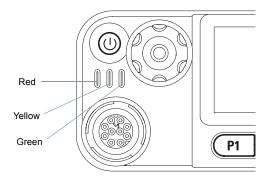

**Blinking red** – Radio is receiving an emergency transmission or has failed the self-test upon powering up.

**Solid green** – Radio is powering up, or transmitting.

**Blinking green** – Radio is receiving a non-privacy-enabled call or data, or detecting activity over the air.

**Double blinking green** – Radio is receiving a privacy-enabled call or data.

**Solid yellow** – Radio is monitoring a conventional channel.

**Blinking yellow** – Radio is scanning for activity or receiving a Call Alert, or all local Linked Capacity Plus channels are busy.

**Double blinking yellow** – Radio is no longer connected to the repeater while in Capacity Plus or Linked Capacity Plus, all Capacity Plus channels or Linked Capacity Plus channels are currently busy, Auto Roaming is enabled, radio is actively searching for a new site. Also indicates radio has yet to respond to a group call alert, or radio is locked.

NOTE: While in conventional mode, when the green LED blinks, it indicates the radio detects activity over the air. Due to the nature of the digital protocol, this activity may or may not affect the radio's programmed channel.

For Capacity Plus and Linked Capacity Plus, there is no LED indication when the radio is detecting activity over the air.

# **Indicator Tones**

High pitched tone Low pitched tone

Positive Indicator Tone

**Negative Indicator Tone** 

# **Audio Tones**

Alert tones provide you with audible indications of the radio's status or the radio's response to data received.

Continuous Tone A monotone sound. Sounds continuously until termination.

**Periodic Tone** 

Sounds periodically depending on the duration set by the radio. Tone starts,

stops, and repeats itself.

**Repetitive Tone** 

A single tone that repeats itself until it is

terminated by the user.

**Momentary Tone** 

Sounds only once for a short period of

time defined by the radio.

# **Receiving and Making Calls**

Once you understand how your MOTOTRBO Mobile is configured, you are ready to use your radio.

Use this navigation guide to familiarize yourself with the basic Call features:

Selecting a Zone	page 17
Selecting a Radio Channel, Subscriber Alias or ID,	
or Group Alias or ID	page 18
Receiving and Responding to a Radio Call	page 18
Making a Radio Call	page 22
Stopping a Radio Call	page 25
Talkaround	page 26
Permanent Monitor	page 26

# Selecting a Zone

A zone is a group of channels. Your radio supports up to 99 channels and 2 zones, with a maximum of 99 channels per zone.

Use the following procedure to select a zone.

#### Procedure:

Press the programmed Zone button and proceed to Step 3. OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 ♠ or ▼ to Zone and press ok to select.
- 3 The current zone is displayed and indicated by a ✓.
- 5 The display shows <Zone> Selected momentarily and returns to the selected zone screen.

# Selecting a Channel

Transmissions are sent and received on a channel. Depending on your radio's configuration, each channel may have been programmed differently to support different groups of users or supplied with different features. After selecting the required zone, select the channel you require to transmit or receive on.

#### Procedure:

Select a channel by using:

- Scroll Up/Down buttons, OR
- Volume/Channel Knob, OR
- The programmed Channel Up or Channel Down buttons

See Selecting a Zone on page 17 for more information on selecting your required zone.

See Switching Between Conventional Analog and Digital Mode on page 7 for information about Scroll Up/Down buttons.


See Using the Volume/Channel Knob on page 8 for information about using the Volume/Channel Knob.

See *Programmable Buttons* on page 4 for information about the Channel Up or Channel Down buttons.

# Receiving and Responding to a Radio Call

Once the channel, subscriber alias or ID, or group alias or ID is displayed, you can proceed to receive and respond to calls.

The green LED lights up while the radio is transmitting and blinks when the radio is receiving.

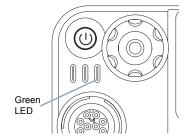

**NOTE:** The green LED lights up while the radio is transmitting and double blinks when the radio is receiving a privacyenabled call.

> To unscramble a privacy-enabled call, your radio must have the same Privacy Key, or the same Key Value and Key ID (programmed by your dealer) as the transmitting radio (the radio you are receiving the call from).

See **Privacy** on page 59 for more information.



# Receiving and Responding to a Group Call

To receive a call made to a group of users, your radio must be configured as part of that group.

#### Procedure:

When you receive a Group Call (while on the Home screen):

- The green LED blinks.
- The Group Call icon appears in the top right corner. The first text line shows the caller alias. The second text line displays the group call alias. Your radio unmutes and the incoming call sounds through the radio's speaker.
- If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the PTT button, indicating the channel is free for you to respond.

Press the PTT button to respond to the call.

#### OR

If the Voice Interrupt feature is enabled, press the PTT button to stop the current call from the transmitting radio and free the channel for you to talk/respond.

- The green LED lights up.
- Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.

OR

- Wait for the PTT Sidetone to finish (if enabled) and speak clearly into the microphone.
- Release the PTT button to listen.
- If there is no voice activity for a predetermined period of time, the call ends.

See Making a Group Call on page 22 for details on making a Group Call.

# Receiving and Responding to a Private Call



A Private Call is a call from an individual radio to another individual radio.

#### Procedure:

When you receive a Private Call:

- The green LED blinks.
- The Private Call icon appears in the top right corner. The first text line shows the caller alias. Your radio unmutes and the incoming call sounds through the radio's speaker.
- If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the PTT button, indicating the channel is free for you to respond.

Press the PTT button to respond to the call.

#### OR

If the Voice Interrupt feature is enabled, press the PTT

button to stop the current call from the transmitting radio and free the channel for you to talk/respond.

- 4 The green LED lights up.
- Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
- 6 Release the PTT button to listen.
- 7 If there is no voice activity for a predetermined period of time, the call ends.
- You hear a short tone. The display shows Call Ended.

See **Making a Private Call** on page 23 for details on making a Private Call.

# Receiving an All Call

An All Call is a call from an individual radio to every radio on the channel. It is used to make important announcements requiring the user's full attention.

#### Procedure:

When you receive an All Call:

- 1 A tone sounds and the green LED blinks.
- The Group Call icon appears in the top right corner. The first text line shows the caller alias. The second text line displays All Call. Your radio unmutes and the incoming call sounds through the radio's speaker.
- Once the All Call ends, the radio returns to the previous screen before receiving the call. An All Call does not wait for a predetermined period of time before ending.

If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the **PTT** button, indicating the channel is now available for use.

You cannot respond to an All Call.

See **Making an All Call** on page 24 for details on making an All Call.

**NOTE:** The radio stops receiving the All Call if you switch to a different channel while receiving the call.

During an All Call, you are **not** able to continue with any menu navigation or editing until the call ends.

# Receiving and Responding to a Selective Call <a>h</a>

A Selective Call is a call from an individual radio to another individual radio. It is a Private Call on an analog system.

#### Procedure:

When you receive a Selective Call:

- 1 The green LED blinks.
- The Private Call icon appears in the top right corner. The first text line shows the caller alias or Selective Call or Alert with Call. Your radio unmutes and the incoming call sounds through the radio's speaker.
- 3 If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the PTT button, indicating the channel is free for you to respond.

Press the PTT button to respond to the call.

- 4 The LED lights up solid green.
- Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
- 6 Release the PTT button to listen.
- 7 If there is no voice activity for a predetermined period of time, the call ends.

8 You hear a short tone. The display shows Call Ended.

**NOTE:** See *Making a Selective Call* on *page 25* for details on making a Selective Call.

# Making a Radio Call

After selecting your channel, you can select a subscriber alias or ID, or group alias or ID by using:

- The Contacts list (see Contacts Settings on page 34)
- A programmed One Touch Access button



 The programmed number keys – This method is for Group. Private and All Calls only and is used with the keypad microphone (see Making a Group, Private or All Call with the Programmable Number Key on page 83).



Manual Dial (via Contacts) – This method is for Private Calls only and is dialed using a keypad microphone (see Making a Private Call by Manual Dial on page 83)

**NOTE:** Your radio must have the Privacy feature enabled on the channel to send a privacy-enabled transmission. Only target radios with the same Privacy Key as your radio are able to unscramble the transmission.

See **Privacy** on page 59 for more information.



The One Touch Access feature allows you to make a Group or Private Call to a predefined ID easily. This feature can be assigned to a short or long programmable button press. You can ONLY have one ID assigned to a One Touch Access button. Your

radio can have multiple One Touch Access buttons programmed.

# Making a Group Call

To make a call to a group of users, your radio must be configured as part of that group.

#### Procedure:

Select the channel with the active group alias or ID. See Selecting a Channel on page 18. OR

Press the programmed **One Touch Access** button.

- Press the PTT button to make the call. The green LED lights up. The Group Call icon appears in the top right corner. The first text line shows the group call alias.
- Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone. OR
  - Wait for the PTT Sidetone to finish (if enabled) and speak clearly into the microphone.
- Release the PTT button to listen. When the target radio responds, the green LED blinks. You see the Group Call icon, the group alias or ID, and transmitting radio alias or ID on your display.
- If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the target radio releases

the **PTT** button, indicating the channel is free for you to respond. Press the **PTT** button to respond.

#### OR

If there is no voice activity for a predetermined period of time, the call ends.

6 Radio returns to the screen you were on prior to initiating the call.

You can also make a Group Call via Contacts (see **Making a Group Call from Contacts** on page 35).

# 🗍 Making a Private Call 📵

While you can receive and/or respond to a Private Call initiated by an authorized individual radio, your radio must be programmed for you to initiate a Private Call.

There are two types of Private Calls. The first type, where a radio presence check is performed prior to setting up the call, while the other sets up the call immediately.

Only **one** of these call types can be programmed to your radio by your dealer.

You hear a negative indicator tone, when you make a Private Call via the Menu, Call Log, Contacts list, **One Touch Access** button, the programmed number keys, **Scroll Up/Down** buttons, or the **Volume/Channel Knob** if this feature is not enabled.

Use the Text Message or Call Alert features to contact an individual radio. See *Text Messaging Features* on *page 50* or *Call Alert Operation* on *page 43* for more information.

#### Procedure:

Select the channel with the active group alias or ID. See Selecting a Channel on page 18.
OR

Press the programmed **One Touch Access** button.

- Press the PTT button to make the call. The green LED lights up. The Private Call icon appears in the top right corner. The first text line shows the subscriber alias. The second text line displays the call status.
- Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
- 4 Release the PTT button to listen. When the target radio responds, the green LED blinks.
- 5 If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the target radio releases the PTT button, indicating the channel is free for you to respond. Press the PTT button to respond.

#### OR

If there is no voice activity for a predetermined period of time, the call ends.

You hear a short tone. The display shows Call Ended.

You can also make a Private Call via Contacts (see Making a Private Call from Contacts on page 36), manually dial a Private Call (see Making a Private Call by Manual Dial on page 83) or perform a quick alphanumeric search for the required target alias via a keypad entry (see Making a Group, Private, Phone or All Call by Alias Search on page 84).

# Making an All Call

This feature allows you to transmit to all users on the channel. Your radio must be programmed to allow you to use this feature.

#### Procedure:

- 1 Select the channel with the active group alias or ID. See **Selecting a Channel** on page 18.
- Press the PTT button to make the call. The green LED lights up. The Group Call icon appears in the top right corner. The first text line shows R11 Call.
- Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
  OR
  - Mait for the PTT Sidetone to finish (if enabled) and speak clearly into the microphone.

Users on the channel cannot respond to an All Call.

### Making a Selective Call



Just like a Private Call, while you can receive and/or respond to a Selective Call initiated by an authorized individual radio, your radio must be programmed for you to initiate a Selective Call.

### Procedure:

- Select the channel with the active group alias or ID. See Selecting a Channel on page 18.
- Press the PTT button to make the call. The green LED lights up. The Private Call icon appears in the top right corner. The first text line shows the subscriber alias. The second text line displays the call status.
- Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
- Release the PTT button to listen. When the target radio responds, the green LED blinks.
- If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the target radio releases the PTT button, indicating the channel is free for you to respond. Press the **PTT** button to respond.

### OR

If there is no voice activity for a predetermined period of time, the call ends.

You hear a short tone. The display shows Call Ended.

# Stopping a Radio Call 📵



This feature allows you to stop an ongoing Group or Private Call to free the channel for transmission. For example, when a radio experiences a "stuck microphone" condition where the PTT button is inadvertently pressed by the user.

Your radio must be programmed to allow you to use this feature.

### Procedure:

While on the required channel:

- Press the programmed Transmit Interrupt Remote Dekey button.
- The display shows Remote Dekey.
- Wait for acknowledgment.
- The radio sounds a positive indicator tone and the display shows Remote Dekey Success, indicating that the channel is now free.

### OR

The radio sounds a negative indicator tone and the display shows Remote Dekey Failed.

On the interrupted radio, the display shows

Call Interrupted, and the radio sounds a negative indicator tone until you release the PTT button, if it is transmitting an interruptible call that is stopped via this feature.

### Talkaround

You can continue to communicate when your repeater is not operating, or when your radio is out of the repeater's range but within talking range of other radios. This is called "talkaround".

**NOTE:** This feature is not applicable in Capacity Plus and Linked Capacity Plus.

### Procedure:

Press the programmed **Repeater/Talkaround** button to toggle between talkaround and repeater modes.

### OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 or to Utilities and press sok to select.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 4 or to Talkaround and press ok to select.
- 5 Press <sup>■ orl</sup> to enable Talkaround. The display shows ✓ beside Enabled.

### OR

Press solution of the solutio

6 The screen automatically returns to the previous menu.

The Talkaround setting is retained even after powering down.

### Permanent Monitor

Use the Permanent Monitor feature to continuously monitor a selected channel for activity.

**NOTE:** This feature is not applicable in Capacity Plus and Linked Capacity Plus.

### Procedure:

- 1 Press the programmed **Permanent Monitor** button.
- 2 Radio sounds an alert tone, the yellow LED lights up, and the display shows Permanent Monitor On. The monitor icon appears on the status bar.
- 3 Press the programmed Permanent Monitor button to exit Permanent Monitor mode.
- 4 Radio sounds an alert tone, the yellow LED turns off, and display shows Permanent Monitor Off.

### **Advanced Features**

Use this navigation guide to learn more about advanced features available with your radio:

Radio Check page	27
Remote Monitorpage	28
Scan Lists page	30
Scanpage	
Vote Scan page	
Contacts Settings page	
Call Indicator Settings page	
Call Log Features page	
Call Alert Operation page	
Emergency Operation page	
Text Messaging Features page	
Analog Message Encodepage	
Analog Status Update page	
Privacypage	
conventional Multi-Site Controls	
Security page	
Lone Worker page	
Bluetooth page	
Notification List	

# Radio Check (h)



If enabled, this feature allows you to determine if another radio is active in a system without disturbing the user of that radio. No audible or visual notification is shown on the target radio.

This feature is only applicable for subscriber aliases or IDs.

# Sending a Radio Check

### Procedure:

Use the programmed Radio Check button.

- Press the programmed Radio Check button.
- or to the required subscriber alias or ID and press **™** to select.
- The display shows transitional mini notice, indicating the request is in progress. The LED lights up solid green.
- Wait for acknowledgement.
- If successful, a positive indicator tone sounds and the display shows positive mini notice.

### OR

If unsuccessful, a negative indicator tone sounds and the display shows negative mini notice.

Radio returns to the subscriber alias or ID screen.

OR

### Procedure:

Use the menu.

- **ok** to access the menu.
- or 
   to Contacts and press 
   for to select.
- or to the required subscriber alias or ID and press to select.
- or 
   to Radio Check and press 
   to select.
- The display shows transitional mini notice, indicating the request is in progress. The green LED lights up.
- Wait for acknowledgement.
- If successful, a positive indicator tone sounds and the display shows positive mini notice.

#### OR

If unsuccessful, a negative indicator tone sounds and the display shows negative mini notice.

Radio returns to the subscriber alias or ID screen.

If the (5 a) button is pressed when the radio is waiting for acknowledgement, a tone sounds, and the radio terminates all retries and exits Radio Check mode.

You can also initiate Radio Check via manual dial (see Initiating a Radio Check by Manual Dial on page 82).

### Remote Monitor



Use the Remote Monitor feature to turn on the microphone of a target radio (subscriber IDs only). No audible or visual indication is given to the target radio. You can use this feature to monitor, remotely, any audible activity surrounding the target radio.

Your radio must be programmed to allow you to use this feature.

# Initiating Remote Monitor

#### Procedure:

Use the programmed Remote Monitor button.

- Press the programmed **Remote Monitor** button.
- or to the required subscriber alias or ID and press <sup>⊞ ok</sup> to select
- The display shows transitional mini notice, indicating the request is in progress. The green LED lights up.
- Wait for acknowledgment.
- If successful, a positive indicator tone sounds and the display shows positive mini notice. Your radio starts playing audio from the monitored radio for a programmed duration and display shows Rem. Monitor.

Once the timer expires, the radio sounds an alert tone and the LED turns off.

OR

If unsuccessful, a negative indicator tone sounds and the display shows negative mini notice.

### OR

#### Procedure:

Use the menu.

- 1 sok to access the menu.
- 2 ♠ or ▼ to Contacts and press ®ok to select.
- or to the required subscriber alias or ID and press to select.
- 4 or ▼ to Remote Mon. and press <sup>■ oK</sup> to select.
- 5 The display shows transitional mini notice, indicating the request is in progress. The green LED lights up.
- 6 Wait for acknowledgment.
- 7 If successful, a positive indicator tone sounds and the display shows positive mini notice. Your radio starts playing audio from the monitored radio for a programmed duration and display shows Rem. Monitor.

Once the timer expires, the radio sounds an alert tone and the LED turns off.

### OR

If unsuccessful, the radio sounds a negative indicator tone the display shows negative mini notice.

You can also manually select a target radio address (see Initiating Remote Monitor by Manual Dial on page 82).

### Stopping Remote Monitor

Remote Monitor automatically stops after a programmed duration or when there is any user operation on the target radio.

### Procedure:

- 1 Press the programmed Transmit Interrupt Remote Dekey button.
- The display shows transitional mini notice, indicating the request is in progress. The green LED lights up.
- 3 Wait for acknowledgment.
- 4 If successful, a positive indicator tone sounds and the display shows positive mini notice.

#### OR

If unsuccessful, a negative indicator tone sounds and the display shows negative mini notice.

### Scan Lists

Scan lists are created and assigned to individual channels/ groups. Your radio scans for voice activity by cycling through the channel/group sequence specified in the scan list for the current channel/group.

Your radio can support up to 250 scan lists, with a maximum of 16 members in a list. Each scan list supports a mixture of both analog and digital entries.

You can add, delete, or prioritize channels by editing a scan list.

You can attach a new scan list to your radio via Front Panel Programming.

**NOTE:** This feature is not applicable in Capacity Plus and Linked Capacity Plus.

# Viewing an Entry in the Scan List

### Procedure:

- 1 sok to access the menu.
- 2 or to Scan and press sok to select.
- 3 ♠ or ▼ to Scan List and press ® oK to select.
- 4 Use or to view each member on the list.

The priority icon appears left of the member's alias, if set, to indicate whether the member is on a Priority 1 or Priority 2

channel list. You **cannot** have multiple Priority 1 or Priority 2 channels in a scan list.

There is no priority icon if priority is set to None.

# Editing the Scan List

Adding a New Entry to the Scan List

### Procedure:

- 1 sok to access the menu.
- 2 or to Scan and press or to select.
- 3 ♠ or ▼ to Scan List and press ® ok to select.
- 4 ♠ or to Add Member and press on to select.
- 5 or to the required alias or ID and press to select.
- 6 or to the required priority level and press to select.
- 7 The display shows positive mini notice, followed immediately by Add Another?.
- 8 or to Yes and press to select, to add another entry, and repeat Steps 5 and 6.

### OR

or to No and press to select to save the current list.

### Deleting an Entry from the Scan List

### Procedure:

- 1 sok to access the menu.
- 2 ♠ or ▼ to Scan and press ® ok to select.
- 3 ♠ or ▼ to Scan List and press ® ok to select.
- 4 or to the required alias or ID and press select.
- 5 ▲ or ▼ to Delete and press 🖽 ok to select.
- 6 At Delete Entry?, or to Yes and press or to Select, to delete the entry. The display shows positive mininotice.

### OR

- or to No and press to select to return to the previous screen.
- 7 Repeat Steps 4 to 6 to delete other entries.

After deleting all required aliases or IDs, long press (58) to return to the Home screen.

# Setting and Editing Priority for an Entry in the Scan List

### Procedure:

- **ok** to access the menu.
- 2 ♠ or ▼ to Scan and press ok to select.
- 3 ♠ or ▼ to Scan List and press ® ok to select.
- 4 or to the required alias or ID and press to select.

- 7 The display shows positive mini notice before returning to the previous screen.
- 8 The priority icon appears left of the member's name.

There is no priority icon if priority is set to None.

### Scan

When you start a scan, your radio cycles through the programmed scan list for the current channel looking for voice activity.

The yellow LED blinks and the scan icon appears on the status bar.

During a dual mode scan, if you are on a digital channel, and your radio locks onto an analog channel, it automatically switches from digital mode to analog mode for the duration of the call. This is also true for the reverse.

There are two ways of initiating scan:

- Main Channel Scan (Manual): Your radio scans all the channels/groups in your scan list. On entering scan, your radio may – depending on the settings – automatically start on the last scanned "active" channel/group or on the channel where scan was initiated.
- Auto Scan (Automatic): Your radio automatically starts scanning when you select a channel/group that has Auto Scan enabled.

**NOTE:** This feature is not applicable in Capacity Plus and Linked Capacity Plus.

# Starting and Stopping Scan

### Procedure:

Press the programmed **Scan** button to start or stop Scan. **OR** Follow the procedure below.

- 1 Use the **Scroll Up/Down** buttons to select a channel programmed with a scan list.
- 2 sok to access the menu.
- 3 ♠ or ▼ to Scan and press 🖽 or to select.
- 4 ♠ or ▼ to Scan State and press ® ok to select.
- 6 The display shows Scan On when scan is enabled. The yellow LED blinks and the scan icon appears.

### OR

The display shows Scan Off if scan is disabled. The LED turns off and the scan icon disappears.

While scanning, the radio can only accept data (e.g. text message, location, telemetry, or PC data) if received on its Selected Channel.

### Responding to a Transmission During a Scan

During scanning, your radio stops on a channel/group where activity is detected. The radio stays on that channel for a programmed time period known as "hang time".

#### Procedure:

- If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the PTT button, indicating the channel is free for you to respond.
- Press the PTT button during hang time. The green LED lights up.
- Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
  OR
  - Mait for the PTT Sidetone to finish (if enabled) and speak clearly into the microphone.
- 4 Release the **PTT** button to listen.
- 5 If you do not respond within the hang time, the radio returns to scanning other channels/groups.

# Deleting a Nuisance Channel

If a channel continually generates unwanted calls or noise (termed a "nuisance" channel), you can temporarily remove the unwanted channel from the scan list.

This capability does not apply to the channel designated as the Selected Channel.

#### Procedure:

- 1 When your radio "locks on to" an unwanted or nuisance channel, press the programmed Nuisance Channel Delete button until you hear a tone.
- Release the Nuisance Channel Delete button. The nuisance channel is deleted.

Deleting a "nuisance" channel is **only** possible through the programmed **Nuisance Channel Delete** button. This feature is **not** accessible through the menu.

### Restoring a Nuisance Channel

### Procedure:

To restore the deleted nuisance channel, do **one** of the following:

- Turn the radio off and then power it on again, OR
- Stop and restart a scan via the programmed Scan button or menu, OR
- Change the channel via the Scroll Up/Down buttons.

### Vote Scan

Vote Scan provides you with wide area coverage in areas where there are multiple base stations transmitting identical information on different analog channels.

Your radio scans analog channels of multiple base stations and performs a voting process to select the strongest received signal. Once that is established, your radio unmutes to transmissions from that base station.

The yellow LED blinks and the vote scan icon appears on the status bar.

To respond to a transmission during a Vote Scan, follow the same procedures as Responding to a Transmission During a Scan on page 33.

# **Contacts Settings**

Contacts provides "address-book" capabilities on your radio. Each entry corresponds to an alias or ID that you use to initiate a call.

Each entry, depending on context, associates with one of five types of calls: Group Call, Private Call, All Call, PC Call or Dispatch Call.

PC Call and Dispatch Call are data-related. They are only available with the applications. Refer to the data applications documentation for further details.

**NOTE:** If the Privacy feature is enabled on a channel, you can make privacy-enabled Group Call, Private Call, and All Call on that channel. Only target radios with the same Privacy Key OR the same Key Value and Key ID as your radio are able to unscramble the transmission.

See **Privacy** on page 59 for more information.



Additionally, Contacts menu allows you to assign each entry to a programmable number key or more on a keypad microphone. If an entry is assigned to a number key, your radio can perform a quick dial on the entry.

Your radio supports two Contacts lists, one for Analog contacts and one for Digital contacts, with a a maximum of 500 members for each Contacts list.

Each entry within Contacts displays the following information:

- Call Type
- Call Alias
- Call ID

NOTE: You can add, or edit subscriber IDs for the Digital Contacts list. Deleting subscriber IDs can only be performed by your dealer.

> For the Analog Contacts list, you can only view the subscriber IDs, edit the subscriber IDs, and initiate a Call Alert. Adding and deleting capabilities can only be performed by your dealer.

### Making a Group Call from Contacts

#### Procedure:

- <sup>⊞ ok</sup> to access the menu.
- or ▼ to Contacts and press 🕬 to select.The entries are alphabetically sorted.
- or to the required group alias or ID.

- Press the PTT button to make the call. The green LED lights up.
- Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.

### OR

Wait for the PTT Sidetone to finish (if enabled) and speak clearly into the microphone.

- Release the PTT button to listen. When any user in the group responds, the green LED blinks. You see the Group Call icon, the group alias or ID, and that user's alias or ID on your display.
- If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the target radio releases the PTT button, indicating the channel is free for you to respond. Press the **PTT** button to respond.

### OR

If there is no voice activity for a programmed period of time, the call ends.

### Making a Private Call from Contacts (a)



#### Procedure:

- box to access the menu.
- or to Contacts and press to select. The entries are alphabetically sorted.

- 3 or to the required subscriber alias or ID.
- 4 Press the **PTT** button to make the call. The green LED lights up. The display shows the destination alias.
- Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
- 6 Release the PTT button to listen. When the target radio responds, the green LED blinks and the display shows the transmitting user's alias or ID.
- 7 If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the target radio releases the PTT button, indicating the channel is free for you to respond. Press the PTT button to respond.

### OR

If there is no voice activity for a programmed period of time, the call ends.

You hear a short tone. The display shows Call Ended.

**NOTE:** If you release the **PTT** button while the radio is setting up the call, it exits without any indication and returns to the previous screen.

Your radio may be programmed to perform a radio presence check prior to setting up the Private Call. If the target radio is not available, you hear a short tone and see negative mini notice on the display.

The radio returns to the menu prior to initiating the radio presence check.

Assigning an Entry to a Programmable Number Key

### Procedure:

- 1 sok to access the menu.
- 2 or to Contacts and press to select. The entries are alphabetically sorted.
- 3 ♠ or ▼ to the required alias or ID and press <sup>■ ok</sup> to select.
- 4 ♠ or ▼ to Program Key and press ® to select.
- 5 or to the desired number key and press to select

### OR

If the number key is currently assigned to another entry, the display shows The Key is filteredy Used and then, the first line of the display shows Overwrite?.

- or to Yes and press to select.
- 6 The radio sounds a positive indicator tone and the display shows positive mini notice.
- 7 The screen automatically returns to the previous menu.

NOTE: Each entry can be associated to different number keys. You see a checkmark before each number key that is assigned to an entry. If the checkmark is before Empty, you have not assign a number key to the entry.

If a number key is assigned to an entry in a particular mode, this feature is not supported when you long press the number key in another mode.

See Making a Group, Private or All Call with the Programmable Number Key on page 83 for details on making a Group, Private or All Call with the programmed number keys.

Removing the Association between Entry and Programmable Number Key

#### Procedure:

### OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 or to Contacts and press to select. The entries are alphabetically sorted.
- 3 ♠ or ▼ to the required alias or ID and press <sup>■ ok</sup> to select.
- 4 ♠ or ▼ to Program Key and press ® oK to select.

- 6 The first line of the display shows Clear from all keys?.
- or to Yes and press or to select.
- 8 The radio sounds a positive indicator tone and the display shows positive mini notice.
- 9 The screen automatically returns to the previous menu.

**NOTE:** When an entry is deleted, the association between the entry and its programmed number key(s) is removed.

Setting Default Contact

### Procedure:

Follow the procedure below.

- 1 box to access the menu.
- 2 or to Contacts and press to select.
- 4 ♠ or ▼ to Set as Default and press ® ok to select.
- 5 The radio sounds a positive indicator tone and the display shows positive mini notice.
- 6 A ✓ appears beside the selected default alias or ID.

# Call Indicator Settings

Activating or Deactivating Call Ringers for Call Alerts

You can select, or turn on or off ringing tones for a received Call Alert.

### Procedure:

- 1 sok to access the menu.
- 2 ♠ or ▼ to Utilities and press ® ok to select.
- 3 ♠ or ▼ to Radio Settings and press ® oK to select.
- 5 ♠ or ▼ to Call Ringers and press ® ok to select.
- 6 ♠ or ▼ to Call Alert and press ® ok to select. The current tone is indicated by a ✓.
- 7 or to the required tone and press to select. ✓ appears beside selected tone.
- ☐ Activating or Deactivating Call Ringers for PrivateCalls ☐

You can turn on or off the ringing tones for a received Private Call.

### Procedure:

- 1 sok to access the menu.
- 2 ♠ or ▼ to Utilities and press ok to select.
- 3 ♠ or ▼ to Radio Settings and press ®ok to select.
- 5 lacktriangle or lacktriangle to Call Ringers and press lacktriangle to select.
- 6 ♠ or ▼ to Private Call.
- 7 Press <sup>■ ox</sup> to enable Private Call ringing tones. The display shows ✓ beside Enabled.

### OR

Press solution to disable Private Call ringing tones. The ✓ disappears from beside Enabled.

You can select, or turn on or off ringing tones for a received Selective Call.

### Procedure:

- 1 sok to access the menu.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.

- 4 ♠ or ▼ to Tones/Alents and press ® ok to select.
- 5 ♠ or to Call Ringers and press to select.
- 6 ♠ or ▼ to Selective Call and press ® ok to select. The current tone is indicated by a ✓.
- Activating or Deactivating Call Ringers for TextMessage

You can turn on or off the ringing tones for a received Text Message.

### Procedure:

- 1 sok to access the menu.
- 2 ♠ or ▼ to Utilities and press ® ok to select.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 4 or ▼ to Tones/Alents and press ® ok to select.
- 5 or to Call Ringers and press to select.

# Activating or Deactivating Call Ringers for Telemetry Status with Text

You can turn on or off the alert tones for a received Telemetry Status with Text.

### Procedure:

- 1 sok to access the menu.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 5 or to Call Ringers and press of to select.
- 6 or to Telemetry and press to select. The current tone is indicated by a ✓.

# 🗍 Assigning Ring Styles 📵



You can program your radio to sound one of ten predefined ringing tones when receiving a Call Alert or a Text Message from a particular contact.

### Procedure:

- **™** to access the menu.
- or to Contacts and press to select. The entries are alphabetically sorted.
- or to the required alias or ID and press or ID select.
- or ▼ to Edit and press ® ok to select.
- Press until display shows Edit Ringtone menu.
- A ✓ indicates the current selected tone.
- or to the required tone and press to select. ✓ appears beside selected tone.
- The display shows a positive mini notice.

The radio sounds out each ring style as you navigate through the list.

### Escalating Alarm Tone Volume

You can program your radio to continually alert you when a radio call remains unanswered. This is done by automatically increasing the alarm tone volume over time. This feature is known as Escalert.

### Procedure:

- **ok** to access the menu.
- or ▼ to Utilities and press ® oK to select.
- ▲ or ▼ to Radio Settings and press ok to select.
- or 
   to Tones/Alents and press 
   to select.
- or to Escalert.
- Press <sup>∰ oK</sup> to enable Escalert. The display shows ✓ beside Fnabled.

### OR

Press <sup>■ ok</sup> to disable Escalert. The ✓ disappears from beside Enabled.

# 🔳 Call Log Features 📵

Your radio keeps track of all recent outgoing, answered, and missed Private Calls. Use the call log feature to view and manage recent calls.

You can perform the following tasks in each of your call lists:

- Store alias or ID to Contacts
- Delete
- View Details

# Viewing Recent Calls

The lists are Missed, Answered, and Outgoing.

### Procedure:

- 1 sok to access the menu.
- 2 or to Call Log and press to select.
- 4 The display shows the most recent entry at the top of the list.
- 5 or to view the list.

Press the **PTT** button to start a Private Call with the current selected alias or ID.

# Deleting a Call from a Call List

### Procedure:

- **ok** to access the menu.
- 2 ♠ or ▼ to Call Log and press 🖽 ok to select.
- or to the required list and press to select.
- 4 ♠ or ▼ to the required alias or ID and press ( to select.
- 5 ▲ or ▼ to Delete and press ® oK to select.
- Press to select Yes to delete the entry. The display shows positive mini notice.

OR

or 
 to No to return to the previous screen.

When you select a call list and it contains no entries, the display shows List Empty and sounds a low tone if Keypad Tones are turned on (see **Turning Keypad Tones On or Off** on page 81).

### Viewing Details from a Call List

### Procedure:

- 1 sok to access the menu.
- 3 ♠ or ▼ to the required list and press <sup>■ ok</sup> to select.
- 4 ♠ or ▼ to the required alias or ID and press <sup>■ ok</sup> to select.
- 5 ♠ or ▼ to View Details and press ® or to select.

  Display shows details.

# Call Alert Operation

Call Alert paging enables you to alert a specific radio user to call you back when they are able to do so.

This feature is applicable for subscriber aliases or IDs only and is accessible through the menu via Contacts or manual dial.

# Receiving and Responding to a Call Alert

When you receive a Call Alert page, you see the notification list listing a Call Alert with the alias or ID of the calling radio on the display.

### Procedure:

- You hear a repetitive tone. The yellow LED blinks.
- Press the PTT button while the display still shows the Call Alert in the Notification List to respond with a Private Call. OR

Press (so out to exit the Notification List. The alert is moved to the Missed Call Log.

See Notification List on page 67 for details about the Notification List.

See Call Log Features on page 41 for details about the Missed Call List.

### Making a Call Alert from the Contacts List

#### Procedure:

- 1 sok to access the menu.
- 2 or to Contacts and press ok to select.
- or to the required subscriber alias or ID and press to select.
- 4 ♠ or ▼ to Call Alert and press ® oK to select.
- 5 The display shows Call Alert and the subscriber alias or ID, indicating that the Call Alert has been sent.
- 6 The green LED lights up when your radio is sending the Call Alert.
- 7 If the Call Alert acknowledgement is received, the display shows positive mini notice.

### OR

If the Call Alert acknowledgement is not received, the display shows negative mini notice.

You can also send a Call Alert by manually dialing the subscriber ID (see **Making a Call Alert by Manual Dial** on page 88).

# Making a Call Alert with the One Touch Access Button

### Procedure:

- Press the programmed One Touch Access button to make a Call Alert to the predefined alias or ID.
- The display shows Call Alert and the subscriber alias or ID, indicating that the Call Alert has been sent.
- 3 The green LED lights up when your radio is sending the Call Alert.
- If the Call Alert acknowledgement is received, the display shows positive mini notice.

### OR

If the Call Alert acknowledgement is not received, the display shows negative mini notice.

# **Emergency Operation**

An Emergency Alarm is used to indicate a critical situation. You are able to initiate an Emergency at any time on any screen display even when there is activity on the current channel.

Your dealer can set the duration of a button press for the programmed Emergency button, except for long press, which is similar with all other buttons:

- Short press Between 0.05 seconds and 0.75 seconds
- Long press Between 1.00 second and 3.75 seconds

The Emergency button is assigned with the Emergency On/ Off feature. Check with your dealer for the assigned operation of the **Emergency** button.

If short press the **Emergency** button is assigned to turn on the Emergency mode, then long press the **Emergency** button is assigned to exit the Emergency mode.

If long press the **Emergency** button is assigned to turn on the Emergency mode, then short press the **Emergency** button is assigned to exit the Emergency mode.

Your radio supports three Emergency Alarms:

- Emergency Alarm
- **Emergency Alarm with Call**
- Emergency Alarm with Voice to Follow 📵



In addition, each alarm has the following types:

- Regular Radio transmits an alarm signal and shows audio and/or visual indicators.
- **Silent** Radio transmits an alarm signal without any audio or visual indicators. Radio receives calls without any sound through the radio's speaker, until you press the PTT button to initiate the call.
- Silent with Voice Radio transmits an alarm signal without any audio or visual indicators, but allow incoming calls to sound through the radio's speaker.

Only one of the Emergency Alarms above can be assigned to the programmed **Emergency** button or the **Emergency** footswitch.

# Receiving an Emergency Alarm

### Procedure:

The emergency icon appears, a tone sounds, the red LED blinks, and the radio displays the Alarm List if there is more than one alarm listed. The emergency caller aliases are listed. • or • to the required alias and press • or to view more details. Press again to view your action options. OR

### The emergency icon appears, a tone sounds, the red LED blinks, and the radio displays the emergency caller alias Press ok to view more details. Press again to view

your action options.

2 Press (5) and select Yes to exit the Alarm List.

To revisit the Alarm List, press (5) to access the menu and select Alarm List.

# Responding to an Emergency Alarm

#### Procedure:

When receiving an Emergency Alarm:

- 1 In the Alarm List, or to the required alias.
- If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the transmitting radio releases the PTT button, indicating the channel is free for you to respond.
- 3 Press PTT button to transmit non-emergency voice to the same group that the Emergency Alarm was targeted to. The green LED lights up. Your radio remains in the Emergency mode.
- 4 Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.

### OR

- Wait for the **PTT** Sidetone to finish (if enabled) and speak clearly into the microphone.
- 5 Release the **PTT** button to listen. When the emergency initiating radio responds, the green LED blinks. You see the

- Group Call icon, the group alias or ID, and transmitting radio alias or ID on your display.
- 6 Your radio displays the Alarm List.

Emergency voice can only be transmitted by the emergency initiating radio. All other radios (including the emergency receiving radio) transmit non-emergency voice.

# Sending an Emergency Alarm

This feature allows you to send an Emergency Alarm, a non-voice signal, which triggers an alert indication on a group of radios.

#### Procedure:

- 1 Press the programmed **Emergency On** button or the **Emergency** footswitch.
- The display shows Tx Alarm and the destination alias. The green LED lights up and the Emergency icon appears.
  OR
  - The display shows Tx Telegram and the destination alias. The LED lights up solid green and the Emergency icon appears.
- When an Emergency Alarm acknowledgment is received, the Emergency tone sounds and the green LED blinks. The display shows Alarm Sent.

### OR

If your radio does not receive an Emergency Alarm

- acknowledgement, and after all retries have been exhausted, a tone sounds and the display shows Alarm Failed.
- 4 Radio exits the Emergency Alarm mode and returns to the Home screen.

If your radio is set to Silent, it does not display any audio or visual indicators during Emergency mode.

### Sending an Emergency Alarm with Call

This feature allows you to send an Emergency Alarm to a group of radios. Upon acknowledgement by a radio within the group, the group of radios can communicate over a programmed Emergency channel.

#### Procedure:

- Press the programmed Emergency On button or the Emergency footswitch.
- The display shows Tx Alarm and the destination alias. The green LED lights up and the Emergency icon appears.
  OR
  - The display shows Tx Telegram and the destination alias. The LED lights up solid green and the Emergency icon appears.
- When an Emergency Alarm acknowledgment is received, the Emergency tone sounds and the green LED blinks. The display shows Alarm Sent.

- 4 Your radio enters the emergency call mode when the display shows Emergency and the destination group alias.
- 5 Press **PTT** button to make the call. The green LED lights up and the group icon appears on the display.
- 6 Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
  OR
  - Wait for the **PTT** Sidetone to finish (if enabled) and speak clearly into the microphone.
- 7 Release the PTT button to listen. When you receive a group call, the display shows the caller alias and group alias.
- When the channel is free for you to respond, a short alert tone sounds ( if the Channel Free Indication feature is enabled). Press the **PTT** button to respond.

### OR

Once your call ends, press **Emergency Off** button to exit the Emergency mode.

The radio returns to the Home screen.

If your radio is set to Silent, it does not display any audio or visual indicators during Emergency mode, or allow any received calls to sound through the radio's speaker, until you press the **PTT** button to initiate the call.

If your radio is set to Silent with Voice, it does not display any audio or visual indicators during Emergency mode, but allow incoming calls to sound through the radio's speaker. The indicators only appear once you press the **PTT** button to initiate, or respond to, the call.

# ☐ Sending an Emergency Alarm with Voice to Follow ♠

This feature allows you to send an Emergency Alarm to a group of radios. Your radio's microphone is automatically activated, allowing you to communicate with the group of radios without pressing the **PTT** button.

This activated microphone state is also known as "hot mic".

If your radio has Emergency Cycle Mode enabled, repetitions of hot mic and receiving period are made for a programmed duration.

**NOTE:** During Emergency Cycle Mode, received calls sound through the radio's speaker.

If you press the **PTT** button during the programmed receiving period, you will hear a prohibit tone, indicating that you should release the **PTT** button. The radio ignores the **PTT** press and remains in Emergency mode.

**NOTE:** If you press the **PTT** button during hot mic, and continue to press it after the hot mic duration expires,

the radio continues to transmit until you release the **PTT** button.

### Procedure:

- 1 Press the programmed **Emergency On** button or the **Emergency** footswitch.
- The display shows Tx Alarm and the destination alias. The green LED lights up and the Emergency icon appears.
  OR
  - The display shows Tx Telegram and the destination alias. The LED lights up solid green and the Emergency icon appears.
- 3 Once the display shows filarm Sent, speak clearly into the microphone. When hot mic has been enabled, the radio automatically transmits without a PTT press until the hot mic duration expires.
  - While transmitting, the green LED lights up and the Emergency icon appears.
- 4 The radio automatically stops transmitting when: Once the cycling duration between hot mic and receiving calls expires, if Emergency Cycle Mode is enabled. OR
  - Once the hot mic duration expires, if Emergency Cycle Mode is disabled.
- To transmit again, press the PTT button.
  OR

Press the programmed **Emergency Off** button to exit the Emergency mode.

6 The radio returns to the Home screen.

If your radio is set to Silent, it does not display any audio or visual indicators during Emergency mode, or allow any received calls to sound through the radio's speaker, until the programmed hot mic transmission period is over, and you press the **PTT** button.

If your radio is set to Silent with Voice, it does not display any audio or visual indicators during Emergency mode when you are making the call with hot mic, but allow sound through the radio's speaker when the target radio responds after the programmed hot mic transmission period is over. The indicators only appear when you press the **PTT** button.

**NOTE:** If the Emergency Alarm request fails, the radio does not retry to send the request, and enters the hot mic state directly.

### Reinitiating an Emergency Mode

**NOTE:** This feature is only applicable to the radio sending the Emergency Alarm.

There are two instances where this can happen:

- You change the channel while the radio is in Emergency mode. This exits the Emergency mode. If Emergency Alarm is enabled on this new channel, the radio reinitiates Emergency.
- You press the programmed Emergency On button during an Emergency initiation/transmission state. This causes the radio to exit this state, and to reinitiate Emergency.

# Exiting Emergency Mode

**NOTE:** This feature is only applicable to the radio sending the Emergency Alarm.

Your radio exits Emergency mode when **one** of the following occurs:

- Emergency Alarm acknowledgement is received (for Emergency Alarm only), OR
- 🕅 An Emergency Exit Telegram is received, OR
- All retries to send the alarm have been exhausted. OR
- The Emergency Off button is pressed.

**NOTE:** If your radio is powered off, it exits the Emergency mode. The radio does not reinitiate the Emergency mode automatically when it is turned on again.

> If you change channels when your radio is in Emergency mode to a channel that has no emergency system configured, No Emergency is shown on your display.

# Text Messaging Features 📵



Your radio is able to receive data, for example a text message, from another radio or an e-mail application.

### Sending a Quick Text Message

Your radio supports a maximum of 50 Quick Text messages as programmed by your dealer.

**NOTE:** While Quick Text messages are programmed, you can edit each message before sending it. Only available with a keypad microphone (see Editing a Quick Reply Message on page 90).

#### Procedure:

Press the programmed Text Message button and proceed to Step 3.

### OR

Follow the procedure below.

- to access the menu.
- or 
   to Messages and press 
   to select.
- or to the required Quick Text and press to select.
- or to the required alias or ID and press 50 to select.

- 6 The display shows transitional mini notice, confirming your message is being sent.
- 7 If the message is sent, a tone sounds and the display shows positive mini notice.

### OR

If the message is not sent, a low tone sounds and the display shows negative mini notice.

If the text message fails to send, the radio returns you to the Resend option screen (see Managing Fail-to-Send Text Messages on page 51).

# Sending a Quick Text Message with the One Touch Access Button

- Press the programmed One Touch Access button to send a predefined Quick Text message to a predefined alias or ID.
- 2 The display shows transitional mini notice, confirming your message is being sent.
- If the message is sent, a tone sounds and the display shows positive mini notice.

#### OR

If the message is not sent, a low tone sounds and the display shows negative mini notice.

If the text message fails to send, the radio returns you to the Resend option screen (see Managing Fail-to-Send Text Messages on page 51).

# Managing Text Messages in the Drafts Folder

The Drafts folder stores a maximum of ten (10) last saved messages. When the folder is full, the next saved text message automatically replaces the oldest text message in the folder. See *Accessing the Drafts Folder* on page 90 for more information.

NOTE: You can edit a saved text message before sending it.
Only available with a keypad microphone (see *Editing*and Sending a Saved Text Message on page 91).

Long press (2 \*) at any time to return to the Home screen

### Viewing a Saved Text Message

### Procedure:

Press the programmed **Text Message** button and proceed to Step 3.

### OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 or to Messages and press to select.

- 3 ♠ or ▼ to Drafts and press ® ok to select.
- 4 ♠ or ▼ to the required message and press ® ok to select.

# Deleting a Saved Text Message from Drafts

### Procedure:

Press the programmed **Text Message** button and proceed to Step 3.

### OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 or to Messages and press ok to select.
- 3 ♠ or ▼ to Drafts and press ok to select.
- 5 Press sok again while viewing the message.
- 6 ♠ or ▼ to Delete and press ® ok to delete the text message.

# Managing Fail-to-Send Text Messages

You can select one of the following options while at the Resend option screen:

- Resend
- Forward

 Edit (Only available with a keypad microphone – see Editing a Text Message on page 92 for more information)

**NOTE:** If the channel type (i.e. conventional digital or Capacity Plus or Linked Capacity Plus) is not a match, you can only edit and forward a Fail-to-Send message.

# Resending a Text Message

### Procedure:

- 1 Press to resend the same message to the same subscriber/group alias or ID.
- If the message is sent successfully, a tone sounds and the display shows positive mini notice.

#### OR

If the message cannot be sent, the display shows negative mini notice.

# Forwarding a Text Message

Select Forward to send the message to another subscriber/ group alias or ID.

#### Procedure:

- 1 or to Forward and press on to select.
- 2 or to the required alias or ID and press to select.

- 3 The display shows transitional mini notice, confirming your message is being sent.
- 4 If the message is sent, a tone sounds and the display shows positive mini notice.

### OR

If the message is not sent, a low tone sounds and the display shows negative mini notice.

You can also manually select a target radio address (see Forwarding a Text Message by Manual Dial on page 91).

# Managing Sent Text Messages

Once a message is sent to another radio, it is saved in Sent Items. The most recent sent text message is always added to the top of the Sent Items list.

The Sent Items folder is capable of storing a maximum of thirty (30) last sent messages. When the folder is full, the next sent text message automatically replaces the oldest text message in the folder.

NOTE: Long press (5 \*) at any time to return to the Home screen.

# 🗍 Viewing a Sent Text Message

### Procedure:

Press the programmed **Text Message** button and proceed to Step 3.

### OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 ▲ or ▼ to Messages and press ® ok to select.
- 3 ♠ or ▼ to Sent Items and press ® ok to select.

The icon beside each message indicates the status of the message (see **Sent Item Icons** on page 14).

### Sending a Sent Text Message

You can select one of the following options while viewing a sent text message:

- Resend
- Forward
- Edit
- Delete

**NOTE:** If the channel type (i.e. conventional digital or Capacity Plus or Linked Capacity Plus) is not a match, you can only edit, forward, or delete a Sent message.

### Procedure:

- 1 Press again while viewing the message.
- 2 or to Resend and press of to select.
- 3 The display shows transitional mini notice, confirming that the same message is being sent to the same target radio.
- 4 If the message is sent, a tone sounds and the display shows positive mini notice.

### OR

If the message is not sent, a low tone sounds and the display shows negative mini notice.

If the text message fails to send, the radio returns you to the Resend option screen. Press to resend the message to the same subscriber/group alias or ID.

**NOTE:** Changing the volume, and pressing any button, except for , or , returns you to the message.

The radio exits the Resend option screen if you press the PTT button to initiate a Private or Group Call, or to respond to a Group Call. It also exits the screen when the radio receives a text or telemetry message, an emergency call or alarm, or a call alert.

The display returns to the Resend option screen if you press the PTT button to respond to a Private Call (except if the radio is displaying the Missed Call screen), and at the end of an All Call.

Press or to access the Forward, Edit, or Delete option screen:

- Select Forward to send the selected text message to another target radio (see Forwarding a Text Message on page 52).
   You can also manually select a target radio address using a keypad microphone (see Forwarding a Text Message by Manual Dial on page 91).
- Select Edit to edit the selected text message before sending it (see **Editing a Text Message** on page 92). Only available with a keypad microphone.
- Select Delete to delete the text message.

**NOTE:** If you exit the message sending screen while the message is being sent, the radio updates the status of the message in the Sent Items folder without providing any indication in the display or via sound.

If the radio changes mode or powers down before the status of the message in Sent Items is updated, the radio cannot complete any In-Progress messages and automatically marks it with a Send Failed icon.

The radio supports a maximum of five (5) In-Progress messages at one time. During this period, the radio cannot send any new message and automatically marks it with a Send Failed icon.

### Deleting All Sent Text Messages from Sent Items

### Procedure:

Press the programmed **Text Message** button and proceed to Step 3.

### OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 or to Messages and press ok to select.
- 3 ♠ or ▼ to Sent I tems and press ® ok to select.
- or to Yes and press to select. The display shows positive mini notice

OR

or to No and press to return to the previous screen.

When you select Sent Items and it contains no text messages, the display shows List Empty and sounds a low tone if Keypad Tones are turned on (see **Turning Keypad Tones On or Off** on page 81).

### Receiving a Text Message

When your radio receives a message, the display shows the Notification List with the alias or ID of the sender and the message icon.

You can select one of the following options when receiving a text message:

- Read
- Read Later
- Delete

**NOTE:** The radio exits the Text Message alert screen and sets up a Private or Group Call to the sender of the message if the **PTT** button is pressed when the radio is displaying the alert screen.

# Reading a Text Message

### Procedure:

- 1 or to Read and press of to select.
- Selected message in the Inbox opens. A subject line may be shown if the message is from an e-mail application.
- 3 Press (5) to return to the Inbox.

### OR

Press to reply, forward, or delete the text message.

Press or to access the Read Later or Delete option screen:

- Select Read Later to return to the screen you were on prior to receiving the text message.
- Select Delete to delete the text message.

# Managing Received Text Messages

Use the Inbox to manage your text messages. The Inbox is capable of storing a maximum of 30 messages.

Your radio supports the following options for text messages:

- Reply (via Quick Text)
- Forward
- Delete
- Delete All

**NOTE:** If the channel type (i.e. conventional digital or Capacity Plus or Linked Capacity Plus) is not a match, you can only forward, delete, or delete all Received messages.

Text messages in the Inbox are sorted according to the most recently received.

NOTE: Long press (5) at any time to return to the Home screen.

# Viewing a Text Message from the Inbox

### Procedure:

- **™** to access the menu.
- or to Messages and press on to select.
- 4 or to view the messages.

A subject line may be shown if the message is from an e-mail application.

Press to select the current message, and press again to reply, forward, or delete that message.

OR

Long press 5 to return to the Home screen.

# ☐ Viewing a Telemetry Status Text Message from the Inbox

### Procedure:

- 1 sok to access the menu.

- 4 ♠ or ▼ to the required message and press (solve) to select.
- 5 The display shows Telemetry: (Status Text Message).

6 Long press (5) to return to the Home screen.

You cannot reply to a Telemetry Status text message.

# Replying to a Text Message with Quick Text

### Procedure:

Press the programmed **Text Message** button and proceed to Step 3.

### OR

Follow the procedure below.

- 1 sok to access the menu.

- 5 Press once more to access the sub-menu.
- 7 ♠ or ▼ to Quick Reply and press 🖽 or to select.
- The display shows transitional mini notice, confirming your message is being sent.

10 If the message is sent successfully, a tone sounds and the display shows positive mini notice.

### OR

If the message cannot be sent, the display shows negative mini notice.

If the text message fails to send, the radio returns you to the Resend option screen (see Managing Fail-to-Send Text Messages on page 51).

NOTE: If you are using a keypad microphone, you can also write and send a new message (see *Writing and Sending a Text Message* on page 88) or modify a Quick Text message before sending it (see *Editing a Quick Reply Message* on page 90).

### Deleting a Text Message from the Inbox

### Procedure:

Press the programmed **Text Message** button and proceed to Step 3.

### OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 or to Messages and press to select.
- 4 or to the required message and press to select.

  A subject line may be shown if the message is from an e-mail application.
- 5 Press once more to access the sub-menu.
- 6 ♠ or ▼ to Delete and press <sup>■ oK</sup> to select.
- 7 or to Yes and press to select.
- 8 The display shows positive mini notice.
- The screen returns to the Inbox.

### Deleting All Text Messages from the Inbox

### Procedure:

Press the programmed **Text Message** button and proceed to Step 3.

### OR

Follow the procedure below.

- 1 to access the menu.
- 2 or to Messages and press to select.
- 4 ♠ or ▼ to Delete All and press 🕬 to select.
- 6 The display shows positive mini notice.

When you select the Inbox and it contains no text messages, the display shows  $List\ Empt_{\mathcal{L}}$  and sounds a low tone if Keypad Tones are turned on (see **Turning Keypad Tones On or Off** on page 81).

NOTE: Additional text messaging features are available with a keypad-enabled microphone. Refer to *Text Messaging* on page 88 for more details.

# Analog Message Encode 📵

Your radio is able to send preprogrammed messages from the Message list to a radio alias or to the dispatcher.

# Sending MDC Message Encode to Dispatcher

### Procedure:

- 1 sok to access the menu.
- 2 ♠ or ▼ to Message and press ® ok to select.
- 3 ♠ or ▼ to Quick Text and press ® oK to select.
- 5 The display shows transitional mini notice, confirming your message is being sent.
- 6 If the message is sent, a tone sounds and the display shows positive mini notice.

### OR

If the message is not sent, a low tone sounds and the display shows negative mini notice.

# Analog Status Update

Your radio is able to send preprogrammed messages from the Status List indicating your current activity to the dispatcher.

The last acknowledged message is kept at the top of the Status List. The other messages are arranged in alphanumeric order.

# Sending Status Update to Predefined Contact

### Procedure:

- 1 sok to access the menu.
- 2 ♠ or ▼ to Status and press ok to select.
- 3 ♠ or ▼ to the required status. Press <sup>■ ok</sup> to select.
- 4 ♠ or ▼ to Set as Default. Press ® ok to send the status update.
- 5 The display shows transitional mini notice, confirming your status update is being sent.
- 6 If the status update is acknowledged, a tone sounds and the display shows positive mini notice. A ✓ appears beside the acknowledged status.

### OR

If the status update is not acknowledged, a low tone sounds and the display shows negative mini notice. A  $\checkmark$  remains beside the previous status.

# Privacy (n)



If enabled, this feature helps to prevent eavesdropping by unauthorized users on a channel by the use of a softwarebased scrambling solution. The signaling and user identification portions of a transmission are not scrambled.

Your radio must have privacy enabled on the channel to send a privacy-enabled transmission, although this is not a necessary requirement for receiving a transmission. While on a privacyenabled channel, the radio is still able to receive clear (unscrambled) transmissions.

Your radio supports two types of privacy:

- Basic Privacy
- Enhanced Privacy.

Only **ONE** of the privacy types above can be assigned to the radio.

To unscramble a privacy-enabled call or data transmission, your radio must be programmed to have the same Privacy Key (for Basic Privacy), OR the same Key Value and Key ID (for Enhanced Privacy) as the transmitting radio.

If your radio receives a scrambled call that is of a different Privacy Key, OR a different Key Value and Key ID, you will either hear a garbled transmission (Basic Privacy) or nothing at all (Enhanced Privacy).

The green LED lights up while the radio is transmitting and double blinks when the radio is receiving an ongoing privacyenabled transmission.

**NOTE:** Some radio models may not offer this Privacy feature. Check with your dealer or system administrator for more information.

### Procedure:

Press the programmed **Privacy** button to toggle privacy on or off.

### OR

Follow the procedure below.

- <sup>⊞ ok</sup> to access the menu.
- or 
   to Utilities and press 
   or to Select.
- 📤 or 💌 to Radio Settings and press 🖽 to select.
- 📤 or 💌 to Privacy.
- Press <sup>□ oK</sup> to enable Privacy. The display shows ✓ beside Fnabled.

### OR

Press <sup>■ ok</sup> to disable Privacy. The ✓ disappears from beside Enabled.

If the radio has a privacy type assigned, the secure or unsecure icon appears on the status bar, except when the radio is sending or receiving an Emergency call or alarm.

These features are applicable when your current radio channel is part of an IP Site Connect or Linked Capacity Plus configuration.

See IP Site Connect on page 8 and Linked Capacity Plus on page 9 for more details about these configurations.

# Starting an Automatic Site Search

**NOTE:** The radio **only** scans for a new site if the current signal is weak or when the radio is unable to detect any signal from the current site. If the RSSI value is strong, the radio remains on the current site.

### Procedure:

Press the programmed Site Lock On/Off button.

- A tone sounds and the display shows Site Unlocked.
- The yellow LED blinks rapidly when the radio is actively searching for a new site, and turns off once the radio locks on to a site.
- The display shows the channel alias and the site roaming icon appears.

OR

### Procedure:

Use the menu.

- to access the menu.
- or 
   to Utilities and press 
   to select.
- ▲ or ▼ to Radio Settings and press 🕬 to select.
- or 
   to Site Roaming and press 
   to select.
- or ▼ to Unlock Site and press ® K to select. A tone sounds and the display shows Site Unlocked.
- The radio returns to the Home screen. The display shows the channel alias and the site roaming icon appears.
- The yellow LED blinks rapidly when the radio is actively searching for a new site, and turns off once the radio locks on to a site.

The radio also performs an automatic site search (site is unlocked) during a PTT button press or data transmission if the current channel, a multi-site channel with an attached roam list. is out of range.

# Stopping an Automatic Site Search

When the radio is actively searching for a new site:

#### Procedure:

Press the programmed Site Lock On/Off button.

- 1 A tone sounds and the display shows Site Locked.
- The LED turns off and the display shows the channel alias.

#### OR

#### Procedure:

Use the menu.

- 1 sok to access the menu.
- 2 ♠ or ▼ to Utilities and press ® ok to select.
- 3 ♠ or ▼ to Radio Settings and press ® oK to select.
- 5 or to Lock Site State.
- 6 Press <sup>■ ok</sup> to lock site. The display shows ✓ beside Enabled. OR

Press <sup>™ oK</sup> to unlock site. The ✓ disappears from beside Enabled.

- 7 The LED turns off and the radio returns to the Home screen. The display shows the channel alias.
- Starting a Manual Site Search

#### Procedure:

Press the programmed Manual Site Roam button and proceed

to Step 6.

#### OR

Follow the procedure below.

- 1 <sup>⊞ ok</sup> to access the menu.
- or to Utilities and press or to select.
- 4 ♠ or ▼ to Site Roaming and press ®ok to select.
- 5 ♠ or ▼ to Active Search and press oK to select.
- A tone sounds and the display shows Finding Site.
  The green LED blinks.
- If a new site is found, a tone sounds and the LED turns off.
  The display shows Site <Alias> Found.

#### OR

If there is no available site within range, a tone sounds and the LED turns off. The display shows Out of Range.

#### OR

If a new site is within range, but the radio is unable to connect to it, a tone sounds and the LED turns off. The display shows Channel Busy.

8 The radio returns to the Home screen.

## Security <a>6</a>

You can enable or disable any radio in the system. For example, you might want to disable a stolen radio, to prevent the thief from using it, and enable that radio, when it is recovered.

**NOTE:** Performing Radio Disable and Enable is limited to radios with these functions enabled.

#### Radio Disable

#### Procedure:

Use the programmed Radio Disable button.

- 1 Press the programmed Radio Disable button.
- 2 ♠ or ▼ to the required subscriber alias or ID and press sow to select.
- 3 The display shows transitional mini notice, indicating the request is in progress. The green LED blinks.
- 4 Wait for acknowledgment.
- 5 If successful, a positive indicator tone sounds and the display shows positive mini notice.

#### OR

If unsuccessful, a negative indicator tone sounds and the display shows negative mini notice.

#### Procedure:

Use the menu.

- 1 sok to access the menu.
- 2 or to Contacts and press to select. The entries are alphabetically sorted.
- 3 ♠ or ▼ to the required subscriber alias or ID and press solve to select.
- 4 ♠ or ▼ to Radio Disable and press ® ok to select.
- 5 The display shows transitional mini notice, indicating the request is in progress. The green LED blinks.
- 6 Wait for acknowledgment.
- 7 If successful, a positive indicator tone sounds and the display shows positive mini notice.

#### **OR**

If unsuccessful, a negative indicator tone sounds and the display shows negative mini notice.

Do not press (5) during the Radio Disable operation as you will not get an acknowledgement message.

You can also access this feature using manual dial (see **Radio Disable via Manual Dial** on page 93).

62

#### Radio Enable

#### Procedure:

Use the programmed Radio Enable button.

- 1 Press the programmed Radio Enable button.
- 2 or to the required subscriber alias or ID and press 50 to select.
- 3 The display shows Radio Enable and the subscriber alias or ID. The green LED lights up.
- 4 Wait for acknowledgment.
- If successful, the radio sounds a positive indicator tone and the display shows positive mini notice.

#### OR

If unsuccessful, the radio sounds a negative indicator tone and the display shows negative mini notice.

#### OR

#### Procedure:

Use the menu.

- 1 sok to access the menu.
- 2 or to Contacts and press to select. The entries are alphabetically sorted.

- - or to Radio Enable and press to select. The green LED blinks.
- The display shows Radio Enable and the subscriber alias or ID. The green LED lights up.
- 6 Wait for acknowledgment.
- 7 If successful, a tone sounds and the display shows Radio Enable Successful.

#### OR

If not successful, a tone sounds and the display shows Radio Enable Failed.

Do not press (5 %) during the Radio Enable operation as you will not get an acknowledgement message.

You can also access this feature using manual dial (see **Radio Enable via Manual Dial** on page 93).

## **Lone Worker**

This feature prompts an emergency to be raised if there is no user activity, such as any radio button press or activation of the channel selector, for a predefined time.

Following no user activity for a programmed duration, the radio pre-warns the user via an audio indicator once the inactivity timer expires.

If there is still no acknowledgment by the user before the predefined reminder timer expires, the radio initiates an Emergency Alarm.

Only **one** of the following Emergency Alarms is assigned to this feature:

- **Emergency Alarm**
- **Emergency Alarm with Call**
- Emergency Alarm with Voice to Follow



The radio remains in the emergency state allowing voice messages to proceed until action is taken. See Emergency **Operation** on page 44 on ways to exit Emergency.

**NOTE:** This feature is limited to radios with this function enabled. Check with your dealer or system administrator for more information.

NOTE:

## Bluetooth

This feature allows you to use your radio with a Bluetoothenabled device (accessory) via a Bluetooth connection. Your radio supports both Motorola and COTS (Commercially available Off-The-Shelf) Bluetooth-enabled devices.

Bluetooth operates within a range of 10 meters line of sight. This is an unobstructed path between your radio and your Bluetooth-enabled device.

It is not recommended that you leave your radio behind and expect your Bluetooth-enabled device to work with a high degree of reliability when they are separated.

At the fringe areas of reception, both voice and tone quality will start to sound "garbled" or "broken". To correct this problem, simply position your radio and Bluetooth-enabled device closer to each other (within the 10-meter defined range) to re-establish clear audio reception. Your radio's Bluetooth function has a maximum power of 2.5 mW (4 dBm) at the 10-meter range.

Your radio can support up to 3 simultaneous Bluetooth connections with Bluetooth-enabled devices of unique types. For example, a headset, a scanner, and a PTT-Only Device (POD). Multiple connections with Bluetooth-enabled devices of the same type are not supported.

Refer to your respective Bluetooth-enabled device's user manual for more details on your Bluetooth-enabled device's full capabilities.

## Turning Bluetooth On or Off

#### Procedure:

- 1 sok to access the menu.
- 3 ♠ or ▼ to My Status and press ™ to select.
- The display shows ⊕n and ⊕ff. or to ⊕n and press to enable Bluetooth. ✓ appears beside ⊕n. The Bluetooth icon appears on the status bar.

OR

The display shows 0n and 0ff. ♠ or ▼ to 0ff and press to disable Bluetooth. ✓ appears beside 0ff.

## Finding and Connecting to a Bluetooth Device

#### Procedure:

- 1 Turn on your Bluetooth-enabled device and place it in pairing mode. Refer to respective Bluetooth-enabled device's user manual.
- 2 On your radio, press sto access the menu.
- 3 ♠ or ▼ to Bluetooth and press ™ to select.
- 4 ♠ or ▼ to Devices and press 🖽 or to select.

- or to Find Devices to locate available devices.

  or to the required device and press sol to select.
- or ▼ to Connect and press to select. Display shows Connecting to <device>.

  Your Bluetooth-enabled device may require additional steps to complete the pairing. Refer to respective Bluetoothenabled device's user manual.
- 7 If successful, the radio display shows <Device > Connected. A tone sounds and ✓ appears beside the connected device. The Bluetooth Connected icon appears on the status bar.

#### OR

If unsuccessful, the radio display shows Connecting Failed.

Do not turn off your Bluetooth-enabled device or press (5 a) during the finding and connecting operation as this cancels the operation.

NOTE: If pin code is required, use the same entry method as Step 2 in Accessing the Radio from Password on page 94.

## Disconnecting from a Bluetooth Device

#### Procedure:

- 1 On your radio, press (55 OK) to access the menu.
- 2 or to Blue tooth and press to select.
- 3 ♠ or ▼to Devices and press ® ok to select.
- or to Disconnect and press to select. Display shows Disconnecting from <device>.

  Your Bluetooth-enabled device may require additional steps to disconnect. Refer to respective Bluetooth-enabled device's user manual.
- The radio display shows ⟨Device⟩ Disonnected. A positive indicator tone sounds and ✓ disappears beside the connected device. The Bluetooth Connected icon disappears on the status bar.

## Switching Audio Route

You can toggle audio routing between internal radio speaker and external Bluetooth-enabled accessory.

#### Procedure:

- 1 Press the programmed **Bluetooth Audio Switch** button .
- A tone sounds and display shows Route Audio to Radio.
  OR

A tone sounds and display shows  ${\tt Route}\ {\tt Audio}\ {\tt to}\ {\tt Bluetooth}.$ 

## Viewing Device Details

#### Procedure:

- 1 sok to access the menu.
- 2 or to Bluetooth and press sok to select.
- 3 ♠ or ▼ to Devices and press <sup>■ ok</sup> to select.
- 4 or to the required device and press ok to select.
- 5 ♠ or ▼ to View Details and press ® ok to select.

## Notification List

Your radio has a Notification List that collects all your "unread" events on the channel, such as unread text messages, telegrams, telemetry messages, missed calls, and call alerts.

The Notification icon appears on the status bar when the Notification List has one or more events.

The list supports a maximum of forty (40) unread events. When it is full, the next event automatically replaces the oldest event.

After the events are read, they are removed from the Notification List.

NOTE: Your radio suspends Scan when the Notification List is displayed. Scanning resumes when your radio exits the Notification List. Press (5 fe) to exit the Notification List or wait for the menu timer to expire.

## **Accessing the Notification List**

#### Procedure:

- 1 sok to access the menu.
- 2 ♠ or ▼ to Notification and press ( to select.
- 3 ♠ or ▼ to the required event and press ® ok to select.

Long press (5 ) to return to the Home screen.

### Utilities

## Turning the Radio Tones/Alerts On or Off

You can enable and disable all radio tones and alerts (except for the incoming Emergency alert tone) if needed.

#### Procedure:

Press the programmed **All Tones/Alerts** button to toggle all tones on or off.

#### OR

Follow the procedure below.

- 1 sok to access the menu.
- or to Utilities and press ok to select.
- 3 ♠ or ▼ to Radio Settings and press 🕬 to select.
- 5 or to All Tones and press sok to select.
- 6 Press <sup>■ ok</sup> to enable all tones. The display shows ✓ beside Enabled.

#### OR

Press <sup>to ok</sup> to disable all tones. The ✓ disappears from beside Enabled.

## Setting the Tone Alert Volume Offset Level <a>h</a>



You can adjust the Tone Alert Volume Offset level if needed. This feature adjusts the volume of the tones/alerts, allowing it to be higher or lower than the voice volume.

#### Procedure:

- **™** to access the menu.
- or 
   to Utilities and press 
   sow to select.
- 📤 or 💌 to Radio Settings and press oK to select.
- or to Tones/Alents and press to select.
- or 
   to Vol. Offset and press 
   to select.
- or to the required volume value. The radio sounds a feedback tone with each corresponding volume value.
- Press to keep the required displayed volume value. OR

Repeat Step 6 to select another volume value.

#### OR

(5 a) to exit without changing the current volume offset settings.

## Turning the Talk Permit Tone On or Off



You can enable and disable the Talk Permit Tone if needed.

#### Procedure:

- **™** to access the menu.
- or to Utilities and press ok to select.
- 🃤 or 💌 to Radio Settings and press 🖽 to select.
- Or ▼ to Tones/Alents and press to select.
- or ▼ to Talk Permit and press ® ok to select.
- Press <sup>■ ok</sup> to enable Talk Permit Tone. The display shows ✓ beside Enabled.

#### OR

Press <sup>■ OK</sup> to disable Talk Permit Tone. The ✓ disappears from beside Enabled.

## Setting the Power Level

You can customize your radio's power setting to high or low for each channel.

**Settings:** High enables communication with radios located at a considerable distance from you. Low enables communication with radios in closer proximity.

#### Procedure:

Press the programmed Power Level button to toggle transmit power level between high and low.

#### OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 ♠ or ▼ to Utilities and press ® ok to select.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 4 or to Power and press ok to select.
- 6 Screen returns to the previous menu.

Long press (5) to return to the Home screen. The power level icon is visible.

## Changing the Display Mode

You can change radio's display mode between Day or Night, as needed. This affects the color palette of the display.

#### Procedure:

Press the programmed **Display Mode** button to toggle the display mode settings.

#### OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 or to Utilities and press sok to select.

- 3 ♠ or ▼ to Radio Settings and press ®oK to select.
- 4 ♠ or ▼ to Day/Night and press ®ok to select.
- 5 The display shows Day Mode and Night Mode. ♠ or ▼ to the required setting and press ★ to enable. ✓ appears beside selected setting.

## Adjusting the Display Brightness

You can adjust radio's display brightness as needed.

#### Procedure:

Press the programmed **Brightness** button and proceed to Step 5.

#### OR

Follow the procedure below.

- 1 to access the menu.
- 2 or to Utilities and press sok to select.
- lacksquare or lacksquare to Radio Settings and press lacksquare to select.
- 4 or to Brightness and press or to select.
- The display shows a progress bar. Decrease display brightness by pressing or increase the display brightness by pressing . Press to confirm your entry.

## Turning Horns/Lights On or Off

Your radio is able to notify you of an incoming call via the horns and lights feature. When activated, an incoming call sounds your vehicle's horn and turns on its lights.

This feature needs to be installed through your radio's rear accessory connector by your dealer.

#### Procedure:

Press the programmed **Horns/Lights** button to toggle horns and lights feature on or off.

#### OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 ♠ or ▼ to Utilities and press ™ to select.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 5 Press <sup>⊞ok</sup> to enable Horns/Lights. The display shows ✓ beside Enabled.

#### OR

Press <sup>150</sup> to disable Horns/Lights. The ✓ disappears from beside Enabled

## □ Turning the Public Address System On or Off

You can enable and disable the radio's internal public address (PA) system.

#### Procedure:

Press the programmed **PA On/Off** button to toggle the feature on or off

## ☐ Turning the External Public Address System On or Off

You can enable or disable the audio routing between the connected public address (PA) loudspeaker amplifier and the radio's internal public address (PA) system.

#### Procedure:

Press the programmed **Ext PA On/Off** button to toggle the feature on or off.

## 

You can adjust your radio's squelch level to filter out unwanted calls with low signal strength or channels that have a higher than normal background noise.

**Settings:** Normal is the default. Tight filters out (unwanted) calls and/or background noise. However, calls from remote locations may also be filtered out.

#### Procedure:

Press the programmed Squelch button to toggle squelch level

between normal and tight.

#### OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 ♠ or ▼ to Utilities and press 🖽 or to select.
- 3 ♠ or ▼ to Radio Settings and press ok to select.
- The display shows Tight and Normal. ♠ or ▼ to the required setting and press to enable. ✓ appears besides selected setting.
- 6 Screen returns to the previous menu.

## Turning the Introduction Screen On or Off

You can enable and disable the Introduction Screen if needed.

#### Procedure:

- 1 sok to access the menu.
- 2 ♠ or ▼ to Utilities and press ® oK to select.
- 3 ♠ or ▼ to Radio Settings and press ® to select.
- 4 ♠ or ▼ to Intro Screen and press ® ok to select.

#### OR

Press <sup>se ost</sup> to disable Introduction Screen. The ✓ disappears from beside Enabled.

## Turning the LED Indicators On or Off

You can enable and disable the LED Indicators if needed.

#### Procedure:

- to access the menu.
- 2 ♠ or ▼ to Utilities and press ® ok to select.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 4 ♠ or ▼ to LED Indicator and press ok to select.
- 5 Press <sup>■ ok</sup> to enable LED indicator. The display shows ✓ beside Enabled.

#### OR

Press ≅ok to disable LED indicator. The ✓ disappears from beside Enabled.

## Setting Dual Knob Operation Preference

Your radio has a dual-purpose **Volume/Channel Knob**. Disabling the dual-purpose option sets the knob to work as a Volume Knob only.

- 1 sok to access the menu.
- 2 ♠ or ▼ to Utilities and press ® ok to select.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 4 ♠ or ▼ to Dual Knob and press ® ok to select.
- 6 Screen returns to the previous menu.

## Language

You can set your radio display to be in your required language.

#### Procedure:

- 1 sok to access the menu.
- 2 ♠ or ▼ to Utilities and press <sup>■ oK</sup> to select.
- 3 ♠ or ▼ to Language and press (50) to select.

## ☐ Turning the Voice Operating Transmission (VOX) Feature On or Off

This feature allows you to initiate a hands-free voice activated call on a programmed channel. The radio automatically transmits, for a programmed period, whenever the microphone on the VOX-capable accessory detects voice.

**NOTE:** You may need to turn off the radio and power it up again after detaching the VOX-capable microphone from it to allow the radio to switch to another valid accessory.

Pressing the **PTT** button during radio operation disables VOX. To re-enable VOX, do **one** of the following:

- Turn the radio off and power it on again, OR
- Change the channel via the Scroll Up/Down buttons, OR
- Change the channel via the Volume/Channel Knob, OR
- Follow the procedure below.

**NOTE:** Turning this feature on or off is limited to radios with this function enabled. Check with your dealer or system administrator for more information.

#### Procedure:

Press the programmed **VOX** button to toggle the feature on or off.

#### OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 ♠ or ▼ to Utilities and press ® ok to select.
- 3 ♠ or 🔻 to Radio Settings and press 🖼 ok to select.
- Press <sup>■ ok</sup> to enable VOX. The display shows ✓ beside Enabled.

#### OR

Press ≅ ok to disable VOX. The ✓ disappears from beside Fnabled.

If the Talk Permit Tone feature is enabled (see Turning the Talk Permit Tone On or Off on page 68), use a trigger word to initiate the call. Wait for the Talk Permit Tone to finish before speaking clearly into the microphone.

## ☐ Turning the Option Board Feature(s) On or Off

Option board capabilities within each channel and can be assigned to programmable buttons. Refer to your dealer or system administrator for more information.

#### Procedure:

Press the programmed **Option Board Feature** button to toggle the feature on or off.

## Identifying Cable Type

You can select the type of cable your radio uses.

#### Procedure:

- 1 sok to access the menu.
- 2 or to Utilities and press sok to select.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 4 or to Cable Type and press to select.
- 5 The current cable type is indicated by a ✓.

#### Voice Announcement

This feature enables the radio to audibly indicate the current Zone or Channel the user has just assigned, or programmable button press. This audio indicator can be customized per customer requirements. This is typically useful when the user is in a difficult condition to read the content shown on the display.

Use the following features to toggle Voice Announcement on or off.

#### Procedure:

Press the programmed Voice Announcement button.

#### OR

Follow the procedure below.

- 1 sok to access the menu.
- 3 or to Voice Announcement.
- 4 Press <sup>■ ox</sup> to enable Voice Announcement. The display shows ✓ beside Enabled.

#### OR

Press <sup>150 oK</sup> to disable Voice Announcement. The ✓ disappears from beside Enabled.

Call Forwarding

You can enable your radio to automatically forward voice calls to another radio.

#### Procedure:

- 1 sok to access the menu.
- 2 ♠ or ▼ to Utilities and press ™ to select.
- 3 ♠ or ▼ to Call Forward.
- 4 Press <sup>■ of</sup> to enable Call Forwarding. The display shows ✓ beside Enabled.

OR

Press (sold) to disable Call Forwarding. The ✓ disappears from beside Enabled.

## Menu Timer

Set the period of time your radio stays in the menu before it automatically switches to the Home screen.

#### Procedure:

- 1 sok to access the menu.
- 2 ▲ or ▼ to Utilities and press ®ok to select.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 4 or to Menu Timer and press to select.

## Analog Mic AGC

This feature controls the your radio's microphone gain automatically while transmitting on an analog system. It suppresses loud audio or boosts soft audio to a preset value in order to provide a consistent level of audio.

#### Procedure:

- 1 sok to access the menu.

- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 4 ♠ or ▼ to Analog Mic AGC.
- 5 Press <sup>■ ok</sup> to enable Analog Mic AGC. The display shows ✓ beside Enabled.

#### OR

Press solution of the state of the solution o

## Digital Mic AGC

This feature controls the your radio's microphone gain automatically while transmitting on an digital system. It suppresses loud audio or boosts soft audio to a preset value in order to provide a consistent level of audio.

#### Procedure:

- 1 sok to access the menu.
- 2 ♠ or ▼ to Utilities and press ® ok to select.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 4 ♠ or ▼ to Digital Mic AGC.
- 5 Press <sup>■ ok</sup> to enable Digital Mic AGC. The display shows ✓ beside Enabled.

#### OR

Press solution of the state of the solution o

## Intelligent Audio

Your radio automatically adjusts its audio volume to overcome current background noise in the environment, inclusive of both stationary and non-stationary noise sources. This feature is a Receive-only feature and does not affect Transmit audio.

NOTE: This feature is not applicable during a Bluetooth session.

Use the following features to toggle Intelligent Audio on or off.

#### Procedure:

Press the programmed **Intelligent Audio** button to toggle the feature on or off.

## OR

Follow the procedure below.

- 1 sok to access the menu.
- 2 ♠ or ▼ to Utilities and press ® ok to select.
- 3 ♠ or ▼ to Radio Settings and press 🕬 to select.
- 4 or to Intelligent Audio.
- 5 Press <sup>□ ox</sup> to enable Intelligent Audio. The display shows ✓ beside Enabled.

#### OR

Press some to disable Intelligent Audio. The ✓ disappears from beside Fnabled

See Accessories on page 97 for recommended Bluetooth-enabled audio accessories with in-built Automatic Volume Control for similar performance.

## 

Global Positioning System (GPS) is a satellite navigation system that determines the radio's precise location.

#### Procedure:

Press the programmed GPS button to toggle the feature on or off.

#### OR

- **™** to access the menu.
- or ▼ to Utilities and press ® ok to select.
- 📤 or 💌 to Radio Settings and press 🖽 oK to select.
- 📤 or 💌 to GPS.
- Press <sup>■ oK</sup> to enable GPS. The display shows ✓ beside Enabled.

#### OR

Press <sup>⊞ oK</sup> to disable GPS. The ✓ disappears from beside Fnabled.

See Checking the GPS Information on page 78 for details on retrieving GPS information.

## Accessing General Radio Information

Your radio contains information on the following:

- Radio Alias and ID
- Firmware and Codeplug Versions
- GPS Information

NOTE: Press (5) at any time to return to the previous screen or long press (5 A) to return to the Home screen. The radio exits the current screen once the inactivity timer expires.

Checking the Radio Alias and ID



Displays the ID of your radio.

#### Procedure:

Press the programmed Radio Alias and ID button to check your radio alias and ID. You hear a positive indicator tone.

#### OR

Follow the procedure below.

- <sup>⊞ ok</sup> to access the menu.
- or 
   to Utilities and press to select.
- or 
   to Radio Info and press 
   to select.
- or to My Number and press ok to select.

5 The first line of the display shows the radio alias. The second line of the display shows the radio ID.

You can also press the programmed **Radio Alias and ID** button to return to the previous screen.

## Checking the Firmware Version and Codeplug Version

Displays the firmware and codeplug versions on your radio.

#### Procedure:

- 1 sok to access the menu.
- 2 ♠ or ▼ to Utilities and press <sup>■ oK</sup> to select.
- 3 ♠ or ▼ to Radio Info and press ® ok to select.
- 4 or to Versions and press to select.

The display shows the current firmware and codeplug versions.

## Checking the GPS Information

Displays the GPS information on your radio, such as values of:

- Latitude
- Longitude
- Altitude
- Direction
- Velocity
- Horizontal Dilution of Precision (HDOP)
- Satellites
- Version

#### Procedure:

- 1 sok to access the menu.
- 2 or to Utilities and press to select.
- 3 ♠ or ▼ to Radio Info and press ® ok to select.
- 4 ♠ or ▼ to GPS Info and press ® ok to select.
- 6 The display shows the requested GPS information.

See GPS on page 76 for details on GPS.

## Keypad Microphone Features

The following additional features for your radio are available with a keypad-enabled microphone:

Using the Keypad	page 80
Additional Advanced Features	page 81
Text Messaging	page 88
Dual Tone Multi Frequency (DTMF)	page 92
Security	page 93
Password Lock Features	page 94
Front Panel Configuration (FPC)	nage 06

## Using the Keypad

You can use the 3 x 4 alphanumeric keypad on the 4-Way Navigation Keypad Microphone (Motorola part number RMN5127\_) to access your radio's features. You can use the keypad to enter subscriber aliases or IDs, and text messages. Many characters require that you press a key multiple times. The table below shows the number of times a key needs to be pressed to generate the required character.

		Number of Times Key is Pressed											
Key	1	2	3	4	5	6	7	8	9	10	11	12	13
1,.?	1		,	?	!	@	&	í	%	-	:	*	#
2 ABC	Α	В	С	2									
DEF 3	D	Е	F	3									
4 GHI	G	Н	I	4									
(5 JKL)	J	K	L	5									
MNO 6	M	N	0	6									
(7 <sub>PQRS</sub> )	Р	Q	R	S	7								
<b>8</b> TUV	Т	U	V	8									
(wxyz 9)	W	Х	Y	Z	9								
<b>0</b> �	0	NOTE: Press to enter "0" and long press to activate the CAPS lock. Another long press to turn off the CAPS lock.											
*~	* or del	NOTE: Press during text entry to delete the character. Press during numeric entry to enter a "*".											
<b>*</b> -#	# or space	or space NOTE: Press during text entry to insert a space. Press during numeric entry to enter a "#".											

## Turning Keypad Tones On or Off

You can enable and disable Keypad Tones if needed.

#### Procedure:

- 1 sok to access the menu.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 4 ♠ or ▼ to Tones/Aler ts and press ® ok to select.
- 6 Press <sup>■ ox</sup> to enable keypad tones. The display shows ✓ beside Enabled.

#### OR

Press solution of the solutio

## Additional Advanced Features

## Selecting a Zone by Alias Search

#### Procedure:

- 1 Box to access the menu.
- 3 The current zone is displayed and indicated by a ✓.
- 4 ♠ or ▼ to the required zone and proceed to Step 7.

#### OR

Key in the first character of the required zone.

5 A blinking cursor appears.

Use the keypad to type the required zone.

- Press 

  to move one space to the left.
- Press to move one space to the right.

Press the \*DEL key to delete any unwanted characters.

6 The first line of the display shows the characters you keyed in. The next lines of the display show the shortlisted search results.

The alias search is case-insensitive. If there are two or more zones with the same name, the radio displays the zone that is listed first in the zone list.

7 Press <sup>■ ok</sup> to select.

- The display shows (Zone) Selected momentarily and returns to the selected zone screen.
- Initiating a Radio Check by Manual Dial

#### Procedure:

- **™** to access the menu.
- or 
   to Contacts and press 
   sow to select.
- Or ▼ to Manual Dial and press ® ok to select.
- If there was previously dialed ID, the ID appears along with a blinking cursor. Use the keypad to edit the ID. Press or to select.

#### OR

Key in the subscriber alias or ID and press <sup>■ OK</sup>.

- or 
   to Radio Check and press 
   to select.
- The display shows transitional mini notice, indicating the request is in progress. The green LED lights up.
- Wait for acknowledgement.
- If successful, a positive indicator tone sounds and the display shows positive mini notice.

#### OR

If unsuccessful, a negative indicator tone sounds and the display shows negative mini notice.

Radio returns to the subscriber alias or ID screen.

If the (5 \*) button is pressed when the radio is waiting for acknowledgement, a tone sounds, and the radio terminates all retries and exits Radio Check mode.

Initiating Remote Monitor by Manual Dial



#### Procedure:

- **™** to access the menu.
- or to Contacts and press ok to select.
- or ▼ to Manual Dial and press to select.
- If there was previously dialed ID, the ID appears along with a blinking cursor. Use the keypad to edit the ID. Press of to select.

#### OR

Key in the subscriber alias or ID and press <sup>■ 0K</sup>.

- or ▼ to Remote Mon. and press ® ok to select.
- The display shows transitional mini notice, indicating the request is in progress. The green LED lights up.
- Wait for acknowledgment.
- If successful, a positive indicator tone sounds and the display shows positive mini notice. Your radio starts playing audio from the monitored radio for a programmed duration and display shows Rem. Monitor.

Once the timer expires, the radio sounds an alert tone and the LED turns off.

#### OR

If unsuccessful, the radio sounds a negative indicator tone the display shows negative mini notice.

## Making a Private Call by Manual Dial



#### Procedure:

- <sup>⊞ oK</sup> to access the menu.
- or to Contacts and press to select. The entries are alphabetically sorted.
- or 
   to Manual Dial and press 
   or to select.
- If there is a previously dialed subscriber ID, the ID appears along with a blinking cursor.

Use the keypad to edit the subscriber ID.

#### OR

Use the keypad to enter a new subscriber ID.

- Press the PTT button to make the call. The green LED lights up. The display shows the destination alias.
- Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.
- Release the PTT button to listen. When the target radio responds, the green LED blinks.

If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the target radio releases the PTT button, indicating the channel is free for you to respond. Press the PTT button to respond.

#### OR

If there is no voice activity for a programmed period of time, the call ends.

- You hear a short tone. The display shows Call Ended.
- Making a Group, Private or All Call with the Programmable Number Key 🙉

The Programmable Number Key feature allows you to make a Group, Private or All Call to a predefined alias or ID easily. This feature can be assigned to all the available number keys on a keypad microphone.

You can **ONLY** have one alias or ID assigned to a number key, but you can have more than one number key associated to an alias or ID.

#### Procedure:

When you are on the Home screen:

Long press the programmed number key to make a Group, Private or All Call to the predefined alias or ID. If the number key is not associated to an entry, a negative indicator tone sounds.

- Press the PTT button to make the call. The green LED lights up. The Group/Private Call icon appears in the top right corner. The first text line shows the caller alias. The second text line displays either the call status for a Private Call or R11 Call for All Call.
- Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone.

OR

- For Group Call only: Wait for the PTT Sidetone to finish (if enabled) and speak clearly into the microphone.
- 4 Release the PTT button to listen. When the target radio responds, the green LED blinks. The display shows the destination alias.
- If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the target radio releases the PTT button, indicating the channel is free for you to respond. Press the PTT button to respond.

OR

If there is no voice activity for a predetermined period of time, the call ends.

6 Radio returns to the screen you were on prior to initiating the call.

For a Private Call, you hear a short tone when the call ends. See **Assigning an Entry to a Programmable Number Key** on page 36 for details on assigning an entry to a number key on the keypad. You can also use alias or alphanumeric search to retrieve the required subscriber alias.

This feature is only applicable while in Contacts.

#### Procedure:

- 1 sok to access the menu.
- 2 or to Contacts and press to select. The entries are alphabetically sorted.
- 3 Key in the first character of the required alias.
- A blinking cursor appears.
   Use the keypad to type the required alias.
  - Press ◀ to move one space to the left.
  - Press ▶ to move one space to the right.

    Press the \*DEL key to delete any unwanted characters.
- 5 The first line of the display shows the characters you keyed in. The next lines of the display show the shortlisted search results.
  - The alias search is case-insensitive. If there are two or more aliases with the same name, the radio displays the alias that is listed first in the Contacts list.

- 6 Press the **PTT** button to make the call. The green LED lights up. The first line displays the target radio's ID.
- 7 Wait for the Talk Permit Tone to finish (if enabled) and speak clearly into the microphone
- 8 Release the PTT button to listen. When the target radio responds, the green LED blinks. The display shows the destination alias.
- 9 If the Channel Free Indication feature is enabled, you hear a short alert tone the moment the target radio releases the PTT button, indicating the channel is free for you to respond. Press the PTT button to respond.

#### OR

If there is no voice activity for a programmed period of time, the call ends.

10 You hear a short tone. The display shows Call Ended.

NOTE: Press button or to exit alias search.

## ☐ Viewing an Entry in the Scan List by Alias Search Procedure:

- 1 sok to access the menu.
- 2 or to Scan and press sok to select.
- 3 ♠ or ▼ to Scan List and press ® ok to select.
- 4 Key in the first character of the required alias.

- 5 A blinking cursor appears.
  - Use the keypad to type the required alias.
  - Press ◀ to move one space to the left.
  - Press ▶ to move one space to the right.
  - Press the \*DEL key to delete any unwanted characters.
- The first line of the display shows the characters you keyed in. The next lines of the display show the shortlisted search results.

The alias search is case-insensitive. If there are two or more entries with the same name, the radio displays the entry that is listed first in the scan list.

- Editing the Scan List by Alias Search
- Adding a New Entry to the Scan List

#### Procedure:

- 1 sok to access the menu.
- 2 or to Scan and press to select.
- 3 ♠ or ▼ to Scan List and press <sup>■ oK</sup> to select.
- 5 Key in the first character of the required alias.
- A blinking cursor appears.
   Use the keypad to type the required alias.

Press ◀ to move one space to the left.

Press to move one space to the right.

Press the \*DEL key to delete any unwanted characters.

7 The first line of the display shows the characters you keyed in. The next lines of the display show the shortlisted search results.

The alias search is case-insensitive. If there are two or more aliases with the same name, the radio displays the alias that is listed first in the list.

- 8 Press ox to select.
- 10 The display shows positive mini notice, followed immediately by Add Another?.
- 11 or to Yes and press to select, to add another entry, and repeat Steps 5 to 9.

OR

or to No and press to select to save the current list.

Deleting an Entry from the Scan List

#### Procedure:

1 to access the menu.

- 2 or to Scan and press ok to select.
- 3 ♠ or ▼ to Scan List and press <sup>■ oK</sup> to select.
- 4 Key in the first character of the required alias.
- 5 A blinking cursor appears.

Use the keypad to type the required alias.

Press ◀ to move one space to the left.

Press beto move one space to the right.

Press the \*DEL key to delete any unwanted characters.

The first line of the display shows the characters you keyed in. The next lines of the display show the shortlisted search results.

The alias search is case-insensitive. If there are two or more entries with the same name, the radio displays the entry that is listed first in the scan list.

- 7 Press <sup>■ ok</sup> to select.
- At Delete Entry?, or to Yes and press to select, to delete the entry. The display shows positive mini notice.

#### OR

or to No and press to select to return to the previous screen.

10 Repeat Steps 4 to 9 to delete other entries.

After deleting all required aliases or IDs, long press (5 %) to return to the Home screen.

## Setting and Editing Priority for an Entry in the Scan List

#### Procedure:

- 1 sok to access the menu.
- 2 or to Scan and press of to select.
- 3 ♠ or ▼ to Scan List and press ® ok to select.
- 4 Key in the first character of the required alias.
- 5 A blinking cursor appears.

Use the keypad to type the required alias.

- Press 

  to move one space to the left.
- Press beto move one space to the right.

Press the \*DEL key to delete any unwanted characters.

6 The first line of the display shows the characters you keyed in. The next lines of the display show the shortlisted search results.

The alias search is case-insensitive. If there are two or more entries with the same name, the radio displays the entry that is listed first in the scan list.

- 7 Press sok to select.

- **10** The display shows positive mini notice before returning to the previous screen.
- 11 The priority icon appears left of the member's name.

There is no priority icon if priority is set to None.

## Storing an Alias or ID from a Call List

#### Procedure:

- 1 sok to access the menu.
- 3 ♠ or ▼ to the required list and press not to select.
- $\bullet$  or lacktriangle to Store and press lacktriangle to select.
- A blinking cursor appears. If needed, key in the alias for that ID and press (SO).
- 7 The display shows positive mini notice.

You can also store an ID without an alias.

## Making a Call Alert by Manual Dial



#### Procedure:

- **ok** to access the menu.
- or 
   to Contacts and press 
   for to select.
- or 
   to Manual Dial and press 
   or to select.
- A blinking cursor appears. Enter the subscriber ID you want to send the Call Alert to and press ...
- Or ▼ to Call Alent and press ® ok to select.
- The display shows Call Alert and the subscriber alias or ID, indicating that the Call Alert has been sent.
- The green LED lights up when your radio is sending the Call Alert.
- If the Call Alert acknowledgement is received, the display shows positive mini notice.

#### OR

If the Call Alert acknowledgement is not received, the display shows negative mini notice.

## Text Messaging (n)



The **maximum** length of characters for a text message, including the subject line (seen when receiving message from an e-mail application), is 140, whereas to receive would be a maximum of 280 characters.

The radio exits the current screen once the inactivity timer expires. Any text message in the writing/editing screen is automatically saved to the Drafts folder.

NOTE: Long press (5 a) at any time to return to the Home screen.

## Writing and Sending a Text Message

#### Procedure:

Press the programmed Text Message button and proceed to Step 3.

#### OR

Follow the procedure below.

- to access the menu.
- or to Messages and press to select.
- or to Compose and press to select.
- Use the keypad to type your message. Press 

  to move one space to the left.

Press ▶ or the # key to move one space to the right.

Press the \* key to delete any unwanted characters.

- Press once message is composed.

#### OR

or to Manual Dial and press sok to select. Key in the subscriber ID and press sok.

#### OR

- to edit the message.
- again to discard the message or save it to the Drafts folder.
- 7 The display shows transitional mini notice, confirming your message is being sent.
- If the message is sent, a tone sounds and the display shows positive mini notice.

#### OR

If the message is not sent, a low tone sounds and the display shows negative mini notice.

If the text message fails to send, the radio returns you to the Resend option screen (see **Managing Fail-to-Send Text Messages** on page 51 and page 91).

## Replying to Text Messages from the Inbox

#### Procedure:

Press the programmed **Text Message** button and proceed to Step 3.

#### OR

Follow the procedure below.

- 1 sok to access the menu.
- or to Messages and press on to select.

- 5 Press <sup>■ oK</sup> once more to access additional options.
- 6 or to Reply and press to select.

  A blinking cursor appears. Use the keypad to type your message.
  - Press ◀ to move one space to the left.
  - Press or the # key to move one space to the right.

    Press the \* key to delete any unwanted characters.
- 7 Press once message is composed.
- 8 The display shows transitional mini notice, confirming your message is being sent.

If the message is sent, a tone sounds and the display shows positive mini notice.

#### OR

If the message is not sent, a low tone sounds and the display shows negative mini notice.

If the text message fails to send, the radio returns you to the Resend option screen (see **Managing Fail-to-Send Text Messages** on page 51 and page 91).

**NOTE:** If a subject line is present (for messages received from an e-mail application), you cannot edit it.

## Editing a Quick Reply Message

#### Procedure:

Press the programmed **Text Message** button and proceed to Step 3.

#### OR

Follow the procedure below.

- 1 sok to access the menu.
- 3 ♠ or ▼ to Quick Reply and press 🖽 or to select.
- A blinking cursor appears. Use the keypad to edit the message.

Press ◀ to move one space to the left.

Press ▶ or the # key to move one space to the right. Press the \* key to delete any unwanted characters.

- 6 Press once message is composed.
- 7 The display shows transitional mini notice, confirming your message is being sent.
- 8 If the message is sent, a tone sounds and the display shows positive mini notice.

#### OR

If the message is not sent, a low tone sounds and the display shows negative mini notice.

If the text message fails to send, the radio returns you to the Resend option screen (see **Managing Fail-to-Send Text Messages** on page 51 and page 91).

## Accessing the Drafts Folder

You can save a text message to send it at a later time.

If a **PTT** button press or a mode change causes the radio to exit the text message writing/editing screen while you are in the process of writing or editing a text message, your current text message is automatically saved to the Drafts folder.

The most recent saved text message is always added to the top of the Drafts list. See *Managing Text Messages in the Drafts Folder* on page 51 for more information.

NOTE: Long press (5) at any time to return to the Home screen.

## Editing and Sending a Saved Text Message

#### Procedure:

- 1 Press again while viewing the message.
- 2 or  $\checkmark$  to Edit and press  $^{\blacksquare \text{OK}}$  to select.

A blinking cursor appears.

Use the keypad to edit your message.

Press ◀ to move one space to the left.

Press ▶ or the # key to move one space to the right.

Press the \*DEL key to delete any unwanted characters. Press some once message is composed.

3 ♠ or ▼ to the required alias or ID and press ok to select.

#### OR

or to Manual Dial and press sok to select. Key in the subscriber alias or ID and press sok.

- 4 The display shows transitional mini notice, confirming your message is being sent.
- 5 If the message is sent, a tone sounds and the display shows positive mini notice.

#### **OR**

If the message is not sent, a low tone sounds and the display shows negative mini notice.

If the text message fails to send, it is moved to the Sent Items folder and marked with a Send Failed icon.

## Managing Fail-to-Send Text Messages

if the message fails to send, the radio returns you to the Resend option screen.

## Forwarding a Text Message by Manual Dial

Select Forward to send the message to another subscriber/ group alias or ID.

#### Procedure:

- 1 or to Forward and press to select.
- 2 or to Manual Dial and press to select. Key in the subscriber ID and press or.
- 3 The display shows transitional mini notice, confirming your message is being sent.
- 4 If the message is sent, a tone sounds and the display shows positive mini notice.

#### OR

If the message is not sent, a low tone sounds and the display shows negative mini notice.

## Editing a Text Message

Select Edit to edit the message before sending it.

**NOTE:** If a subject line is present (for messages received from an e-mail application), you cannot edit it.

#### Procedure:

- 1 or to Edit and press of to select.
- 2 A blinking cursor appears beside the message. Use the keypad to edit your message.
  - Press ◀ to move one space to the left.
  - Press ▶ or the # key to move one space to the right.

    Press the \*DEL key to delete any unwanted characters.
- 3 Press once message is composed.

#### OR

- or to Manual Dial and press of to select. Key in the subscriber ID and press ok.
- 5 The display shows transitional mini notice, confirming your message is being sent.

6 If the message is sent, a tone sounds and the display shows positive mini notice.

#### OR

If the message is not sent, a low tone sounds and the display shows negative mini notice.

## Dual Tone Multi Frequency (DTMF)

The Dual Tone Multi Frequency (DTMF) feature allows the radio to operate in a radio system with an interface to telephone systems.

#### Procedure:

To initiate a DTMF call.

- 1 Press and hold the **PTT** button.
- 2 Enter the desired number, \* or #.

You can turn off the DTMF tone by disabling all radio tones and alerts (see **Turning the Radio Tones/Alerts On or Off** on page 68).

## Security <a>6</a>

## Radio Disable via Manual Dial

#### Procedure:

- 1 sok to access the menu.
- 2 or to Contacts and press to select. The entries are alphabetically sorted.
- 3 ♠ or ▼ to Manual Dial and press ® ok to select. Key in the subscriber ID and press ® ok.
- 4 ▲ or ▼ to Radio Disable and press ®ok to select.
- 5 The display shows transitional mini notice, indicating the request is in progress. The green LED blinks.
- 6 Wait for acknowledgment.
- 7 If successful, a positive indicator tone sounds and the display shows positive mini notice.

#### **OR**

If unsuccessful, a negative indicator tone sounds and the display shows negative mini notice.

Do not press (5 ft) during the Radio Disable operation as you will not get an acknowledgement message.

#### 🗍 Radio Enable via Manual Dial

#### Procedure:

- to access the menu.
- 2 or to Contacts and press to select. The entries are alphabetically sorted.

- 5 The display shows Radio Enable and the subscriber alias or ID. The LED lights up solid green.
- 6 Wait for acknowledgment.
- If successful, the radio sounds a positive indicator tone and the display shows positive mini notice.

#### OR

If unsuccessful, the radio sounds a negative indicator tone and the display shows negative mini notice.

Do not press during the Radio Enable operation as you will not get an acknowledgement message.

#### Password Lock Features

If enabled, this feature allows you to access your radio via password upon powering up. You can use a keypad microphone or **Scroll Up/Down** buttons to enter password.

## Accessing the Radio from Password

#### Procedure:

Power up the radio.

- 1 You hear a continuous tone.
- Enter your current four-digit password via keypad microphone.

The display shows ● ● ● . Press to proceed.

#### OR

Enter your current four-digit password. Press ♠ or ▼ to edit each digit's numeric value and ⓑ ok to enter the selected digit and move to the next digit. Each digit changes to ●. Press ⓑ ok to confirm your selection.

You hear a positive indicator tone for every digit pressed.

Press ◀ to remove the each ● on the display. You hear a negative indicator tone, if you press ◀ when the line is empty, or if you press more than four digits.

3 If the password is correct:

Your radio proceeds to power up. See *Powering Up the Radio* on page 2.

#### OR

If the password is incorrect:

The display shows  $\mbox{Wrong Password}$ . Repeat Step 2.

#### OR

After the third incorrect password, the display shows Wrong Password and then, shows Radio Locked. A tone sounds and the yellow LED double blinks.

Your radio enters into locked state for 15 minutes, and responds to inputs from **On/Off** button and programmed **Backlight Auto** button only.

**NOTE:** The radio is unable to receive any call, including emergency calls, in locked state.

The use of **Emergency** footswitch cancels out password input to access the radio.

## Unlocking the Radio from Locked State

#### Procedure:

Wait for 15 minutes. Repeat Steps 1 to 3 in *Accessing the Radio from Password* on page 94.

#### OR

Power up the radio, if you have powered down the radio during locked state:

- 1 A tone sounds and the yellow LED double blinks. The display shows Radio Locked.
- Wait for 15 minutes. Repeat Accessing the Radio from Password on page 94.

Your radio restarts the 15 minutes timer for locked state when you power up.

## Turning the Password Lock On or Off

#### Procedure:

- 1 sok to access the menu.
- 2 ♠ or ▼ to Utilities and press ® ok to select.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 5 Enter a four-digit password.
  See Step 2 in Accessing the Radio from Password on page 94.

6 If the password is correct:

Press <sup>□ oK</sup> to enable Password Lock. The display shows ✓ beside Enabled.

#### OR

Press some to disable Password Lock. The ✓ disappears from beside Enabled.

#### OR

If the password is incorrect:

The display shows Wrong Password and automatically returns to the previous menu.

## Changing the Password

#### Procedure:

- 1 sok to access the menu.
- 3 ♠ or ▼ to Radio Settings and press ® ok to select.
- 4 ♠ or ▼ to Passwd Lock and press 🕬 to select.
- 5 Enter your current four-digit password via keypad microphone.

See Step 2 in *Accessing the Radio from Password* on page 94.

- 6 If the password is correct:
  - or 
     to Change Pwd and press 
     to select.

#### OR

If the password is incorrect:

The display shows Wrong Password and automatically returns to the previous menu.

- 7 Enter a new four-digit password via keypad microphone. See Step 2 in Accessing the Radio from Password on page 94.
- Re-enter the new four-digit password. See Step 2 in Accessing the Radio from Password on page 94.
- If both of the new password inputs match:
   The display shows Password Changed.
   OR
   If both of the new password inputs do not match:
- 10 The screen automatically returns to the previous menu.

The display shows Passwords Do Not Match.

## Front Panel Configuration (FPC)

Your radio is able to customize certain feature parameters to enhance the use of your radio.

## Entering FPC Mode

#### Procedure:

- 1 sok to access the menu.
- 2 or to Utilities and press sok to select.
- 3 ♠ or ▼ to Program Radio and press oK to select.

NOTE: Long press (5-8) at any time to return to the Home screen.

## Editing FPC Mode Parameters

Use the following buttons as required while navigating through the feature parameters.

 $\triangle$ ,  $\nabla$ ,  $\Phi$ ,  $\Phi$  – Scroll through options, increase/decrease values, or navigate vertically

Select the option or enter a sub-menu

Short-press to return to previous menu or to exit the selection screen. Long-press to return to Home screen.

## Accessories

Your radio is compatible with the accessories listed in this chapter. Contact your dealer for details.

Antennas page 97
Audio page 98
Cables page 98
Desktop Accessoriespage 99
Mounting Kitspage 99
Speakers page 99
Miscellaneous Accessories page 99

#### Antennas

- VHF, 136 144 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (HAD4006)
- VHF, 146 150.8 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (HAD4007\_)
- VHF, 150.8 162 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (HAD4008)
- VHF, 162 174 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (HAD4009)
- VHF, 132 174 MHz, 3.0 dB Gain, Through-Hole Mount, Mini-U (HAD4022 )

- UHF, 403 430 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (HAE4002\_)
- UHF, 450 470 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (HAE4003\_)
- UHF, 403 527 MHz, 2.0 dB Gain, Through-Hole Mount, Mini-U (HAE6022 )
- UHF, 406 420 MHz, 3.5 dB Gain, Through-Hole Mount, Mini-U (HAE4010\_)
- UHF, 450 470 MHz, 3.5 dB Gain , Through-Hole Mount, Mini-U (HAE4011 )
- UHF, 445 470 MHz, 5.0 dB Gain, Through-Hole Mount, Mini-U (with base) (RAE4004 RB)
- Combination GPS/VHF, 136 144 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (RAD4214\_)
- Combination GPS/VHF, 146 150.8 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (RAD4215\_)
- Combination GPS/VHF, 150.8 162 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (RAD4216)
- Combination GPS/VHF, 162 174 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (RAD4217\_)
- Combination GPS/VHF, 146 172 MHz, 3.0 dB Gain, Through-Hole Mount, Mini-U (RAD4218)
- Combination GPS/UHF, 403 430 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (PMAE4030)

- Combination GPS/UHF, 403 527 MHz, 2.0 dB Gain, Through-Hole Mount, Mini-U (HAE6019)
- Combination GPS/UHF, 406 420 MHz, 3.5 dB Gain, Through-Hole Mount, Mini-U (PMAE4032\_)
- Combination GPS/UHF, 450 470 MHz, 1/4 Wave, Through-Hole Mount, Mini-U (PMAE4031)
- Combination GPS/UHF, 450 470 MHz, 3.5 dB Gain, Through-Hole Mount, Mini-U (PMAE4033\_)
- Combination GPS/UHF, 450 470 MHz, 5.0 dB Gain, Through-Hole Mount, Mini-U (PMAE4034\_)
- Fixed Mount GPS Active Antenna (PMAN4000\_)
- Window Mount GPS Active Antenna (PMAN4001)
- Magnetic Mount GPS Active Antenna (PMAN4002 )

## Audio

- Telephone Style Handset (HMN4098\_)
- Desktop Microphone (RMN5050\_)
- Compact Microphone (RMN5052\_)
- IMPRES 4-Way Navigation Keypad Microphone (RMN5127\_)
- Heavy Duty Microphone with Enhanced Audio (RMN5053)
- Visor Microphone with Enhanced Audio (RMN5054\_)

- Operations Critical Wireless earpiece, 12" Cable (NNTN8125\_)
- Operations Critical Wireless earpiece, 9.5" Cable (NNTN8126 )
- Operations Critical Wireless Push-to-Talk POD (NNTN8127\_)
- HK200 Bluetooth Headset (89409N)

#### Cables

- Power Cable to Battery, 10-foot (3-meter) Cable, 15 amp (1 – 25 Watt) (HKN4137\_)
- Power Cable to Battery, 10-foot (3-meter) Cable, 20 amp (1 – 45 Watt) (HKN4191\_)
- Power Cable to Battery, 20-foot (6-meter) Cable, 20 amp (1 – 45 Watt) (HKN4192 )
- Mobile and Repeater Rear Accessory Connector Universal Cable (PMKN4018\_)
- Ignition Sense Cable (RKN4136 )
- Mobile Mic Extension Cable, 10 feet (PMKN4033 )
- Mobile Mic Extension Cable, 20 feet (PMKN4034 )

## Desktop Accessories

- Desktop Tray without Speaker (GLN7318\_)
- Desktop Tray with Speaker (RSN4005\_)
- US Line Cord (3060665A04)
- Switchmode Power Supply 1–25 Watt Models (GPN6145\_)
- Radio Power Cable for GPN6145\_ (GKN6266\_)
- Power Supply and Cable (HPN4007\_)
- Hardware Kit for Rear Accessory Connector (PMLN5072)

## Mounting Kits

- In Dash (DIN) Mounting Kit (RLN6465\_)
- Low Profile Trunnion Kit (RLN6466 )
- High Profile Trunnion Kit (RLN6467)
- Key Lock Trunnion Kit (RLN6468\_)

## Speakers

- 13-Watt External Speaker (RSN4002\_)
- 7.5-Watt External Speaker (RSN4003\_)
- 5-Watt External Speaker (RSN4004\_)

## Miscellaneous Accessories

- PL259/Mini-U Antenna Adapter, 8-foot (2.4-meter) Cable (HKN9557)
- Microphone Hang Up Clip (All Microphones) (HLN9073\_)
- Universal Microphone Hang Up Clip (All Microphones) (HLN9414\_)
- Push Button PTT (RLN5926\_)
- Emergency Footswitch (RLN5929\_)

# Appendix: Maritime Radio Use in the VHF Frequency Range

## Special Channel Assignments

## Emergency Channel

If you are in imminent and grave danger at sea and require emergency assistance, use **VHF Channel 16** to send a distress call to nearby vessels and the United States Coast Guard. Transmit the following information, in this order:

- 1 "MAYDAY, MAYDAY, MAYDAY."
- 2 "THIS IS \_\_\_\_\_, CALL SIGN

State the name of the vessel in distress 3 times, followed by the call sign or other identification of the vessel, stated 3 times.

3 Repeat "MAYDAY" and the name of the vessel.

4 "WE ARE LOCATED AT

State the position of the vessel in distress, using any information that will help responders to locate you, e.g.:

- latitude and longitude
- bearing (state whether you are using true or magnetic north)
- distance to a well-known landmark
- · vessel course, speed or destination
- 5 State the nature of the distress.
- 6 Specify what kind of assistance you need.
- 7 State the number of persons on board and the number needing medical attention, if any.
- 8 Mention any other information that would be helpful to responders, such as type of vessel, vessel length and/or tonnage, hull color, etc.
- 9 "OVER."
- **10** Wait for a response.
- 11 If you do not receive an immediate response, remain by the radio and repeat the transmission at intervals until you receive a response. Be prepared to follow any instructions given to you.

#### Non-Commercial Call Channel

For non-commercial transmissions, such as fishing reports, rendezvous arrangements, repair scheduling, or berthing information, use **VHF Channel 9**.

## Operating Frequency Requirements

A radio designated for shipboard use must comply with Federal Communications Commission Rule Part 80 as follows:

- on ships subject to Part II of Title III of the Communications Act, the radio must be capable of operating on the 156.800 MHz frequency
- on ships subject to the Safety Convention, the radio must be capable of operating:
  - in the simplex mode on the ship station transmitting frequencies specified in the 156.025 157.425 MHz frequency band, and
  - in the semiduplex mode on the two frequency channels specified in the table below.

**NOTE:** Simplex channels 3, 21, 23, 61, 64, 81, 82, and 83 cannot be lawfully used by the general public in US waters.

Additional information about operating requirements in the Maritime Services can be obtained from the full text of FCC Rule Part 80 and from the US Coast Guard.

Table A-1: VHF Marine Channel List

Channel Number	Frequen	Frequency (MHz)				
	Transmit	Receive				
1	156.050	160.650				

Table A-1: VHF Marine Channel List (Continued)

Channel	Frequency (MHz)				
Number	Transmit	Receive			
2	156.100	160.700			
*	156.150	160.750			
4	156.200	160.800			
5	156.250	160.850			
6	156.300	_			
7	156.350	160.950			
8	156.400	_			
9	156.450	156.450			
10	156.500	156.500			
11	156.550	156.550			
12	156.600	156.600			
13**	156.650	156.650			
14	156.700	156.700			
15**	156.750	156.750			
16	156.800	156.800			
17**	156.850	156.850			
18	156.900	161.500			
19	156.950	161.550			
20	157.000	161.600			
*	157.050	161.650			
22	157.100	161.700			
*	157.150	161.750			

Table A-1: VHF Marine Channel List (Continued)

Channel	Frequency (MHz)				
Number	Transmit	Receive			
24	157.200	161.800			
25	157.250	161.850			
26	157.300	161.900			
27	157.350	161.950			
28	157.400	162.000			
60	156.025	160.625			
*	156.075	160.675			
62	156.125	160.725			
63	156.175	160.775			
*	156.225	160.825			
65	156.275	160.875			
66	156.325	160.925			
67**	156.375	156.375			
68	156.425	156.425			
69	156.475	156.475			
71	156.575	156.575			
72	156.625	_			
73	156.675	156.675			
74	156.725	156.725			
75	***	***			
76	***	***			
77**	156.875	_			

**Table A-1: VHF Marine Channel List (Continued)** 

		•			
Channel	Frequency (MHz)				
Number	Transmit	Receive			
78	156.925	161.525			
79	156.975	161.575			
80	157.025	161.625			
*	157.075	161.675			
*	157.125	161.725			
*	157.175	161.775			
84	157.225	161.825			
85	157.275	161.875			
86	157.325	161.925			
87	157.375	161.975			
88	157.425	162.025			

<sup>\*</sup> Simplex channels 3, 21, 23, 61, 64, 81, 82, and 83 cannot be *lawfully used* by the general public in US waters.

**NOTE:** A – in the Receive column indicates that the channel is transmit only.

<sup>\*\*</sup> Low power (1 W) only

<sup>\*\*\*</sup> Guard band

## **Limited Warranty**

#### **MOTOROLA COMMUNICATION PRODUCTS**

## I. WHAT THIS WARRANTY COVERS AND FOR HOW LONG:

MOTOROLA SOLUTIONS INC. ("MOTOROLA") warrants the MOTOROLA manufactured Communication Products listed below ("Product") against defects in material and workmanship under normal use and service for a period of time from the date of purchase as scheduled below:

XPR Series Digital Mobile Radios	Two (2) Years
Product Accessories	One (1) Year

MOTOROLA, at its option, will at no charge either repair the Product (with new or reconditioned parts), replace it (with a new or reconditioned Product), or refund the purchase price of the Product during the warranty period provided it is returned in accordance with the terms of this warranty. Replaced parts or boards are warranted for the balance of the original applicable warranty period. All replaced parts of Product shall become the property of MOTOROLA.

This express limited warranty is extended by MOTOROLA to the original end user purchaser only and is not assignable or transferable to any other party. This is the complete warranty for the Product manufactured by MOTOROLA. MOTOROLA assumes no

obligations or liability for additions or modifications to this warranty unless made in writing and signed by an officer of MOTOROLA.

Unless made in a separate agreement between MOTOROLA and the original end user purchaser, MOTOROLA does not warrant the installation, maintenance or service of the Product.

MOTOROLA cannot be responsible in any way for any ancillary equipment not furnished by MOTOROLA which is attached to or used in connection with the Product, or for operation of the Product with any ancillary equipment, and all such equipment is expressly excluded from this warranty. Because each system which may use the Product is unique, MOTOROLA disclaims liability for range, coverage, or operation of the system as a whole under this warranty.

#### II. GENERAL PROVISIONS:

This warranty sets forth the full extent of MOTOROLA'S responsibilities regarding the Product. Repair, replacement or refund of the purchase price, at MOTOROLA's option, is the exclusive remedy. THIS WARRANTY IS GIVEN IN LIEU OF ALL OTHER EXPRESS WARRANTIES. IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL MOTOROLA BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, FOR ANY LOSS OF USE, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS, LOST PROFITS OR SAVINGS OR OTHER INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR

INABILITY TO USE SUCH PRODUCT, TO THE FULL EXTENT SUCH MAY BE DISCLAIMED BY LAW.

#### **III. STATE LAW RIGHTS:**

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION OR EXCLUSIONS MAY NOT APPLY

This warranty gives specific legal rights, and there may be other rights which may vary from state to state.

#### IV. HOW TO GET WARRANTY SERVICE:

You must provide proof of purchase (bearing the date of purchase and Product item serial number) in order to receive warranty service and, also, deliver or send the Product item, transportation and insurance prepaid, to an authorized warranty service location. Warranty service will be provided by MOTOROLA through one of its authorized warranty service locations. If you first contact the company which sold you the Product (e.g., dealer or communication service provider), it can facilitate your obtaining warranty service. You can also call MOTOROLA at 1-800-927-2744 US/Canada.

#### V. WHAT THIS WARRANTY DOES NOT COVER:

- A) Defects or damage resulting from use of the Product in other than its normal and customary manner.
- B) Defects or damage from misuse, accident, water, or neglect.

- C)Defects or damage from improper testing, operation, maintenance, installation, alteration, modification, or adjustment.
- D)Breakage or damage to antennas unless caused directly by defects in material workmanship.
- E) A Product subjected to unauthorized Product modifications, disassembles or repairs (including, without limitation, the addition to the Product of non-MOTOROLA supplied equipment) which adversely affect performance of the Product or interfere with MOTOROLA's normal warranty inspection and testing of the Product to verify any warranty claim.
- F) Product which has had the serial number removed or made illegible.
- G)Rechargeable batteries if:
  - (1) any of the seals on the battery enclosure of cells are broken or show evidence of tampering.
  - (2) the damage or defect is caused by charging or using the battery in equipment or service other than the Product for which it is specified.
- H)Freight costs to the repair depot.
- A Product which, due to illegal or unauthorized alteration of the software/firmware in the Product, does not function in accordance with MOTOROLA's published specifications or the FCC certification labeling in effect for the Product at the time the Product was initially distributed from MOTOROLA.
- J) Scratches or other cosmetic damage to Product surfaces that does not affect the operation of the Product.
- K) Normal and customary wear and tear.

#### VI. PATENT AND SOFTWARE PROVISIONS:

MOTOROLA will defend, at its own expense, any suit brought against the end user purchaser to the extent that it is based on a claim that the Product or parts infringe a United States patent, and MOTOROLA will pay those costs and damages finally awarded against the end user purchaser in any such suit which are attributable to any such claim, but such defense and payments are conditioned on the following:

- A) that MOTOROLA will be notified promptly in writing by such purchaser of any notice of such claim;
- B) that MOTOROLA will have sole control of the defense of such suit and all negotiations for its settlement or compromise; and
- C)should the Product or parts become, or in MOTOROLA's opinion be likely to become, the subject of a claim of infringement of a United States patent, that such purchaser will permit MOTOROLA, at its option and expense, either to procure for such purchaser the right to continue using the Product or parts or to replace or modify the same so that it becomes non-infringing or to grant such purchaser a credit for the Product or parts as depreciated and accept its return. The depreciation will be an equal amount per year over the lifetime of the Product or parts as established by MOTOROLA.

MOTOROLA will have no liability with respect to any claim of patent infringement which is based upon the combination of the Product or parts furnished hereunder with software, apparatus or devices not furnished by MOTOROLA, nor will MOTOROLA have any liability for the use of ancillary equipment or software not furnished by MOTOROLA which is attached to or used in connection with the Product. The foregoing states the entire liability of MOTOROLA with respect to infringement of patents by the Product or any parts thereof.

Laws in the United States and other countries preserve for MOTOROLA certain exclusive rights for copyrighted MOTOROLA software such as the exclusive rights to reproduce in copies and distribute copies of such MOTOROLA software. MOTOROLA software may be used in only the Product in which the software was originally embodied and such software in such Product may not be replaced, copied, distributed, modified in any way, or used to produce any derivative thereof. No other use including, without limitation, alteration, modification, reproduction, distribution, or reverse engineering of such MOTOROLA software or exercise of rights in such MOTOROLA software is permitted. No license is granted by implication, estoppel or otherwise under MOTOROLA patent rights or copyrights.

#### VII. GOVERNING LAW:

This Warranty is governed by the laws of the State of Illinois, U.S.A.



Motorola Solutions, Inc. 1303 East Algonquin Road Schaumburg, Illinois 60196 U.S.A.

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license.

All other trademarks are the property of their respective owners. © 2011, 2012 Motorola Solutions, Inc. All rights reserved. March 2012.

www.motorolasolutions.com/mototrbo





68009504001-B