

DE9 Pin:	Funct:	Mot Pin:	Funct:
1	DCD	--	--
2	RXD	4	TXD
3	TXD	5	RXD
4	DTR	--	--
5	SG	1	GND
6	DSR	--	--
7	RTS	11	CTS
8	CTS	10	RTS
9	RI	--	--
		13	SPKR-A
		26	SPKR-B
		14	JMP to 15
		15	JMP to 14
		25	IGN Sense

NOTE 1

NOTE 2

NOTE 3

NOTES

1. SPKR terminals are output from a balanced amp. NEVER connect either one to ground! It will damage or destroy the amp! Use an isolation transformer if the need exists for a grounded output.

2. Pins 14-15 on the Mot side are jumpered to disable automatic emergency transmission.

3. The radio should be able to power up with only the rear power cable. If it does not, try connecting Pin 25 on the Mot side to A+ (this can be changed in programming).