


SAMSUNG

USER'S MANUAL

Basic Phone

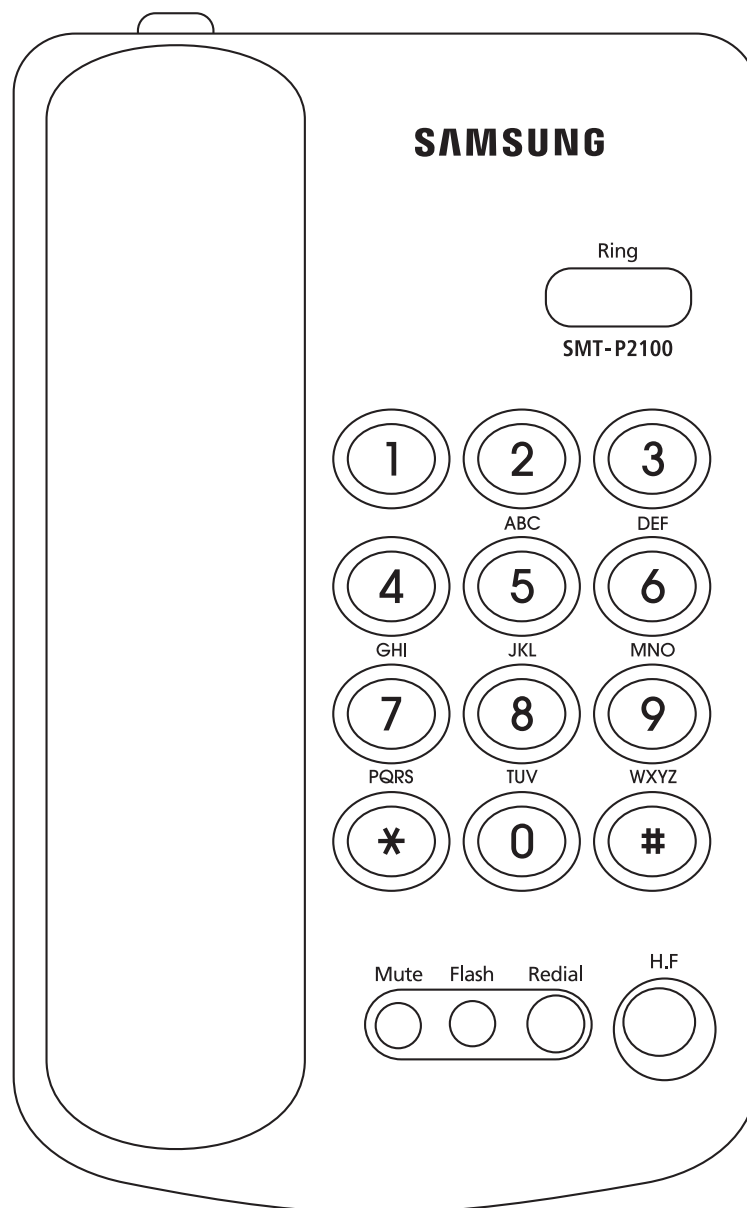

SMT-P2100

SMT-P2100 User Guide

The Samsung logo, consisting of the word "SAMSUNG" in white capital letters inside a dark oval.

GENERAL INTRODUCTION

Thank you for purchasing this telephone that adopts the up-to-the-minute integrated circuit, with superior craftwork and stable capability. Please read the manual carefully for proper use.

SAFETY INSTRUCTION


When using your telephone, please follow these basic safety precautions to reduce the risk of fire, electric shock or injury to persons.

1. Read and understand all instructions.
2. Follow all warnings and instructions.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water (for example, near a bath tub, kitchen sink or swimming pool).
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. Never spill liquid of any kind on the product.
7. To reduce the risk of electric shock, do not disassemble this product. If service or repair work is required, contact your qualified technician.
8. Do not use the telephone to report a gas leak in the vicinity of the leak.

FUNCTIONS

1. Last number redial
2. Flash function
3. Mute function
4. Ringing volume high/ low/off for selection
5. Desk/wall mountable
6. Pulse/Tone dialing mode compatible
7. 2-step lock function
8. Incoming call with ringing LED indicator
9. Hands free dialing

LOCATION DESCRIPTION

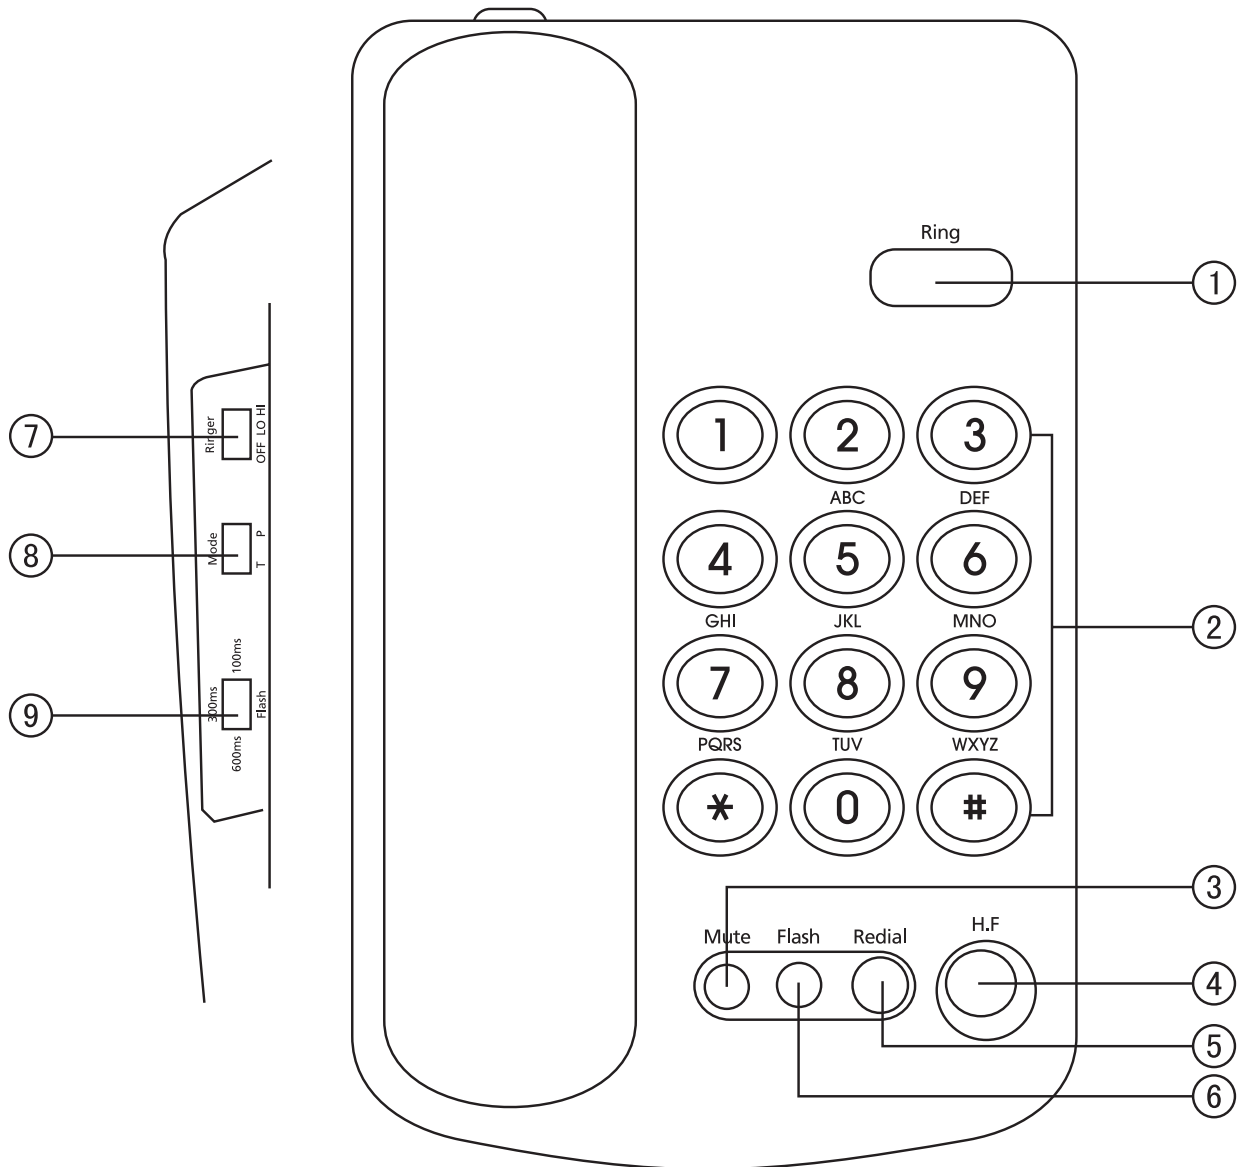

① Ring

② Numerical Key

③ Mute

④ H.F

⑤ Redial

⑥ Flash

⑦ Ringer(OFF/LO/HI)

⑧ Mode(T/P)

⑨ Flash Time

OPERATION

1) PREPARATION

1. Connect the line plugs into phone line jack and the other plug to connect to the wall jack.
2. Insert the handset coil cord into the phone jack at the side.
3. Set the dial mode to PULSE or TONE dialing according to local network.

2) DIALING AND SPEAKING

RECEIVE A CALL

➤ From handset

1. Pick up the handset and talk to the other party.
2. When finished, return the handset to the base.

MAKING A CALL

➤ From handset

1. Pick up the handset.
2. When you hear the dial tone, dial the desired number.
3. When finished, return the handset to the base.

➤ From On Hook

1. Press **H.F** key
2. When you hear the dial tone, dial the desired number.
3. When finished, press **H.F** key again.

➤ Redial

1. Pick up the handset or press **H.F** key
2. Press **Redial** key, the last dialed number will be dialed again

3) DIALING

Pick up the handset, dial the desired number as hearing the dialing tone, then if you hear the long tone like “do—do”, the line has got through. If you hear the short tone like “do... do... do”, busy tone, you could press the hook switch then press **Redial** key to dial it out again after some time. You could repeat the above process till getting the line through.

4) PULSE/TONE

Slide the **Mode** switch to **P** for pulse dialing mode or **T** for tone dialing mode accordingly.

5) FLASH

Slide the **Flash** switch to set flash time at 100ms, 300ms or 600ms.

When dial a number and the line is busy, press **Flash** and **Redial** key to dial it out again.

If flash time is 100ms, this function is available working in special exchanger. Please inquire your local Telecom about flash time

6) WALL MOUNTABLE

It can be used as wall-mounted, and it can also be used for desktop.

7) RINGING VOLUME

Slide the **Ringer** switch to adjust ringing volume to HI/ LO/OFF.

8) MUTE FUNCTION

At the conversation state by handset or hands-free, when you don't want the other party to hear your speaking temporarily, you can press and hold the **Mute** key to mute the sending. And loosen it to release the sending again.

9) LOCK FUNCTION

Turn the key to green the numbers led by "0" will be locked so cannot be dialed.

Turn the key to red point of the lock all numbers can be dialed out.

TROUBLES SHOOTING

Trouble	Check	Solution
No voice	Whether the handset or transmission line breaks off or not.	Connect them properly or change the line.
Receiving available only	Whether dialing system is proper.	Reset the dialing mode (Tone/Pulse)
Noise	Whether the circuit breaks off or the line is loose;	Change the line;
Ring only once, then break off but out-dialing is available	Whether the connection site is moist or extension too much.	