

Index

- ! commands 2-23
- + or - commands 14-5
- ? command 2-13, 2-22
- 10/100 auto-sensing ports 1-12
- 10/100** command 12-3
- 10/100 ports 12-4, 12-7
- 10/100cfg** command 1-12, 12-4, 12-6
- 10/100vc** command 1-12, 12-7
- 802.1Q 12-1, 13-1
- 802.2 pass through 15-12, 16-31

A

- ab** command 4-9
- access rate 25-13, 25-18, 25-29, 25-32
- actfstps** command 14-35, 14-36
- addprtchnl** command 12-10
- addvp** command 16-5, 16-17, 16-27, 16-43, 16-58
 - translations 15-12
- adjacency
 - definition for XMAP 18-2
- admin login 2-31, 5-2
- aipxsr** command 24-12
- aisr** command 22-16
- alert** command 2-29
- application example 1-2
- ARP protocol 22-3
- ASCII terminal commands 2-15
- at** command 16-17
- atvl** command 17-19, 19-27
- Authenticated Groups 16-1
 - as mobile group 16-5
 - configuring 16-26
- Authentication Management Console (AMC)
 - software 16-5
- autoencaps** command 15-26
- auto-sensing ports
 - see 10/100 auto-sensing ports
- auto-switch
 - diagram 16-29
 - timer 16-29
- Auto-Switch bridge mode 16-29

- AutoTracker
 - application examples 21-1
 - configuring policies 17-4
 - DHCP MAC address policy 17-3
 - DHCP policy 17-25
 - DHCP policy example 17-23
 - DHCP port policy 17-3
 - MAC address policy 17-2
 - menu 19-2
 - network address policy 17-2
 - policies 17-1, 19-3
 - port binding policy 17-2
 - port policy 17-2
 - protocol policy 17-2
 - user-defined policy 17-2
- AutoTracker policies
 - in mobile group 16-33
- avlbootpmode** command 23-1

B

- backbones 12-8
 - Ethernet 12-8
- backplane threshold 8-4
- back-to-back configuration 25-8
- Banyan Vines
 - translations for 15-8
 - VLAN for 19-31
- BECN 26-8
- boot configuration A-1
- BOOTP relay 23-3
 - and authentication 23-4
- br** command 14-3, 16-17
- BRI. See ISDN, Basic Rate Interface
- bridge 14-5
- bridge forwarding table 14-6
- bridge mode 16-28
 - non-Ethernet default 16-28
 - optimized 16-28
 - Spanning Tree 16-28
- bridge port
 - statistics 14-12
- bridging
 - Frame Relay 26-11, 26-50

bsadd command 31-3
bsdelete command 31-10
bsmodify command 31-8

C

cables B-1
cacheconfig command 6-28
CAM threshold 8-5
camstat command 6-25
caplog command 7-11
cas command 13-6
 Frame Relay bridging 26-50
 Frame Relay routing 26-53
 Frame Relay trunking 26-55
cats command 16-2
cb command 4-9
cd command 16-60
chassis summary 6-3
chnlinfo command 12-13
clearstat command 6-18
cmdlog command 7-9
command families 5-13, 5-17
command history 2-23
Command Line Interface 2-1
Committed Information Rate (CIR)
 Frame Relay 26-6
configuration files 4-3
 switch fails to create 32-6
conlog command 7-10
console management port 1-12
consumable resources 8-2
cp command 4-7
CPU threshold 8-5
cratvl command 19-4, 19-16, 19-31
crechnl command 12-9
credit
 transmit 16-30
crgp command 16-5, 16-19, 19-4
 translations 15-12
crmcvl command 20-5

D

das command 13-10
 Frame Relay 26-59
date 6-8
Daylight Savings Time (DST) 6-8, 6-12
db command 4-9

dbrmap command 14-17
DC power supplies 1-17
debuglog command 7-13
def_group variable 16-12
default group 16-12
default VLAN 19-4, 19-5
 routing 21-7
defvl command 19-5
delechnl command 12-11
delptrchnl command 12-12
DES 9-4
DHCP 23-3
 application example 17-23
 overview 23-3
 policies 17-3
 with non-DHCP clients 23-7
DHCP client 17-24
DHCP server 17-24
diag login 2-31, 5-2
diag user login 33-4
diagnostics
 configuring 33-13
 configuring for Ethernet slots 33-14
 displaying available tests 33-12
 login 33-4
 running 33-6
 temperature masking 33-5
 test cable schematics 33-15
diagnostics sub-menu 2-13, 33-4
digital services 30-2
Discard Eligibility
 Frame Relay 26-7
displaying Ethernet switch statistics 15-21
DLCI 26-4
DLCMI 26-20
domain bridging
 mapping table 14-17
domain name servers 11-1
DST 6-8
dt command 6-8
duplicate MAC addresses 6-24
dynamic port assignment 16-2

E

E1
 fractional 25-5
 framing 30-2
eb command 4-9
echo command 2-28

edit command 4-8
 edit commands tutorial 4-12, 4-13
 encapsulation 15-1
 IP 15-1
 IPX 15-1, 15-3
 error messages 32-7
 ESM-100C-12 12-4
ethdef command 15-19
 Ethernet
 10/100 ports 12-4
 802.1Q 12-1
 auto-sensing ports 12-4
 auto-switch bridge mode 16-29
 backbones 12-8
 default translations 15-13, 15-19
 duplex mode 12-7
 Ethernet translation 15-14
 high-density ports 12-6
 link mode configuration 12-6
 LLC translation 15-16
 OmniChannel 12-1
 path MTU discovery 22-41
 port mapping 16-64
 port mirroring 16-55
 port monitoring 16-59
 SNAP translation 15-15
 Ethernet 10/100 ports 12-7
 auto-negotiation 12-7
 configuring 12-4
 Ethernet modules
 configuring tests 33-14
 displaying switch statistics 15-21
 Ethernet ports
 configuring 1-12
 LEDs 1-11
 optimized ports 12-1
 port partitioning 12-2
 event 11-3
events command 11-5

F

facility datalink 30-5
 Fast Ethernet
 configuring 12-7
 Fast Spanning Tree
 description 14-31
 displaying port parameters 14-33
 enabling port parameters 14-35, 14-36
 FECN 26-9

file command 2-13, 4-1
 files 4-3
 configuration 4-3
 file name directory 4-3
 flash memory 4-2
 image 4-2
 managing 4-1
 required 4-2
 Filter Command. See UI Table Filtering
flc command 14-19
 flood limits 16-30
 configuring 14-19
 displaying 14-20
fls command 14-20
fping command 22-22
fr command 26-17
fradd command 26-27
 frame flooding 19-15
 Frame Relay
 back-to-back configurations 26-2
 BECN 26-8
 bridging 26-11, 26-50
 cables 26-3, B-1
 CIR 26-6
 congestion control 26-6
 control signals 26-39
 Discard Eligibility 26-7
 DLCI 26-4
 DLCMI 26-20
 errors 26-42
 FECN 26-9
 IP routing 26-12
 IPX routing 26-15
 polling 26-21
 port configuration 26-18
 Routing Group 26-52
 self-configuration 26-5
 split clocking 26-35
 statistics 26-33
 translations 26-10
 trunking 26-16, 26-55
 viewing parameters 26-28
 Virtual Circuit 26-4, 26-11
 Virtual Circuit configuration 26-27
 virtual ports 26-11
 Frame Relay boards
 ipxsap command with, 24-11
frclear command 26-47
frdelete command 26-31
frmodify command 26-18

- frstatus** command 26-33
- frview** command 26-28
- fsck** command 4-15
- fstps** command 14-33
- FTP
 - commands 3-3
- FTP client 3-1
- ftp** command 3-3
- FTP commands
 - ? 3-3
 - ascii 3-3
 - binary 3-3
 - bye 3-3
 - cd 3-3
 - delete 3-3
 - dir 3-3
 - get 3-3
 - hash 3-3
 - lpwd 3-3
 - ls 3-3
 - put 3-3
 - pwd 3-3
 - quit 3-3
 - remotehelp 3-3
 - user 3-3
- FTP servers 3-1, 3-2
- fwtl** command 17-22, 19-30

G

- generic service relays 23-18
- global commands 5-18
- GMAP
 - configuring 18-11
 - gap time 18-11
 - update time 18-12
- gmapgapttime** command 18-11
- gmapholdtime** command 18-12
- gmapls** command 18-13
- gmapst** command 18-11
- gmapupdttime** command 18-12
- gmcfg** command 16-12, 19-2
- gmstat** command 19-2
- gp** command 16-17, 16-37

- Group 16-1
 - authenticated 16-1, 16-26
 - changing parameters 16-39
 - creating 16-18
 - deleting 16-42
 - flood limits 14-20
 - IP address 16-20
 - IP routing in 16-20
 - mobile 16-1, 16-5, 16-26
 - non-mobile 16-1, 16-15
 - port assignment to 16-2
 - viewing 16-37
 - WAN routing 16-19, 16-34
- Group Mobility 16-2
 - enabling switch-wide 16-12

H

- hardware diagnostics 33-1
- hdcfg** command 8-2
- hdstat** command 8-6, 8-7
- Health Statistics 8-1
 - management menu 8-1
 - resource thresholds 8-2
- Hello messages
 - and XMAP 18-2
- help** command 2-13
- history** command 2-23
- hmstat** command 8-8
- How Routing Works Generally on page 21-356 21-9
- hpstat** command 8-8
- hreset** command 8-9

I

- ib** command 4-10
- ICMP protocol 22-3
- ICMP statistics and errors 22-19
- icmps** command 22-19
- image files 1-5, 4-2
- imgcl** command 4-6
- info** command 6-6
- interface** command 2-13

- Interswitch Protocols (XIP) 18-1
 - submenu 18-1
- Inverse ARP 26-12
- IP
 - abbreviated address format 2-25
 - address 3-2
 - BOOTP relay 23-3
 - DHCP 23-3
 - framing type 16-22
 - RIP mode 16-21
- IP address
 - changing in group 16-40
- ip** command 22-7
- IP protocol 22-3
- IP RIP Filters
 - adding "global" filters 22-32
 - adding specific filters 22-33
 - configuring 22-32
 - deleting filters 22-35
 - displaying all filters 22-36
 - displaying global filters 22-37
 - displaying specific filters 22-37
 - filter precedence 22-34
- IP routing 16-20
 - adding an IP address to ARP table 22-9
 - adding IP static routes 22-16
 - Address Resolution Protocol 22-3
 - flushing the RIP Routing Table 22-31
 - Internet Control Message Protocol 22-3
 - Internet Protocol 22-3
 - Open Shortest Path First Protocol 22-2
 - PING command 22-21
 - PINGing a host 22-21
 - removing IP static routes 22-18
 - Routing Information Protocol 22-2
 - Simple Network Management Protocol 22-3
 - TELNET protocol 22-3
 - tracing an IP route 22-30
 - Transmission Control Protocol 22-3
 - User Datagram Protocol 22-3
 - viewing ICMP statistics and errors 22-19
 - viewing IP statistics and errors 22-12
 - viewing RIP statistics and errors 22-25
 - viewing TCP statistics 22-26
 - viewing the Address Translation Table 22-8
 - viewing the IP routing table 22-14
 - viewing the IP-to-MAC Table 22-38
 - viewing the TCP Connection Table 22-28
 - viewing the UDP listener table 22-24
 - viewing UDP statistics and errors 22-23
- ipdirbcast** command 22-40
- ipf** command 22-36
- ipmac** command 22-38
- ipr** command 22-14
- ips** command 22-12
- IP-to-MAC Table
 - displaying all entries 22-38
 - displaying specific entries 22-39
 - flushing entries 22-39
- IPX
 - address mapping 15-5
 - triggered RIP and SAP 16-36
 - VLANs 21-4
- ipx** command 24-4
- IPX RIP
 - description of protocol 24-2
- IPX RIP/SAP Filtering
 - adding global filters 24-19
 - adding specific filters 24-20
 - configuring NetWare for WAN links 24-33
 - default setting of filters 24-18
 - deleting filters 24-22
 - displaying all filters 24-23
 - displaying global filters 24-24
 - displaying specific filters 24-24
 - filter precedence 24-25
 - uses for filters 24-18
- IPX routing
 - adding an IPX static route 24-12
 - configuring IPX Serialization Packet Filtering 24-26
 - configuring IPX Watchdog Spoofing 24-28
 - configuring NetWare for WAN links 24-33
 - configuring SPX Keepalive Spoofing 24-30
 - disabling IPX Router Complex 24-14
 - displaying IPX Routing Table 24-5
 - enabling IPX Router Complex 24-14
 - flushing RIP/SAP tables 24-15
 - GNS Output filters 24-18
 - PINGing an IPX node 24-16
 - removing IPX static routes 24-13
 - RIP Input filters 24-18
 - RIP Output filters 24-18

- RIP/SAP Filters
 - configuring 24-18
- SAP Input filters 24-18
- SAP Output filters 24-18
- the IPX submenu 24-4
- viewing IPX statistics 24-8
- viewing SAP Bindery 24-10
- IPX Serialization Packet Filtering
 - configuring 24-26
- IPX static routes
 - removing 24-13
- IPX Watchdog Spoofing
 - configuring 24-28
- ipxdrtr** command 24-38
- ipxext** command 24-37
- ipxf** command 24-23
- ipxfilter** command 24-19
- ipxflush** command 24-15
- ipxoff** command 24-14
- ipxping** command 24-16
- ipxr** command 24-5
- ipxs** command 24-8
- ipxsap** command 24-10
- ipxserialf** 24-26
- ipxserialf** command 24-26
- ipxspooft** 24-28
- ipxt** command 24-36
- ipxtimer** command 24-35
- ISDN
 - Basic Rate Interface (BRI) 25-5
- isdnt** command 29-3
- ISDN Ports
 - accessing the ISDN menu 29-3
 - deleting an ISDN configuration entry 29-5
 - displaying ISDN configuration entry status 29-7
 - modifying an ISDN configuration entry 29-4
 - viewing an ISDN configuration entry 29-6
- isdnd** command 29-5
- isdnm** command 29-4
- isdns** command 29-7
- isdnv** command 29-6

K

kill command 2-34

L

LANE (ATM)

- default translations 15-13
- Ethertype translation 15-14, 15-16
- SNAP translation 15-15

lb command 4-10

leak monitor 6-21

leakdumpall command 6-21

leakstart command 6-21

learning 15-27

LEDs

- Ethernet port LEDs 1-11
- management LEDs 1-10

Line Interface Unit (LIU) 30-5, 30-8

link command 28-2

linkadd command 28-3, 28-4

linkdelete command 28-11

linkmodify command 28-9

linkstatus command 28-15

linkview command 28-12

LLC 15-2, 15-16

load command 3-4

login accounts 2-31, 5-2

login alert banner 2-29

logout command 2-13

lookup command 2-22

ls command 3-4, 4-2

M

MAC 14-14, 14-15

MAC devices

- VLAN membership 17-22, 19-30

main menu 2-13

mas command 13-8

- Frame Relay 26-58

maskta command 33-5

mcvt command 20-13

MD5 9-4

media access control - see MAC

memory management 6-23

memory threshold 8-5

memory utilization statistics 6-21

memstat command 6-23

- Mobile Groups 16-1
 - aging out devices 16-12
 - AutoTracker policies 16-33
 - configuring 16-26
 - def_group 16-12
 - default group 16-12
 - dynamic port assignment 16-5
 - Ethernet and Token Ring ports 16-2
 - move_from_def 16-13
 - move_to_def 16-12
 - multiple 16-2
 - policies 17-1, 17-20
 - ports in 16-5
 - primary group 16-13
 - static port assignment 16-5
 - viewing 17-19
- modatvl** command 17-6, 17-18, 19-24
- Modifying a Port on page 23-9 25-24
- modmcvl** command 20-9, 20-12
- modvl** command 16-21, 16-39, 19-4, 19-19
- modvp** command 6-27, 16-44, 16-58
 - translations 15-12
- move_from_def variable 16-13
 - set in mpm.cmd 16-13
- move_to_def variable 16-12
- MPM Module
 - serial port 6-14
- MTU 22-41
- multicast claiming 6-27
- multicast VLANs 19-1, 20-1
 - creating 20-4
 - deleting 20-11
 - device assignment in 20-2
 - frame flooding in 20-3
 - modifying 20-9
 - multicast addresses 20-6
 - multicast claiming, compared 20-2
 - policies 20-12
 - recipients 20-1, 20-7
 - viewing 20-13
- multiple spanning tree 13-4
- multiple user sessions 2-31

N

- names** command 11-1
- nb** command 4-10
- net** command 31-2
- NetBIOS relays 23-10

- network address policy 19-7
 - precedence 17-2
- Network Time Protocol 9-1
- networking** command 2-13, 22-6
- newfs** command 4-16
- noecho** command 2-28
- non-Ethernet ports 16-28
- non-mobile group 16-15
- Non-mobile Groups 16-1
- ntaccess** command 9-5
- ntaccess** command 9-36
- ntadmin** command 9-5
- ntadmin** command 9-33
- ntconfig** command 9-5
- ntinfo** command 9-5
- ntinfo** command 9-15
- NTP
 - advertised precision 9-14
 - client/server 9-8
 - client/server authentication 9-9
 - current leap second 9-30
 - event timer subsystem 9-28
 - I/O subsystem 9-27
 - key ID 9-34
 - key type 9-35
 - list of peers 9-15
 - local server information 9-21
 - local server statistics 9-23
 - loop filter information 9-26
 - packet count statistics 9-29
 - peer association 9-12
 - peer associations 9-14
 - peer memory usage 9-26
 - peer summary information 9-16
 - primary receive timeout 9-33
 - reset subsystem counters 9-28
 - server statistics 9-24
 - specify password 9-34
 - system flag 9-35
 - trusted list 9-37
 - version number 9-20
- ntpaddpeer** command 9-12
- ntpaddserv** command 9-13
- ntpauth** command 9-38
- ntpbcast** command 9-13
- ntpckey** command 9-37
- ntpcres** command 9-39
- ntpctlk** command 9-37
- ntpctlstat** command 9-29
- ntpctrap** command 9-41

- ntpdelay** command 9-33
- ntpdisable** command 9-35
- ntpdkey** command 9-38
- ntpdres** command 9-41
- ntpdtrap** command 9-42
- ntpenable** command 9-35
- ntpiconfig** command 9-6
- ntpiconfig** command 9-8
- ntpinfo** command 9-21
- ntpio** command 9-27
- ntpkeyid** command 9-34
- ntpkeytype** command 9-35
- ntpleap** command 9-30
- ntploop** command 9-26
- ntplpeers** command 9-15
- ntpmem** command 9-26
- ntpmlist** command 9-31
- ntpmmon** command 9-31
- ntpmres** command 9-41
- ntppasswd** command 9-34
- ntppeers** command 9-16
- ntpprec** command 9-14
- ntppreset** command 9-28
- ntppstat** command 9-24
- ntpreqk** command 9-36
- ntppresetcommand** 9-28
- ntpshowpeer** command 9-18
- ntpstat** command 9-23
- ntptimeo** command 9-33
- ntptimer** command 9-28
- ntpunconfig** command 9-14
- ntpvers** command 9-20
- ntpvkey** command 9-37
- ntpvres** command 9-40
- ntpvtrap** command 9-42
- ntstats** command 9-5, 9-23

O

- OA-512 1-6
 - application example 1-2
 - power cords 1-15
 - rear panel 1-13
 - slot designations 1-9
- OA-512-BRI-S/T 1-25
 - jumper settings 1-26
- OA-512-BRI-U 1-23
- OA-512-FT1/FE1 1-21
 - jumper settings 1-22
- OA-512-USP 1-27
- OmniAccess
 - OA-512 1-6
 - OA-512-BRI-S/T 1-25
 - jumper settings 1-26
 - OA-512-BRI-U 1-23
 - OA-512-FT1/FE1 1-21
 - jumper settings 1-22
 - OA-512-USP 1-27
 - slot conventions 25-11, 25-24, 27-5, 28-1, 29-4, 30-1
- OmniChannel 12-1, 12-8
 - creating 12-9
 - Ethernet 12-8
 - ports 12-10
 - primary/secondary ports 12-12
- OmniSwitch 16-1
- optimized bridge mode 16-28
- Optimized Ports 12-1
- OSPF protocol 22-2
- output translations 15-28

P

- partition management 5-11, 5-19
- password 2-31, 5-2
 - changing 5-2
- path MTU discovery 22-41
- ping** command 22-21
- pin-outs B-2
- pmapcr** command 16-17
- pmapdel** command 16-17
- pmapmod** command 16-17
- pmapv** command 16-17
- pmcfg** command 16-60
- pmdelete** command 16-62
- pmon** command 16-61
- pmpause** command 16-62
- pmstat** command 16-63
- PMTU 22-41
- Point-to-Point Protocol (PPP)
 - accessing the PPP menu 27-6
 - adding a PPP entity 27-9
 - deleting a PPP entity 27-22
 - displaying PPP entity status 27-19
 - modifying a PPP entity 27-15
 - setting global parameters 27-7
 - viewing PPP entity configurations 27-16

- policy
 - AutoTracker 17-1
 - configuring 17-4
 - DHCP 17-25
 - DHCP example 17-23
 - DHCP MAC address 17-3
 - DHCP port 17-3
 - IP 19-7
 - IPX 19-7
 - MAC address 17-2
 - network address 17-2, 19-7
 - port 17-2, 19-9
 - port binding 17-2
 - protocol 17-2
 - user-defined 17-2
 - port mapping 16-17
 - example 16-64
 - operation of 16-65
 - relationship to policies 16-64
 - subset of ports 16-65
 - port mirroring 16-32, 16-55
 - disabling 16-58
 - enabling 16-58
 - operation of 16-55
 - RMON probe 16-56
 - Port Monitoring 16-59
 - port monitoring
 - menu 16-59
 - starting a session 16-61
 - statistics 16-63
 - port monitoring resources 16-60
 - Port partitioning
 - Ethernet ports 12-2
 - port policies
 - with VAP 18-9
 - port policy 19-9
 - backbone connections 19-12
 - inactive VLANs 19-12
 - silent stations 19-12
 - usefulness 19-12
 - port tests
 - cabling 33-8, 33-15
 - ports 16-48
 - assignment to Group 16-2
 - Frame Relay 26-1
 - information 16-48
 - optimized (Ethernet ports) 12-1
 - spanning tree 14-27
 - statistics 16-51
 - translations 15-20
 - power cords 1-15
 - power supply
 - connecting a DC power source 1-17
 - ppp** command 27-6
 - pppadd** command 27-9
 - pppdelete** command 27-22
 - pppglobal** command 27-7
 - pppmodify** command 27-15
 - pppstatus** command 27-19
 - pppview** command 27-16
 - probes 11-3
 - probes** command 11-4
 - prty_disp** command 16-17
 - prty_mod** command 16-17
 - pw** command 2-22, 5-2
 - pwd** command 4-2
- ## Q
- quit** command 2-13
- ## R
- rb** command 4-11
 - rear panel 1-13
 - reboot 5-3
 - see also boot
 - reboot** command 5-3
 - receive threshold 8-3
 - re-executing commands 2-23
 - reg_port_rule variable 19-9
 - relayc** 23-2
 - relayc** command 23-1
 - relays** command 23-22
 - remote trunking stations 14-16
 - res** command 11-1
 - resource thresholds 8-2
 - RIP protocol 22-2
 - ripflush** command 22-31
 - rips** command 22-25
 - ripxsr** command 24-13
 - risr** command 22-18
 - rm** command 3-4, 4-5
 - rmatvl** command 19-4, 19-26
 - rmgp** command 16-42
 - rmmcvl** command 20-11
 - RMON 11-3
 - rmvp** command 16-45

- routing
 - default VLAN 21-7
 - Frame Relay 26-52

S

- sampling interval 8-6
- SAP
 - description of protocol 24-2
- SAP Bindery
 - viewing the, 24-10
- saveconfig** command 6-28
- sc** command 6-3
- Search Command. See UI Table Filtering
- secapply** command 5-7
- secdefine** command 5-4
- seclog** command 5-10, 7-13
- security 5-1
- security** command 2-13
- selgp** command 14-5
- ser** command 3-4, 6-14
- serial port 6-14
 - parameters 6-14
- si** command 6-4
- single spanning tree 13-4
- slot** command 6-16
- slot designations 1-9, 25-11, 25-24, 27-5, 28-1, 29-4, 30-1
- slot table 6-16
- SNAP 15-2, 15-15
- SNMP protocol 22-3
- SNMP statistics 10-8
- SNMP traps 10-8
- snmpc** command 10-2
- snmps** command 10-8
- software
 - switch 4-3
- spanning tree 14-25, 16-28
 - non-mobile group 16-16
 - parameters 14-22, 14-25, 14-29
 - ports 14-27
- Speedy Tree Protocol
 - description 14-32
- split clocking 25-15, 25-19
- SPX
 - description of protocol 24-2
- SPX Keepalive Spoofing
 - configuring 24-30
 - SPX-Packet tolerance counting 24-30
- spxspoof** 24-30
- static bridge address 14-11
 - configuring 14-8
- static port assignment 16-2
- static routes
 - adding IP 22-16
 - removing IP 22-18
- statistics 25-34
 - module level 8-8
 - port level 8-8
 - port monitoring 16-63
 - resetting 8-9
 - switch level 8-6
- STATUS ENQUIRIES
 - Frame Relay 26-5, 26-21
- stc** command 14-22, 14-35, 14-36
- sts** command 14-25, 14-35, 14-36
- summary** command 2-13, 6-1
- swch** command 15-20, 15-21
- switch
 - software 4-3
- switch** command 2-13, 15-18
- switch menu 15-18
- switch software
 - Boot prompt 3-5
 - loading with FTP 3-2
 - loading with ZMODEM 3-4
- swlogc** command 7-6
- syslog** command 7-2
- systat** command 6-17
- system boot A-2
 - commands 3-6
 - See also boot
- system** command 2-13
- system description 6-24
- system info 4-14
- system menu 4-14, 6-5
- system prompt 2-16
- system statistics 6-17
- system variables 6-2

T

- T1
 - fractional 25-5
 - framing 30-2
- T1/E1 menu 30-3

T1/E1 ports 30-1
 alarms 30-10
 Extended Superframe 30-2, 30-4
 facility datalink 30-5
 line coding 30-5, 30-8
 Line Interface Unit (LIU) 30-5, 30-8
 loopback 30-6, 30-9
 remote statistics 30-19
 signaling 30-6, 30-9
 statistics 30-16
 Superframe 30-2, 30-4
 Table Filtering. See UI Table Filtering
 task utilization statistics 6-19, 6-22
taskshow command 6-19
taskstat command 6-19, 6-22
 TCP protocol 22-3
tcpc command 22-28
tcps command 22-26
te command 30-3
 technical support 32-2
telcs command 30-17
telis command 30-18
 TELNET command
 using 22-29
telnet command 22-29
telts command 30-16
temod command 30-4, 30-7
 configuring a T1 port 30-4
 configuring an E1 port 30-7
 temperature sensor 6-17
tercs command 30-20
teris command 30-20
terts command 30-19
tes command 30-10, 30-12, 30-14
 viewing a T1 port 30-12
 viewing an E1 port 30-14
test command 33-6
testcfg command 33-13
testdisp command 33-12
 time 6-8
 time slot 30-2
 time zone 6-8
 Timezone 6-9
traceroute command 22-30

translations
 ATM LANE 15-13
 automatic 15-26
 default options 15-12
 Ethernet 15-13
 Ethertype 15-14
 LLC 15-16
 SNAP 15-15
 transmission states
 XMAP 18-3
 transmit credit 16-30
 transmit/receive threshold 8-3
 traps
 configuring 10-2
 troubleshooting 32-1
 chassis error messages 32-10
 hardware problems 32-5
 module connection error messages 32-11
 serial port error messages 32-9
 shutdown error messages 32-8
 software problems 32-2
 startup error messages 32-8
 Truncating Tree Timing
 description 14-32

U

UDP 22-3
 UDP relay 23-1
udpl command 22-24
udps command 22-23
 UI Table Filtering 2-36
 Filter Command 2-39
 combining Search Command with 2-41
 more mode and 2-36
 Search Command 2-37
 combining Filter Command with 2-41
 more mode and 2-36
 renewing a search 2-38
 wildcards and 2-43
uic command 2-15-2-21, 2-27
 Universal Serial Port 25-5

- Universal Time Coordinate (UTC) 6-8
- uplink submodules 1-4, 1-20-1-27
 - OA-512-BRI-S/T 1-25
 - jumper settings 1-26
 - OA-512-BRI-U 1-23
 - OA-512-FT1/FE1 1-21
 - jumper settings 1-22
 - OA-512-USP 1-27
- User Interface 2-1, 2-14
- user login 2-31, 5-2
- useradd** command 5-12
- userdel** command 5-20
- usermod** command 5-16, 5-20
- userview** command 5-12
- USP. See Universal Serial Port.
- UTC 6-8

V

- VAP
 - configuring 18-9
 - databases 18-8
 - relation to port policies 18-9
- vas** command 13-9
 - Frame Relay 26-57
- ve** command 16-53
- verbose 2-19
- vi** command 15-17, 16-48
- via** command 16-46
- viatrl** command 17-20, 19-28
- view** command 4-7
- viewing parameters 25-24
- vigl** command 16-14
- vimcrl** command 20-14, 20-15
- virtual ports 16-15
 - adding 16-43
 - deleting 16-45
 - errors 16-53
 - format 16-30
 - information on 16-46
 - modifying 16-44
 - statistics for 16-48, 16-51
 - VLAN membership 19-29
 - VLAN/group membership 17-21
- virtual router ports 19-19
 - creating 16-20
- vivl** command 17-21, 19-29
- VLAN Advertisement Protocol
 - see VAP

- vlan** command 2-13, 16-17
- VLAN policies
 - deleting 19-25, 20-10
 - modifying 19-26, 20-11
 - viewing 17-20, 19-28, 20-14
- VLANs 16-15, 19-1
 - application examples 21-1
 - backbone 21-9
 - Banyan Vines 19-31
 - bridges 14-3
 - creating 19-16
 - default 19-4
 - deleting 19-26
 - deleting policies in 19-25, 20-10
 - frame flooding in 19-15
 - IP routing in, 22-4
 - IPX networks 21-4
 - logical policies 21-2
 - modifying 19-24
 - multicast 20-1
 - network address policies 21-2
 - policies 17-2, 19-3
 - port policy 19-9, 19-18
 - router ports 19-15
 - router traffic in 19-7
 - secondary traffic 19-6
 - viewing 17-19, 19-27
- vlap** command 18-9
- vs** command 16-51

W

- wan** command 25-11
- WAN Links
 - accessing the LINK menu 28-2
 - adding a link record 28-3
 - deleting link records 28-11
 - displaying link status 28-15
 - modifying a link record 28-9
 - viewing link records 28-12
- WAN routing 16-19, 16-34
- wb** command 4-11
- who** command 2-32
- wpmmodify** command 25-11
- wpstatus** command 25-34
- wpview** command 25-24
- write** command 2-33
- WSM
 - port configuration 25-12

X

xlat command 22-8

XMAP

adjacency 18-2

and remote switches 18-4

common transmission time 18-7

configuring 18-5

discovery transmission time 18-6

transmission states 18-3

well-known MAC address 18-3

xmapcmntime command 18-7

xmapdisctime command 18-6

xmapls command 18-5

xmapst command 18-5

Z

ZMODEM 3-1, 3-4, A-1

