

RESTRICTIONS OF PLANT ACTIVITIES DURING EVENTS OF NATIONAL INTEREST, WELFARE OR EMERGENCY

1. GENERAL

1.01 This section provides guides to the distribution of declarations and terminations to the event of National interest, welfare and emergency.

2. DISTRIBUTIONS OF DECLARATIONS AND TERMINATIONS

2.01 Immediately upon receipt of reports of national concern, the Area Reports Center will:

(a) During Regular Business Hours

- (1) Telephone the reports to the titles listed in Exhibit 1 to this appendix, using this format:

"This is a FLASH from the Area Reports Center. The American Company in New York has just declared (or terminated) Condition (Blue, Yellow or Red) in connection with (the event). Please arrange for appropriate action under Section 010-122-010.

NOTE: Log the names of all recipients and the time the message was passed to them.

- (2) Immediately transmit the same message via the official teletypewriter network to the titles listed in Exhibit 2 to this appendix.

NOTE: Precut tapes should be prepared in advance.

This will expedite transmittal.

(b) Outside Regular Business Hours

- (1) WARC – Notify by telephone the following Toll Test Room Supervisors:

Tacoma	FU 3-0560
McChord	FU 3-0718
Spokane	509-838-0361
Seattle	345-6918

- (2) OARC – Notify by telephone:

Portland Toll Test Room	226-5141
Capital Switchroom	223-1126
Atlantic Switchroom	281-1121
Belmont Switchroom	232-1121

(3) BOTH AREA REPORTS CENTERS

1. On condition Yellow and Red, notify at their homes by telephone, one person in each group as listed in Exhibit 3 of this section.
2. On condition Blue it is not necessary to notify groups listed in Exhibit 3 of this section.
3. Transmit the same urgent official messages as specified in 2.01 (a) (1) and (2).

NOTIFICATION LIST – REGULAR BUSINESS HOURS

In every case the called personnel will notify
his immediate supervisor.

OREGON AREA

The Oregon Area Reports Center will telephone:

*General Plant Supervisor	226-5551
CTM Eugene	343-8415
CTM Klamath Falls	882-3409
CTM Medford	779-1134
Dist. Plant Mgr. Spec. Svc. & Toll, Portland	227-7071
District Plant Manager, Portland Westside	226-5361
	or 226-8976
District Plant Manager, Portland Northeast	233-4387
	or 233-4368
District Plant Manager, Portland Southeast	233-4321
	or 233-4233
General Administration Report Center (GARC)	(206) 345-4520
*Chairman of Area Interdepartmental Emergency Committee	

WASHINGTON – IDAHO AREA

The Washington Area Reports Center will telephone:

General Administration Report Center (GARC)	345-4520
CTM Seattle	345-6918
CTM Spokane	(509) TE 8-0361
CTM Tacoma	FU 3-0551

EXHIBIT 1

Seattle Division

CTM – Seattle will telephone:

CTM Everett		345-4791
CTM North Bend		TU 8-0559
CTM Bellingham		733-9036
Plant Staff Supervisor		345-4502
Division Plant Supervisor		345-6743
Division Plant Manager		345-6460
	or	345-4882

Western Division

CTM – Tacoma will telephone:

Division Plant Supervisor – Seattle		345-6730
CTM McChord		FU 3-0786
Supv. Toll Wire Chief – Tacoma		FU 3-0264
Plant Staff Supervisor – Seattle		345-3221

Division Plant Supervisor – Seattle will telephone:

District Plant Manager	Tacoma	FU 3-0511
District Plant Manager	Southwest	423-9060
District Plant Manager	Northwest	BA 8-0250
Division Const. Supt.	Tacoma	FU 3-0761
District Plant Manager	Valley	BA 8-0250

Supervising Toll Wire Chief – Tacoma will telephone:

CTM Olympia		943-1460
CTM Longview		423-9010

Eastern Division

CTM – Spokane will telephone:

District Plant Manager	Spokane	TE 8-0448
District Plant Manager	Inland	CH 8-0501
Division Plant Manager	Spokane	TE 8-0411

EXHIBIT 1 (Cont'd.)

NOTIFICATION LIST, (TELETYPEWRITER)

WASHINGTON - IDAHO AREA

TITLE		CDC	NUMBER
GARC	SEATTLE	PS	PNB 631
V.P. & GENERAL MANAGER	SEATTLE	PS	PNW 612
DEF. ACTIVITIES DIRECTOR	SEATTLE	LB	PNB 67
GENERAL TRAFFIC MANAGER	SEATTLE	EA	PNW 51
GENERAL COMMERCIAL MANAGER	SEATTLE	PS	PNW 21
GENERAL MARKETING MANAGER	SEATTLE	LB	PNW 22
CHIEF ENGINEER	SEATTLE	SJ	PNW 41
GENERAL PLANT MANAGER	SEATTLE	WS	PNW 11
GENERAL PLANT OPRNS. SUPVR.	SEATTLE	WS	PNW 12
TOLL SERVICE SUPERVISOR	SEATTLE	SQ	PNW 123
DIVISION PLANT MGR., SEATTLE	SEATTLE	EK	PNW 13
DIVISION PLANT MGR., WESTERN	SEATTLE	PA	PNW 14
DIVISION PLANT MGR., EASTERN	SEATTLE	PE	PNW 713
DISTRICT PLANT MGR., TOLL	SEATTLE	SK	PNW 122
DISTRICT PLANT MGR., SEATTLE DIST. 1	SEATTLE	EK	PNW 131
DISTRICT PLANT MGR., SEATTLE DIST. 2	SEATTLE	SZ	PNW 135
DISTRICT PLANT MGR., SEATTLE DIST. 3	SEATTLE	SD	PNW 136
DISTRICT PLANT MGR., SEATTLE DIST. 4	SEATTLE	EE	PNW 142
DISTRICT PLANT MGR., TACOMA	SEATTLE	ES	PNW 132
DISTRICT PLANT MGR., LONGVIEW	SEATTLE	SP	PNW 133
DISTRICT PLANT MGR., N.W.	SEATTLE	SB	PNW 134
DISTRICT PLANT MGR., SPOKANE	SEATTLE	WJ	PNW 7131
DISTRICT PLANT MGR., YAKIMA	SEATTLE	EZ	PNW 7132
STWC SEATTLE	SEATTLE	SE	PNW 1210
STWC McCHORD	SEATTLE	ES	PNW 1219
STWC SPOKANE	SEATTLE	WA	PNW 7211
STWC YAKIMA	SEATTLE	EJ	PNW 7212
PLANT MANAGER, EPHRATA	SEATTLE	EQ	PNW 7217
PLANT MANAGER, PASCO	SEATTLE	EU	PNW 7322
PLANT MANAGER, WALLA WALLA	SEATTLE	EX	PNW 7321
PLANT MANAGER, LEWISTON	SEATTLE	ED	PNW 7323
PLANT MANAGER, MOSES LAKE	SEATTLE	EB	PNW 7313
PLANT MANAGER, WENATCHEE	SEATTLE	SF	PNW 7214
PLANT MANAGER, ABERDEEN	SEATTLE	PQ	PNW 1333
PLANT MANAGER, VANCOUVER	SEATTLE	WK	PNW 1334
PLANT MANAGER, LONGVIEW	SEATTLE	206+425+8533	PNW 1331
PLANT MANAGER, AUBURN	SEATTLE	206+995+1709	PNW 1342
PLANT MANAGER, RENTON	SEATTLE	PZ	PNW 1341
PLANT MANAGER, BREMERTON	SEATTLE	206+992+1710	PNW 1344
PLANT MANAGER, OLYMPIA	SEATTLE	LK	PNW 1335
PLANT MANAGER, BELLINGHAM	SEATTLE	206+733+3762	PNW 1343
CTM, BELLINGHAM	SEATTLE	PK	PNW 1213
PLANT MANAGER, PORT ANGELES	SEATTLE	206+993+1730	PNW 1345

EXHIBIT 2

NOTIFICATION LIST, (TELETYPEWRITER)

OREGON AREA

TITLE	ADDRESS	
GARC	SEATTLE	PNB 631
V.P. & GENERAL MANAGER	PORTLAND	PNO 61
GENERAL PLANT SUPERVISOR	PORTLAND	PNO 16
DEF. ACCOUNTS MANAGER	PORTLAND	PNO 621
GENERAL TRAFFIC MANAGER	PORTLAND	PNO 51
GENERAL COMMERCIAL MANAGER	PORTLAND	PNO 21
GENERAL MARKETING MANAGER	PORTLAND	PNO 22
GENERAL PLANT MANAGER	PORTLAND	PNO 11
CHIEF ENGINEER	PORTLAND	PNO 41
PLANT OPRNS. SUPERVISOR	PORTLAND	PNO 19
TOLL SERVICE SUPERVISOR	PORTLAND	PNO 122
DIVISION PLANT MGR., PORTLAND	PORTLAND	PNO 13
DIVISION PLANT MGR., OUTSTATE	PORTLAND	PNO 12
DISTRICT PLANT MGR. - PTLD. WS	PORTLAND	PNO 013
DISTRICT PLANT MGR. - PTLD. N.E.	PORTLAND	PNO 131
DISTRICT PLANT MGR. - PTLD. S.E.	PORTLAND	PNO 012
DISTRICT PLANT MGR., PENDLETON	PORTLAND	PNO 1211
DISTRICT PLANT MGR., EUGENE	PORTLAND	PNO 0119
DIST. PLANT MGR. SPL. SVC. & TOLL, PORTLAND	PORTLAND	PNO 1232
DIST. PLANT MGR., SALEM	PORTLAND	PNO 0126
SWC, EUGENE	PORTLAND	PNO 1229
PLANT MANAGER, ALBANY	PORTLAND	PNO 1218
PLANT MANAGER, ASTORIA	PORTLAND	PNO 1223
PLANT MANAGER, BAKER	PORTLAND	PNO 1228
PLANT MANAGER, BEND	PORTLAND	PNO 1213
PLANT MANAGER, CORVALLIS	PORTLAND	PNO 1219
PLANT MANAGER, GRANTS PASS	PORTLAND	PNO 1227
PLANT MANAGER, HERMISTON	PORTLAND	PNO 1216
PLANT MANAGER, KLAMATH FALLS	PORTLAND	PNO 1212
CHIEF TRANSMN, MEDFORD	PORTLAND	PNO 1242
SWC, MEDFORD	PORTLAND	PNO 1230
PLANT MANAGER, NEWPORT	PORTLAND	PNO 1222
PLANT MANAGER, PENDLETON	PORTLAND	PNO 1214
PLANT MANAGER, ROSEBURG	PORTLAND	PNO 1225
PLANT MANAGER, THE DALLES	PORTLAND	PNO 1215
PLANT MANAGER, TILLAMOOK	PORTLAND	PNO 1220
PLANT MANAGER, ST. HELENS	PORTLAND	PNO 1322
SWC, SALEM	PORTLAND	PNO 1245
DIV. CONSTRUCTION SUPT., PTLD	PORTLAND	PNO 143
DIV. CONSTRUCTION SUPT., OUTSTATE	PORTLAND	PNO 144

EXHIBIT 2 (Cont'd.)

NOTIFICATION LIST – OUTSIDE REGULAR BUSINESS HOURS

GENERAL ADMINISTRATION

1. Operations Supervisor (Inside)
2. General Operations Supervisor (Inside)
3. General Operations Supervisor (Outside)
4. General Operations Supervisor (Standards & Practices)
5. Assistant Vice President (Engineering & Plant)

WASHINGTON-IDAHO AREA

GROUP I – GENERAL PLANT

1. Operations Supervisor (Toll)
2. Operations Supervisor (Exchange)
3. General Plant Operations Supervisor
4. General Plant Supervisor
5. General Plant Manager

GROUP II – SEATTLE DIVISION

1. Division Plant Supervisor
2. Division Plant Manager

GROUP III – WESTERN DIVISION

1. Plant Staff Supervisor (Toll)
2. Division Plant Supervisor
3. Division Plant Manager

GROUP IV – EASTERN DIVISION

1. Plant Staff Supervisor (Exchange)
2. Plant Staff Supervisor (Toll)
3. Division Plant Manager

The Area Reports Center will telephone one supervisor in General Administration starting with number one. The report center will also telephone one supervisor in each group (I through IV) starting with number one in each group.

Each contacted supervisor is responsible for notifying other supervisors, as appropriate, within his organization.

NOTIFICATION LIST – OUTSIDE REGULAR BUSINESS HOURS
OREGON AREA

GROUP I – GENERAL PLANT

1. Plant Operations Supervisor
2. General Plant Supervisor
3. General Plant Manager

GROUP II – PORTLAND DIVISION

1. District Plant Mgr. Spec. Svc. & Toll
2. Division Plant Supervisor
3. Division Plant Manager

GROUP III – OUTSTATE DIVISION

1. Plant Staff Supervisor
2. Division Plant Supervisor
3. Division Plant Manager

Area Reports Center will telephone one supervisor in each group, starting with number one in the group until one is contacted. The ARC will also notify General Administration Personnel as shown on Page 1 of this appendix.

Each contacted supervisor is responsible for notifying other supervisors, as appropriate, within his organization.