

**COIN TIMERS NO. 1B, D-99006, AND D-159938
AND ASSOCIATED NOS. 51A, 51C, 52A, D-99004, AND D-179538 DRIVES
REQUIREMENTS AND ADJUSTING PROCEDURES**

1. GENERAL

1.001 This addendum supplements Section 030-140-702, Issue 4-D.

1.002 This addendum is issued to:

- Revise 2.15(a)
- Revise tool information
- Revise 3.15(1)
- Delete 3.26(2).

**CODE OR
SPEC NO.**

TOOLS

DESCRIPTION

R-2653

No. 5 ▶Bristol◀ Screwdriver
Wrench

—

5-inch ▶B (V-Notch)◀ Diagonal
Pliers

—

4-inch ▶E◀ Screwdriver

—

5-inch ▶E◀ Screwdriver

—

6-inch ▶C◀ Screwdriver

2.003 On Page 15, revise 3.15(1) as follows.

2. CHANGES TO SECTION

3.15 *Gear Stop Pawl Position* (Reqt. 2.15)

ISSUE 1 CHANGES

2.001 On Page 5, revise 2.15(a) as follows.

- (a) With the endplay of the timer gear taken up toward the mounting bracket, ▶with the pawl on the gear stop and with the pawl spring blocked with a thinned orange stick so that the pawl spring does not touch the pawl, the pawl shall drop freely off the gear stop to the pawl stop when the gear is rotated one revolution.◀

Gauge by eye.

- (1) ▶If the pawl does not drop freely from the gear stop, clean the pawl by applying a few drops of petroleum spirits at the pawl bearing, between the pawl and the gear and between the pawl and the mounting bracket using a toothpick.

Note: The pawl spring tension shall not be used to compensate for pawl binding.

- (2) Remove the timer (3.003) to check or adjust the pawl spring tension. Use the 485A pliers to change the tension in the pawl spring to meet requirement 2.15(d).

- (3) If requirements cannot be met, refer the matter to the supervisor. When requirements are met, remount the timer (3.003) and insure that requirements 2.06, 2.07, 2.10, 2.14, 2.26, and 2.29(b) are met.◀

2.002 On Page 11, revise 3.001 as follows.

3.001 *List of Tools, Gauges, Materials, and Test Apparatus*

2.004 On Page 17, delete 3.26(2).

NOTICE

Not for use or disclosure outside the
Bell System except under written agreement