




CODED TOOLS
520A TO 527 A
DESCRIPTION

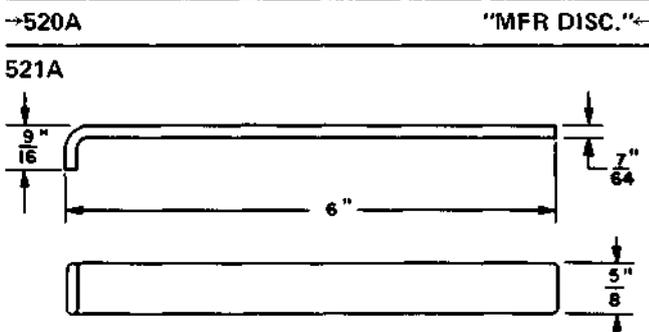


521A
Offset screwdriver.
For use on friction roll drives.

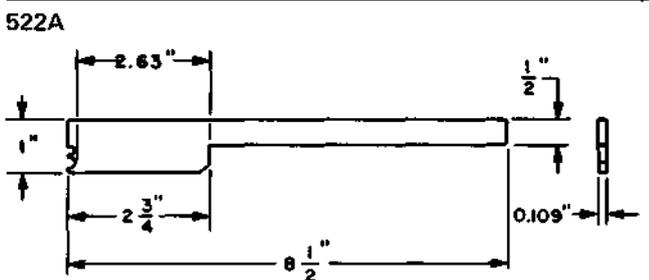


522A
Partition releaser.
For use in removing partitions from information desk book racks.

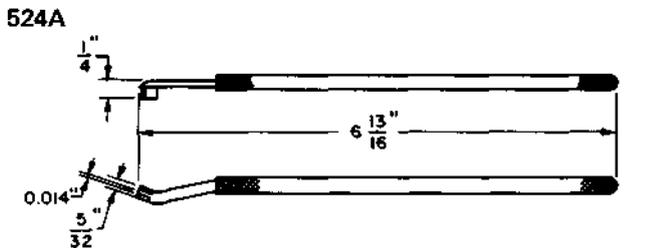


524A
Spring adjuster.
For use on 245, 254, 263 and 264 type relays.

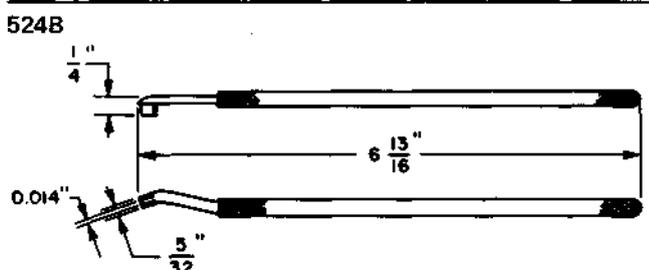

524B
Spring adjuster.
For use on 245, 254, 263 and 264 type relays.

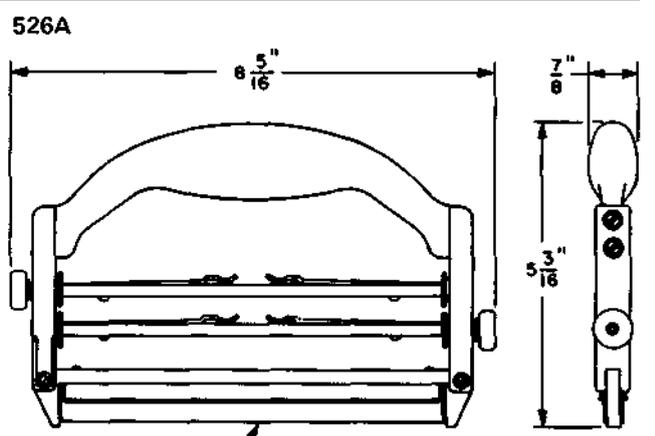

526A
P-470547 CUSHION
P-472456 CUSHION
P-475806 SUPPORT ASSEMBLY
Treating tool.
For holding an oiled cloth used in cleaning and treating terminals of 40 and 100 point panel banks.

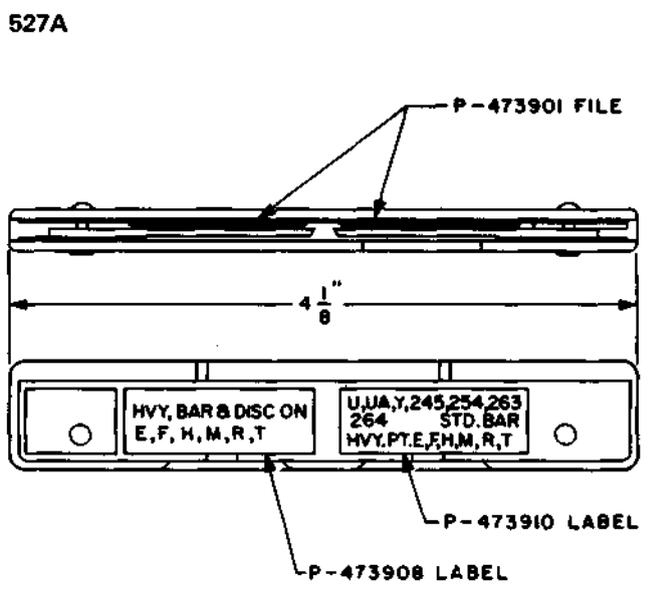

527A
P-473901 FILE
P-473910 LABEL
P-473908 LABEL
Build-up remover.

527A (cont)

The procedure for removing the P-473901 File from the Mask of the tool is outlined in Section 069-306-801 covering cleaning procedures for relay contacts and parts.

For use on relay contacts.