


CODED TOOLS
610A TO 622A
DESCRIPTION

TOOL, 610A Replaced by the 610B tool


TOOL, 610B Replaces the 610A tool ←

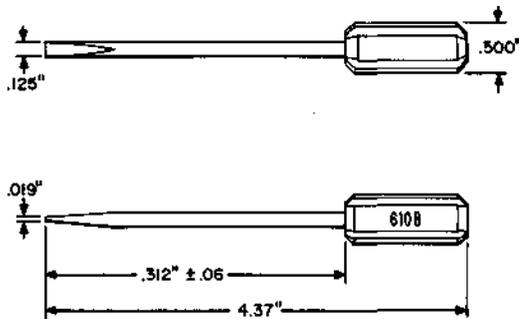

Potentiometer adjuster

For adjusting gain potentiometers in voice frequency jack panels of L-type Multiplex Systems.


TOOL, 611A

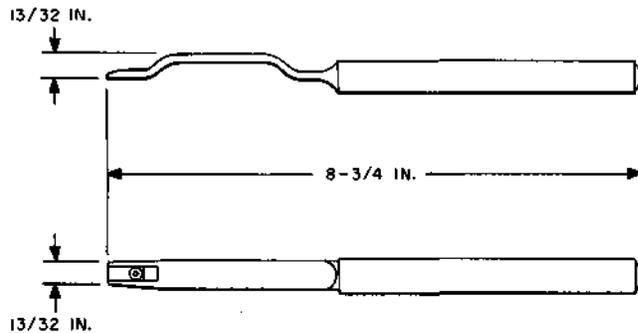

Relay hinge-bracket adjuster

For use on U-, UA-, and Y-type relays having hinge pin-type armature suspension.


TOOL, 612A

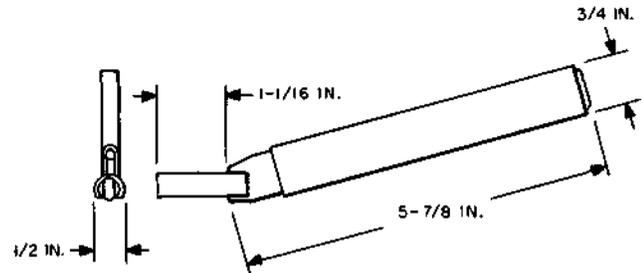

Relay core holder

For use on U-, UA-, and Y-type relays having hinge pin-type armature suspension.


TOOL, 613A

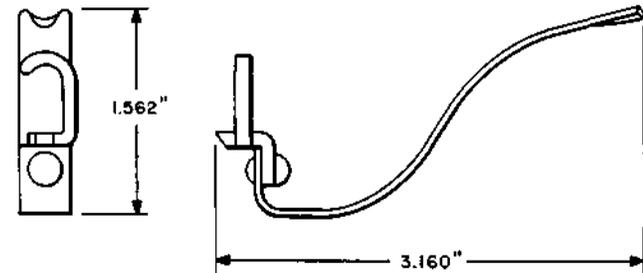

Brush clamp

For use in clamping a panel commutator brush to the elevator rod when the commutator brush clamping screw is loosened.


TOOL, 614A

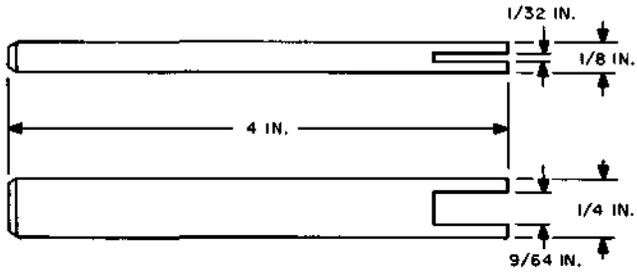

Card removing tool.

For use on UB-type relays.

TOOL, 615A

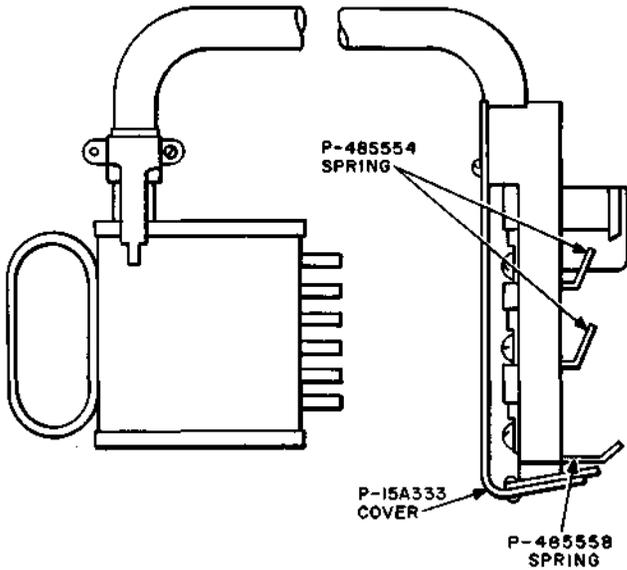

Test plug and cord


Consists of a KS-8585 L41 plug and a connector assembly connected by a W6G cord.

For use in connecting 6 leads of a No. 12 service observing circuit to an operators cord circuit.

TOOL, 616A

"Mfr Disc."
Replaced by the 659E tool


TOOL, 619A

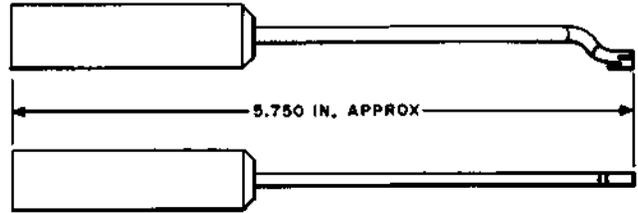

Adjuster


For use in adjusting panel commutator wiper holders.

TOOL, 620A

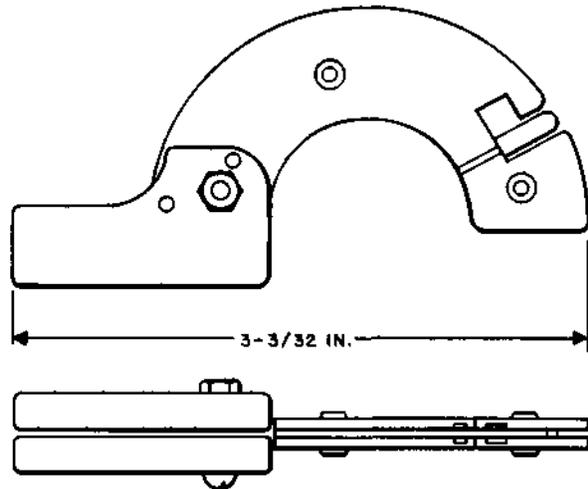


Bank contact connector

For use in making test connections to the bank contacts of step-by-step line finder switches. A W3AJ cord is required for connecting this tool.

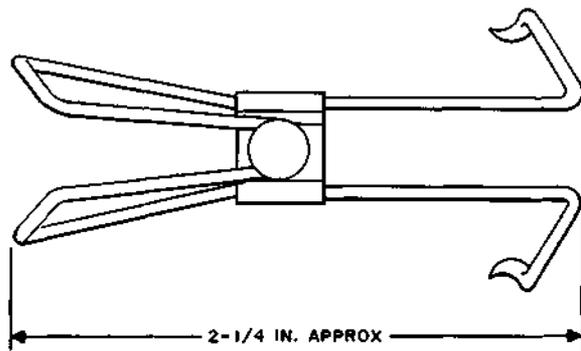TOOL, 621A**Spreader**

For use in spreading panel commutator wiper pads when checking and adjusting commutator brush springs.

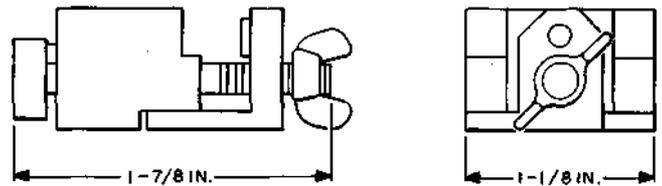TOOL, 622A**Clamp**

For use during adjustments to support 200-, 206-, 209-, and 211-type selectors non-rigidly mounted on mounting plates similar to the 189-type.