


**CODED TOOLS**  
**NO. 623A TO 630A**  
**DESCRIPTION**


TOOL, 623A.

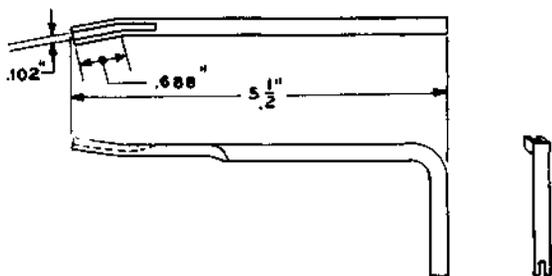

Bracket adjuster

For use in adjusting holding off-normal spring brackets on 324- and similar type switches.

TOOL, 624A.  
TOOL, 624B.

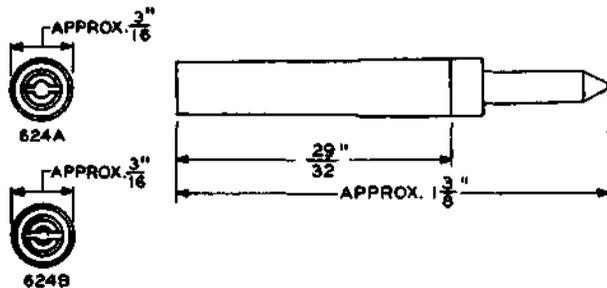


Terminal connectors

No. 624A tool is for use in conjunction with 360-type tools for making test connections to winding terminals of AF-, AG- and AJ-type relays.

No. 624B tool is for use in conjunction with 360-type tools for making test connections to the 251- and similar-type terminal strips.


TOOL, 625A.

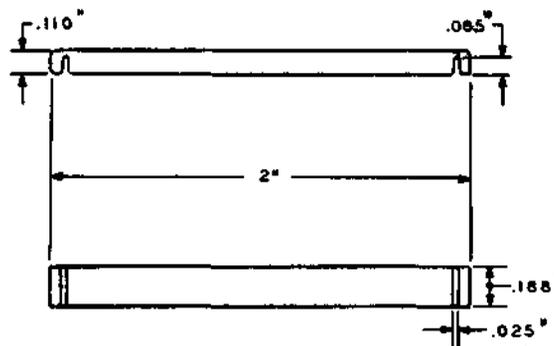

Spring adjuster

For use in adjusting the off-normal springs on the No. 214A selector of the one-type translator.

TOOL, 626A.

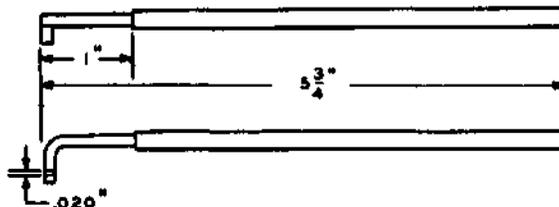

Spring adjuster

For use in adjusting vertical unit balancing springs on 324- and similar type switches.

SECTION 074-135-101

→ TOOL, 627A Manufacture Discontinued

Replaced by the KS-16887-L1 Wedge


TOOL, 628A



Balancing spring lifter

For use in disengaging the balancing spring from the card on AF-, AG- and AJ-type relays.


TOOL, 629A

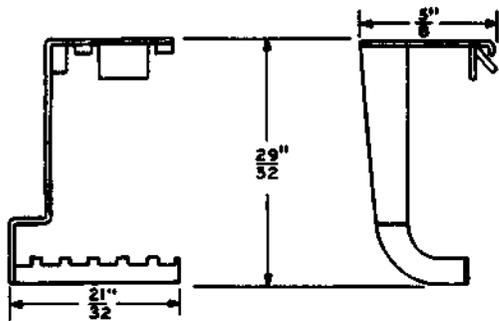

Spring holder

For use in holding the upper group of movable break contact springs on AF-, AG- and AJ-type relays during removal of the card from the relay.


TOOL, 629B

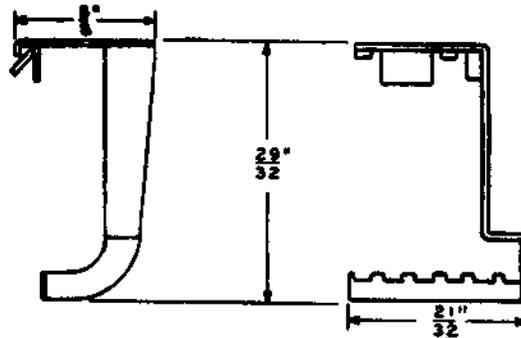

Spring holder

For use in holding the lower group of movable break contact springs on AF-, AG- and AJ-type relays during removal of the card from the relay.

TOOL, 630A

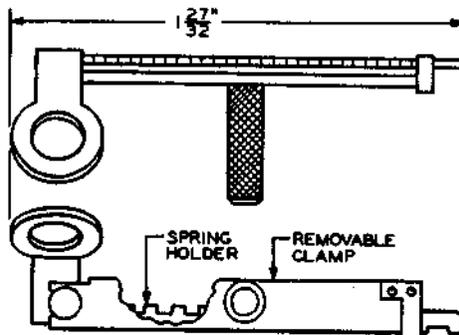

Spring holder and removable clamp

For use in holding movable make contact springs in positions 1-12 on AF-, AG-, and AJ-type relays during removal of the card from the relay.