 


**TOOLS**  
**CONNECTORS - DESCRIPTION**

**1. GENERAL**


- 1.01** This section covers coded Bell System connector tools.
- 1.02** When this section is reissued, the reason for reissue will be listed in this paragraph.
- 1.03** The information contained in this section supersedes the corresponding information in Sections 074-112-101, 074-115-101, 074-118-101, 074-121-101, 074-123-101, 074-126-101, 074-129-101, 074-133-101, 074-134-101, 074-135-101, 074-136-101, and 074-154-101.

**361B**



Relay winding connector. Replaces the 361 tool. For use in conjunction with a 360-type tool for test purposes on E-, R- and similar-type relays.

**387A**

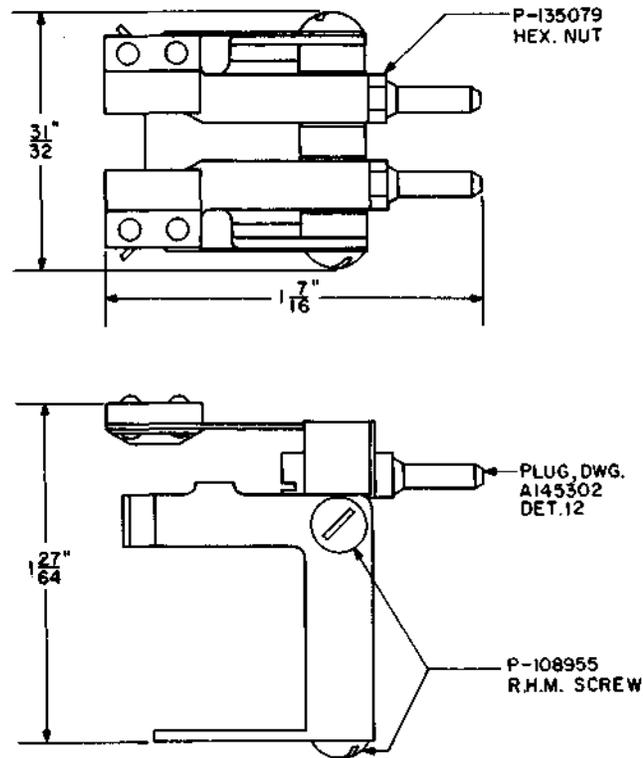


Intercontact connector. For use on 111-type relays.

**NOTICE**


Not for use or disclosure outside the  
Bell System except under written agreement

419A

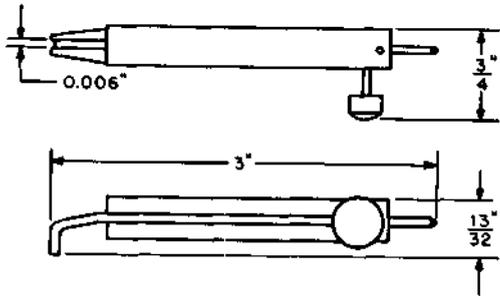



Test connector. Replaces the 252 tool. For use in making test connections to A- and B-type sequence switches, 157-type interrupters, and relays.

428B

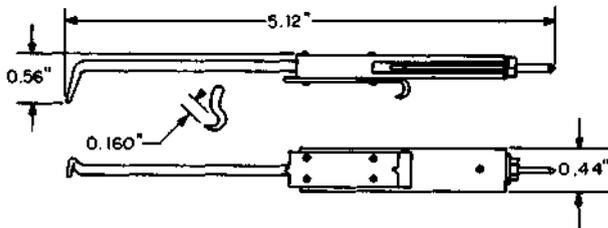


Relay winding connector. Replaces the 428A tool. For use in making test connections from the front of the relay on 89-, 101-, 105-, 108-, 111-, 121-, 122-, 149-, 162-, 172-, 178-, 179-, 190-, and 196-type relays.

471A

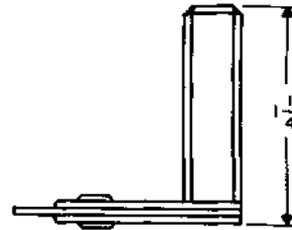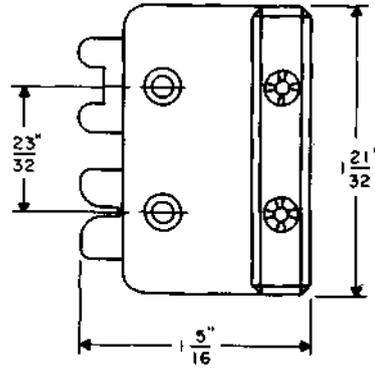


Test connector. For use in connecting to meters, etc., in checking teletypewriter equipment.

509A

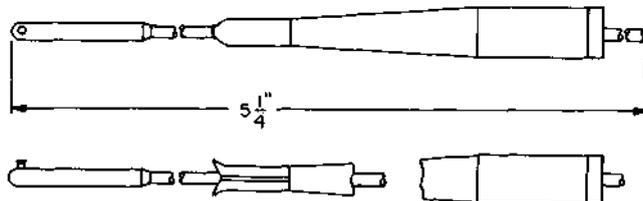


Relay winding connector. For use with a 360-type tool to connect to winding terminals of U-, Y-, and similar-type relays, and 263- and 264-type relays.

509B

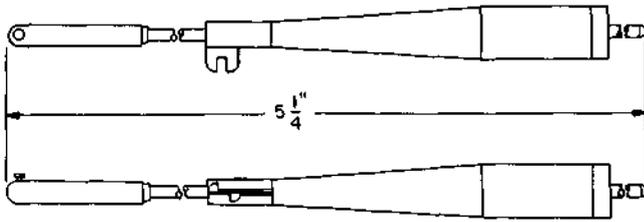


Relay winding connector. For use with a 360-type tool to connect to winding terminals of 286-, 287-, and 288-type relays.

547A

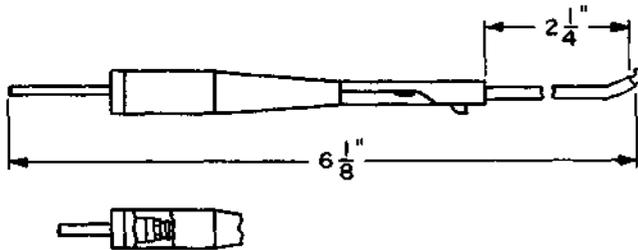


Magnet winding connector. Used in conjunction with the 360-type tool. For use on 245- and 254-type relays, 300- and similar-type switches, and 1- and 2-type timers.

548A

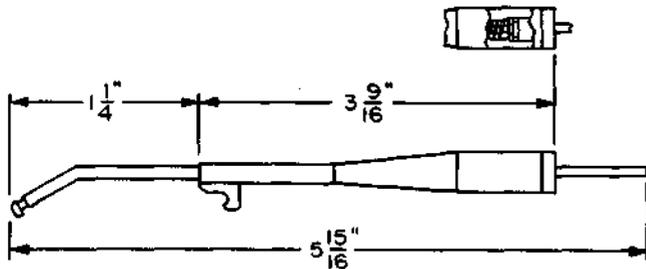


Magnet winding connector. Used in conjunction with the 360-type tool. For use on 300- and similar-type switches.

607A

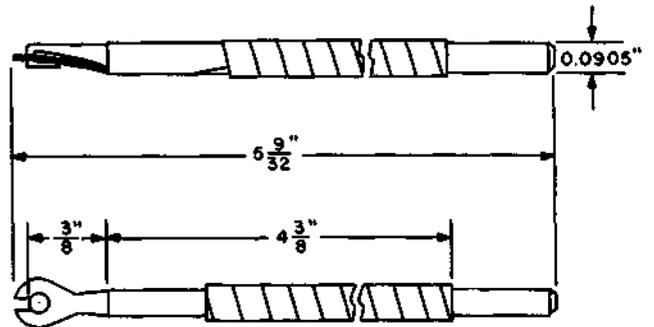


Relay winding connector. Replaces the R-2736 relay winding connector. For use on U-, Y-, and UB-type relays.

620A

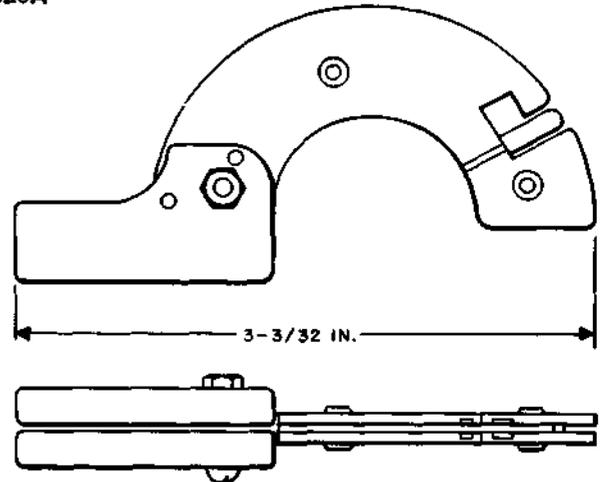

Bank contact connector. For use in making test connections to the bank contacts of step-by-step line finder switches. A W3AJ cord is required for connecting this tool.

624A  
624B

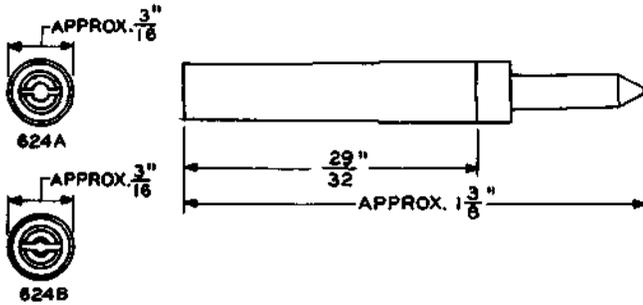


**Terminal connectors.**

The 624A tool is for use in conjunction with 360-type tools for making test connections to winding terminals of AF-, AG- and AJ-type relays.


The 624B tool is for use in conjunction with 360-type tools for making test connections to the 251- and similar-type terminal strips.

639A

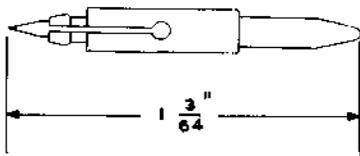

**Relay contact connector.** For use in conjunction with 360-type and 651-type tools to make test connections to the fixed contacts on AF-, AG-, AJ-, and AK-type relays.

770A  
770B

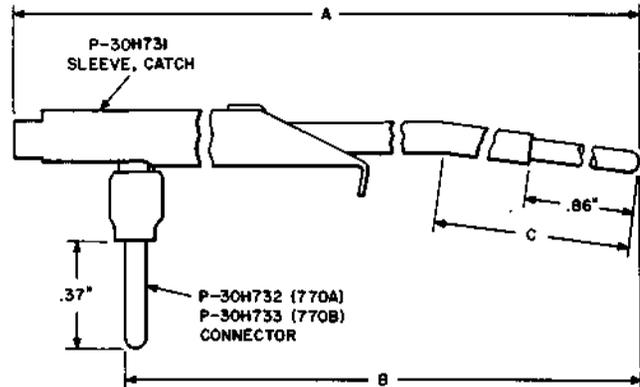

TOOL	DIMENSIONS (INCHES)		
	A	B	C
770A	6.26	5.68	2.00
770B	5.26	4.68	1.38

**Test connector.**

The 770A tool is for use in making test connections to 5- and 12-type registers.

The 770B tool is for use in making test connections to 14-type registers.