

## TOOLS

### LIFTERS, SPRING – DESCRIPTION


#### 1. GENERAL

- 1.01 This section covers coded Bell System spring lifters.
- 1.02 When this section is reissued, the reason for reissue will be listed in this paragraph.
- 1.03 The information contained in this section supersedes the corresponding information in Sections 074-135-101 and 074-141-101.

#### LIFTER, SPRING


For tools with similar functions, see Holders I, Section 074-223-125; Holders II, Section 074-223-126; Insulators, Section 074-226-122; Separators, Section 074-256-128; Spacers, Section 074-257-107; and Spreader, Section 074-257-114.

#### 628A

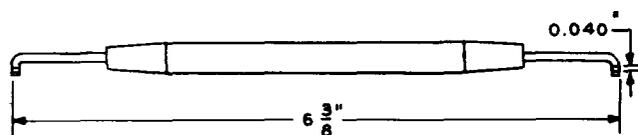

Balancing spring lifter. For use in disengaging the balancing spring from the card on AF-, AG- and AJ-type relays.

#### 674A

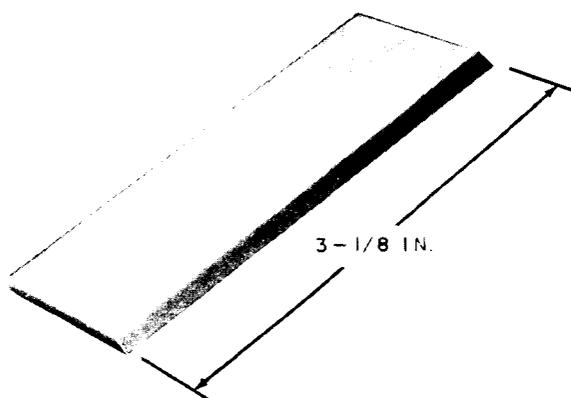

Spring lifter. This tool forms part of the 1012A tool kit. For use in replacing cards of 286-, 287-, and 288-type relays.

#### NOTICE

Not for use or disclosure outside the  
Bell System except under written agreement