



# **EC500 Extension to Cellular**

Version 4.1

Installation and Administration Guide

210-100-500  
Issue 5  
May 2003



## Notice

Every effort was made to ensure that the information in this document was complete and accurate at the time of printing. However, information is subject to change.

## Warranty

Avaya Inc. provides a limited warranty on this product. Refer to your sales agreement to establish the terms of the limited warranty. In addition, Avaya's standard warranty language as well as information regarding support for this product, while under warranty, is available through the following website:

<http://www.avaya.com/support>

## Preventing Toll Fraud

"Toll fraud" is the unauthorized use of your telecommunications system by an unauthorized party (for example, a person who is not a corporate employee, agent, subcontractor, or is not working on your company's behalf). Be aware that there may be a risk of toll fraud associated with your system and that, if toll fraud occurs, it can result in substantial additional charges for your telecommunications services.

## Avaya Fraud Intervention

If you suspect that you are being victimized by toll fraud and you need technical assistance or support, in the United States and Canada, call the Technical Service Center's Toll Fraud Intervention Hotline at 1-800-643-2353.

## How to Get Help

For additional support telephone numbers, go to the Avaya Web site:

<http://www.avaya.com/support/>

If you are:

- Within the United States, click *Escalation Lists*, which includes escalation phone numbers within the USA.
- Outside the United States, click *Escalation Lists* then click *Global Escalation List*, which includes phone numbers for the regional Centers of Excellence.

## Providing Telecommunications Security

Telecommunications security (of voice, data, and/or video communications) is the prevention of any type of intrusion to (that is, either unauthorized or malicious access to or use of) your company's telecommunications equipment by some party.

Your company's "telecommunications equipment" includes both this Avaya product and any other voice/data/video equipment that could be accessed via this Avaya product (that is, "networked equipment").

An "outside party" is anyone who is not a corporate employee, agent, subcontractor, or is not working on your company's behalf. Whereas, a "malicious party" is anyone (including someone who may be otherwise authorized) who accesses your telecommunications equipment with either malicious or mischievous intent.

Such intrusions may be either to/through synchronous (time-multiplexed and/or circuit-based) or asynchronous (character-, message-, or packet-based) equipment or interfaces for reasons of:

- Utilization (of capabilities special to the accessed equipment)
- Theft (such as, of intellectual property, financial assets, or toll facility access)
- Eavesdropping (privacy invasions to humans)
- Mischief (troubling, but apparently innocuous, tampering)
- Harm (such as harmful tampering, data loss or alteration, regardless of motive or intent)

Be aware that there may be a risk of unauthorized intrusions associated with your system and/or its networked equipment. Also realize that, if such an intrusion should occur, it could result in a variety of losses to your company (including but not limited to, human/data privacy, intellectual property, material assets, financial resources, labor costs, and/or legal costs).

## Responsibility for Your Company's Telecommunications Security

The final responsibility for securing both this system and its networked equipment rests with you - Avaya's customer system administrator, your telecommunications peers, and your managers. Base the fulfillment of your responsibility on acquired knowledge and resources from a variety of sources including but not limited to:

- Installation documents
- System administration documents
- Security documents
- Hardware-/software-based security tools
- Shared information between you and your peers
- Telecommunications security experts

To prevent intrusions to your telecommunications equipment, you and your peers should carefully program and configure:

- Your Avaya-provided telecommunications systems and their interfaces
- Your Avaya-provided software applications, as well as their underlying hardware/software platforms and interfaces
- Any other equipment networked to your Avaya products

## TCP/IP Facilities

Customers may experience differences in product performance, reliability and security depending upon network configurations/design and topologies, even when the product performs as warranted.

## Standards Compliance

Avaya Inc. is not responsible for any radio or television interference caused by unauthorized modifications of this equipment or the substitution or attachment of connecting cables and equipment other than those specified by Avaya Inc. The correction of interference caused by such unauthorized modifications, substitution or attachment will be the responsibility of the user. Pursuant to Part 15 of the Federal Communications Commission (FCC) Rules, the user is cautioned that changes or modifications not expressly approved by Avaya Inc. could void the user's authority to operate this equipment.

## Product Safety Standards

This product complies with and conforms to the following international Product Safety standards as applicable:

Safety of Information Technology Equipment, IEC 60950, 3rd Edition including all relevant national deviations as listed in Compliance with IEC for Electrical Equipment (IECEE) CB-96A.

Safety of Information Technology Equipment, CAN/CSA-C22.2 No. 60950-00 / UL 60950, 3rd Edition

Safety Requirements for Customer Equipment, ACA Technical Standard (TS) 001 - 1997

One or more of the following Mexican national standards, as applicable: NOM 001 SCFI 1993, NOM SCFI 016 1993, NOM 019 SCFI 1998

The equipment described in this document may contain Class 1 LASER Device(s). These devices comply with the following standards:

- EN 60825-1, Edition 1.1, 1998-01
- 21 CFR 1040.10 and CFR 1040.11.

The LASER devices operate within the following parameters:

- Maximum power output: -5 dBm to -8 dBm
- Center Wavelength: 1310 nm to 1360 nm

Luokan 1 Laserlaite  
Klass 1 Laser Apparat

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposures. Contact your Avaya representative for more laser product information.

### Electromagnetic Compatibility (EMC) Standards

This product complies with and conforms to the following international EMC standards and all relevant national deviations:

Limits and Methods of Measurement of Radio Interference of Information Technology Equipment, CISPR 22:1997 and EN55022:1998.

Information Technology Equipment – Immunity Characteristics – Limits and Methods of Measurement, CISPR 24:1997 and EN55024:1998, including:

- Electrostatic Discharge (ESD) IEC 61000-4-2
- Radiated Immunity IEC 61000-4-3
- Electrical Fast Transient IEC 61000-4-4
- Lightning Effects IEC 61000-4-5
- Conducted Immunity IEC 61000-4-6
- Mains Frequency Magnetic Field IEC 61000-4-8
- Voltage Dips and Variations IEC 61000-4-11
- Powerline Harmonics IEC 61000-3-2
- Voltage Fluctuations and Flicker IEC 61000-3-3

### Federal Communications Commission Statement

#### Part 15:

#### For MCC1, SCC1, G600, and CMC1 Media Gateways:

**Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.**

#### For the G700 Media Gateway:

**Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that radio interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:**

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Part 68: Answer-Supervision Signaling.** Allowing this equipment to be operated in a manner that does not provide proper answer-supervision signaling is in violation of Part 68 rules. This equipment returns answer-supervision signals to the public switched network when:

- answered by the called station,
- answered by the attendant, or
- routed to a recorded announcement that can be administered by the customer premises equipment (CPE) user.

This equipment returns answer-supervision signals on all direct inward dialed (DID) calls forwarded back to the public switched telephone network. Permissible exceptions are:

- A call is unanswered.
- A busy tone is received.
- A reorder tone is received.

Avaya attests that this registered equipment is capable of providing users access to interstate providers of operator services through the use of access codes. Modification of this equipment by call aggregators to block access dialing codes is a violation of the Telephone Operator Consumers Act of 1990.

#### For MCC1, SCC1, G600, and CMC1 Media Gateways:

This equipment complies with Part 68 of the FCC rules. On the rear of this equipment is a label that contains, among other information, the FCC registration number and ringer equivalence number (REN) for this equipment. If requested, this information must be provided to the telephone company.

#### For the G700 Media Gateway:

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. Located prominently on this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. The digits represented by ## are the ringer equivalence number (REN) without a decimal point (for example, 03 is a REN of 0.3). If requested, this number must be provided to the telephone company.

The REN is used to determine the quantity of devices which may be connected to the telephone line. Excessive RENs on the telephone line may result in devices not ringing in response to an incoming call. In most, but not all areas, the sum of RENs should not exceed 5.0. To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company.

REN is not required for some types of analog or digital facilities.

## Means of Connection

Connection of this equipment to the telephone network is shown in the following tables.

### For MCC1, SCC1, G600, and CMC1 Media Gateways:

Manufacturer's Port Identifier	FIC Code	SOC/REN/ A.S. Code	Network Jacks
Off/On premises station	OL13C	9.0F	RJ2GX, RJ21X, RJ11C
DID trunk	02RV2-T	0.0B	RJ2GX, RJ21X
CO trunk	02GS2	0.3A	RJ21X
	02LS2	0.3A	RJ21X
Tie trunk	TL31M	9.0F	RJ2GX
Basic Rate Interface	02IS5	6.0F, 6.0Y	RJ49C
1.544 digital interface	04DU9-BN	6.0F	RJ48C, RJ48M
	04DU9-IKN	6.0F	RJ48C, RJ48M
	04DU9-ISN	6.0F	RJ48C, RJ48M
120A3 channel service unit	04DU9-DN	6.0Y	RJ48C

### For the G700 Media Gateway:

Manufacturer's Port Identifier	FIC Code	SOC/REN/ A.S. Code	Network Jacks
Ground Start CO trunk	02GS2	0.5A	RJ11C
DID trunk	02RV2-T	AS.0	RJ11C
Loop Start CO trunk	02LS2	0.5A	RJ11C
1.544 digital interface	04DU9-BN	6.0Y	RJ48C
	04DU9-DN	6.0Y	RJ48C
	04DU9-IKN	6.0Y	RJ48C
	04DU9-ISN	6.0Y	RJ48C
Basic Rate Interface	02IS5	6.0F	RJ49C

If the terminal equipment (for example, the media server or media gateway) causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice is not practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with this equipment, for repair or warranty information, please contact the Technical Service Center at 1-800-242- 2121 or contact your local Avaya representative. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. It is recommended that repairs be performed by Avaya certified technicians.

The equipment cannot be used on public coin phone service provided by the telephone company. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

This equipment, if it uses a telephone receiver, is hearing aid compatible.

### Canadian Department of Communications (DOC) Interference Information

#### For MCC1, SCC1, G600, and CMC1 Media Gateways:

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

#### For the G700 Media Gateway:

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications. This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.

### DECLARATIONS OF CONFORMITY

#### United States FCC Part 68 Supplier's Declaration of Conformity (SDoC)

Avaya Inc. in the United States of America hereby certifies that the equipment described in this document and bearing a TIA TSB-168 label identification number complies with the FCC's Rules and Regulations 47 CFR Part 68, and the Administrative Council on Terminal Attachments (ACTA) adopted technical criteria.

Avaya further asserts that Avaya handset-equipped terminal equipment described in this document complies with Paragraph 68.316 of the FCC Rules and Regulations defining Hearing Aid Compatibility and is deemed compatible with hearing aids.

Copies of SDoCs signed by the Responsible Party in the U. S. can be obtained by contacting your local sales representative and are available on the following Web site:

<http://www.avaya.com/support>

All Avaya media servers and media gateways are compliant with FCC Part 68, but many have been registered with the FCC before the SDoC process was available. A list of all Avaya registered products may be found at:

<http://www.part68.org/>

by conducting a search using "Avaya" as manufacturer.

## European Union Declarations of Conformity



Avaya Inc. declares that the equipment specified in this document bearing the "CE" (*Conformité Européenne*) mark conforms to the European Union Radio and Telecommunications Terminal Equipment Directive (1999/5/EC), including the Electromagnetic Compatibility Directive (89/336/EEC) and Low Voltage Directive (73/23/EEC). This equipment has been certified to meet CTR3 Basic Rate Interface (BRI) and CTR4 Primary Rate Interface (PRI) and subsets thereof in CTR12 and CTR13, as applicable.

Copies of these Declarations of Conformity (DoCs) can be obtained by contacting your local sales representative and are available on the following Web site:

<http://www.avaya.com/support/>

### Japan

#### **For MCC1, SCC1, G600, and CMC1 Media Gateways:**

This is a Class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance may occur, in which case, the user may be required to take corrective actions.

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

#### **For the G700 Media Gateway:**

This is a Class B product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance may occur, in which case, the user may be required to take corrective actions.

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。  
取扱説明書に従って正しい取り扱いをして下さい。

#### **To order copies of this and other documents:**

Call: Avaya Publications Center  
Voice 1.800.457.1235 or 1.207.866.6701  
FAX 1.800.457.1764 or 1.207.626.7269

Write: Globalware Solutions  
200 Ward Hill Avenue  
Haverhill, MA 01835 USA  
Attention: Avaya Account Management

E-mail: [totalware@gwsmail.com](mailto:totalware@gwsmail.com)

For the most current versions of documentation, go to the Avaya Web site:

<http://www.avaya.com/support/>

---

# Contents

---

<b>About this document</b>	<b>xiii</b>
■ Purpose	xiii
■ Intended audiences	xiii
■ Reason for reissue	xiii
■ How to use this document	xiii
■ Conventions used	xiv
Symbolic conventions	xiv
Typographic conventions	xiv
■ Related documentation	xv
■ Trademarks	xv

---

<b>1</b>	<b>Overview of EC500 Extension to Cellular</b>	<b>1-1</b>
■	Introduction	1-1
	What's new in EC500 Version 4.1	1-2
	Customer configurations	1-2
	Platforms	1-2
	EC500 versions and Communication Manager	1-3
	System access terminal screens	1-3
■	Feature description	1-3
	EC500 calls terminating to a cell phone	1-4
	EC500 calls originating from a cell phone	1-4
	EC500 calls both to and from the cell phone	1-5
	Office caller ID	1-5
	Enabling and disabling EC500	1-6
	EC500, security codes, and console permissions	1-7
	Call waiting, call identification, and voice mail	1-7
■	ARS/AAR routing	1-8
■	Call filtering	1-8
	Call filtering and bridged XMOBILE stations	1-9
	Call filtering and standalone XMOBILE stations	1-9
■	Call detail recording	1-9
■	Capacity limitations	1-11
■	Security considerations	1-11

---

# Contents

■ Feature operation	1-12
Enabling/disabling EC500 via feature access codes	1-12
Enabling and disabling EC500 via an administered feature button on the office telephone	1-13
Receiving calls	1-14
Making calls	1-15
■ Feature interactions	1-15
Attendant	1-15
Call coverage	1-16
Cellular service provider voice mail	1-16
Class of restriction	1-16
DCS	1-16
Distinctive alerting	1-16
Duplication station administration	1-17
EC500 activation/deactivation	1-17
EC500 with office caller ID calling another EC500 user	1-17
Feature access codes	1-17
Message waiting indication	1-17
“Notify me” under Unified Messenger for MS Exchange	1-17
QSIG	1-18
■ EC500 scheduler application	1-18

---

<b>2</b>	<b>Installation and planning</b>	<b>2-1</b>
■ Installation		2-1
Configuration/environment requirements		2-1
Setting customer options		2-1
■ Administration planning		2-2
Planning requirements		2-2
Dial plan for XMOBILE stations		2-2
Security codes		2-3
Enabling and disabling feature access codes		2-3

---

# Contents

---

<b>3</b>	<b>Administration</b>	<b>3-1</b>
	■ Introduction	3-1
	■ Setting the customer options for EC500	3-2
	■ XMOBILE station administration	3-4
	■ Sending 10-digit caller identification for locally-originated calls	3-9
	■ Call filtering administration	3-9
	Call filtering and bridged XMOBILE stations	3-10
	Call filtering and standalone XMOBILE stations	3-11
	■ Duplicate station administration	3-11
	How the duplicate station command is used	3-11
	Example: administering four duplicated extensions	3-13
	■ Setting up the Avaya EC500 access number	3-15
	■ Setting up the Avaya EC500 enable/disable feature access codes	3-16
	■ Voice mail administration	3-17
	Using corporate voice mail to receive messages	3-18
	Preventing messages from automatically going to cellular voice mail	3-19
	“Notify me” under Unified Messenger for MS Exchange	3-19
	■ Changing configuration sets	3-20
	■ Generating two CDR records	3-23
	■ Creating a change feature access code for station security codes	3-23
	■ Administering an EC500 feature access button on the office telephone	3-25

---

<b>4</b>	<b>Installation and administration test</b>	<b>4-1</b>
	■ Introduction	4-1
	■ Test procedures	4-1

---

# Contents

---

<b>5</b>	<b>Maintenance</b>	<b>5-1</b>
	■ Introduction	5-1
	■ About maintenance commands	5-1
	■ Display capacities	5-2
	■ List XMOBILE by cell phone number	5-3
	■ XMOBILE station maintenance (busy-out and release)	5-4
	Command: busyout station	
	<XMOBILE station extension>	5-5
	Command: release station	
	<XMOBILE extension>	5-5
	■ Display errors/alarms	5-5
	■ System restarts	5-6
	■ Status station command	5-6
<b>6</b>	<b>Troubleshooting</b>	<b>6-1</b>
	■ Introduction	6-1
	Users cannot receive EC500 calls on	
	cell phone	6-1
	Error conditions table	6-3
	■ Terminal error codes	6-9
<b>A</b>	<b>Avaya EC500 - other configurations</b>	<b>A-1</b>
	■ Standard EC500 (dual) setup	
	administered to send office caller ID	A-1
	■ Dual setup not administered to	
	send office caller ID	A-1
	■ Single setup	A-2
	■ Multiple setup	A-2
	■ Standalone setup	A-2
	■ Enabling/disabling individual	
	EC500 bridged extensions	A-3

---

# Contents

---

<b>B</b>	<b>Upgrades from prior versions</b>	<b>B-1</b>
	■ Upgrade from EC500 Version 4	B-1
	■ Upgrade from EC500 Version 3	B-3
	■ Upgrade from EC500 Version 2	B-4
	■ Upgrade from EC500 Version 1	B-5

---

<b>GL</b>	<b>Glossary</b>	<b>GL-1</b>
-----------	-----------------	-------------

---

<b>IN</b>	<b>Index</b>	<b>IN-1</b>
-----------	--------------	-------------

---



# Contents

---

## About this document

---

### **Purpose**

---

This guide describes the installation, administration, maintenance, and troubleshooting tasks necessary to install and set up Version 4.1 of Avaya™ EC500 Extension to Cellular.

### **Intended audiences**

---

Audiences for this guide include system administrators, software specialists, and Avaya technical personnel.

### **Reason for reissue**

---

This guide has been reissued to provide information supporting EC500 Extension to Cellular Version 4.1.

### **How to use this document**

---

The document is organized as follows:

[Chapter 1, "Overview of EC500 Extension to Cellular"](#) provides an overview of features, capacity considerations, hardware/software requirements and security.

[Chapter 2, "Installation and planning"](#) provides information on installation of EC500, as well as planning tasks to be performed before EC500 XMOBILE station extensions are administered.

[Chapter 3, "Administration"](#) provides detailed instructions on administering XMOBILE stations for EC500 implementation.

[Chapter 4, "Installation and administration test"](#) provides basic test procedures for the EC500 installation.

[Chapter 5, "Maintenance"](#) provides details on EC500 maintenance considerations as well as the busy-out and release capabilities for XMOBILE stations.

[Chapter 6, "Troubleshooting"](#) provides errors conditions, causes, and resolutions that may occur with EC500 operation.

[Appendix A, "Avaya EC500 - other configurations"](#) provides details on EC500 standalone and multiple bridge mode configurations.

[Appendix B, "Upgrades from prior versions"](#) provides an overview of how to upgrade from EC500 Extension to Cellular Releases 1, 2, 3, and 4.

## **Conventions used**

---

This guide uses the following conventions to help you interpret information.

### **Symbolic conventions**

---

 **NOTE:** This symbol precedes additional information about a topic. This information is not required to run your system.

### **Typographic conventions**

---

This guide uses the following typographic conventions:

<b>command</b>	Words printed in this type indicate commands that you enter into your system.
<b><i>device</i></b>	Words printed in this type indicate parameters associated with a command for which you must substitute the appropriate value. For example, when entering the <b>mount</b> command, <b><i>device</i></b> must be replaced with the name of the drive that contains the installation disk.
<b>File, OK, Enter</b>	Words in bold refer to items on menus and screens that you select to perform a task, or to keys you must press ( <b>Ctrl, Enter, Esc, Insert, Delete</b> ) to complete a procedure.
<i>italics</i>	Italic type indicates a document that contains additional information about a topic.
<u>underlined text</u>	Text in underlined type indicates a section within this document that contains additional information about a topic.

## Related documentation

---

*EC500 Extension to Cellular Version 4.1 User's Guide*, Issue 4, May 2003 (Doc Number 210-100-700, Comcode 700211196)

*Administrator's Guide for Avaya™ Communication Manager*, Issue 6, May 2003 (Doc Number 555-233-506)

*Avaya Unified Messenger® Telephone User Interface Online Guide*, accessed via <http://www.avaya.com/support>.

You can find online documentation for both EC500 Extension to Cellular and Avaya Unified Messenger® on the Avaya support website:

1. From a browser window, browse to <http://www.avaya.com/support>.
2. Click **Product Documentation**.
3. Click **Products A-Z** in the left navigation pane.
4. In the right display pane, click the letter (E or U) associated with the product, or scroll down and select the product (EC500 or Unified Messenger) whose documentation you wish to view.

Select the appropriate document, and, if applicable, format (typically .pdf or ZIP file).

## Trademarks

---

All trademarks identified by the ® or ™ are registered trademarks or trademarks, respectively, of Avaya Inc. All other trademarks are the property of their respective owners.



---

# Overview of EC500 Extension to Cellular

# 1

---

## Introduction

---

EC500 offers users the freedom to work anywhere, anytime, using any type of cellular or wireless phone.

**⇒ NOTE:**

EC500 works with any type of wireless or cellular service. For ease of reference, the remainder of this document refers to EC500 and your cell phone.

With EC500, calls to an office number are extended to a cell phone, allowing users to receive work-related calls wherever they are and whenever they need to. Additionally, the cell phone can be administered so that when a user calls into the office, the user's name and office telephone number appear in the caller ID display of the phone being called. When the EC500 cell phone is administered to send office caller ID, the user also has the option of picking up an ongoing EC500 cell phone call on the office phone upon entering the office.

The cell phone user receives the same features and capabilities for incoming calls as a caller ID-enabled analog telephone connected directly to the Avaya server running Communication Manager. EC500 provides this capability regardless of the cell phone's cellular service provider or the cellular standard in use.

This guide describes the high-level functions of EC500, hardware and software requirements for implementation, and the installation, administration, and maintenance tasks necessary to set up and maintain EC500 Extension to Cellular Version 4.1.

Its companion document, *EC500 Extension to Cellular Version 4.1 User's Guide*, provides basic use information for EC500.

## **What's new in EC500 Version 4.1**

---

EC500 Extension to Cellular Version 4.1 enhancements include the addition of an administrable terminal feature button that:

- Enables/disables EC500
- Enables an optional one-hour timer that temporarily suspends EC500 services

The EC500 feature button is available on terminal sets which support administrable feature buttons. You administer the button on the "principal" extension - the extension to which the EC500 is linked.

## **Customer configurations**

---

EC500 provides the ability to operate a cell phone as a standard, caller ID-enabled telephone connected directly to the Avaya server running Communication Manager. The most commonly-implemented configuration is dual bridge mode. This configuration provides two call appearances to bridge a cell phone with call waiting to an office number. The dual bridge mode configuration allows for administration that causes an office caller ID to be sent to calls on the switch from the EC500 cell phone. A variation on this implementation would be to bridge only one call appearance on the cell phone to the office number.

In cases where a user does not require a physical office number, the cell phone can be bridged to an administration without hardware (AWOH) extension on the Avaya server running Communication Manager. This configuration gives the user an enterprise presence for incoming business calls via the cell phone.

This guide focuses on the dual bridge mode configuration. Other customer configurations - multiple bridge mode, single bridge mode, and standalone mode - are discussed in [Appendix A, "Avaya EC500 - other configurations"](#).

An EC500 cell phone can now be administered to allow office caller ID to be sent when the user calls into the switch from that EC500 cell phone.

## **Platforms**

---

EC500 Extension to Cellular Version 4.1 is available on any Avaya server running Communication Manager. Any capacity differences are due to differences in the numbers of stations, trunks, circuit packs, and media modules supported on the different platforms.

## **EC500 versions and Communication Manager**

---

Following are the versions of EC500 that correspond to releases of Avaya™ Communication Manager (formerly MultiVantage™ Software):

**Table 1-1. Communication Manager-to-EC500 mapping**

<b>Communication Manager / MultiVantage™ release</b>	<b>EC500 version</b>
Communication Manager Release 1.3	EC500 Version 4.1
MultiVantage™ Software Release 1.2 (load 110.x)	EC500 Version 4
MultiVantage™ Software Release 1.1.2 (load 65.x)	EC500 Version 4
MultiVantage™ Software Release 1.1.1 (load 60.x)	EC500 Version 3

## **System access terminal screens**

---

The screens in this guide may not exactly match the version that exists on the system access terminal for your Avaya server running Communication Manager. However, all fields described here as essential for EC500 setup and administration can be found on all versions of the terminals, regardless of any variation in field layouts.

## **Feature description**

---

EC500 allows a cell phone in an external network to be treated as if it were an extension on the Avaya server running Communication Manager. This is accomplished by administering the cell phone as an XMOBILE bridge of the user's main office number.

There are three modes in which an EC500 cell phone can be mapped to the user's main office number. The modes are used to control the degree of integration between their cell phone and main office number. The modes are valid for EC500 calls only - calls to the user's main office number when EC500 is enabled, and calls from the cell phone into the user's switch when EC500 is enabled. All other types of calls, such as direct calls to and from the published cell phone number, are unaffected by EC500; the user's cell phone performs exactly as it did prior to enabling it for EC500.

Mapping modes are administered via the Station screen for the XMOBILE occurrence.

**Figure 1-1. XMOBILE Station screen, page 1**

```
change station xxxx                                     Page 1 of X
STATION

Extension: 2002                                         Lock Messages? n      BCC: 0
Type: XMOBILE                                           Security Code:        TN: 1
Name:                                                    Coverage Path 1:     COR: 1
                                                    Coverage Path 2:     COS: 1
Hunt-to Station:

STATION OPTIONS

XMOBILE Type: EC500                                     Message Lamp Ext: 2002
Display Module? y                                       Message Waiting Type: ICON
Display Language: english                             Length of Display: 12x3
Mobility Trunk Group:                                  Calls Allowed: all
Configuration Set:

CELL PHONE NUMBER MAPPING
Dial Prefix:
Cell Phone Number:
Mapping Mode: termination
```

### EC500 calls terminating to a cell phone

This mode is enabled by setting the Mapping Mode field on the XMOBILE Station screen to **termination**.

In termination mode, EC500 calls may terminate only to the remote cell phone via routing from the bridged XMOBILE extension. Calls originating from the cell phone are completely independent of EC500 and behave exactly as before enabling EC500.

### EC500 calls originating from a cell phone

This mode is enabled by setting the Mapping Mode field on the XMOBILE Station screen to **origination**.

In origination mode, calls into the user's main switch which originate from the cell phone are received by the XMOBILE bridged extension and considered EC500 calls. These EC500 calls behave as if they originated from the user's main office number and send office caller ID to the called party.

In this mode, the office caller ID always sends for EC500 calls, regardless of whether EC500 is enabled or disabled.

## **EC500 calls both to and from the cell phone**

This mode is enabled by setting the `Mapping Mode` field on the XMOBILE Station screen to **both**.

In this mode, EC500 calls may terminate to the remote cell phone and calls originating from the remote cell phone into the user's main switch are considered EC500 calls. The EC500 cell phone sends office caller ID, while at the same time keeping the cell phone call waiting capabilities in effect while receiving calls.

In this mode, the office caller ID always sends for EC500 calls, regardless of whether EC500 is enabled or disabled.

## **Office caller ID**

Depending on how the XMOBILE station is administered, the EC500 cell phone gains the identity of the user's office extension when calling into the office switch. When the EC500 user is administered to send the office caller ID and calls into the office, the person receiving the call sees the office name and number of the caller, not the cell phone caller ID. This type of administration provides in-house caller identification at the destination phone, and allows the user to bridge onto the office phone.

When the EC500 cell phone is administered to send office caller ID, this behavior is in effect whether the EC500 extensions are enabled or disabled. However, while someone else is using the line appearance on the office phone that is the same as that administered for the EC500 cell phone call to send office caller ID, the office caller ID is temporarily unavailable.

An EC500 cell phone that is administered to gain the identity of the office phone has the following functionality:

- When calling a number on the office switch, the user's name and office phone extension appear as caller ID on the destination phone.
- Because of the bridging administration that causes the EC500 cell phone to gain the identity of the office phone, the user can initiate a call to the office on the EC500 cell phone, and pick up that same call, in progress, on the office phone.

- When calling into the same office switch on which EC500 is administered, the EC500 cell phone keypad functions as if it were an office phone extension. For example:
  - When a user calls into corporate voice messaging system, the EC500 behaves as an extension on the switch. The extension is recognized by the voice messaging system as such.
  - When a user calls into the EC500 access number from an EC500 cell phone that sends office caller ID, then invokes the EC500 feature access code to enable or disable EC500 or to change station security code, the EC500 cell phone behaves as if it were an extension on the switch.

This feature is best administered by setting the `Mapping Mode` field on the Station screen to **both** for the XMOBILE station associated with the second line appearance of the office phone. The first line appearance should be set to **termination** on this screen.

### Enabling and disabling EC500

The user can enable and disable EC500 from:

- An administered feature access button on the office telephone
- The office number associated with the cell phone
- Any other touch-tone station on the switch
- Any touch-tone phone (cell or otherwise) in the external network, through the trunk interface to the switch via an EC500 access number (as set in the `Telecommuting Access Extension` field on the Telecommuting Access screen).

Security codes are available for this feature to protect the phone from unwanted tampering.

 **NOTE:**

Security codes do not protect enabling/disabling via an administered feature access button on the office telephone.

You can display the enabled/disabled status for an EC500 cell phone using the **status station** command. See ["Status station command" on page 5-6](#) for more information. If the EC500 feature status button has been administered, you can also tell the current EC500 status by viewing the corresponding feature status button lamp on the linked office telephone.

The administration of an EC500 to send the office caller ID remains in effect whether EC500 is enabled or disabled.

### **EC500, security codes, and console permissions**

While security codes are available to protect activation of this feature, you do not need to set security codes if you have console permissions as set on the Class of Service (COR) screen.

- You do not need console permissions to activate EC500.
- If you have console permissions, you do not need a security code to activate EC500.
- If you do not have console permissions, you do need a security code to activate EC500.

### **Call waiting, call identification, and voice mail**

EC500 allows use of standard cellular features such as incoming call waiting and caller ID.

- If the cell phone (and network) supports calling number identification, the Avaya server running Communication Manager delivers the calling number to the cell phone. For internally-originated calls, the calling number may be presented in either the national numbering plan format (10 digits) or as an extension fewer than 10 digits, depending upon how calling number identification is administered. Some cellular phone networks only pass calling number information in the national format, while others are more flexible.
- If the cell phone (and network) supports call waiting, EC500 can be administered to deliver a second call to the cell phone while it is busy on another call. The cell phone features (for example, swapping calls or conferencing calls) may be used to answer the second call and manipulate the two calls via the cell phone.

Since the cell phone is treated as a local extension on the Avaya server running Communication Manager, it can be completely integrated with the corporate voice messaging system while retaining its own cellular service provider voice mail.

- The office number retains the primary extension on the Avaya server running Communication Manager.
- Calls to the office number simultaneously ring the office number and the cell phone. If neither answer then standard coverage arrangements take effect.
- As needed, EC500 can be disabled when not in use in order to ensure the use of the corporate voice messaging system.

The system administrator can control in-service and out-of-service status of the bridged extensions through a busy-out and release maintenance capability.

## **ARS/AAR routing**

---

EC500 builds on a Communication Manager feature called X-Mobility that allows extensions to be remotely connected over an ISDN trunk. Unlike traditional off-premises extensions, the stations are not tied to fixed channels on the T1/E1 interface. Instead, channels are allocated dynamically with each new call, allowing significantly more efficient usage of the T1/E1 interfaces via traffic engineering.

In most respects, these stations, administered with a station type of XMOBILE, behave like regular analog (POTS) telephones. In particular, they can be bridged to office numbers.

Routing of EC500 extended calls takes the following path:

1. ARS (or AAR) digit conversion is applied to the administered cell phone number.
2. ARS (or AAR) analysis is applied to the result of Step 1.
3. The ARS (or AAR) analysis chooses a routing pattern.

Each entry in the routing pattern is tried in order; however, if the trunk group for a particular entry is non-ISDN or non-IP, it is skipped.

4. A trunk group is chosen for the EC500 call and the call is sent.

If no trunk is available, the EC500 call is not extended; however, the original call is not affected. The caller will continue to receive ringback until the call covers or the caller abandons it.

## **Call filtering**

---

Call filtering allows you to manage cell phone costs by limiting the type of calls extended to the cellular network based on the type of incoming call received at the XMOBILE stations. You can choose to deliver, on a per-user basis, external calls, internal calls, all calls, or no calls.

Internal call filtering allows the switch to extend EC500 calls for all internal incoming calls; external call filtering does the same for all public-network incoming calls.

EC500 calls are not extended when the `Calls Allowed` field is set to **none** (see [Figure 1-1 on page 1-4](#)). When call filtering does not allow a call, the EC500 call is not delivered, the call may be forwarded, go to coverage, or apply busy treatment for the calling party.

Call filtering provides the system administrator with control over the type of incoming calls that EC500 users receive on their cell phones. With EC500 call filtering, the system administrator can restrict cell phone calls based on the incoming call type received by the XMOBILE station.

## **Call filtering and bridged XMOBILE stations**

XMOBILE stations can connect cell phones in bridged configurations. Dual-bridged XMOBILE stations are bridged to a principal published phone number, usually a user's office telephone. Up to two call appearances of the office telephone, or an AWOH station, are bridged to two separate XMOBILE stations. Both XMOBILE stations map to the same cell phone number.

The Avaya server running Communication Manager calls the cell phone when the principal station receives an incoming call. Calls are delivered to the cell phone based on the screening of internal and external calls. Screening applies after the called party restriction of the station's assigned COR, the XMOBILE station's EC500 state, and the EC500 XMOBILE station mapping are evaluated.

## **Call filtering and standalone XMOBILE stations**

XMOBILE stations can connect cell phones as standalone stations. The Avaya server running Communication Manager calls the cell phone when the published number of the standalone XMOBILE station receives an incoming call. Calls are delivered to the cell phone based on the screening of internal and external calls.

If the call cannot be delivered to the cell phone and the call is not redirected, the calling party hears a busy signal. Screening is applied only after the called party restriction of the station's assigned COR, the XMOBILE station's EC500 state, and the EC500 XMOBILE station mapping mode are evaluated.

Call processing uses the call filter setting in conjunction with the call restrictions in an XMOBILE station's COR to determine the called party restrictions for EC500, DECT, and PHS XMOBILE stations. The station's call filter setting is used to allow or deny delivery of internal and/or external incoming calls at the mobile phones.

## **Call detail recording**

EC500 provides call detail recording (CDR) options for calls to cell/external phones. You can administer such calls to be treated as:

- Trunk calls (CDR record generated)  
This option may be desirable if you want to track calls to cell phones for reporting or billing purposes  
or
- Calls to an internal station extension (no trunk CDR record generated)

When a call is made to an XMOBILE station, the CDR for Calls to EC500 Destination field on the Configuration Set screen determines whether a CDR report is generated

**Figure 1-2. Configuration Set screen**

```
change xmobile configuration-set 1                               Page 1 of 1
                                CONFIGURATION SET: 1
Configuration Set Description:
  Calling Number Style:
CDR for Calls to EC500 Destination?
  Fast Connect on Origination?
  Post Connect Dialing Options?
```

This allows you flexibility in billing or tracking calls to phones that are mapped to XMOBILE extensions.

CDR reporting for EC500 calls relies on the CDR Reports field on the Trunk Group screen. If this field is **n**, CDR reports will not be generated even if the CDR for Calls to EC500 Destination field on the Configuration Set screen is **y**.

**Figure 1-3. Trunk Group screen, page 1**

```
add trunk-group next                                         Page 1 of 21
                                TRUNK GROUP
Group Number: 3                Group Type: co                CDR Reports: y
Group Name: OUTSIDE CALL        COR: 1                TN: 1                TAC:
Direction: two-way              Outgoing Display? n
Dial Access? n                  Busy Threshold: 255    Night Service:
Queue Length: 0                 Country: 1              Incoming Destination:
Comm Type: voice                 Auth Code? n            Digit Absorption List:
Prefix-1? y                      Trunk Flash? n          Toll Restricted? y

TRUNK PARAMETERS
  Trunk Type:
  Outgoing Dial Type: tone                Cut-Through? n
  Trunk Termination: rc                    Disconnect Timing(msec): 500

  Auto Guard? n    Call Still Held? n    Sig Bit Inversion: none
  Analog Loss Group: 6    Digital Loss Group: 11
  Trunk Gain: high

Disconnect Supervision - In? y Out? n
Answer Supervision Timeout: 10    Receive Answer Supervision? n
```

Configuration Set fields on the XMOBILE Station screen (see [Figure 1-1 on page 1-4](#)) must contain the configuration set number when the CDR for Calls to EC500 Destinations field is **y**.

## Capacity limitations

---

The maximum number of XMOBILE stations that can be administered on a switch is based on the station maximum on the switch. Therefore, the number of cell phones in EC500 is limited to 33% of the station maximum, assuming dual-bridge mode, and depending upon the user configuration of your implementation.

In addition, there is a practical limit based upon the number of trunks available to service XMOBILE calls. Maximum cell phones are:

- 12,000 for S8700 Media Server for Multi-Connect Configurations
- 8,300 for Avaya DEFINITY® Server R
- 4,000 for S8700 Media Server for IP-Connect Configurations
- 800 for Avaya DEFINITY® Server SI
- 300 for S8300 Media Server with Avaya G700 Media Gateway and other small configurations

See ["Display capacities" on page 5-2](#) for how to access XMOBILE station usage information for your system.

Traffic engineering is needed to ensure that there are enough trunks available to handle the traffic sent to the cell phones.

## Security considerations

---

The EC500 feature does not degrade security on the Avaya server running Communication Manager. There is no capability for the malicious user to change the destination (cell phone number) that XMOBILE calls are sent to.

EC500 makes use of station security codes to ensure that the user has control over who is enabling and disabling his or her extensions.

### NOTE:

The exception is the ability to enable and disable EC500 and to, if so configured, enable an EC500 timer from an administered feature button on the office telephone. Security codes are not required to use an administered feature button on a office telephone.

In addition, the XMOBILE station busy-out and release capability allows an administrator to temporarily take extensions offline as necessary due to lost or stolen cell phones. For a more permanent solution, remove the bridging administration associated with the XMOBILE station.

While using an EC500 cell phone on a business call, the user may hear a beep tone indicating someone has picked up the office number and is listening in on the call. Avaya provides that beep tone for security purposes. If a user suspects unauthorized use of the office number or an enabled EC500 cell phone, the call should be ended immediately and the user's station security code(s) should be changed immediately. See [Chapter 5, "Maintenance"](#), and [Chapter 6, "Troubleshooting"](#), for more information on handling this situation.

If additional security is required, administer one of Avaya's exclusion features.

## **Feature operation**

When EC500 is administered, the cell phone is initially in a disabled state. Users need to enable their cell phones before they can begin to use the EC500 solution.

### **Enabling/disabling EC500 via feature access codes**

Enabling and disabling EC500 is accomplished using EC500 "enable" and "disable" feature access codes. These codes need to be set through the system administration terminal and then communicated to the users. (See [Chapter 3, "Administration"](#) for procedures to set up these feature access codes).

Using these codes, the user can disable or enable all XMOBILE stations associated with his or her office number.

EC500 "enable" and "disable" feature access codes are used in the following way.

- A user wishes to enable or disable all the EC500 XMOBILE stations using his or her office telephone. The user enters the following in sequence:
  - The EC500 "enable" or "disable" feature access code
  - # to bypass entering the office telephone
  - The office number station security code
  - A final #

The user receives either a confirmation or an intercept tone, depending upon the success or failure of the procedure.

- A user wishes to enable or disable all EC500 XMOBILE stations using an internal extension that is not his or her office telephone. The user enters the following in sequence:
  - The EC500 "enable" or "disable" feature access code
  - The extension number of his or her office number, followed by #
  - The office number station security code
  - A final #

The user receives either a confirmation or an intercept tone depending upon the success or failure of the procedure.

- A user wishes to enable or disable EC500 XMOBILE stations from any phone in the external network. The user enters the following in sequence:
  - The Avaya EC500 access number (telecommuting access number)  
The user should receive a dial tone.
  - The EC500 "enable" or "disable" feature access code
  - The extension number of his or her office number followed by #  
If calling from an EC500 cell phone administered to send office caller ID, the user can skip the extension number.
  - The office number station security code
  - A final #

The user receives either a confirmation or an intercept tone depending upon the success or failure of the procedure.

These procedures enable or disable all EC500 XMOBILE stations at the same time. If you want your users to have the ability to individually enable and disable each bridged extension, see [Appendix A, "Avaya EC500 - other configurations"](#).

### **Enabling and disabling EC500 via an administered feature button on the office telephone**

---

EC500 Extension to Cellular Version 4.1 provides users the ability to enable and disable EC500 from an administered feature button on the office telephone. For this option to be available, the office telephone must support administrable feature buttons and enhanced EC500 must be enabled.

The number of button-pushes required to enable this feature depends upon the current state of the feature (enabled or disabled) and whether the optional EC500 timer is administered.

When enabled via an administered feature status button on the office telephone, no feature access code is required.

**Table 1-2. Enabling EC500 via an administered feature status button**

EC500 state	Timer status	Push feature button	Indicators
Disabled (lamp is off)	Not administered	Once	Lamp glows green  Message <b>EC500 Enabled</b> displays for two seconds
Disabled (lamp is off)	Administered	Once	Lamp glows green  Message <b>EC500 Enabled</b> displays for two seconds
Timer active (lamp in inverted wink mode)	Administered	Twice	Lamp glows green  Message <b>EC500 Enabled</b> displays for two seconds

 **NOTE:**

The feature status button on the office telephone indicates the current state of EC500 regardless of whether the feature was enabled remotely or directly from the office telephone.

**Receiving calls**

EC500 is a solution for delivering office calls to a cell phone through the Avaya server running Communication Manager.

With EC500, when a call is made to an office number with a mapped XMOBILE bridge, the call is extended out of the Avaya server running Communication Manager to alert a cell phone. When the EC500 user has the EC500 *calls Allowed* field set to **none** (see [Figure 1-1 on page 1-4](#)), EC500 calls are not delivered. If the Avaya server running Communication Manager is administered to send calling number information, that information is presented to the cell phone. When the cell phone answers the call, the Avaya server running Communication Manager treats it like a local answer of a physically-connected station, and the following is true:

- Status station of the XMOBILE station shows it off-hook. It shows both the port used on the outbound trunk group and the other connected port.
- Any office number busy indicators tracking the XMOBILE station light up to show that it is busy.
- Any other station linked to the call as part of a bridge or temporary bridge is able to bridge on to that call.

## Making calls

---

Calls can be made to any number from the EC500 cell phone. Depending on how the EC500 XMOBILE stations are administered, the EC500 cell phone can function both as a standard cell phone and as an office extension when the calls are made into the user's office switch. Administering an EC500 cell phone to send office caller ID allows the EC500 cell phone call to the switch to appear as a local extension on the switch.

The `Mapping Mode` field on the XMOBILE Station screen (see [Figure 1-1 on page 1-4](#)) for XMOBILE administration controls whether an EC500 cell phone is administered to gain the identity of the office phone (sends the office caller ID). To accomplish this, the `Mapping Mode` field for the EC500 XMOBILE station associated with the second line appearance of the office phone is set to **both**. Since the office caller ID is inactive if the associated line appearance on the principal office phone is in use, the second line appearance, which is less likely to be in use, is administered to allow office caller ID. The EC500 XMOBILE station associated with the first line appearance should be set to **termination**.

If the `Mapping Mode` field entry is set to administer the EC500 cell phone to gain the identity of the office phone, the EC500 call into the switch acts as if it originated from the XMOBILE station with the following results:

- Status station of the XMOBILE station shows it off-hook. It shows both the port used on the inbound group and the other connected port.
- Any office number busy indicators tracking the XMOBILE station light up to show that it is busy.
- Any other station linked to the call as part of a bridge or temporary bridge is able to bridge on to that call.
- The office name and number associated with the XMOBILE station appears as the caller ID.
- The EC500 cell phone call is automatically bridged onto the EC500 user's desk phone, as well as connecting with the destination number.

## Feature interactions

---

Generally, an XMOBILE station may be administered (and used) like an analog station. The following are exceptions.

### Attendant

If the `Calls Allowed` field on the XMOBILE Station screen (see [Figure 1-1 on page 1-4](#)) is **internal**, attendant-originated and attendant extended calls are not delivered.

## Call coverage

If you want to ensure that unanswered calls go to office voice mail (rather than the cell phone's voice mail) make sure the value in the `Number of Rings` field on the Coverage Path screen for the office telephone is set to a lower number than the voice mail coverage setting on the corresponding cell phone. See ["Voice mail administration" on page 3-17](#).

## Cellular service provider voice mail

While XMOBILE stations may have standard Avaya server running Communication Manager voice mail coverage (for example, AUDIX®), cell phones usually have voice mail coverage from the cellular service provider. Although there is no way to indicate a preference for use of a specific system, there is a way to coordinate the two systems.

It is generally possible to set up the number of "don't answer" rings so that one or the other always answer first. However, there are coverage options in both the Avaya server running Communication Manager (busy, active, send-all-calls) and the network (cell phone unavailable, network congested) that causes a call to immediately go to the respective voice mail. Users should realize that an unanswered call might result in a voice mail message in either mailbox.

## Class of restriction

For calls toward an XMOBILE station, COR restrictions are applied normally for a call terminating to a station. In particular, if the XMOBILE station is a bridge, then the principal's COR applies, not the XMOBILE's. Any restrictions imposed by call filtering are applied after those imposed by the COR. Calling party restrictions pertaining to trunks (outward, tac-toll, and all-toll) have no affect on the launching of EC500 calls.

## DCS

Inter-switch calls on DCS trunks are treated as internal calls.

- When an EC500 user has the `Calls Allowed` field on the XMOBILE Station screen set to **internal** or **all**, DCS calls are delivered to the cell phone.
- When an EC500 user has the `Calls Allowed` field set to **external** or **none**, DCS calls are not delivered.

## Distinctive alerting

Cell phones do not receive distinct rings for different types of calls.

## Duplication station administration

Use the ***duplicate station*** command for the bulk administration of XMOBILE stations. The `Calls Allowed` field defaults to **all** for all duplicated XMOBILE stations. They may be changed individually by using the ***change station*** command.

## EC500 activation/deactivation

EC500 calls can be enabled or disabled using the EC500 “enable” and “disable” feature access codes. EC500 users enable/disable EC500 calls using feature access codes, an administered feature button on the corresponding office telephone, or the UCC-EC500 Scheduler. The EC500 call filter settings can restrict EC500 calls only when the cell phone is EC500-enabled. When the cell phone is EC500-disabled, no calls are delivered.

## EC500 with office caller ID calling another EC500 user

Incoming calls from other EC500 users are internal calls if office caller ID is enabled for the XMOBILE station associated with the cell phone.

- When an EC500 user has the `Calls Allowed` field set to **internal** or **all**, the EC500 calls are delivered.
- When an EC500 user has the `Calls Allowed` field set to **external** or **none**, then calls from other EC500 users are not delivered.

## Feature access codes

The cell phone can activate Avaya server running Communication Manager features accessible via the EC500 access number (telecommuting access number).

## Message waiting indication

The cell phones cannot receive any form of message waiting indication directly from the Avaya server running Communication Manager.

## “Notify me” under Unified Messenger for MS Exchange

Users with access to the “notify me” feature of Unified Messenger® for Microsoft Exchange® (Version 4.0 or later), are notified of messages in the corporate voice mailbox via the cell phone’s display. For more information on using this feature, see “Setting Notify Me” in the *Unified Messenger Telephone User Interface Online Guide*, accessed via <http://www.avaya.com/support>.

### NOTE:

The user’s cell phone must support text messaging to use this feature.

## QSIG

Inter-PBX calls on QSIG trunks are treated as internal calls.

- When an EC500 user has the `Calls Allowed` field set to **internal** or **all**, QSIG calls are delivered.
- When an EC500 user has the `Calls Allowed` field set to **external** or **none**, QSIG calls are not delivered.

## EC500 scheduler application

To run EC500 Scheduler Application, you need to purchase Unified Communications Center (UCC) in addition to EC500.

The EC500 Scheduler Application service provides the user with an HTML browser-based interface in which a user can administer entries and rules to schedule events that turn EC500 on or off. Users can configure a profile based on time and day of the week.

For additional information, see the *UCC Administrator's Guide* at <http://www.avaya.com/support>.

---

### Installation

---

This section describes installation and settings that must be in place before you can administer the EC500 bridges.

### Configuration/environment requirements

---

EC500 Extension to Cellular Version 4.1 is available on Avaya servers running Avaya™ Communication Manager Release 1.3. Any capacity differences are due to differences in the numbers of stations, trunks, and circuit packs supported on the different Avaya servers running Communication Manager.

### Setting customer options

---

The license for a customer with EC500 will have the following options set on the System-Parameters Customer-Options screen. Page number references refer to the screen page number.

- `G3 Version` must be set to `V11` or greater (page 1).
- `Maximum XMOBILE Stations` must be set to the number of XMOBILE stations that are to be used for EC500 (page 1). This number must be greater than zero. It is usually two times the number of users.
- `Enhanced EC500` must be set to `y` (page 3). `G3 Version` and `Maximum XMOBILE Stations` must be set as described above before `Enhanced EC500` can be set to `y`.
- `ARS` must be set to `y` (page 2).
- `Extended Cvg/Fwd Admin` must be set to `y` (for access to the Telecommuting Access screen where you set the EC500 access code) (page 3).
- `ISDN-PRI` must be set to `y` (page 3).

## **Administration planning**

---

In a typical EC500 configuration, the XMOBILE station, which is mapped to the cell phone, is bridged to the principal published number, which is usually a user's office number. In order to support call waiting on the cell phone, two XMOBILE stations which are mapped to the same cell phone are bridged to the two call appearances of the office number. (For example, XMOBILE Station One is bridged to call appearance One of the office number; XMOBILE Station Two is bridged to call appearance Two of the office number.)

The second line appearance should be administered to send office caller ID.

EC500 gives users control over whether to receive EC500 calls on their cell phone. Users have the ability to enable and disable all bridged extensions with one phone call, or to disable one extension at a time.

## **Planning requirements**

---

EC500 users expect to receive the following information from the system administrator:

- The station security code associated with the office number.
- The "change station security code" feature access code.
- EC500 "enable" and "disable" feature access codes (EC500 Activation/Deactivation on the system administration terminal).
- The Avaya EC500 access number (as set in the *Telecommuting Access Extension* field on the *Telecommuting Access* screen).

In support of these requirements, specify the following:

- A dial plan for XMOBILE extensions.
- An extension number for the Avaya EC500 access number.
- EC500 activation and deactivation codes to enable and disable EC500.
- A feature access code for changing the station security code.

## **Dial plan for XMOBILE stations**

---

Have a specific scheme for assigning XMOBILE stations. It will be easier to manage administration and user support with an organized, consistent numbering plan. There are different ways to organize a dial plan:

- Special first digits for XMOBILE extensions (see Example 1).
- Correlation between XMOBILE extensions and office number (see Example 2).
- Correlation between XMOBILE extensions and cell phone numbers (see Example 3).

The following examples show possible ways to organize the dial plan.

**Example 1:**

office number 1234  
cell phone 777-555-8765  
XMOBILE 1 2234  
XMOBILE 2 3234

**Example 2:**

office number 1234  
cell phone 777-555-8765  
XMOBILE 1 1235  
XMOBILE 2 1236

**Example 3:**

office number 1234  
cell phone 777-555-8765  
XMOBILE 1 2765  
XMOBILE 2 3765

## **Security codes**

---

Select an Avaya EC500 access number which is accessible externally as well as internally. This is set in the `Telecommuting Access Extension` field on the `Telecommuting Access` screen. See [Chapter 3, "Administration"](#).

Select station security codes for the principal phone and its associated XMOBILE extensions.

Also, select a "station security code change" feature access code. When an XMOBILE station is added, it needs to be given a default security code. Users should ultimately set their own office number security code using the "station security code change" feature access code.

## **Enabling and disabling feature access codes**

---

Select the EC500 "enable" and "disable" feature access codes. These are set in the `Change Feature Access Codes` screen in the system administration terminal.



---

## Introduction

---

This chapter provides instructions for setting up and administering:

- XMOBILE station administration
  - ARS/AAR routing (see “Mobility Trunk Group” on [page 3-5](#))
  - EC500 cell phones to send office caller ID (see ["Sending 10-digit caller identification for locally-originated calls" on page 3-9](#))
  - Call filtering (see ["Duplicate station administration" on page 3-11](#))
- Call detail recording enhancements (see “CDR for Calls to EC500 Destination” field on [page 3-21](#))
- The Duplicate Station command for bulk addition of EC500 XMOBILE extensions (see ["Duplicate station administration" on page 3-11](#))
- A “change station security code” feature access number for the user to change the phone number station security code (see ["Creating a change feature access code for station security codes" on page 3-23](#))
- The EC500 access number for external access to feature access codes features (see ["Setting up the Avaya EC500 access number" on page 3-15](#))
- The EC500 “enable” and “disable” feature access codes (see ["Setting up the Avaya EC500 enable/disable feature access codes" on page 3-16](#))
- Voice mail coordination between the office and the cell phones (see ["Voice mail administration" on page 3-17](#))

Most EC500 administration tasks are accomplished through the system administration terminal (SAT). The SAT screens in this guide are meant to be examples and may not match exactly with the version that exists on the system administration terminal for your Avaya server running Avaya™ Communication Manager.

However, all fields described here as essential for EC500 set-up and administration can be found on all versions of the terminals, regardless of the variations in field layouts. In the screens shown here, the essential fields are indicated in bold-face underlined type.

## Setting the customer options for EC500

Before you can administer the EC500 extensions, the following settings in the System-Parameters Customer-Options screen on the system administration terminal must be enabled for your system as determined by the installed license file.

**Figure 3-1. System-Parameters Customer-Options screen, page 1**

```

display system-parameters customer-options                               Page 1 of 10
                                OPTIONAL FEATURES
                                Used
G3 Version: V11                                Maximum Ports: 20310 30
Location: 1                                Maximum XMOBILE Stations: 5010 0
Platform: 8

IP PORT CAPACITIES
                                Maximum Administered IP Trunks: 4001 9
                                Maximum Concurrently Registered IP Stations: 5005 9
                                Maximum Administered Remote Office Trunks: 100 0
Maximum Concurrently Registered Remote Office Stations: 100 1
                                Maximum Concurrently Registered IP eCons: 0 0

                                Maximum Number of DS1 Boards with Echo Cancellation: 0 0
                                Maximum VAL Boards: 10 0

(NOTE: You must logoff & login to effect the permission changes.)

```

- G3 Version must be set to V11 or greater.
- Maximum XMOBILE Stations must be set to the number of XMOBILE stations that are to be used for EC500. This number must be greater than zero. It is usually two times the number of users.

**Figure 3-2. System-Parameters Customer-Options screen, page 2**

```

display system-parameters customer-options                               Page 2 of 10
                                OPTIONAL FEATURES

Abbreviated Dialing Enhanced List? n      Audible Message Waiting? y
Access Security Gateway (ASG)? n          Authorization Codes? y
Analog Trunk Incoming Call ID? y          CAS Branch? y
A/D Grp/Sys List Dialing Start at 01? y   CAS Main? y
Answer Supervision by Call Classifier? y   Change COR by FAC? n
ARS? y Computer Telephony Adjunct Links? y
ARS/AAR Partitioning? y                   Co-Res DEFINITY LAN Gateway? n
ARS/AAR Dialing without FAC? n            Cvg Of Calls Redirected Off-net? y
ASAI Link Core Capabilities? y            DCS (Basic)? y
ASAI Link Plus Capabilities? y            DCS Call Coverage? y
Async. Transfer Mode (ATM) PNC? y         DCS with Rerouting? n
Async. Transfer Mode (ATM) Trunking? n
ATM WAN Spare Processor? n                Digital Loss Plan Modification? y
ATMS? y                                    DS1 MSP? n
Attendant Vectoring? n                    DS1 Echo Cancellation? y
    
```

ARS must be set to **y** (page 2).

**Figure 3-3. System-Parameters Customer-Options screen, page 3**

```

display system-parameters customer-options                               Page 3 of 10
                                OPTIONAL FEATURES

Emergency Access to Attendant? y          ISDN Feature Plus? n
Enable 'dadmin' Login? y                  ISDN Network Call Redirection? n
Enhanced Conferencing? y                  ISDN-BRI Trunks? y
Enhanced EC500? y                          ISDN-PRI? y
Extended Cvg/Fwd Admin? y                    Local Spare Processor? n
External Device Alarm Admin? n            Malicious Call Trace? n
Five Port Networks Max Per MCC? n         Mode Code for Centralized Voice Mail? n
Flexible Billing? n
Forced Entry of Account Codes? y          Multifrequency Signaling? y
Global Call Classification? n             Multimedia Appl. Server Interface (MASI)? n
Hospitality (Basic)? y                    Multimedia Call Handling (Basic)? y
Hospitality (G3V3 Enhancements)? y       Multimedia Call Handling (Enhanced)? y
IP Trunks? y                              Multiple Locations? y
                                           Personal Station Access (PSA)? y

IP Attendant Consoles? n
IP Stations? y
Internet Protocol (IP) PNC? n
    
```

- Enhanced EC500 must be set to **y** (page 3). G3 Version and Maximum XMOBILE Stations must be set as previously described before Enhanced EC500 can be set to **y**.
- Extended Cvg/Fwd Admin must be set to **y** (for access to the Telecommuting Access Number screen where you set the EC500 access code) (page 3).
- ISDN-PRI must be set to **y** (page 3).

## **XMOBILE station administration**

---

The cell phone number is mapped to an XMOBILE station type on the Avaya server running Communication Manager. If the cell phone supports call waiting, two XMOBILE extensions are administered on the Avaya server running Communication Manager for the cell phone. Each extension is bridged to a call appearance of a multi-function station. The station may be a standard office number (presumably the primary extension of the cell phone user) or may be an AWOH (Administration Without Hardware) dummy station to provide a single Avaya server running Communication Manager extension for the cell phone.

### **⇒ NOTE:**

When the EC500 is administered, the initial state of the cell phone is disabled. You must enable the EC500 in order to receive calls from the Avaya server running Communication Manager.

In order to effectively administer the EC500 cell phone to gain the identity of the office phone, the XMOBILE station bridged to the first line appearance should be administered as **termination**; the XMOBILE station bridged to the second line appearance should be administered as **both**.

- For an explanation of administering the EC500 cell phone to send the office caller ID, see ["Office caller ID" on page 1-5](#).
- For information on adding XMOBILE stations in bulk, see ["Duplicate station administration" on page 3-11](#).
- For display capabilities to list XMOBILE stations by cell phone number, see ["List XMOBILE by cell phone number" on page 5-3](#).

In our example we administer two cellular-mapped XMOBILE stations as bridges of a standard Avaya server running Communication Manager office number to a cell phone. The office number is extension 1234 and the two bridged XMOBILE stations mapped to the cell phone are 1034 and 1134.

To administer the first XMOBILE station:

1. Type **add station 1034** and press **Enter**.

The Station screen appears.

**Figure 3-4. Station screen, page 1**

```

add station 1034                               Page 1 of 3
                                               STATION

Extension: 1034                               Lock Messages? n           BCC: 0
Type: XMOBILE                                 Security Code:             TN: 1
Name:                                         Coverage Path 1:          COR: 1
                                               Coverage Path 2:          COS: 1
                                               Hunt-to Station:

STATION OPTIONS

      XMOBILE Type: EC500                     Message Lamp Ext: 2002
      Display Module? y                       Message Waiting Type: ICON
      Display Language: english                Length of Display: 12x3
      Mobility Trunk Group:                    Calls Allowed: all
      Configuration Set:

CELL PHONE NUMBER MAPPING
      Dial Prefix:
      Cell Phone Number:

```

2. Enter the following fields with the appropriate values:

- Type - **XMOBILE**
- Security Code - up to 7 digits
- Name - this is a suggested value. Enter a value that will indicate that the station is for a particular person's cell phone, and for a specific call appearance.
- XMOBILE Type - **EC500**
- Mobility Trunk Group - enter **ars** or **aar**. Depending on which is chosen, the routing features of ARS or AAR are applied using the number in the Cell Phone Number field prefixed by the contents, if any, of the Dial Prefix field. The preferred is **ars** but if you want to use **aar**, private networking should be licensed.
- Display Module - **n**.
- Message Waiting Type - **none**.
- Configuration Set - enter with any value between 1-10, corresponding to the appropriate Configuration Set. See ["Changing configuration sets" on page 3-20](#).

- **Dial Prefix** - any number that might be required besides the cell phone number itself. For example, 1 for U.S. domestic long distance, or 011 for international cell phone numbers.



**NOTE:**

After you have established a dial prefix for a particular cell phone number you can change it at a later date for one XMOBILE station and the system will automatically change it for all the other XMOBILE stations that have the same dial prefix/cell phone number pair.

- **Cell Phone Number** - phone number (external to Avaya server running Communication Manager) assigned by the cellular service provider for the cell phone. For international calls, country codes must be included.



**NOTE:**

We recommend that you enter a full 10-digit cell phone number regardless of whether the cell phone is local. Note that your ARS Analysis has to be administered to handle this.

- **Mapping Mode** - values for this field are **origination**, **termination**, **both**, or **none**. The XMOBILE station associated with the first line appearance should always be administered as **termination**. See ["Office caller ID" on page 1-5](#) for more information.

**termination** - the cell phone may *only* be used to terminate calls from its associated internal XMOBILE extension.

**origination** - the cell phone may *only* be used to originate calls from its associated internal XMOBILE extension, by dialing into the office switch.

**both** - the cell phone can be used for both sending office caller ID and receiving EC500 calls.

**none** - the XMOBILE station is administratively disabled. Entering this value in the `Mapping Mode` field is an alternative to the busy-out command.



**NOTE:**

Only one XMOBILE station associated with a cell phone number can be set to **both** or **origination**.

See ["Making calls" on page 1-15](#) for information on **EC500** usage and the importance of the `Mapping Mode` field.

- Calls Allowed - values for this field are **internal**, **external**, **all** and **none**. The field defaults to **all** for newly added XMOBILE stations.

**internal** - the cell phone receives only internal calls. Public network calls to standalone XMOBILES receive busy treatment or are redirected.

**external** - the cell phone receives only public network calls. Internal calls to standalone XMOBILES receive busy treatment or are redirected.

**all** - the cell phone receives both internal and public network calls.

**none** - the cell phone will not receive any calls.



**NOTE:**

This field displays only when the XMOBILE Type field is **EC500** and the Mapping Mode field is **termination** or **both**.

3. Press **Next Page**.

The next page of the Station screen appears.

**Figure 3-5. Station screen, page 2)**

```

add station 1034                                     Page 2 of 3
                                                    STATION
FEATURE OPTIONS
  LWC Reception: spe
  LWC Activation? y
LWC Log External Calls? n
  CDR Privacy? n
                                                    Data Restriction? n
                                                    Call Waiting Indication? n
                                                    Att. Call Waiting Indication? n
                                                    Distinctive Audible Alert? n
Bridged Call Alerting? y
  Switchhook Flash? n
                                                    Per Station CPN - Send Calling Number?
Service Link Mode: as-needed
  Multimedia Mode: basic
                                                    Audible Message Waiting? n
  AUDIX Name:
Messaging Server Name:
                                                    Coverage After Forwarding? s
                                                    Multimedia Early Answer? n
Emergency Location Ext: 1034
    
```

4. Set the following fields to **n**: Switchhook Flash, Call Waiting Indication, Att. Call Waiting Indication, and Distinctive Audible Alert.

5. Press the **Next Page** button.

The next page of the Station screen appears - page 3 of 3. Use this screen to bridge the XMOBILE station extension to the office number (in the sample below, 1234) or AWOH line.

**Figure 3-6. Station screen, page 3**

```
add station 1034                                     Page 3 of 3
                                                    STATION

ABBREVIATED DIALING
  List1:                                             List2:      List3:

HOT LINE DESTINATION
  Abbreviated Dialing List Number (From above 1, 2, or 3):
                                                    Dial Code:

  Line Appearance: brdg-appr  Btn: 1  Ext:1234
```

6. Press **Enter** or **Submit**, depending on your terminal.

Administer a second EC500 extension for the cellular user to take advantage of the cell phone's call waiting feature:

1. Type **add station 1134** and press **Enter**.

The Station screen appears.

2. Enter all fields as shown for the first station you administered, with the following exceptions:
  - The Name field in the Station screen (page 1) should reflect that this second station is for call appearance 2.
  - Set the Mapping Mode field (page 1) to **both** (termination and origination). For an explanation of the administration of the Mapping Mode field, see ["Office caller ID" on page 1-5](#).
  - Set the Btn: field (page 3) to 2 for the second line appearance of the office number.
  - Do not configure an administrable feature button to enable/disable EC500. Only one instance of an EC500 feature button is allowed per office telephone.

## Sending 10-digit caller identification for locally-originated calls

Most cell phones require a 10-digit number as the calling number. The Avaya server running Communication Manager must be administered to provide this for locally-originated calls. To administer this for stations associated with either ISDN or H.323 IP trunks:

1. Type change **isdn public-unknown-numbering** and press **Enter**.  
The ISDN Numbering - Public/Unknown Format screen appears.

**Figure 3-7. ISDN Numbering - Public/Unknown Format screen**

```
change isdn public-unknown-numbering Page 1 of 8
ISDN NUMBERING - PUBLIC/UNKNOWN FORMAT
Total
Ext Len  Ext Code  Trk Grp(s)  CPN Prefix  Total CPN Len  Ext Len  Ext Code  Trk Grp(s)  CPN Prefix  Total CPN Len
4 1      732817     10
```

2. Create an entry (as above) to add a prefix to extensions to create a 10-digit calling number.
  - Ext Code - the starting digit(s) of the extension.
  - Trk Grp(s) - leaving this blank means that it applies to all trunks in the system.
3. Press **Enter** or **Submit**, depending on your terminal.

## Call filtering administration

Call filtering provides the system administrator with control over the type of incoming calls that EC500 users will receive on their cellular phones. With EC500 call filtering, the system administrator can restrict cell phone calls based on the type of the incoming call received by the XMOBILE station.

To set up a new XMOBILE station and allow it to receive only internal calls:

1. Type **add station 1135** and press **Return**.  
The Station screen appears

**Figure 3-8. Station screen.**

```

add station 1135                                     Page 1 of 4

                                STATION

Extension: 1135                                     Lock Messages? n      BCC: 0
  Type: XMOBILE                                     Security Code: *      TN: 1
  Port:                                             Coverage Path 1:     COR: 1
  Name: John Doe                                   Coverage Path 2:     COS: 1
                                                Hunt-to Station:

STATION OPTIONS
  XMOBILE Type: EC500                               Message Lamp Ext: 1135
  Display Module? n                                Message Waiting Type: none

  Mobility Trunk Group: ars                          Calls Allowed: internal
  Configuration Set: 1

CELL PHONE NUMBER MAPPING
  Dial Prefix:
  Cell Phone Number: 7321234567
  Mapping Mode: termination

```

2. In the `XMOBILE Type` field, type **EC500**.
3. In the `Mobility Trunk Group` field, type **ars**.
4. In the `Calls Allowed` field, type **internal**.  
This allows the user to receive only internal calls.
5. In the `Mapping Mode` field, type **termination**.  
This allows the user to receive calls from its associated internal `XMOBILE` extension.
6. In the `Dial Prefix` field, enter the number that might be required besides the cell phone number itself.  
For example, enter **1** for U.S. domestic long distance, or **011** for international cell phone numbers.
7. In the `Cell Phone Number` field, type **7321234567**.
8. Press **Enter** to save your changes.

### Call filtering and bridged XMOBILE stations

`XMOBILE` stations can connect cell phones in bridged configurations. Dual-bridged `XMOBILE` stations are bridged to a principal published phone number - usually a user's office telephone. Up to two call appearances of the office telephone, or an `AWOH` station, are bridged to two separate `XMOBILE` stations. Both `XMOBILE` stations map to the same cell phone number.

The Avaya server running Communication Manager calls the cell phone when the principal station receives an incoming call. Calls are delivered to the cell phone based on the screening of internal and external calls. Screening applies after the called party restriction of the station's assigned COR, the XMOBILE station's EC500 state, and the EC500 XMOBILE station mapping are evaluated.

### **Call filtering and standalone XMOBILE stations**

XMOBILE stations can connect cell phones as standalone stations. The Avaya server running Communication Manager calls the cell phone when the published number of the standalone XMOBILE station receives an incoming call.

Calls are delivered to the cell phone based on the screening of internal and external calls. If the call cannot be delivered to the cell phone and the call is not redirected, then the calling party hears a busy signal. Screening is applied only after the called party restriction of the station's assigned COR, the XMOBILE station's EC500 state, and the EC500 XMOBILE station mapping mode are evaluated.

### **Duplicate station administration**

You can administer up to 16 XMOBILE stations at one time. You do this by "duplicating" in bulk a station that you have already administered. You must be sure to administer security codes for all principal phone numbers so that feature access codes for the XMOBILE stations can be used.

### **How the duplicate station command is used**

For XMOBILE stations, the **duplicate station** command is used as follows:

**duplicate station [extension] ['start' extension] ['board' 'x'] ['count' (1-16)]**

where:

- The **duplicate station [extension]** is the extension of the XMOBILE station to be copied.
- The **start extension** accepts any unassigned extension and is used as the first extension to be assigned to the duplicated stations.
- The **board** option specifies the type of board to be used.
  - If an XMOBILE is the source extension, then the board option may be omitted or contain an **x**.

- When duplicating a single XMOBILE extension, and the **board** or **count** option is used, an extension is pre-selected for the user. For example, if extension 30002 is an XMOBILE then the following command line options are valid:
  - **duplicate station 30002 board x**
  - **duplicate station 30002 count 1**
- XMOBILE stations may not be duplicated to wired board types. If an XMOBILE terminal is duplicated to a wired board type (for example, analog, bri, digital, or hybrid) or wireless type (w), then the error message **Object type and port type inconsistent** displays.
- The **start** option is used to indicate where pre-selected extensions should start from.
- When the **count** option is used, extensions created through duplication are pre-selected. The **count** option may be omitted or contain a number from 1-16. If the **count** option is not used on the command line, then no extensions are pre-selected and you must administer all duplicated extensions on the first duplicate Station screen.

The following are examples of duplicate station commands for EC500 XMOBILE stations:

**duplicate station 30002**

No extensions are preselected - **count** or **board** option not used.

**duplicate station 30002 board x**

One extension is pre-selected - single station with board **option**.

**duplicate station 30002 count <dup-num>** - where dup-num is a number from 1-16.

**dup-num** extensions are pre-selected. **count** option used.

**duplicate station 30002 start 35555 count <dup-num>** - where dup-num is a number from 1-16.

**dup-num** extensions are pre-selected starting with extension 35555. **count** and **start** options used.

**duplicate station 30002 start 35555 board x count <dup-num>** - where dup-num is a number from 1-16.

**dup-num** extensions are pre-selected starting with extension 35555. **board**, **count**, and **start** options used.

### Example: administering four duplicated extensions

This example administers four extensions, duplicated from extension 30001, allowing the system to pre-select the extensions.

To administer the four duplicated XMOBILE stations:

1. Type **duplicate station 30001 count 4** and press **Enter**.

The first duplicate Station screen appears.

**Figure 3-9. Duplicate Station screen, page 1**

```

duplicate station 30001 board x count 4                                     Page 1 of 5
STATION
Ext          Name          Security
30005
30006
30007
30008
Code

```

2. Edit the individual extension fields as appropriate.

- **Ext** - Modify, add, or delete extensions.
- **Name** - Link a name with an extension (optional).
- **Security Code** - Enter a digit-only security code (the minimum security code length is determined by the value in the `Minimum Security Code Length` field on the `Feature-Related System Parameters` screen).

An XMOBILE extension must have this administered in order to use the EC500 feature access code. After you enter a security code and press **Return** to move to the next editable field, the `Security Code` field displays asterisks (\*\*\*\*\*) for security purposes.

You can view and change the security code by using the **change station** command for the extension.

3. Press **Enter**.

The second duplicate Station screen appears.

**Figure 3-10. Duplicate Station screen, page 2**

```

duplicate station 30001 board x count 4                                     Page 2 of 5
STATION
Ext      Dial  Cell Phone      Cfg Mob  Line      Button  Principal
Pfx      Pfx   Number          Set Trk  Appearance  Number  Extension:
                               Grp
30006           1   3   call-appr
30007           1   3   brdg-appr      2      12345
30008           1   3   call-appr30009

```

4. Edit the fields as appropriate.

- Ext - read-only; Ext can only be changed on the first duplicate Station screen.
- Dial Pfx - corresponds to the Dial Prefix field on the XMOBILE station screen. This field is 0-4 characters; valid values are 0-9, \*, #, and blank. If the same cell phone number is administered for multiple extensions on the duplicate station screen, then the Dial Pfx field associated with each instance of the Cell Phone Number field must be the same.
- Cell Phone Number - typically contains a 3-digit area code plus 7-digit main number, unformatted.
- Cfg Set - required for EC500 XMOBILE Type. Corresponds to the Configuration Set field on the first XMOBILE Station screen.
- Mob Trk Grp - corresponds to the Mobility Trunk Group field on the first XMOBILE Station screen.
- Line Appearance - corresponds to the Line Appearance field on screen 5 of the XMOBILE Station screens. When **brdg-appr** is entered, the Button Number and Principal Extension fields appear. The extension and button number for the principal extension that the XMOBILE extension is bridged to must be entered here.

For all duplicated stations, if the XMOBILE Type of the original station is **EC500**, the system defaults the Mapping Mode field to **termination**. For XMOBILE Type **DECT** and **PHS**, Mapping Mode defaults to **both**.

5. Press **Next Page**.

The third duplicate Station screen appears.

This is the first in the series of three Station screens that are identical to the Station screens used to administer the original XMOBILE station. See [Figure 3-4 on page 3-5](#), [Figure 3-5 on page 3-7](#), and [Figure 3-6 on page 3-8](#). These screens display the fields for the XMOBILE station used as the basis for duplication.

You can modify the fields on these three screens, with the exception of the fields you have just edited on the first two Duplicate Station screens and any other fields related to EC500. The fields you have edited on the first two screens appear on these three screens as follows:

- Dial Prefix (screen 3) - always blank and read-only.
- Cell Phone Number (screen 3) - always blank and read-only.
- Mapping Mode (screen 3) - always matches the original station and is read-only.
- Configuration Set (screen 3) - always matches the original station and is read-only.
- XMOBILE Type (screen 3) - always matches the original station.
- Mobility Trunk Group (screen 3) - always matches the original station and is read-only.
- Calls Allowed (screen 3) - always matches the original station.
- Line Appearance (screen 5) - always read-only.

If you modify the other fields on these duplicate Station screens 3, 4, and 5, the edited values reflect back to the duplicated extensions. However, the changes you make to these screens are not reflected back to the original XMOBILE station that you are duplicating from.

To edit either the original or duplicated **EC500** XMOBILE station fields you need to use the **change station <XMOBILE extension>** command.

## Setting up the Avaya EC500 access number

---

EC500 users use the telecommuting access number (as set on the Telecommuting Access screen) to enable or disable EC500, or change their office number's station security code.

### NOTE:


Skip this procedure if a telecommuting access number already exists on your system.

To configure the Avaya server running Communication Manager for EC500 access:

1. Type **change telecommuting-access** and press **Enter**.

The Telecommuting Access screen appears.

**Figure 3-11. Telecommuting Access screen**

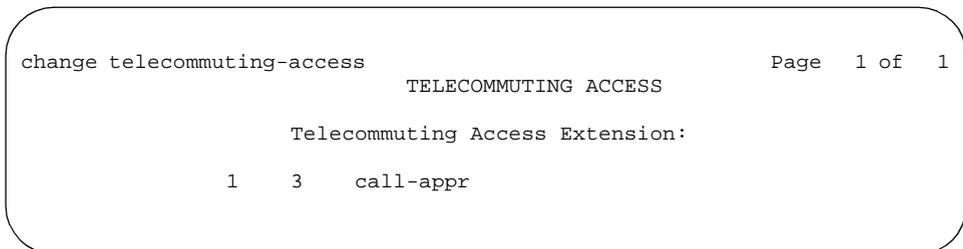

2. In the *Telecommuting Access Extension* field, type an extension in accordance with the dial plan (for example, **1111**).

This number is the Avaya EC500 access number you provide for users to enable or disable EC500, or to change their station security code. The telecommuting number must be a direct inward dialing (DID) or a central office (CO) trunk destination for off-premises features to work.

3. Press **Enter** or **Submit**, depending on your terminal.

## **Setting up the Avaya EC500 enable/disable feature access codes**

---

To administer the EC500 “enable” and “disable” feature access codes:

1. Type **change feature-access-codes** and press **Enter**.

The Feature Access Code screen appears.

2. Press **Next Page** to advance to page 2.

**Figure 3-12. Feature Access screen, page 2**

```

change feature-access-codes                                     Page 2 of 7
                                FEATURE ACCESS CODE (FAC)
Emergency Access to Attendant Access Code: *11
    Enhanced EC500 Activation: *81                Deactivation: #81
    Extended Call Fwd Activate Busy D/A: *23 All: *24 Deactivation:#23
Extended Group Call Pickup Access Code:
    Facility Test Calls Access Code:
        Flash Access Code: *88
    Group Control Restrict Activation: *15                Deactivation: #15
        Hunt Group Busy Activation: *81                Deactivation: #81
        ISDN Access Code:
    Last Number Dialed Access Code: *54
    Leave Word Calling Message Retrieval Lock: *48
    Leave Word Calling Message Retrieval Unlock: #45
        Leave Word Calling Send A Message: *60
        Leave Word Calling Cancel A Message: #60
        Malicious Call Trace Activation:                Deactivation:
    Meet-me Conference Access Code Change:
PASTE (Display PBX data on Phone) Access Code: 410
Personal Station Access (PSA) Associate Code:                Dissociate Code:
    Per Call CPN Blocking Code Access Code:
    Per Call CPN Unblocking Code Access Code:
    
```

3. Set an access code in accordance with your dial plan for the following fields.
  - In the Enhanced EC500 Activation field, enter the number (**\*81** in this example) to be used for remote activation of EC500
  - In the Enhanced EC500 Deactivation field, enter the number (**#81** in this example) to be used for remote deactivation of EC500
4. Press **Enter** or **Submit**, depending on your terminal.



**NOTE:**

If so administered, users will also have the option to activate and deactivate EC500 via a feature button on the office telephone.

## Voice mail administration

Unanswered office number calls are usually routed to a user’s corporate voice messaging system after a predetermined number of rings. Most cellular service providers also offer voice mail options which can also be customized to route unanswered calls after a specified number of rings. As an administrator, you may be called upon to troubleshoot individual situations to help the user understand the options and the potential conflicts resulting from a voice mail preference.

As administrator, you'll need to coordinate a default to a specific voice mail system by setting the number of rings on the office number before the corporate voice messaging system answers so that the preferred system picks up unanswered calls first. This section provides procedures for you to use when working with users.

Note that there are coverage options in both the Avaya server running Communication Manager (busy, active, send-all-calls) and the cellular network (cell phone unavailable, network congested) that can cause a call to immediately go to the respective voice mail. Users should recognize that an unanswered call could result in a message in *either* system's voice mailbox.

### Using corporate voice mail to receive messages

To receive voice messages through the corporate voice messaging system, the cellular service provider's voice mail feature must be set to a higher "unanswered rings" number than the corporate system. For example, if the corporate voice messaging system automatically picks up an unanswered call on the third ring, the user should set the cell phone's voice mail system to pick up unanswered calls on the fourth or fifth ring.

A user who cannot adjust the number of rings on his or her cell phone should contact the cellular service provider for assistance.

#### NOTE:

If the user is using the cell phone exclusively for business purposes, he or she can request that the cellular service provider disable voice mail.

To change the number of rings on the office number as part of the solution:

1. Type **change coverage path *n*** (where *n* is the number assigned with a (coverage path) and press **Enter**.

The Coverage Path screen appears.

**Figure 3-13. Coverage Path screen**

```

change coverage path 1                                     Page 1 of 1
                                COVERAGE PATH
                                Coverage Path Number: 1
                                Next Path Number:          Hunt after Coverage? n
                                                                Linkage
COVERAGE CRITERIA
Station/Group Status   Inside Call   Outside Call
Active?                n             n
Busy?                  Y             Y
Don't Answer?         Y             Y           Number of Rings: 2
All?                   n             n
DND/SAC/Goto Cover?  Y             Y
COVERAGE POINTS
Terminate to Coverage Pts. with Bridged Appearances? n
Point1: 694000   Rng:   Point2: h99   Rng:   Point3:
Point4:          Point5:          Point6:
    
```

2. Change the value in the Number of Rings field as appropriate.

### **Preventing messages from automatically going to cellular voice mail**

Most cellular service providers route calls automatically to their own voice mail systems when a cell phone is turned off or in an out-of-coverage area.

To prevent work-related calls from being automatically routed to the users' cellular voice mail system, tell users that they must disable EC500 before shutting down their cell phone. Incoming calls to their office number will then be routed to the corporate voice messaging system, while personal calls will continue to be picked up by their cellular voice mail system.

### **“Notify me” under Unified Messenger for MS Exchange**

If users have access to the “Notify Me” feature of Unified Messenger for Microsoft Exchange (Version 4.0 or later), they are notified of messages in their corporate voice mailbox via their cell phone’s display. For more information on using this feature see “Setting Notify Me” in the *Unified Messenger Telephone User Interface Online Guide*, accessed via:

<http://www.avaya.com/support>

**⇒ NOTE:**

The cell phone must support text messaging to use this feature.

## Changing configuration sets

A configuration set defines a number of call treatment options for EC500 cell phone calls. EC500 administration allows for the use of up to 10 configuration sets, which are already defined in the system using default values. Each set is administered on a different screen.

The key field is `Calling Number Style`, which can be set to **pbx** (allowing a cell phone caller ID display of fewer than 10-digits) or **network** (allowing a display of only 10-digit numbers).

Since there are 10 configuration sets available, multiple combinations of the options can be administered, thus accommodating requirements for a variety of cellular service providers.

To customize a configuration set:

1. Type **change xmobile configuration-set *n*** (where *n* is the number assigned with a configuration set) and press **Enter**.

The Configuration Set screen appears.

**Figure 3-14. Configuration Set screen**

```
change xmobile configuration-set 1                                     Page 1 of 1

                                CONFIGURATION SET: 1

Configuration Set Description:
  Calling Number Style: network
CDR for Calls to EC500 Destination? y
  Fast Connect on Origination? n
  Post Connect Dialing Options: dtmf
```

2. Enter the following values:

- Configuration Set Description - up to 20 characters, free-form text. Use this to describe the purpose of the configuration set, for example, "EC500 handsets."
- Calling Number Style - determines the format of the caller ID for calls from a local switch extension to an EC500 cell phone. Using the default value, **network**, causes the system to use the 10-digit calling identification information established on the ISDN public-unknown numbering screen. See ["Sending 10-digit caller identification for locally-originated calls" on page 3-9.](#)

- **CDR for Calls to EC500 Destination** - When the option is **y**, an outgoing trunk CDR report will be created for each EC500 call, if the selected trunk has the CDR option enabled. The originating extension of the call will be the principal office telephone to which the EC500 XMOBILE station is bridged, or the XMOBILE station itself, if standalone. All EC500 CDR reports will have an account code consisting of all 8s (for example, 8888) up to the maximum administered length of the CDR Account Code. For additional information on Call Detail Recording, see *Avaya Administrator's Guide for Avaya MultiVantage™ Software*, Document Number 555-233-506.

- Type **y** to track calls to cell phones for reporting or billing purposes.

If you type **y**, the configuration set administered on the XMOBILE station screen determines whether a CDR record is generated.

- Type **n** if you want to treat the EC500-administered cell phones as totally internal stations and don't require CDR reporting.

If you type **n**, and the XMOBILE extension is standalone, you must enter it on the Intra-Switch CDR screen in order to get CDR reports. These will not show any trunk information.

If the XMOBILE or the principal (in a bridging scenario) is being tracked in the Intra-Switch CDR report, a CDR record is generated for the station-side of the call (the CDR record contains the calling and called parties). This is in addition to the CDR report for the EC500 call if the **CDR for Calls to the EC500 Destination** field on the Configuration Set screen is **y**. Thus, two CDR reports may be generated for each EC500 call:

- The trunk CDR record containing the cell phone number, and
- The principal and the intra-switch CDR record containing the principal and the original calling party.

Note that in the case of a standalone EC500 cell phone, its XMOBILE station number will be the principal; if it is bridged to another station, then that station's number will be the principal. See [Table 3-1](#) for additional information.

- **Fast Connect on Origination** - determines whether some additional processing will occur on the switch prior to connecting a call. This option may be used in the future for capabilities provided by the cell phone provider. Currently the default value of **n** is recommended.

- **Post Connect Dialing Options** - determines whether additional capabilities, beyond standard ISDN dialing, are available for those incoming ISDN trunk calls that are mapped into XMOBILE stations. Use the default value, **dtmf** (Dual Tone Multiple Frequencies).
3. Press **Enter** or **Submit**, depending on your terminal.
  4. As needed, use the **change xmobile configuration-set n** command to change additional configuration sets.

**Table 3-1. CDR output for EC500 calls**

<b>CDR Report field on the Trunk Group screen</b>	<b>CDR for Calls to EC500 Destination? field on the Configuration Set screen</b>	<b>XMOBILE (or Principal in bridging set-up) in the Intra-Switch CDR screen</b>	<b>Type of CDR records (Trunk or Intra-switch)</b>	<b>Contents of Interest</b>
Yes	Yes	No	Trunk CDR record	Cell phone number + XMOBILE/principal + EC500 ID
Yes	Yes	Yes	2 CDR records (Trunk and Intra)	Cell phone number + XMOBILE/principal + EC500 ID  XMOBILE/Principal + calling party
Yes	No	No	No CDR	N/A
Yes	No	Yes	Intra CDR record	XMOBILE/principal + calling party
No	Yes	No	No CDR	N/A
No	Yes	Yes	Intra CDR record	XMOBILE/principal + calling party
No	No	No	No CDR	N/A
No	No	Yes	Intra CDR record	XMOBILE/principal + calling party

## **Generating two CDR records**

---

To generate two CDR records:

1. Type **change system-parameters cdr** and press **Return**.  
The CDR System Parameters screen displays.
2. Set the `Intra-Switch CDR` field to **y**.
3. Press **Enter** or **Submit** to save your changes.
4. Log off and log back into the switch.
5. Type **change intra-switch-cdr** and press **Return**.  
The Intra-Switch CDR screen displays.
6. Enter any extension you want to track with this screen.
7. Press **Enter** or **Submit** to save your changes.

## **Creating a change feature access code for station security codes**

---

When users are enabling and disabling EC500, they need to know the station security code (SSC) associated with their office number. You must be sure to administer these station security codes for the principal EC500 office numbers.

EC500 allows users to enable or disable all bridged extensions at once, using the station security code for their principal phone (an office number or an AWOH extension set up on the Avaya server running Communication Manager).

Station security codes provide security to station users by preventing other users from accessing functions associated with the user's station. Each station user can change his or her own SSC if the user knows the station's current settings. You must create a system-wide SSC change feature access code (FAC) that users can invoke to change their SSC. You must also administer and provide their individual SSCs to users. A user cannot change a blank SSC.

To create a system-wide SSC change feature access code:

1. Type **change feature-access-codes** and press **Enter**.  
The Feature Access Code screen appears.
2. Press **Next Page** until the page with the `Station Security Code Change Access Code` field appears.

**Figure 3-15. Feature Access Code (FAC) screen**

```
change feature-access-codes                                     Page 3 of 6
                                FEATURE ACCESS CODE (FAC)
Per Call CPN Unblocking Code Access Code: 0173

    Priority Calling Access Code: 0142
    Program Access Code: 0143
Refresh Terminal Parameters Access Code: 0144
    Remote Send All Calls Activation: Deactivation:
    Self Station Display Activation: #1 Deactivation: *5
    Send All Calls Activation: *4 Deactivation: *5
    Station Firmware Download Access Code:
    Station Lock Activation: Deactivation:
Station Security Code Change Access Code: 0150
    Station User Admin of FBI Assign: Remove:
Station User Button Ring Control Access Code:
    Terminal Dial-Up Test Access Code: 0151
Terminal Translation Initialization Merge Code: *0 Separation Code: *1
    Transfer to Voice Mail Access Code: 0153
    Trunk Answer Any Station Access Code: 0154
    User Control Restrict Activation: 0155 Deactivation: 0156
    Voice Coverage Message Retrieval Access Code: 0157
    Voice Principal Message Retrieval Access Code: 0158
```

3. Type a code valid for your dial plan (for example, #5) in the Station Security Code Change Access Code field. This sets the access codes for this feature.
4. Press **Enter** or **Submit**, depending on your terminal.  
The Command prompt appears.
5. Type **change system-parameters security** and press **Enter**.  
The Security-Related System Parameters screen appears.  
Press **Next Page** to advance to page 2 of the Security-Related System Parameters screen.

**Figure 3-16. Security-Related System Parameters screen**

```
change system-parameters security                               Page 2 of 2
      SECURITY-RELATED SYSTEM PARAMETERS

SECURITY VIOLATION NOTIFICATION PARAMETERS

  SVN Station Security Code Violation Notification Enabled? n

STATION SECURITY CODE VERIFICATION PARAMETERS

      Minimum Station Security Code Length: 4
Station Security Code for Terminal Self-Administration Required? y
```

6. Type a number in the Minimum Station Security Code Length field that is based on your dial plan and press **Enter**.

This determines the minimum required length of the SSC.

 **NOTE:**  
Longer codes are more secure.

## **Administering an EC500 feature access button on the office telephone**

---

EC500 Version 4.1 provides the capability to administer an EC500 feature access button on the user's office telephone, and to configure an optional timer. You administer this feature button on page 3 of the Station screen for the "primary" office extension to which EC500 is linked.

The process described below explains how to administer an EC500 feature button and include the optional EC500 timer. The EC500 feature button is available on telephones which support administrable feature buttons.

1. Type **change station xxxx** where **xxxx** is the extension of an EC500-enabled station - in this example, 1034) and press **Enter**.

The Station screen appears.

2. Press the **Next Page** button twice to display page 3 of the Station screen.

**Figure 3-17. Station screen - page 3**

```

change station 1034                                     Page 3 of 4
                                                    STATION

SITE DATA
  Room:                                                Headset? n
  Jack:                                                Speaker? n
  Cable:                                               Mounting: d
  Floor:                                              Cord Length: 0
  Building:                                           Set Color:

ABBREVIATED DIALING
  List1:                List2:                List3:

BUTTON ASSIGNMENTS
  1: call-appr          5:
  2: call-appr          6:
  3: call-appr          7:
  4: ec500   Timer? y   8:

```

3. Select an available feature button (4 : in the example above) and enter **ec500** to administer an EC500 feature button on the office telephone.
4. Press **Enter** or **Submit**, depending on your terminal.  
Note that the `Timer` subfield displays, and defaults to `n`.
5. Set the optional `Timer` subfield to `y` to include an EC500 timer state for the administered feature button; leaving the default setting of `n` excludes the timer state.  
When the timer state is included, the EC500 user can activate a one-hour timer to temporarily disable EC500 via this administered feature button.
6. Press **Enter** or **Submit**, depending on your terminal.

The corresponding feature button on the office telephone is now administered for EC500.



**NOTE:**

The feature status button on the office telephone indicates the current state of EC500 regardless of whether the feature was enabled remotely or directly from the office telephone.

---

### Introduction

---

Once EC500 has been administered, use the installation test procedures in this chapter to ensure that the EC500 solution performs as expected. The EC500 installation test and customer acceptance procedures follow the same guidelines used for testing a new station added to the switch. However, a review of the basic test procedures is provided in this chapter.

### Test procedures

---

When performing these tests, it may be necessary to place several calls to the cell phone.

1. Using a touch-tone telephone, dial the user's office phone number.  
Ensure simultaneous ringing of the user's office number and EC500 cell phone.
2. Once the cell phone begins to ring, check the following:
  - a. Check the cell phone's display panel to ensure 10 digit ANI is passed.
  - b. Do not answer the call, but do verify that the call covers to the user's primary voice mail account (usually the corporate office voice mail box).

If the call doesn't cover properly, the Avaya installation team, or technician, needs to review the coverage path number of rings and setup for corporate voice mail coverage.

It also may be necessary to experiment with the number of rings set at the cellular service provider and in the office number coverage path to get the desired voice mail coverage. See [Chapter 3, "Administration"](#), for information about sending office caller ID, voice mail administration, and call forwarding.

3. Test whether the cell phone's second call appearance is in service.
  - a. Using a touch-tone telephone, dial the user's office phone number.
  - b. Begin your "test" conversation by answering the call ringing on the cell phone.
  - c. With the test conversation in place and active, place another call to the user's primary extension.

The call should ring at the second call appearance on the private extension, as well as at the cell phone. Also, the cell phone's display screen should show the second incoming call.
  - d. Using the cellular service provider's call waiting feature, answer the second call.

If any of the test procedures fail, depending on the problem encountered, the installation team needs to verify that all administration entries were input correctly. If they are administered correctly, see [Chapter 6, "Troubleshooting"](#), for further problem resolution procedures.

---

## Introduction

---

This chapter provides procedures for using a variety of maintenance tools to manage and support your EC500 implementation. Information is also provided on display error/alarms and system restarts.

Key maintenance tools are:

- Display capacities - the ability to display the number of used and unused XMOBILE stations, as well as the number of XMOBILE stations assigned to any particular type (EC500, DECT, or PHS).
- List XMOBILE by cell phone number - the ability to list EC500 XMOBILE stations by complete or partial cell phone number(s).
- Busy-out and release - capabilities for managing the in-service and out-service state of XMOBILE stations.
- Status station - fields that shows EC500 enabled or disabled status.

No maintenance testing is performed when EC500 XMOBILE stations are active on a call, although a hardware connection exists along the ISDN-PRI or H.323 IP port and the trunk media to the cell phone system.

## About maintenance commands

---

Unless explicitly stated otherwise, command sequences described in this chapter refer to commands entered via a system administration terminal (SAT). Referenced screens are system administration screens. The screens shown reflect the terminal emulation interface, rather than the GEDI interface.

## Display capacities

You perform the administration to display system capacities for XMOBILE stations on page 8 of the System Capacities screen. You can view the following EC500-related information:

- The number of administered XMOBILE stations.
- The number of unadministered XMOBILE stations.
- The number of XMOBILE stations assigned to DECT, PHS, or EC500 XMOBILE types.
- The number of XMOBILE stations.

The sum of DECT, PHS, and EC500 will equal the number of XMOBILE stations used.

To display XMOBILE station usage information:

1. Type **display capacity** [**'print'** or **'schedule'**] and press **Enter**.

The System Capacity screen, page 1, appears.

2. Press **Next Page** until you reach System Capacity, page 8.

The System Capacity screen, page 8, appears, displaying XMOBILE Station usage.

**Figure 5-1. System Capacity screen**

```

display capacity                                     Page 8 of 10
                                     SYSTEM CAPACITY

TOTAL SUBSCRIBED PORTS
                                     Used Available System
                                     -----
Station and Trunk Ports:             30  20280  20310
Radio Controllers:                   0    0    0
Wireless Terminals:                  0    0    0
XMOBILE Stations:                     1    9    10
EC500:                                1
DECT:                                  0
PHS:                                    0

SYSTEM-WIDE REGISTRATION COUNTS
                                     Currently
                                     Registered Available System
                                     -----
IP Stations:                          7    4998  5005
IP Attendant Consoles:                 0    0    0
Remote Office Stations:                 1    99   100
    
```

## List XMOBILE by cell phone number

EC500 allows for administering multiple XMOBILE stations to the same cell phone number. These mappings are administered on the individual XMOBILE station screens.

A list report allows you to list all XMOBILE stations associated with the same cell phone number. Included in the report are the XMOBILE station extension, mobility trunk group, configuration set, principal extension for bridged XMOBILEs, mapping mode, and calls allowed, all of which are administered on the XMOBILE station screens.

To display the cell phone list:

1. Type **list xmobile mapping <cell phone number>** where cell phone number can be entered with one of the following options:
  - **<cell phone number>** - up to 15 digits, for one cell phone number. This provides a list of all XMOBILE stations associated with this particular cell phone number. Use only the value from the **Cell Phone Number** field on the XMOBILE Station administration screen. Do not include the dial prefix.
  - **<partial string\*>** - partial string of a cell phone number followed by the wildcard \* (asterisk). This provides a list of all cell phone numbers that begin with the partial string, along with their associated XMOBILE stations. This function is useful when searching for all numbers in a particular area code.
  - **<all>** - This provides a list of all EC500 administered cell phone numbers, along with their associated XMOBILE stations.

In this example, the command used is **list xmobile mapping <7325551212>**.

2. Press **Enter**.

The XMOBILE Station to Cell Phone Mapping screen appears.

**Figure 5-2. XMOBILE Station to Cell Phone Mapping screen**

```
list xmobile mapping all
```

### XMOBILE STATION TO CELL PHONE MAPPING

XMOBILE	Cell Phone	Config	Mobility	Mapping	Principal	Calls
Ext.	Number	Set	Trunk	Mode	Extension	Allowed
30007	7325551122	1	ars	termination	31417	all
30008	7325558621	1	ars	termination		internal

The last extension shown above has no principal extension because it is for a non-bridged or standalone mode.

## **XMOBILE station maintenance (busy-out and release)**

---

Regardless of the in-use state of an XMOBILE station, maintenance commands to busy-out and release the XMOBILE stations can be issued by authorized system administrators.

Following are the principal uses of the busy-out and release maintenance commands:

- If an EC500 XMOBILE station hangs in an error state that cannot be cleared by ending the call with the 'end call' button on the cellular handset, the system administrator must issue the **busyout station <XMOBILE extension>** command followed by the **release station <XMOBILE extension>** command.

This resets and clears all associated switch resources and drops the connection between the switch and the handset.

- The system administrator can release any previously busied out XMOBILE station using the **release station <XMOBILE extension>** command. This restores the service state of the XMOBILE station to in-service.
- If a mapped cell phone is lost or stolen, the system administrator can issue the **busyout station <XMOBILE extension>** to all associated XMOBILE extensions to prevent unauthorized access to the Avaya server running Avaya™ Communication Manager. This is a temporary solution since translation reload results in clearing the busied out service state and makes the cell phone available.

In addition, the system administrator should disable EC500 for the station. See [Chapter 6, "Troubleshooting"](#) for further information.

The XMOBILE station busy-out command is available to system technicians and administrators. When successfully issued, the following conditions exist for the busied out XMOBILE station:

- No new incoming calls are delivered to the cell phone via the switch. Incoming calls from the cellular service provider are not affected.
- For EC500 cell phones which send office caller ID, when that station is busied out any calls into the switch are immediately disconnected.
- All existing connections that exist over the links associated with the business connection are torn down and the connected parties dropped from their call.
- The `Service State` field is set to **out-of-service** on page 1 (General Status) of the Status Station screen.

Busied out XMOBILE service states are not retained across planned SPE interchanges on DEFINITY R only.

Busied out XMOBILE service states are not retained after severe system restarts (levels 3, 4, and 5).

The EC500 state is not impacted by the busy-out and release commands. If enabled or disabled, it stays in that state regardless of the busy-out state.

### **Command: busyout station** **<XMOBILE station extension>**

---

The busyout maintenance command puts the XMOBILE station into an "out-of-service" state and clears all switch resources used by the XMOBILE station, making the mapped cell phone unavailable to receive incoming calls from the Avaya server running Communication Manager.

When the service state of an XMOBILE station changes from in-service to out-of-service, error type 18 is logged in the error log against the XMOBILE station and a warning alarm is raised and logged in the alarm log. Once busied out, all subsequent requests to busy-out the XMOBILE station are aborted.

### **Command: release station** **<XMOBILE extension>**

---

The release station maintenance command puts the XMOBILE station into an "in-service" state, making it available for incoming calls. The warning alarm for the previously busied out station is cleared.

When the service state of an XMOBILE station changes from out-of-service to in-service, error type 18 is removed from the error log and the warning alarm is removed from the alarm log. Once released, all subsequent requests to release the XMOBILE station are aborted. The mapped cell phone is now available to receive incoming EC500 calls.

## **Display errors/alarms**

---

LEDs are not used to indicate the service state of XMOBILE stations because no circuit pack is associated with an XMOBILE station. No visual change is observed on the mapped cell phone when the XMOBILE station for that set is busied out.

The **display errors** and **display alarms** maintenance commands show the errors and alarms logged against busied out XMOBILE stations.

## System restarts

---

The current service state for an XMOBILE station is preserved for system restarts at levels 1 and 2.

XMOBILE station service states are not saved for system restart levels 3, 4, and 5. The service state for all administered XMOBILE stations is reset-in-service after the switch is successfully rebooted following the restarts.

## Status station command

---

### **status station <XMOBILE extension>**

Use the **status station** maintenance command to view the service state of the XMOBILE station.

The EC500 state is shown on the status station **<XMOBILE extension>** screen.

- When EC500 is disabled **\*\*** (two asterisks) are displayed in the `CF Destination Ext:` field and the `EC500 status` field displays the value **disabled**.



#### **NOTE:**

The **\*\*** are shown only for bridged XMOBILE extensions. If using the EC500 with the UCC Scheduler to disable the XMOBILE, then you will see the primary extension number instead of the **\*\***.

- When EC500 is enabled, the `CF Destination Ext:` field is blank and the `EC500 status` field displays the value **enabled**.
- When a new EC500 XMOBILE station is added, the station comes up in the disabled state.

---

## Introduction

---

This chapter describes problems that may occur during operation of the EC500 solution and possible ways of resolving these problems.

Most problems reported by users of EC500 are likely not to be problems with EC500 itself. In most cases, they are caused by unexpected interaction between the cellular service provider and EC500 features.

Below is a recommended troubleshooting procedure to follow when users cannot receive EC500 calls on their cell phones. In addition, [Table 6-1 on page 6-3](#) identifies other possible problems that might be encountered during operation of EC500. See [Chapter 4, "Installation and administration test"](#), for test procedures to verify the connection to the cell phone.

### Users cannot receive EC500 calls on cell phone

---

If an EC500 user is not able to receive EC500 calls on the cell phones, follow these procedures in the suggested order to isolate and fix the problem. After each step, you may want to verify that the problem has been fixed by making an EC500 call to the mapped cell phone.

1. Verify that you can call the cell phone from the switch. This also verifies that the user's service contract with the cellular service provider (CSP) is active, and that the user gets good coverage in that area.

Check this by making a direct call to the cell phone's published number. When making this test call, wait until the call rings the cell phone (which verifies that there is coverage), or until the call goes to the CSP's voice mail (which verifies that the service is provided but there may not be good coverage).

2. Use the **status station** command for the principal number that the XMOBILE is bridged to and verify that SAC or Call Forwarding has not been activated on the principal extension.

3. For the XMOBILE extension, use the **status station <XMOBILE extension>** command to check the following:
  - The service state is "in service/idle." If not, use the **release <XMOBILE extension>** command to put it back in the active state.
  - The EC500 state is enabled on the Status Station screen. If EC500 is disabled, ask the user to enable EC500 for the principal office number.
4. On the XMOBILE Station screen verify that the entries in the *Mobility Trunk Group*, *Dial Prefix*, *Calls Allowed*, and *Cell Phone Number* fields are correct as specified in [Chapter 3, "Administration"](#).
5. Check the ARS Analysis table and make sure that there is an entry to route the cell phone number over an ISDN trunk on the switch.
6. If the Mobility Trunk Group is **ars** or **aar**, then verify that no feature access code (for example, 9) is included in the cell phone number field.
7. A **list ars route-chosen 1234567890** maintenance command can be used to see what routing is used to route the call (where 1234567890 is a 10-digit cell phone number).

If the problem cannot be corrected by following the above procedure, escalate the issue to an Avaya technician. In addition to the checks listed above, verify with the technician that the EC500 XMOBILE station is not restricted from receiving incoming calls.

## Error conditions table

**Table 6-1. Error conditions in the operation of EC500**

Situation	Possible Cause(s)	Suggested Action or Resolution
Users cannot receive EC500 calls on their cell phones.	See <a href="#">"Users cannot receive EC500 calls on cell phone" on page 6-1</a> for detailed information on possible sources of the problem.	See <a href="#">"Users cannot receive EC500 calls on cell phone" on page 6-1</a> for detailed instructions on troubleshooting this problem.
The user reports that all calls go directly to the cellular voice mail, but the cell phone is on and working fine.	Both XMOBILE extensions may be bridged to the same line appearance on the principal phone.	Make sure that both XMOBILE extensions are not bridged to the same line appearance on the principal phone.
When running the <b>list xmobile mapping</b> command, XMOBILEs that you know are administered do not appear.	The cell phone number has not been administered on the Station form, but in the ARS tables instead.	Change the XMOBILE Station screen administration to include the cell phone number.
	The number (or number plus *) used to match the cell phone number includes the dial prefix.	Don't include the dial prefix.
No CDR for EC500 calls	The Configuration Set for the user's XMOBILE station has the CDR for Calls to EC500 Destination field set to <b>n</b> . The XMOBILE station is still using loopback trunks. The CDR Reports option on the trunk being used is <b>n</b> .	Check administration of Configuration Set, XMOBILE station, or trunk group and change if necessary.

*Continued on next page*

**Table 6-1. Error conditions in the operation of EC500 — *Continued***

<b>Situation</b>	<b>Possible Cause(s)</b>	<b>Suggested Action or Resolution</b>
<p>The user reports that voice mail messages are not going to the mailbox of choice.</p>	<p>Incoming calls to an office number are usually routed to the resident AUDIX voice mail after a pre-determined number of rings. For cell phone calls, the same functionality exists from the Service Provider. At this time there is no way to coordinate the two different voice mail systems using EC500.</p>	<p>It is possible to set up the number of rings before coverage answers so that one or the other voice mail systems always answers first. (The user may need to contact the cellular service provider to change the number of rings at the cell phone.) However, there are coverage options in both the Avaya server running Avaya™ Communication Manager (busy, active, send-all-calls) and the network (cell phone unavailable, network congested) that cause a call to immediately go to the respective voice mail. Users should realize that an unanswered call could result in a voice mail message in either mailbox.</p>
<p>The user reports that he or she is missing calls at the office number because the cell phone voice mail is picking up the call instead.</p>	<p>The user has turned off the cell phone or the phone is in an out-of-coverage state. When this is the case, Service Providers usually have the calls routed to voice mail automatically. There is no way to control this with EC500.</p>	<p>It is recommended that EC500 be disabled prior to entering an out-of-coverage area or turning off the cell phone so that the user can pick up the call on the office number or the corporate voice messaging system is allowed to answer the calls.</p>
	<p>Both XMOBILEs are bridged to the same line appearance on the principal extension.</p>	<p>Check that the first XMOBILE is bridged to the first line appearance and the second XMOBILE is bridged to the second line appearance.</p>

*Continued on next page*

**Table 6-1. Error conditions in the operation of EC500 — Continued**

<b>Situation</b>	<b>Possible Cause(s)</b>	<b>Suggested Action or Resolution</b>
The user reports that the cell phone is not receiving caller identification numbers for calls from the Avaya server running Communication Manager, while the office number that the cell phone is bridged to does.	The Avaya server running Communication Manager has not been administered properly for sending 10-digit caller identification numbers. Most Service Providers require a 10-digit number.	Recheck the outbound trunk screen to make sure the <code>Send Calling</code> field is set to <b>yes</b> .
	External trunks serving the cell phone are using a non-ISDN trunk.	Change the routing administration to route over an ISDN trunk.
The user reports that the person being calling is receiving the incorrect caller ID.	The Configuration Set screen has the <code>Calling Number Style</code> field set to <b>PBX</b> .	Change the <code>Calling Number Style</code> field on the Configuration Set screen to <b>network</b> .
	There is an incorrect entry on the ISDN public-unknown numbering screen.	Verify that the entries on the ISDN public-unknown numbering screen are correct.
The user reports that the cell phone is receiving a switch default caller identification number for calls from the Avaya server running Communication Manager.	The ISDN Service Provider (SP) is replacing the caller identification with a fixed caller ID.	Escalate the issue to your Telecom Manager who may contact your ISDN SP to request that this be fixed or find an alternate ISDN SP that allows the caller identification to pass.
	The switch is blocking the outgoing caller identification and is passing a default caller ID.	Change your switch administration to allow caller identification to go outside the switch.

*Continued on next page*

**Table 6-1. Error conditions in the operation of EC500 — *Continued***

<b>Situation</b>	<b>Possible Cause(s)</b>	<b>Suggested Action or Resolution</b>
<p>The user hears a beep while on a call originating from the Avaya server running Communication Manager, but is not able to use the call waiting feature on the cell phone to switch to the other call.</p>	<p>Most likely the user is hearing the tone provided by the Avaya server running Communication Manager when call waiting is enabled at the switch.</p>	<p>You have two possibilities:                      1) communicate to the user that when a call waiting indication is heard, but the user can't switch the call, he or she needs to hang up on the first call in order to receive the call, OR                      2) disable call waiting at the switch level and the regular call waiting capability provided by the cellular service provider then handles the call waiting feature.</p>
<p>The EC500 cell phone call into the office switch fails to provide the office caller ID.</p>	<p>The Cell Phone Number field administered for the EC500 XMOBILE station does not have the required entry.</p>	<p>Enter the full caller ID number in the Cell Phone Number field.</p>
	<p>The Mapping Mode field administered for the EC500 XMOBILE station does not contain <b>origination</b> or <b>both</b>.</p>	<p>Enter <b>origination</b> or <b>both</b> in the Mapping Mode field.</p>
	<p>The external inbound call is not entering into the switch over an ISDN trunk.</p>	<p>Contact the ISDN Service Provider to ensure that inbound calls enter the switch via an ISDN trunk.</p>
	<p>The external inbound call does not enter the switch on which the EC500 Cell Phone's XMOBILE station is administered.</p>	<p>Create an XMOBILE station for the EC500 Cell Phone with the proper mapping on the switch that the call enters.</p>
	<p>The calling number is manipulated on the inbound trunk screen.</p>	<p>Administer the EC500 XMOBILE station's Cell Phone Number field to match the modified calling number.</p>

*Continued on next page*

**Table 6-1. Error conditions in the operation of EC500 — Continued**

<b>Situation</b>	<b>Possible Cause(s)</b>	<b>Suggested Action or Resolution</b>
	The cellular service provider does not send the calling number.	Call the cellular service provider to allow the caller ID to be sent.
	Someone else happened to be on a call at the same time on the user's desk phone and on the same line appearance as the originating EC500 Cell Phone call.	Move the bridged line appearance to a button unlikely to be used by another phone call.
The Avaya server running Communication Manager does not allow a default entry of extensions, that is, instead of entering the extension followed by the # key, just entering # alone.	The cell phone number is not properly mapped.	See "The EC500 cell phone call into the office switch fails to provide the office caller ID" above.
An intercept tone is received when attempting to enable/disable EC500 (that is, enter the feature access code, #, station security code, and #).	The user has used the station security code of the XMOBILE extension and it is different from that of the principal.	The user must enter the code of the principal extension.
	The station security code is blank for the principal.	The station security code for the principal must be administered.
When attempting to Enable/Disable EC500, an intercept tone is received.	The XMOBILE Type field administered on the Station screen for the XMOBILE station is not <b>EC500</b> .	Change the XMOBILE Type field administered on the Station screen to <b>EC500</b> .
	The XMOBILE station's XMOBILE Type field is EC500 and Configuration Set is not administered for dtmf.	Access the associated Configuration Set screen and ensure that the entry in the Post Connect Dialing Option field is <b>dtmf</b> .

*Continued on next page*

**Table 6-1. Error conditions in the operation of EC500 — *Continued***

<b>Situation</b>	<b>Possible Cause(s)</b>	<b>Suggested Action or Resolution</b>
The office caller ID is that of the origination mapped EC500 XMOBILE station and not that of the principal extension.	The XMOBILE station is not bridged to the principal.	Bridge the XMOBILE station to the principal extension.
The administered EC500 feature button on the office telephone flashed for two seconds at the broken flutter rate.	The EC500 XMOBILE administration somehow got corrupted.	Disable, then re-enable, EC500.
User cannot “engage” the EC500 timer via the administered feature button on the office telephone.	The optional EC500 timer was not configured.	Configure the optional EC500 timer on the Station screen. See <a href="#">Figure 3-6 on page 3-8</a> , and the related steps identifying how to set the timer.
The user receives the error <b>Contact System Administrator</b> when trying to enable/disable EC500 via the administered feature button on the office telephone.	The XMOBILE station form was not correctly administered.	Verify that all required information, in the correct format, is included on the XMOBILE station form.

## **Terminal error codes**

---

When the service state of an XMOBILE station changes from in-service to out-of-service, error type 18 is logged in the error log against the XMOBILE station and a warning alarm is raised and logged in the alarm log.

When the service state of an XMOBILE station changes from out-of-service to in-service, error type 18 is removed from the error log and the warning alarm is removed from the alarm log.

See [Chapter 5, "Maintenance"](#) for more information on busy-out and release maintenance commands.





---

EC500 provides the ability to operate a cellular or other remote phone as a standard, caller ID-enabled telephone connected directly to the Avaya server running Avaya™ Communication Manager. Depending on your in-house telephone system and your specific business needs, there may be different setups available for EC500 users. Setups include:

- [Standard EC500 \(dual\) setup administered to send office caller ID](#)
- [Dual setup not administered to send office caller ID](#)
- [Single setup](#)
- [Multiple setup](#)
- [Standalone setup](#)

### **Standard EC500 (dual) setup administered to send office caller ID**

---

This is the most common setup, with two extensions bridged to the office phone for call waiting. The first call appearance (incoming/outgoing line) covers outgoing EC500 calls while the second call appearance is used to send the office caller ID capability.

### **Dual setup not administered to send office caller ID**

---

This setup provides two call appearances (incoming/outgoing lines) for the cell phone and allows the user to use call waiting. Therefore, two extensions/lines are bridged to the primary desk phone.

## Single setup

---

This setup provides one line/one EC500 extension (for those users who do not have call waiting as part of their cellular service plan). The system administrator can administer the extension to gain the identity of the office phone.

## Multiple setup

---

Some users may need to bridge their office number to multiple locations - such as their cell phone and home office number. In a multiple setup, the XMOBILE station associated with each location can be administered to gain the identity of the office phone and send the office caller ID for calls into the principal extension's switch. In this example, five extensions are established, and all are reachable via the primary office number.

- One primary office number extension,
- Two EC500 lines to the cell phone (the second line can be answered via your cellular service provider's "call waiting" feature),
- Two EC500 lines for the home office or other phone (the second line can be answered via your service provider's "call waiting" feature).

## Standalone setup

---

A single cell phone used as a member of a hunt group or coverage group; one extension is administered. This extension can be administered to send an office caller ID.

### NOTE:

For users who do not require a physical onsite office number, the cell phone can be bridged to an administration without hardware (AWOH) extension. In this way the user still has an enterprise presence for incoming business calls via the cell phone.

In general the installation, administration, and maintenance of these modes are identical to what is described in this guide for the dual bridge mode because the loop trunk administration and XMOBILE station administration use the same procedures.

The following are considerations for these different configurations.

For **multiple bridge mode**, the user may want to enable and disable each XMOBILE station extension individually. If so, the user needs to be told the extension number and Security Code of each XMOBILE station.

For **standalone mode**:

- A local user wishing to call the XMOBILE station may activate automatic callback towards it. When the cell phone ends its call, the automatic callback feature works normally. (It calls the local user and then the cell phone).
- If the standalone cellular phone is part of an ACD split or skill, system measurements show that the call has been answered.
- Although XMOBILE stations may be administered in ACD splits and skills, there is no way to invoke ACD feature access codes from the cell phone. Therefore, the XMOBILE station must be logged in via another means such as:
  - Administration of an office number as a bridge of the XMOBILE.
  - A computer telephone interface.
  - Auto available splits.
- Use of auto available splits is an option. Note that service observing is not possible using a cell phone.
- Although an XMOBILE station can be administered for call waiting (independent of the cellular service provider's call waiting capability), use of this is not recommended because of its limitations and potential for confusion to the user. For Communication Manager-based call waiting there is no way to retrieve the waiting call other than ending the current one.

## **Enabling/disabling individual EC500 bridged extensions**

---

You enable and disable EC500 using EC500 "enable" and "disable" feature access codes. These and station security codes need to be set through the SAT and then communicated to the users. See [Chapter 3, "Administration"](#) for procedures to set up these codes.

Using these codes, the typical EC500 user (dual bridge mode) can disable or enable all XMOBILE stations associated with his or her office number at the same time. However, for other configurations, as described in this appendix, users may wish to enable and disable each EC500 extension individually. Note that the initial state of an EC500-administered extension is always disabled.

The typical user will disable and enable all cell phone-mapped XMOBILE stations at once using his or her office number and the station security code associated with that office number. In order to enable and disable individual extensions, the user needs to have the extension number and station security code for each cell phone mapped XMOBILE station.

Individual extensions can be enabled and disabled in the following ways:

- A user wishes to enable or disable the cell phone-mapped XMOBILE station at an internal extension. The user enters the following in sequence:
  1. The EC500 “enable” or “disable” feature access code.
  2. The extension number of the cell phone mapped XMOBILE station, followed by #.
  3. The station security code assigned to the mapped XMOBILE station.
  4. A final #.

The user receives either a confirmation or an intercept tone depending upon the success or failure of the procedure.

- A user wishes to enable or disable cell phone-mapped XMOBILE stations from any phone in the external network. Whether it's the user's cell phone or another phone does not make a difference in this procedure. The user enters the following in sequence:
  1. The Avaya EC500 access number (as set in the *Telecommuting Access Extension* field on the *Telecommuting Access* screen).  
The user should receive a dial tone.
  2. The EC500 “enable” or “disable” feature access code.
  3. The extension number of the cell phone mapped XMOBILE station, followed by #.
  4. The station security code assigned to the mapped XMOBILE station.
  5. A final #.

The user receives either a confirmation or an intercept tone depending upon the success or failure of the procedure.

These procedures must be repeated for each cell phone-mapped XMOBILE station that the user wishes to enable or disable.

---

EC500 Extension to Cellular Version 4.1 is available only with Communication Manager Release 1.3 or later. All of the EC500 releases can be administered and operated concurrently on the same Avaya server running Avaya™ Communication Manager. You can continue to support users with EC500 Extension to Cellular releases 1 through 4 as you add users with Version 4.1, or you may choose to upgrade all users to Version 4.1.

Version 4.1 enhancements include the addition of an administrable terminal feature button that:

- Enables/disables EC500
- Enables an optional one-hour timer that temporarily suspends EC500 services

The EC500 feature button is available on terminal sets which support administrable feature buttons.

### Upgrade from EC500 Version 4

The process described below explains how to administer an EC500 feature button and include the optional EC500 timer.

1. Type **change station xxxx** (where **xxxx** is the extension of an EC500-enabled station) and press **Enter**.

The Station screen appears.

2. Press the **Next Page** button twice to display page 3 of the Station screen.

**Figure B-1. Station screen - page 3**

```

change station 1034                                     Page 3 of 4
                                                    STATION

SITE DATA
  Room:                                     Headset? n
  Jack:                                     Speaker? n
  Cable:                                    Mounting: d
  Floor:                                    Cord Length: 0
  Building:                                 Set Color:

ABBREVIATED DIALING
  List1:                                     List2:                                     List3:

BUTTON ASSIGNMENTS
  1: call-appr                               5:
  2: call-appr                               6:
  3: call-appr                               7:
  4: ec500   Timer? y                       8:

```

3. Select an available feature button under **BUTTON ASSIGNMENTS** (4: in the example above) and enter **ec500**.
4. Press **Enter** or **Submit**, depending on your terminal.

Note that the `Timer` subfield displays, and defaults to **n**.

5. Set the optional `Timer` subfield to **y** to include an EC500 timer state for the administered feature button; leaving the default setting of **n** excludes the timer state.

When the timer state is included, the EC500 user can activate a one-hour timer to temporarily disable EC500.

6. Press **Enter** or **Submit**, depending on your terminal.

The corresponding feature button on the office telephone is now administered for EC500, and configured with the optional EC500 timer.

**⇒ NOTE:**

The feature status button on the office telephone indicates the current state of EC500 regardless of whether the feature was enabled remotely or directly from the office telephone.

## Upgrade from EC500 Version 3

The following process is to change the EC500 configuration to work without the loopback trunks. Let's eliminate the loopback connections for station 5462.

Eliminating the loopback trunks is optional and should be accompanied by changing the mobility trunk group field on the XMOBILE Station screen to **ars**.

1. Eliminate the DS1 or IP loopback trunks associated with EC500 Version 2.0 or 3.0.

This includes removing the loopback trunks and signaling groups via switch administration as well as physically from the switch.

Loopback trunk configuration can coexist with the EC500 R4 if you choose to do so. If you decide to eliminate the loopback trunks, the removed equipment can be reused for other trunking solutions. You can change gradually over to a total loopback elimination. If you decide to have the loopback and non-loopback configurations coexist, you must remember there are capacity restrictions when using the DS1.

2. Type **change station 5462** and press **Return**.

The Station screen for extension 5462 displays.

**Figure B-2. Station screen**

```

STATION
Extension: 5462                Lock Messages? n          BCC: 0
Type: XMOBILE                 Security: *                TN: 1
Name: John Doe                Coverage Path 1:          COR: 1
                              Coverage Path 2:          COS: 1
                              Hunt-to Station:

STATION OPTIONS
XMOBILE Type: EC500           Message Lamp Ext: 5462
Display Module? n            Message Waiting Type: NONE
Mobility Trunk Group: 25
Configuration Set: 1          Calls Allowed: all

CELL PHONE NUMBER MAPPING
Dial Prefix:
Cell Phone Number: 732-123-4567
Mapping Mode: termination
    
```

3. In the Mobility Trunk Group field, type **ars**.

It should be changed to **ars** for loopback elimination.

4. Press **Enter** to save your changes.

Things to watch out for:

If the Dial Prefix field contains the ars feature access code, then remove it (for example, 9).

See the see *Administrator's Guide for Avaya™ Communication Manager* for more information.

## Upgrade from EC500 Version 2

---

Implement changes as described for upgrade from EC500 Version 3.

Starting with Version 3, there is a field on the XMOBILE Station screen called `Mapping Mode`. See "[XMOBILE station administration](#)" on page 3-4 for more information. There is a new command, **list xmobile mapping**, that makes it easy to find out the XMOBILE extensions and primary extension associated with a cell phone number. See "[List XMOBILE by cell phone number](#)" on page 5-3 for more information. The **status station** command now explicitly shows the EC500 state: enabled or disabled.

To implement office caller ID for an existing EC500 user:

1. Identify the XMOBILE station bridged to the second call appearance of the user's primary extension.

The **list bridged-extensions <primary ext>** command provides this information.

2. Change the XMOBILE Station (**change station <xmobile ext>**) and press **Return**.
3. Change the `Mapping Mode` field to **both**.
4. Press **Enter** or **Submit** to save your changes.

### NOTE:

If the `Cell Phone Number` field contains a dial prefix (such as 1 for long distance), re-administer the cell phone number and place the prefix (for instance, 1) in the `Dial Prefix` field. Also make sure that the full number, including area code, is in the `Cell Phone Number` field. This is necessary for office caller ID to function.

For information on installation and administration of Version 2 of EC500, see *Avaya EC500 Extension to Cellular Installation and Administration Guide*, Issue 2, July, 2001.

## Upgrade from EC500 Version 1

---

Starting with Version 2, cell phone numbers can be administered on the XMOBILE Station screen. There are three fields related to administration of the cell phone number:

- Dial Prefix
- Cell Phone Number
- Mapping Mode

See ["XMOBILE station administration" on page 3-4](#) for more information. Pre-existing XMOBILE stations may continue to use ARS digit conversion to convert the XMOBILE extension to a cell number or they may be changed to use the new fields on the Station screen.

To add the cell phone number to an XMOBILE station:

1. Change the XMOBILE station (**change station <xmobile ext>**) and press **Return**.
2. Enter each dial prefix, if any (for example, 1 for long distance, but not 9 for external access) in the `Dial Prefix` field.
3. Enter the full cell phone number (including area code) in the `Cell Phone Number` field.
4. Enter **termination** in the `Mapping Mode` field (see above for when **both** may be entered).
5. Press **Enter** or **Submit** to save your changes.

Implement changes are described for upgrade from EC500 Version 2.

For information on installation and administration of Version 1 of EC500, see *Avaya EC500 Extension to Cellular Installation/Administration Guide*, Issue 1, February 8, 2001.



---

# Glossary

---

## A

### **AAR**

See Automatic Alternate Routing.

### **ACS**

See Avaya Communications Server.

### **administration without hardware (AWOH)**

A station that is administered without a dedicated, physical set.

### **ARS**

See Automatic Route Selection.

### **ATM-CES**

Asynchronous Transfer Mode - Circuit Emulation Service. This is a trunk capability that supports the equivalent of 8 ISDN interfaces over a single facility. Each interface may have as many as 30 channels.

### **Automatic Alternate Routing**

A table-based routing feature used to select a trunk for private network routing. An administered FAC is used to activate the feature.

### **Automatic Route Selection**

A table-based routing feature used to select a trunk for public network routing. An administered FAC is used to activate the feature.

### **Avaya Communications Server (ACS)**

Avaya server running Avaya™ Communication Manager(formerly MultiVantage™ Software) includes the DEFINITY® ECS and the S8100 Media Server with Avaya G600 Media Gateway.

### **Avaya EC500 access number**

The telecommuting access number used to dial into the Avaya server running Communication Manager to allow enabling/disabling EC500 and changing the station security code. This number is set in the `Telecommuting Access Extension` field on the `Telecommuting Access` screen.

### **Avaya EC500 call**

Call to an extension on the Avaya server running Communication Manager (either the principal extension in a bridging scenario, or the XMOBILE station that maps to a cell phone in a standalone scenario) that results in alerting the associated cell phone.

### **Avaya EC500 extension**

The extension number of the XMOBILE on the Avaya server running Communication Manager that maps each line appearance of the office number to the cell phone.

### **Avaya EC500 Extension to Cellular**

The feature that allows integration of cell phones under the control of a public cell phone service provider with the Avaya server running Communication Manager.

### **AWOH**

See administration without hardware.

---

## B

### **Basic Rate Interface (BRI)**

A digital message-based protocol intended primarily for the control of advanced telephone sets although it is also used in some countries for trunking.

---

## C

### **calling number style**

The way a caller's identity is displayed to the called party by either a 10-digit number or a pbx extension.

### **Class of Restrictions (COR)**

A group of attributes that affect the calling capabilities of stations and trunks.

### **configuration set**

A set of call treatment options used to customize an XMOBILE station session when placing EC500 calls.

### **corporate voice mail**

The voice mail system provided by the user's employer. Typically this will be AUDIX. There is no current way to coordinate this voice mail with the service provider's voice mail.

---

## D

### **DEFINITY**

An Avaya, Inc. telephone system, commonly referred to as a switch or pbx.

### **dial prefix**

Any number that might be required for dialing besides the cell phone number itself. For example, **1** for U.S. domestic long distance, or **011** for international cell phone numbers.

### **Direct Inward Dialing (DID)**

A feature whereby extensions are associated with numbers in the national numbering plan so that they may be directly dialed from outside of the Avaya ECS.

### **disable**

Deactivate EC500 Extension to Cellular using the EC500 "disable" feature access code, or, if so administered, by using a feature button on the office telephone.

### **DTMF**

Dual Tone Multiple Frequency. This is another name for touch-tones which are commonly used for transmitting digits (including \* and #) over voice lines.

---

## E

### **EC500**

See Avaya EC500 Extension to Cellular.

### **enable**

Activate EC500 Extension to Cellular using the EC500 “enable” feature access code, or, if so administered, by using a feature button on the office telephone.

---

## F

### **FAC**

See feature access code.

### **fast-connect on origination**

Used to determine whether additional processing will occur prior to sending the CONNECT message. This option may be utilized in the future for capabilities provided by the cell phone provider.

### **feature access code (FAC)**

A pre-administered dial sequence that performs a feature operation.

---

## I

### **in-service**

A station has been administered and is in normal operation mode.

### **Internet Protocol (IP)**

A suite of information exchanged message sets widely used for data transmission and increasingly used for transmission of voice.

### **ISDN trunk**

This is a trunk (group) that uses a form of message-based signaling (Q.931) over a dedicated control channel. There are different types of ISDN trunks that are distinguished by the type of carrier medium used: PRI/BRI, IP, or ATM-CES.

---

## M

### **Mobility Trunk Group**

A field on the XMOBILE station form containing the group number of the outbound trunk group associated with the XMOBILE stations. All active calls at the XMOBILE station use members of this trunk group.

### **MultiVantage™**

Former product name of the DEFINITY® switching software application. Now Avaya™ Communication Manager.

---

## O

### **out-of-service**

The station is out of service due to a busy-out action issued by a system technician/system administrator. No calls can be placed or received while in this state.

---

## P

### **Personal Handy-phone Service**

This is a widely-used standard for mobile telephony in Japan used in public and business offers. It is supported as an X-Mobility special application on the Avaya ECS.

### **PHS**

See Personal Handy-phone Service.

### **PRI**

See Primary Rate Interface.

### **Primary Rate Interface**

A digital message-based protocol intended primarily for the control of advanced digital trunks although it is also used for end points requiring high bandwidth.

### **principal extension**

In a bridging arrangement, the station whose extension is primary and identifies the entire bridge.

---

## S

### **SAT**

See system administration terminal

### **service provider**

A company that supplies cell phone service to a particular area. EC500 is Service Provider independent.

### **station security code**

The security code assigned to each station for enabling and disabling EC500. The system administrator supplies this number.

### **system access terminal**

Sometimes "system administration terminal." At one time this referred to a physical terminal from which system administration occurred. Now, it usually refers to the screens (accessed via a terminal emulator or Avaya Site Administration) through which system administration is accomplished.

---

## T

### **telecommuting access number**

The access number used to dial into the Avaya server running Communication Manager to allow enabling/disabling EC500 and changing the station security code. This number is set in the Telecommuting Access Extension field on the Telecommuting Access screen.

### **text messaging**

A facility provided in many cell phones which allows the user to receive short text messages on the phone's display. The receipt of the message is often accompanied by an audible alert; the user can then display, delete, or save the message. This facility is sometimes referred to as Short Message Services (SMS).

---

## U

### **UCC**

Unified Communications Center

### **Unified Messenger® for MS Exchange**

A software application that consolidates voice, e-mail and fax messages into one mailbox. When combined with EC500, provides a text message via the cell (or other remote) phone's display screen to notify users of messages in their Corporate voice messaging system. Applies only to EC500 users with Unified Messenger's "Notify Me" feature installed on their office phone system.

### **user**

Any person who uses a cell or other remote phone as an EC500 bridge to the Avaya server running Communication Manager.

---

## X

### **X-Mobility**

An Avaya server running Communication Manager feature that supports an off-premise extension via an ISDN trunk connection. This feature is built upon the Administration Without Hardware (AWOH) feature. The station type administered is XMOBILE, also called the XMOBILE station.



# Index

---

## A

access number, [2-2](#)  
ACD split and skill, [A-3](#)  
administered feature button, [1-13](#)  
administering, [3-25](#)  
administering EC500 feature access button, [3-25](#)  
administration, [3-17](#)  
    testing, [4-1](#)  
    voice mail, [3-17](#)  
    XMOBILE stations, [3-4](#), [3-8](#)  
administration of call filtering, [3-9](#)  
administration of CDR options, [3-21](#)  
administration planning, [2-2](#)  
administration tasks, [3-1](#)  
Administration Without Hardware, [GL-1](#)  
administration without hardware, [A-1](#)  
administration without hardware (AWOH), [1-2](#)  
alarms, [5-5](#)  
ARS analysis table, [6-2](#)  
ARS field, [2-1](#), [3-3](#)  
ARS/AAR routing, [1-8](#)  
auto available splits, [A-3](#)  
automatic callback, [A-3](#)  
Avaya Communications Server, [GL-1](#)  
AWOH, [1-2](#), [A-1](#), [GL-1](#)

---

## B

bridged XMOBILE stations, [1-9](#)  
busy-out, [5-1](#)  
busy-out station command, [5-4](#)

---

## C

call detail recording, [1-9](#)  
call filtering, [1-8](#)  
    administration, [3-9](#)  
    bridged XMOBILE stations, [1-9](#)  
    setting up, [3-9](#)  
    standalone XMOBILE stations, [1-9](#)  
call identification, [1-7](#)  
call origination, [1-15](#)  
call waiting, [1-7](#), [A-3](#)  
caller ID, [1-5](#), [1-7](#), [3-9](#)  
Calling Number Style field, [3-20](#)  
capacity limitations, [1-11](#)  
CDR for Calls to EC500 Destination field, [3-21](#)

CDR options  
    administering, [3-21](#)  
CDR recording enhancements, [1-9](#)  
cell phone  
    initial state, [3-4](#)  
Cell Phone Number field, [3-6](#)  
cellular service provider, [1-1](#)  
cellular service provider voice mail, [1-16](#)  
change feature access code for station security code, [3-23](#)  
change station security code feature access code, [2-2](#)  
changing configuration sets, [3-20](#)  
class of restriction, [1-16](#)  
command  
    display alarms, [5-5](#)  
    display errors, [5-5](#)  
    status station, [5-6](#)  
configuration requirements, [2-1](#)  
Configuration Set Description field, [3-20](#)  
Configuration Set field, [3-5](#)  
configuration sets, [3-20](#)  
configurations, [1-2](#)  
COR, [1-16](#)  
customer configurations, [1-2](#)  
customer options, [2-1](#), [3-2](#)

---

## D

DCS, [1-16](#)  
description of features, [1-3](#)  
dial plan, [2-2](#)  
Dial Prefix field, [3-6](#)  
disabling and enabling EC500, [1-6](#)  
    via feature access codes, [1-12](#)  
    via feature button, [1-13](#)  
display alarms, [5-5](#)  
display alarms command, [5-5](#)  
display capacities, [5-2](#)  
display errors, [5-5](#)  
display errors command, [5-5](#)  
Display Module field, [3-5](#)  
distinctive alerting, [1-16](#)  
dual bridge mode, [1-2](#)  
duplicate station administration, [3-11](#)  
duplication station administration, [1-17](#)

---

## E

EC500  
    installation, [2-1](#)  
EC500 access number, [2-2](#), [3-15](#)  
EC500 enable/disable feature access codes, [3-16](#)  
EC500 feature access button  
    administering, [3-25](#)  
EC500 feature button, [1-13](#)  
EC500 scheduler application, [2-xiii](#), [1-18](#)

EC500 Status field, [5-6](#)  
enable/disable feature access codes, [3-16](#)  
enabling and disabling EC500, [1-6](#), [5-6](#), [A-3](#)  
    via feature access codes, [1-12](#)  
    via feature button, [1-13](#)  
enabling and disabling individual extensions, [A-3](#)  
Enhanced EC500 field, [2-1](#), [3-3](#)  
enhancements, [1-2](#)  
environment requirements, [2-1](#)  
error conditions, [6-1](#)  
errors, [5-5](#)  
Extended Cvg/Fwd Admin field, [2-1](#), [3-3](#)

## F

Fast Connect on Origination field, [3-21](#)  
feature access button, [3-25](#)  
feature access codes, [1-12](#), [1-17](#), [3-16](#)  
feature description, [1-3](#)  
feature interactions, [1-15](#)  
    attendant, [1-15](#)  
    call coverage, [1-16](#)  
    cellular service provider voice mail, [1-16](#)  
    class of restriction, [1-16](#)  
    DCS, [1-16](#)  
    distinctive alerting, [1-16](#)  
    duplication station administration, [1-17](#)  
    EC500 activation/deactivation, [1-17](#)  
    EC500 with office caller ID calling another EC500 user, [1-17](#)  
    feature access codes, [1-17](#)  
    message waiting indication, [1-17](#)  
    QSIG, [1-18](#)  
    Unified Messenger, [1-17](#)

## G

G3 Version field, [2-1](#), [3-2](#)  
generating two CDR records, [3-23](#)

## H

hardware checks, [6-1](#)

## I

installation, [2-1](#)  
    setting customer options, [2-1](#)  
    testing, [4-1](#)  
ISDN-PRI field, [2-1](#), [3-3](#)

## L

list mappings, [5-3](#)  
loopback trunk elimination, [B-3](#)

## M

maintenance, [5-1](#)  
    busy-out, [5-1](#)  
    release, [5-1](#)  
making calls, [1-15](#)  
Mapping Mode field, [1-15](#), [3-6](#)  
mapping modes, [1-4](#)  
    both, [1-5](#)  
    origination, [1-4](#)  
    termination, [1-4](#)  
Maximum XMOBILE Stations field, [2-1](#), [3-2](#)  
message waiting indication, [1-17](#)  
Message Waiting Type field, [3-5](#)  
Mobility Trunk Group field, [3-5](#)  
multiple bridge mode, [A-1](#)

## N

Name field, [3-5](#)

## O

office caller ID, [1-5](#), [3-4](#)  
origination, [1-4](#), [3-6](#)

## P

planning, [2-2](#)  
    Avaya EC500 access number, [2-2](#)  
    change station security code feature access code, [2-2](#)  
    dial plan, [2-2](#)  
    EC500 enable/disable feature access codes, [2-2](#)  
    enabling and disabling feature access codes, [2-3](#)  
    requirements, [2-2](#)  
    station security code, [2-2](#)  
    telecommuting access number, [2-2](#)  
platforms, [2-1](#)  
platforms supported, [1-2](#)  
Post Connect Dialing Options field, [3-22](#)

---

**Q**

QSIG, [1-18](#)

---

**R**

receiving calls, [1-14](#)  
release, [5-1](#)  
Release 1 upgrade, [B-5](#)  
Release 2 upgrade, [B-4](#)  
Release 3 upgrade, [B-3](#)  
Release 4 upgrade, [B-1](#)  
Release 4.1, [1-2](#)  
release station command, [5-4](#)  
routing for EC500, [1-8](#)

---

**S**

SAT screens, [1-3](#)  
scheduler application, [2-xiii](#), [1-18](#)  
security, [1-11](#), [3-23](#)  
Security Code field, [3-5](#)  
security codes, [1-6](#), [2-3](#)  
    Avaya EC500 access number, [2-3](#)  
    station security codes  
        security codes  
            station security code change feature access  
                code, [2-3](#)  
setting customer options, [2-1](#), [3-2](#)  
setting up call filtering, [3-9](#)  
standalone mode, [A-1](#)  
standalone XMOBILE stations, [1-9](#)  
station security code, [2-2](#), [3-23](#)  
status station command, [5-6](#), [6-1](#)  
supported platforms, [1-2](#), [2-1](#)  
system administration terminal screens, [1-3](#)

---

**T**

table  
    Communication Manager-to-EC500 mapping, [1-3](#)  
    EC500 error conditions, [6-3](#)  
    enabling EC500 via feature status button, [1-14](#)  
Telecommuting Access Extension field, [2-2](#)  
telecommuting access number, [2-2](#), [3-15](#)  
termination, [1-15](#), [3-4](#), [3-6](#)  
termination mode, [1-4](#)

---

test procedures, [4-1](#)  
traffic engineering, [1-11](#)  
troubleshooting, [6-1](#)  
Type field, [3-5](#)

---

**U**

upgrades  
    Release 1, [B-5](#)  
    Release 2, [B-4](#)  
    Release 3, [B-3](#)  
    Release 4, [B-1](#)  
usage  
    trunk, [1-11](#)  
    XMOBILE stations, [1-11](#)

---

**V**

Version 1 upgrade, [B-5](#)  
Version 2 upgrade, [B-4](#)  
Version 3 upgrade, [B-3](#)  
Version 4 upgrade, [B-1](#)  
voice mail, [1-7](#), [3-17](#)

---

**W**

what's new in this release, [1-2](#)

---

**X**

XMOBILE station, [5-6](#)  
XMOBILE station administration, [3-4](#), [3-8](#)  
XMOBILE station usage, [5-2](#)  
XMOBILE stations  
    bridged, [1-9](#)  
    busy-out, [5-1](#)  
    dial plan, [2-2](#)  
    enabling and disabling individual extensions, [A-3](#)  
    maintenance, [5-1](#)  
    release, [5-1](#)  
    standalone, [1-9](#)  
XMOBILE Type field, [3-5](#)  
X-Mobility, [1-8](#)

